G810说明书:双面80g书写纸,表面不处理,单黑色双面印刷,表面不做处理，展开尺寸：60X23cm，折叠成型尺寸：10x11.5cm

正面

SOMiC

G810无线游戏耳机使用说明书

（在使用时请详阅本说明书，并妥善保存！）

扫码关注硕美科官方微信

获取更多产品资讯



广东硕美科高新科技有限公司

硕美科官方网站:www.somic.cn

400-698-9993

SC


产品规格

●蓝牙版本:V5.2
●发射功率：CLASS2
●无线连接范围：约10米
●工作频率范围：2402-2480MHZ
●耳机内置可充电锂电池容量：1000mAh
●连接充电器规格：DC 5.0V 500mA
●正常充电时间：约3小时
●耳机工作续航时间：约50小时（关闭LOGO灯光, 60%音量播放音乐）
●发射器供电USB5V
●发射器工作电流＜50mA

产品功能

●支持立体声音乐播放、播放/暂停、音量大小/上下选曲、麦克风关闭/开启等功能
●支持电话：接听、挂断、拒接、末号重拨等常用功能
●支持操作语音提示
●支持耳机低电量提示
●支持HFP1.7、HSP1.2、A2DP1.3、AVRCP1.6
●支持AAC、SBC音频解码
●支持低延时游戏功能（Dongle连接）

按键及插口定义

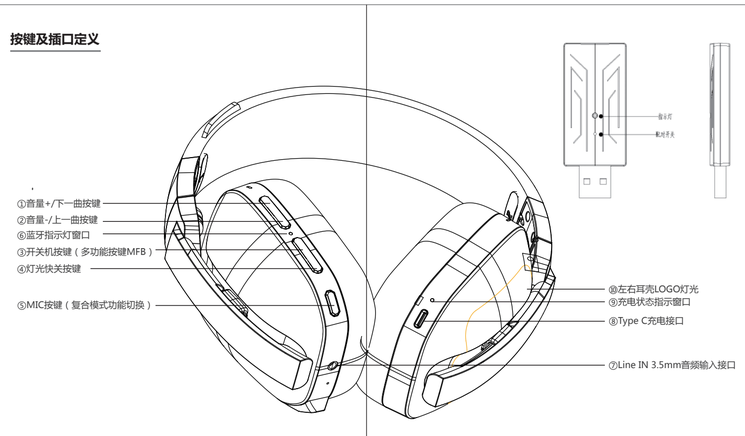

①音量+/下一曲按键：短按一次音量加一级，长按切换下一曲；音量达到最大时会有“Max volume”提示音。
②音量-/上一曲按键: 短按一次音量减一级，长按上一曲；音量减到最小时会有“Min volume”提示音。
③多功能按键MFB：
（1）开机：长按约2秒开机语音提示“Power on”。
（2）关机：开机状态下，长按约3秒进行关机，语音提示“Power off”。
（3）配对：关机状态下，长按约6秒进入配对状态，语音提示“Pairing”。
（4）播放/暂停: 在音乐播放时,单按一次为播放或暂停音乐。
（5）接听/挂断来电：有来电时，短按一次为接听来电，长按1秒为拒接来电；通话时，短按一次为挂断当前通话。
④灯光开关按键：关闭或开启LOGO灯效。
⑤MIC按键/音效模式切换键：
（1）按一次为麦克风关闭，语音提示“MIC OFF”；再按一次为麦克风打开，语音提示“MIC ON”。
（2）游戏模式与音乐模式切换：长按2秒进行模式切换，有语音提示Gaming mode或Music mode。
⑥蓝牙指示灯窗口：
（1）开机蓝灯慢闪
（2）配对状态红蓝灯交替闪烁
（3）来电时蓝灯快闪,接听电话后蓝灯长亮
（4）低电量时红灯双闪/3秒
⑦Line IN 3.5mm音频输入接口：当插入3.5mm的插头线，耳机即自动关机耳机播放外接设备的信号。（耳机的麦克风不支持有线输入）
⑧Type C充电接口：连接的充电器规格为DC5V/1000mA，插入充电时耳机会自动关机。
⑨充电状态指示窗口：充电时长亮红灯，充满电后红灯熄灭，绿灯长亮。
⑩左右耳壳灯光: 开机后耳壳灯光亮起，可通过操作④进行关闭或开启。

基本操作说明

1.开机和无Dongle配对。
●在关机状态下长按④按键约2秒后，蓝牙耳机进入开机状态（语音提示“Power on”），耳机开机后,有配对连接过的会先进入回连，无配对连接过的则进入配对状态（语音提示Pairing）。在配对状态下，手机等带蓝牙功能的设备可以搜索并连接耳机，连接成功后退出配对状态。
●手动进入配对：在关机状态下，长按③键6秒，耳机开机后会直接进入配对状态。
●耳机进入配对状态后，工作指示灯窗口显示红蓝色指示灯交替快闪烁。打开手机的蓝牙功能，设置为可发现状态，并添加或搜索新设备，在搜索的设备清单中找到“SOMiC G810”，请选择进行配对，随后耳机与手机连接成功，语音提示“Connected”，即完成配对连接过程。连接成功后耳机的蓝色指示灯慢闪。
●蓝牙发射器配对：耳机在开机配对状态下，蓝牙发射器插入到电脑/手机的Type-C口或者可以使用Dongle扩展连接线(USB-A公头转Type-C母座）配合使用，当设备识别完成之后，语音提示“Connected”，此时耳机蓝色指示灯慢闪，蓝牙发射器的蓝色指示灯会长亮。
●出厂时蓝牙耳机与蓝牙发射器已经配对好，把蓝牙发射器插到电脑的USB口上，耳机开机后即会自动连接。（如有不能连接的情况，请按上述步骤进行操作耳机和蓝牙发射器重新配对连接）

2.关机。
●蓝牙耳机在开机状态，长按③按键约3秒，同时有“Power off” 提示音，蓝牙耳机进入关机。

3．音量+/下一曲
● 在连接设备播放音乐状态下，短按①按键1次，声音增加1级，音量达到最大时会有提示音“Max volume”。长按住①键，为音乐切换下一曲。

4．音量-/上一曲
● 在连接设备播放音乐状态下，短按②按键1次，声音减少1级，音量达到最小时会有提示音“Min volume”。长按住②键，为音乐切换上一曲。

5. 麦克风静音
●通话状态时，按一次⑤键为麦克风关闭，语音提示“MIC OFF”；再按一次⑤键为麦克风打开，语音提示“MIC ON”。
●蜂玩模式与音乐模式切换：长按⑤键2秒进行模式切换，有语音提示Bee Play Mode或Music mode。

6.灯光按键：短按一次④键，关闭或开启LOGO灯效。

7.接打电话
●当连接的手机有来电时，语音提示In coming call，耳机的蓝灯快闪。短按③键一次可实现接听来电，接听电话时，耳机的⑥蓝灯长亮，再短按一次③键则挂断电话，长按1秒为拒接来电功能。

8.尾号重拨
●耳机在连接手机状态下，双击③键一次，手机会自动重拨手机最后一个拨出去的电话号码。

9.低电提示
●此耳机具有低电语音提示功能，当电池进入低电状态时，每隔4分钟就会有声音提示“low Power”，同时耳机的红色指示灯每3秒连续闪两次。

10．充电使用
●耳机内置锂电池，建议您在首次使用耳机前对电池进行充电。
●耳机使用中当电池电量过低时，耳机会听到“ low Power”提示音,请您及时充电。
●将充电插头插入⑧接口，耳机进入自动关机，此时⑨是红色指示灯长亮，充满电后，红色指示灯熄灭，并亮起绿色指示灯。

11. 蓝牙发射器的使用
●出厂时蓝牙耳机与蓝牙发射器已经配对好，把蓝牙发射器插到电脑（也可以通

12．耳机恢复出厂设置：关机状态下，长按住①键与③键10秒，恢复出厂设置，当恢复出厂设置完成时，会发出提示音“嘟嘟”两声，同时耳机的蓝灯和红灯同时双闪3次。（注：耳机恢复出厂设置会清除之前所有的配对信息）

13．有线模式：
用3.5mm音频线接入耳机即插即用；
此模式下，只能使用音频线上的麦克风，耳机上的麦克风无法使用。

温馨提示：
1,使用本产品前请仔细阅读使作说明书并妥善保管;
2,首次使用时,请先将本产品进行充电.
3,为维护电池的正常寿命，请确保本产品2周至少使用一次或以上，用后请及时补充电量。
4,必须选择正规厂家生产且经过国家CCC认证的充电器;
5,若手机无法收索到蓝牙耳机,请确认蓝牙耳机是否处于”配对模式”,若长时间未进行配对或连接,请重启耳机或者恢复出厂设置再使用。

【耳机配套组成】

1、耳机	1台
2、Type C充电线	1条
3、使用说明书	1份
4、Type-C蓝牙发射器	1个
5、单3.5mm插头连接线	1条
6、Dongle扩展连接线(USB-A公头转Type-C母座,带磁环)	1条

【使用声明】

1.充电过程中，请勿使用耳机。
2.在户外佩戴耳机时，选择安全的运动场地、道路，并调整合适的音量，注意交通安全。

【售后服务】

为不浪费您宝贵时间，在送修前请检查下列各项。

故障现象	可能原因	排除方法
无法开机	电池电量不足	及时给电池充电
无法配对	手机尚未启动蓝牙功能或尚未打开“可发现”的状态	启动手机蓝牙功能并设置为“可发现”状态
	配对时，耳机离发射器距离太远	距离请不要超过1米
	电池电量不足	及时给电池充电
噪音大	电池电量不足	及时给电池充电
断音	1,耳机离发射器距离太远超出接收范围。 2, 耳机离发射器距离之间有障碍物阻挡。	重新调整合适位置收听
接收距离短	1, 发射器设备兼容性问题。 2, 耳机离发射器距离之间有障碍物阻挡。	1,更换发射设备 2, 重新调整合适位置收听

产品特点：

1、耳机具备四种连接模式，包括普通蓝牙模式、蓝牙低延迟模式（分两种连接模式）和3.5mm有线模式，可供多种场景、多种设备使用。
2、耳机具备“蜂玩模式”和音乐模式两种音效，听歌、游戏两不误。
3、耳机搭载强劲低延迟引擎，延迟低至35ms，可尽情享受音画同步的游戏体验
4、耳机根据人体工学轻量化设计，长时间佩戴也不累。
5、耳机内置1000毫安大容量电池，超长续航，充一次电可满足你一周的使用需求。
6、耳机配备柔软透气大尺寸网布耳套，佩戴舒适。
7、耳机配置炫酷灯光，释放电竞激情。

硕美科无线降噪耳机保修说明

保修条例

硕美科无线降噪耳机售后服务承诺:严格依据《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务，服务内容如下：

在三包有效期内，您可依照本规定享受修理、换货、退货的权利，
修理、换货、退货的权利应当凭发票或有效销售凭证办理。
1、自您签收日起7日内，产品出现品质问题，可享受退货、换货或者免费维修服务。
2、自您签收日起8日-15日内，产品出现品质问题，可享受换货或者免费维修服务。
3、自您签收日起12个月内，产品出现品质问题，可享受免费维修服务。

非保修条例

1、已超过三包有效期；
2、无法提供发票或有效销售凭证；
3、发票或有效销售凭证上的产品信息与实物不相符；
4、未经授权的维修、误用或改动等人为因素或因不可抗力造成的损坏。

注意事项

1、本产品兼容微软Windows7/8/10，安卓Android，苹果MAC与IOS操作系统，适配XBOX与PS4主机。如果在未列明的操作系统和设备上使用，导致无法正常工作，可联系售后服务寻求解决；
2、产品使用过程中，如果出现部件受损，如线缆破皮等，请停止使用并寻找有维修资质的人员或售后服务解决，以免造成不必要的损失；
3、本产品可能与部分品牌的延长器声卡不适配，如果因使用延长器而引起冲突，可联系售后服务寻求解决；
4、使用本产品时，如果遇到驱动兼容性问题，可联系售后服务寻求解决。

产品保修卡

尊敬的顾客：
您好！申请售后时，请根据您的实际情况填写产品保修卡。并把产品与产品保修卡一同寄回到您所购买产品的商家处。谢谢！

1、请勾选进行售后的原因：
☐ 功能不好 ☐ 不够美观 ☐ 佩戴不舒适
其他：_____

2、请勾选您所需的售后选项：
☐ 换新 ☐ 维修 ☐ 退货

3、请您给我们提供宝贵的意见：_____
注：具体售后地址请咨询商家。

请填写以下资料（以下均为必填）

产品信息
产品型号：_____
产品序列号：_____

购机信息
订单编号：_____
购买账号：_____
用户姓名：_____
联系电话：_____
回邮地址：_____

EN


Product Specification

●Bluetooth version:V5.2
●Transmit power：CLASS2
●Wireless connection range：about 10m
●Operating frequency range：2402-2480MHZ
●Build-in rechargeable lithium battery capacity: 1000mAh
●Connection charger specification：DC 5.0V 500mA
●Normal charging time：about 3 hours
●Headset continuous working time：about 50 hours（Turn off LOGO light, 60% volume play music）
●Dongle power: USB5V
●Dongle working electric current: < 50mA

Product function

●support stereo music playback, play / pause, volume size / music selection up and down, microphone off / on and other functions
●support telephone: answer, end, reject, redial the last number and other common functions
●support operation voice prompt
●support earphone low battery prompt
●support hfp1.7, hsp1.2, a2dp1.3, avrcp1.6
●support AAC and SBC audio decoding
●support low delay game function (dongle connection)

Key and socket definition

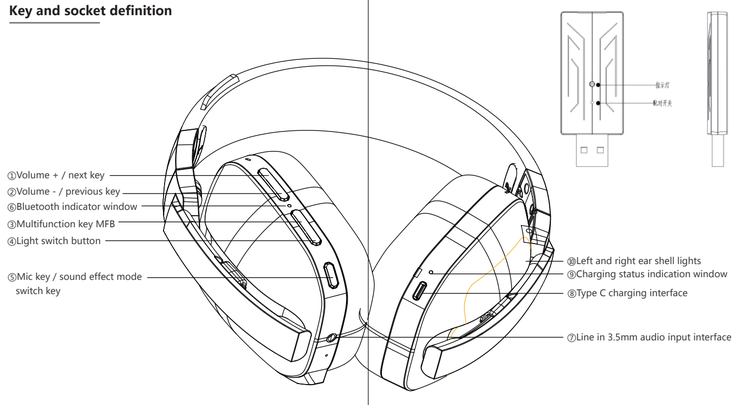

①Volume + / next key: short press once to increase the volume by one level, long press to switch to the next song; When the volume reaches the maximum, there will be a "Max volume" prompt tone.
②Volume - / previous key: short press once to reduce the volume by one level, long press the previous key; When the volume is reduced to the minimum, there will be a "Min volume" prompt tone
③Multifunction key MFB :
(1) Power on: press and hold for about 2 seconds, and the voice prompts "power on".
(2) Power off: in the power on state, press and hold for about 3 seconds to power off, and the voice prompts "power off".
(3) Pairing: in the off state, press and hold for about 6 seconds to enter the pairing state, and the voice prompts "pairing".
(4) Play / pause: when playing music, press once to play or pause music.
(5) Answer / end an incoming call: when there is an incoming call, short press once to answer the call, and long press for 1 second to reject the call; During a call, short press once to end the current call.
④Light switch button: turn off / on the logo light effect.
⑤Mic key / sound effect mode switch key :
（1）Press once to turn off the microphone, and the voice prompts "mic off"; Press again to turn on the microphone, and the voice prompts "mic on".
（2）Switching between game mode and music mode: long press for 2 seconds to switch modes, and there is a voice prompt of "game mode" or "music mode".
⑥Bluetooth indicator window :
（1）Startup blue light flashes slowly
（2）Pairing status red and blue lights flash alternately
（3）The blue light flashes quickly when an incoming call is made, and the blue light stays on after answering the call

⑧Type C charging interface: the connected charger is dc5v/1000ma, and the headset will automatically shut down when plugged in for charging.

（4）Red light double flashing /3 s at low battery
⑦Line in 3.5mm audio input interface: when a 3.5mm plug cable is inserted, the headset will automatically shut down and play the signal of the external device. (the microphone of the headset does not support wired input)
⑨Charging status indication window: the red light will be on for a long time during charging, and the red light will go out and the green light will be on for a long time after being fully charged.
⑩Left and right ear shell lights: the ear shell lights up after startup, and can be turned off or on by operating ④.

Basic Operation Instruction

1.Turn on&Paring
●Long press the button ③ for about 2 seconds in shutdown mode, the Bluetooth headset enters the power-on state (voice prompt "Power on"). When the headset is powered on, Paired will be connected firstly; those never paired enter pairing state (voice prompt Pairing). In the pairing state, devices with Bluetooth function, such as mobile phones, can search for and connect to the headset, and exit the pairing state after the connection is successful.
●Manually enter matching : In the shutdown state, long press the "③" button for 6 seconds, the headset will directly enter the pairing state after it is turned on.
●After the earphone enters the pairing state, the red and blue indicator light flashes alternately in the work indicator window. Turn on the Bluetooth function of the mobile phone, set it to discoverable state, and add or search for a new device. Find "SOMIC G810" in the device list, and select pair. Then the headset connects to the mobile phone successfully, and the voice prompt "Connected" is displayed, that is, the pairing process is complete.

●Bluetooth transmitter pairing : Bluetooth transmitter is inserted into the computer USB port, when the equipment identification is completed, the blue lights flash slowly, with a thimble by pairing inside the shell of the round hole pressing button for 2 seconds, pairing blue tooth transmitter into the state, the blue indicator light flash, when the blue tooth transmitters and blue tooth headset paired and Connected successfully finished, voice prompt "Connected", The blue light on the Bluetooth transmitter will light up.
●Remark : The Bluetooth headset and the Bluetooth transmitter have been paired at the factory settings. Plug the Bluetooth adapter into the USB port of the computer, and the headset will automatically connect after it is turned on.If it can’ t match,pls follow previous step to re-match again for headphone and USB dongle.

2.Power off
● When the Bluetooth headset is on, long press the "③" button for about 3 seconds, and at the same time, there will be a prompt tone of "Power off", and the Bluetooth headset will turn off

3 . Volume +/ Next track
● When the device is connected to play music, press the volume "①" button once to increase the sound level by one level. When the volume reaches the maximum, there will be a prompt sound "Max volume". Long press the "①" key to switch to the next track for the music.

4 . Volume -/ Last song
● When the device is connected to play music, press the volume "②" button once to reduce the sound level by 1. When the volume reaches the minimum, there will be a prompt sound "Min Volume". Hold down the volume "②" button long to switch to the previous track.

5. Mute MIC
● During a call, press the "⑤" button once to turn OFF the microphone, and the voice prompt "MIC OFF" will be displayed. Press the "⑤" button again to open the microphone, and the voice prompt "MIC ON" will be displayed.

● Switch between bee play mode and music mode: long press the ⑤ key for 2 seconds to switch modes, and there is a voice prompt of bee play mode or music mode

6. Light button: briefly press the button ④ by once to turn off or turn on the light.

7.Calls
●When the connected mobile phone has an incoming call, the voice prompts" In coming call" , and the blue light of headset flashes.Press ③ once to answer the call,the blue light of headset ⑥ will be on when answering the call,press ③ again to hang up the call,press and hold for 1 second to reject the call

8.Last number redial
●When the headset connected the mobile phone, short press ③ twice in succession,the device will automatically redial the last phone number dialed by the mobile phone

9.Low power warning
●This headset has a low-power voice prompt function.When the battery enters a low-power state,there will be a voice prompt “low power” every 4 minutes,and the red indicator light of the headset flashes twice every 3 seconds.

10.Charging instructions
●The headset has a lithium battery, and it is recommended for you to charge the battery before first using the headset.
●When the battery power of the headset is too low during use, there will be a "Low Power" prompt sound, please charge it in time.
●Insert the charging plug into the ⑧ Type C port and the headset will automatically shut down. At this time, the charging red indicator light will be on. When it is fully charged, the red indicator light will turn off and the green indicator light will stay on.

11.Bluetooth transmitter instructions
●The Bluetooth headset and the Bluetooth transmitter have been paired at the factory settings. Plug the Bluetooth adapter into the USB port of the computer(or use the dongle extension cable on the USB interface)/mobile phone , and the headset will automatically connect after it is turned on.

12.Headset restores the factory setting
Under the shutdown state, long press ① and ③ button for 10 seconds to sound the prompt "beep" when the factory setting is completed. The blue light and red light of the headset double flash 3 times at the same time.(Note: Headphone recovery from factory settings removes all previous pairing information)

13.wired mode:
Connect the 3.5mm audio cable to the headset;
In this mode, only the microphone on the audio cable can be used, and the microphone on the headset cannot be used.

Reminder

1. Please read the operating instructions carefully and keep them properly before using this product;
2. Please charge the product for the first time;
3. In order to maintain the normal service life of the battery, please ensure that the product is used at least once in two weeks, and please supplement the power in time after use.
4. Chargers produced by regular manufacturers and certified by CCC must be selected;
5. If the mobile phone cannot receive the Bluetooth headset, please confirm whether the Bluetooth headset is in the "pairing mode". If the headset has not been paired or connected for a long time, please restart the headset or restore the factory settings before using.

Headset and Accessories

1.Headset	1PC
2.Type c charging	1PC
3.User Manual	1PC
4.Dongle	1PC
5.3.5mm Audio cable	1PC
6.Dongle Extension cable	1PC

Using Statement

1.Do not use headphones during charging，
2.When wearing headset outdoors, choose safe sports venues and roads, adjust the appropriate volume, and pay attention to traffic safety。
3.Do not use headset while driving a motor vehicle，

After-sales service

In order not to waste your valuable time, please check the following items before repair.

Fault phenomenon	Possible reasons	Exclusion method
Unable to boot	The battery power is insufficient.	Charge the battery in time.
Unable to Paring	The phone has not yet enabled the Bluetooth function or has not yet opened the discoverable status.	Start Bluetooth and set to discoverable.
	When paired, the headphones are too far from the transmitter.	Please do not distance to more than 1 meter.
	The battery power is insufficient.	Charge the battery in time.
The noise is large	The battery power is insufficient.	Charge the battery in time.
Staccato	1、The headset is too far from the transmitter, beyond the receiving range. 2、There is an obstacle between the headphones from the transmitter.	Resweak properly to listen.
The receiving distance is short	1、Transmitter equipment compatibility issues. 2、There is an obstacle between the headphones from the transmitter.	1、Replace the transmitting equipment 2、Reset the appropriate location to listen

Product Features :

1.The headset has four connection modes, including normal Bluetooth mode, Bluetooth low-latency mode (USB-A and Type C connection modes) and 3.5mm wired mode, which can be used in various scenarios and devices.

2.Headset with game mode and music mode two kinds of sound, listening to songs, games can be.

3.The headset comes with a powerful low latency engine, which can be as low as 35ms to enjoy the game experience of audio and picture synchronization.

4.The headset is ergonomic and lightweight, which makes it easy to wear for a long time.

5.The headset has a built-in 1000mah battery, which can last you a week on a single charge.

6.The headset are equipped with soft and breathable large size mesh earmuffs for comfort.

7.Headset with cool lighting, release the passion of e-sports.

警告语：
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

G810 Wireless Gaming Headset Instruction Manual

Please read this manual carefully when using it and save it