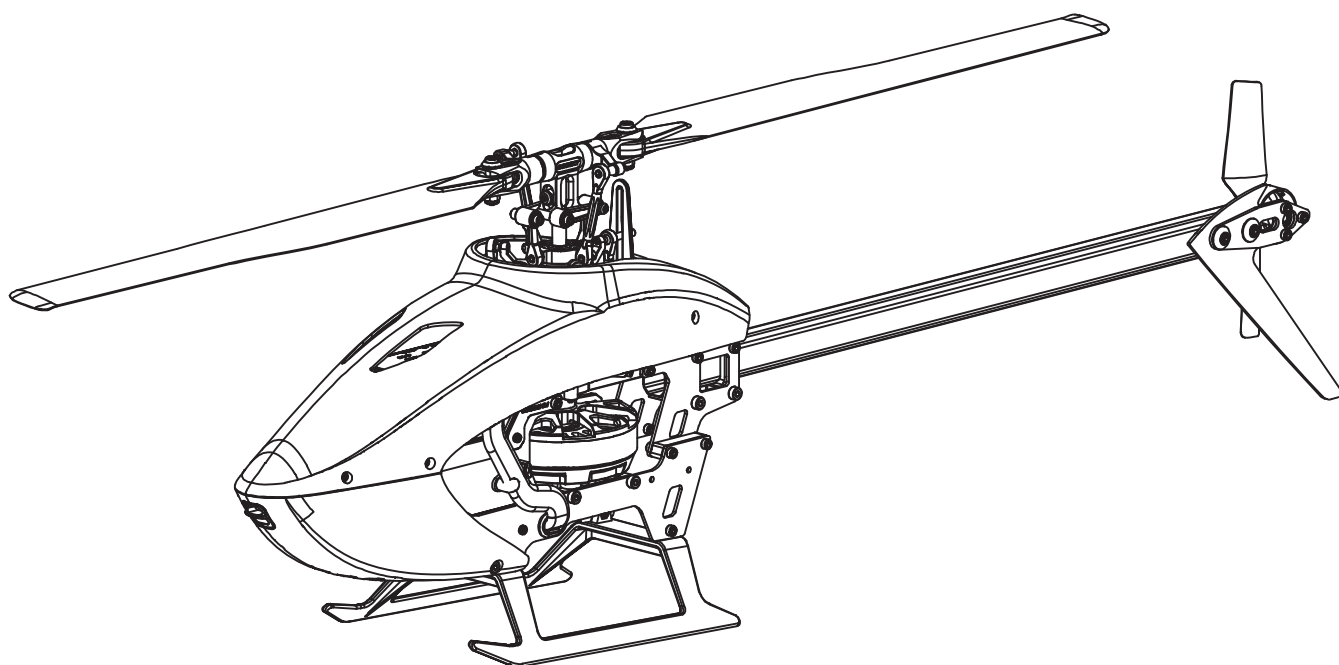


S2

INSTRUCTION MANUAL

使用说明书



GOOSKY

#1 BY DESIGN

©2022

Thank you for buying **GOOSKY** products. The **S2** is the latest technology in Rotary RC models. Please read this manual carefully before assembling and flying the New **S2** helicopter. We recommend that you keep this manual for future reference regarding and maintenance

感谢您选用谷天科技系列产品。

进入遥控世界前必须告诉您许多相关的知识与注意事项，以确保您能够在学习的过程中较得心应手。在开始操作之前，请务必详细阅读本说明书，相信一定能够给您带来相当大的帮助，也请您妥善保管这本说明书，以作为日后参考。

Thank you for buying GOOSKY Products. The S2 Helicopter is designed as an easy to use, full featured Helicopter R/C model capable of all forms of rotary flight. Please read the manual carefully before assembling the model, and follow all precautions and recommendations located within the manual. Be sure to retain the manual for future reference, routine maintenance, and tuning.

The S2 is a new product developed by GOOSKY. It features the best design available on the Micro-Heli market to date, providing flying stability for beginners, full aerobatic capability for advanced fliers, and unsurpassed reliability for customer support.

感谢您选购谷天科技公司产品，为了您容易方便使用RS2直升机，请您详细的阅读完这本说明书之后再进行组装以及操作这台直升机，同时请您妥善保管这本说明书，作为日后进行调整以及维修的参考。

S2是由谷天科技有限公司自行研发的新产品，不论您是需求飞行稳定的初学者还是追求性能卓越的飞行爱好者。S2将是您最佳的选择。

WARNING LABEL LEGEND 标志代表含义

 WARNING 警告	Mishandling due to failure to follow these instructions may result in damage or injury. 因为疏忽这些操作说明，而使用错误可能造成财产损失或严重伤害。
 CAUTION 注意	Mishandling due to failure to follow these instructions may result in danger. 因为疏忽这些操作说明，而使用错误可能造成危险。
 FORBIDDEN 禁止	Do not attempt under any circumstances 在任何禁止的环境下，请勿尝试操作。

IMPORTANT NOTES 重要声明

R/C helicopters, including The S2 are not toys. R/C helicopter utilize various high-tech products and technologies to provide superior performance. Improper use of this product can result in serious injury or even death. Please read this manual carefully before using and make sure to be conscious of your own personal safety and the safety of others and your environment when operating all GOOSKY products.

Manufacturer and seller assume no liability for the operation or the use of this product. Intended for use only by adults with experience flying remote control helicopters at a legal flying field. After the sale of this product we cannot maintain any control over its operation or usage.

S2遥控直升机并非玩具，它是结合了许多高科技产品所设计出来的休闲用品，所以商品的使用不当或者不熟悉都可能会造成严重伤害甚至死亡，使用之前请务必详细阅读本说明书，勿轻忽并注意自身安全。

注意！任何遥控直升机的使用，制造商和经销商是无法对使用者于零件使用的损耗异常或组装不当所发生之意外负任何责任，本产品是为提供有操作过模型直升机经验的成人或者有相当技术的人员在旁指导于当地合法遥控飞行场飞行，以确保安全无误下操作使用，产品售出后该公司将不负任何责任和使用控制上的任何性能与安全责任。

We recommend that you obtain the assistance of an experienced pilot before attempting to fly our products for the first time. A local expert is the best way to properly assemble, setup, and fly your model for the first time. RS2 Helicopter requires a certain degree of skill to operate, and is a consumer item. Any damage or dissatisfaction as a result of accidents or modifications are not covered by any warranty and cannot be returned for repair or replacement. Please contact our distributors for free technical consultation and parts at discounted rates when you experience problems during operation or maintenance.

模型商品属于需高操作技术且为消耗性之商品，如经拆装使用后，会造成不等情况零件损耗，任何使用情况所造成的商品不良或不满意，将无发于保固条件内更换新品或者退货，如遇有使用操作维修问题，本公司全球分公司或者代理商将提供技术指导，特价零件供应服务。

SAFETY NOTES 安全注意事项



Fly only in safe areas, away from other people. Do not operate R/C aircraft within the vicinity of homes or crowds of people. R/C aircraft are prone to accidents, failures, and crashes due to a variety of reasons including lack of maintenance, pilot error, and radio interference. Pilots are responsible for their actions and damage or injury occurring during the operation or as a result of R/C aircraft models.

遥控模型飞机、直升机属于高危险性商品，飞行时必须远离人群，人为组装不当或机件损坏，电子控制设备不良，以及操控上的不熟悉、都有可能导致飞行失控损伤等不可预期的意外，请飞行者务必注意飞行安全，并需了解自负疏忽所造成的任何意外之责任。



LOCATE AN APPROPRIATE LOCATION 远离障碍物及人群

R/C helicopters fly at high speed ,thus posing a certain degree of potential danger .Choose a legal flying field consisting of flat,smooth ground without obstacles.

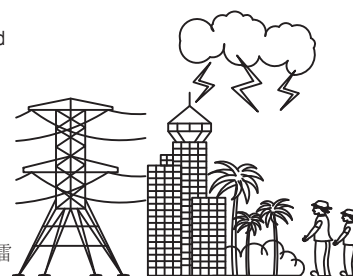
Do not fly near buildings,high voltage cables ,or trees to ensure the safety of yourself,others and your model.

For the first practice,please choose a legal flying field and can use a training skid to fly for reducing the damage .Do not fly your model in inclement weather,such as rain,wind snow or darkness.

直升机飞行时具有一定的速度,相对的也潜在着危险性,场地的选择也相对的重要,请遵守当地的法律法规到合法的遥控飞行场地去飞行。

必须注意周边有没有人、高楼、建筑物、高压电线、树木等等、避免操控的不当造成自己或他人的财产损失。

初次练习时,务必选择在空旷合法专属飞行场地并适当搭配练习架飞行,这对于飞行失误所造成的损伤将会大幅的降低。请勿在下雨天、打雷等恶劣天气下操作,以确保本身及机体的安全。



PREVENT MOISTURE 远离潮湿环境

R/C models are composed of many precision electrical components.

It is critical to keep the model and associated equipment away from moisture and other contaminants.The introduction or exposure to water or moisture in any form can cause the model to malfunction resulting in loss of use,or a crash .Do not operate or expose to rain or moisture

直升机内部也是由精密的电子零件组成,所以必须绝对的防止潮湿或水气,避免在浴室或雨天时使用,防止水气进入机身内部而导致机件及电子零件故障而引发不可预期的意外!



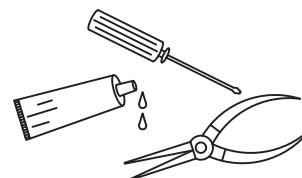
PREVENT OPETATION 勿不当使用本产品

Please use the replacement of parts on the manual to ensure the safety of instructors.

This product is for R/C model,so do not use for other purpose.

请勿自行改造加工,任何的升级改装或维修,请使用三源电子科技产品目录中的零件,以确保结构的安全。

请确认于产品界限内操作,请勿超载使用,并勿用于安全、法令外其他非法用途。



OBTAIN THE ASSISTANCE OF AN EXPERIENCED PILOT 避免独自操控

Before turning on your model and transmitter,check to make sure no one else is operating on the same frequency.Frequency interference can cause your model,or other models to crash.

The guidance provided by an experienced pilot will be invaluable for the assembly,tuning,trimming,and actual first flight.(Recommend you to practice with computer-based flight simulator.)

至飞行场地前,需确认是否有相同频率的同好正在飞行,因为开启相同的频率的发射机将导致自己与他人立即干扰等意外危险。

遥控飞机操控技巧在学习初期有着一定的难度,要尽量避免独自操作飞行,需有经验的人士在旁指导,才可以操控飞行。(勤练电脑模拟器及老手指导是入门必要的选择)



SAFE OPERATION 安全操作

Operate this unit within your ability.Do not fly under tired condition and improper operation may cause in danger

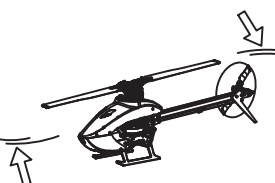
请于自己能力内及需要一定技术范围内操作这台直升机,过于疲劳,精神不佳或不当操作,意外发生风险将可能会提高。



ALWAYS BE AWARE OF THE ROTATING BLADES 远离运转中的零件

During the operation of the helicopter,the main rotor and tail rotor will be spinning at a high rate of speed .The blades are capable of inflicting serious bodily injury and damage to the environment.Be conscious of your actions,and careful to keep your face,eyes,hands,and loose clothing away from the blades.Always fly the model a safe distance from yourself and others,as well as surrounding objects.Never take your eyes off the model or leave it unattended while it is turned on.Immediately turn off the model and transmitter when you have landed model.


当直升机主旋翼与尾旋翼运转时,切勿触摸并远离任何物件,以避免造成危险及损坏。







KEEP AWAY FROM HEAT 远离热源

R/C models are made of various forms of plastic.Plastic is very susceptible to damage or deformation due to extreme heat and clod climate .Make sure not to store the model near any source of heat such as an oven,or heater.It is best to store the model indoors ,in a climate-controlled,room temperature environment.

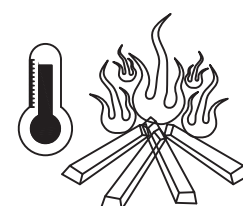遥控飞机多半是以PA纤维或聚乙烯、电子商品为主要材质,因此要尽量远离热源、日照、以避免因高温而变形甚至烧毁损坏的可能。



 Cutter Knife 刀子	 Scissors 剪刀	 Needle Nose Pliers 尖嘴钳	 Diagonal Cutting Pliers 斜口钳
 Philips Screw Drive 十字螺丝起子	 Hexagon Screw Driver 六角螺丝起子	 Oil 润滑油	 CA 瞬间胶
			 AB Glue AB 胶

胶水使用方法

When you see the marks as below, please use glue or grease to ensure flying safety.
标有以下符号之组装步骤, 请配合上胶或上油, 以确保使用之可靠度。



Apply BLUE Threadlock
使用螺丝胶



Apply Petroleum-Based,
Light Viscosity Lube
添加润滑油



Loosely Tighten
普通拧紧



Apply NO Threadlock
无需使用螺丝胶



Apply Synthetic
Grease
添加润滑油脂



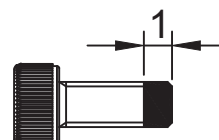
Fully Tighten
完全拧紧




Apply MEDIUM CA
使用瞬间胶固定



Repeat Multiple Times
重复多次



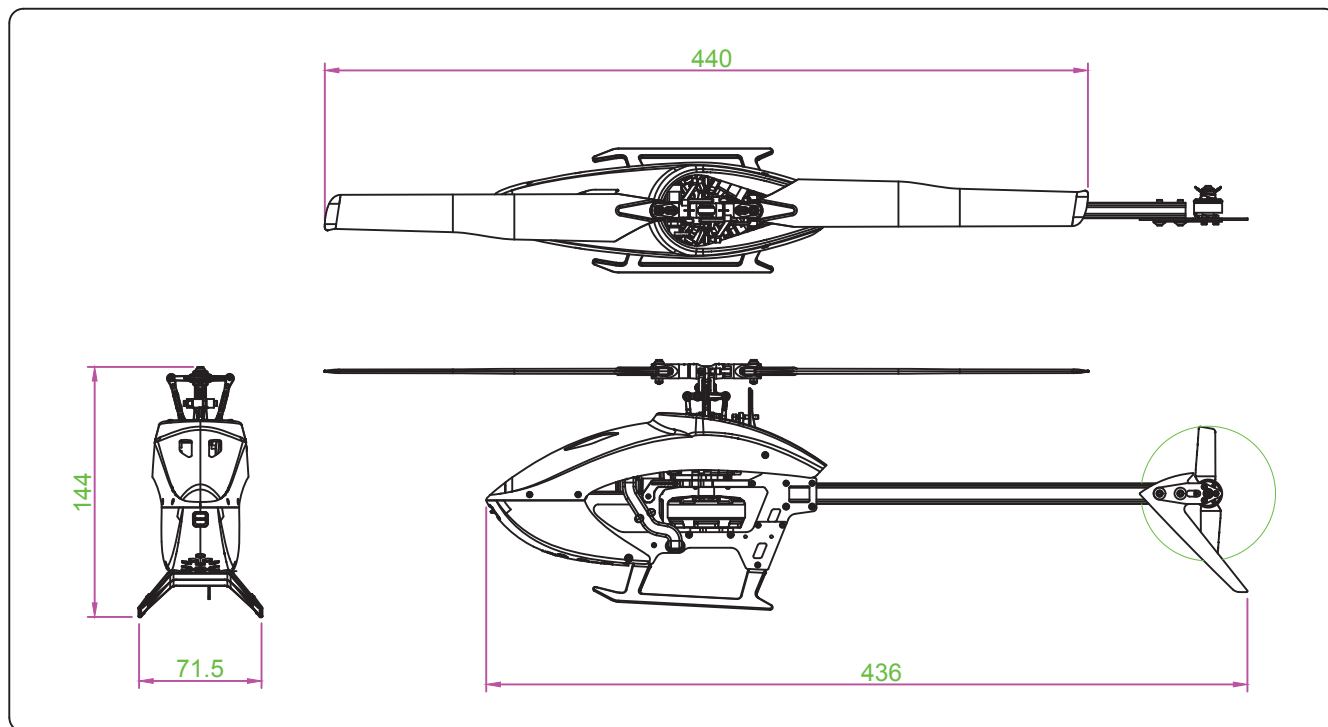BLUE Glue width: approx 1mm
蓝色螺丝胶上胶宽度约1.0mm



Specifications 参数配备

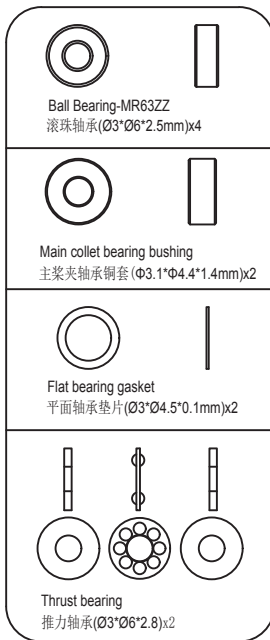
- Length: 436mm
- Height: 144mm
- Main Blade: 193mm
- Main Rotor Diameter: 440mm
- Tail Rotor Diameter: 99mm
- Flying Weight: 345g

- 机身长: 436mm
- 机身高: 144mm
- 主旋翼长度: 193mm
- 主旋翼直径: 440mm
- 尾旋翼直径: 78mm
- 起飞重量约: 345g

Features 设计特点

-
-
-
-
-
-
-
-
-
-

- 采用双无刷电机直接驱主尾旋翼设计
- FBL 旋翼头结构
- 全机免调连杆设计
- 流线型, 封闭式头罩, 采用炫彩烤漆工艺
- 开合式快拆电池结构
- 沉入式快装垫片设计
- 手机APP调参、无线程序升级
- 防呆快拆螺旋桨设计
- 紧固式极耳电机连接
- 多功能、高集成GTS飞控系统



Obverse of bearing faces inside.
轴承面凹开口朝内

Flat bearing gasket
平面垫片(Ø3*Ø4.5*0.1mm)

Thrust bearings
推力轴承Ø3*Ø6*2.8mm)

Ball Bearing-MR63ZZ
滚珠轴承(Ø3*Ø6*2.5mm)

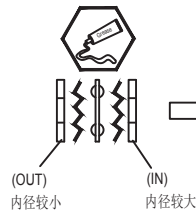
main propeller clip
主桨夹

Main collet bearing bushing
主桨夹轴承铜套(Φ3.1*Φ4.4*1.4mm)




Ball Bearing-MR63ZZ
滚珠轴承(Ø3*Ø6*2.5mm)



Thrust bearing
推力轴承(Ø3xØ6x2.8)



原装组装完成品，每一次飞行前请先确认螺丝是否已上胶不会松动。

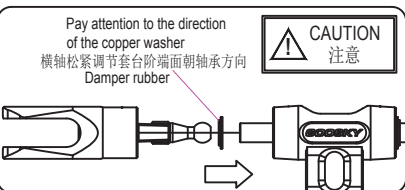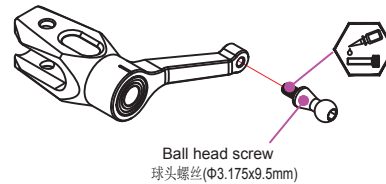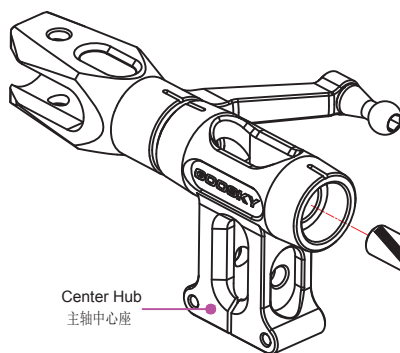

Washer
横轴松紧调节套
(Φ3.1*Φ4*Φ5*0.3*0.55)

Washer
垫片
Ø2*Ø5*0.2mm

Socket screw
圆头内六角螺丝(M2x5mm)

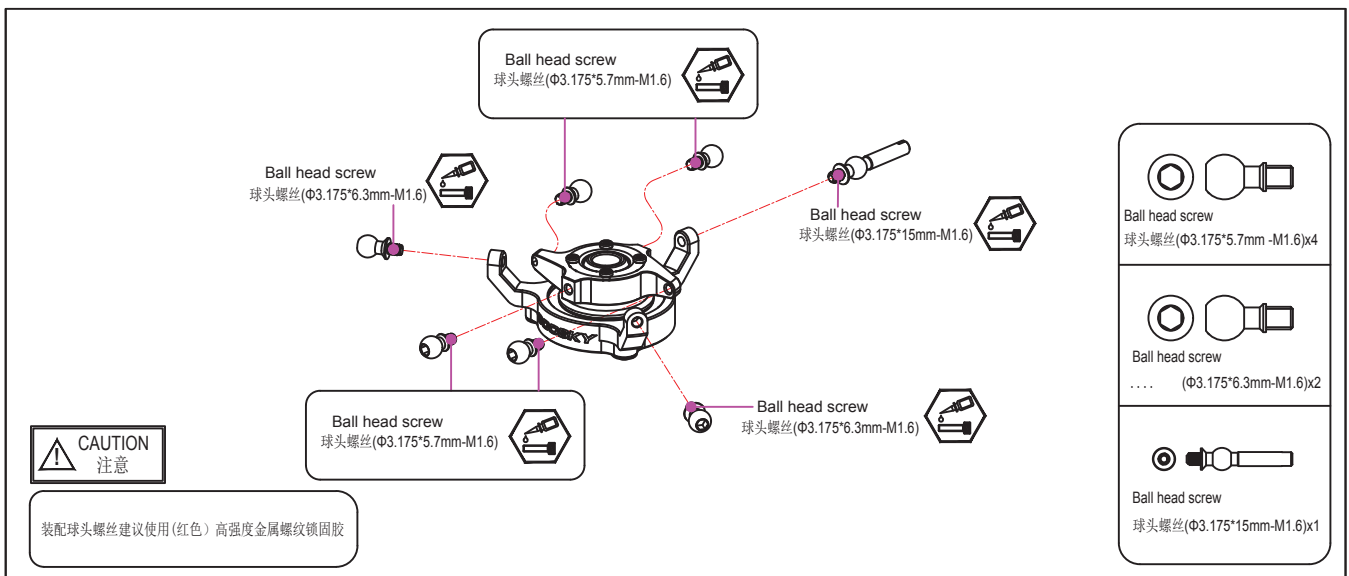
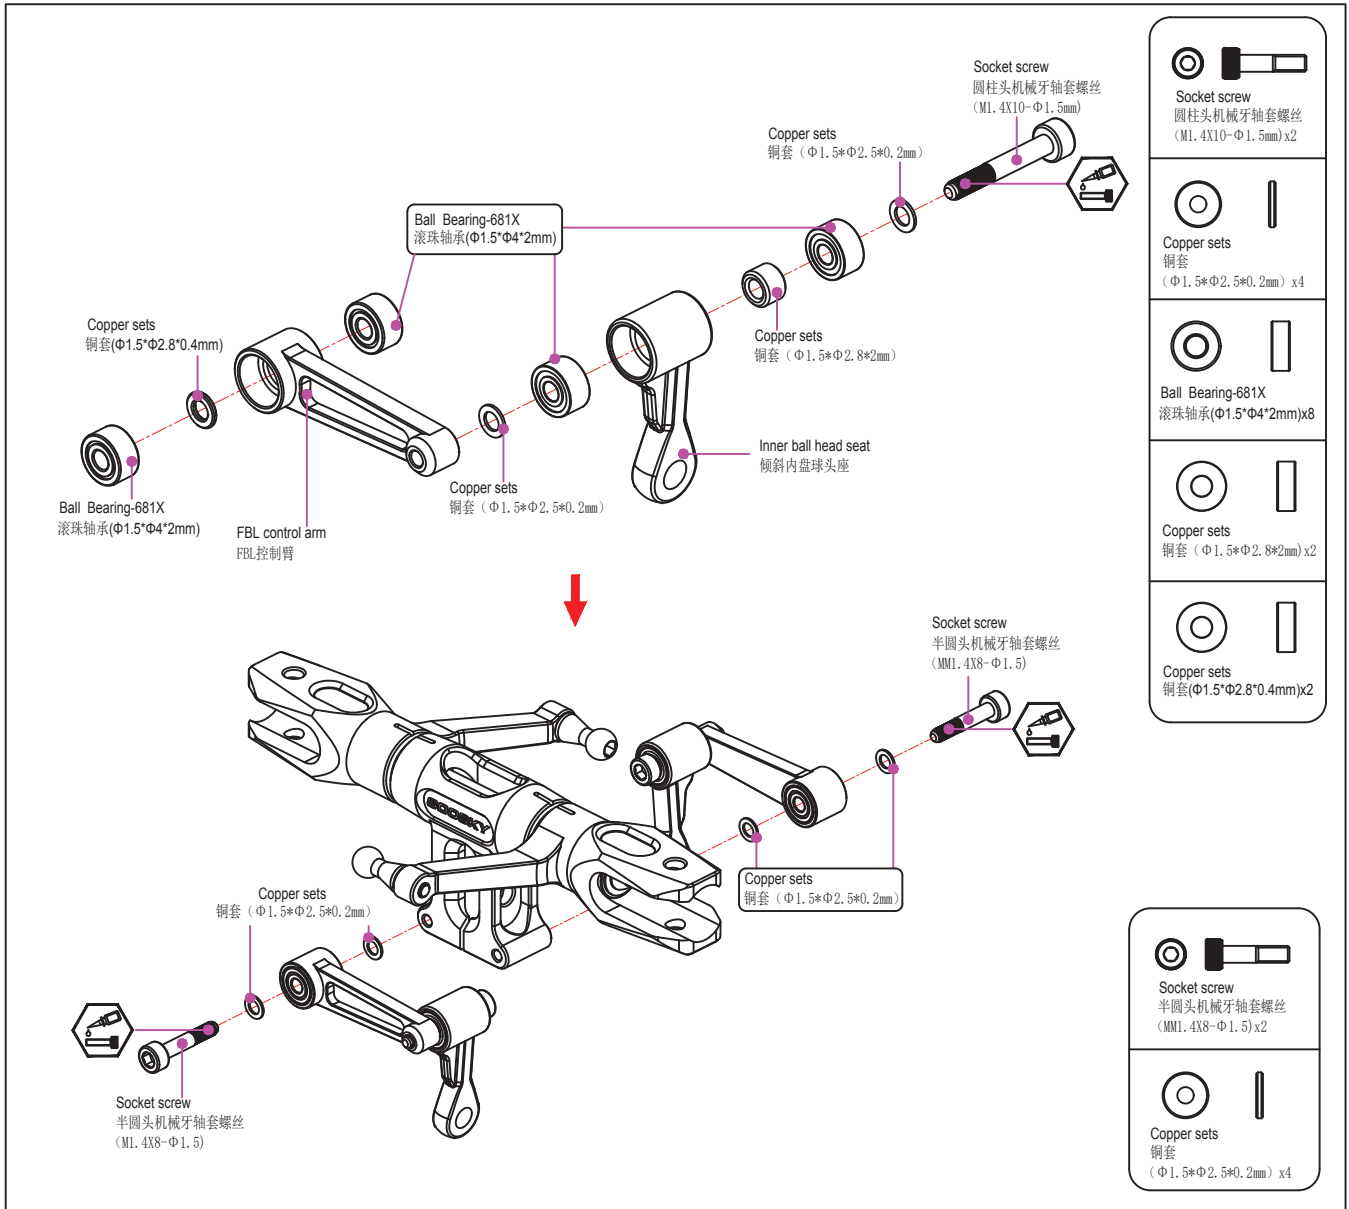


Washer
平面垫片(Ø2*Ø5*0.2mm)x2

Socket screw
圆头内六角螺丝(M2x5mm)x2



Washer
横轴松紧调节套
(Φ3.1*Φ4*Φ4*0.3*0.55)x2



Damper rubber-red
横轴避震套
(Φ3*Φ6*3mm)x2





CAUTION
注意

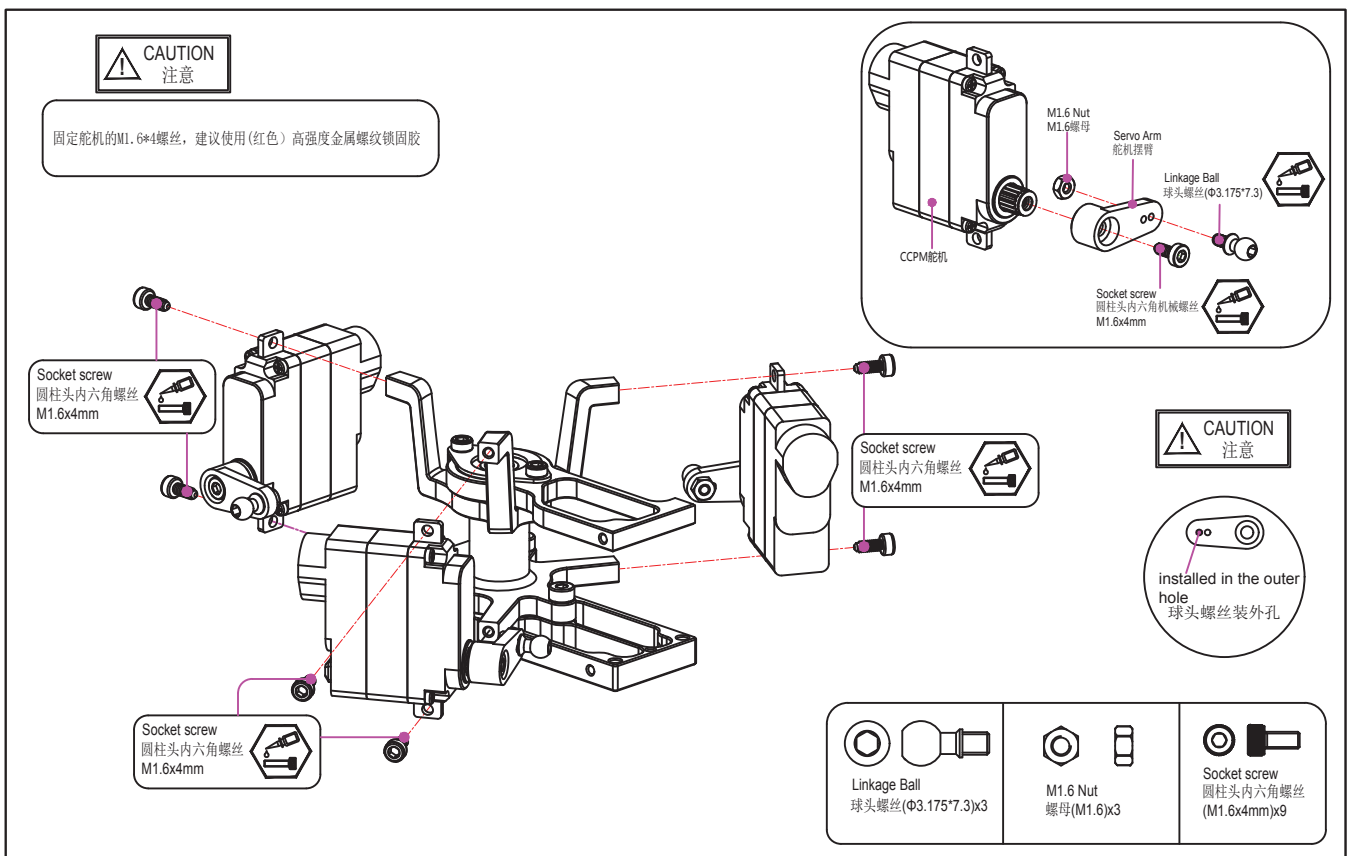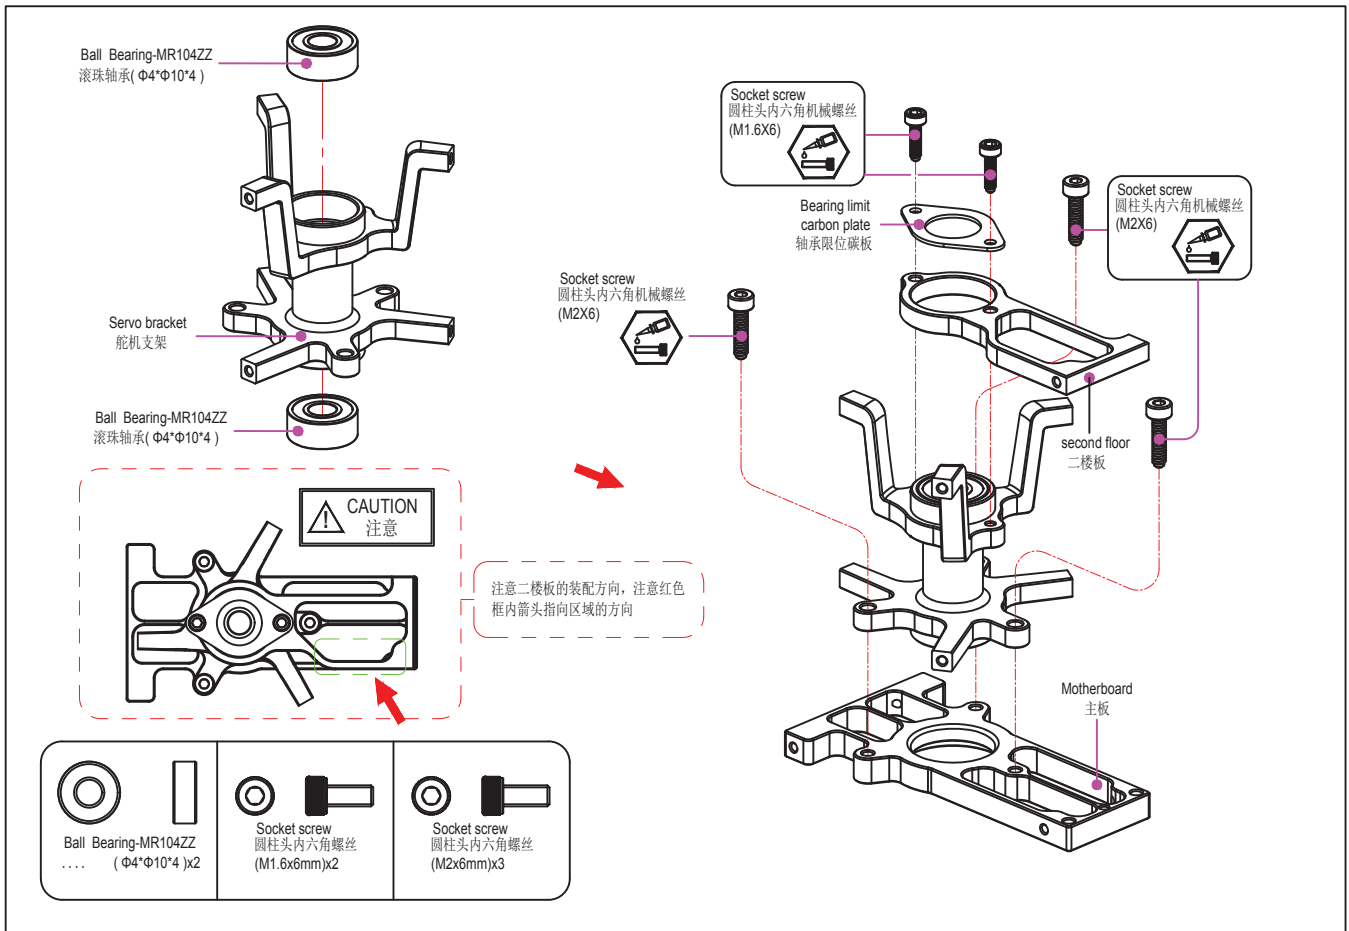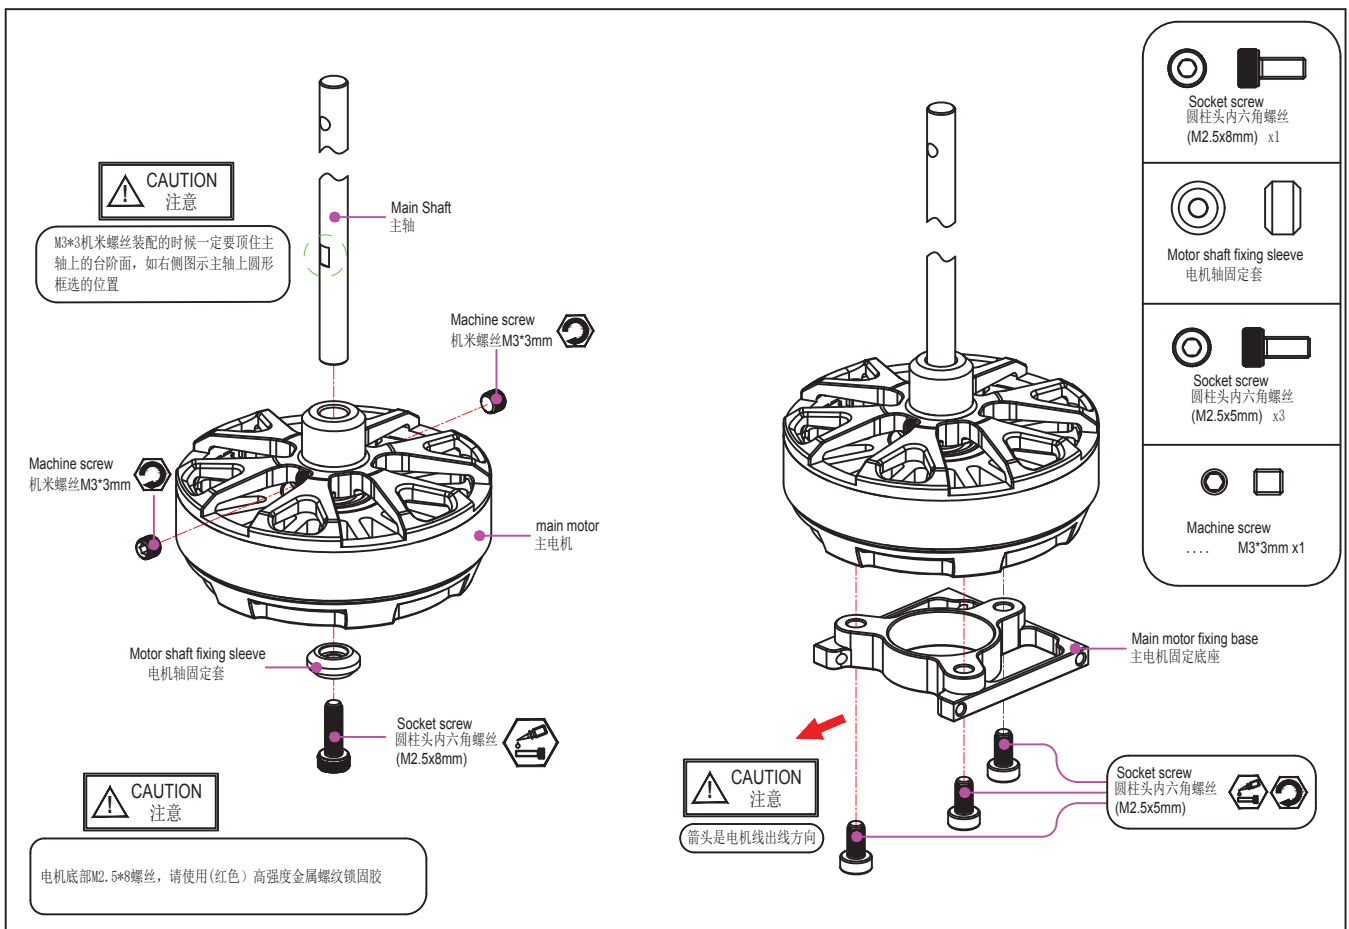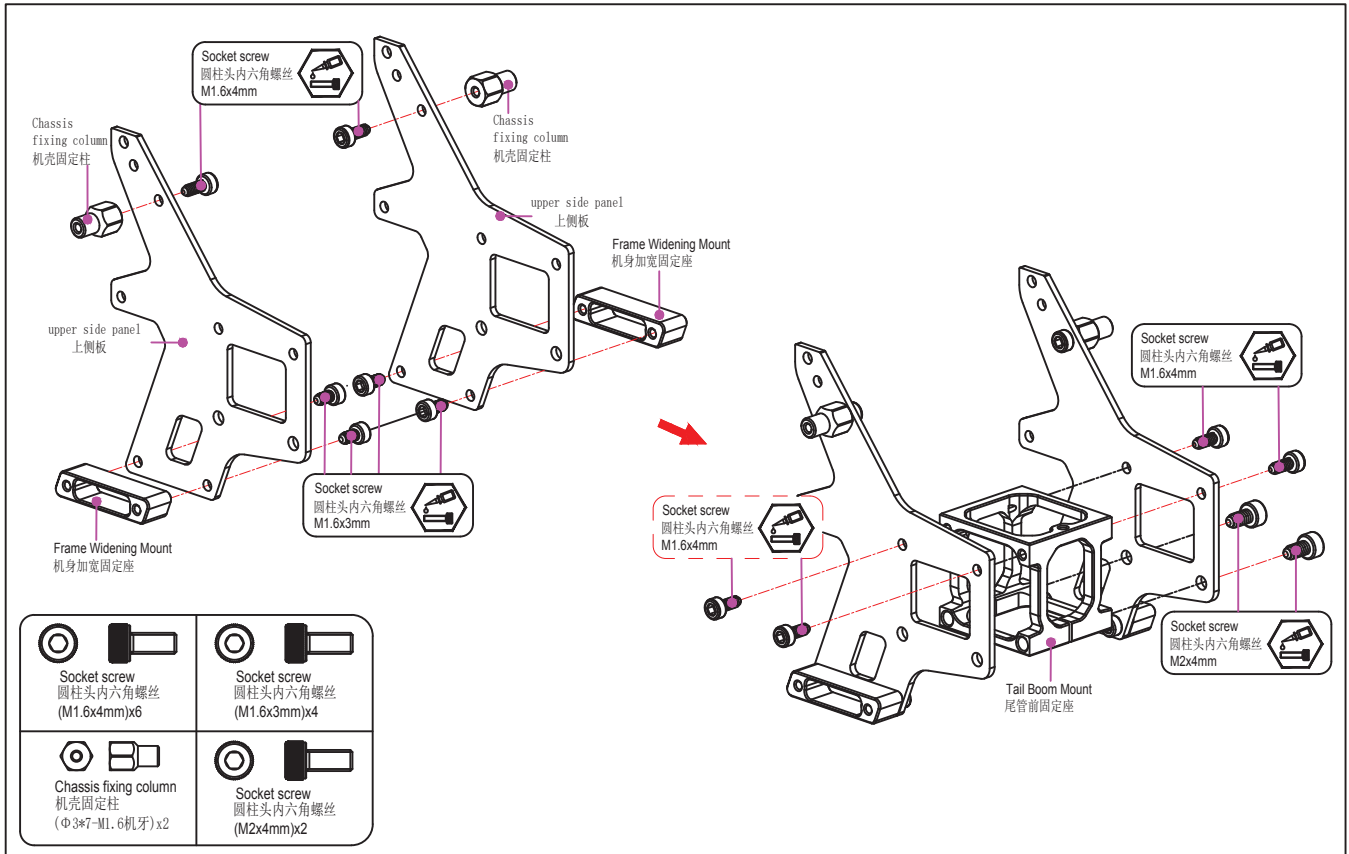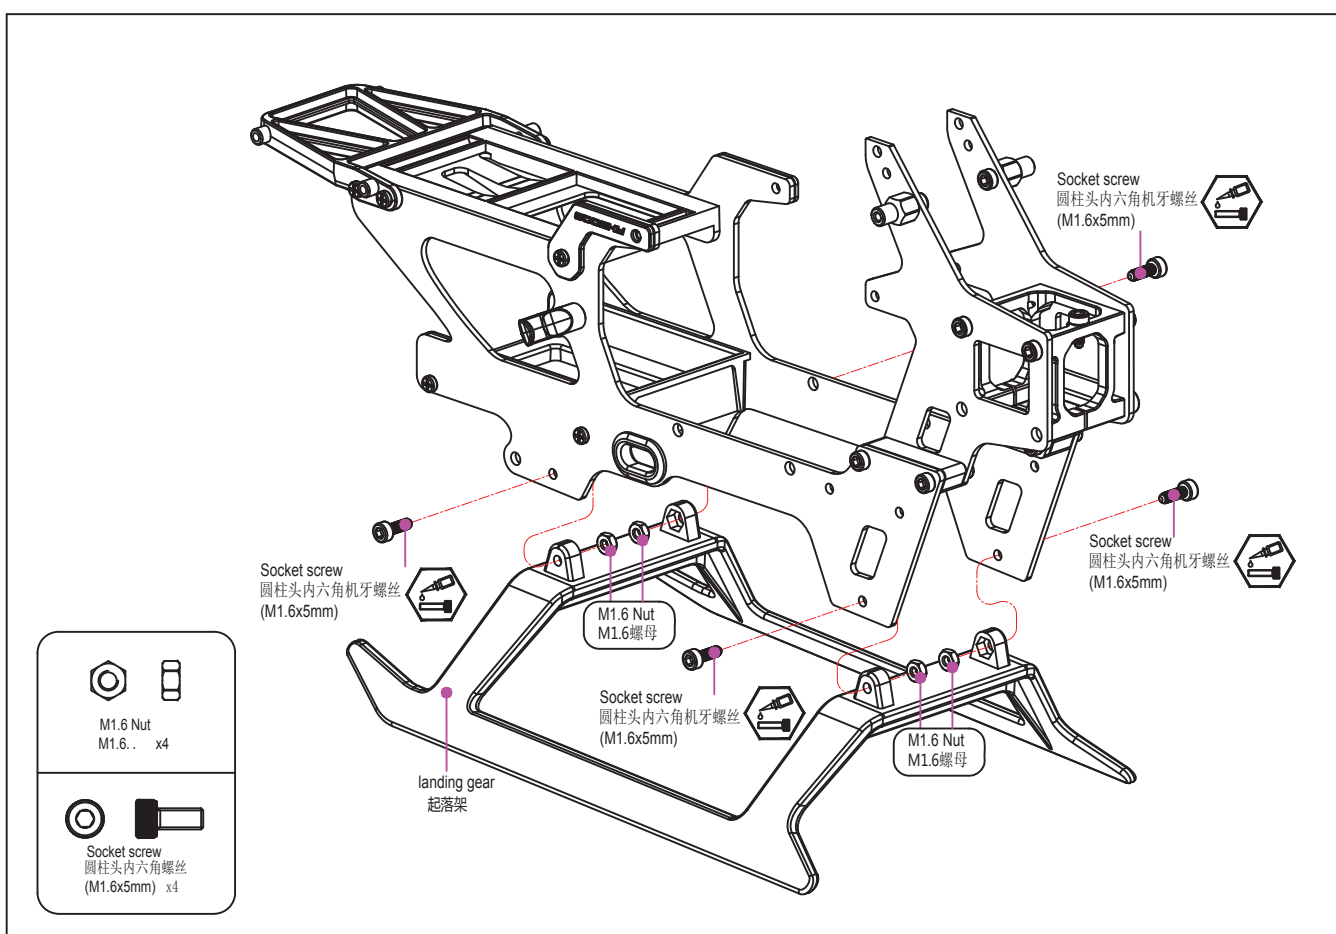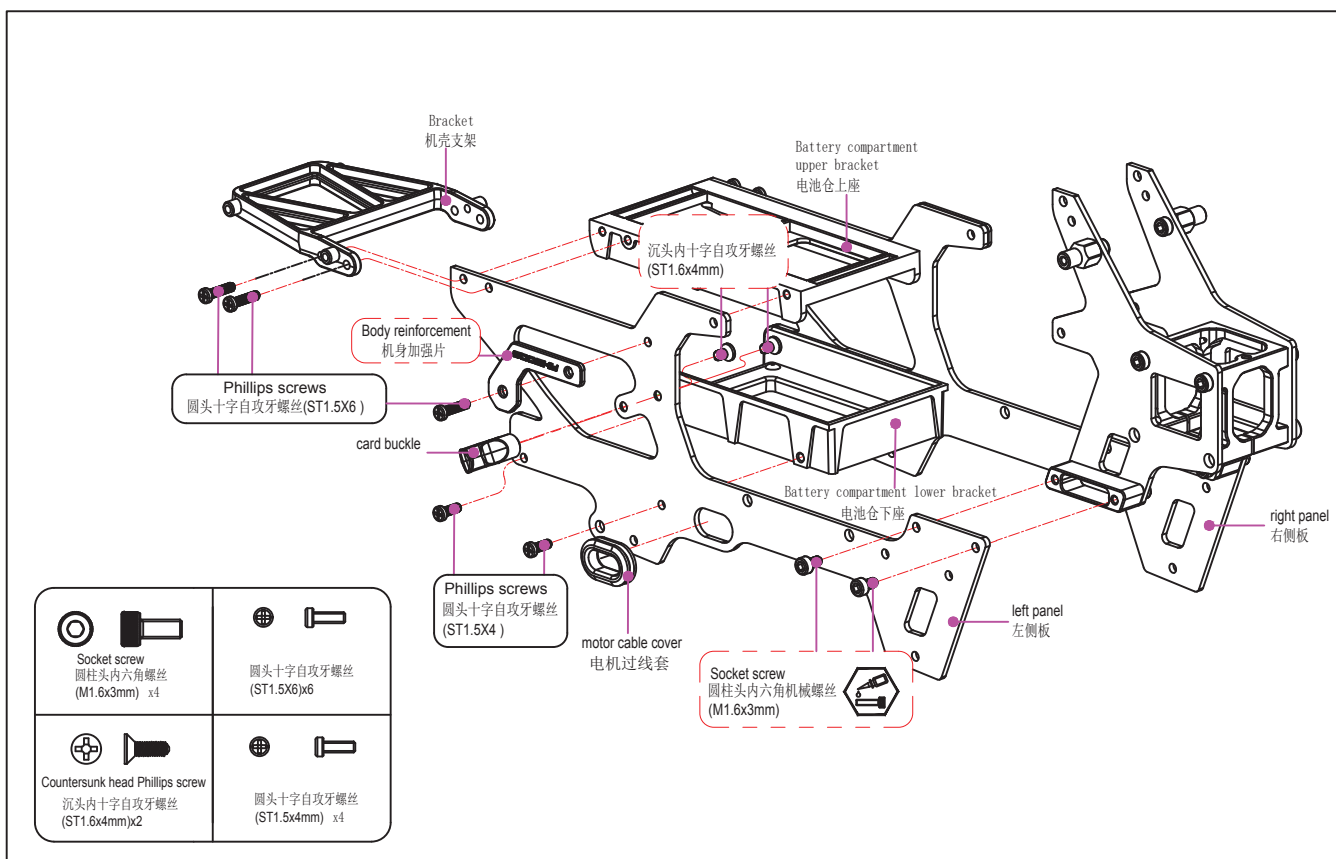装配球头螺丝建议使用(红色)高强度金属螺纹锁固胶










此步骤，两侧固定电机组件的M1.6*4螺丝不要完全锁到位；

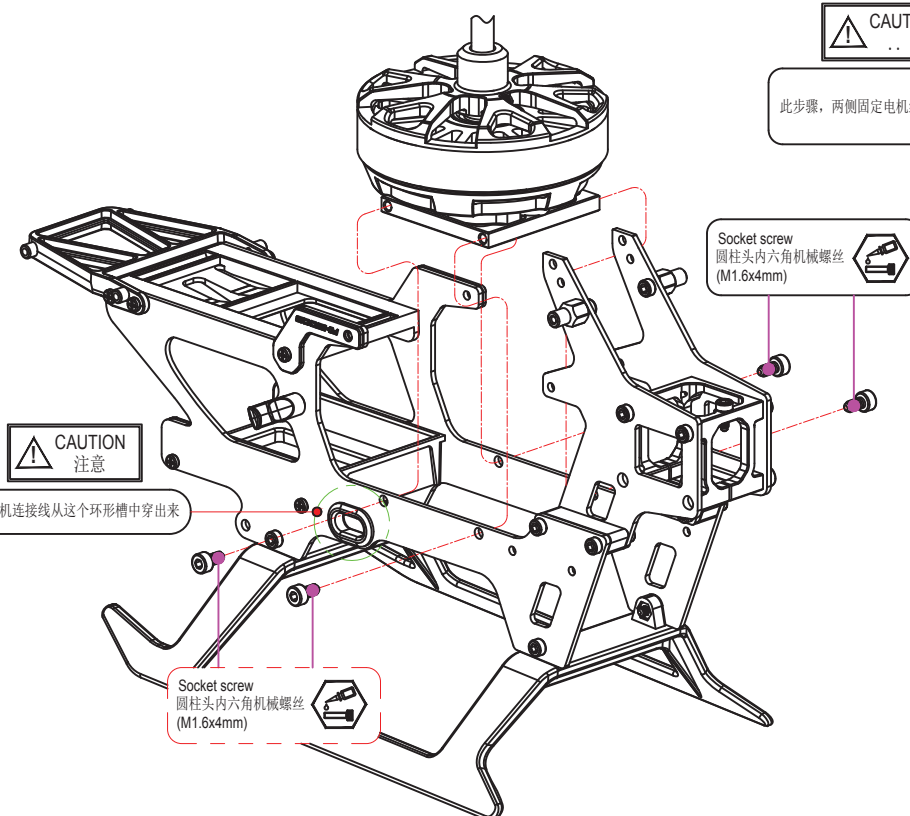


电机连接线从这个环形槽中穿出来

Socket screw
圆柱头内六角机械螺丝
(M1.6x4mm)

Socket screw
圆柱头内六角螺丝
(M1.6x4mm)x4



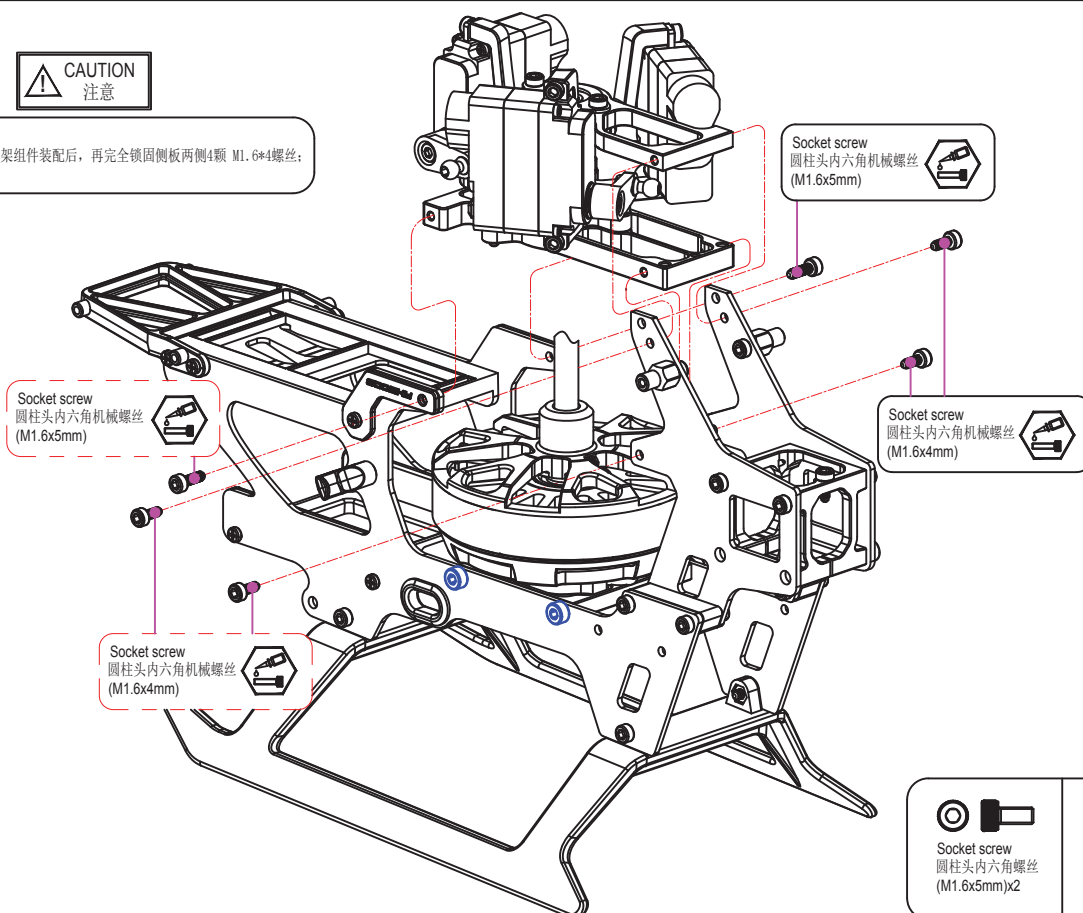主机架组件装配后，再完全锁固侧板两侧4颗 M1.6*4螺丝；



Socket screw
圆柱头内六角机械螺丝
(M1.6x5mm)

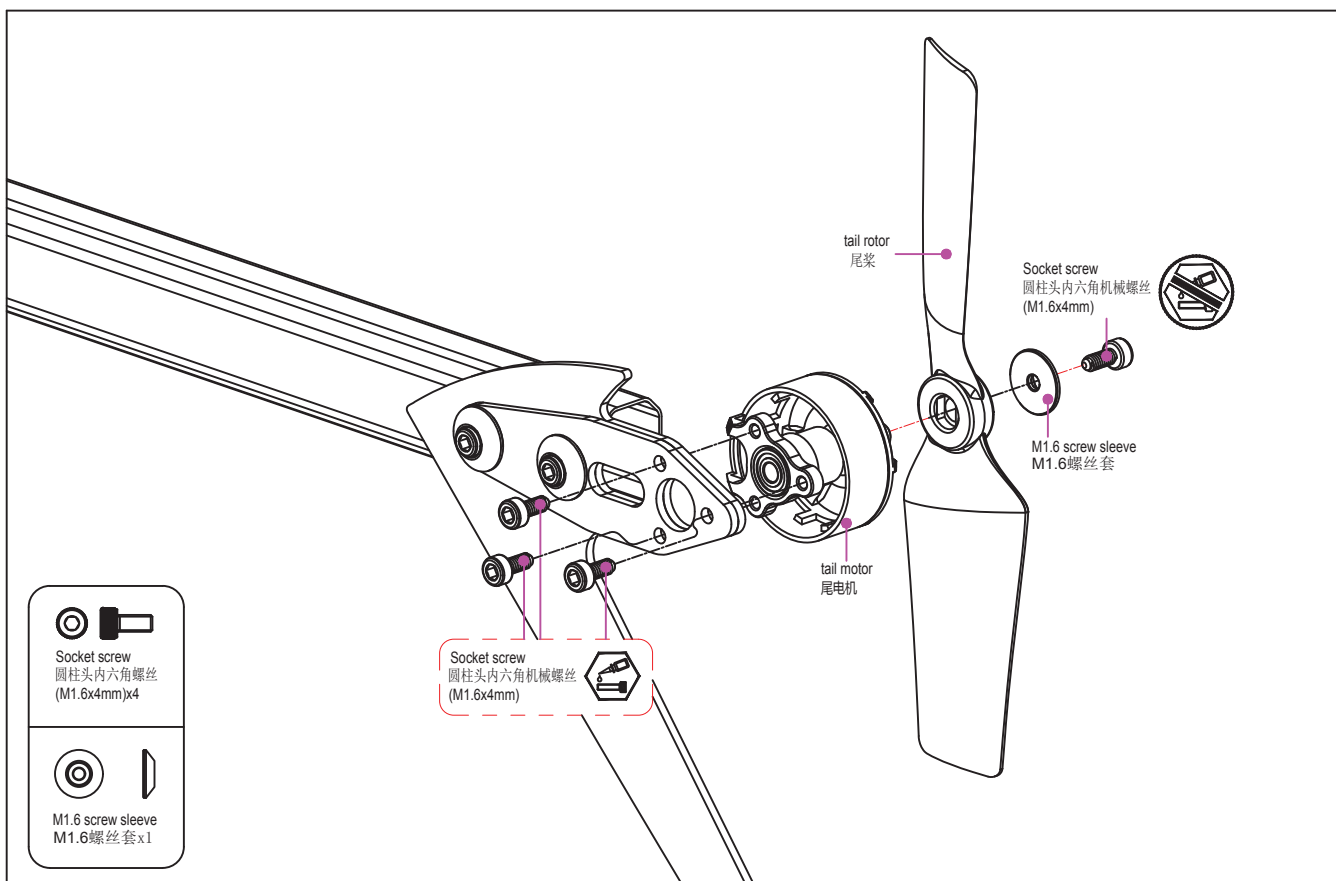
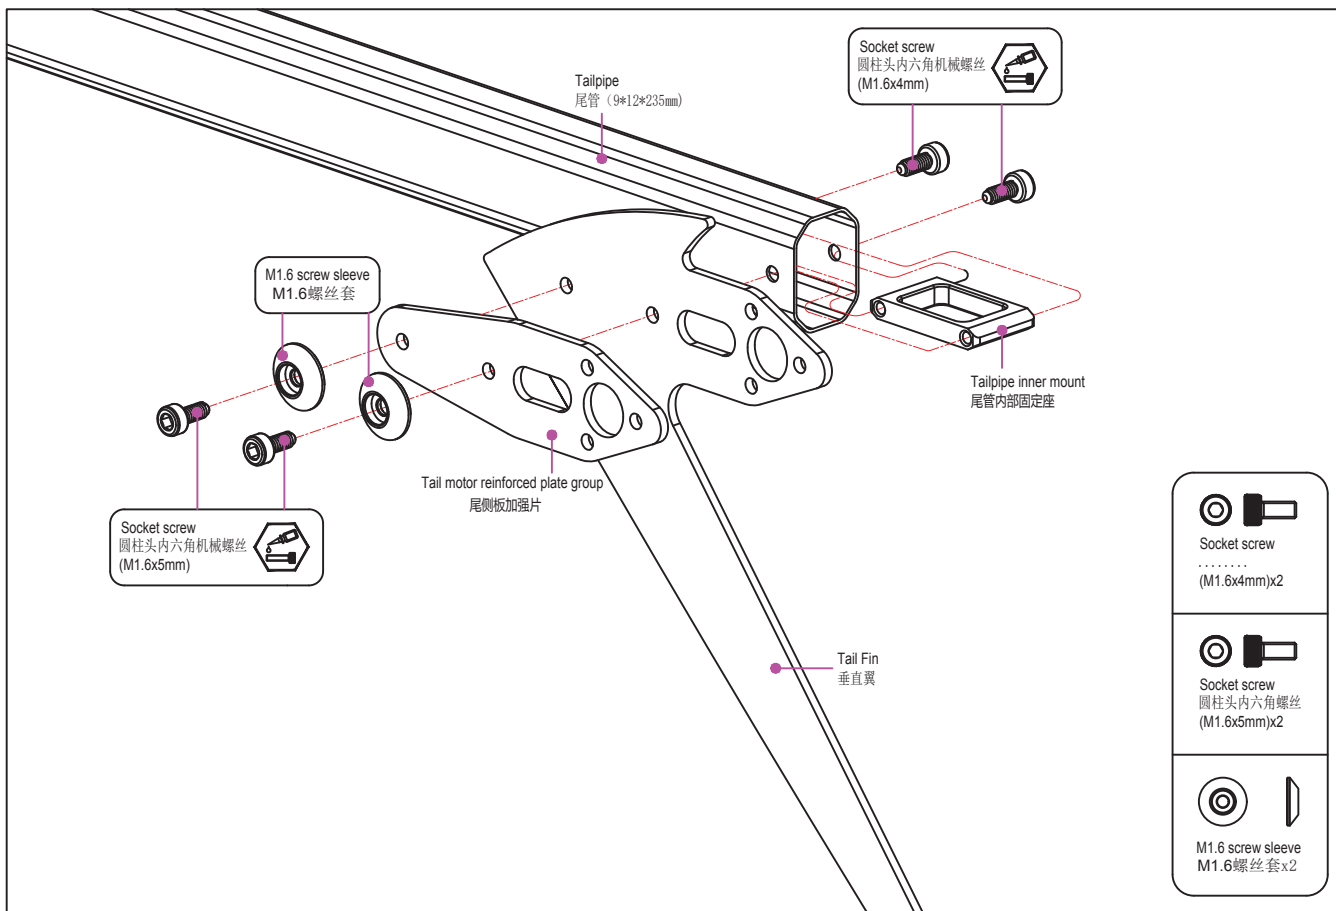
Socket screw
圆柱头内六角机械螺丝
(M1.6x5mm)

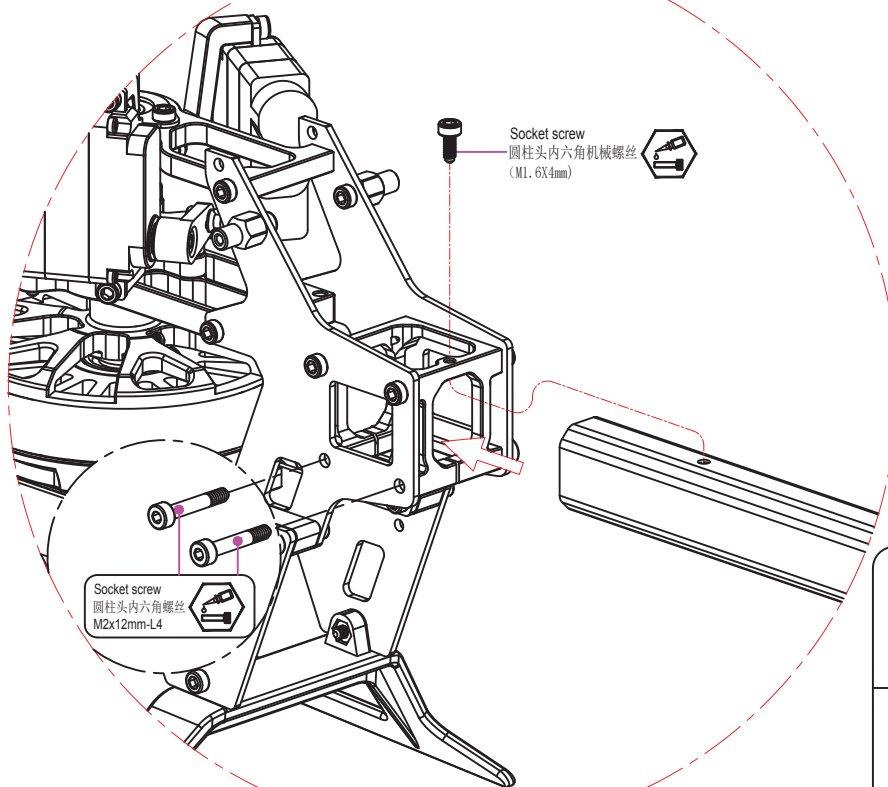
Socket screw
圆柱头内六角机械螺丝
(M1.6x4mm)

Socket screw
圆柱头内六角机械螺丝
(M1.6x4mm)


Socket screw
圆柱头内六角螺丝
(M1.6x5mm)x2

Socket screw
圆柱头内六角螺丝
(M1.6x4mm)x4










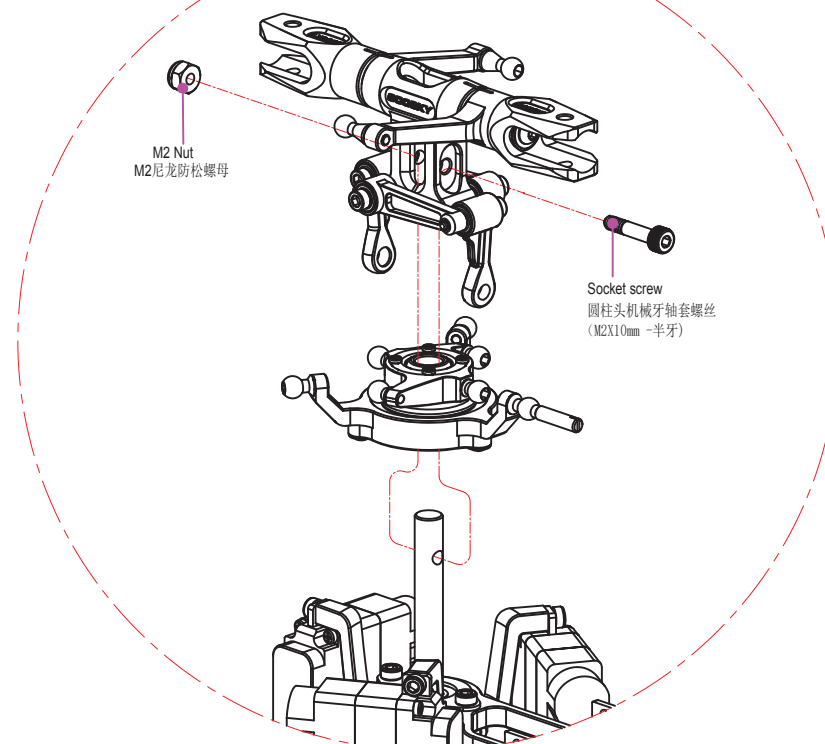
- Socket screw
圆柱头内六角机械螺丝
(M2x12mm-L4)x2
- Socket screw
(M1.6X4mm) x1





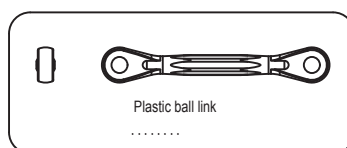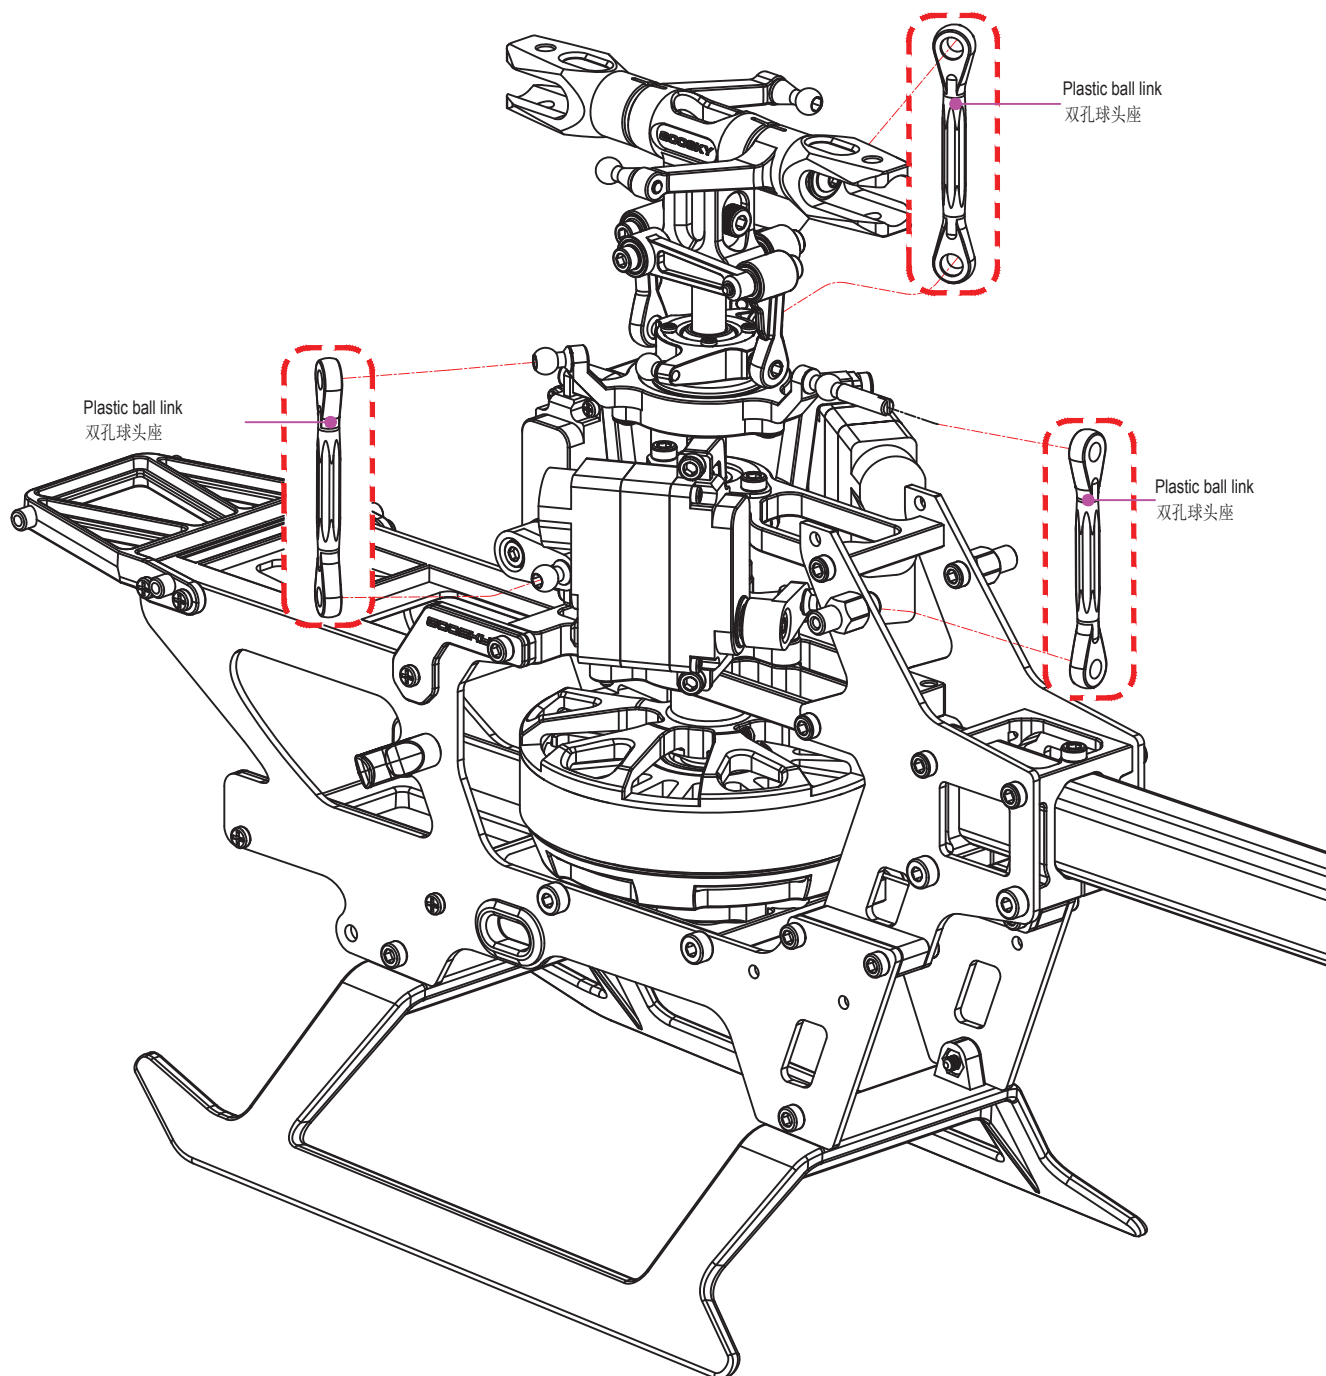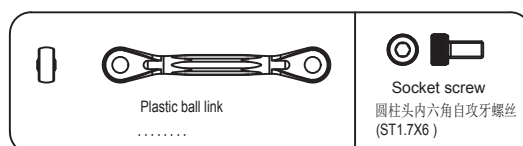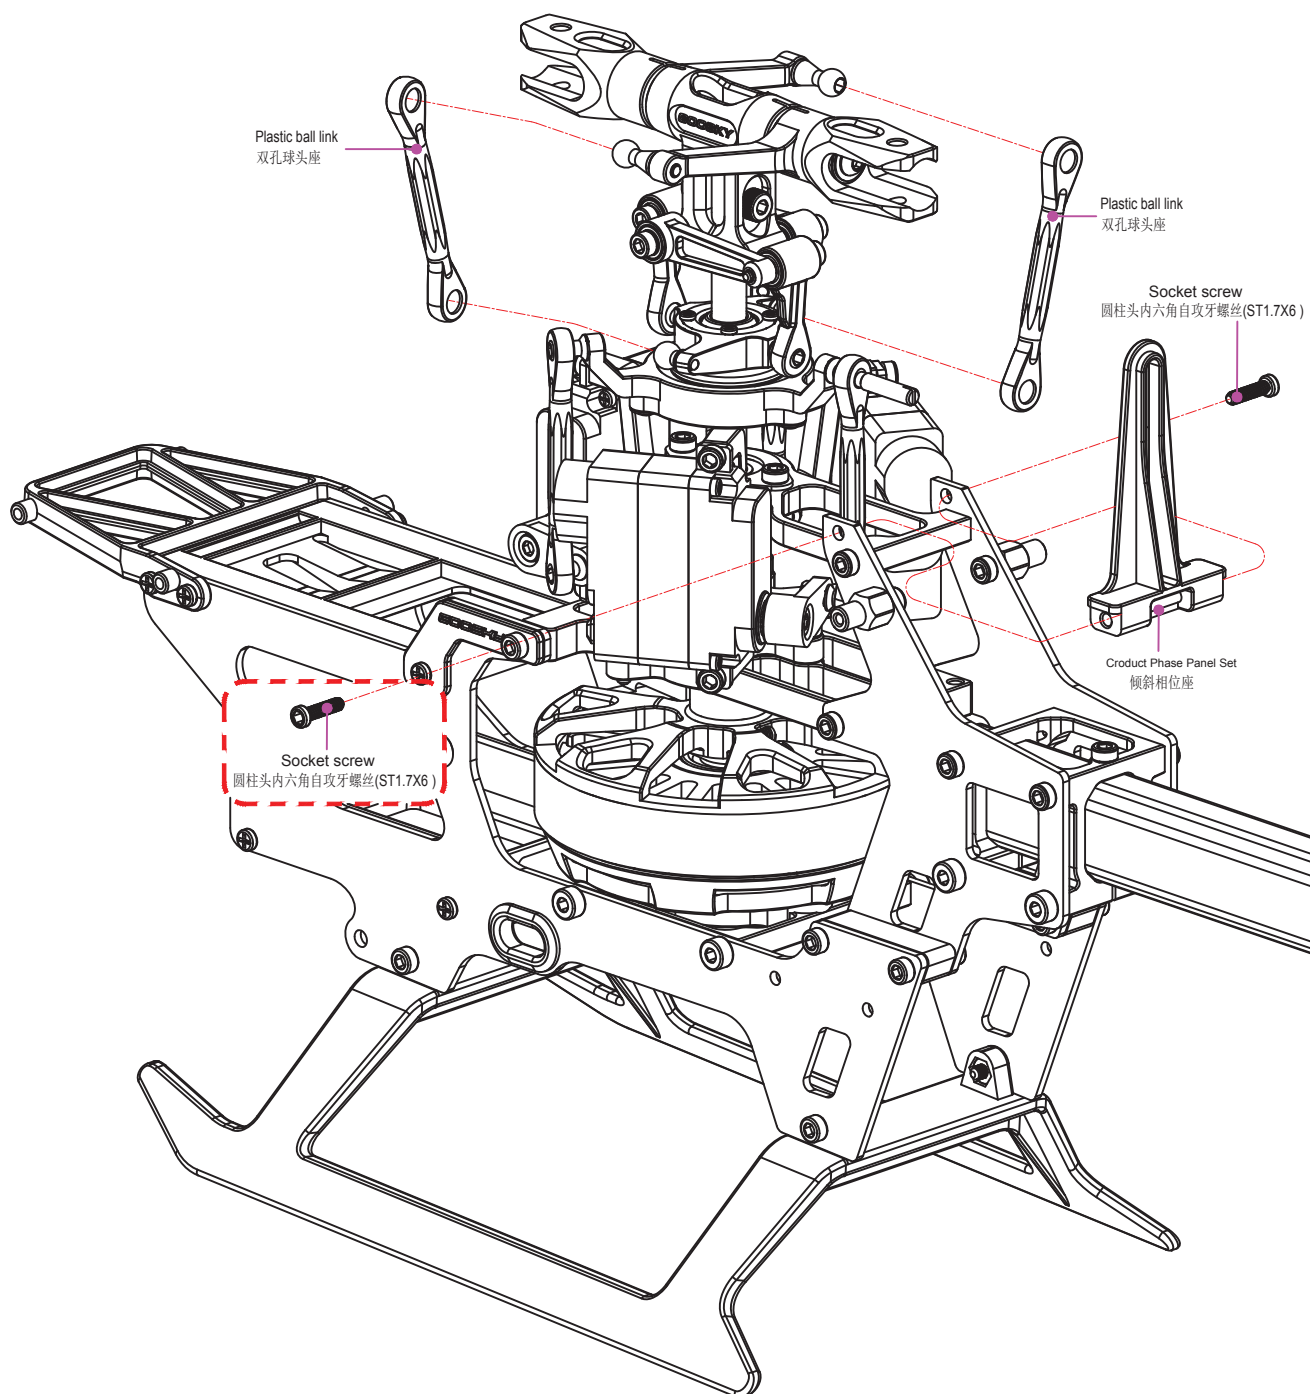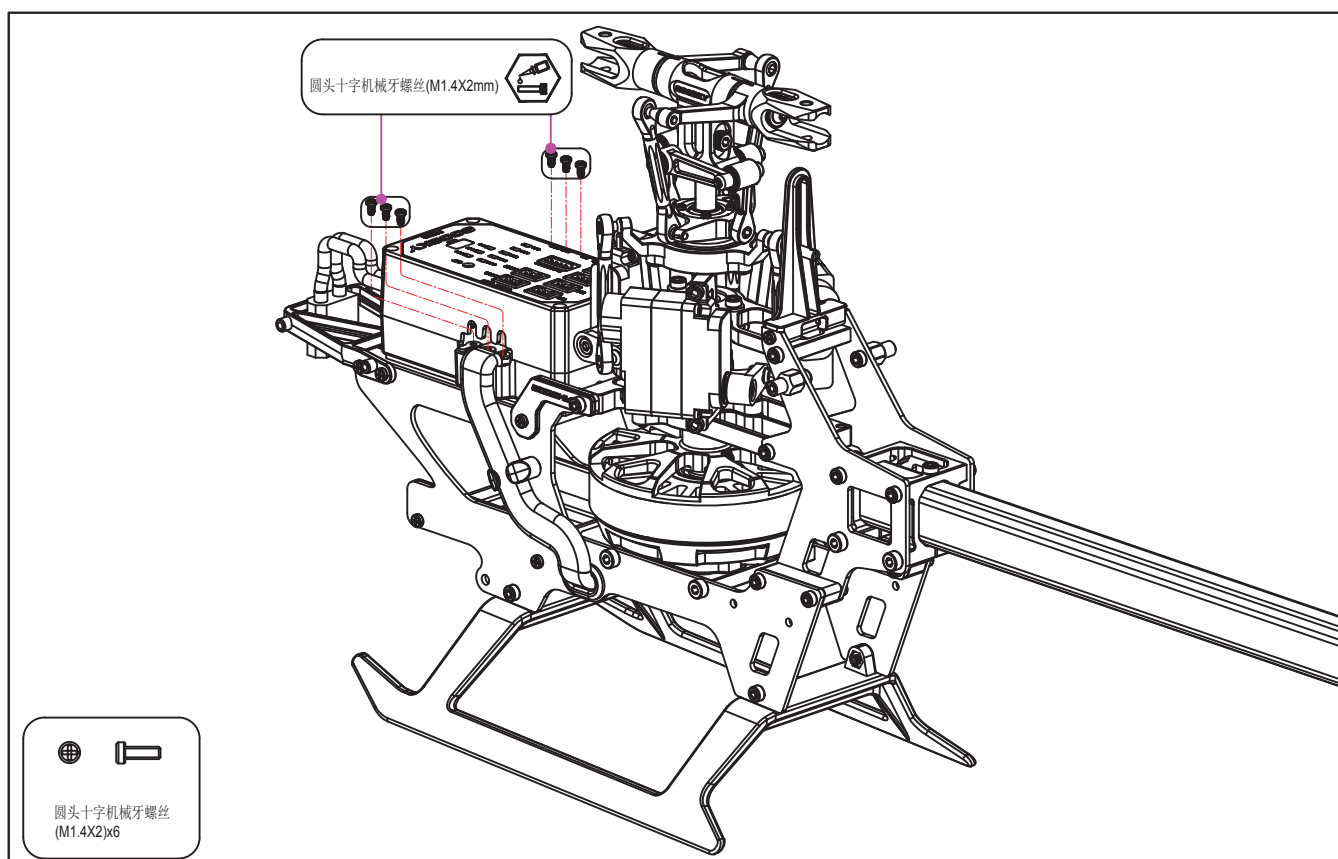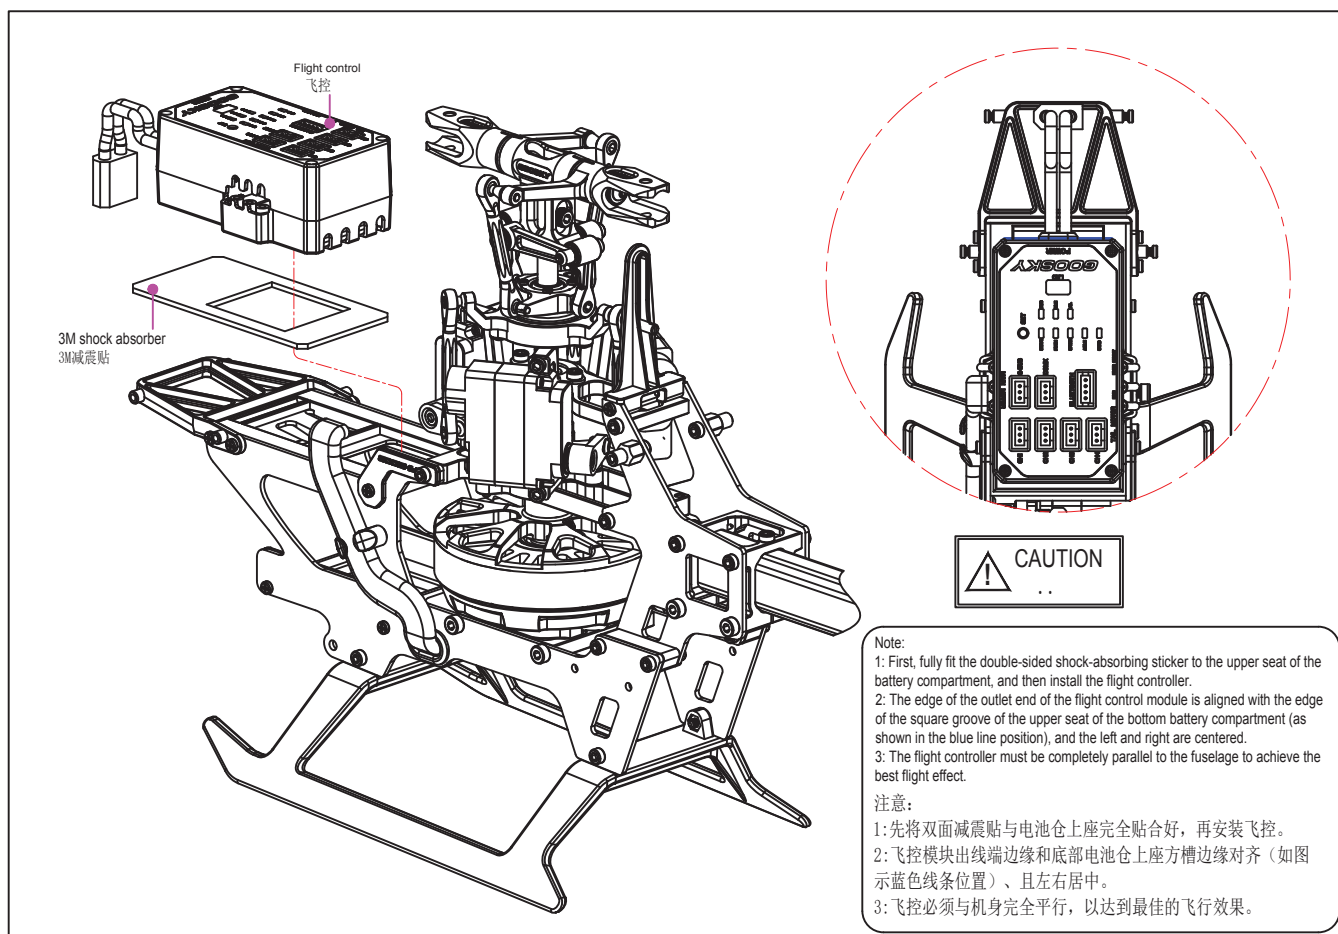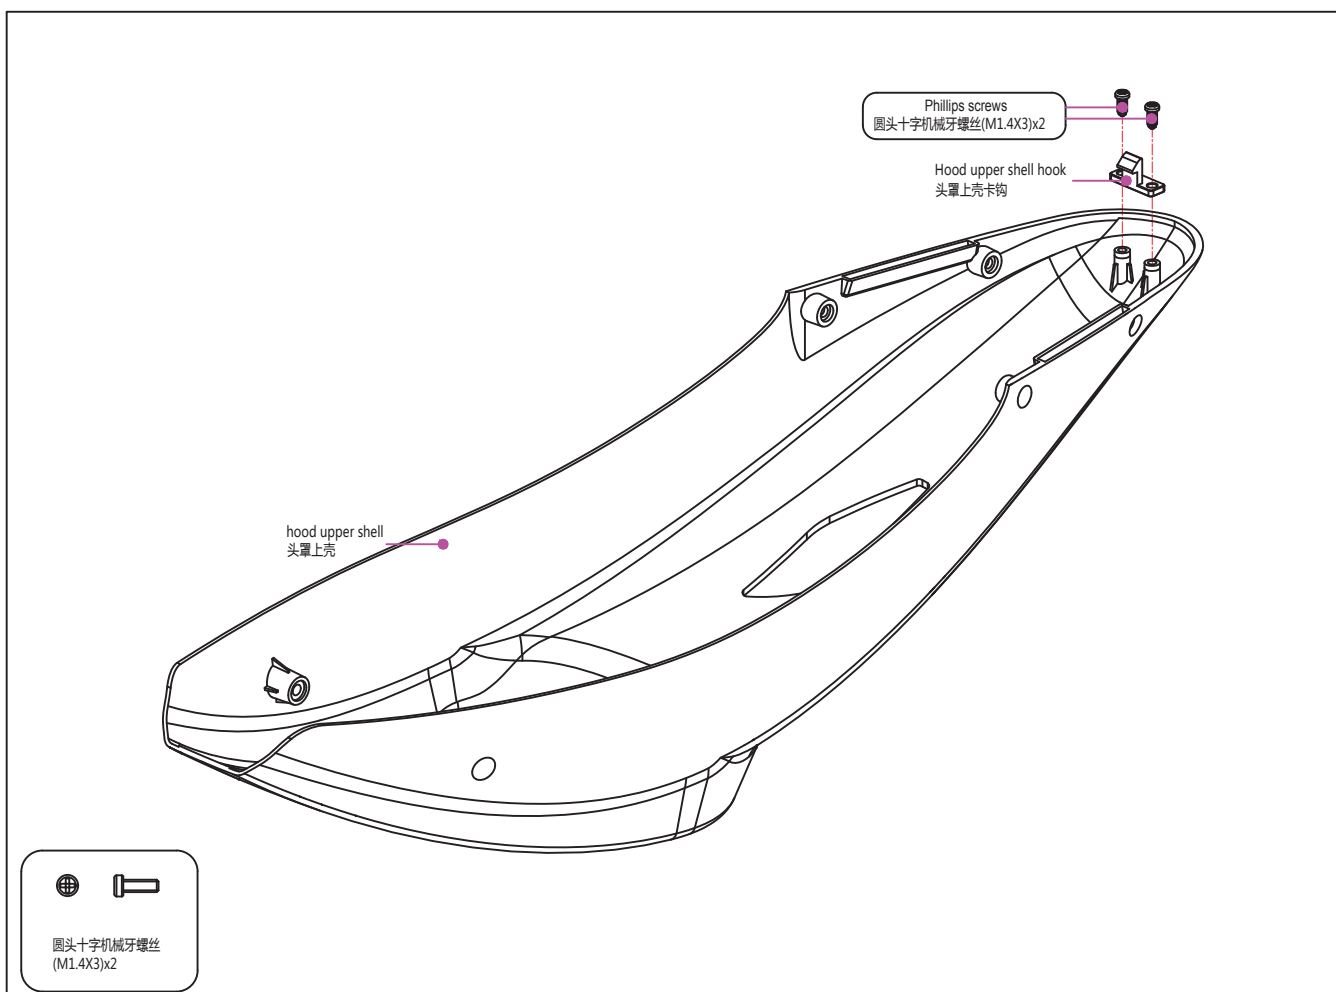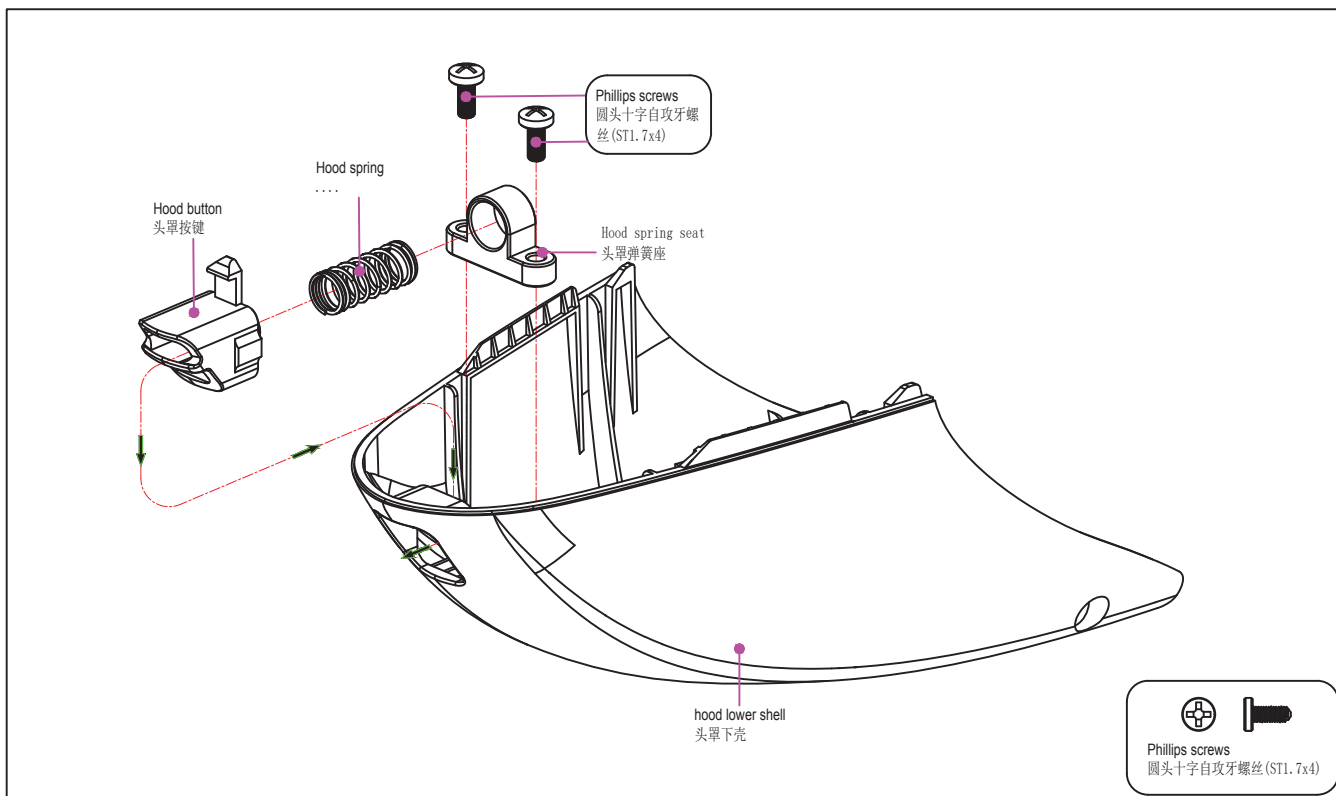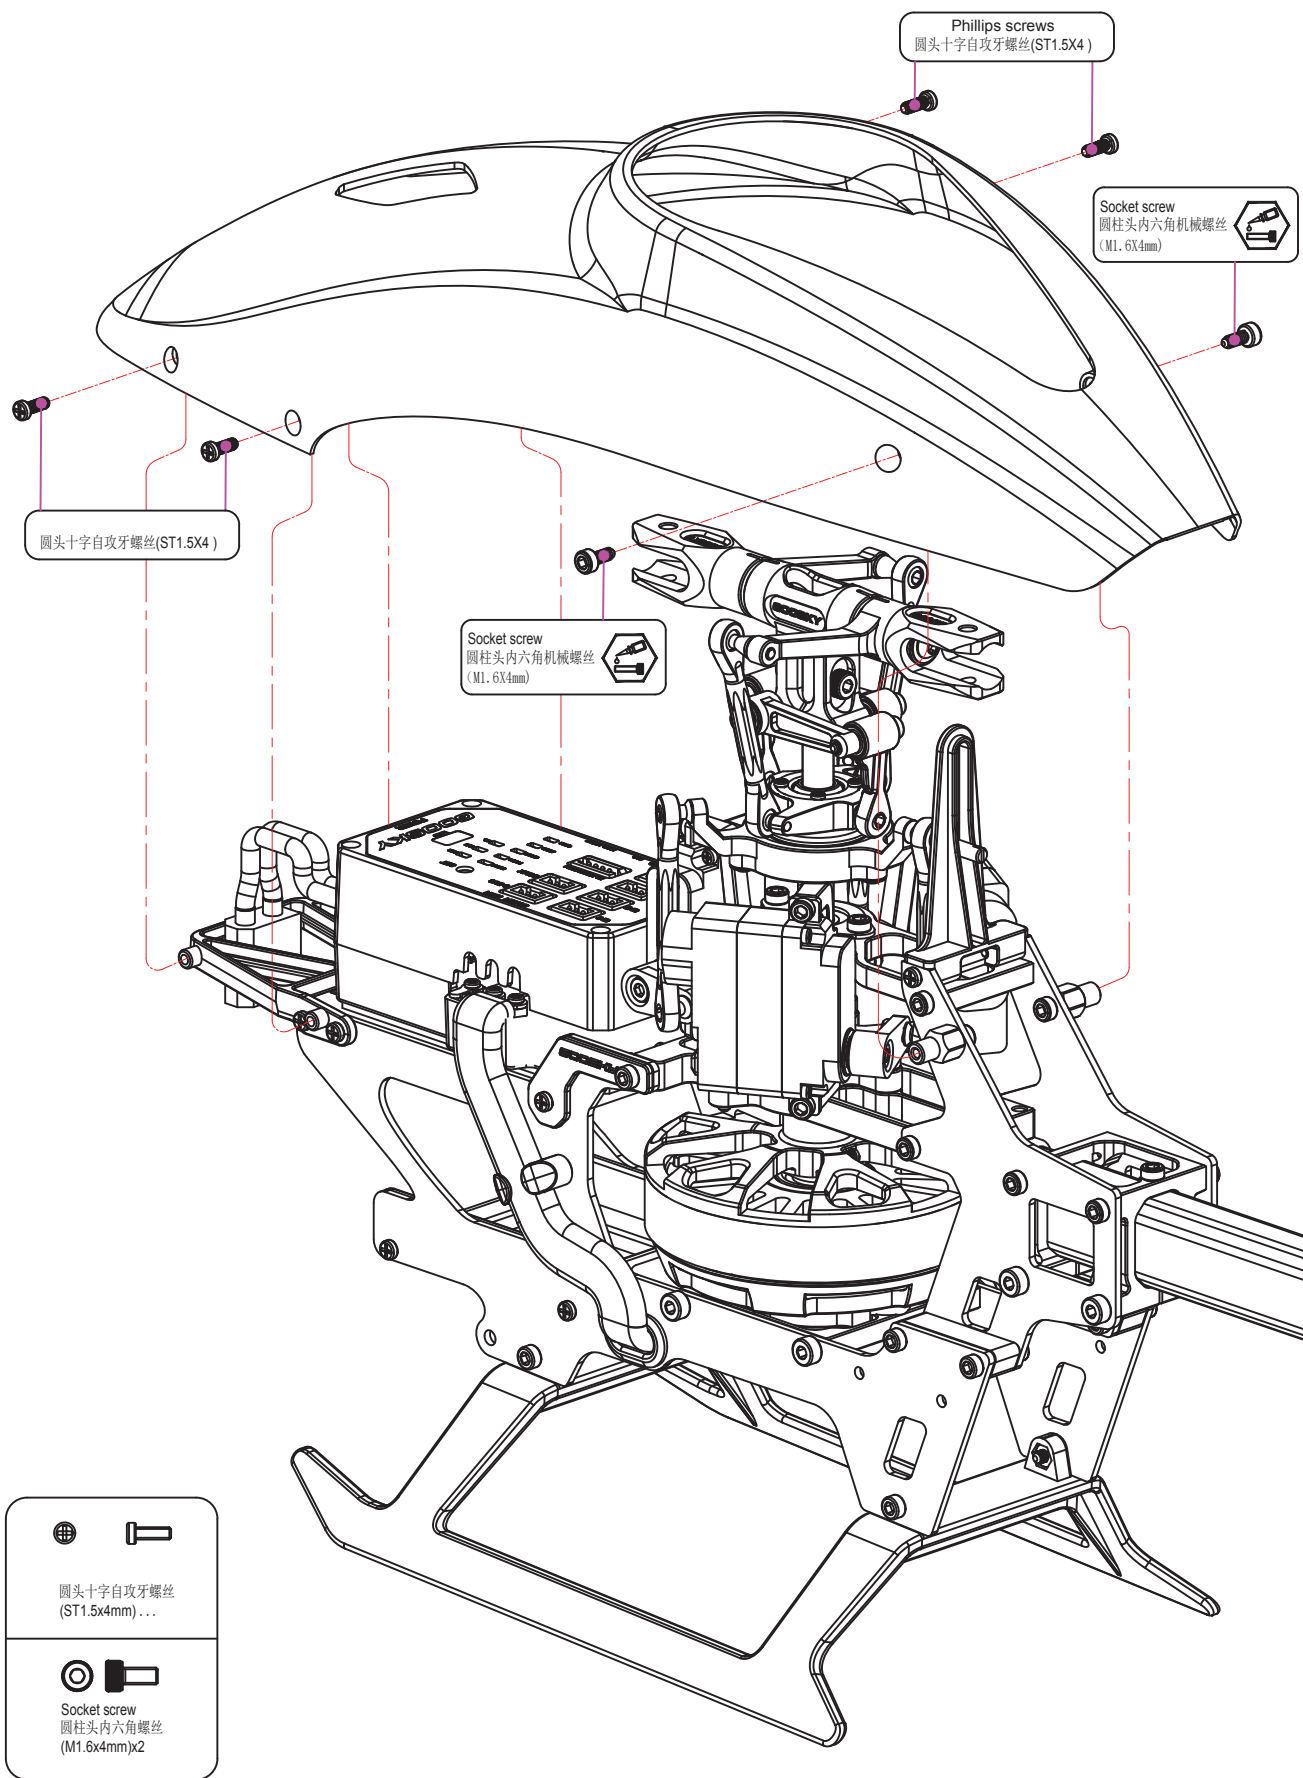
- Socket screw
圆柱头内六角机械螺丝
(M2X10mm -半牙) x1
- M2 Nut
M2尼龙防松螺母 x1

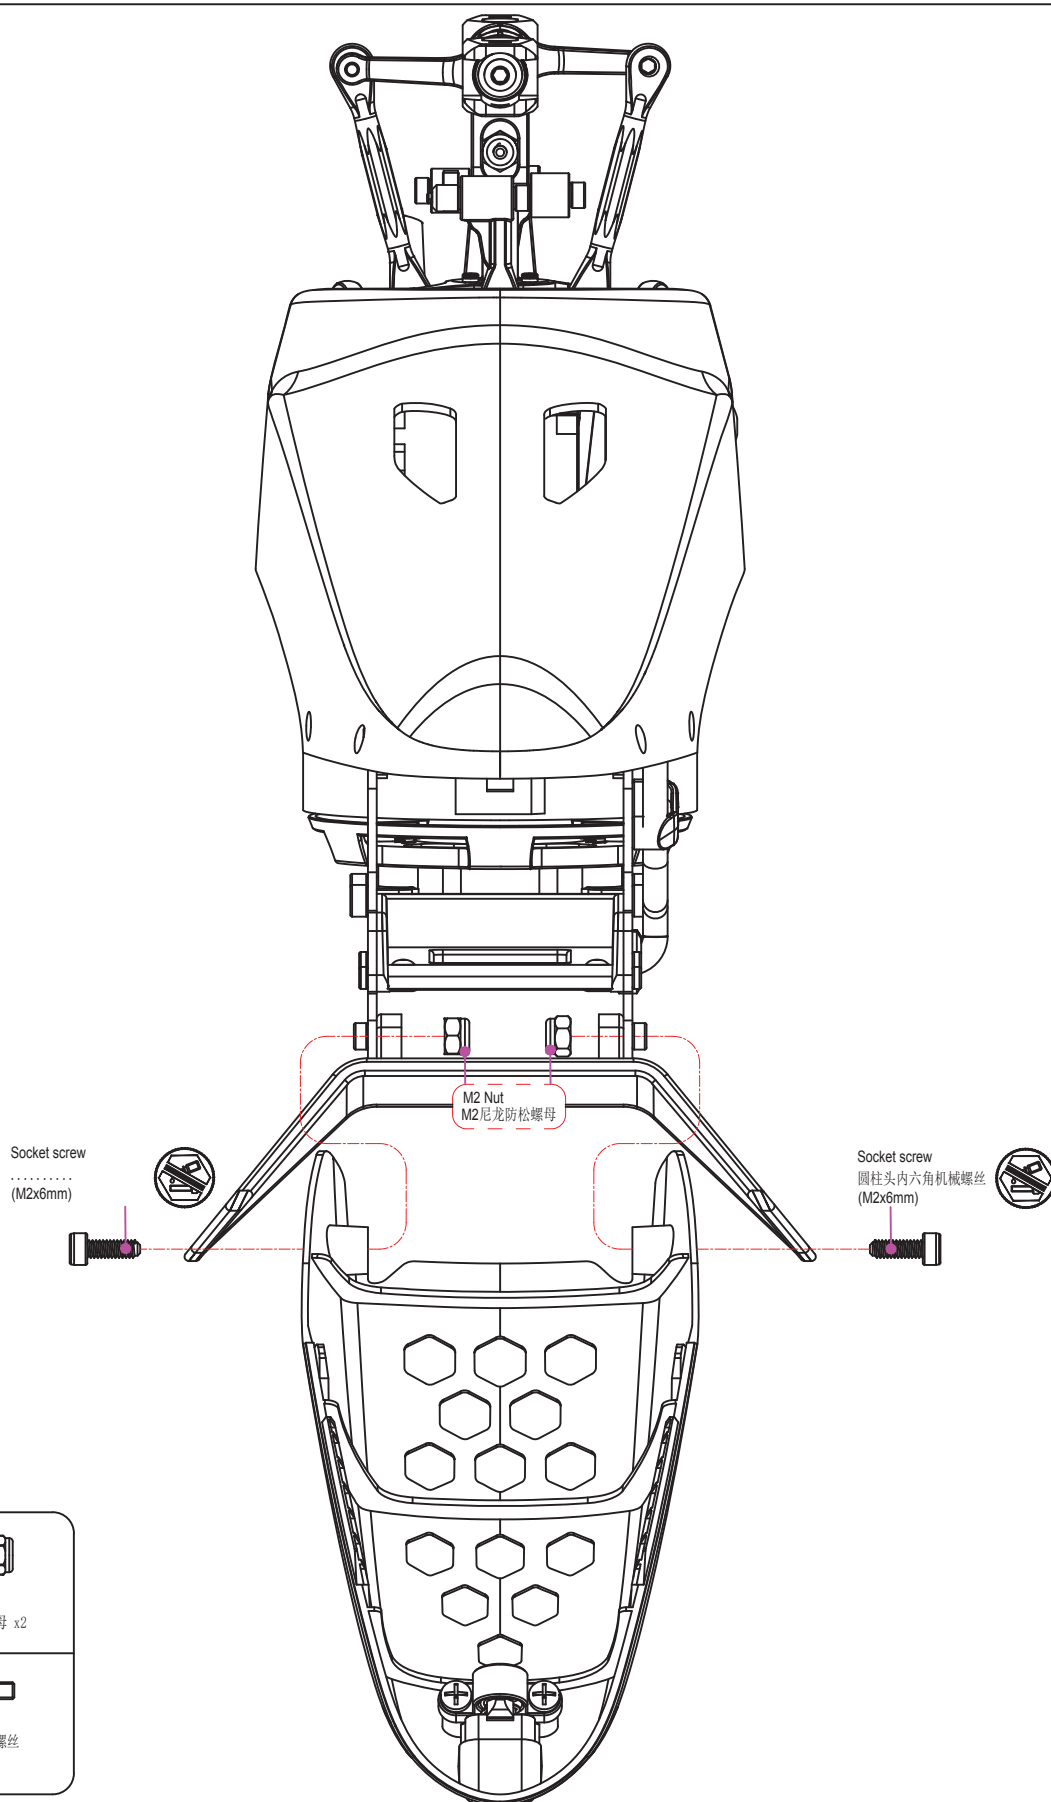


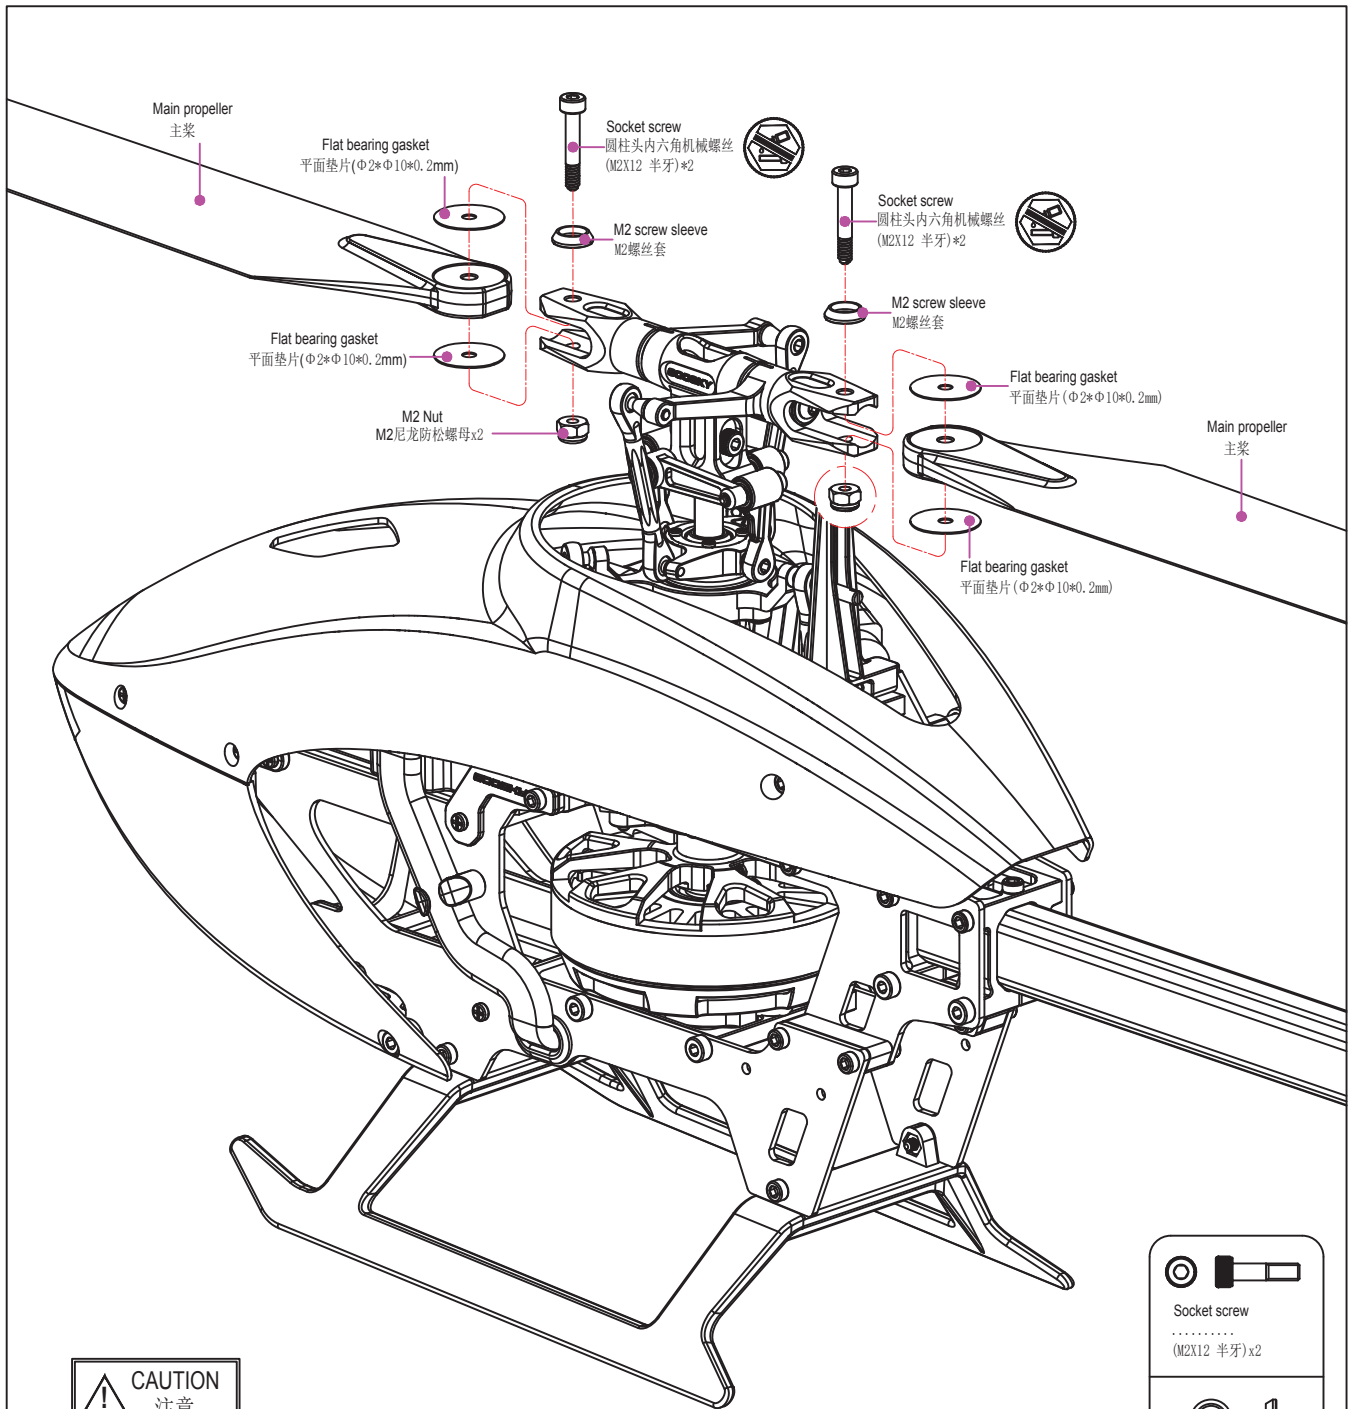












Notice:

- 1: Each group of tail rotors, the number selection, weighing and matching have been completed before leaving the factory. When there are multiple pairs of tail rotors at the same time, multiple groups cannot be mixed and matched. If the tail rotor group is used in combination, it will cause the helicopter to fly unstable and abnormally vibrate, and it may lose control in severe cases.
- 2: When assembling the tail rotor, the fixing screw must not be locked too tightly. After locking, the tail rotor needs to be folded by hand. It is better to have a slight damping feeling. The tightness of the two tail rotors should be the same. Inconsistent or too tight tightness will cause the body to vibrate and cause instability during flight, and may lead to loss of control in severe cases. Please be careful, and develop pre-flight inspections and regular maintenance.

注意:

- 1: 每组主桨组, 出厂时已完成选号、称重配对, 当同时有多对主桨时, 不可多组混搭使用。主桨组若混搭使用, 会造成直升机飞行不稳异常震动, 严重的可能会失控。
- 2: 主桨装配时固定螺丝绝对不能锁太紧, 锁紧后需用手动折动主桨, 要有轻微的阻尼感为佳, 两支主桨的紧度要一致。紧度不一致或者过紧会造成机体震动导致飞行时不稳定, 严重的可能会导致失控, 请务必小心注意, 并养成飞行前检查并定期保养。



Socket screw
.....
(M2X12 半牙) x2



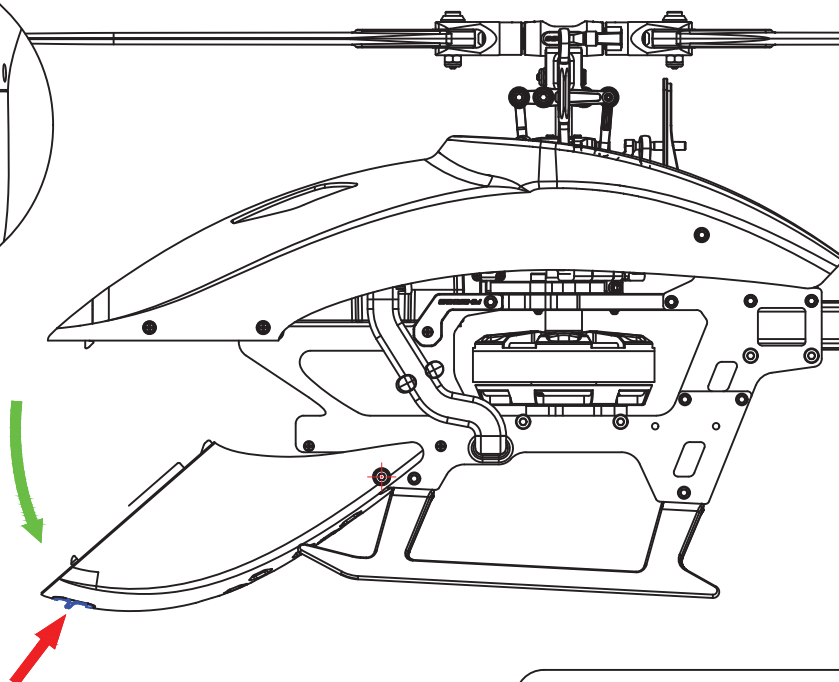
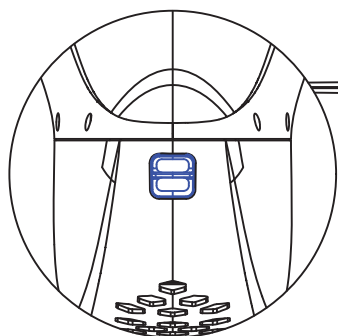
M2 screw sleeve
M2螺丝套x2




Flat bearing gasket
平面垫片
(Φ2*Φ10*0.2mm)x4




M2 Nut
M2尼龙防松螺母 x2



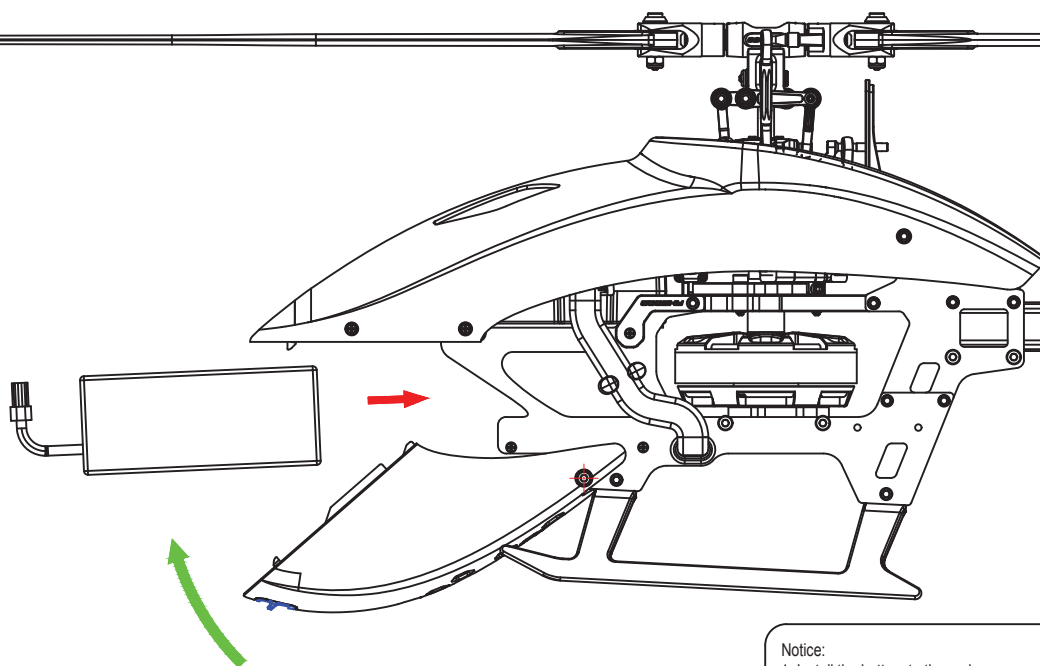Notice:
1: Press the lower case button to open the lower case;
注意:
1: 按下机壳按键, 打开下机壳;



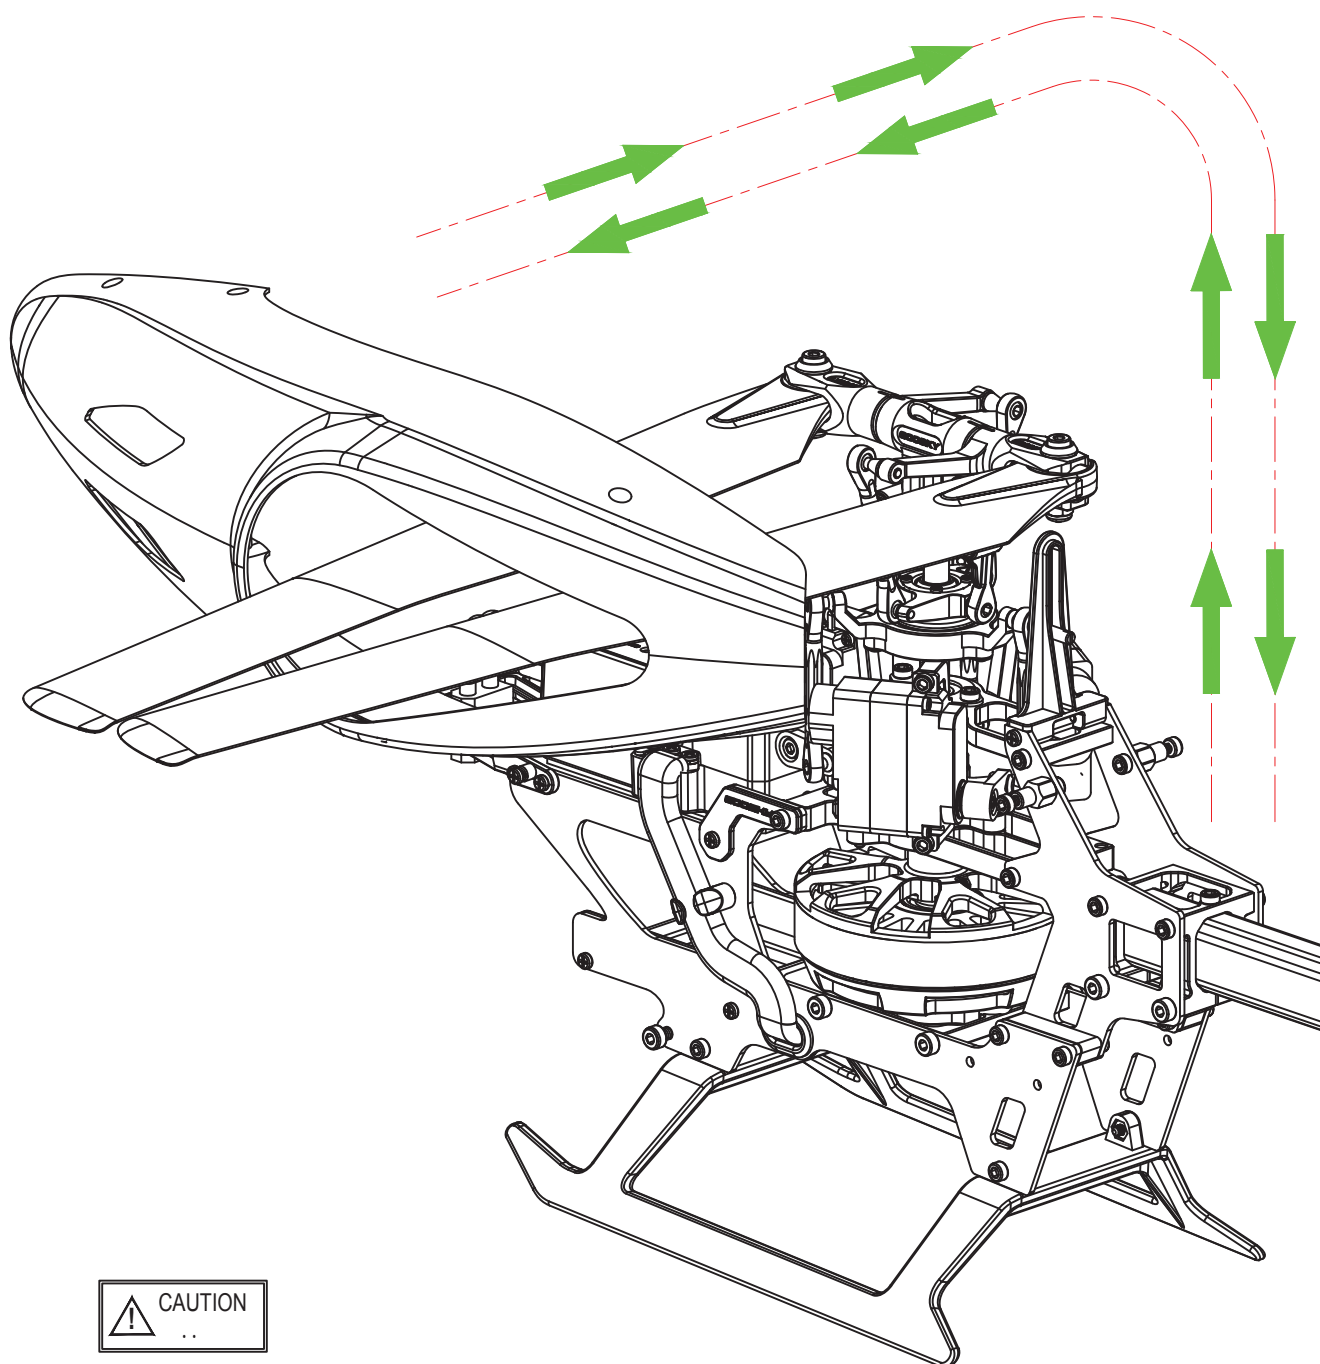Notice:
1: Install the battery to the end;
2: Press and hold the lower case button, and close the case upwards to ensure that the case lock is in place;
注意:
1: 电池装到底;
2: 按住下机壳按键, 向上合上机壳, 确保机壳锁扣装到位;






How to disassemble the upper case:

- 1: Disassemble the fixing screws on both sides.
- 2: The propeller is turned to the side of the fuselage, and the two blades are retracted.
- 3: Move the upper casing upwards and turn it 90 degrees toward the blade position, and it can be disassembled;

上机壳拆解方法:

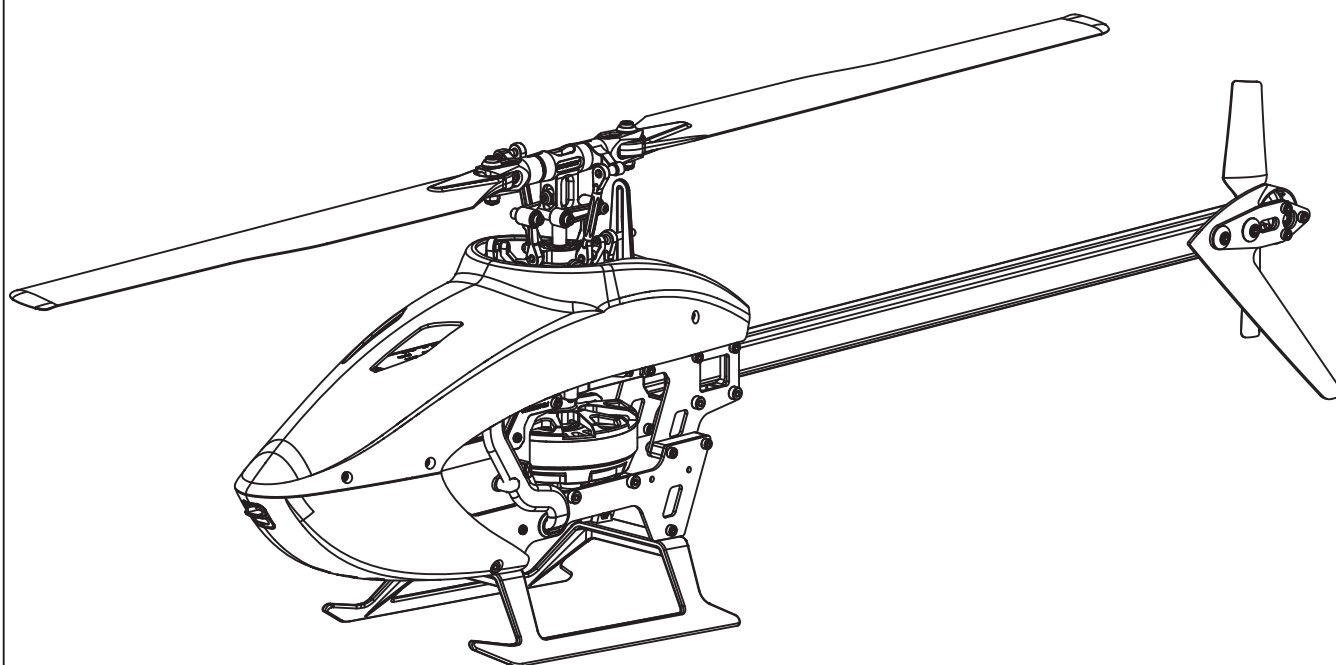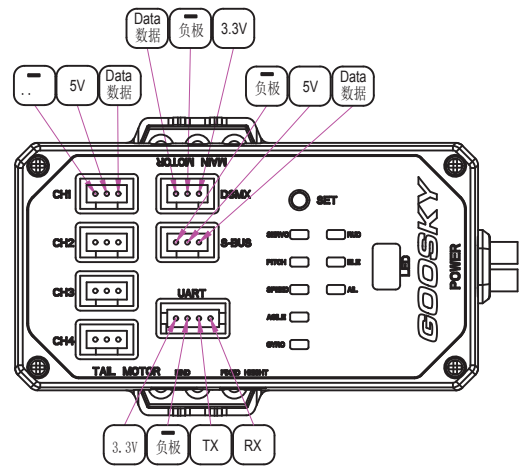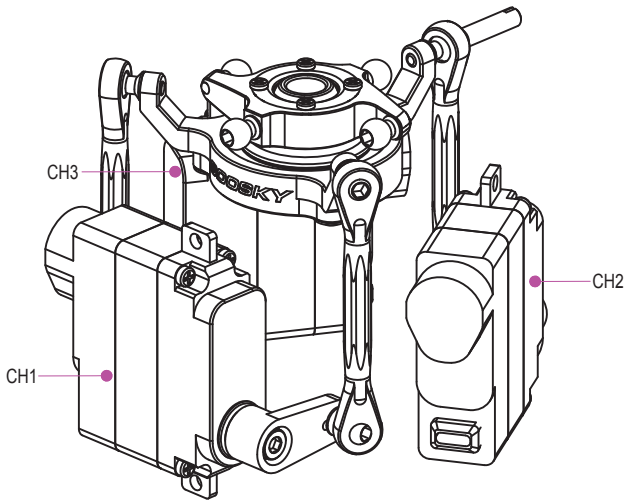- 1: 拆解两侧的固定螺丝。
- 2: 螺旋桨转到机身侧面，两支桨叶收起来。
- 3: 上机壳向上移动，朝着桨叶位置转90度，就可以拆解下来了；




















Flight Parameter Setting Introduction
飞行参数设置说明





General Flight Model 一般飞行模式			
Throttle 油门		Screw Pitch 螺距	
5	60	100	11.5°
4	60	65	5.5°
3	60	15	1.8°
2	60	-5	-0.6°
1	0	-20	-2.4°




IDLE 1 Model IDLE 1模式			
Throttle 油门		Screw Pitch 螺距	
5	65	100	11.5°
4	65	50	5.5°
3	65	5	0.6°
2	65	-50	-5.5°
1	65	-100	-11.5°





IDLE 2 Model IDLE 2模式			
Throttle 油门		Screw Pitch 螺距	
5	80	100	11.5°
4	80	50	5.5°
3	80	0	0°
2	80	-50	-5.5°
1	80	-100	-11.5°

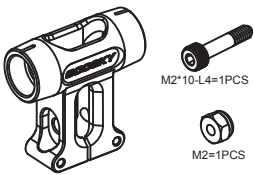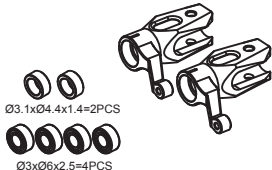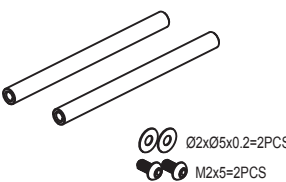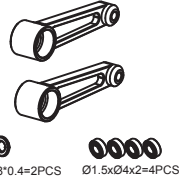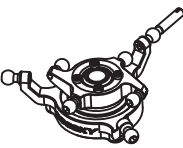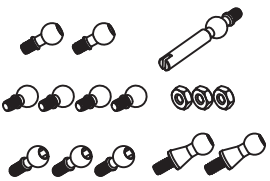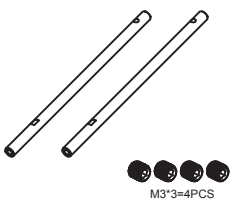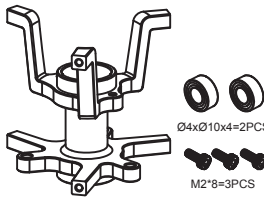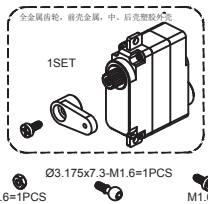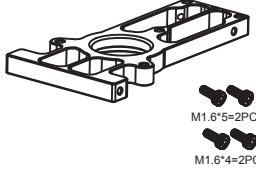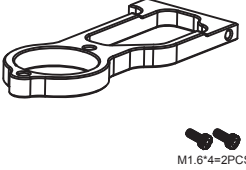
Model: SPH000001 配件编号: SPH000001 Product name: Center Hub 配件名称: 主轴中心座组 适用机型: RS2 S2 	Model: SPH000002 配件编号: SPH000002 Product name: Oring 配件名称: 横轴避震套组 单品8PCS 适用机型: RS2 S2 	Model: SPH000003 配件编号: SPH000003 Product name: Blade Grip 配件名称: 主桨夹组 压好轴承 适用机型: RS2 S2 	Model: SPH000004 配件编号: SPH000004 Product name: Spindle 配件名称: 横轴组 适用机型: RS2 S2 
Model: SPH000005 配件编号: SPH000005 Product name: Radius Arm 配件名称: FBL控制臂组 压好轴承 适用机型: RS2 S2 	Model: SPH000006 配件编号: SPH000006 Product name: Uniball Radius Arm 配件名称: 倾斜内盘球头座组 单品4PCS 适用机型: RS2 S2 	Model: SPH000007 配件编号: SPH000007 Product name: Thrust bearings 配件名称: 推力轴承组 单品2PCS 适用机型: RS2 S2 	Model: SPH000008 配件编号: SPH000008 Product name: Swashplate SET 配件名称: 十字盘总成 适用机型: RS2 S2 
Model: SPH000009 配件编号: SPH000009 Product name: Ball Joint Set 配件名称: 球头组 适用机型: RS2 S2 	Model: SPH000010 配件编号: SPH000010 Product name: Main Shaft Set 配件名称: 主轴组 适用机型: RS2 S2 	Model: SPH000011 配件编号: SPH000011 Product name: Servo Mount set 配件名称: 舵机支架组 压好轴承 适用机型: RS2 S2 	Model: SPH000012 配件编号: SPH000012 Product name: Plastic ball link 配件名称: 双孔球头座组 单品5PCS 适用机型: RS2 S2 
Model: SPH000013 配件编号: SPH000013 Product name: Standard Servo 配件名称: 十字盘舵机组 适用机型: S2 	Model: SPH000014 配件编号: SPH000014 Product name: Servo Arm 配件名称: 舵机摆臂 单品10PCS 适用机型: RS2 S2 	Model: SPH000015 配件编号: SPH000015 Product name: Motherboard 配件名称: 主板 适用机型: RS2 S2 	Model: SPH000016 配件编号: SPH000016 Product name: second floor 配件名称: 二楼板 适用机型: RS2 S2 
Model: SPH000017 配件编号: SPH000017 Product name: Limit carbon plate 配件名称: 轴承限位碳板 适用机型: RS2 S2 	Model: SPH000018 配件编号: SPH000018 Product name: Body reinforcement 配件名称: 机身加强片 适用机型: RS2 S2 	Model: SPH000019 配件编号: SPH000019 Product name: Crodut Phase Panel Set 配件名称: 倾斜相位座 适用机型: RS2 S2 	Model: SPH000020 配件编号: SPH000020 Product name: Ball Bearing Group(681X) 配件名称: 滚珠轴承组(681X) 单品8PCS 适用机型: RS2 S2 

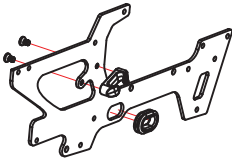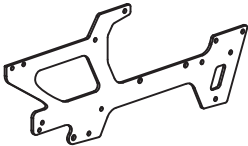Model: SPH000021 配件编号: SPH000021 Product name: left panel 配件名称: 左侧板组 适用机型: RS2 S2 	Model: SPH000022 配件编号: SPH000022 Product name: right side panel 配件名称: 右侧板组 适用机型: RS2 S2 	Model: SPH000023 配件编号: SPH000023 Product name: upper side panel 配件名称: 上侧板 适用机型: RS2 S2 	Model: SPH000024 配件编号: SPH000024 Product name: Frame Widening Mount Set 配件名称: 机身加宽固定座组 适用机型: RS2 S2 
装配线卡、过线套 适用机型: RS2 S2		单品 2PCS 适用机型: RS2 S2	单品 2PCS 适用机型: RS2 S2 M1.6*3=4PCS

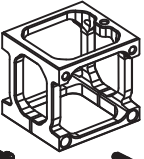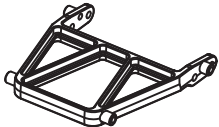
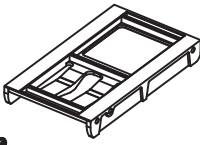
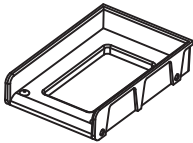
Model: SPH000025 配件编号: SPH000025 Product name: Tail Boom Mount Set 配件名称: 尾管前固定座组 适用机型: RS2 S2 	Model: SPH000026 配件编号: SPH000026 Product name: Bracket 配件名称: 机壳支架 适用机型: RS2 S2 	Model: SPH000027 配件编号: SPH000027 Product name: Battery compartment upper bracket 配件名称: 电池仓上座 适用机型: RS2 S2 	Model: SPH000028 配件编号: SPH000028 Product name: Battery compartment lower bracket 配件名称: 电池仓下座 适用机型: RS2 S2 
M1.6*4=5PCS M2*4=2PCS M2*12=2PCS		ST1.5*6=6PCS	ST1.5*4=4PCS

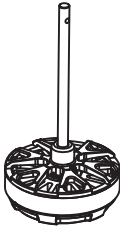
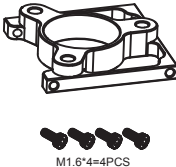
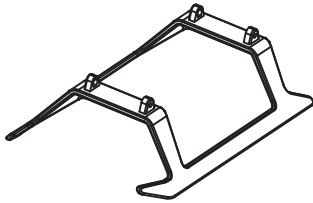
Model: SPH000029 配件编号: SPH000029 Product name: Fixed column 配件名称: 机壳固定柱 适用机型: RS2 S2 	Model: SPH000030 配件编号: SPH000030 Product name: Main Motor Set 配件名称: 主电机组 适用机型: S2 	Model: SPH000031 配件编号: SPH000031 Product name: Main Motor Mount Set 配件名称: 主电机固定底座 适用机型: RS2 S2 	Model: SPH000032 配件编号: SPH000032 Product name: Landing Gear Set (Red) 配件名称: 脚架组-红 适用机型: S2 
M1.6*4=4PCS	M2.5*5=3PCS	M1.6*4=4PCS	

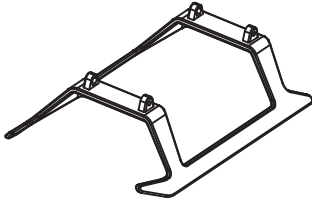
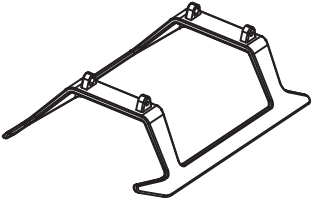
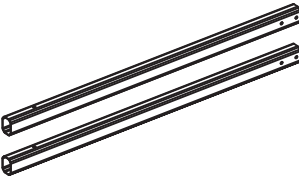
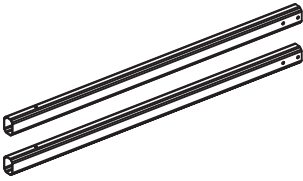
Model: SPH000033 配件编号: SPH000033 Product name: Landing Gear Set (green) 配件名称: 脚架组-绿 适用机型: S2 	Model: SPH000034 配件编号: SPH000034 Product name: Landing Gear Set (blue) 配件名称: 脚架组-蓝 适用机型: S2 	Model: SPH000035 配件编号: SPH000035 Product name: Tailpipe - red 配件名称: 双直尾管-红 适用机型: S2 	Model: SPH000036 配件编号: SPH000036 Product name: Tailpipe - green 配件名称: 双直尾管-绿 适用机型: S2 
---	--	---	--


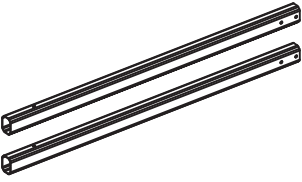
Model: SPH000037 配件编号: SPH000037 Product name: Tailpipe - blue 配件名称: 双直尾管-蓝 适用机型: S2 	Model: SPH000038 配件编号: SPH000038 Product name: Tail Boom Inside Mount Set 配件名称: 尾管内部固定座 适用机型: RS2 S2 	Model: SPH000039 配件编号: SPH000039 Product name: Tail motor reinforced plate group 配件名称: 尾侧板加强片 适用机型: S2 	Model: SPH000040 配件编号: SPH000040 Product name: Tail Fin-Red 配件名称: 垂直翼-红 适用机型: S2 
			M1.6*5=2PCS

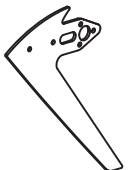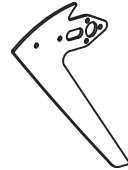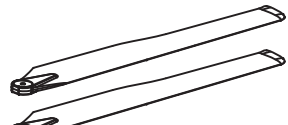
Spare parts picture-1 配件-1





Model: SPH000041 配件编号: SPH000041 Product name: Tail Fin-Green 配件名称: 垂直翼-绿 适用机型: S2  M1.6*5=2PCS	Model: SPH000042 配件编号: SPH000042 Product name: Tail Fin-blue 配件名称: 垂直翼-蓝 适用机型: S2  M1.6*5=2PCS	Model: SPH000043 配件编号: SPH000043 Product name: Main Blades 配件名称: 主桨组 适用机型: RS2 S2 	Model: SPH000044 配件编号: SPH000044 Product name: Main Rotor Holder Screw group 配件名称: 主桨固定配件组 适用机型: RS2 S2  Φ2*Φ10*0.2x4 M2X12 半牙x2 M2螺丝套x2 M2尼龙防松螺母x2
--	---	---	---

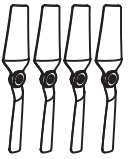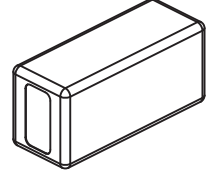
Model: SPH000045 配件编号: SPH000045 Product name: Tail motor 配件名称: 尾电机 适用机型: S2  M1.6*4=3PCS	Model: SPH000046 配件编号: SPH000046 Product name: Tail Blade Set 配件名称: 尾桨组 适用机型: S2  M1.6螺丝套=2PCS M1.6*4=2PCS	Model: SPH000047 配件编号: SPH000047 Product name: Lithium battery pack 配件名称: 锂电池组 适用机型: RS2 S2 	Model: SPH000048 配件编号: SPH000048 Product name: Bluetooth module 配件名称: 蓝牙模块 适用机型: RS2 S2 
--	--	---	--

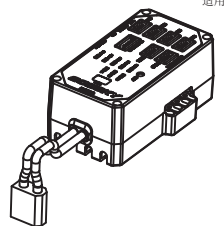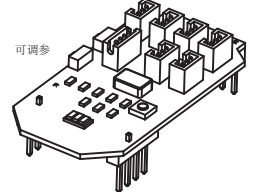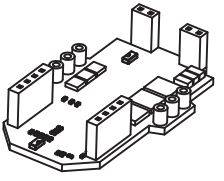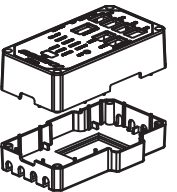
Model: SPH000049 配件编号: SPH000049 Product name: Flight control 配件名称: 飞控 适用机型: S2 	Model: SPH000050 配件编号: SPH000050 Product name: Flight control board 配件名称: 飞控板 适用机型: S2  可调参	Model: SPH000051 配件编号: SPH000051 Product name: ESC 配件名称: 电调板 适用机型: S2 	Model: SPH000052 配件编号: SPH000052 Product name: Flight Control Housing Set 配件名称: 飞控外壳 适用机型: S2 
--	--	---	--

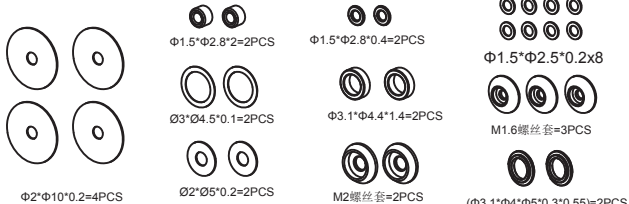
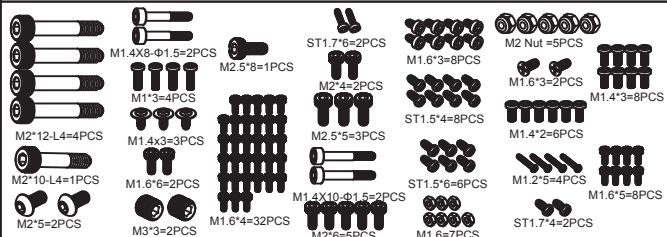
Model: SPH000053 配件编号: SPH000053 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Gasket set 配件名称: 垫片组件 适用机型: S2  Φ2*Φ10*0.2=4PCS Φ1.5*Φ2.8*2=2PCS Φ1.5*Φ2.8*0.4=2PCS Φ3*10*4.5*0.1=2PCS Φ3*10*4.4*1.4=2PCS Φ2*Φ5*0.2=2PCS M2螺丝套=2PCS Φ1.5*Φ2.5*0.2x8 M1.6螺丝套=3PCS (Φ3.1*Φ4*Φ5*0.3*0.55)=2PCS	Model: SPH000054 配件编号: SPH000054 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: screw set 配件名称: 螺丝组 适用机型: S2  M1.4X8-Φ1.5=2PCS M2.5*8=1PCS ST1.7*6=2PCS M1.6*3=8PCS M2 Nut=5PCS M1.6*3=2PCS M1.4*3=8PCS M1.5*4=8PCS M1.4*2=6PCS M1.5*6=6PCS M1.2*5=4PCS M1.6*5=8PCS M2*5=2PCS M3*3=2PCS M1.6*4=32PCS M2*6=5PCS M1.6*7PCS M2*4=2PCS M2.5*5=3PCS M1.4X10-Φ1.5=2PCS M1.5*6=6PCS ST1.7*4=2PCS
---	--

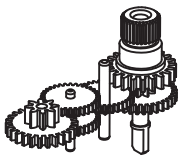
Model: SPH000055 配件编号: SPH000055 Product name: 3M shock absorber 配件名称: 3M减震贴 适用机型: RS2 S2 	Model: SPH000056 配件编号: SPH000056 Product name: Bluetooth module cable 配件名称: 蓝牙模块连接线 适用机型: RS2 S2 	Model: SPH000057 配件编号: SPH000057 Product name: Main Blade Support Frame Set 配件名称: 主翼支架组 适用机型: RS2 S2 	Model: SPH000058 配件编号: SPH000058 Product name: Servo Gear Set 配件名称: 十字舵机齿轮组 适用机型: RS2 S2 
--	---	--	---

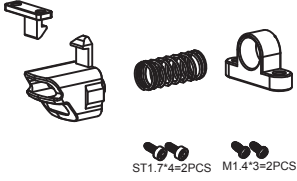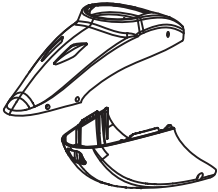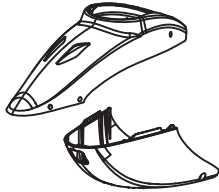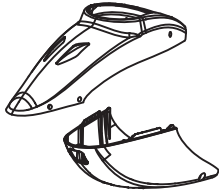Model: SPH000059 配件编号: SPH000059 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Accessories group 配件名称: 机壳配件组 适用机型: RS2 S2  ST1.7*4=2PCS M1.4*3=2PCS	Model: SPH000060 配件编号: SPH000060 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Head cover--yellow red 配件名称: 机头罩--黄红色 适用机型: S2 	Model: SPH000061 配件编号: SPH000061 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Head cover--yellow green 配件名称: 机头罩--黄绿色 适用机型: S2 	Model: SPH000062 配件编号: SPH000062 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Head cover--green blue 配件名称: 机头罩--绿蓝色 适用机型: S2 
--	--	---	--


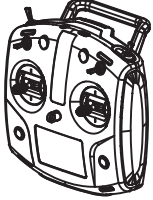
Model: SPH000063 配件编号: SPH000063 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Ball Bearing Group(MR63ZZ) 配件名称: 滚珠轴承组(MR63ZZ) 适用机型: RS2 S2  Ø3*Ø6*2.5=4PCS	Model: SPH000064 配件编号: SPH000064 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Ball Bearing Group(6701ZZ) 配件名称: 滚珠轴承组(6701ZZ) 适用机型: RS2 S2  Φ12*Φ18*4 =2PCS	Model: SPH000065 配件编号: SPH000065 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Ball Bearing Group(MR104ZZ) 配件名称: 滚珠轴承组(MR104ZZ) 适用机型: RS2 S2  Φ4*Φ10*4 =2PCS	Model: SPH000066 配件编号: SPH000066 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Remote control-MODE1 配件名称: 遥控器-右手油门 适用机型: RS2 S2 
---	--	--	--

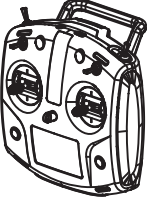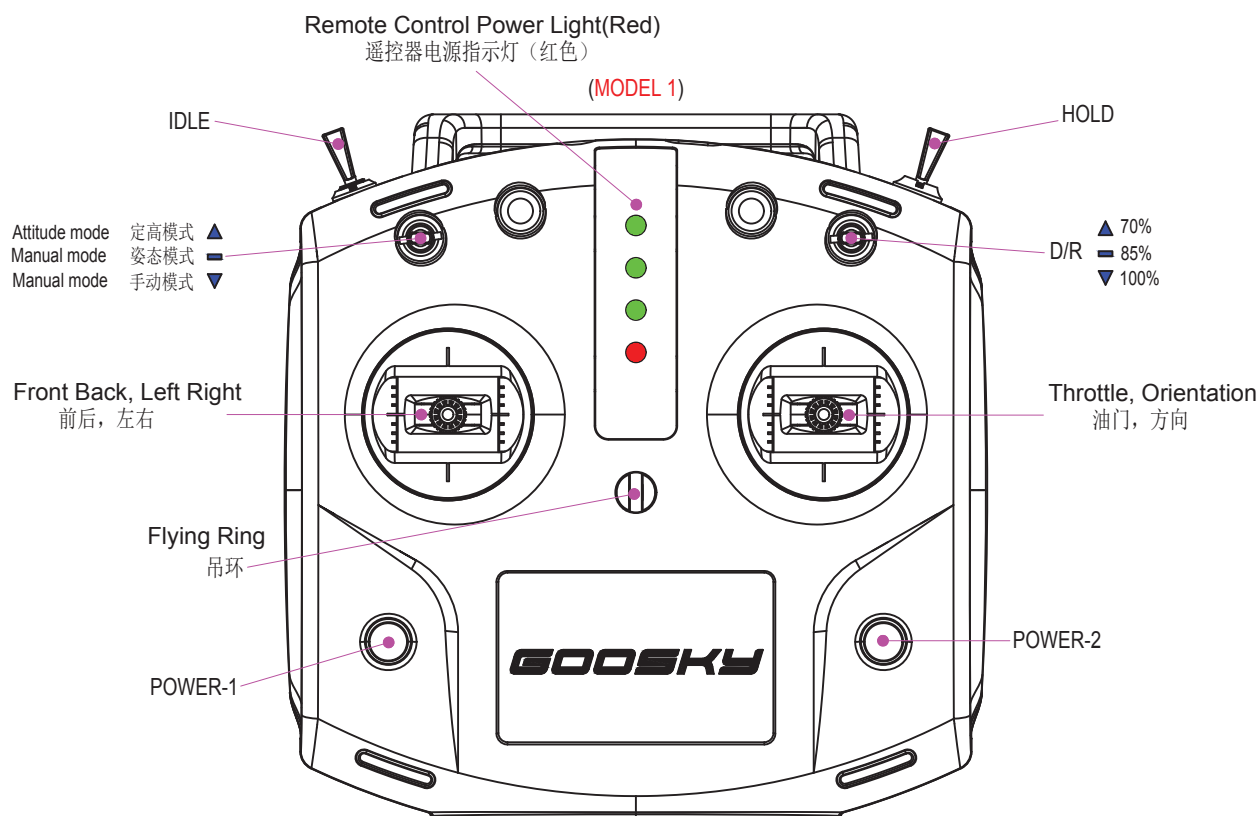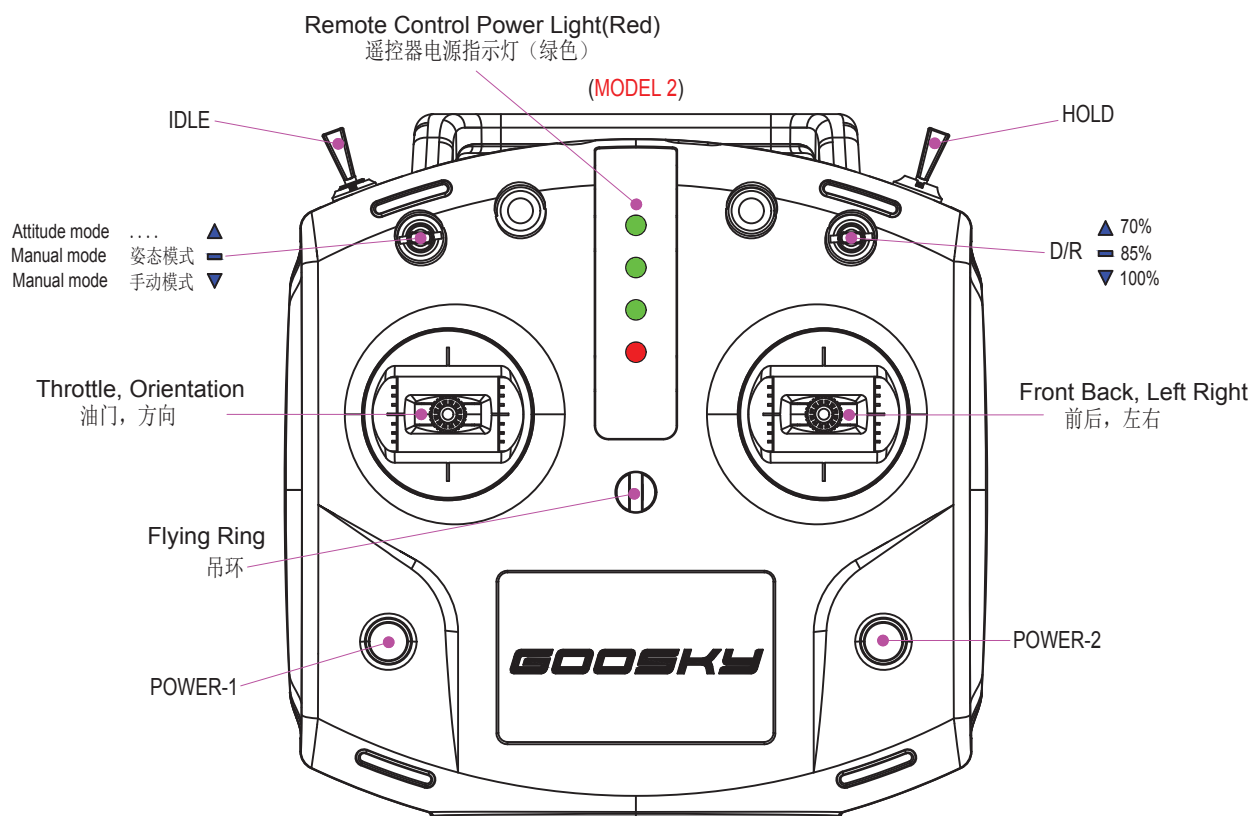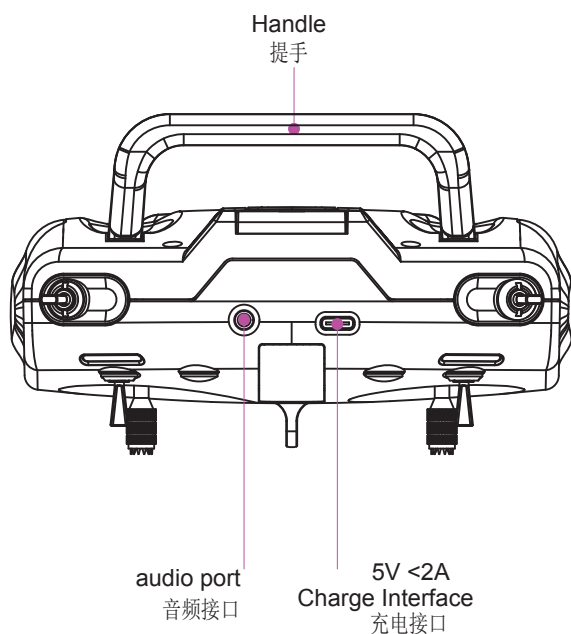Model: SPH000067 配件编号: SPH000067 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Remote control-MODE2 配件名称: 遥控器-左手油门 适用机型: RS2 S2 
--





- (Product Model)产品型号: E8
- (Dimensions)外形尺寸长: L153*W93*H154
- (Radio Frequency)无线频率: 2.404GHz~2.4475 GHz
- (Transmit Power)发射功率: < 20 dBm
- (Weight)重量约: 335g
- (Modulation Mode)调制方式: 2FSK
- (Spread Spectrum Mode)扩频方式: FHSS
- (Working Voltage)工作电压: 3.7V
- (Remote Distance)遥控距离: 800m
- (Charge Interface)充电接口: TYPE-C
- (Low Voltage Alarm)低电压报警: 3.35V
- (Battery Type)电池类型: Lithium Polyer Battery
- (Battery Capacity)电池容规格: 2800mAh 3.7V
- (Coach Interface)音频接口: PPM输出

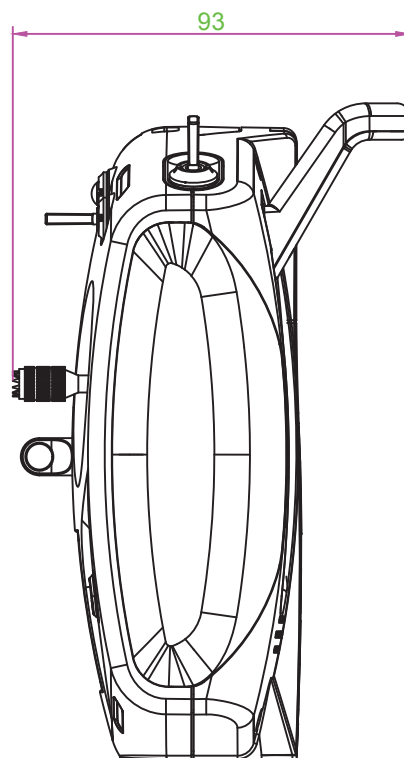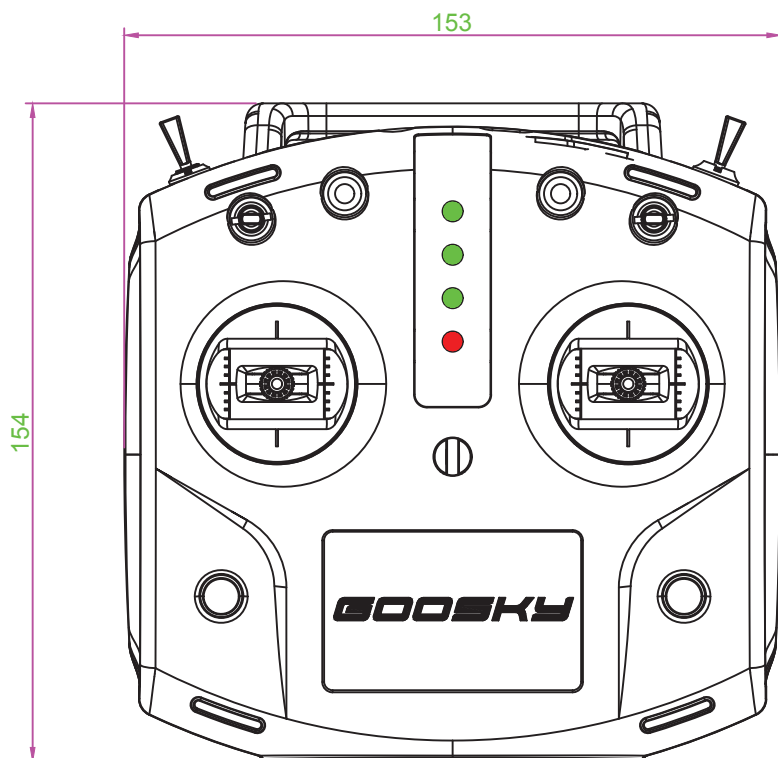

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GOOSKY

Zhongshan Goosky Technology Innovation Co., Ltd.
www.goo-sky.com

© **2022**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction