

SVAKOM


EXPLORE YOUR LIMITS

Erica Plus User Manual

ENGLISH • FRANÇAIS • 日本語 • ESPAÑOL • DEUTSCH • РУССКИЙ • ITALIANO • 한국어 • 中文


Congratulations on your SVAKOM purchase!

Before use, read this manual and comply with the safety information.

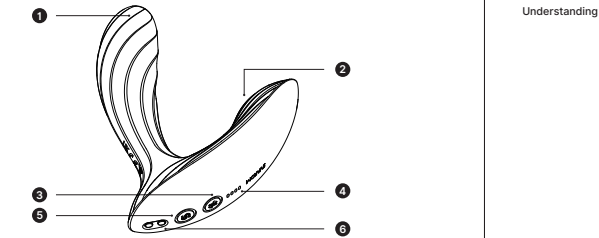


- 1 Internal Arm (Thrusting + Vibration) 2 External Arm (Vibration Only) 3 Thrusting
- 4 Battery Indicator Lights 5 Power On/Off 6 Magnetic Charging Port

How to Operate Erica Plus

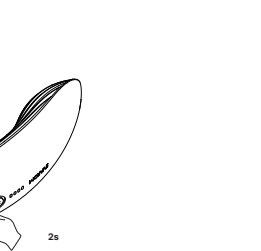

Power On/Off: • Press and hold the 'S' button for 2 seconds to turn the device on or off.

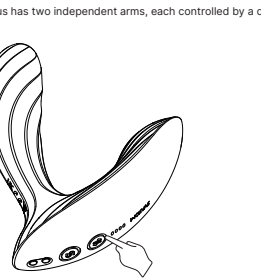


Internal Arm (Thrusting + Vibration): • Designed for internal stimulation • Provides thrusting motion combined with vibration • Controlled using the Thrusting button




External Arm (Vibration Only): • Designed for clitoral or perineal stimulation • Delivers vibration only • Extended length helps improve fit for different body sizes • Controlled using the 'S' button

Controls & Modes

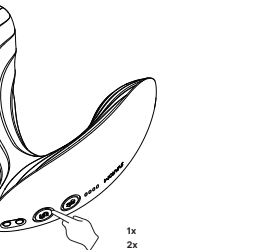


External Arm (Vibration Only) – 'S' Button: • Single press: Adjust vibration intensity (5 levels) • Double press: Change vibration mode (5 vibration modes)

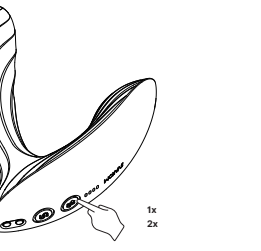

Internal Arm (Thrusting + Vibration) – Thrusting Button: • Single press: Adjust thrusting intensity (5 levels) • Double press: Change thrusting + vibration combination mode (5 modes)

Both arms can be used independently or together.


Travel Lock

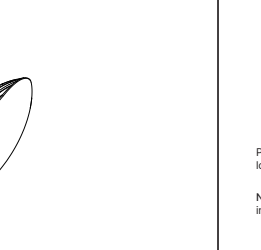

To prevent accidental activation: • Press and hold both buttons simultaneously for 8 seconds • The indicator light will flash 3 times and the motor will vibrate once • The device is now locked
To unlock: • Press and hold both buttons again for 8 seconds or • Connect the magnetic charging cable

Memory Mode

Erica Plus features a built-in memory function. When the device is turned off, it remembers the last mode used. When powered on again, stimulation resumes from the previous setting.

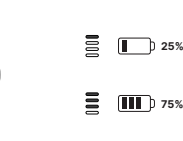

Charging: • When charging, the LED indicator will flash. The light stays on when fully charged.

App Control





Pair this toy with the SVAKOM App on a Bluetooth-enabled smart device to customize settings and play long-distance with invited guests

Note: The internal arm of Erica Plus uses a single motor, meaning thrusting and vibration are combined into five preset modes and cannot be adjusted separately.



To download the apps and guides, visit the link or scan the QR code

Cleaning and Storage

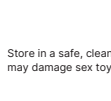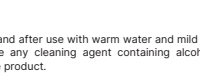

Store in a safe, clean, dry, cool, dark place. Keep away from substances that may damage sex toy materials

Specifications

Product Name: Erica Plus • Product Code: SA649A • Size: 110×100×38mm • Material: Liquid Silicone • Weight: 122g • Battery Type: Lithium Polymer Battery • Battery Capacity: 700mAh • Input: 5V ~ 0.25A • Charging Time: 2 hours • Battery Life: 1 hour • Modes: 5 • Intensity Levels: 5 • Waterproof Level: Waterproof • Sound Level: ≤60dB • Ideal Environment: -10~50°C • Operating Frequency: 2400.0-2483.5MHz • Transmitting Power: +10dBm (Maximum) • FCC ID: 2A74F-SA649A

WARNING! Do not use massage oil or hand cream as lubricant as this can lead to irritation and/or infection. Do not use silicone-based lubricant, oils, or lotions as this will damage the product. The use of non-water-based lubricant will cause deterioration of the product. Deterioration can provide breeding grounds for harmful bacteria which may lead to irritation/infection when used on the body.

WARNING! Please read the following safety information carefully before using the product.

Safety Information: This product is sold for novelty use only. This product can be used by adults only. It is not to be used by persons (including children) with limited physical, sensory, or mental abilities. Any person unable to operate this product by themselves should not use it. Any person who is under a physician's care or has a condition requiring the use of any medical device should consult their physician before use. Do not use on swollen, inflamed, blistered or broken skin. Do not use on head, face, throat, chest, stomach or bony body parts. This product is not a medical device. No medical claims are warranted or implied by the use of this product. If you experience discomfort during use, stop and seek medical attention.

Warning against misuse: For adult use only. For external use only. Use for the intended purpose only. Remove jewelry before use. Keep out of reach of children and pets. Avoid sharing this product with others due to the risk of sexually transmitted illness. Do not use if you detect any damage, cracks or degradation. Do not attempt to modify or dismantle this product. If this product functions abnormally, stop use.

Warning against improper charging: Only charge this product where the local mains voltage level is appropriate. Do not use, clean, or immerse this product in water or other fluids during charging. For optimal battery life, recharge regularly. Unplug the charging cable from the power supply immediately after charging.

Warranty and guarantee: This product comes with a 2-year warranty and 10-year quality guarantee (excluding purchases from unauthorized online marketplace sellers). To register or make a claim, visit www.svakom.com/warranty-claim

Disclaimer and Limitation of Liability: To the fullest extent permissible by applicable law, this product and its accompanying documentation, including this User Manual, are provided "as is" and "as available" without any representations or warranties of any kind, express, implied, or statutory, including, but not limited to, warranties of merchantability, fitness for a particular purpose, title, non-infringement, or accuracy. SVAKOM does not warrant that the product will be error-free or that defects will be corrected, nor does it warrant that the information contained within this manual is complete, accurate, or current. The user assumes all risks and responsibilities for the selection, use, and performance of this product and manual. In no event shall SVAKOM, its affiliates, licensors, or suppliers be liable for any indirect, incidental, special, exemplary, punitive, or consequential damages (including, without limitation, damages for loss of profits, data, use, goodwill, or other intangible losses) arising out of or relating to the product, this manual, or the use or inability to use the product or manual, even if SVAKOM has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion of certain warranties or the limitation or exclusion of liability for certain types of damages, therefore, some of the above disclaimers and limitations may not apply to you; however, in such event, they shall be construed to apply to the maximum extent enforceable under applicable law. Your use of this product and manual signifies your acknowledgment and acceptance of these terms.

Compliance with FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Meeting European Standards NOTICE

Hereby, SVAKOM United States Inc. declares that the radio equipment type vibrator "Erica Plus" is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.svakom.com/pages/certificates>
The frequency band or bands in which the radio equipment vibrator "Erica Plus" is operated at 2400.0-2483.5MHz and the maximum transmitting power emitted in the frequency band or bands is ≤ +10dBm.



Visit the online manual at www.svakom.com/manual

