



• TTL: Wireless Multiple Flash Shooting in TTL Auto Flash Output Mode

Set the transmitter groups (A, B, C, D) to TTL mode and adjust the exposure compensation. Receivers will fire automatically based on their assigned group settings.

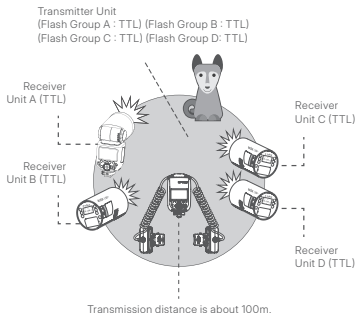


• M: Wireless Multiple Flash Shooting in M Manual Flash Output Mode

Set the transmitter groups (A, B, C, D) to M mode and adjust the power output. Receivers will fire automatically based on their assigned group settings.

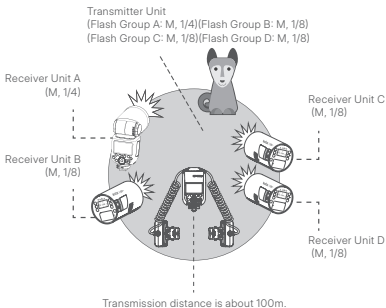

• Wireless Multiple Flash Shooting in Different Flash Modes

Set the transmitter groups (A, B, C, D) to different flash modes and adjust the exposure compensation or power output. Receivers will fire automatically based on their assigned group settings.

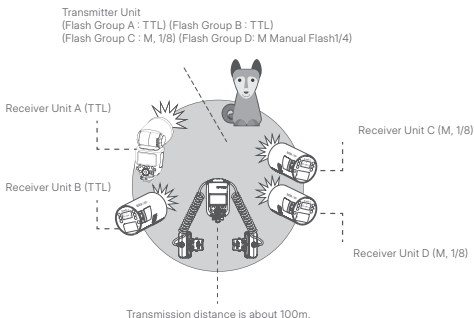

Note: 1. When the camera is set to fully automatic mode or program image control area mode, the operations in this chapter cannot be achieved. The wireless flash shooting can be achieved when the camera is set to P/Tv/Av /M/B (creative shooting).
2. Do not set obstacles between the transmitter and the receivers to avoid interference.
3. Please conduct flash test and shooting test before wireless multiple flash shooting.

The Reason & Solution of Not Triggering in Godox 2.4G Wireless

1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)

→ To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.

2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not and the flash is not under the state of over-heat protection or other abnormal situations.

→ Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode (a pre-flash is needed in TTL mode).

3. Whether the distance between the the transmitter and receiver are too close to each other. (<0.5m).

→ Set the wireless distance (DIST) to 0.3–10m.

4. Whether the battery level is low.

→ Please replace the battery or charge it in time.

5. The flash's trigger's firmware is an older version

→ Please upgrade the firmware of the flash referring.

6. The camera's firmware is an older version

→ Please upgrade the firmware of the camera referring to the instruction manual for specific firmware upgrades.

Over-Temperature Protection

To avoid overheating and deteriorating the flash head, do not fire more than 40 continuous flashes in fast succession at 1/1 full power, or fire more than 30 continuous flashes in fast succession at 1/1 full power in HSS mode.

If you fire multiple continuous flashes mentioned below in short intervals, the inner overtemperature protection function may be activated and  is shown on the display. If this occurs, allow a rest time of about 10 minutes.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1, 1/2+0.7	40
1/2+0.3	50
1/2	60
1/4+0.3, 1/4+0.7	100
1/4	120
1/8 (+0.3, +0.7)	200
1/16 (+0.3, +0.7)	300
1/32 (+0.3, +0.7)	500
1/64 (+0.3, +0.7)	1000
1/128 (+0.3, +0.7), 1/256 (+0.3, +0.7)	2000

Number of flashes that will activate over-temperature protection in HSS mode:

Power Output Level	Number of Flashes
1/1	30
1/2 (+0.3, +0.7)	30
1/4 (+0.3, +0.7)	34
1/8 (+0.3, +0.7)	40
1/16 (+0.3, +0.7)	50
1/32 (+0.3, +0.7)	

Other Protections

Prompts on the panel	Meaning
E0	A failure occurs on the temperature sensor inside the device, need to be repaired.
E1	A failure occurs on the recycling system so that the flash cannot fire. Please restart the flash unit. If the problem still exists, please send this product to a maintenance center.
E2	The system gets excessive heat. Please allow a rest time of 10 minutes.
E3	The voltage on two outlets of the flash tube is too high. Please send this product to a maintenance center.

Troubleshooting

Please refer to the guide table below when problems occur.

Problems	Possible Reasons	Solutions
Flash does not fire	Not correctly installed	Please mount the hot shoe of the flash securely on the camera.
	The electronic contacts of the flash and camera are dirty	Clean the electronic contacts of the flash and camera.
Power down automatically	The power will automatically shut down over 90s of idle use when using as a transmitter unit and the STBY is on.	Press any button to wake up
	The power will automatically shut down over 60min or 30min of idle use when using as a receiver unit and the RX STBY is set as 60mins or 30mins.	Press any button to wake up
Can not boot up	Battery runs out or damages	Please charge or replace the battery.
Flash does not fire as a receiver unit	The receiver's flash group is incorrect. For example, group B of the transmitter is off but the receiver is set as group B.	Set the flash group of receiver correctly.
	The channels of transmitter and receiver are inconsistent.	Please set the channels of transmitter and receiver to the same, e.g., set the channel of transmitter to 01, and receiver's to 01 as well.
	The receiver is out of the transmission distance of the transmitter.	Please set the receiver within the transmission distance (0-100m) of the transmitter.
	The transmitter and receiver are too close for transmission.	Please set the triggering distance in MENU-RF DIST as 0.3m to 10m.

Compatible Camera Models

MF-T76 C (For Canon):

A type cameras: 80D, 90D, 7D, 6D, 70D, 750D, 760D, 5DMarkIV, EOS 1DX, 6DMarkII, 77D, 800D, 5DMarkIII, 5DMarkII, 60D, 7D Mark II, 200DII, 1500D, 3000D

B type cameras: 600D, 50D, 30D, 500D, Digital X

C type cameras: M5, M50, R, RP, R7

MF-T76 S (For Sony):

α77II, α99, a77, DSC-RX10, α6000, α7R, α350, α7RII(4.0), α7RIII, α7M3, α9, α7RIV, α7R5, α7MIV, ZV-E10, A9III, A7C, A7CII, a6400, α6500

MF-T76 N (For Nikon):

D800, D750, D700, D610, D500, D200, D300S, D5, D4, D810, D780, D5300, D5200, D5100, D5000, D3300, D3100, D60, Z6, Z7II, Z8, ZFC

Note: 1. This table only lists the tested camera models. For the compatibility of other models, a self-test is recommended.

2. A type cameras doesn't support 2.4G wireless second curtain sync, B type cameras doesn't support 2.4G wireless second curtain sync and Gr mode, C type cameras doesn't support 2.4G wireless second curtain sync and AF focus assist beam.

3. Rights to modify this table are retained.

Firmware Upgrade

Visit the official Godox website at <https://www.godox.com.cn/firmware-G3/> to download the Godox G3 software and the latest firmware file.

Connect: With the device powered off, connect it to a computer using the included USB-C cable.

Upgrade: Open the Godox G3 software, select the firmware file, and execute the upgrade.

Technical Data

Product Name	Macro Twin Flash
Model	MF-T76 C / MF-T76 S / MF-T76 N
Flash Power (1/1 step)	76Ws
Guide No. (1/1 step)	Approx. GN22.4 (ISO100, in meters)
Flash Power Range	1/1-1/256 (with $\pm 1/3$ increment)
FEB	± 3 step, with $\pm 1/3$ increment
Flash Duration (t0.1)	1/700s~1/19300s
Number of Flashes (1/1 step)	Approx. 550
Recycle Time (1/1 step)	Approx. 1.2s
Flash Mode	TTL Flash, M (Manual) Flash
Flash Head Angle	0°~150°
Modeling Lamp Power	1W×2
Modeling Lamp CCT	4800K±300K
Wireless Transmission Distance	0-100m
CH	32 groups: 01-32
ID	99: 01-99
HSS	Yes
Second Curtain Sync	Yes
First Curtain Sync	Yes
Lithium Battery	7.2V/2980mAh
Working Environment Temperature	-10~50°C
Flash Head Dimension (excluding connecting cable)	2.97"×3.21"×1.18"
Controller Dimension (excluding connecting cable)	5.35"×2.78"×2.44"
Net Weight (excluding battery)	≈466g

Maintenance

Impact Protection: The device may malfunction if subjected to strong shocks or vibration.

Keep Dry: This product is not waterproof. Do not operate with wet hands or use in the rain, bathrooms, or other humid environments.

Temperature Precautions: Avoid sudden temperature changes, such as moving from a cold environment to a warm one, which may cause internal condensation. To prevent this, place the device in a protective bag beforehand to allow it to adjust to the temperature change.

Magnetic Interference: Keep away from strong electromagnetic field sources, such as radio transmitters, to prevent electromagnetic interference from affecting device performance.

Warning

Operating frequency: 2.412999634GHz-2.464499756GHz

Declaration of Conformity

GODOX Photo Equipment Co., Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférences, et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui pourraient provoquer un fonctionnement indésirable de l'appareil.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Remarque: Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des

interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est invité à essayer de corriger les interférences par une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences (RF). L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损

坏；④产品或部件原有识别信息被修改变更或除去；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

部件	保修期(月)	保修服务类型
内部电路板	12	客户送修
其他（例如闪光灯、外壳、保护罩、锁紧装置、各类线材或其他包装）	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period(month)	Warranty Service Type
Internal circuit board	12	Customer sends the roduct to designated site
Others (Flash tube, lamp body, lamp cover, locking device, cables, package, etc.)	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)