



IKE 4

user manual



Visit <http://ikegps.com/ike-4/> for
software updates • manuals • tutorials • videos

contents

introduction X

what's in the box X

IKE 4 system overview X

system setup X

IKE 4 tripod X

IKE Field – how it works

IKE Office X

IKE Field X


Thank you for purchasing the IKE 4 Your IKE 4 is a location-based measuring solution that will greatly increase your productivity when undertaking utility asset management surveys and related measurements. The IKE 4 integrates a digital camera, compass, laser range finder, mobile computer, and precision GPS.

With your IKE solution you can quickly:

- Collect geo-located pole photos
- Measure wire span heights, even across busy roads
- Determine wire clearances from vegetation or buildings
- Make accurate attachment height measurements on captured photos

This document will guide you through:


- Setting up your IKE system
- Making in-field measurement tasks
- Transferring data from the IKE Field to IKE Office
- Measuring attachment heights from a photo
- Outputting data in industry standard file formats

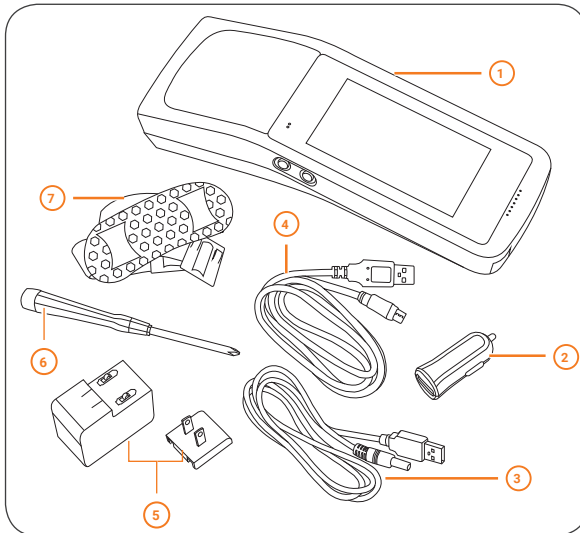

- 1 IKE device
- 2 USB car charger
- 3 power cable
- 4 micro USB cable
- 5 AC charger with plug adapter
- 6 screwdriver
- 7 shoulder strap for hard case
- 8 hard case (not shown)

A SIM card and SD card are not included.

IMPORTANT: The IKE 4 device is designed to be used with the IKE Tripod. It should not be used while being held by hand or placed close to the user's body.

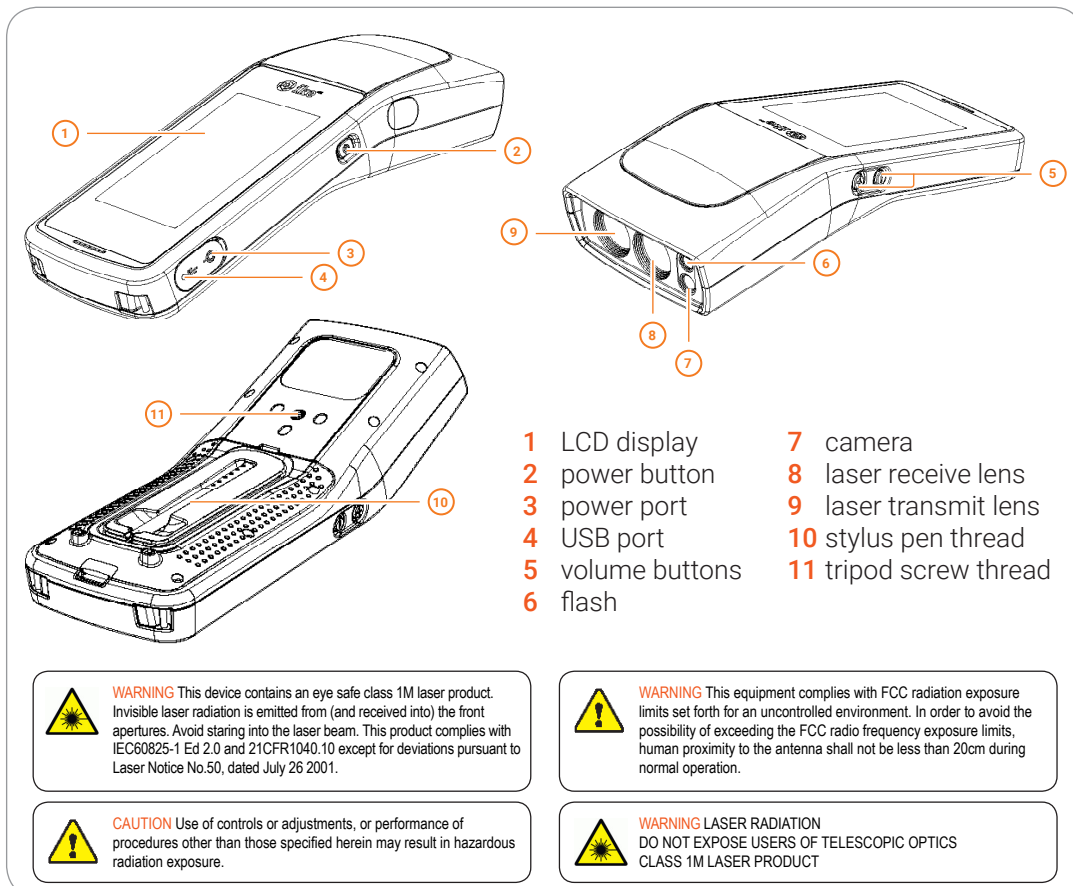

WARNING This device contains an eye safe class 1M laser product. Invisible laser radiation is emitted from (and received into) the front apertures. Avoid staring into the laser beam. This product complies with IEC60825-1 Ed 2.0 and 21CFR1040.10 except for deviations pursuant to Laser Notice No.50, dated July 26 2001.




CAUTION Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.



WARNING This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.



WARNING LASER RADIATION
DO NOT EXPOSE USERS OF TELESCOPIC OPTICS
CLASS 1M LASER PRODUCT

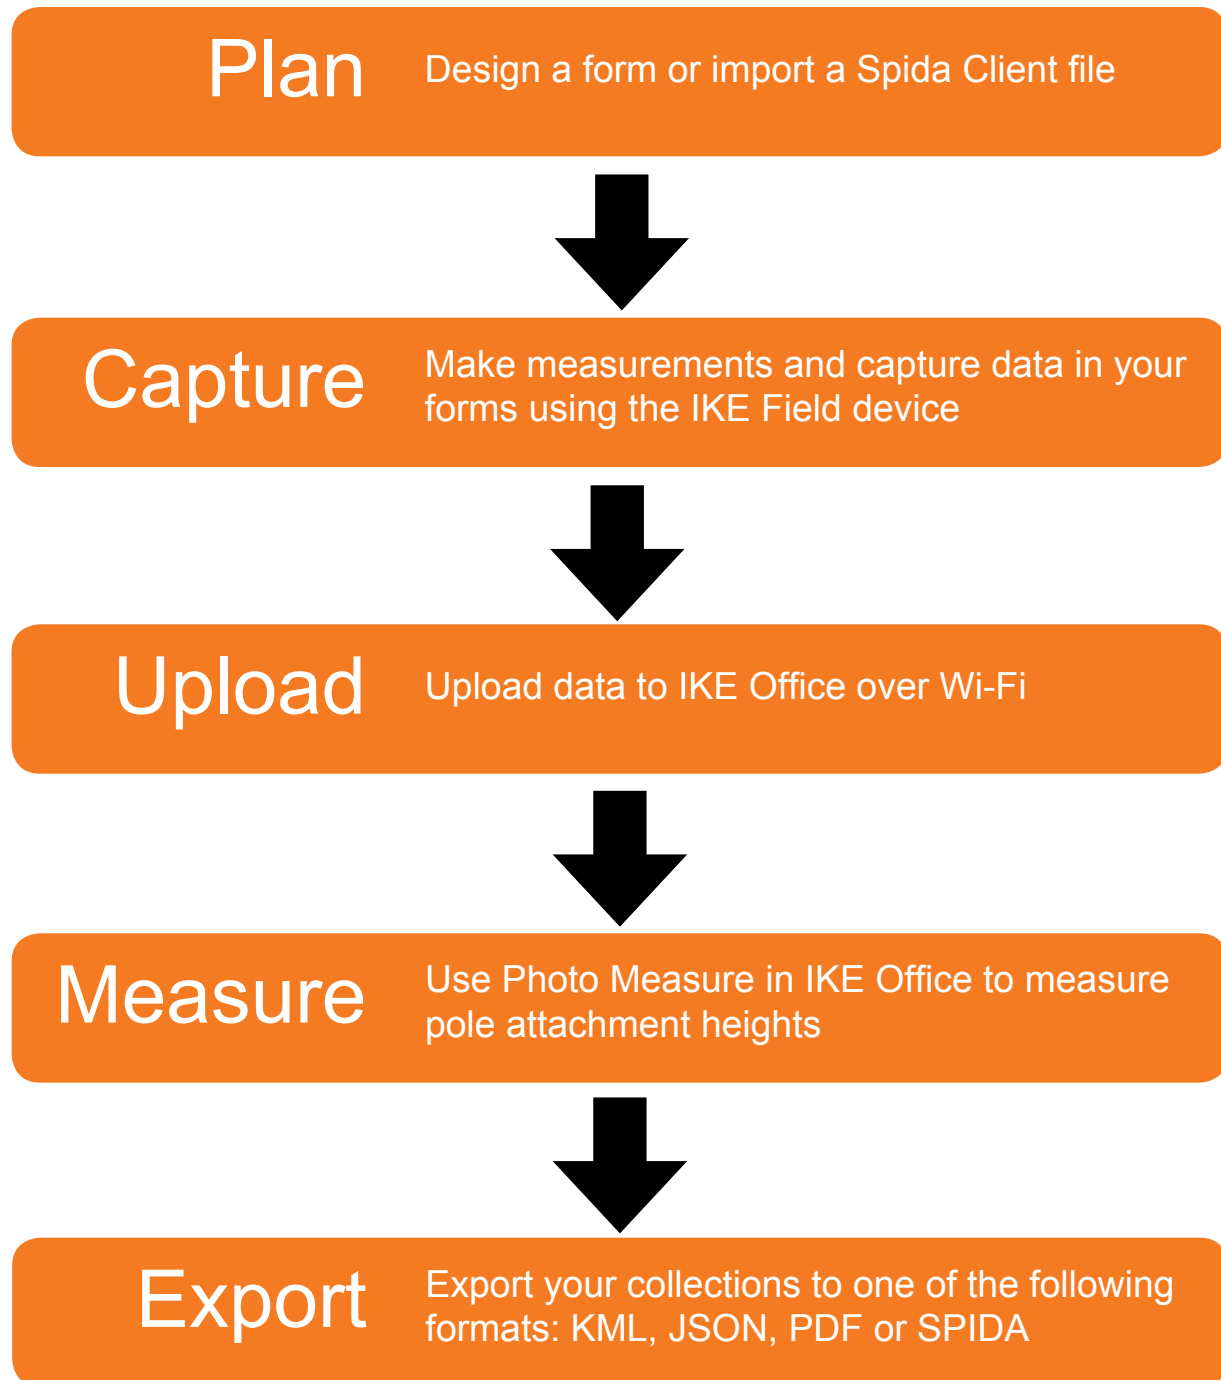

IKE 4 software

IKE Office

IKE Office makes data transfer from your IKE Field device simple. Customize and deploy forms directly to your IKE Field device and export various file types from captured data. Make accurate photo measurements and save marked-up photos.

IKE Field

Your device has been shipped with the latest factory software — your installed version shows on the IKE Field device main screen. However, the team at IKE regularly makes product improvements. Updates will be delivered to your device via the Google Play store. You only need to update the software when prompted, and you will stay up to date.

IKE 4 documentation

IKE 4 setup guide

A guide to getting started with your IKE field device

IKE 4 user manual (this guide)

The most comprehensive A-Z guide to using your IKE device

IKE 4 fieldcraft guide

How to get the best results from your IKE, tips and tricks to improve performance, accuracy, and productivity

additional software


- Web Browser – IKE Office supports Internet Explorer 11+, Firefox and Chrome browsers.
- Google Earth™ – View your data and measurements by clicking on their location on aerial photographs.

Your device is designed to be used with the IKE 4 tripod, which provides a stable platform to obtain the most accurate results when measuring objects such as target poles and wires. The tripod has a low magnetic signature that will not affect the IKE device's compass, which helps provide accurate measurements.

Important: Tripods other than the IKE tripod will likely produce less accurate results than the IKE tripod.



IKE Field
Signing In
Settings
Creating a job
Downloading forms
Starting a collection
Viewing the map
Uploading data
Making measurements

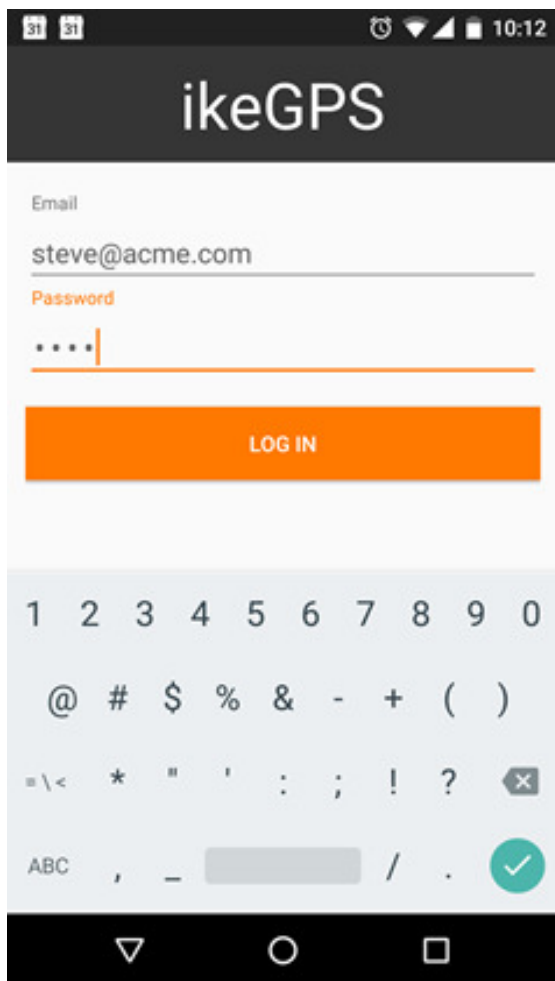

1. Sign in to the application with the same email and password as you used for IKE Office.

This user information will be saved, so the next time the application is opened it will already be logged in to the most recent account.



After turning on the IKE, navigate to the device's **Settings**.


There are four (4) separate **Settings** sections:

- Wireless & networks
- Device
- Personal
- System



Each will be discussed briefly, in general.

Wireless & networks

- **Wi-Fi** — touch **Wi-Fi**, and then touch the slider to move it to the **On** position. Choose a wireless connection.
- **Turbo download** — touch **Turbo download** to download large files (>20 MB) faster, using the Wi-Fi and 4G/3G networks simultaneously. Touch the slider to move it to the **On** position.
- **Bluetooth** — touch **Bluetooth**, and then touch the slider to move it to the **On** position. Choose a **Bluetooth** device
- **Data usage** — touch **Data usage** to check daily and total data usage. Default is **OVERVIEW**. Touch **Wi-Fi** to view app usages. Touch available monthly segments to compare across time.

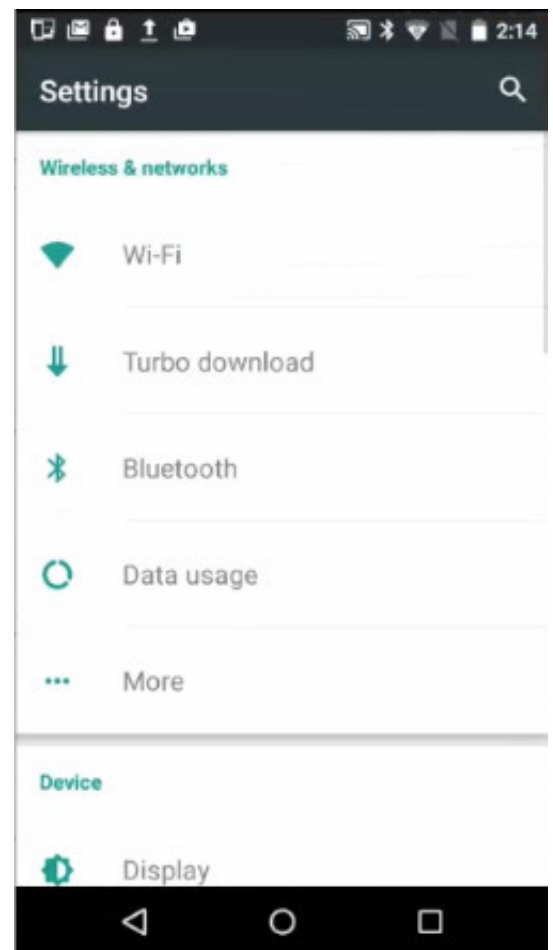

- **More** — Touch **More** to access
 - Airplane mode
 - Tethering & portable hotspot
 - VPN
 - Cellular networks

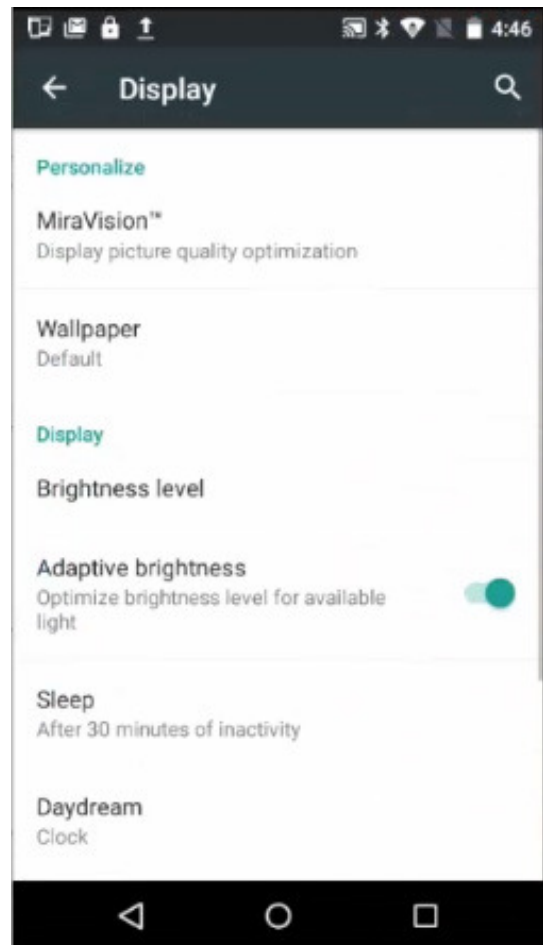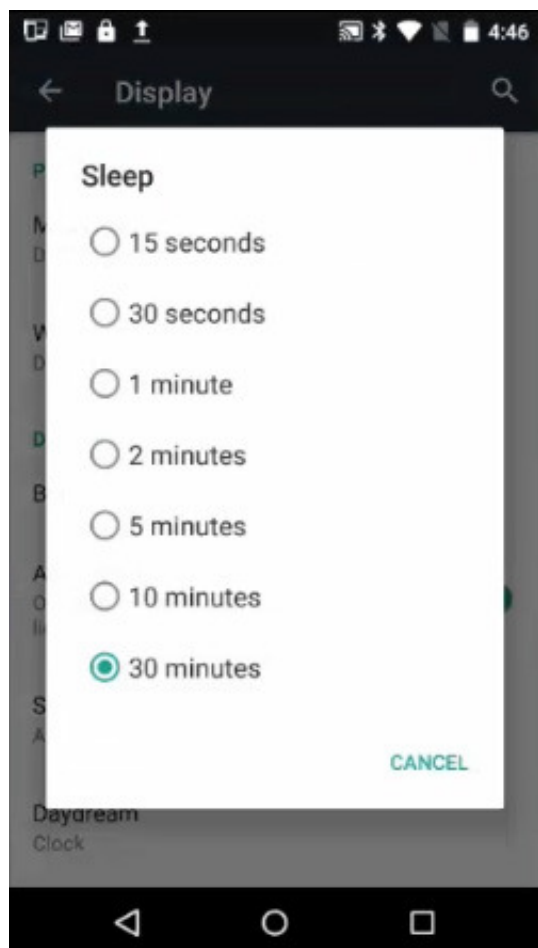




1. After turning on the IKE, navigate to the device's **Settings**.

2. Move to the **Wireless & networks** section.
3. Select the router you want.
4. Enter the router's password and select **CONNECT**.

For extended Internet coverage, use a standard AT&T SIM card, or a micro or nano card with an adapter, in the IKE SIM card slot under the battery.

Refer to **IKE 4 Training Module 4** for further details.

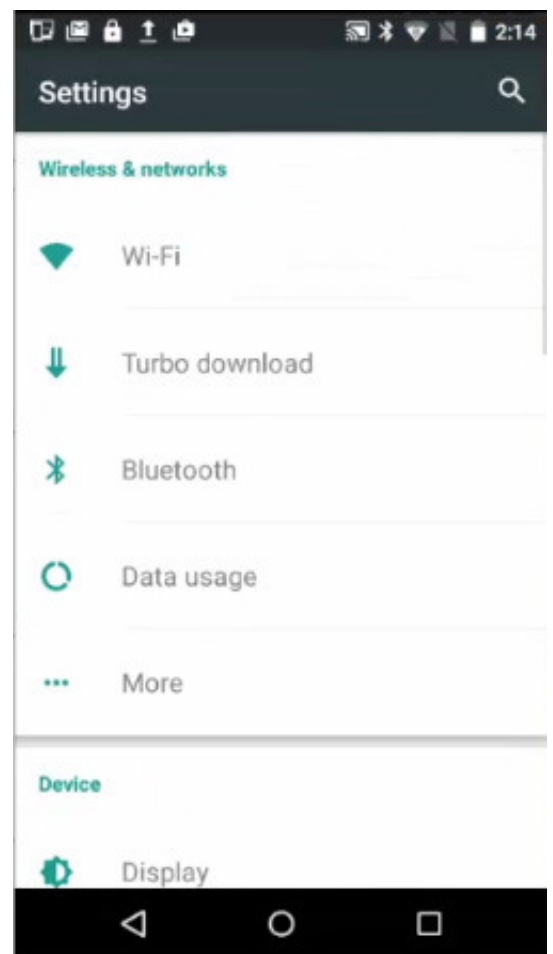

5. Navigate:



Settings > Device > Display

There you can change

- Brightness level
- Adaptive brightness
- Sleep

Change the **Brightness** level for easy viewing.

Adjust the **Adaptive brightness**, depending on the light in your environment.

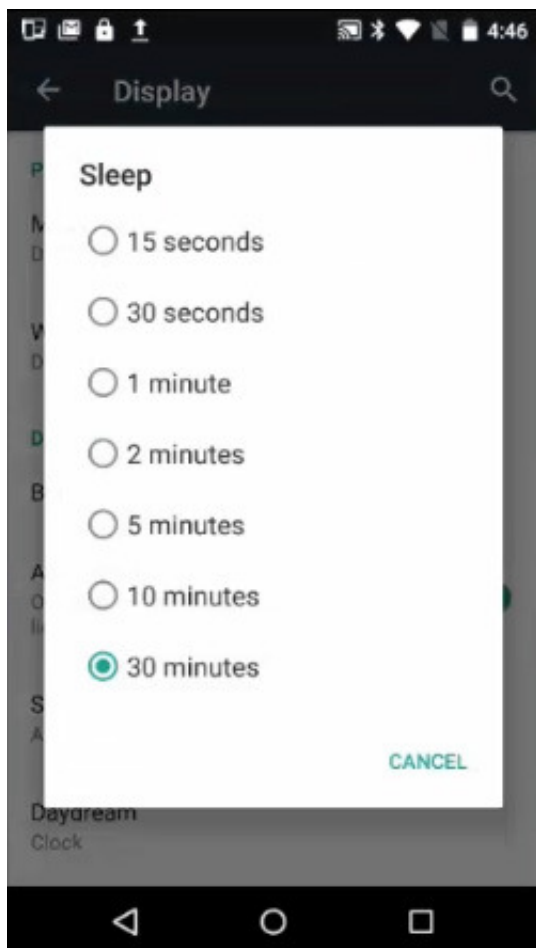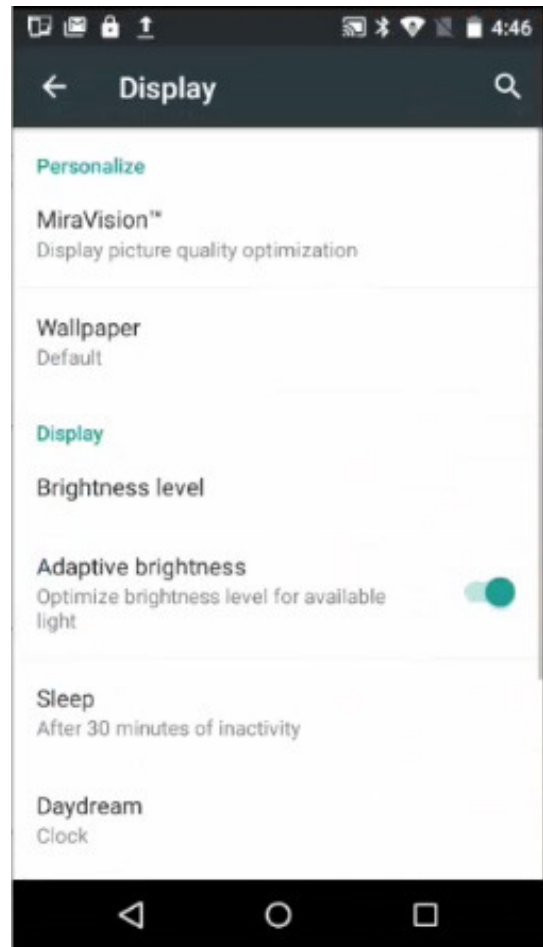

Change the **Sleep** mode setting to save battery life during periods of inactivity.

6. Navigate:



Settings > Personal > Location

Touch **Location** to manage:

- Location settings
- Satellite-based augmentation systems (SBAS)

For the IKE device's GPS to function correctly, SBAS must be turned on

- **Location** — touch **Location**, and then touch the slider to move it to the **On** position.
- **SBAS** — touch the **SBAS** slider to move it to the **On** position.

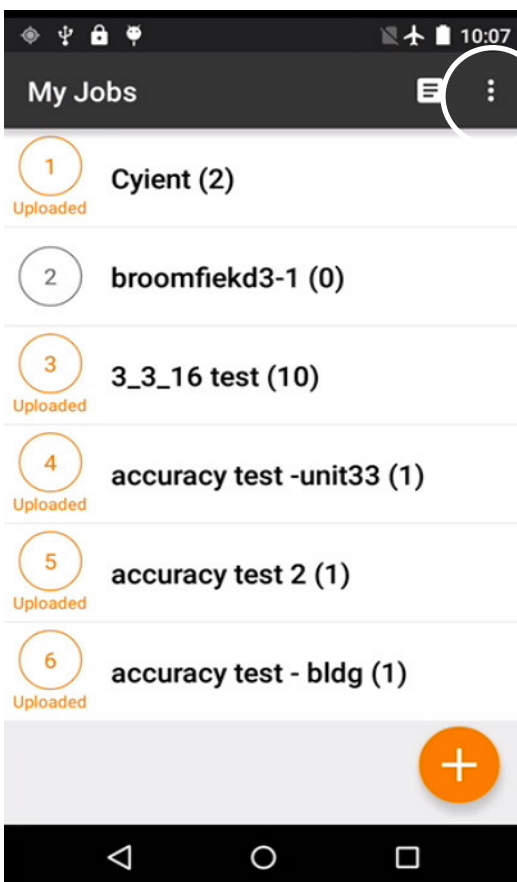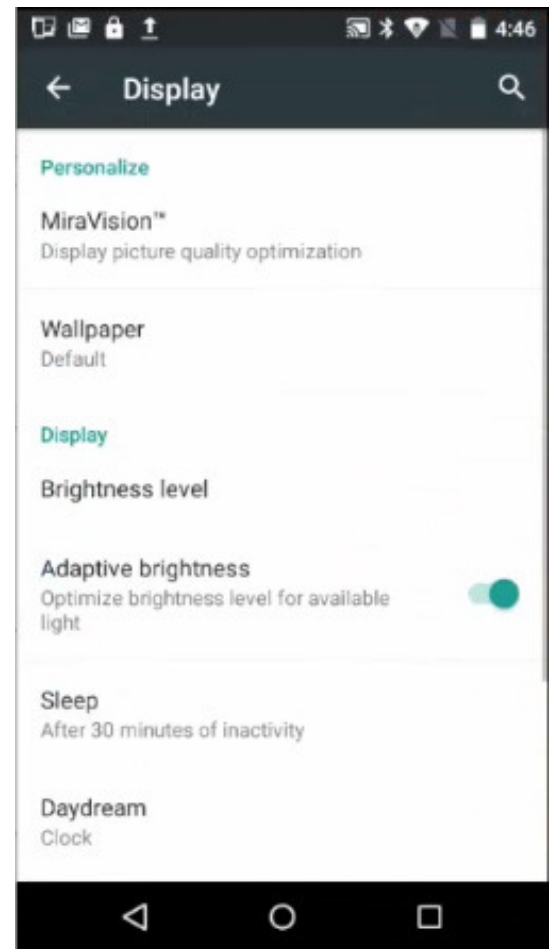

IKE Settings

1. Sign in to the IKE Field app, using the same sign in information as the IKE Office account.

The app opens to the **My Jobs** screen.

2. On the **My Jobs** screen, touch the

More icon () in the upper-right of the screen.


3. Touch **Settings**.

Now you can change

- the **Date Format**
- the **Measurement Unit**.

4. Touch **Date Format** to choose between MM/dd/yyyy and dd/MM/yyyy formats.

5. Touch **Measurement Unit** to choose between feet and meters.

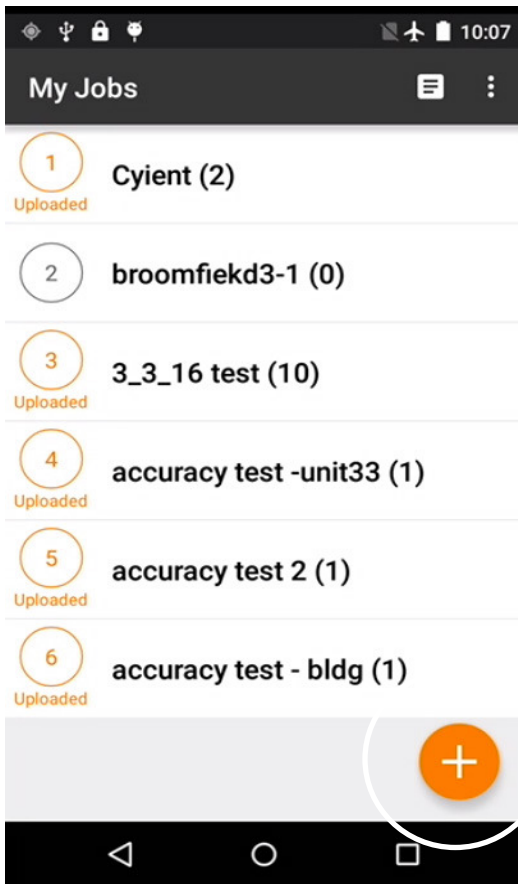


1. To create a job, navigate to the My Jobs screen.


2. Touch the orange plus icon .

3. Enter the name of the Job.

4. Touch **ATTACH FORM**.

When connected to the Internet, the page will automatically check for available updated and new forms.

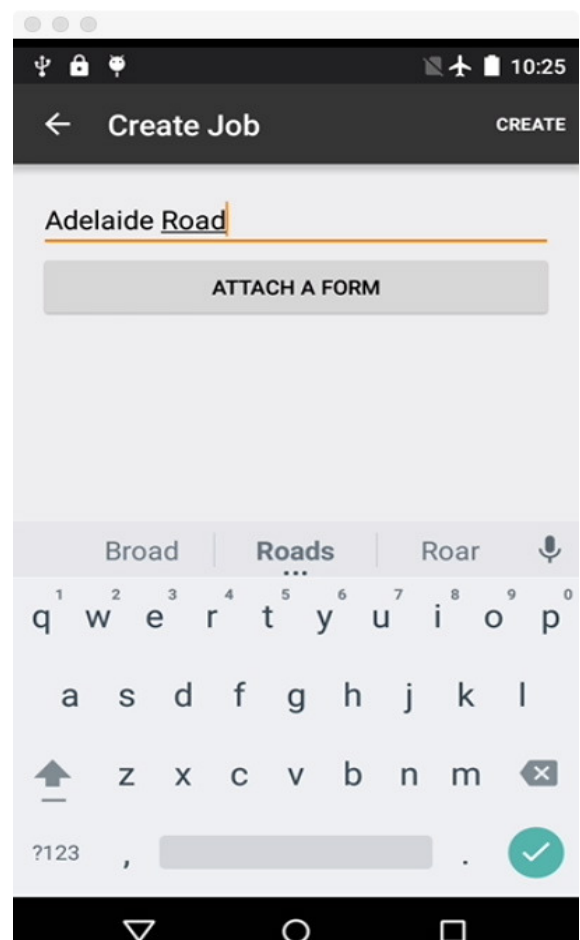


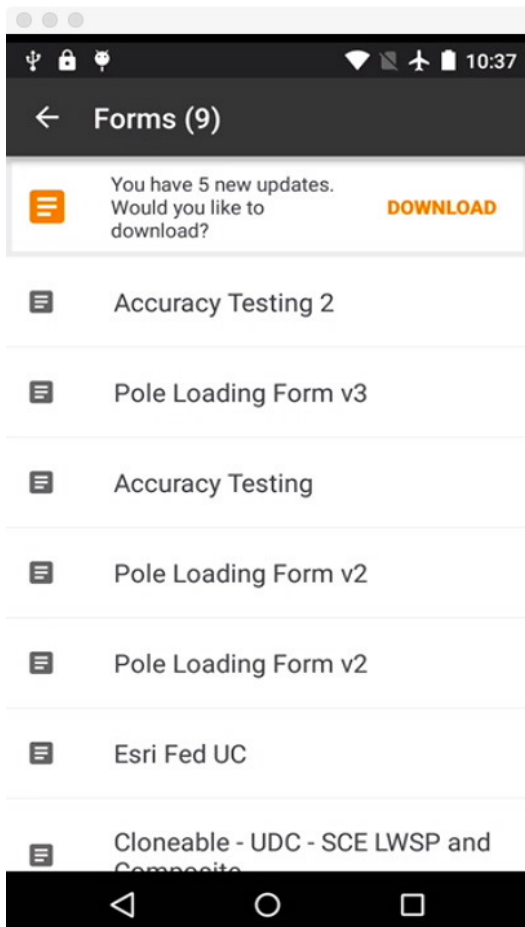


5. Tap **DOWNLOAD** to download the latest forms.

When forms are downloaded, you have access to them, even without Internet connectivity.

6. Select the form you want to use.

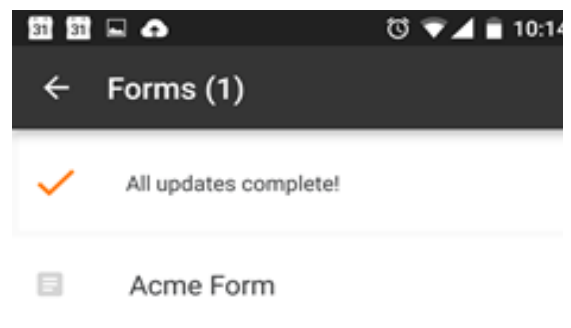


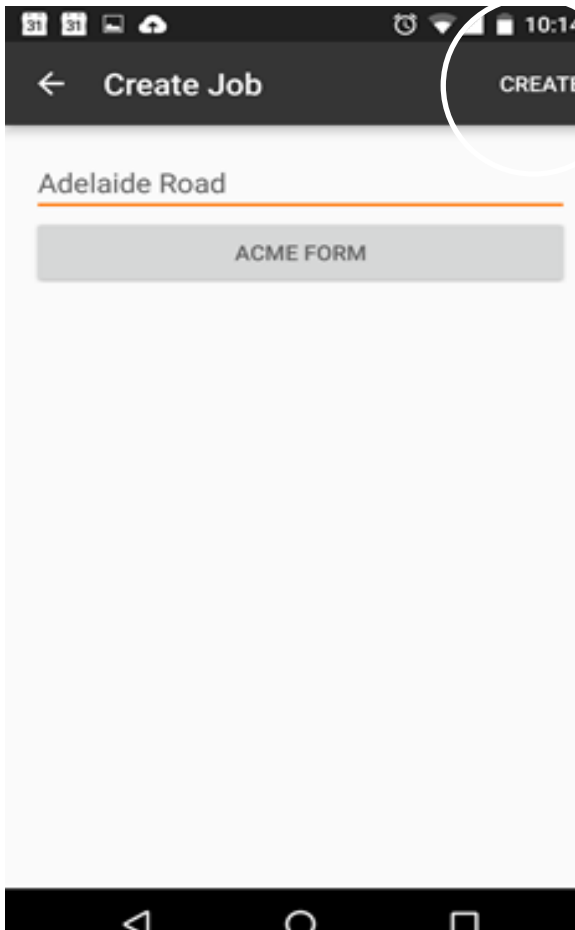


7. When the job has a name and a form attached to it, tap the **CREATE** button in the top right.

To ensure you have the resources for data collection, we recommend creating a job and applying the form before going on site. If your IKE device has a SIM card or Wi-Fi connectivity in the field, you will be able to receive form updates.

8. The **My Jobs** screen shows all of the jobs on the device. Select the Job you wish to work on to proceed.

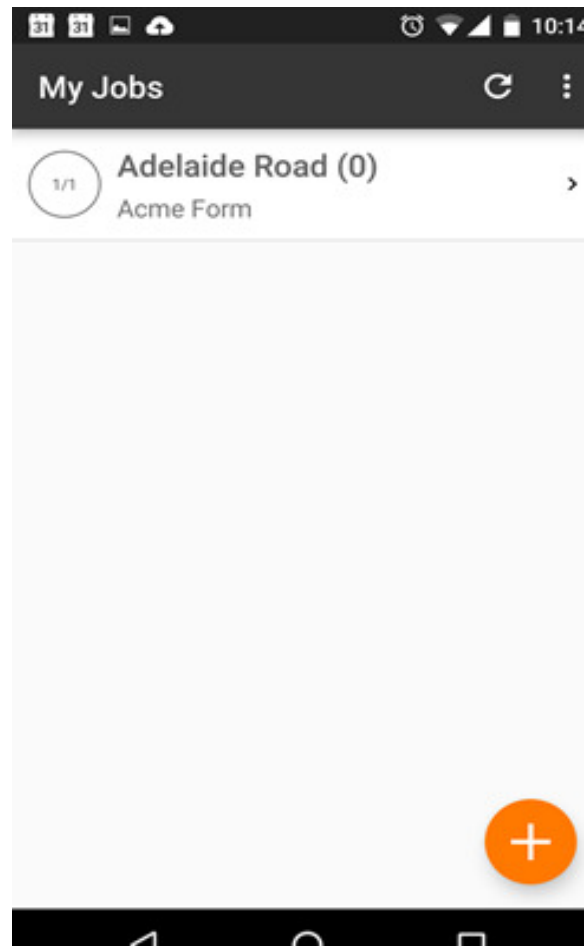

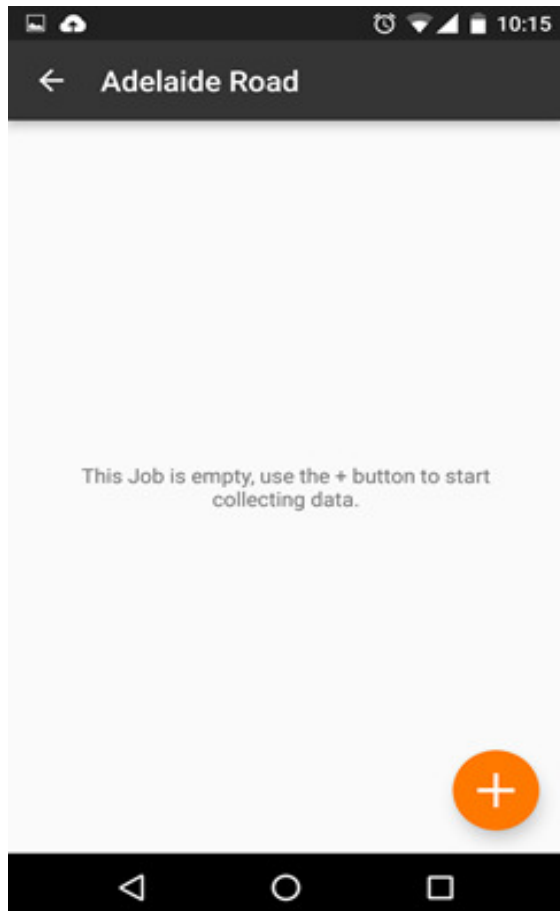


9. Now you are ready to start collecting form data. Tap the  button to create your first collection.

10. You can enter data directly into the on-screen form and use tools to make measurements.

Anything with a plus button can be repeated multiple times.

11. Tap the  next to equipment sub-form to start collecting data about that attachment.

12. When you have collected all of the information about the equipment, click the done button at the top right.

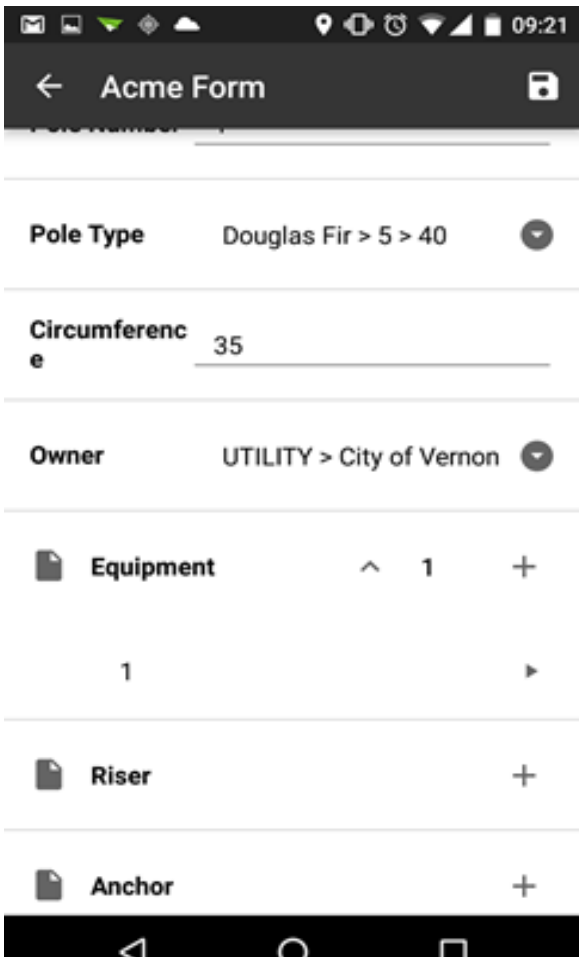


13. You can see that one piece of equipment has been captured.

Tap the **Save** icon to keep this information.
Tap the **Back** icon to go back to the Job screen.

14. The Job screen shows all of the collections you have made for this job in both a list and on a map.

Tapping the down arrow next to a collection shows a summary.



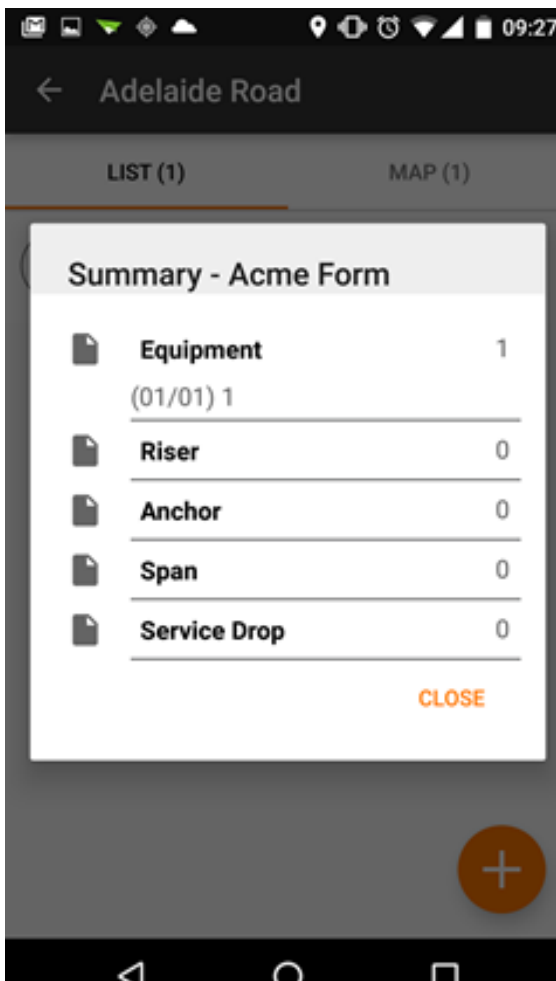



15. The summary gives you an overview of a collection by showing which sub-forms have been collected.

16. Tapping the Map tab shows your collections for this job on a map.

17. Tapping the  will take you to the form screen to add another collection.

18. Tapping on the location balloon will take you to that collection.

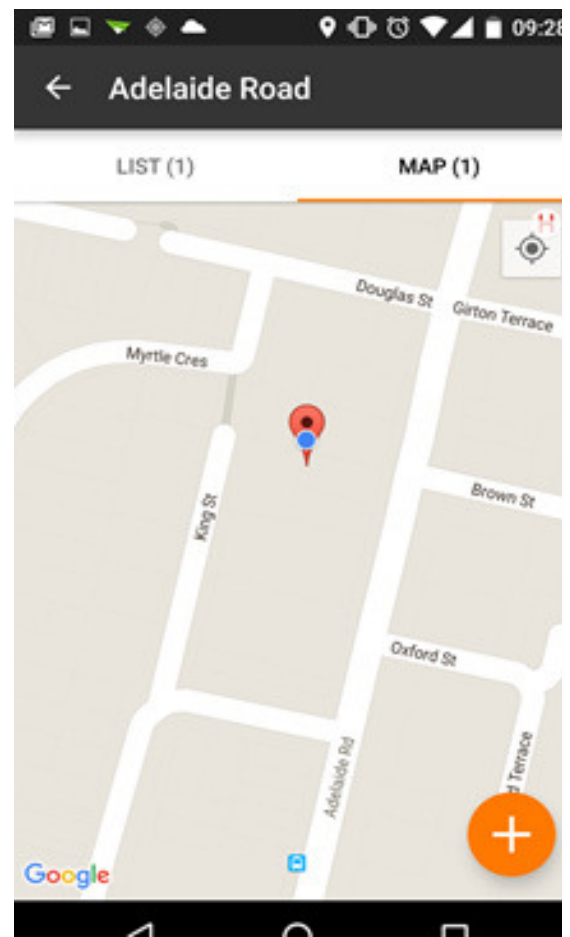

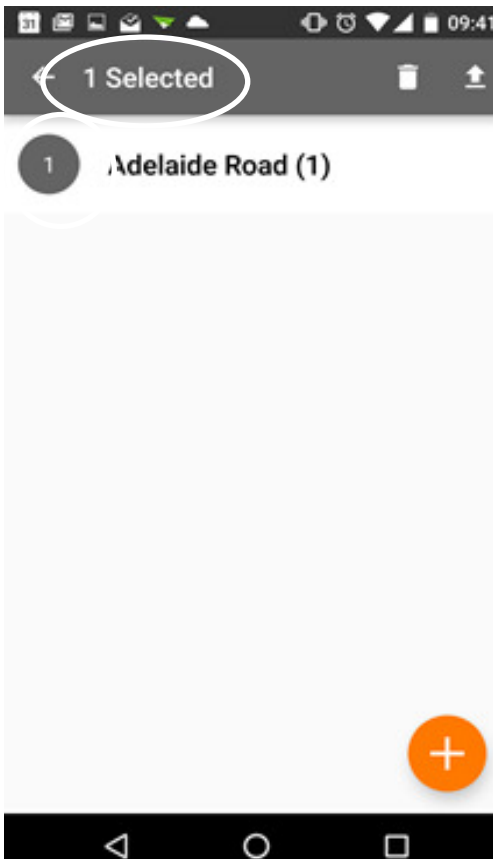

After you've collected the data, you will want to upload the data to the IKE Office.


1. Re-establish a Wi-Fi connection or utilize a data package through an AT&T SIM card, if necessary.
2. Return to the jobs list on the **My Jobs** screen.
3. Touch the gray, outlined circle to the left of the job name.
4. Ensure the number to the left of the job becomes highlighted in gray and the correct number of selected files is indicated at the top of the screen.
5. Touch the upload arrow to upload your job.

A dialog box indicates the status of the upload and indicates when successful.


After uploading, the job is paired with an orange, uploaded circle.

Now you can view the job in IKE Office.

After uploading your files, we recommend exiting the IKE Field app prior to powering down the IKE device.

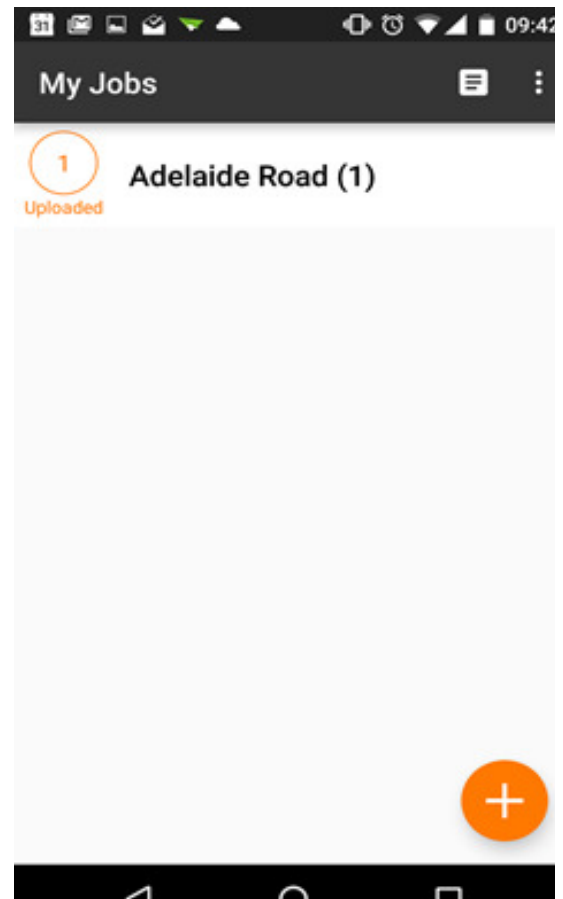


Local GPS Position

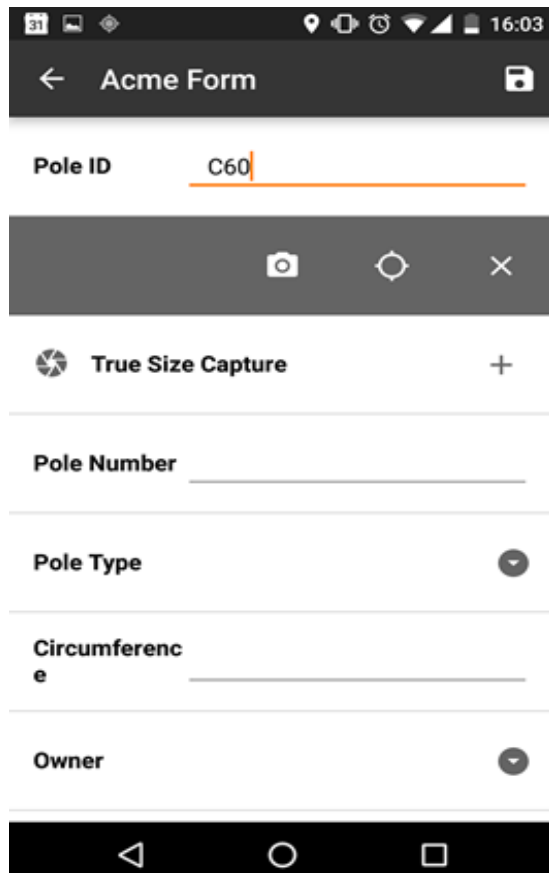


The screenshot shows the 'Acme Form' app interface. At the top, there's a header with a back arrow, the title 'Acme Form', and a save icon. Below the header, there's a 'Pole ID' field with the value 'C60' entered. Underneath this is a toolbar with three icons: a camera, a target, and a close button. Below the toolbar is a 'True Size Capture' button with a plus icon. Further down are fields for 'Pole Number', 'Pole Type' (with a dropdown arrow), 'Circumference', and 'Owner' (with a dropdown arrow). At the bottom, there's an Android navigation bar.

1. To capture a location, select the field and choose from local position (GPS icon)(GPS only) or target position (Camera Icon) (GPS + laser offset).


2. For the Local GPS position tool, the current accuracy shows the expected accuracy of the position. Pressing **START** begins averaging GPS data over 30 seconds to get the best accuracy. Try not to move or cover the device during this process.

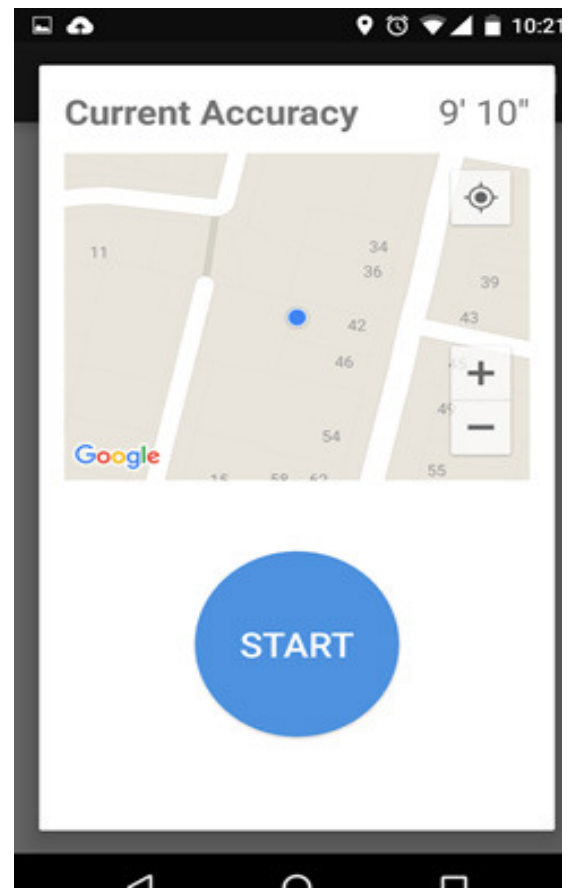

3. Counting down

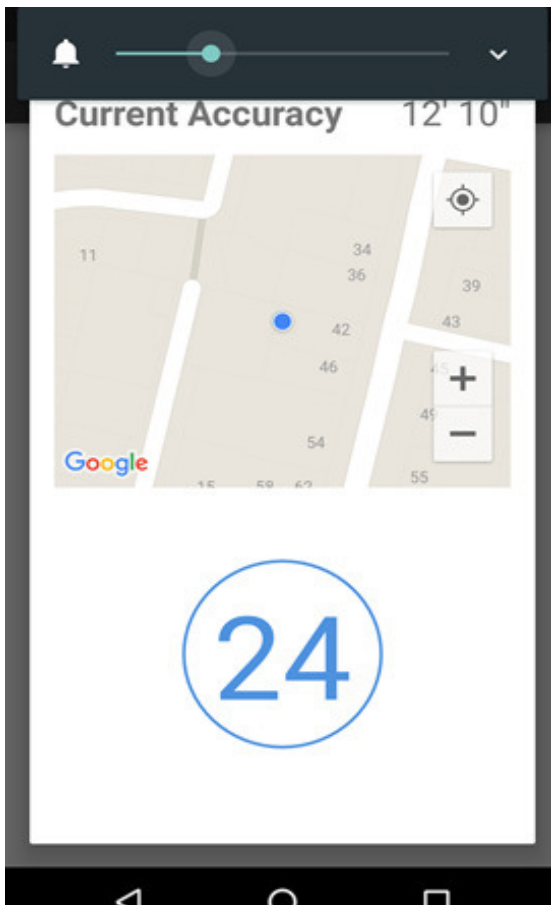

4. Location captured. The green pin on the map shows the location captured. The blue dot shows your current location.

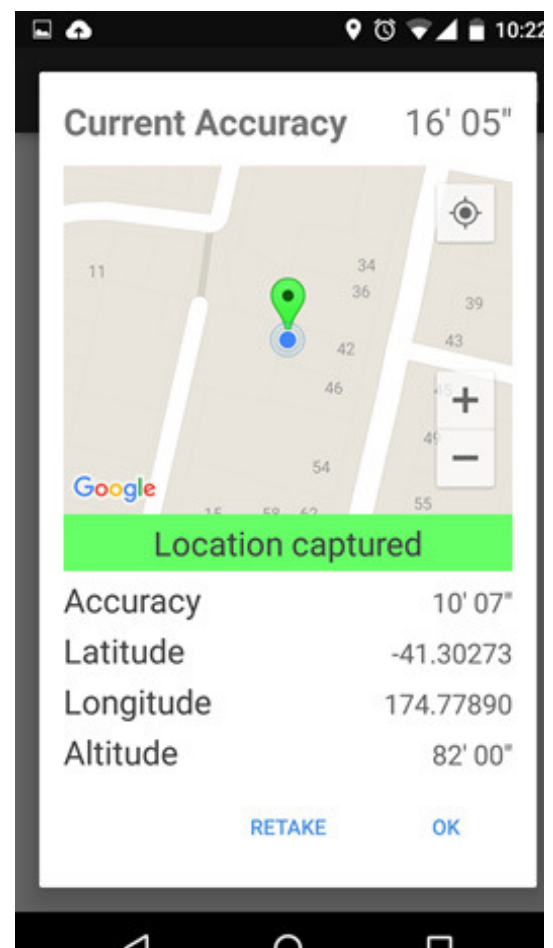

Target GPS Position



1. Aim at the target with the crosshair to ensure the laser is hitting the object you want to locate.
2. Ensure the crosshair color is green which indicates that all of the instruments (GPS, Compass and Laser) are providing information
3. Tap the blue capture button at the bottom of the screen to take a picture and capture the location.

Note: you can zoom in using the slider on the right to help with aiming


Note: tapping on different areas of the camera will change the brightness/focus, like a standard Android camera.

Point to Point



1. Aim at the first target and capture when the crosshair turns green.

2. Aim at the second target and capture when the crosshair turns green.

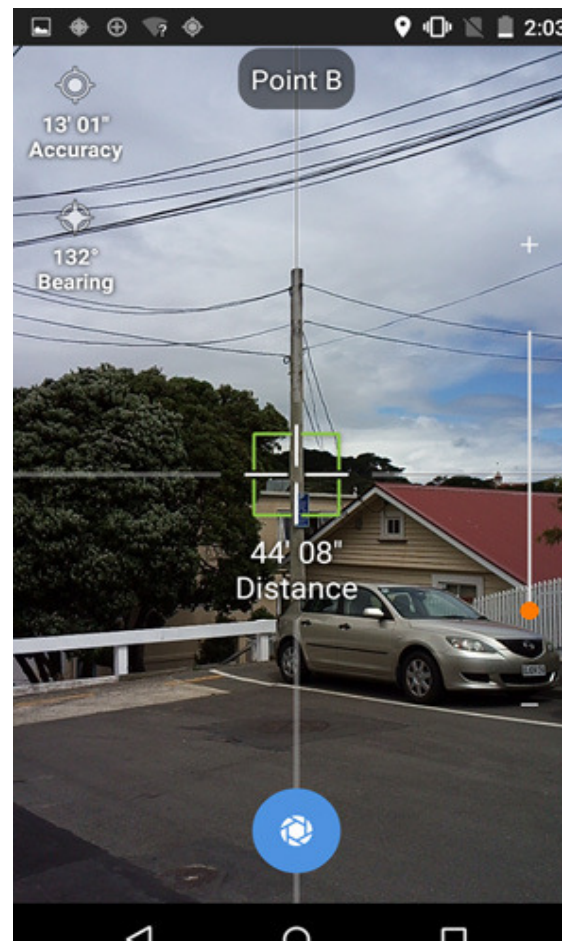




3. The distance and bearing from Point A to Point B are calculated.

4. Click **RETAKE** if you're not satisfied with your results.

Point to Point

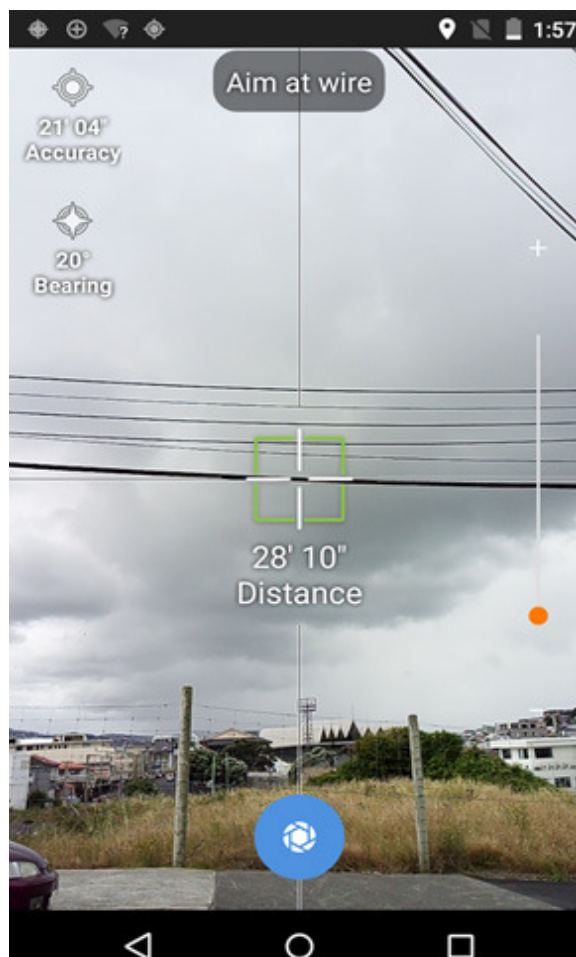

1. Aim at the wire, wait for the crosshair to turn green and tap the capture button.

2. Use the orange guide arrows to locate the position directly below the wire.





3. When the arrows disappear and both the crosshair and the height measurement area turn green, tap the capture button.

4. The results screen shows the height of the wire and a photo with the crosshair.

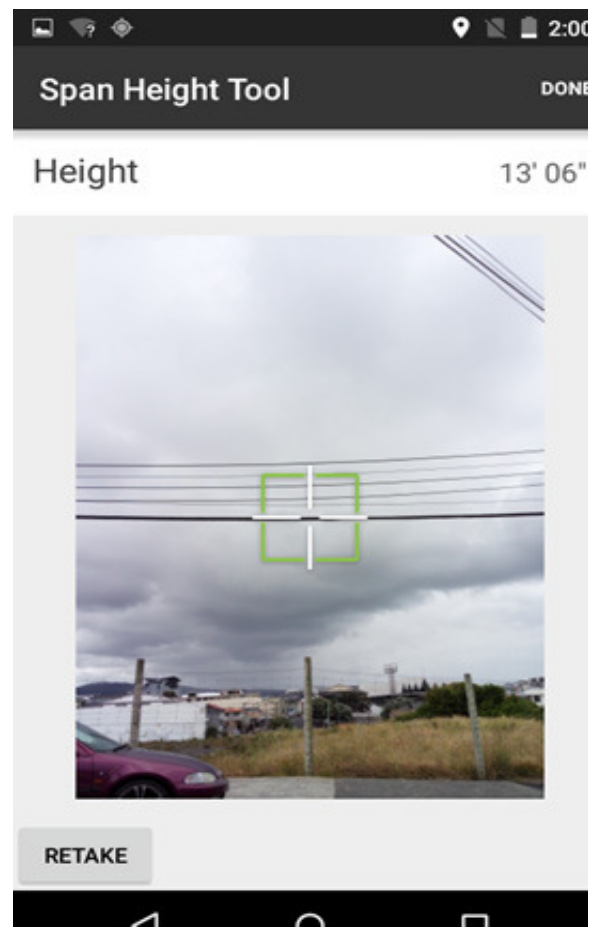


Photo Measure



1. Aim at the pole with the crosshair.
2. Ensure the guideline that runs down the whole screen matches the angle of the pole.
3. When the crosshair is green tap the blue capture button at the bottom of the screen.

IKE Office is a cloud-based file management system with which you can

- create customizable forms
- upload and download field data
- measure heights of utility poles and their attachments

logging in

When signing into IKE Office for the first time use the admin login and password provided by ikeGPS. Enter these details, then click



Username

steve@acme.com

Password

.....

LOGIN

IKE Office tools

On the left side of the IKE Office page are the various IKE Office tool tabs:

- Summary
- Jobs
- Forms
- Accounts
- Settings

When a tab is accessed, it will be highlighted in orange.

The following section will examine each tab in detail.



tui@dvt.ikegps.com

Summary

Jobs

Forms


Accounts

Settings

Logout

summary screen

The Summary screen shows the most recently uploaded collections and jobs. From here you can navigate to an individual job or collection. To access the summary, click .

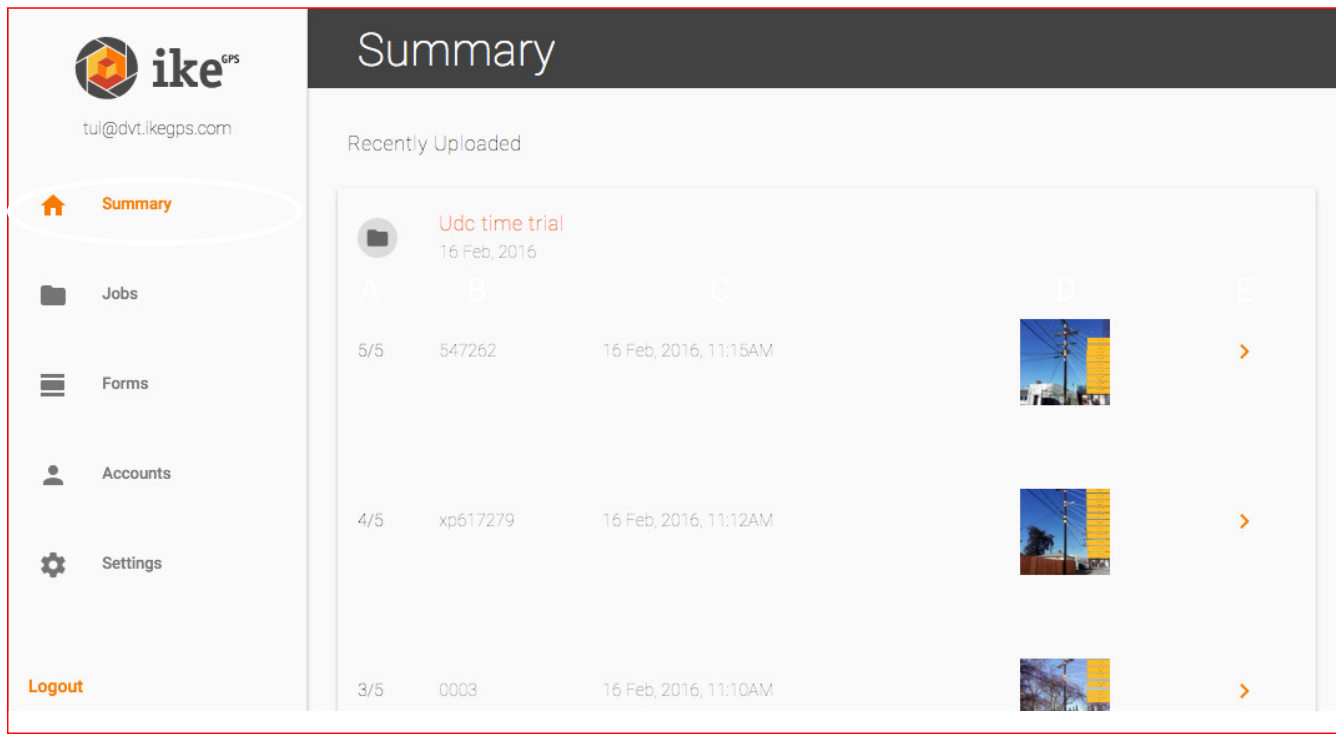


Now you see the following highlights of the uploaded jobs:

- Number of features (A)
- Pole ID (B)
- Date and time of collection (C)
- Thumbnail sets of collection captures (D)
- More information (E)


Clicking on a right arrow for more information shows you that pole's complete information.

jobs screen

The Jobs screen shows all the data uploaded from the IKE 4 device to the specific account. Jobs are displayed chronologically, based on the date they were collected. To access the jobs, click

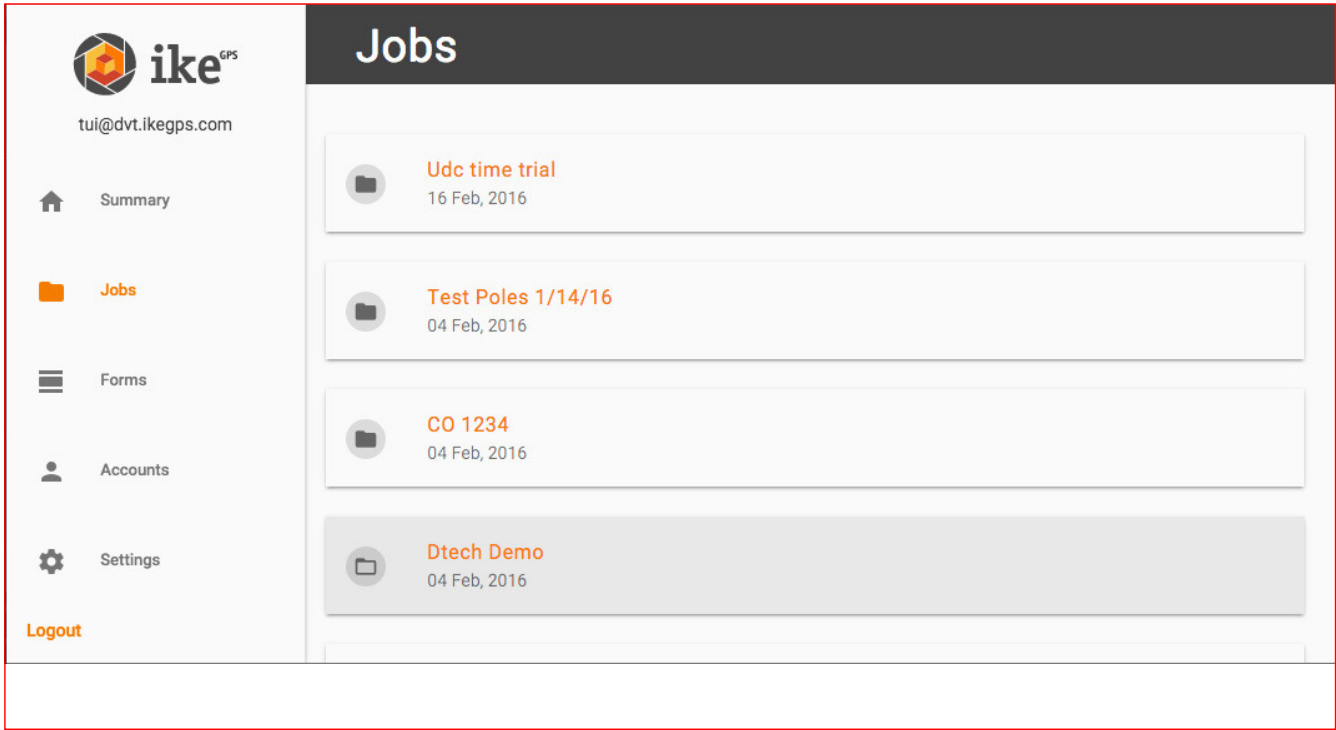

By selecting a Job name, the job’s summary appears.

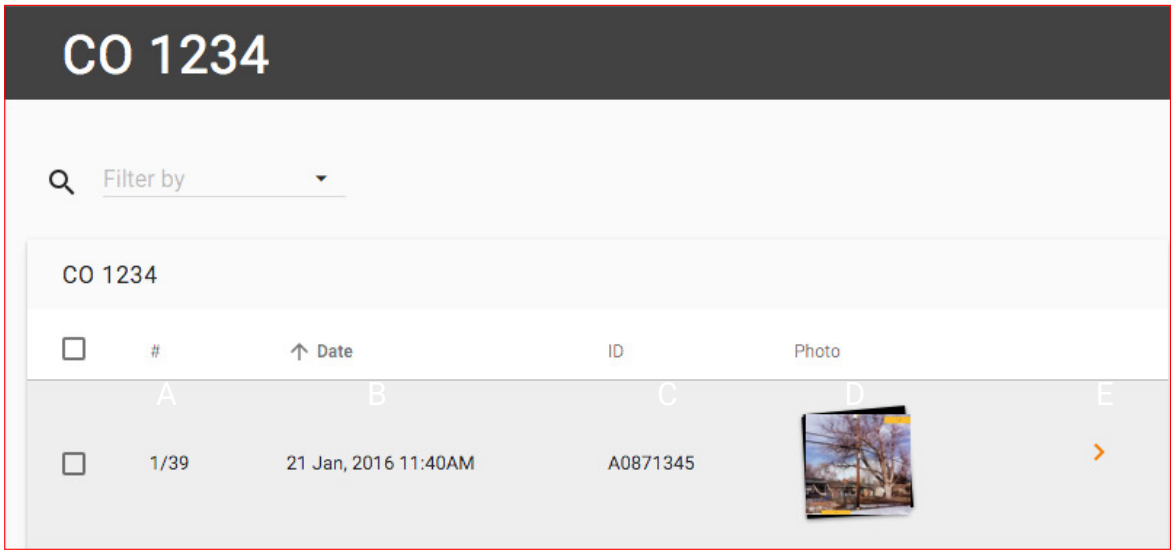

Now you see the following highlights of the uploaded jobs:

- Number of features (A)
- Pole ID (B)
- Date and time of collection (C)
- Thumbnail sets of collection captures (D)
- More information (E)

Clicking on a right arrow for more information shows you that pole's complete information.

CO 1234
SPIDACalc Form v2

Pole ID

A0871345

Location

Latitude

39.60959

Longitude


-104.99925

Altitude

5386' 5"

Accuracy

2' 5"

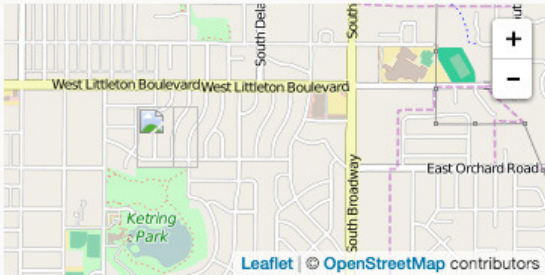

True Size Capture




Now you see all the data collected for this feature, such as

- Pole ID
- Location data
- True Size capture
- Sub-forms

This data is shaped by form creation and field data collection. Therefore, it is very important to be mindful of requirements when creating forms, via the IKE Office Forms tab.

forms screen

The Forms screen shows all the available forms. From this screen you can add customizable forms to your account. To access the forms, click .

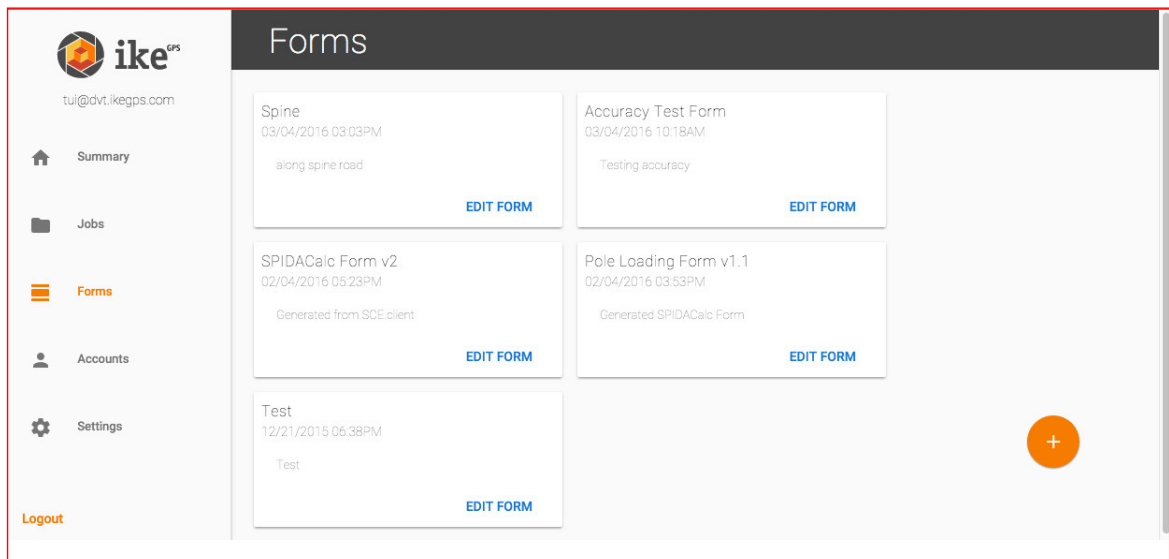


By selecting a form's edit button, the Form menu appears, and you can

Test a new form against a pole, to ensure you have all the necessary information for pole-loading analysis.

logging in


When signing into IKE Office for the first time use the admin login and password provided by ikeGPS. Enter these details, then click .

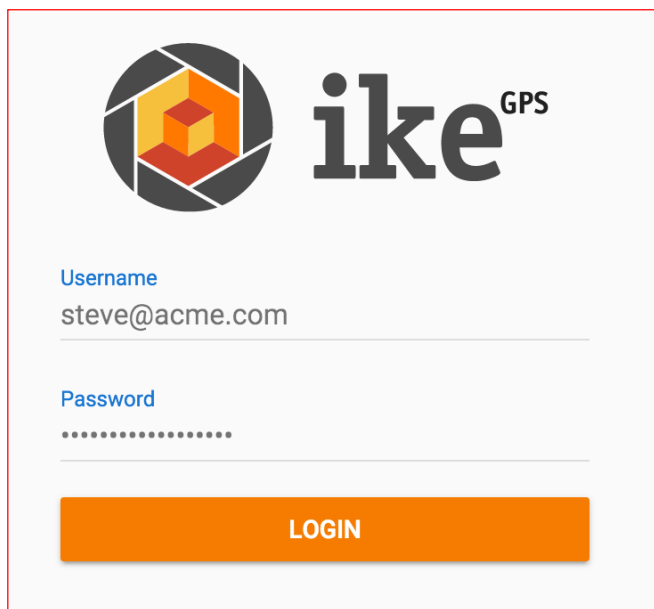

The login form for IKE GPS. It features the IKE GPS logo at the top left, which consists of a stylized camera aperture icon next to the text 'ike^{GPS}'. Below the logo, there are two input fields: 'Username' with the value 'steve@acme.com' and 'Password' with masked characters. An orange 'LOGIN' button is positioned at the bottom of the form.

managing accounts


1. To add a new user, click on then on +.

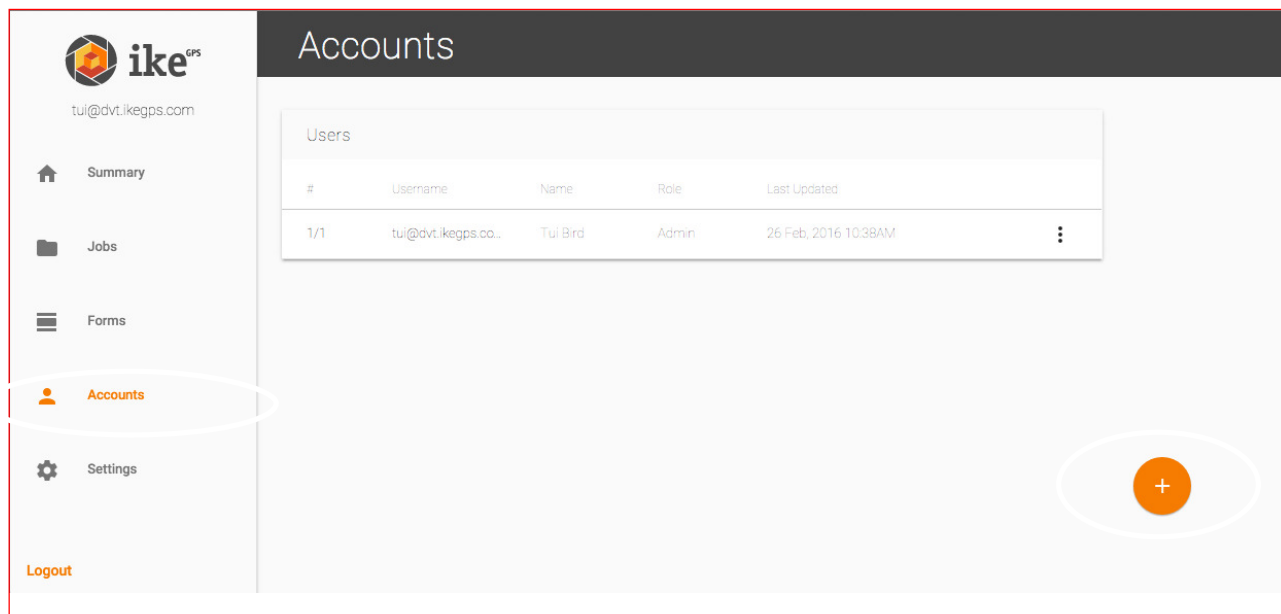

The screenshot shows the 'Accounts' management interface in IKE GPS. On the left is a sidebar with navigation links: Summary, Jobs, Forms, Accounts (highlighted with a white oval), and Settings. At the bottom of the sidebar is a 'Logout' link. The main content area is titled 'Accounts' and contains a table of users. The table has columns for '#', 'Username', 'Name', 'Role', and 'Last Updated'. One user is listed: 'tui@dvf.ikegps.co...' with the name 'Tui Bird' and role 'Admin'. A red circle highlights the 'Accounts' link in the sidebar, and a white oval highlights an orange '+' button in the bottom right corner of the main content area, indicating where to click to add a new user.


#	Username	Name	Role	Last Updated
1/1	tui@dvf.ikegps.co...	Tui Bird	Admin	26 Feb, 2016 10:38AM

2. Enter the user details, then click .

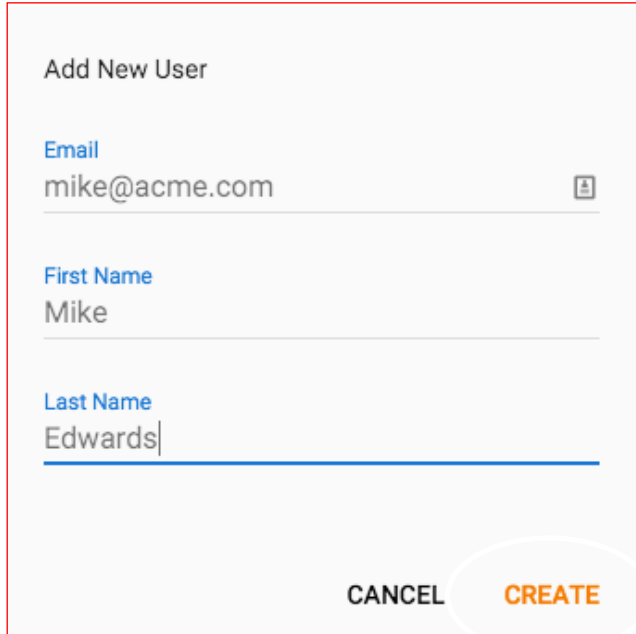

The screenshot shows a light gray dialog box titled "Add New User". It contains three text input fields: "Email" with the value "mike@acme.com", "First Name" with the value "Mike", and "Last Name" with the value "Edwards". The "Last Name" field is currently active, indicated by a blue underline. At the bottom right, there are two buttons: "CANCEL" in black text and "CREATE" in orange text. The "CREATE" button is circled in white.

3. When the confirmation message appears, copy the login details (username and password) and pass them on to the user. Click to close the window.

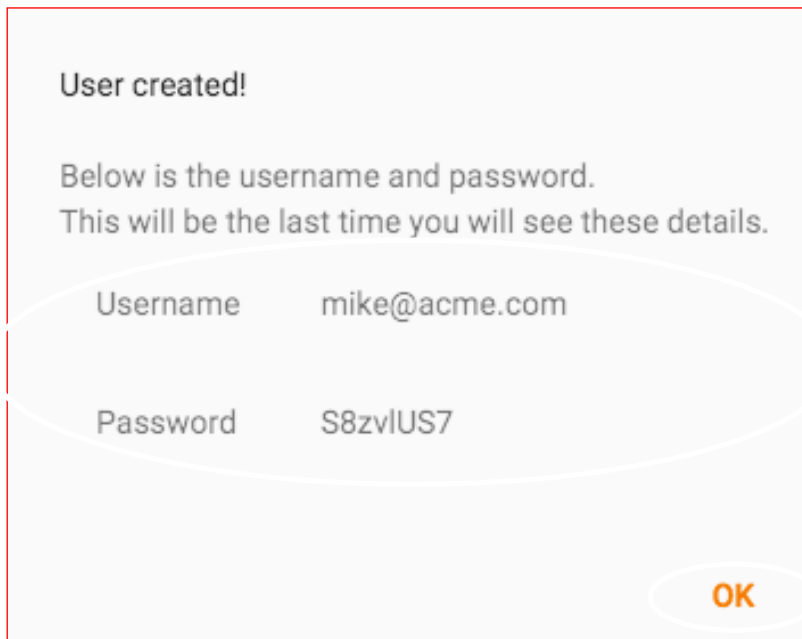

The screenshot shows a light gray dialog box titled "User created!". Below the title, it says "Below is the username and password. This will be the last time you will see these details." There are two rows of text: "Username" followed by "mike@acme.com" and "Password" followed by "S8zvlUS7". Both rows are circled in white. At the bottom right, there is an orange "OK" button, which is also circled in white.

To delete a user or reset a password, click the More icon () to the right of the account and select the option required.

Users					
#	Username	Name	Role	Last Updated	
1/2	mike@acme.com	Mike Edwards	User	14 Dec, 2015 4:08PM	
2/2	steve@acme.com	Steve Smith	Admin	14 Dec, 2015 3:55PM	Delete User Reset Password

summary screen

The summary screen shows the most recently uploaded collections and jobs. From here you can navigate to an individual job or collection.

To access the summary, click


tui@dvt.ikegps.com

 Summary

 Jobs

 Forms

 Accounts

 Settings

Logout

Summary


Recently Uploaded

 Udc time trial
16 Feb, 2016

5/5	547262	16 Feb, 2016, 11:15AM		>
4/5	xp617279	16 Feb, 2016, 11:12AM		>
3/5	0003	16 Feb, 2016, 11:10AM		>

customising the date format and measurement units


You can change the date format and measurement units. To do this, click  then click  to select the preferred date format and/or measurement units.

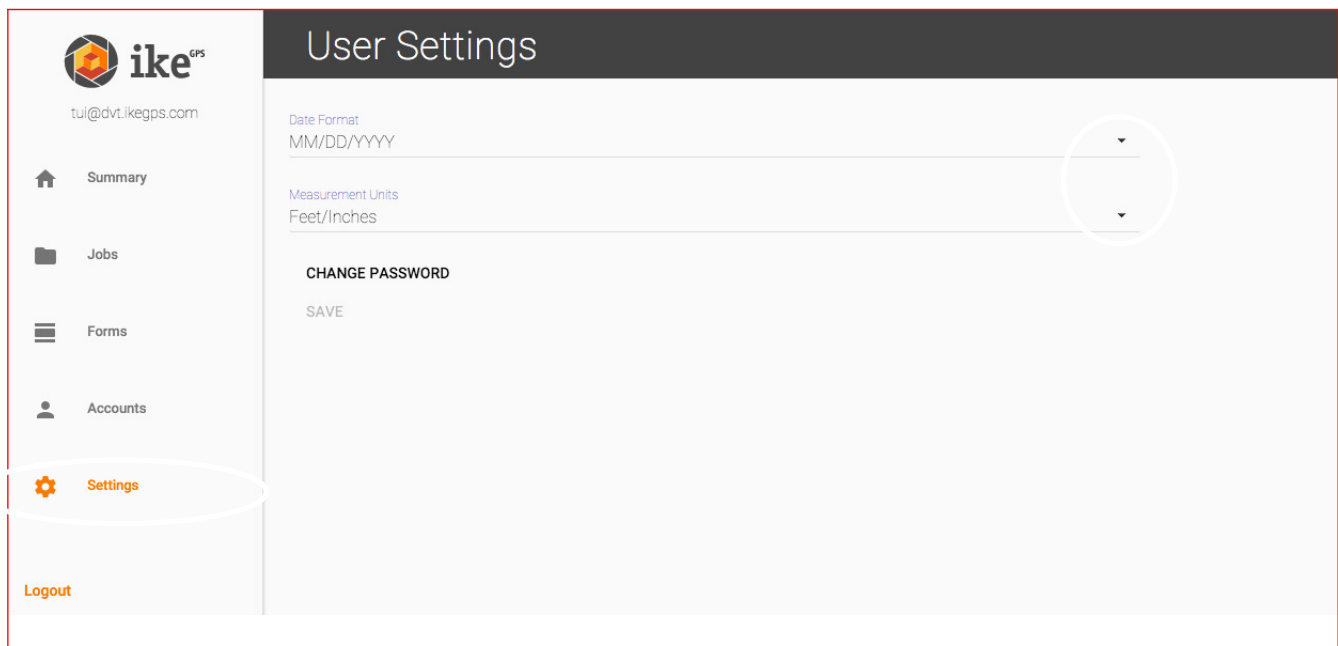

creating a form

Note: It is important to set up the Internet connection to access your forms, especially the first time using the network.

1. To create a form, click on  then on .

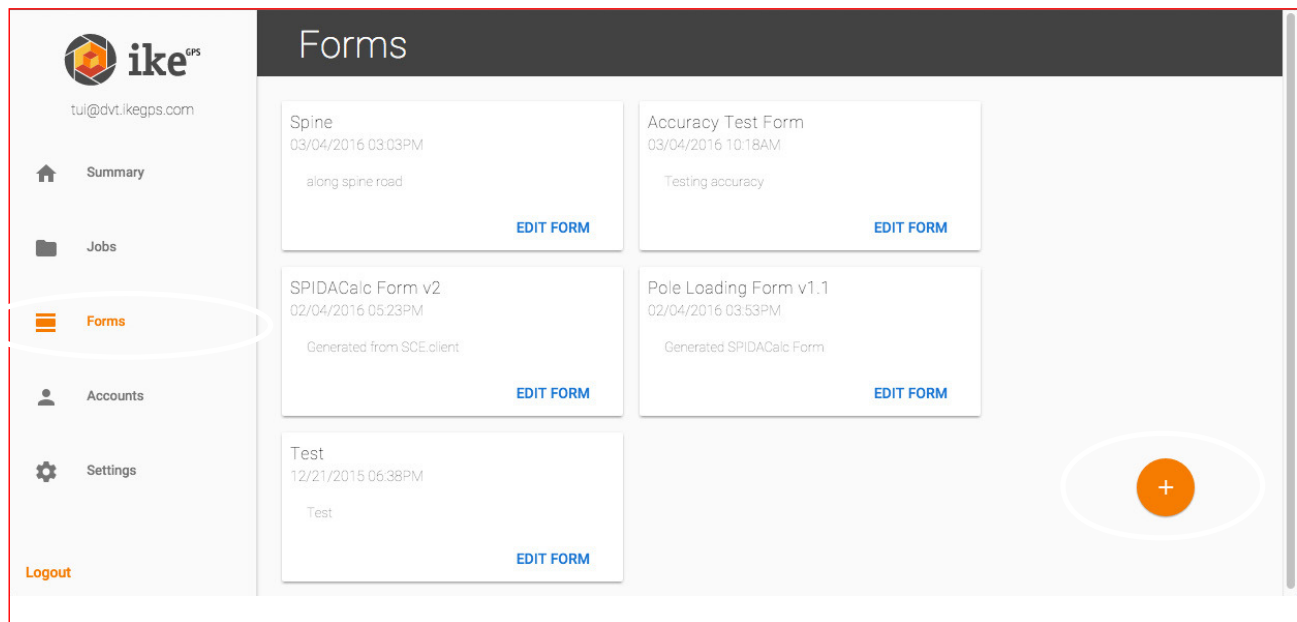


2. Select the type of form you want to create.


If you have a client.json file from ikeGPS, you can select

to


create a form specifically to be used with SPIDACalc.
To create a form from scratch, select

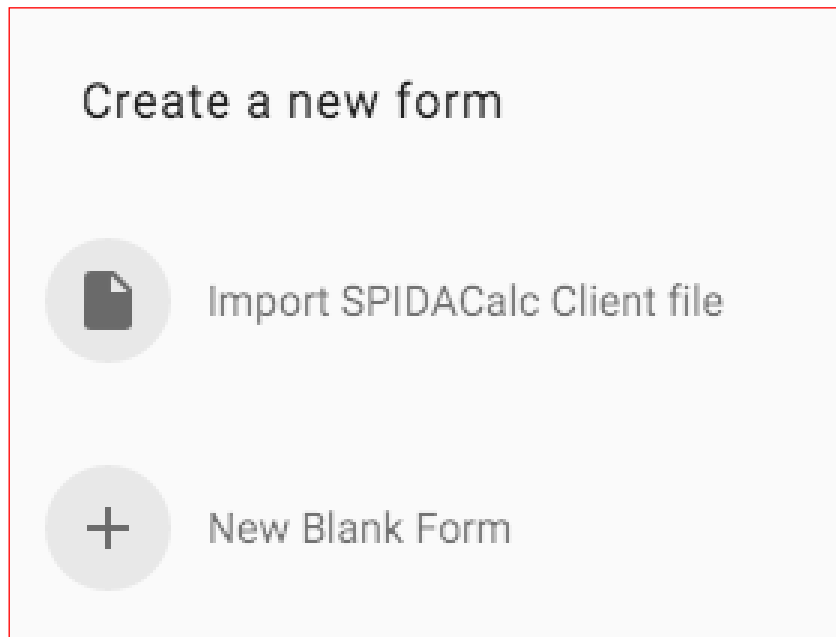

3. When the form is created, click to make the form available for download onto the IKE device.

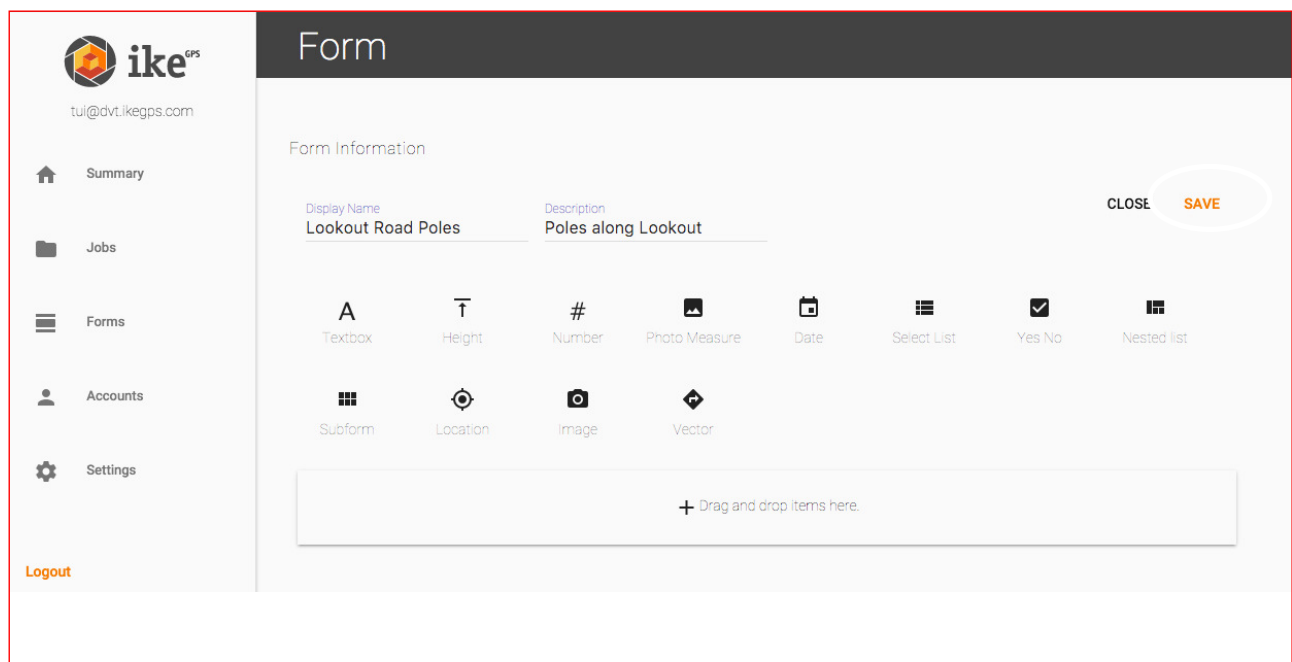


The created forms are displayed as shown below.

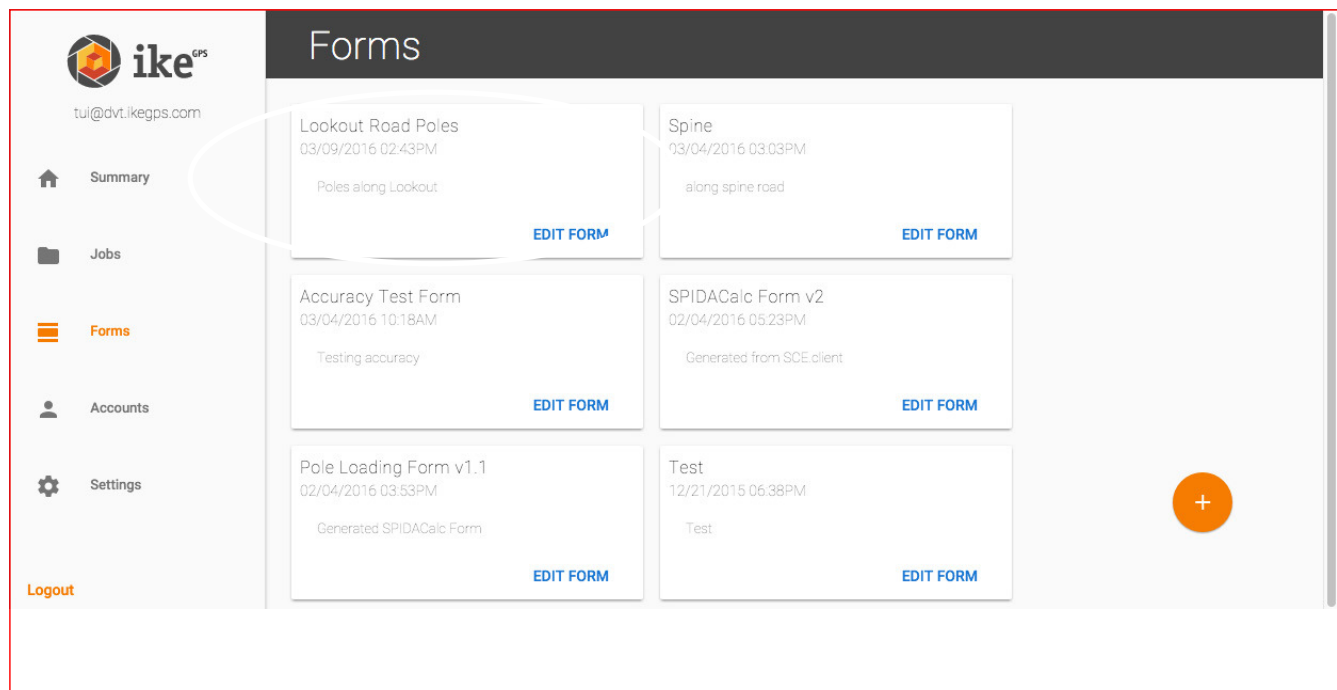

jobs and collections

To display all the jobs collected for your organisation, click **Jobs**.

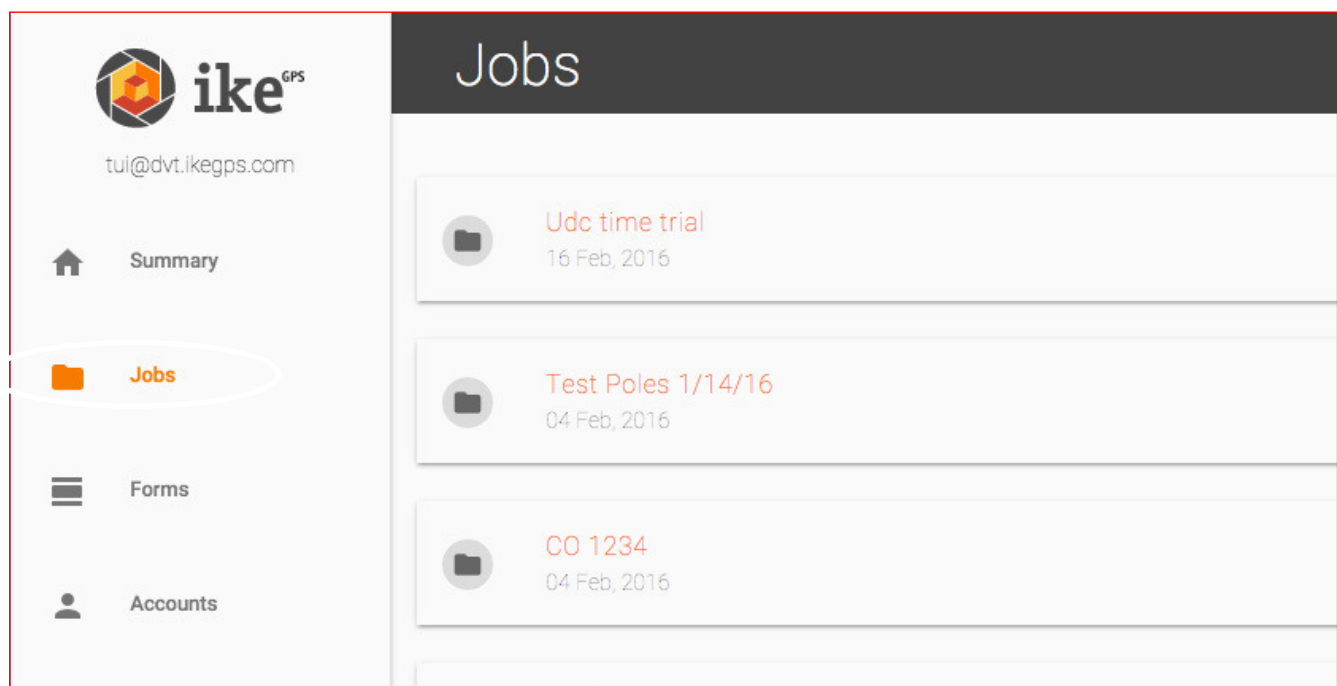

Selecting a job shows all of the collections for that job.



tul@dv1.ikegps.com

- Summary
- Jobs
- Forms
- Accounts
- Settings

Logout

CO 1234

CO 1234				
☐	#	↑ Date	ID	Photo
☐	1/39	21 Jan, 2016 11:40AM	A0871345	
☐	2/39	21 Jan, 2016 11:40AM	A0871346	
☐	3/39	21 Jan, 2016 11:38AM	A0871348	

Selecting an individual collection () will show all of the data collected on the form.



tul@dvt.ikegps.com

-  Summary
-  Jobs
-  Forms
-  Accounts
-  Settings

Logout

Collection 34/39

CO 1234

SPIDACalc Form v2

Pole ID


Location

Latitude	39.92488
Longitude	-105.08780
Altitude	5341'
Accuracy	2' 7"

True Size Capture




0006

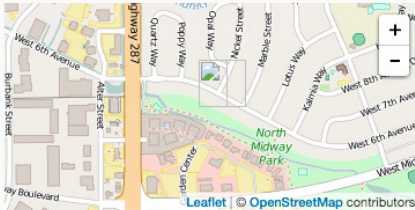




Mousing over an image shows a menu that allows you to view or go to Photo Measure

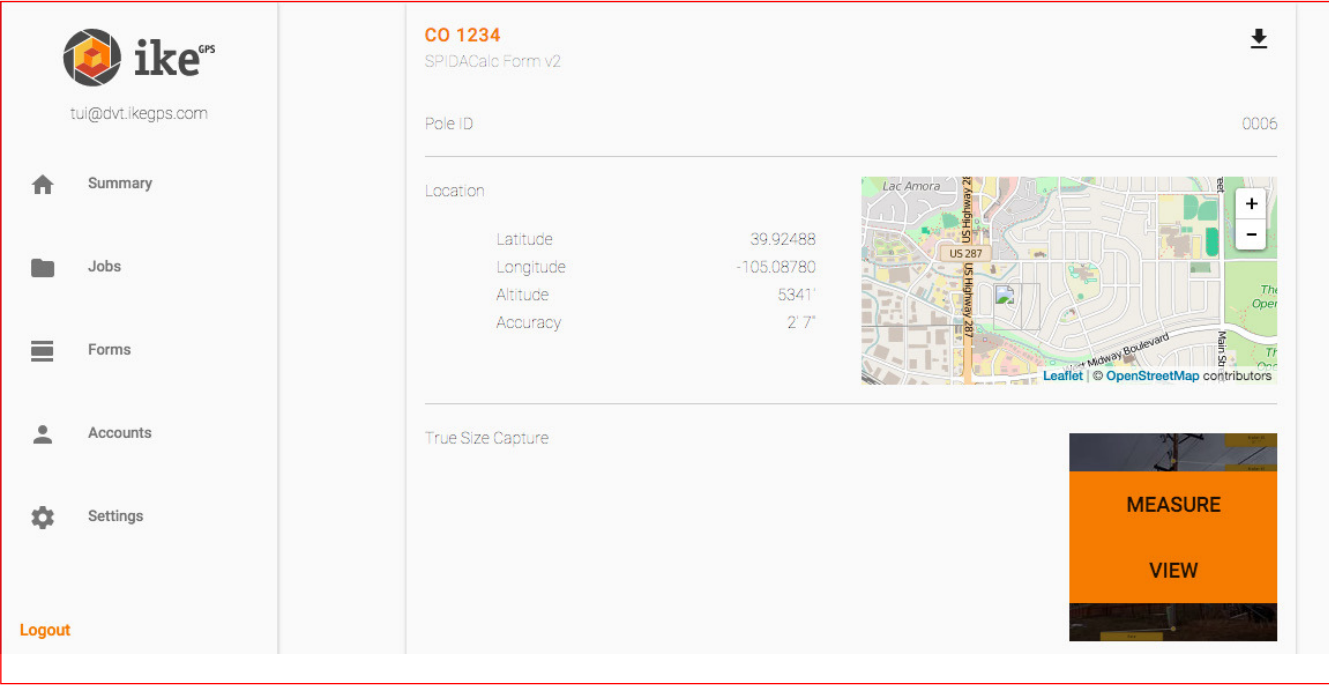


Selecting a view shows a summary of the capture, including the photo, location and measurement details.

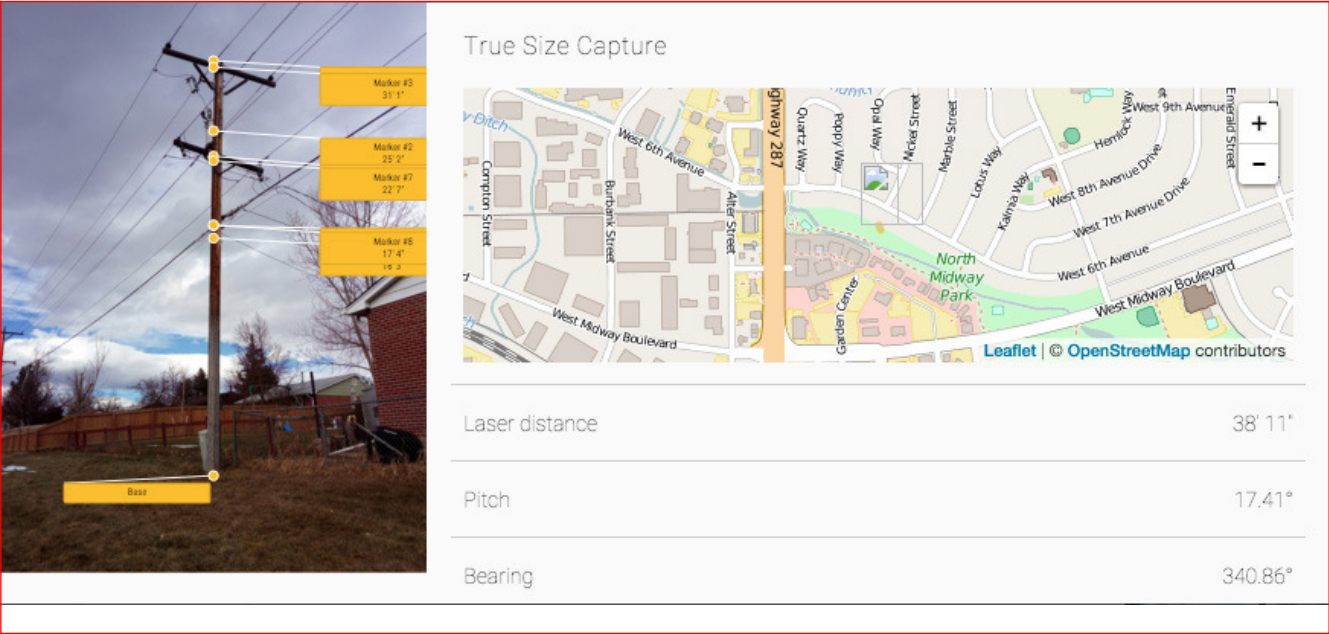


Click outside the image to close the image.

measuring from a photo



1. Set the base of the pole by clicking on the photo near the bottom of the pole.

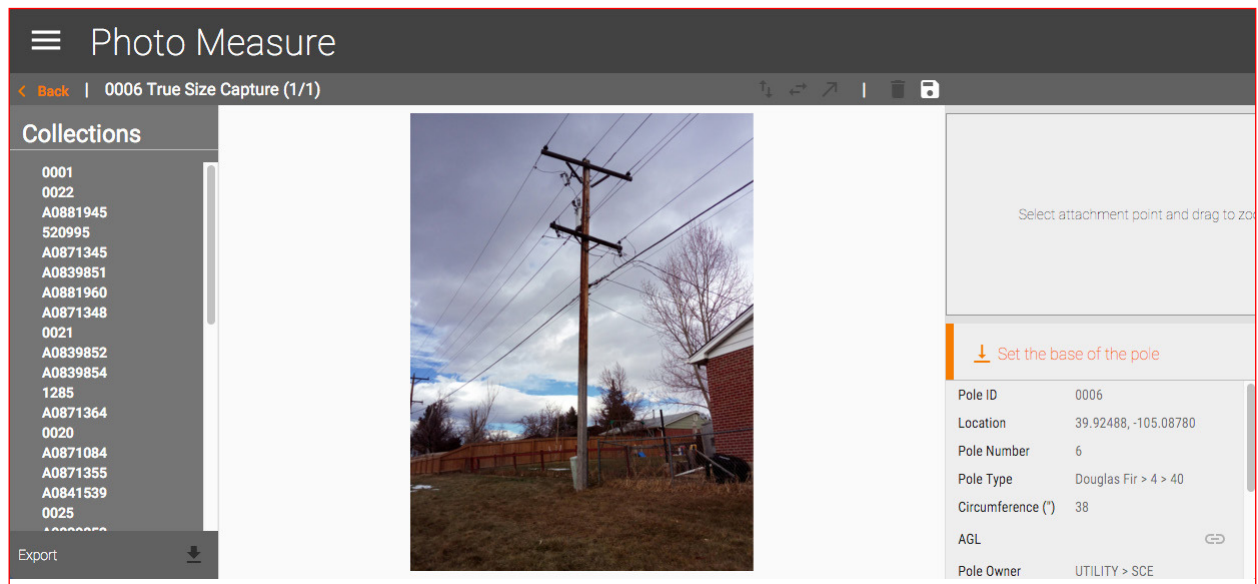

2. Select the first orange link on the right.

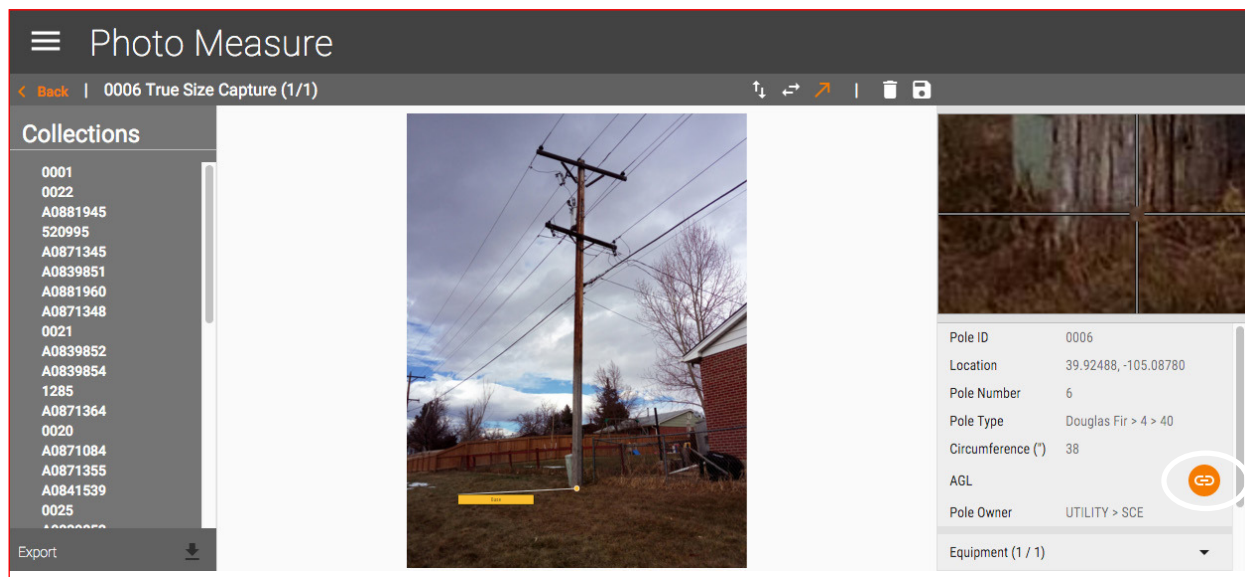

- Click on the image to calculate the height for that field. Continue doing this for the other height fields in the form.

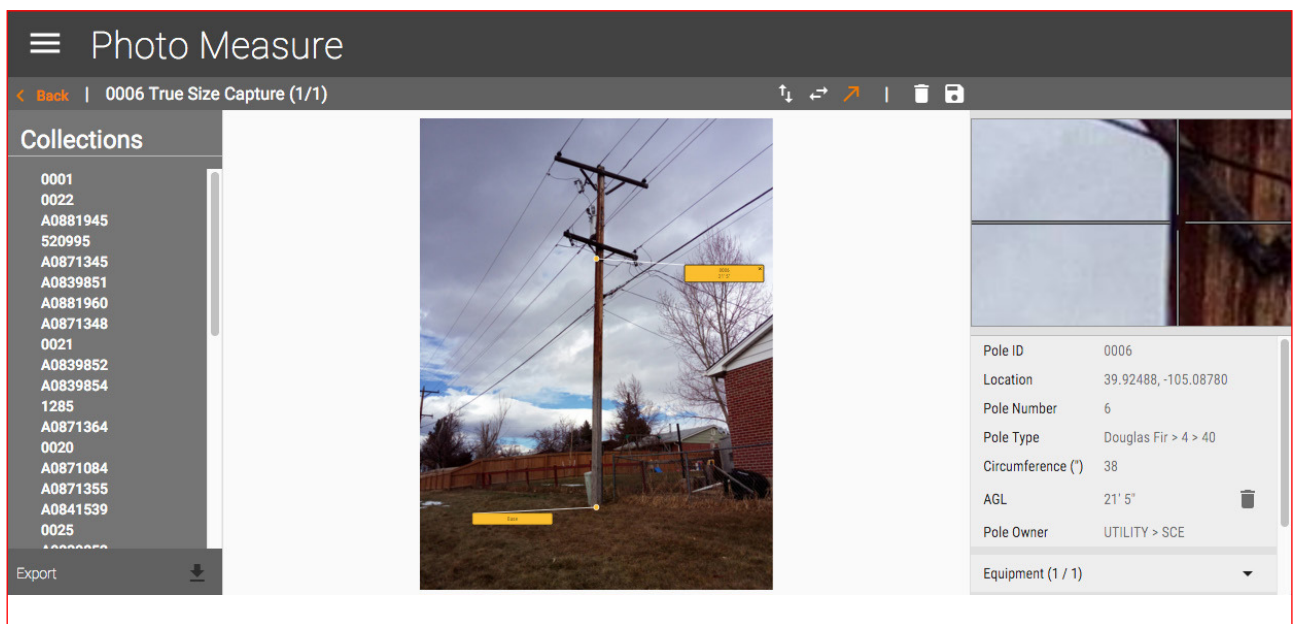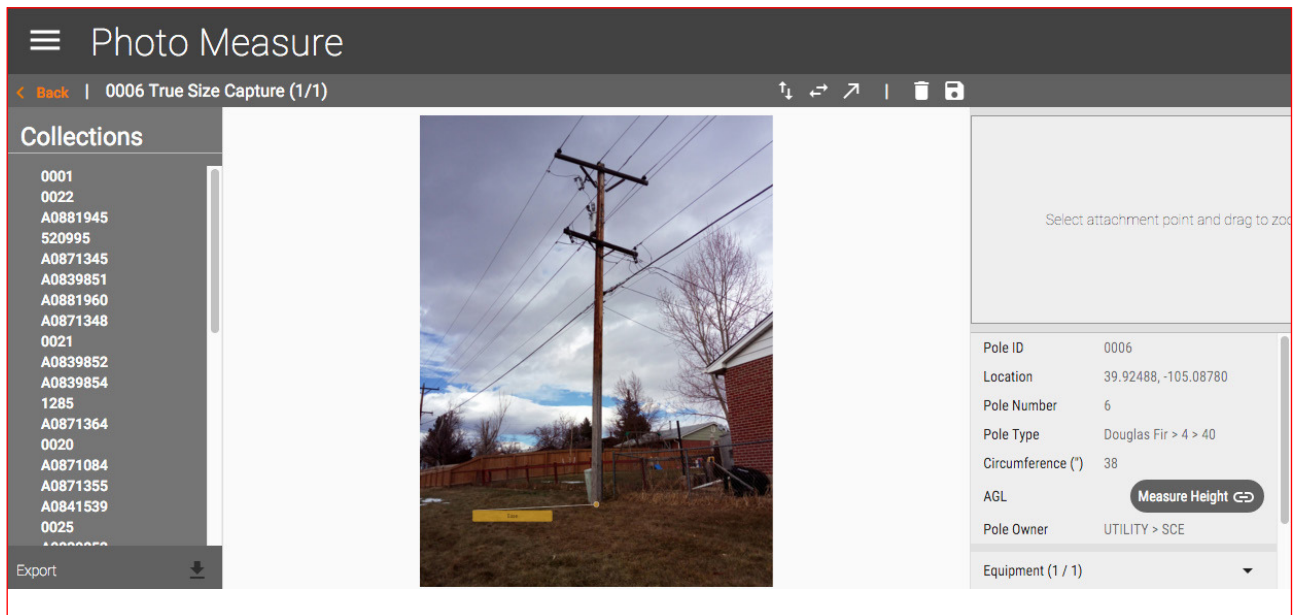

- For accurate placement, use the zoom window on the right for a closer view.
- To edit the name of the marker on photo, double click on it.
- To save your measurements, click [save icon].
- To go back to the collection screen, click [X icon]
- To delete all measurements on the photo, click [trashcan icon].

exporting

An individual collection can be exported to KML, JSON, Print (PDF) or to SPIDACalc format.

**ike**^{GPS}

tul@dvt.ikegps.com

 Summary

 Jobs

 Forms

 Accounts

 Settings

Logout

Collection 6/39

CO 1234

SPIDACalc Form v2

Pole ID


Location

Latitude39.60959

Longitude-104.99925

Altitude5386' 5"

Accuracy2' 5"

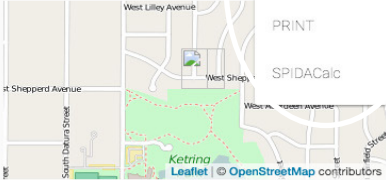

True Size Capture



Multiple collections can also be exported, by checkmarking them.

**ike**^{GPS}

tui@dvt.ikegps.com

Summary

Jobs

Forms

Accounts

Settings

[Logout](#)

CO 1234

Filter by

3 Collections selected

☐	#	↑ Date	ID	Photo
☒	1/39	21 Jan, 2016 11:40AM	A0871345	
☒	2/39	21 Jan, 2016 11:40AM	A0871346	
☒	3/39	21 Jan, 2016 11:38AM	A0871348	

KML

JSON

PRINT

SPIDACalc