Test Mode:	TX B Mode 2462 MHz

Vertical

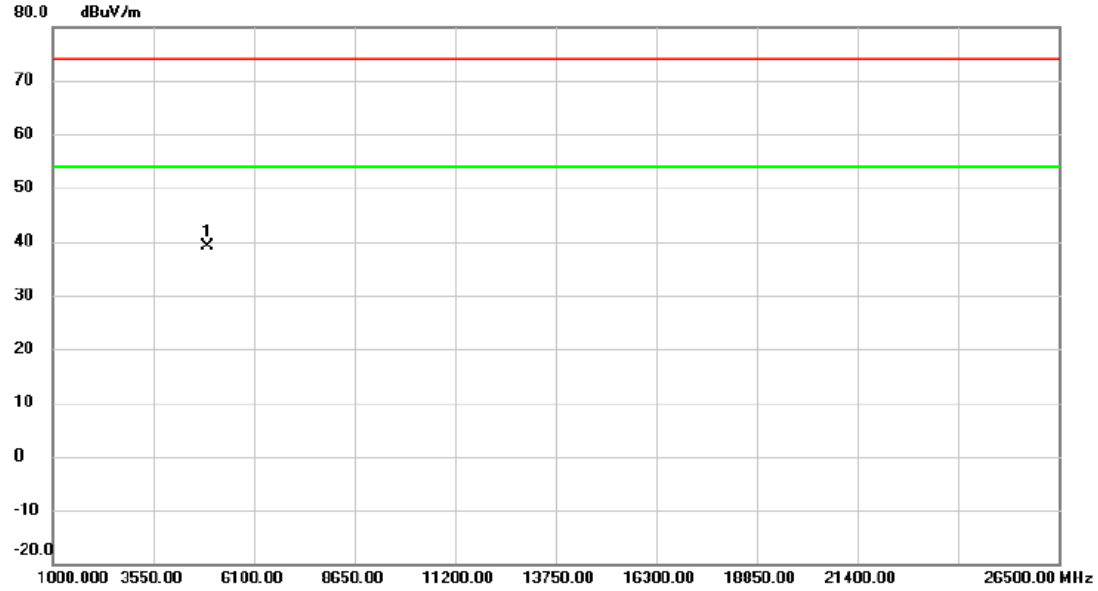

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	51.93	-12.71	39.22	74.00	-34.78	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Horizontal

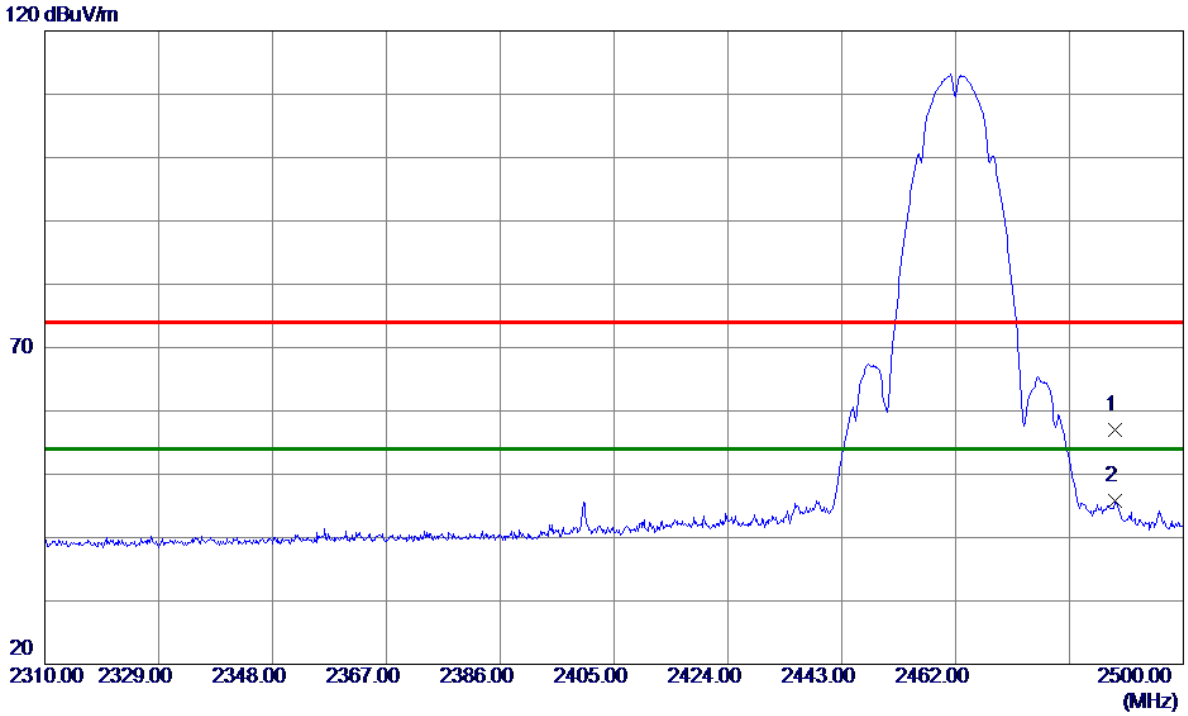

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2488.6000	23.29	33.78	57.07	74.00	-16.93	Peak	
2 *	2488.6000	11.94	33.78	45.72	54.00	-8.28	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Horizontal

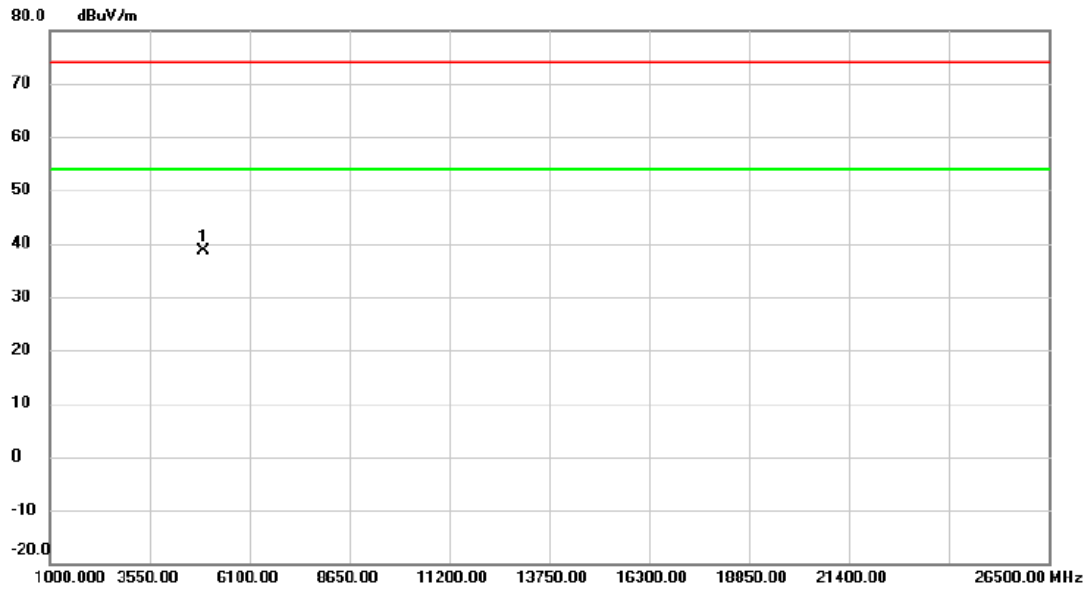

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	51.43	-12.71	38.72	74.00	-35.28	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Vertical

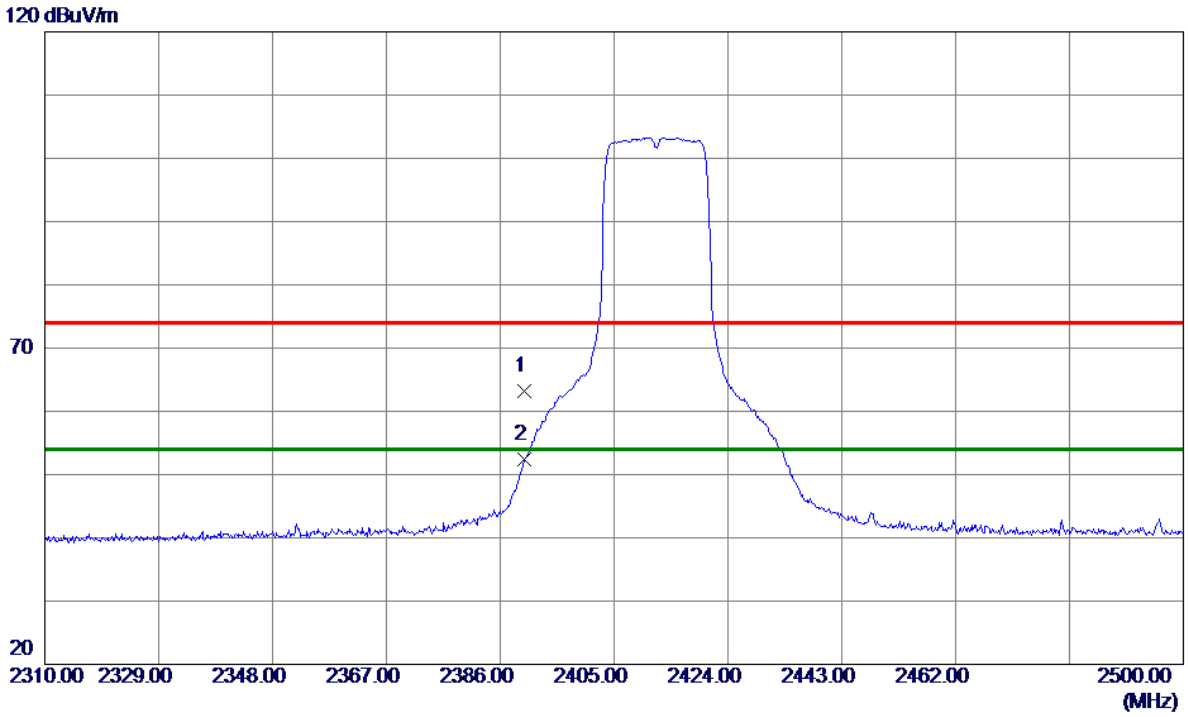

No.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	29.77	33.36	63.13	74.00	-10.87	Peak	
2 *	2390.0000	19.01	33.36	52.37	54.00	-1.63	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Vertical

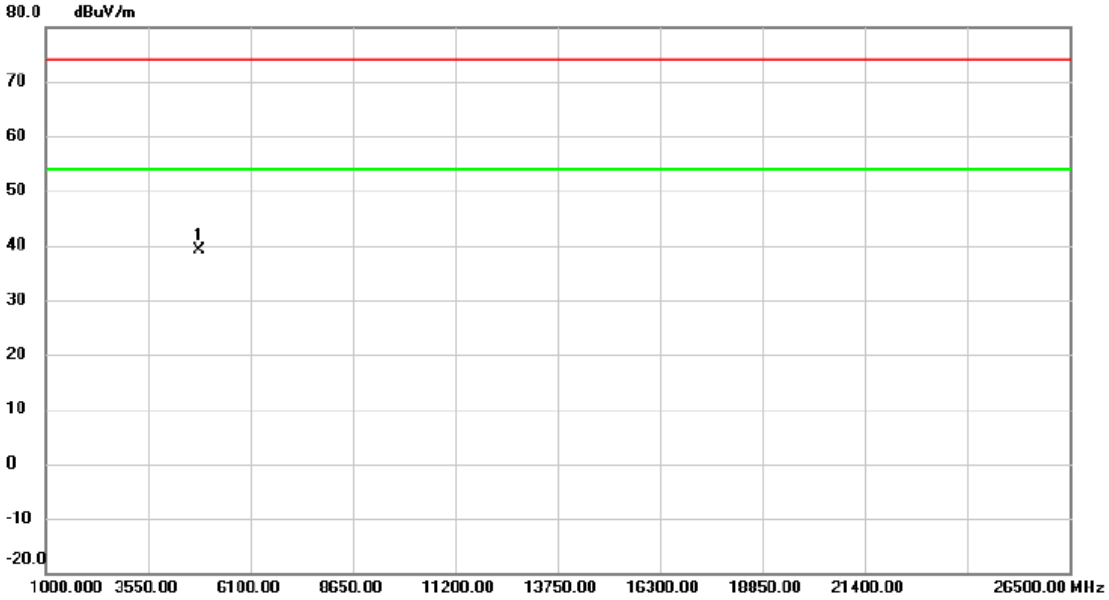

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	52.23	-13.03	39.20	74.00	-34.80	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Horizontal

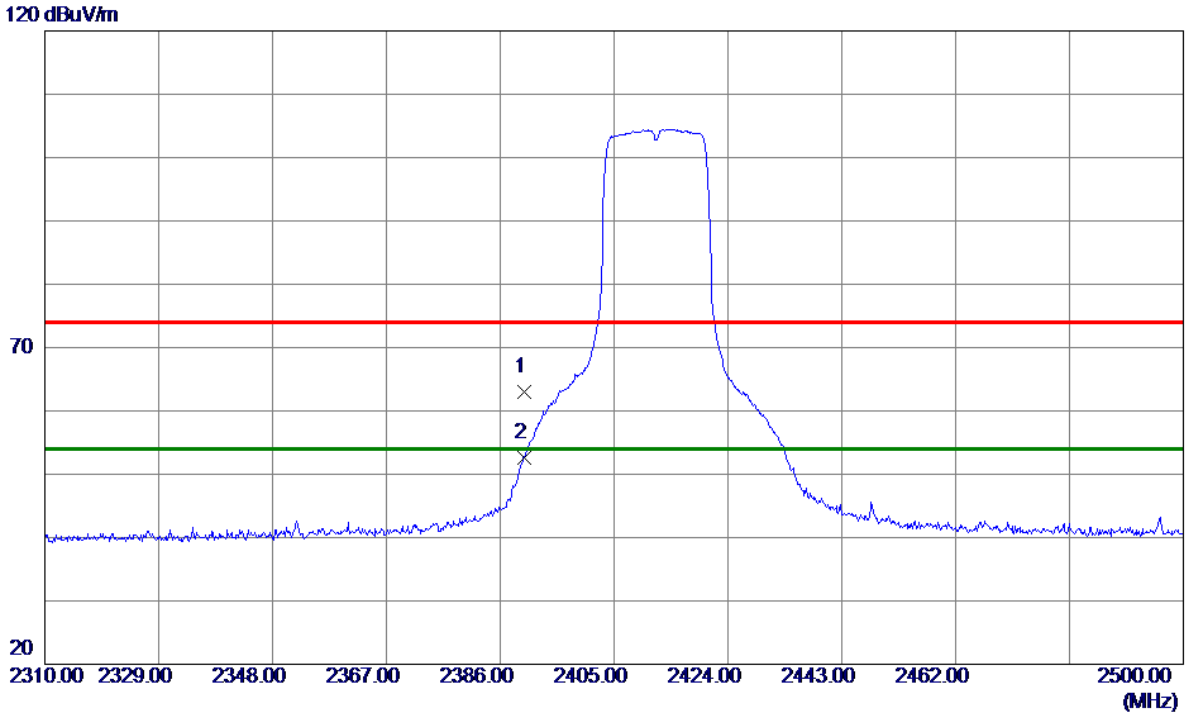

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	29.73	33.36	63.09	74.00	-10.91	Peak	
2 *	2390.0000	19.28	33.36	52.64	54.00	-1.36	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Horizontal

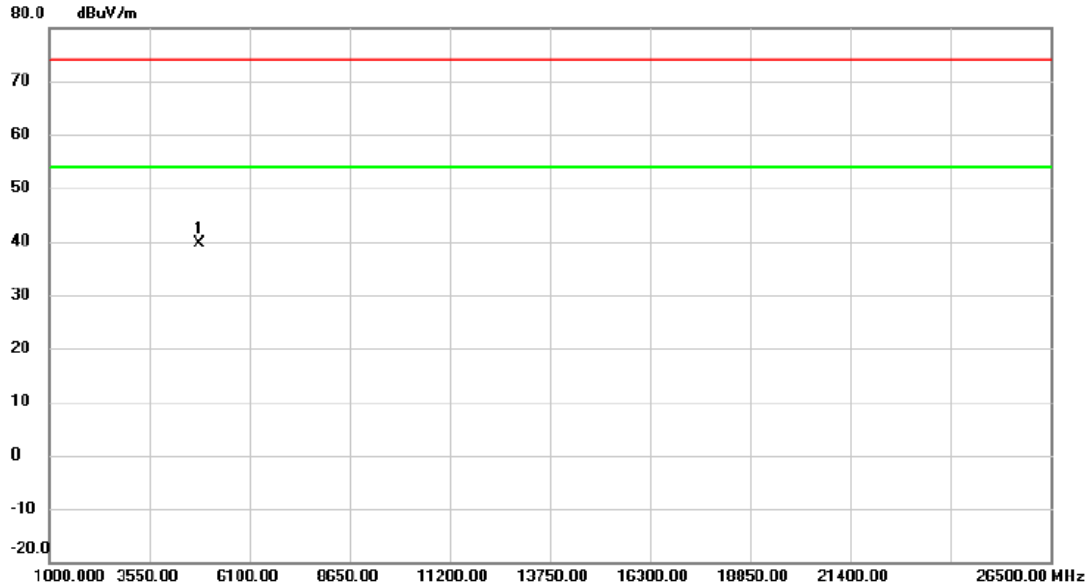

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	52.76	-13.03	39.73	74.00	-34.27	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Vertical

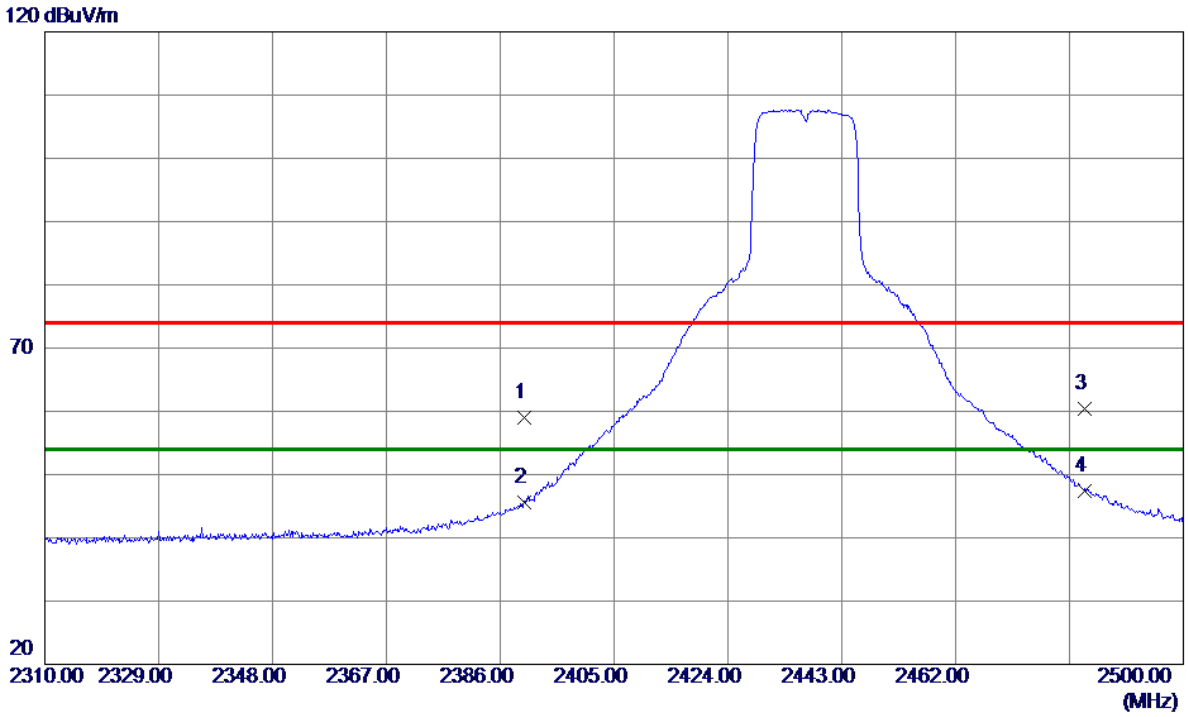

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	25.67	33.36	59.03	74.00	-14.97	Peak	
2	2390.0000	12.18	33.36	45.54	54.00	-8.46	AVG	
3	2483.5000	26.68	33.76	60.44	74.00	-13.56	Peak	
4 *	2483.5000	13.58	33.76	47.34	54.00	-6.66	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Vertical

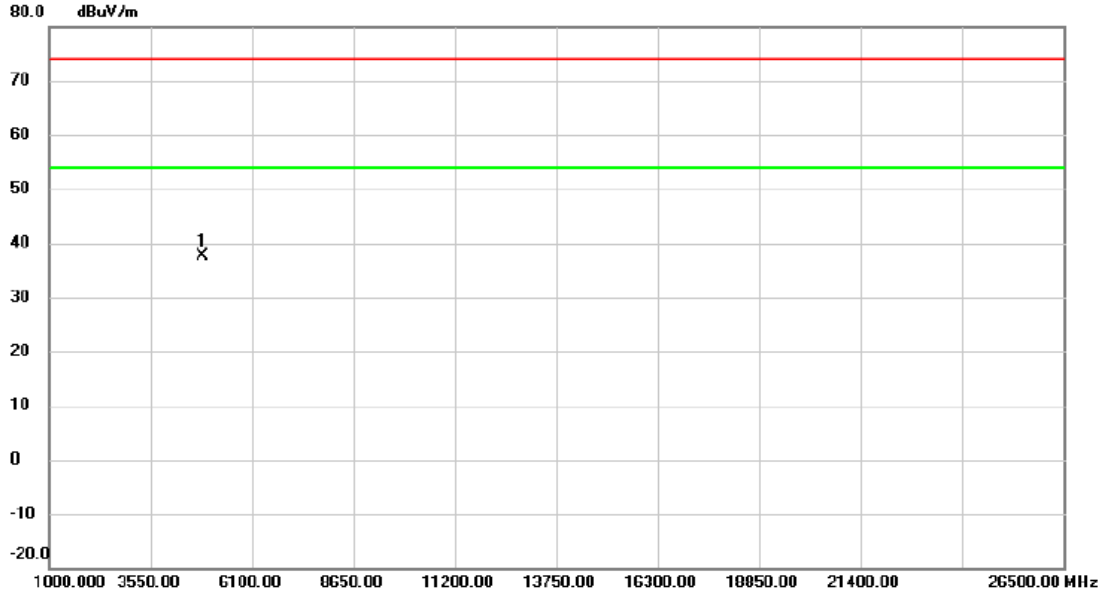

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.51	-12.86	37.65	74.00	-36.35	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Horizontal

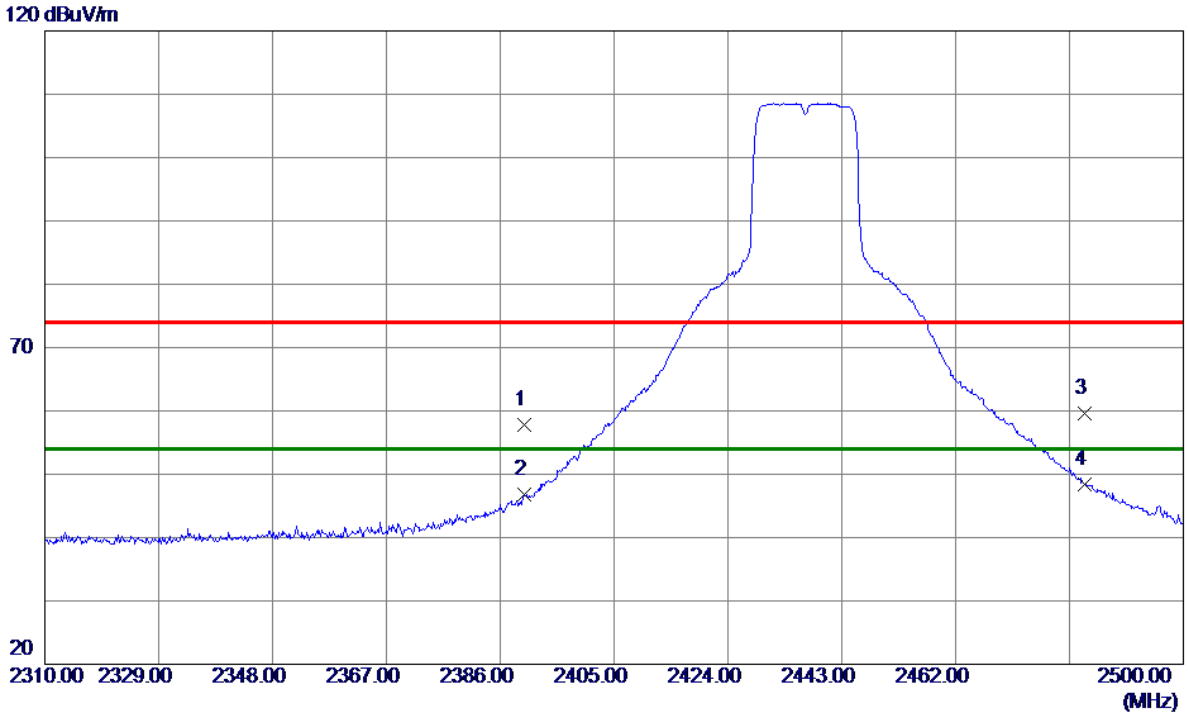

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.50	33.36	57.86	74.00	-16.14	Peak	
2	2390.0000	13.50	33.36	46.86	54.00	-7.14	AVG	
3	2483.5000	25.78	33.76	59.54	74.00	-14.46	Peak	
4 *	2483.5000	14.72	33.76	48.48	54.00	-5.52	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Horizontal

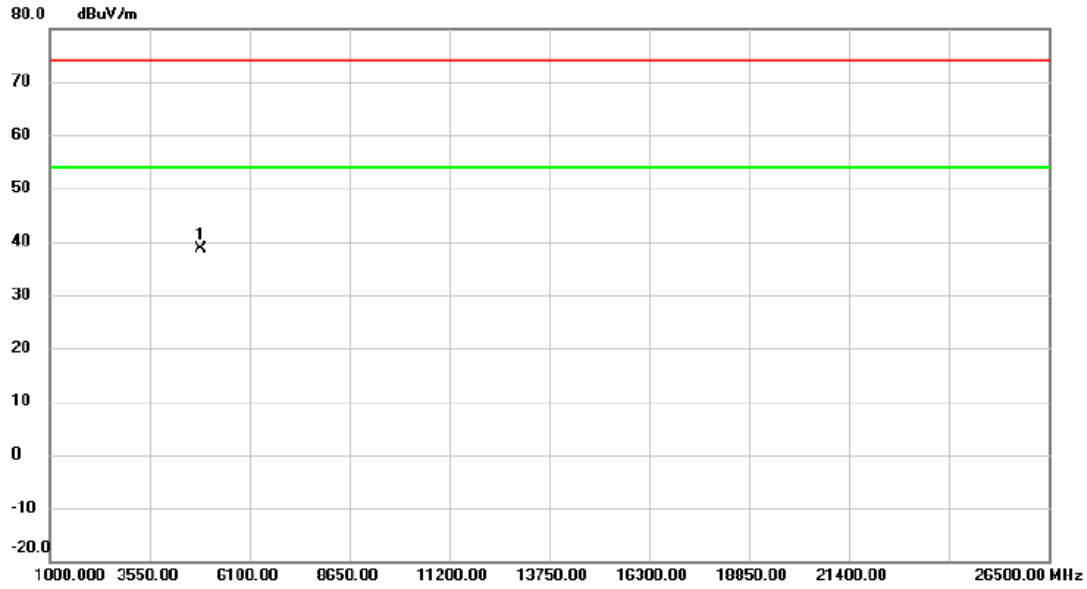

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	51.45	-12.86	38.59	74.00	-35.41	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Vertical

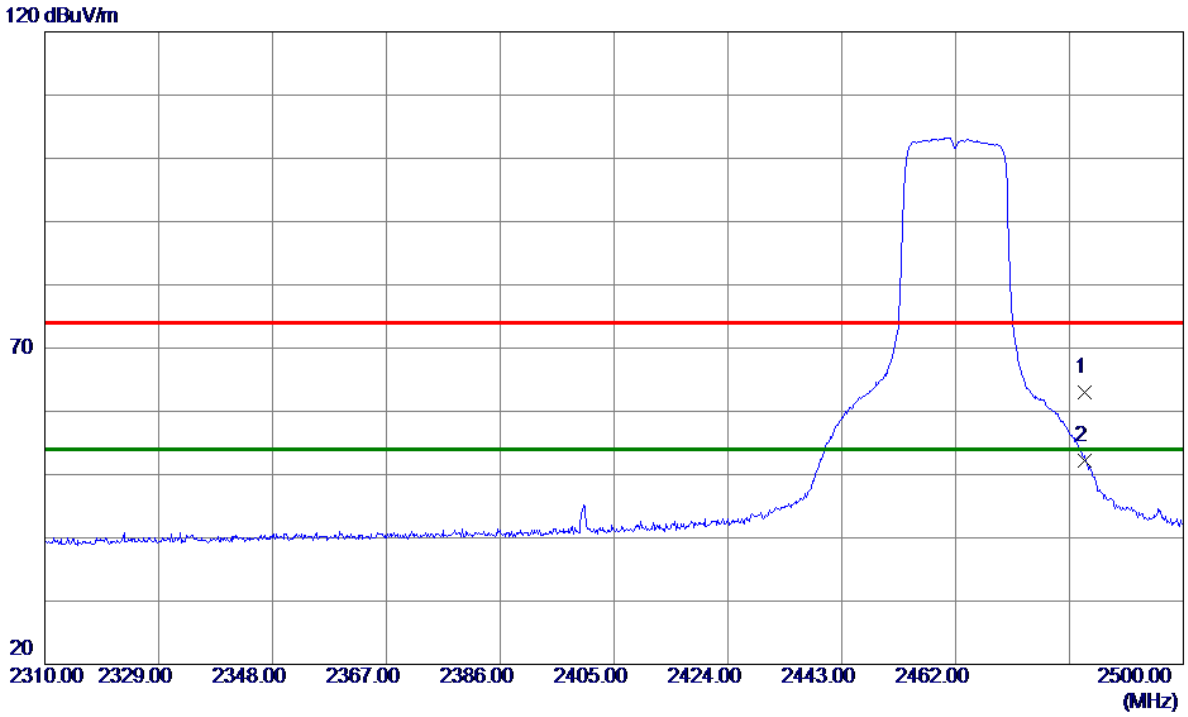

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	29.23	33.76	62.99	74.00	-11.01	Peak	
2 *	2483.5000	18.37	33.76	52.13	54.00	-1.87	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Vertical

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	51.35	-12.71	38.64	74.00	-35.36	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Horizontal

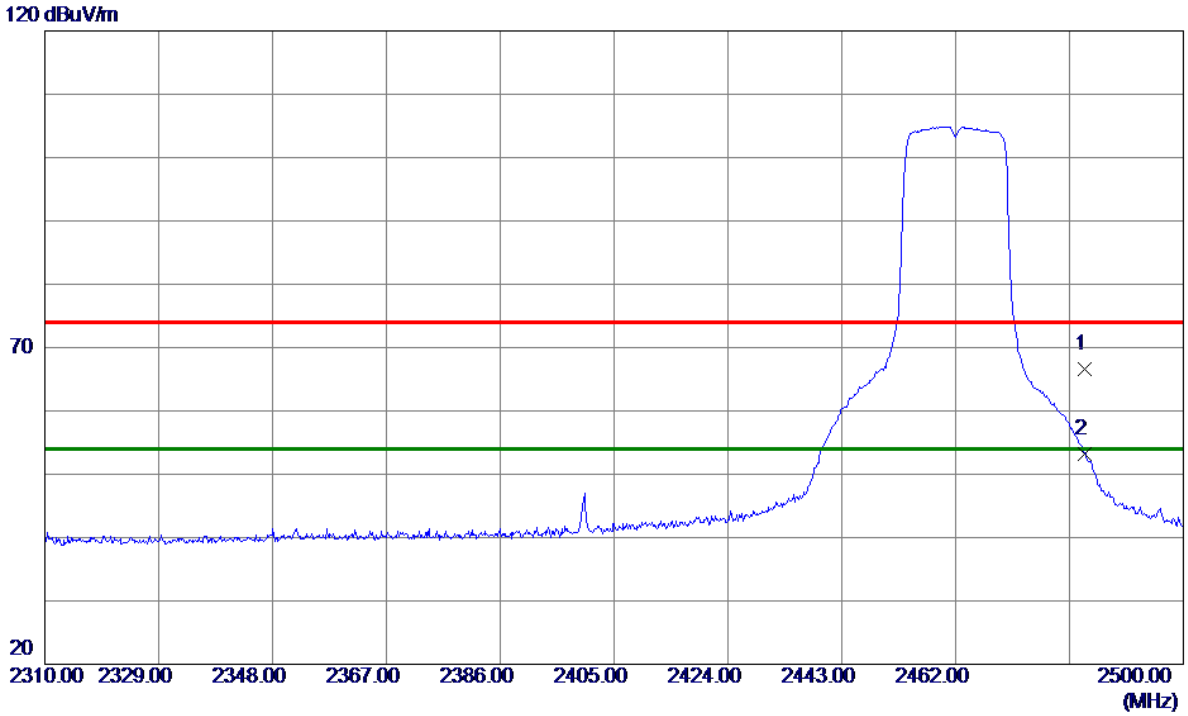

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	32.83	33.76	66.59	74.00	-7.41	Peak	
2 *	2483.5000	19.49	33.76	53.25	54.00	-0.75	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Horizontal

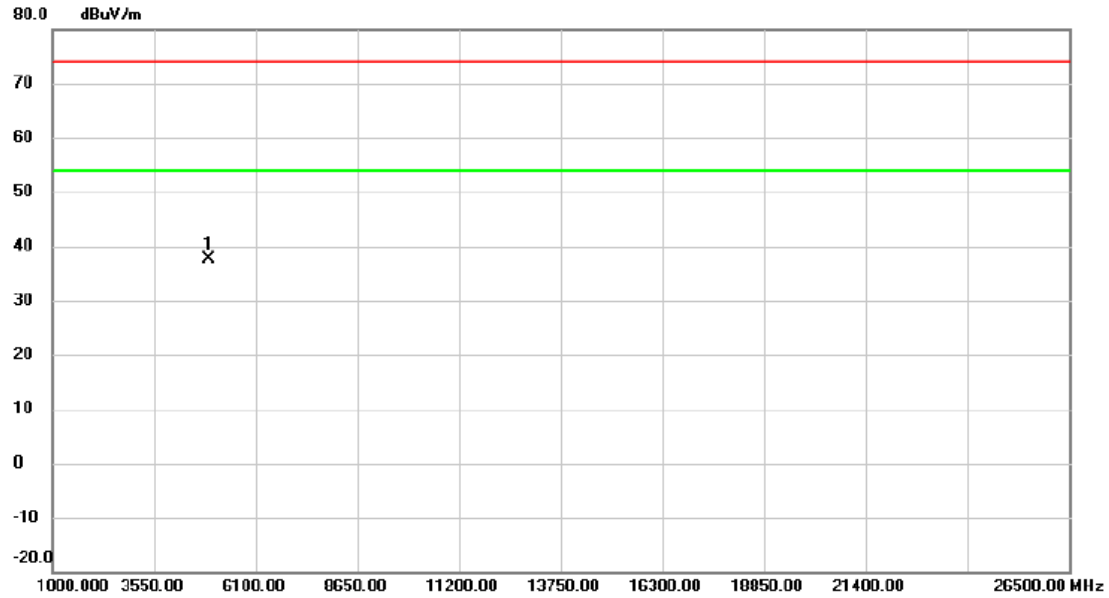

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	50.44	-12.71	37.73	74.00	-36.27	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Vertical

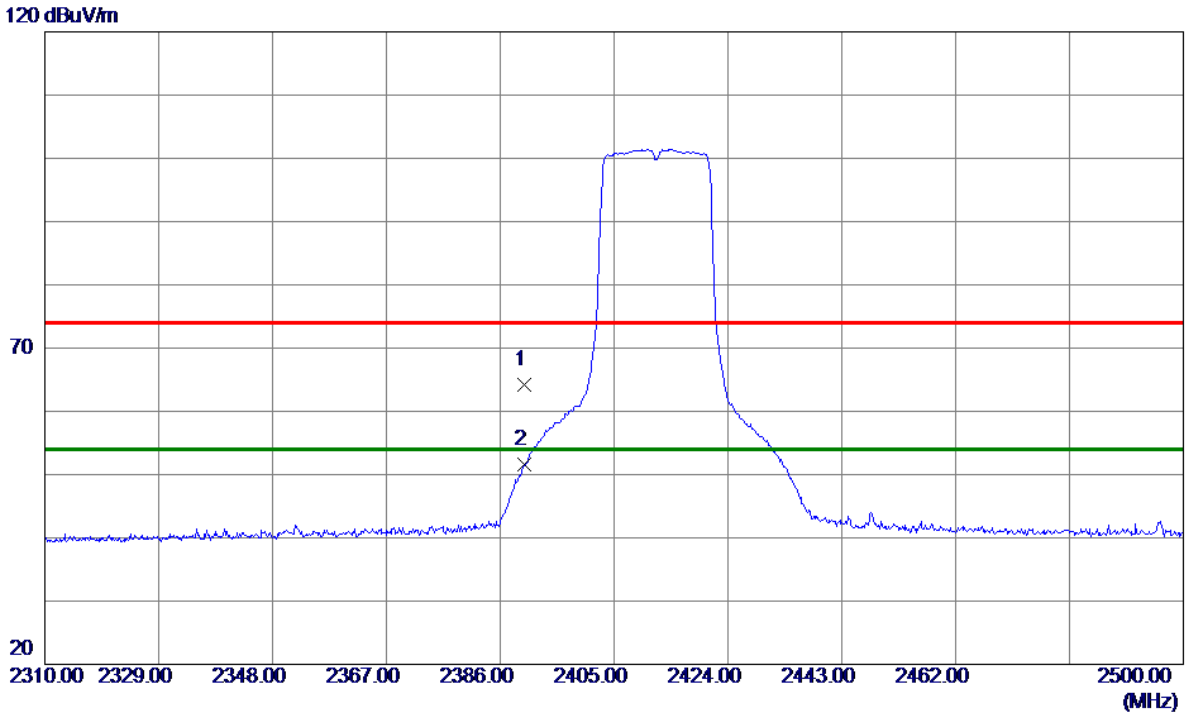

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	30.89	33.36	64.25	74.00	-9.75	Peak	
2 *	2390.0000	18.17	33.36	51.53	54.00	-2.47	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Vertical

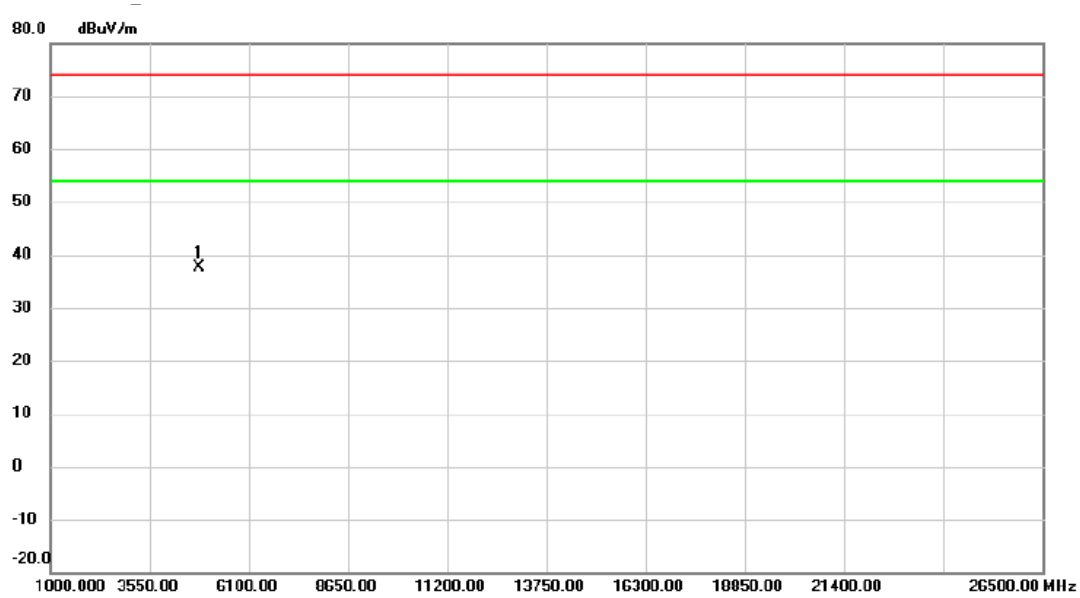

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	50.68	-13.03	37.65	74.00	-36.35	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Horizontal

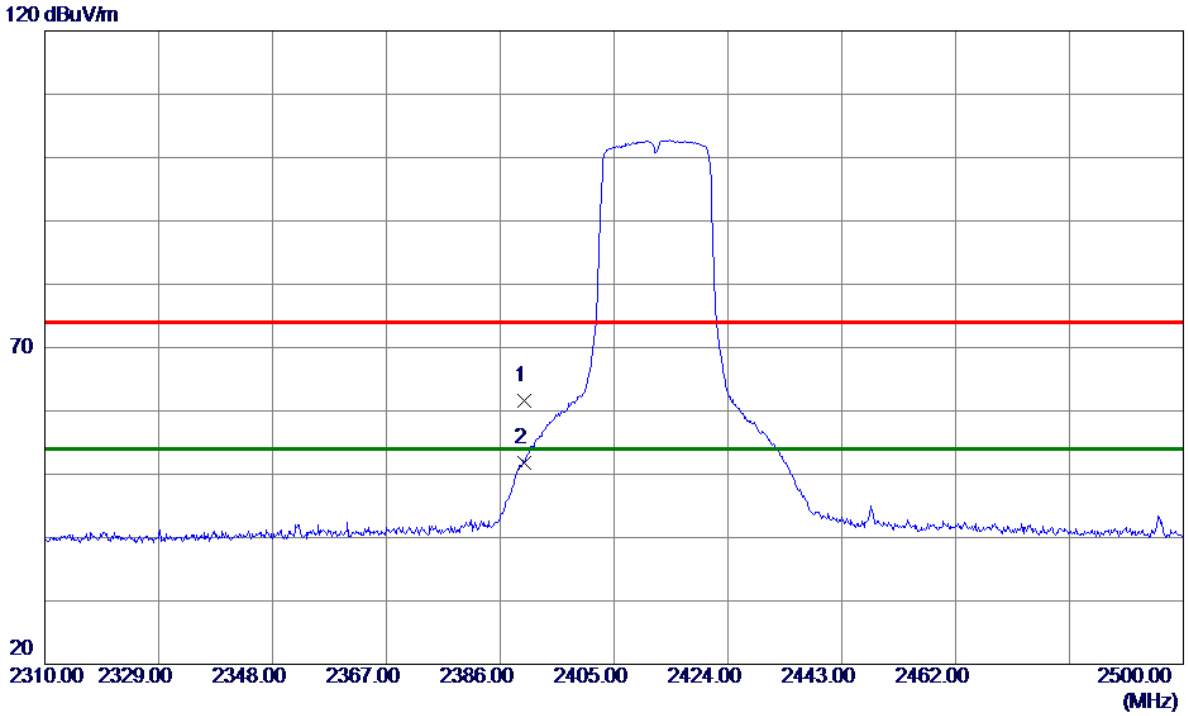

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	28.18	33.36	61.54	74.00	-12.46	Peak	
2 *	2390.0000	18.42	33.36	51.78	54.00	-2.22	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Horizontal

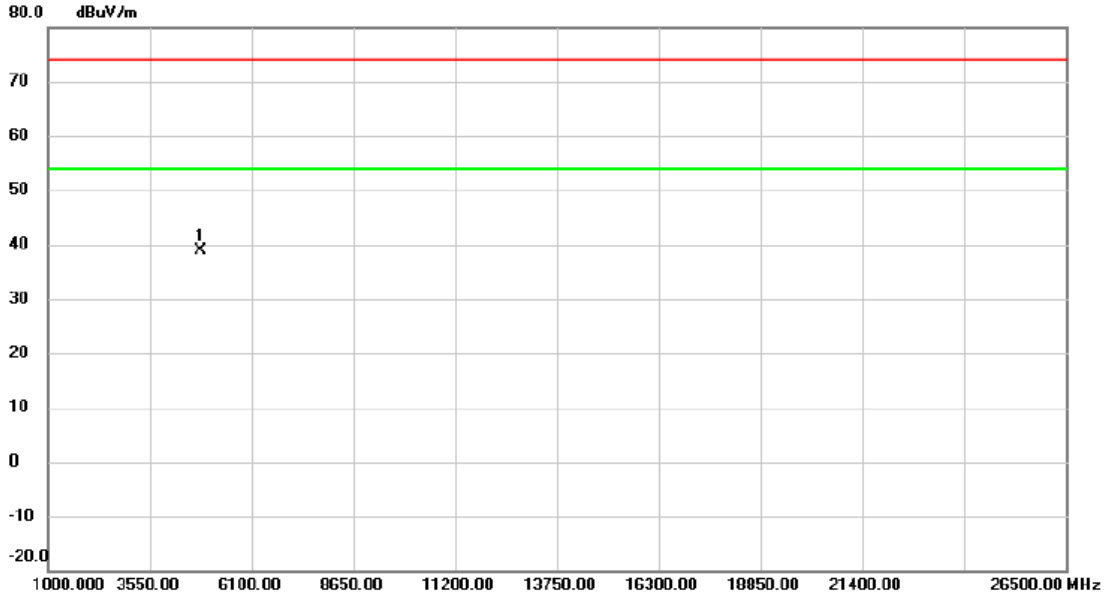

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	51.86	-13.03	38.83	74.00	-35.17	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Vertical

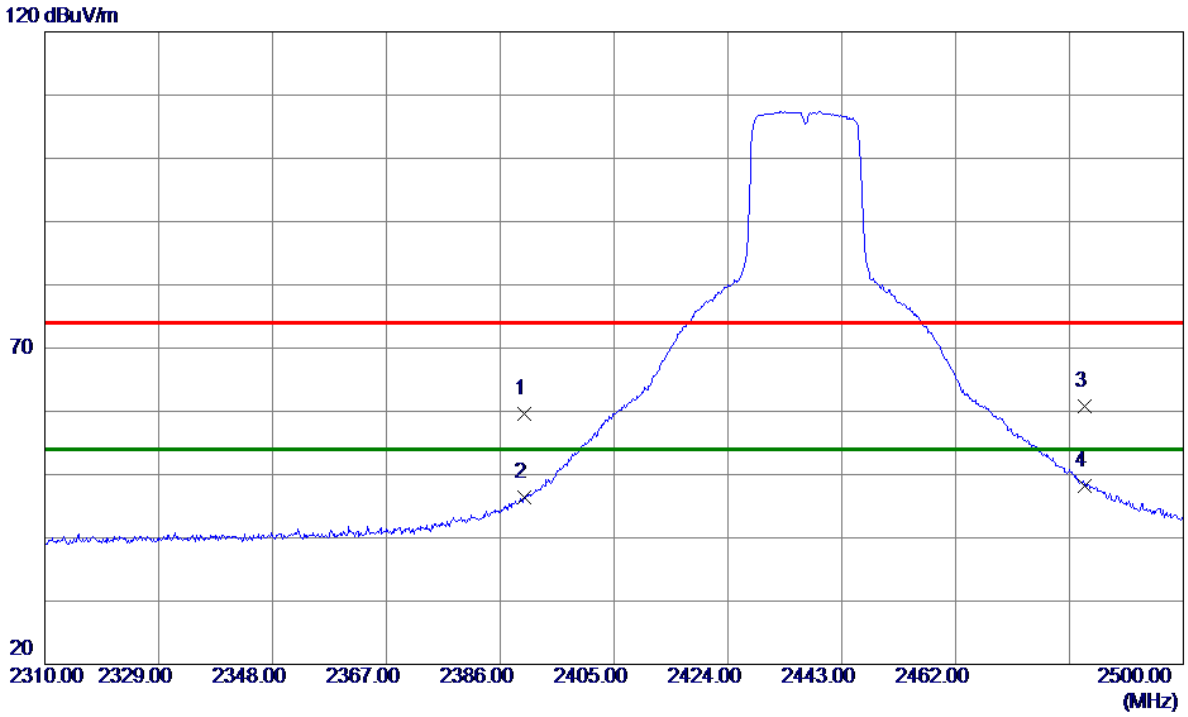

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	26.17	33.36	59.53	74.00	-14.47	Peak	
2	2390.0000	13.02	33.36	46.38	54.00	-7.62	AVG	
3	2483.5000	27.11	33.76	60.87	74.00	-13.13	Peak	
4 *	2483.5000	14.35	33.76	48.11	54.00	-5.89	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Vertical

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	51.11	-12.86	38.25	74.00	-35.75	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Horizontal

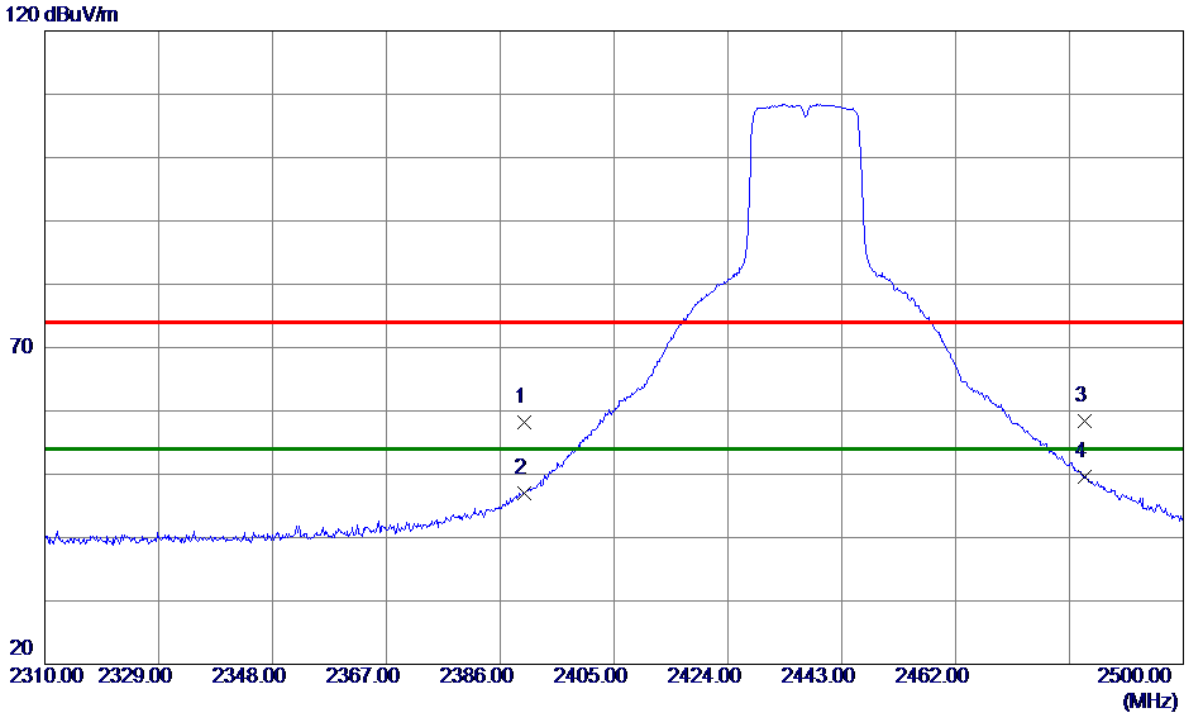

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.88	33.36	58.24	74.00	-15.76	Peak	
2	2390.0000	13.73	33.36	47.09	54.00	-6.91	AVG	
3	2483.5000	24.66	33.76	58.42	74.00	-15.58	Peak	
4 *	2483.5000	15.76	33.76	49.52	54.00	-4.48	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Horizontal

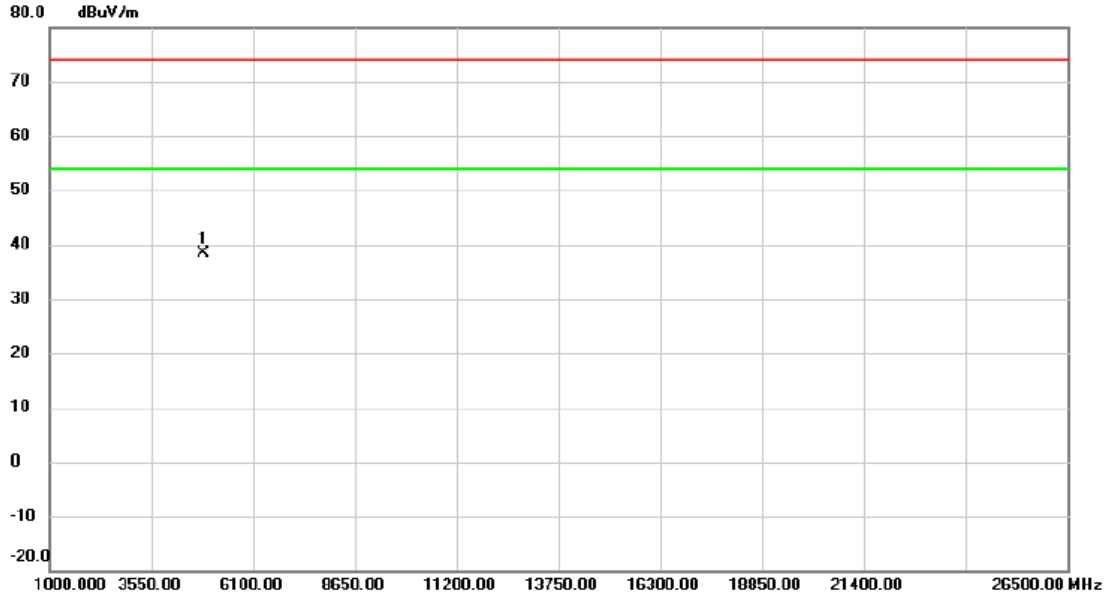

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	51.21	-12.86	38.35	74.00	-35.65	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Vertical

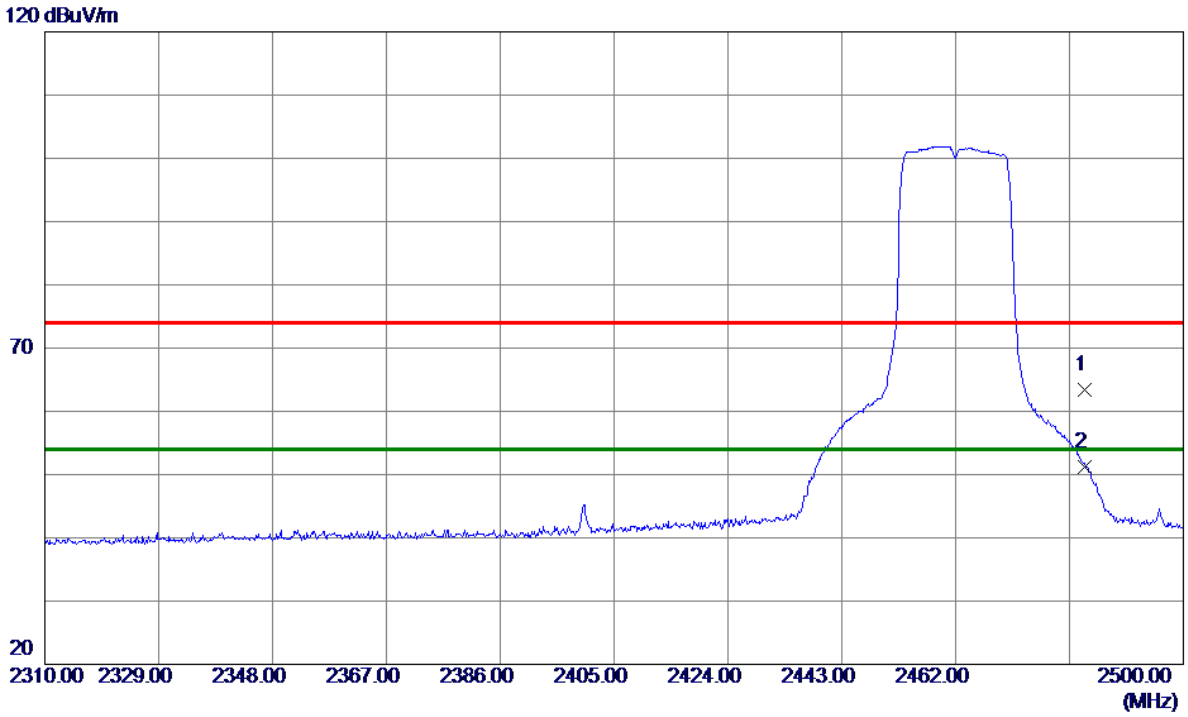

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	29.66	33.76	63.42	74.00	-10.58	Peak	
2 *	2483.5000	17.43	33.76	51.19	54.00	-2.81	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Vertical

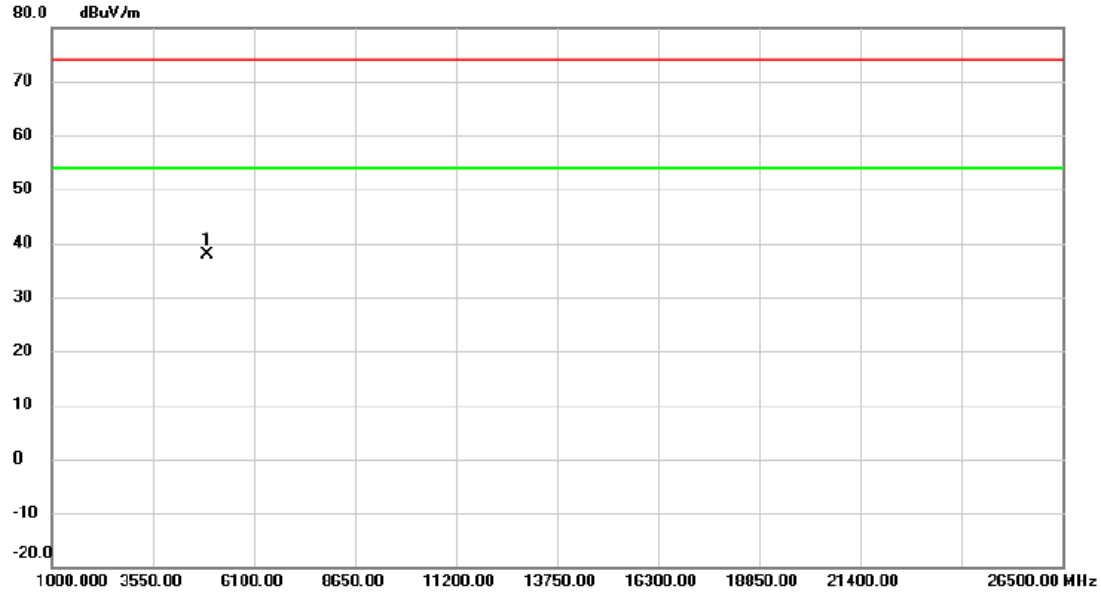

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	50.63	-12.71	37.92	74.00	-36.08	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Horizontal

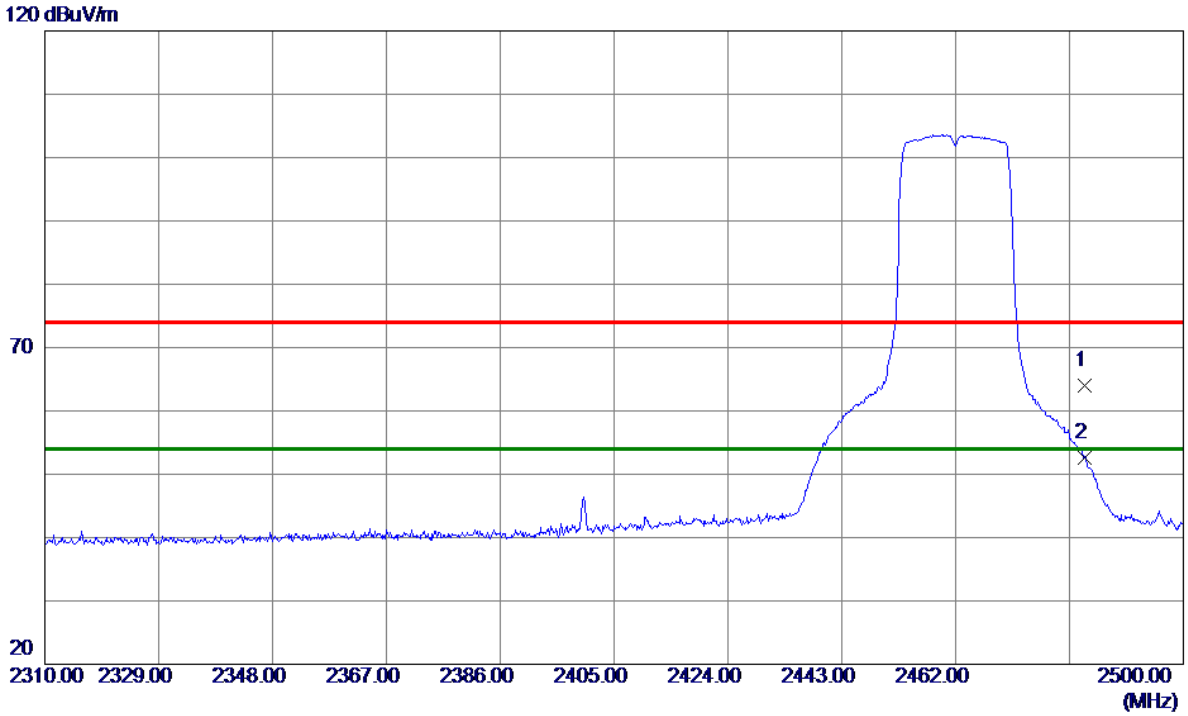

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	30.17	33.76	63.93	74.00	-10.07	Peak	
2 *	2483.5000	18.90	33.76	52.66	54.00	-1.34	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Horizontal

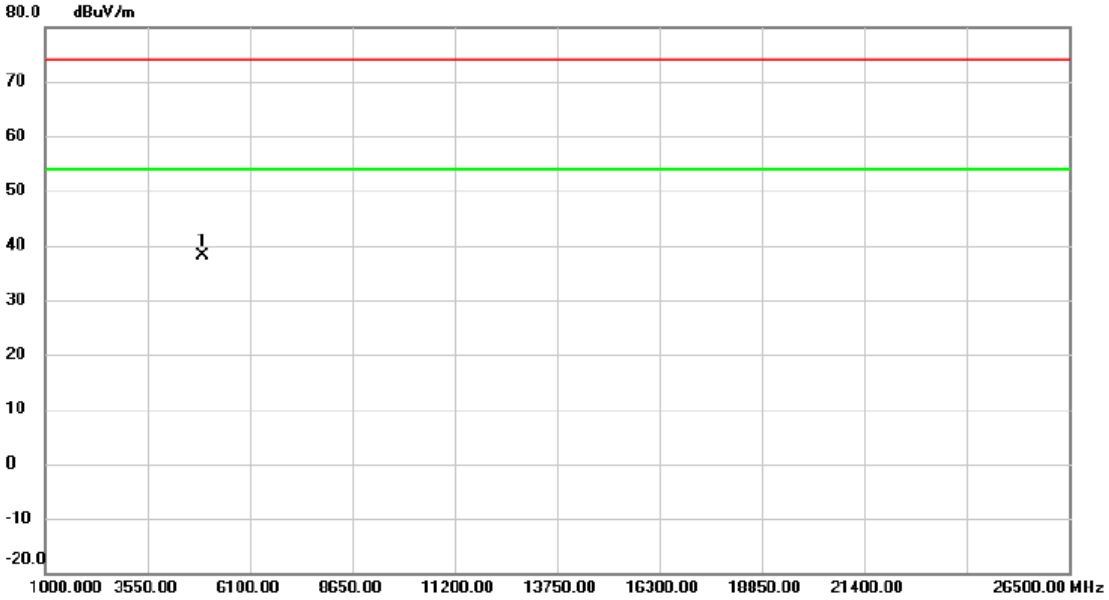

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	50.91	-12.71	38.20	74.00	-35.80	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Vertical

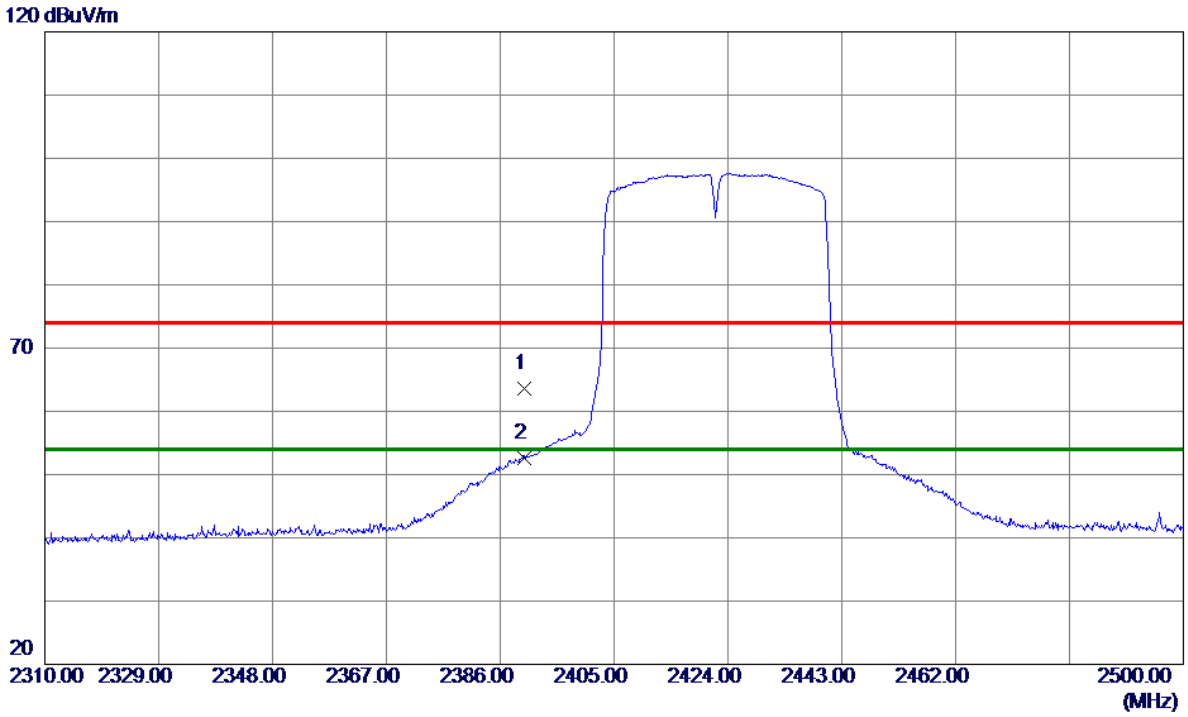

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	30.30	33.36	63.66	74.00	-10.34	Peak	
2 *	2390.0000	19.31	33.36	52.67	54.00	-1.33	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Vertical

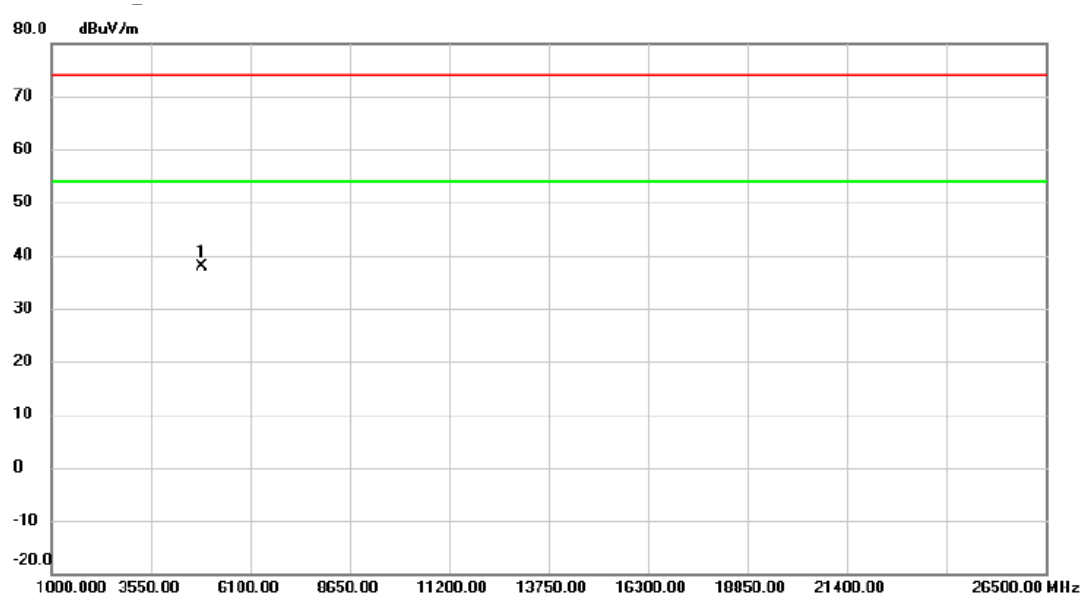

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4844.000	50.85	-12.96	37.89	74.00	-36.11	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Horizontal

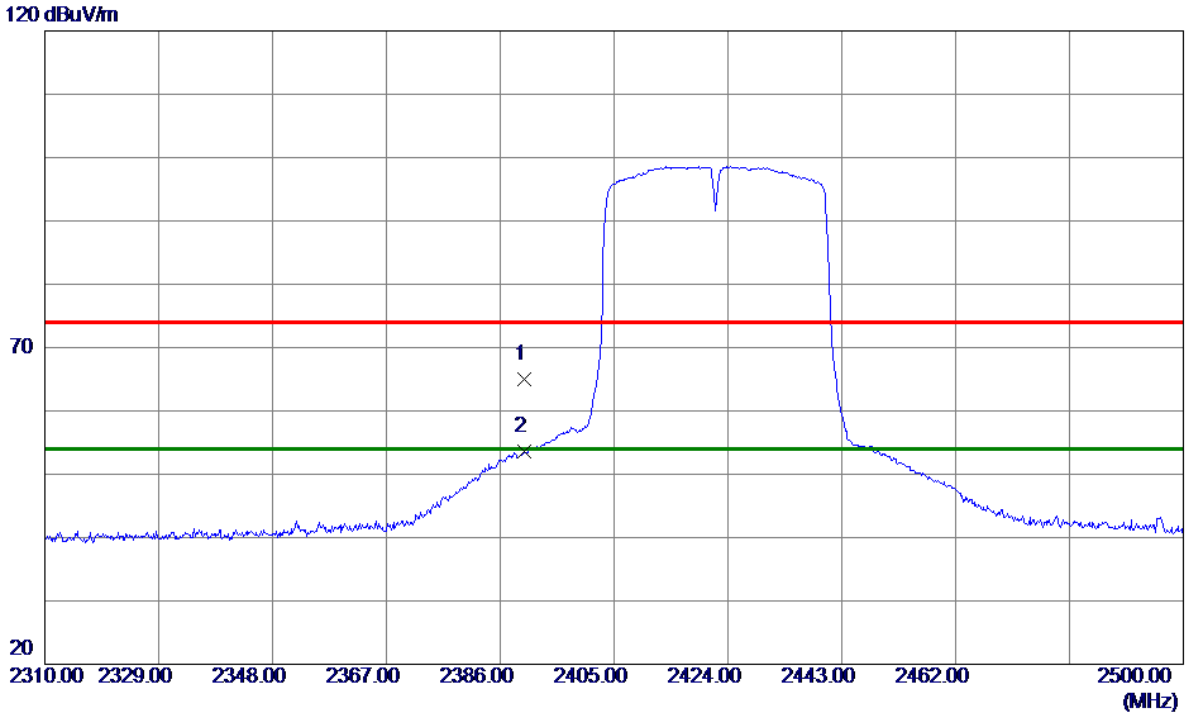

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	31.66	33.36	65.02	74.00	-8.98	Peak	
2 *	2390.0000	20.18	33.36	53.54	54.00	-0.46	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Horizontal

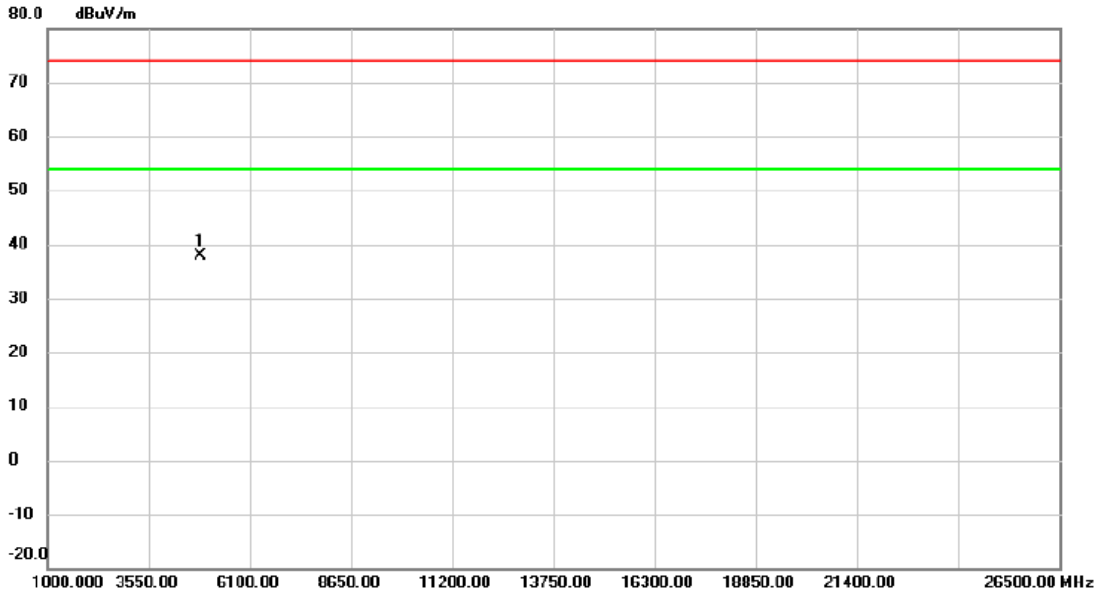

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4844.000	50.76	-12.96	37.80	74.00	-36.20	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Vertical

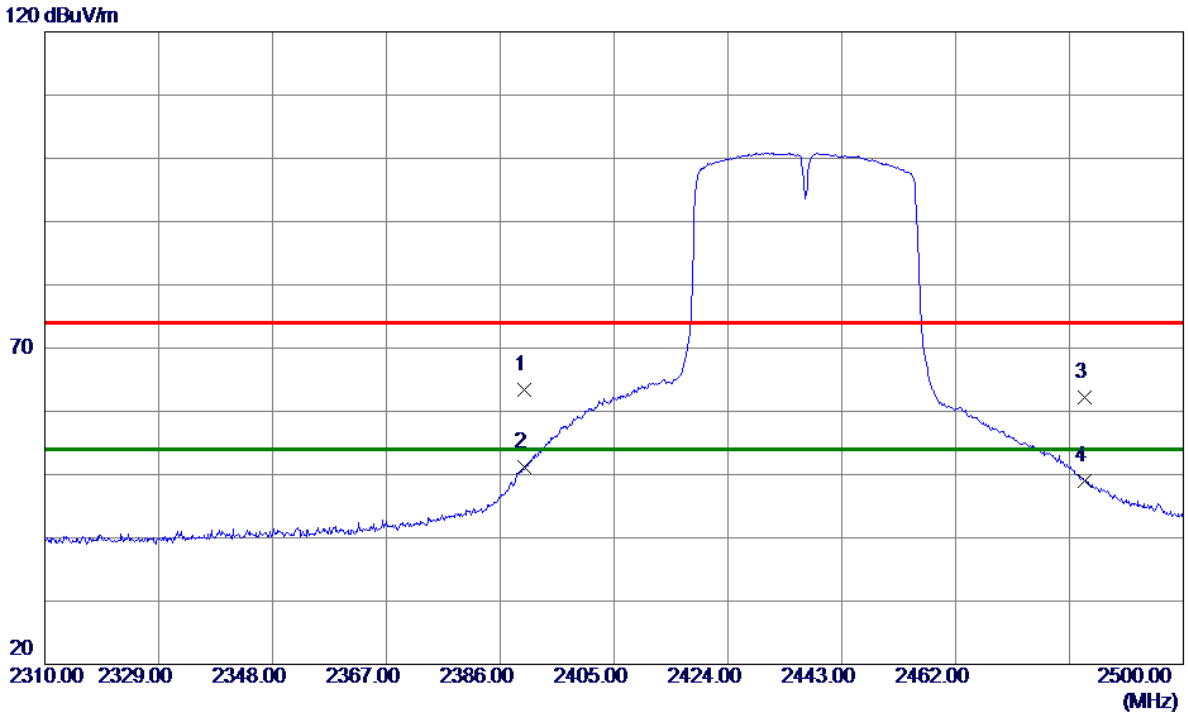

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	29.96	33.36	63.32	74.00	-10.68	Peak	
2 *	2390.0000	17.77	33.36	51.13	54.00	-2.87	AVG	
3	2483.5000	28.49	33.76	62.25	74.00	-11.75	Peak	
4	2483.5000	15.18	33.76	48.94	54.00	-5.06	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Vertical

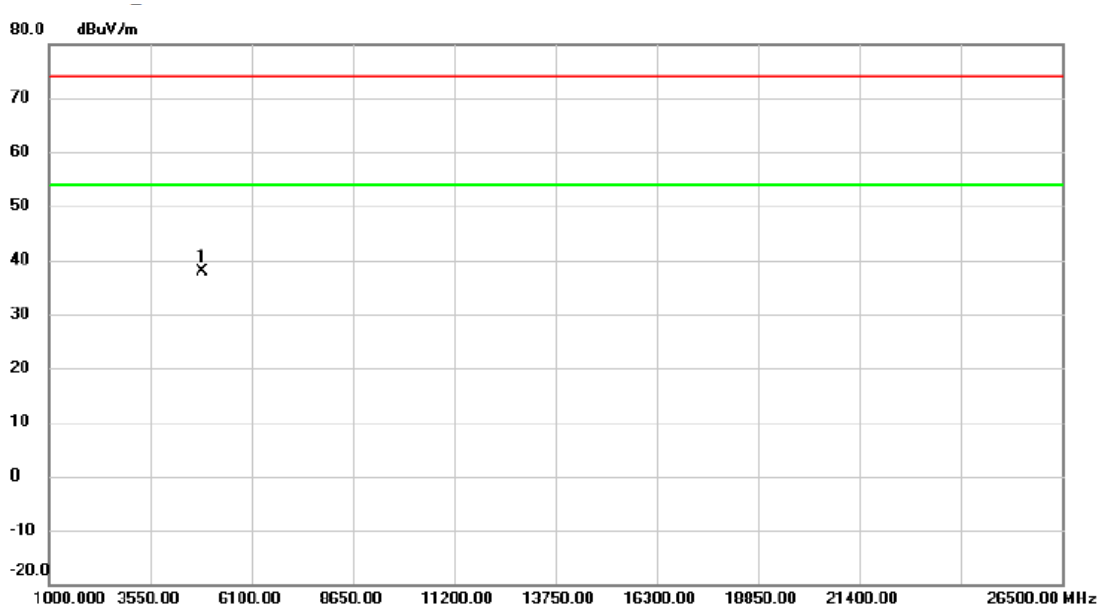

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.73	-12.86	37.87	74.00	-36.13	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Horizontal

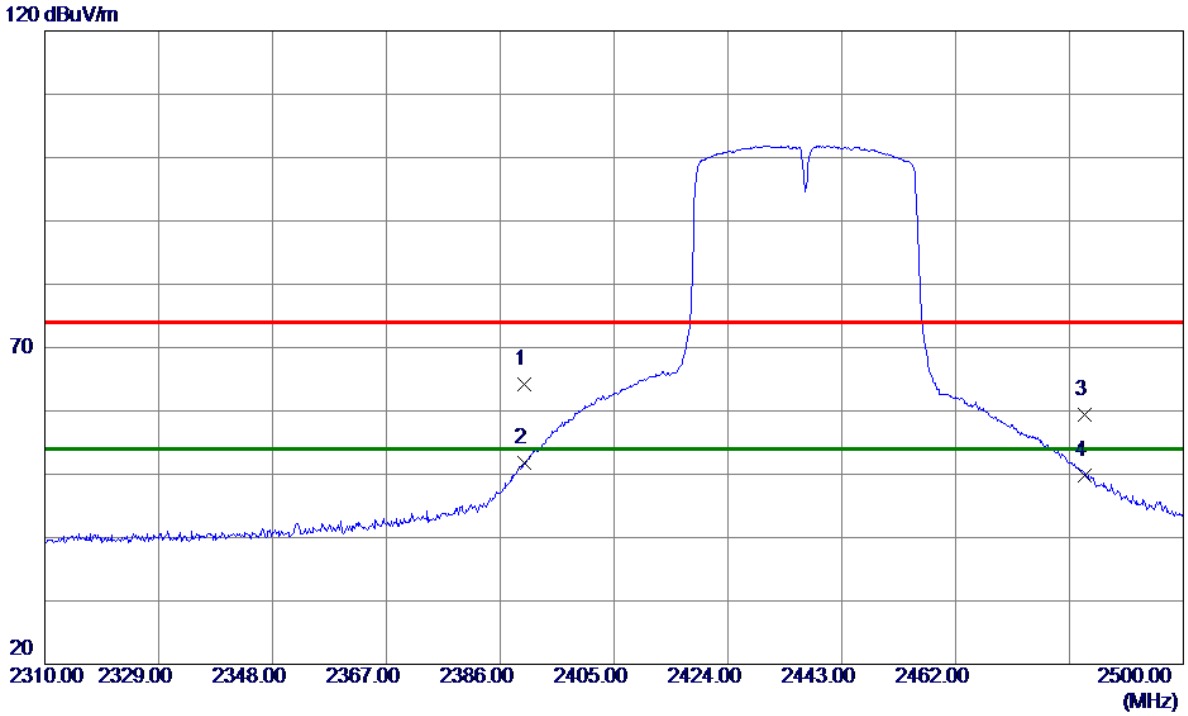

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	30.77	33.36	64.13	74.00	-9.87	Peak	
2 *	2390.0000	18.38	33.36	51.74	54.00	-2.26	AVG	
3	2483.5000	25.66	33.76	59.42	74.00	-14.58	Peak	
4	2483.5000	16.05	33.76	49.81	54.00	-4.19	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Horizontal

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.26	-12.86	37.40	74.00	-36.60	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Vertical

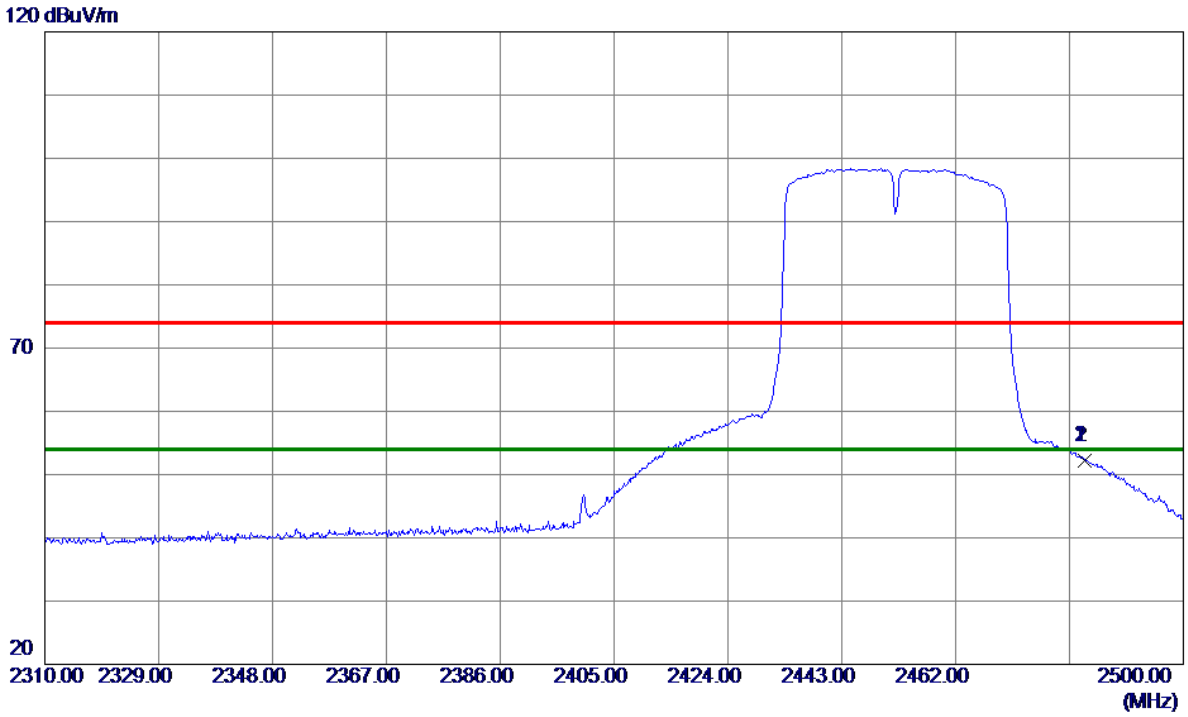

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	18.50	33.76	52.26	74.00	-21.74	Peak	
2 *	2483.5000	18.50	33.76	52.26	54.00	-1.74	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Vertical

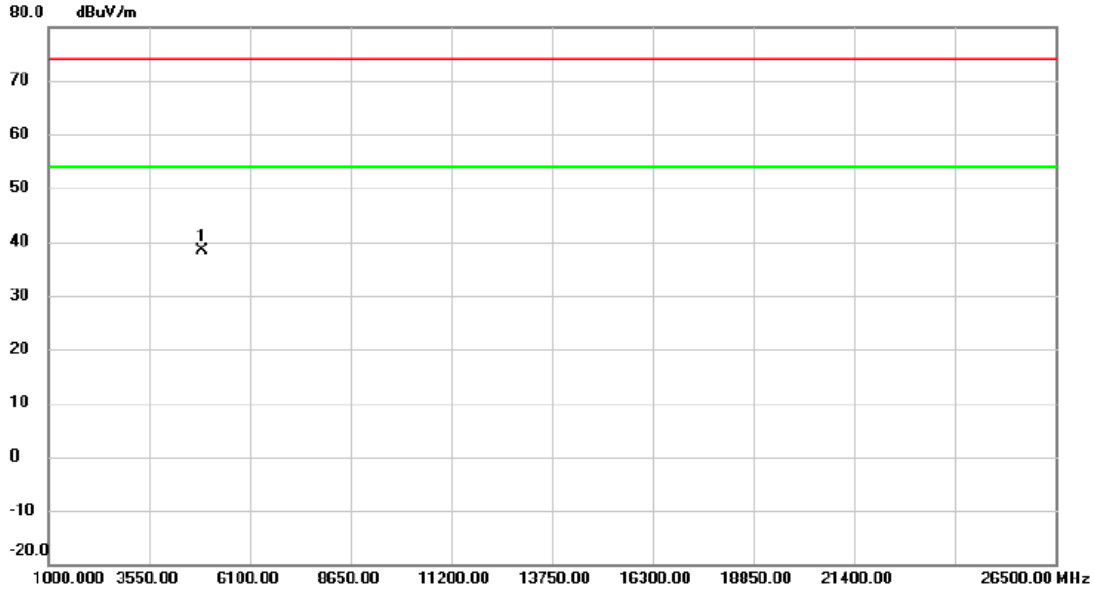

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4904.000	51.19	-12.78	38.41	74.00	-35.59	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Horizontal

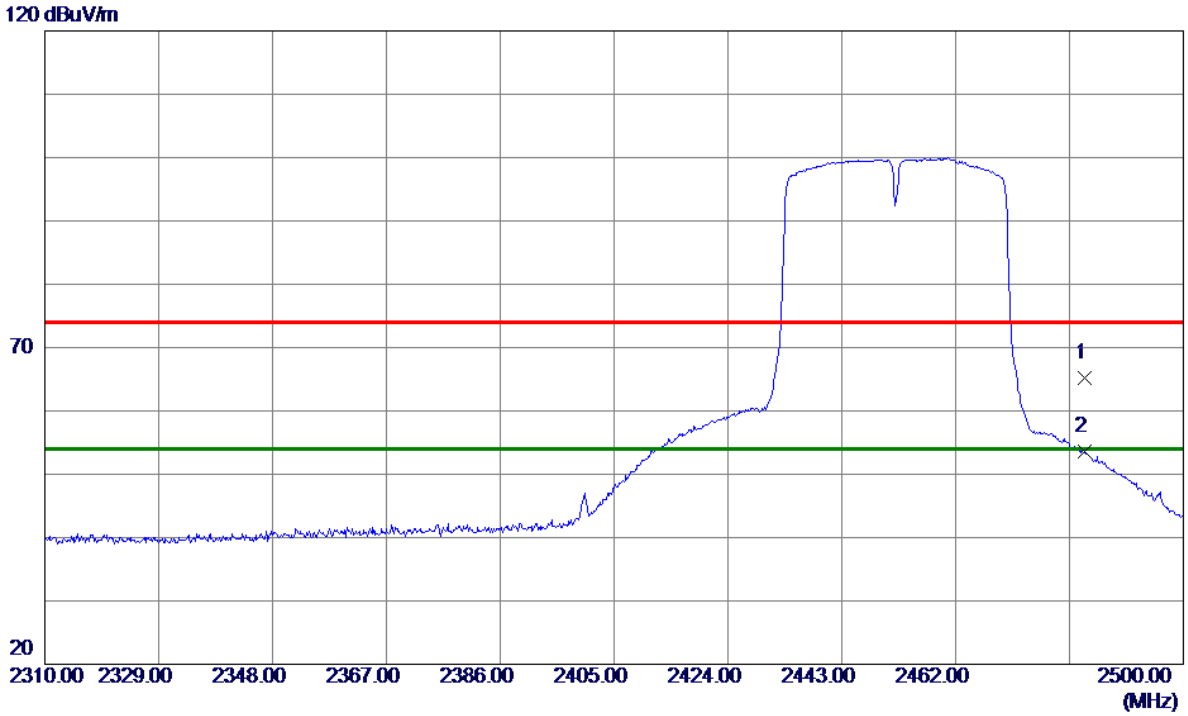

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	31.49	33.76	65.25	74.00	-8.75	Peak	
2 *	2483.5000	19.91	33.76	53.67	54.00	-0.33	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Horizontal

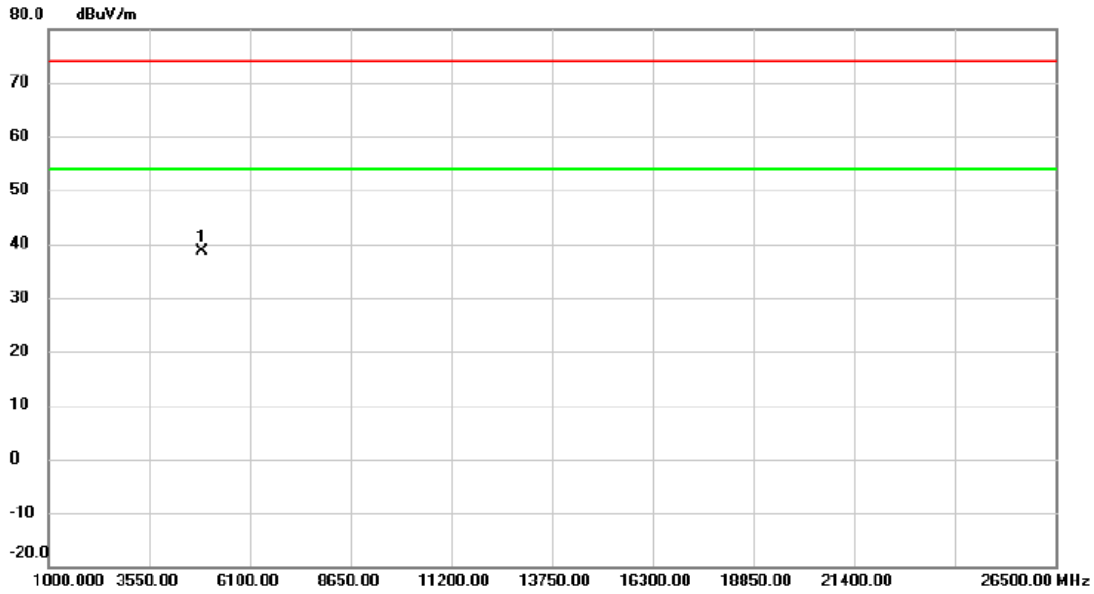

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4904.000	51.47	-12.78	38.69	74.00	-35.31	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2412 MHz

Vertical

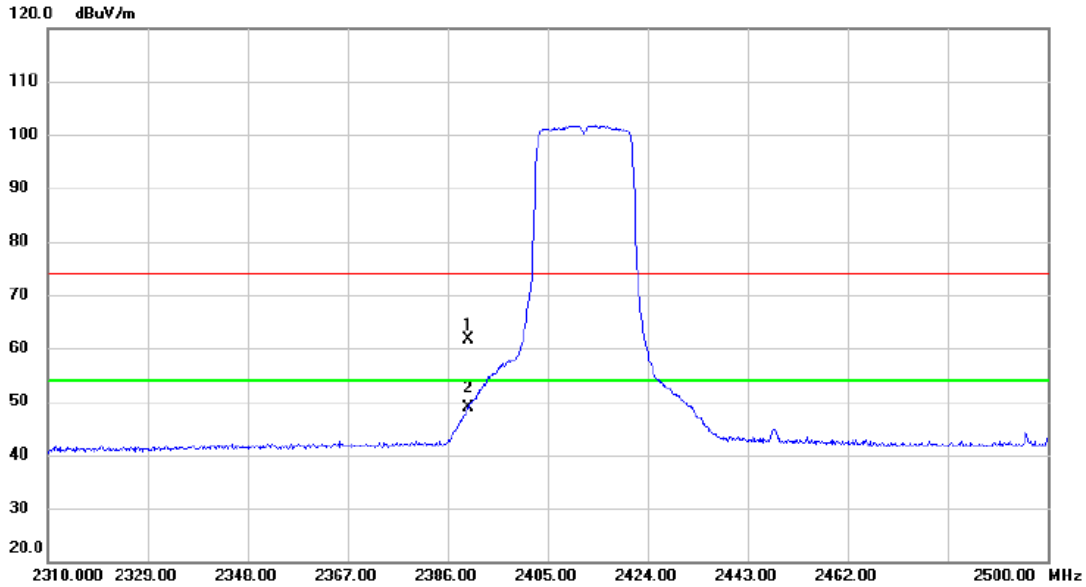

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	28.31	33.36	61.67	74.00	-12.33	peak	
2	*	2390.000	15.60	33.36	48.96	54.00	-5.04	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Vertical

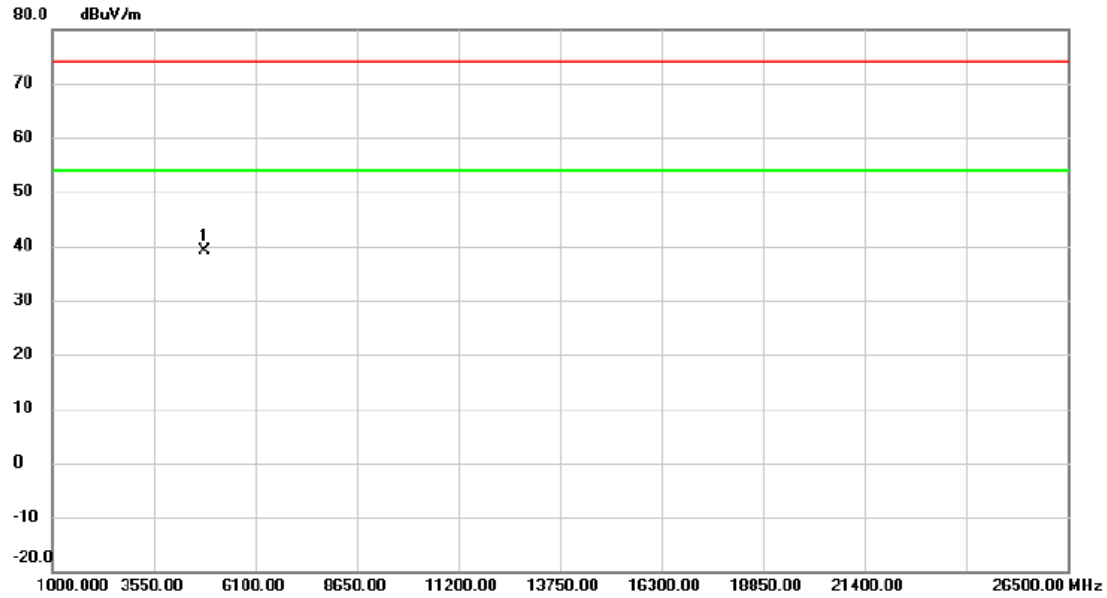

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4821.910	52.27	-13.03	39.24	74.00	-34.76	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Horizontal

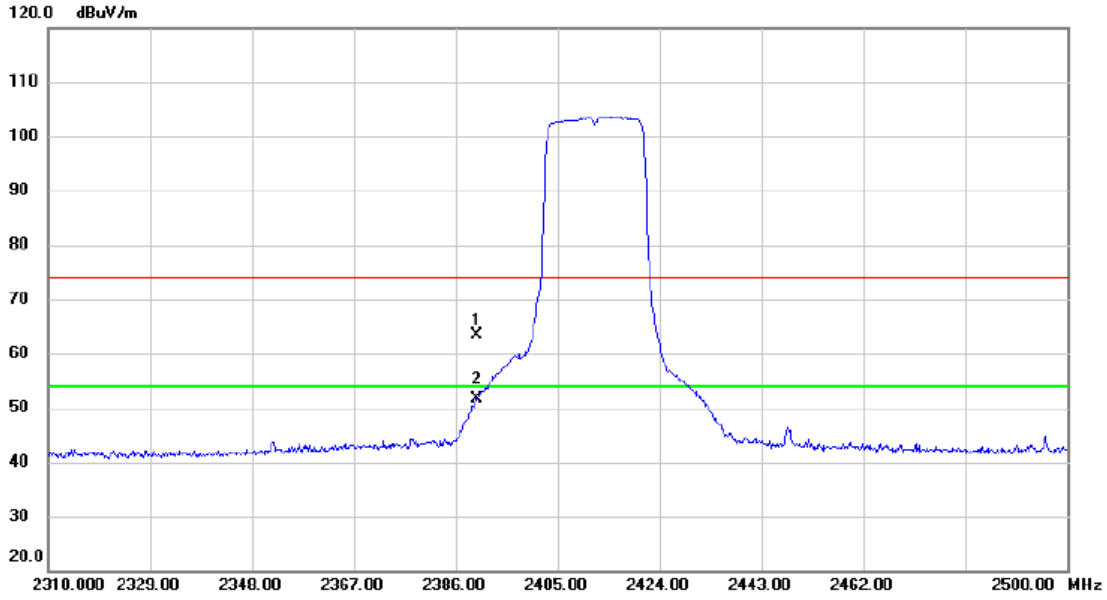

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	30.10	33.36	63.46	74.00	-10.54	peak	
2	*	2390.000	18.19	33.36	51.55	54.00	-2.45	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Horizontal

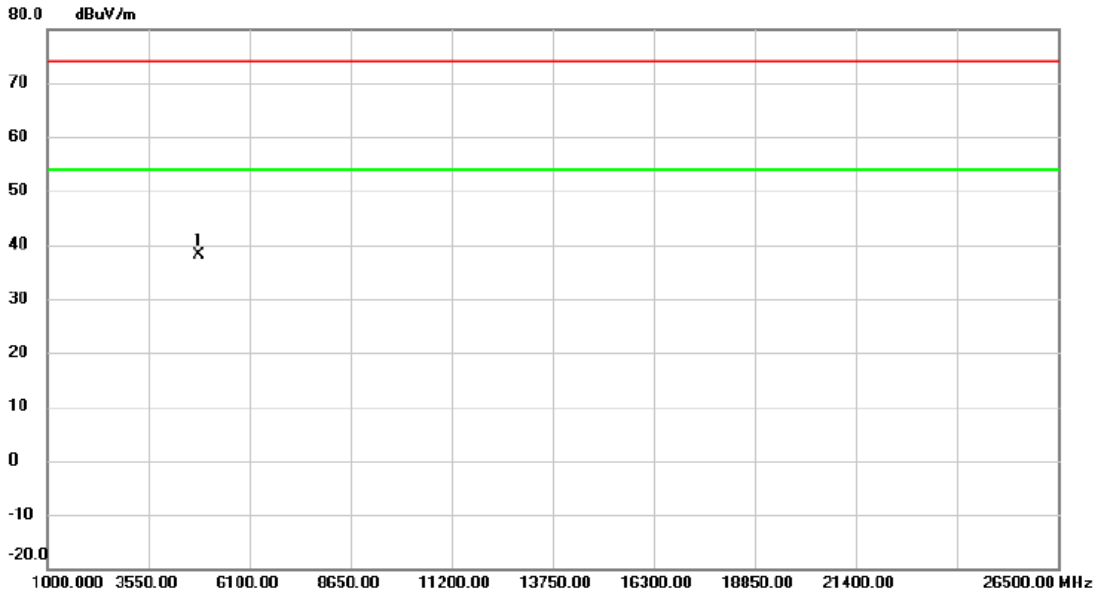

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4822.890	51.18	-13.03	38.15	74.00	-35.85	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2437 MHz

Vertical

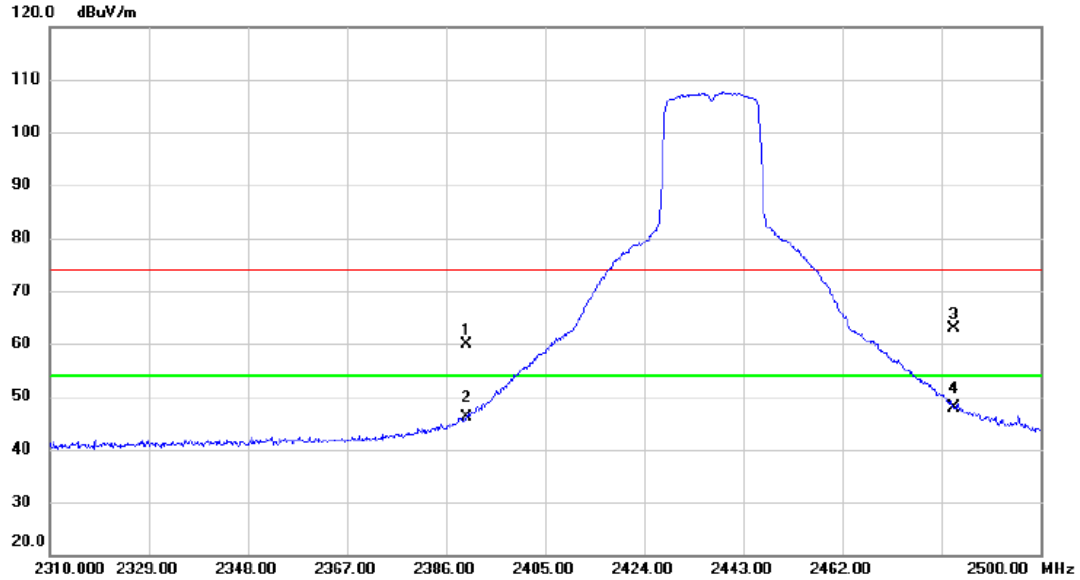

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	26.62	33.36	59.98	74.00	-14.02	peak	
2		2390.000	12.74	33.36	46.10	54.00	-7.90	AVG	
3		2483.500	29.13	33.76	62.89	74.00	-11.11	peak	
4	*	2483.500	14.22	33.76	47.98	54.00	-6.02	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Vertical

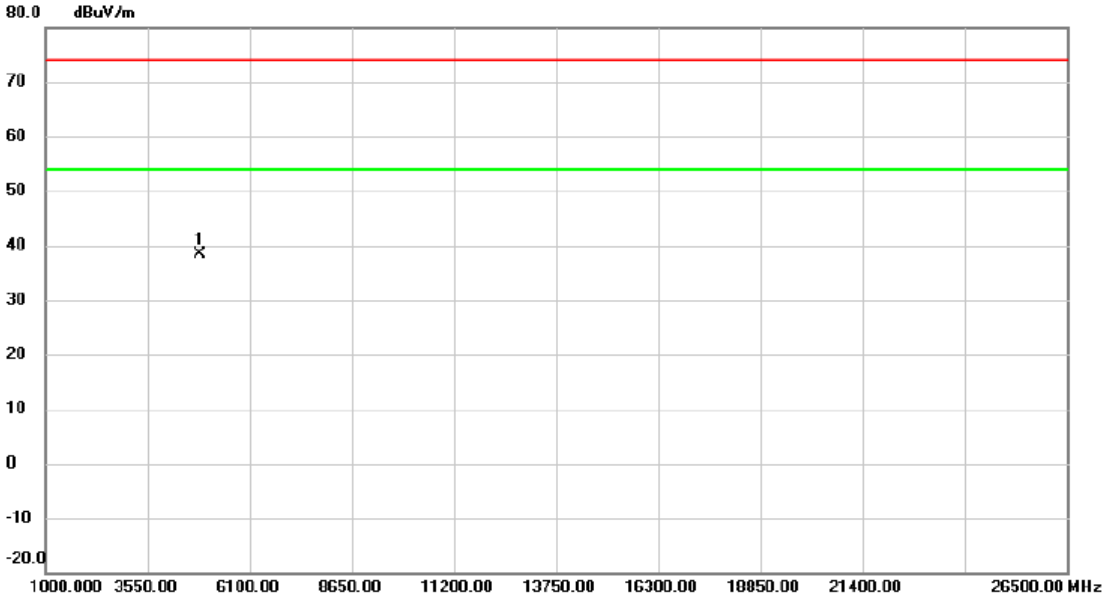

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4872.390	51.36	-12.88	38.48	74.00	-35.52	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Horizontal

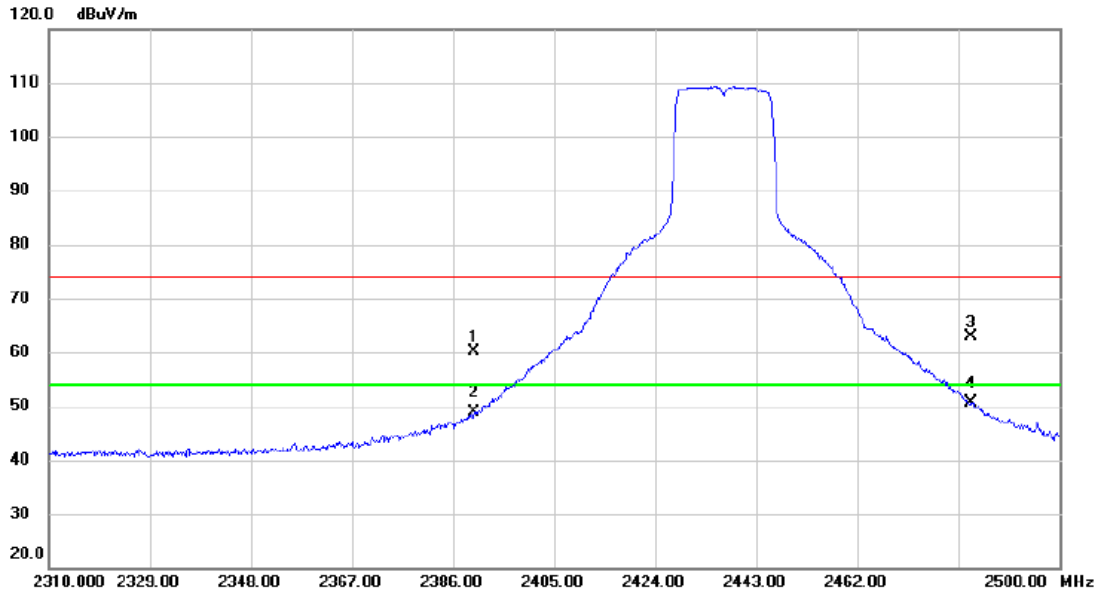

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	26.65	33.36	60.01	74.00	-13.99	peak	
2		2390.000	15.51	33.36	48.87	54.00	-5.13	AVG	
3		2483.500	29.19	33.76	62.95	74.00	-11.05	peak	
4	*	2483.500	16.79	33.76	50.55	54.00	-3.45	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Horizontal

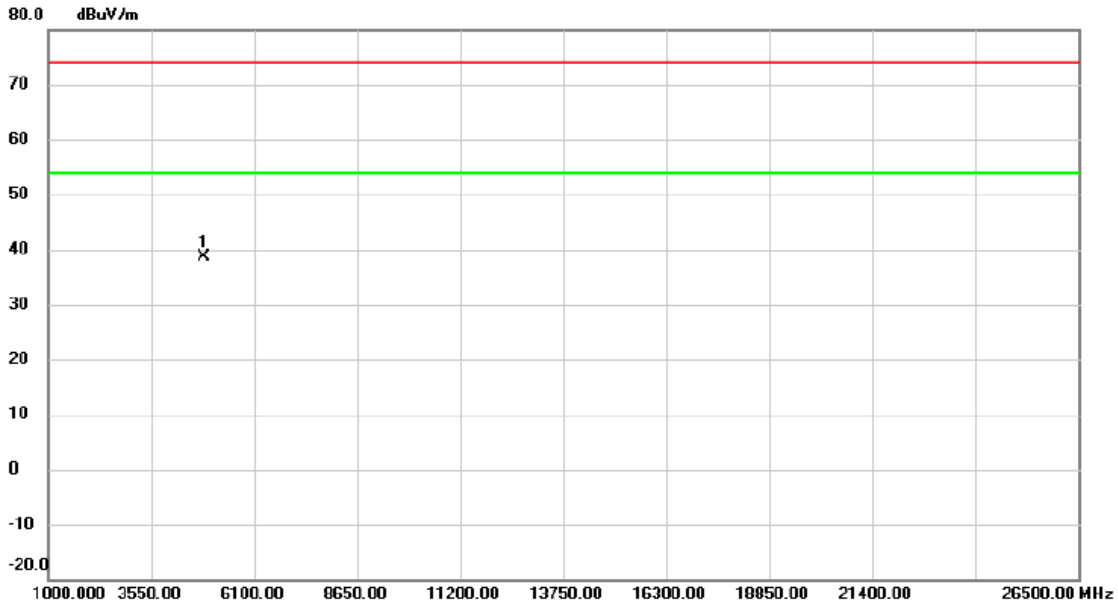

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4872.705	51.47	-12.87	38.60	74.00	-35.40	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2462 MHz

Vertical

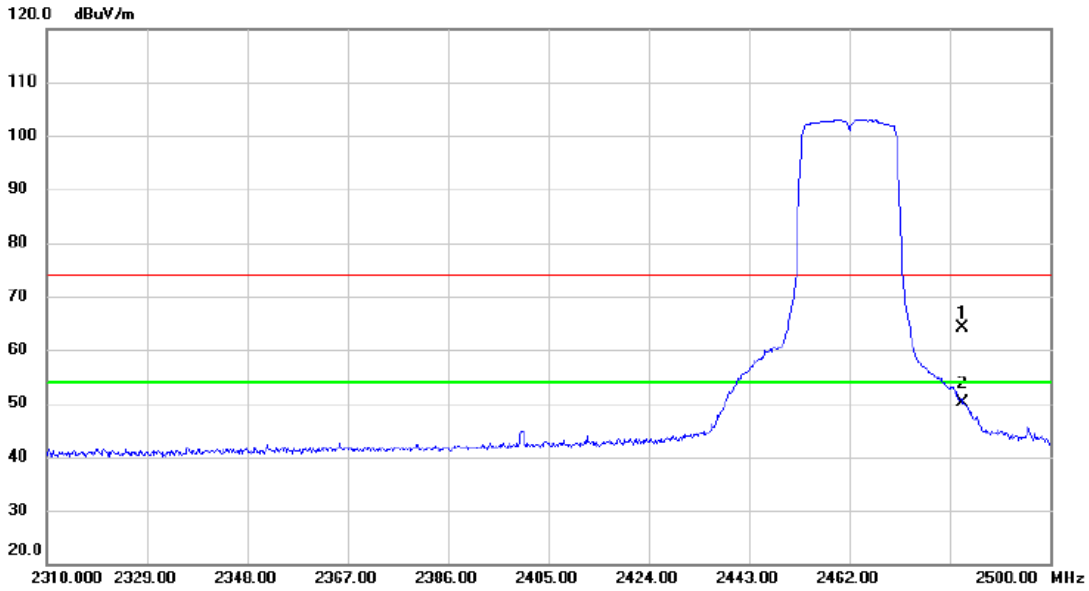

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	30.35	33.76	64.11	74.00	-9.89	peak	
2	*	2483.500	16.27	33.76	50.03	54.00	-3.97	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Vertical

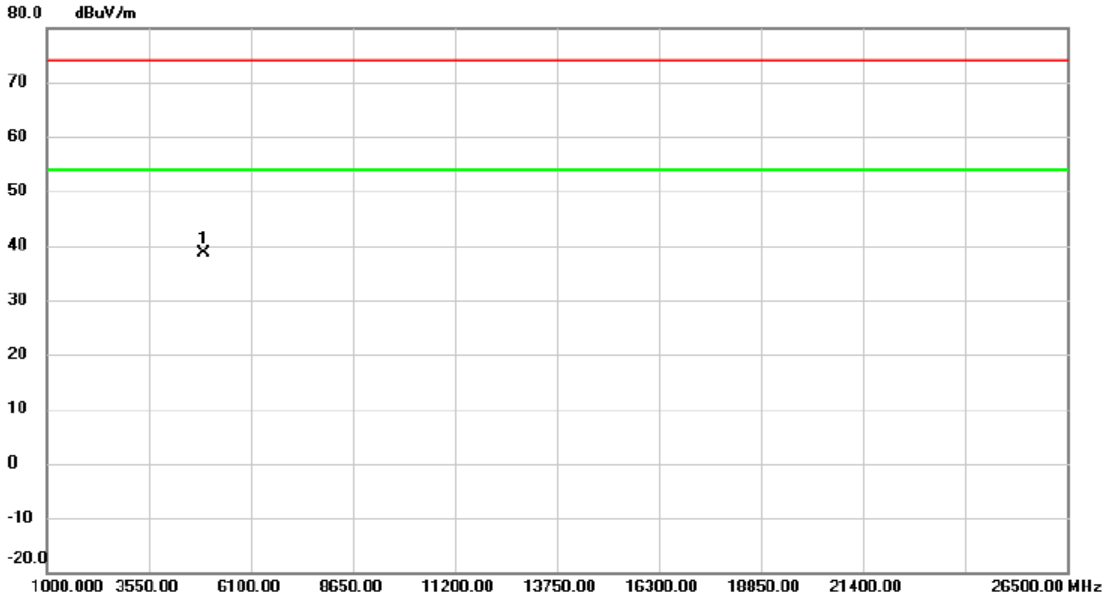

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4922.560	51.44	-12.72	38.72	74.00	-35.28	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Horizontal

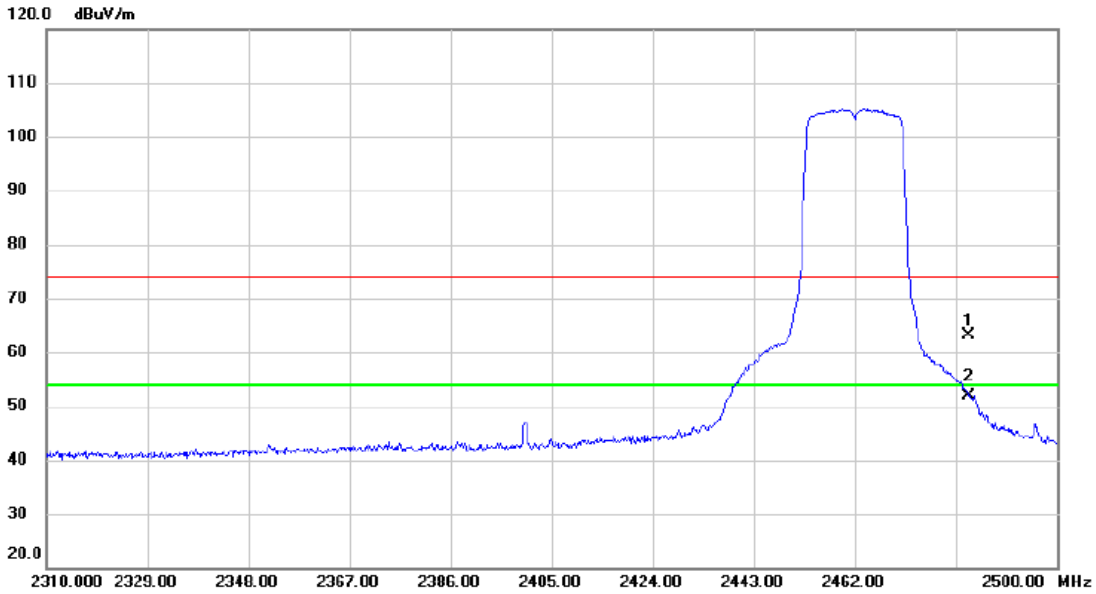

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	29.31	33.76	63.07	74.00	-10.93	peak	
2	*	2483.500	18.08	33.76	51.84	54.00	-2.16	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Horizontal

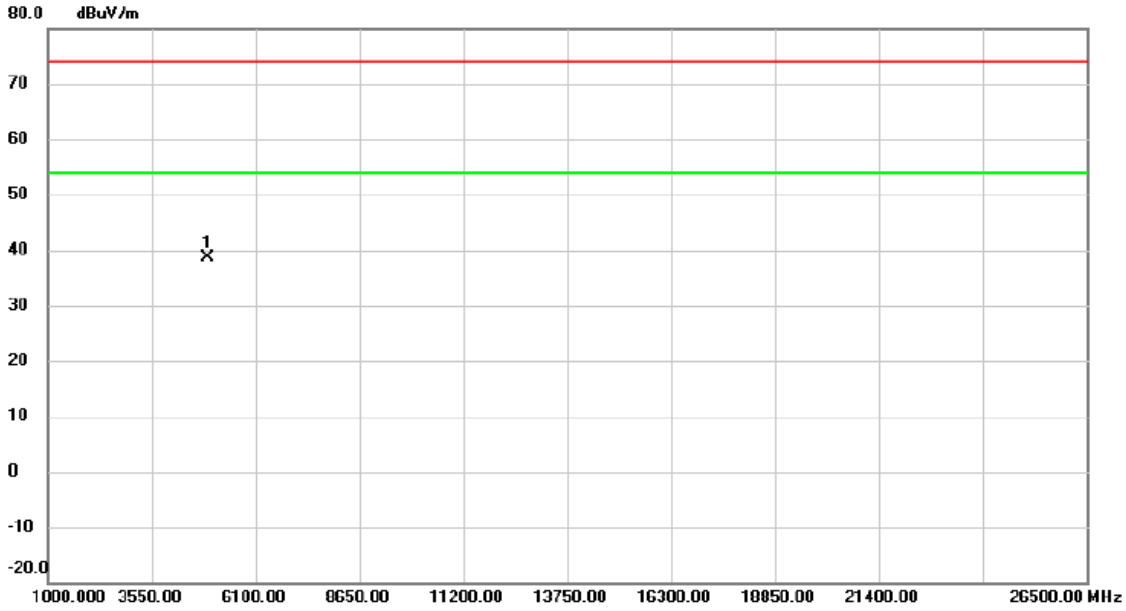

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4922.185	51.33	-12.72	38.61	74.00	-35.39	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Vertical

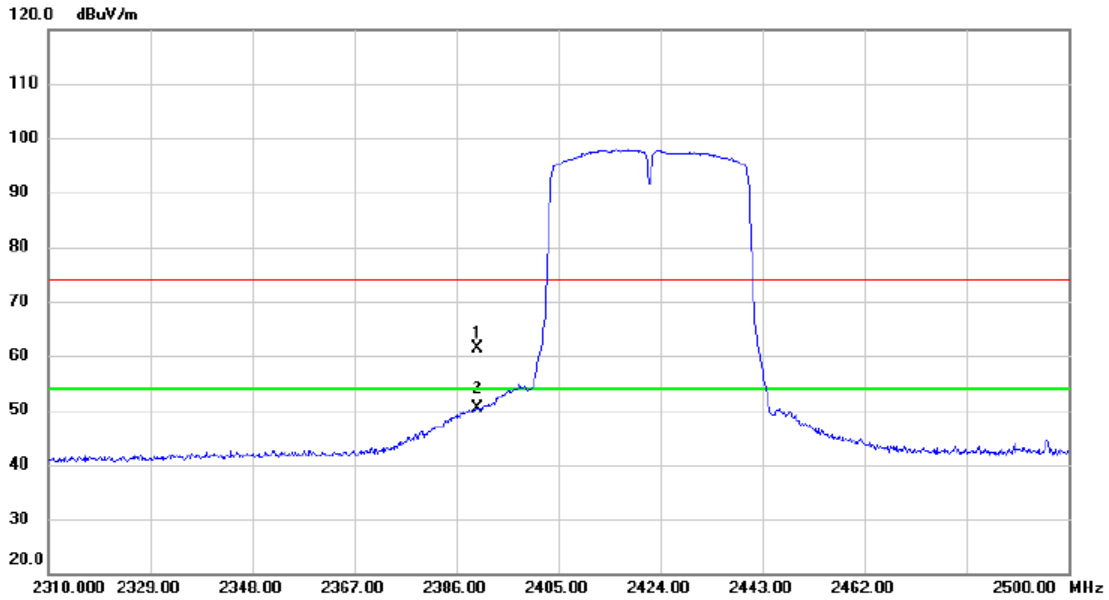

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	28.06	33.36	61.42	74.00	-12.58	peak	
2	*	2390.000	16.99	33.36	50.35	54.00	-3.65	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Vertical

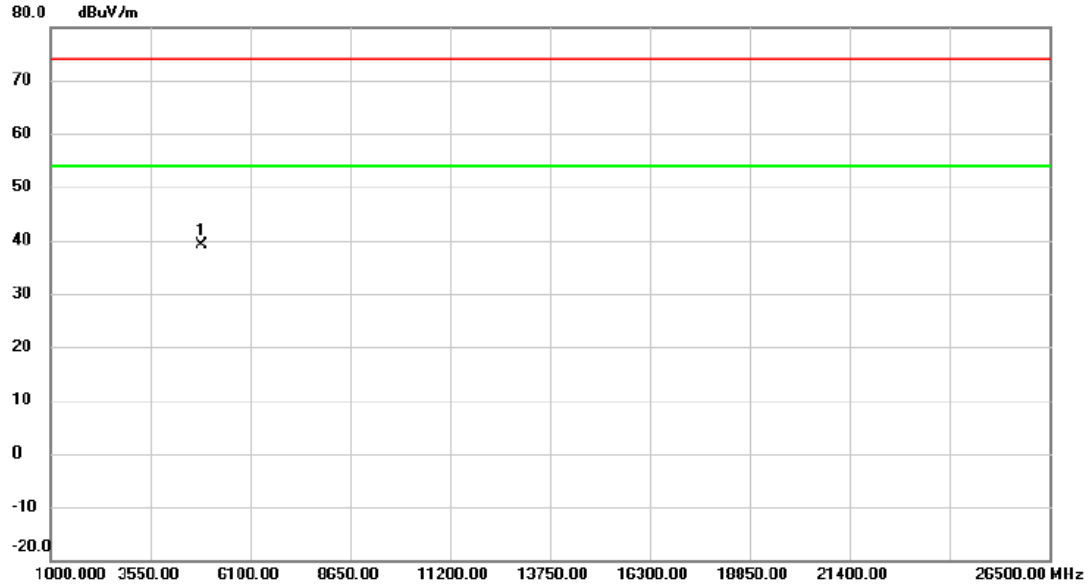

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4846.335	52.12	-12.95	39.17	74.00	-34.83	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Horizontal

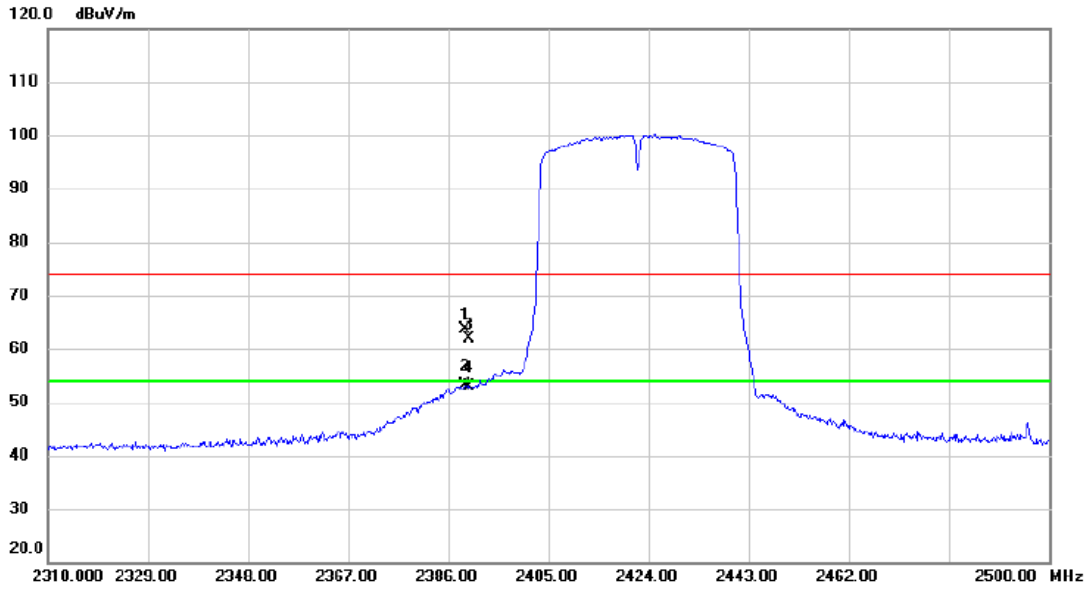

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2389.230	30.25	33.36	63.61	74.00	-10.39	peak	
2	*	2389.230	19.69	33.36	53.05	54.00	-0.95	AVG	
3		2390.000	28.46	33.36	61.82	74.00	-12.18	peak	
4		2390.000	19.44	33.36	52.80	54.00	-1.20	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Horizontal

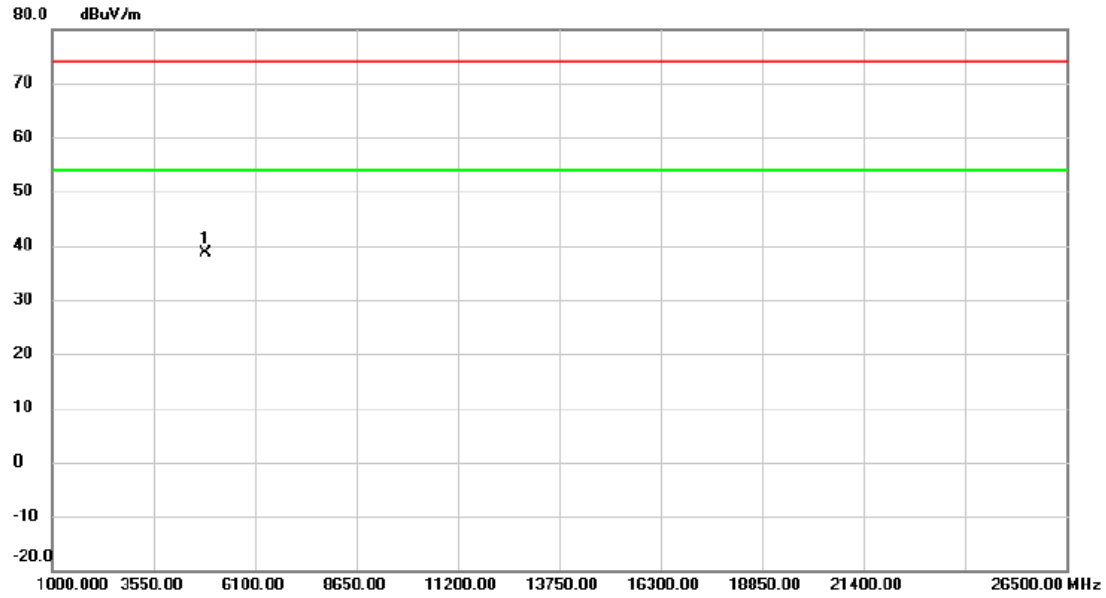

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4845.675	51.58	-12.95	38.63	74.00	-35.37	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Vertical

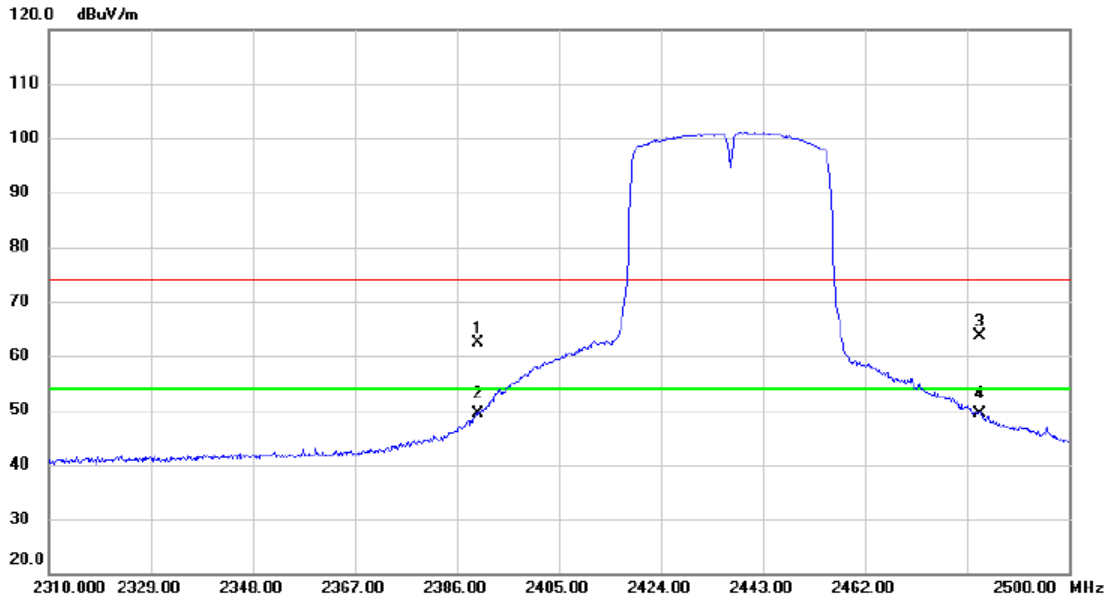

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	29.00	33.36	62.36	74.00	-11.64	peak	
2	*	2390.000	15.98	33.36	49.34	54.00	-4.66	AVG	
3		2483.500	29.86	33.76	63.62	74.00	-10.38	peak	
4		2483.500	15.54	33.76	49.30	54.00	-4.70	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Vertical

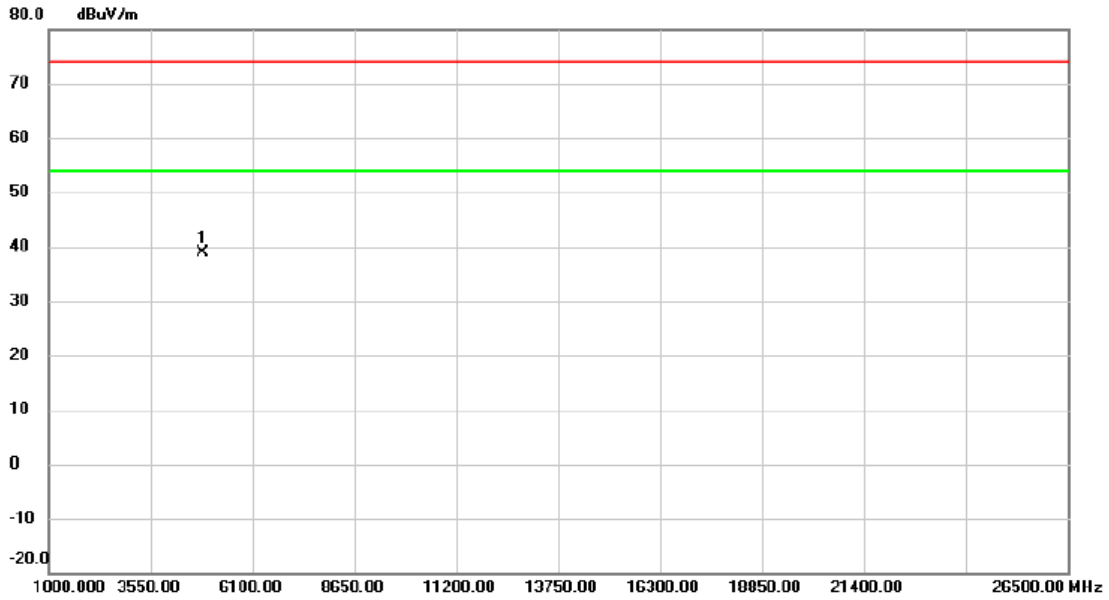

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4872.570	51.75	-12.88	38.87	74.00	-35.13	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Horizontal

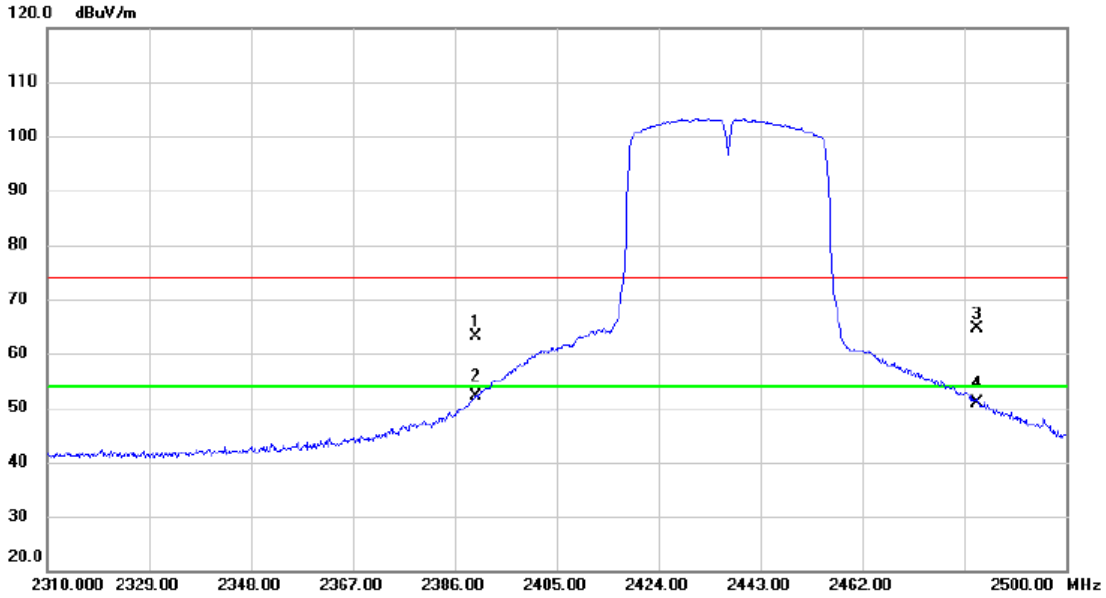

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	29.77	33.36	63.13	74.00	-10.87	peak	
2	*	2390.000	18.66	33.36	52.02	54.00	-1.98	AVG	
3		2483.500	30.97	33.76	64.73	74.00	-9.27	peak	
4		2483.500	17.24	33.76	51.00	54.00	-3.00	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Horizontal

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4873.225	51.16	-12.87	38.29	74.00	-35.71	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Vertical

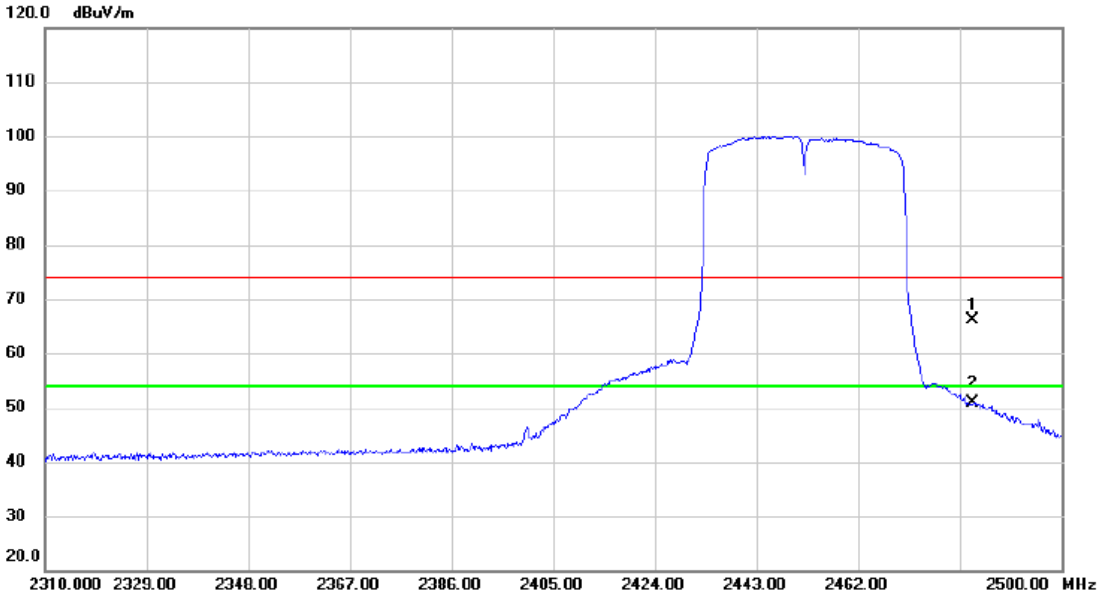

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	32.27	33.76	66.03	74.00	-7.97	peak	
2	*	2483.500	17.03	33.76	50.79	54.00	-3.21	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Vertical

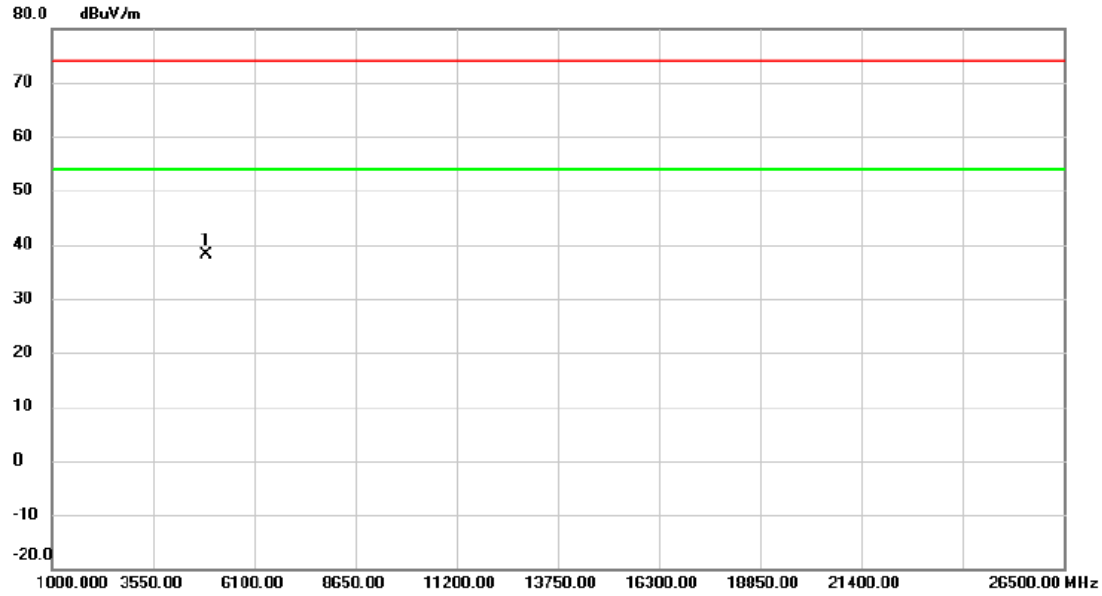

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4901.570	50.94	-12.78	38.16	74.00	-35.84	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Horizontal

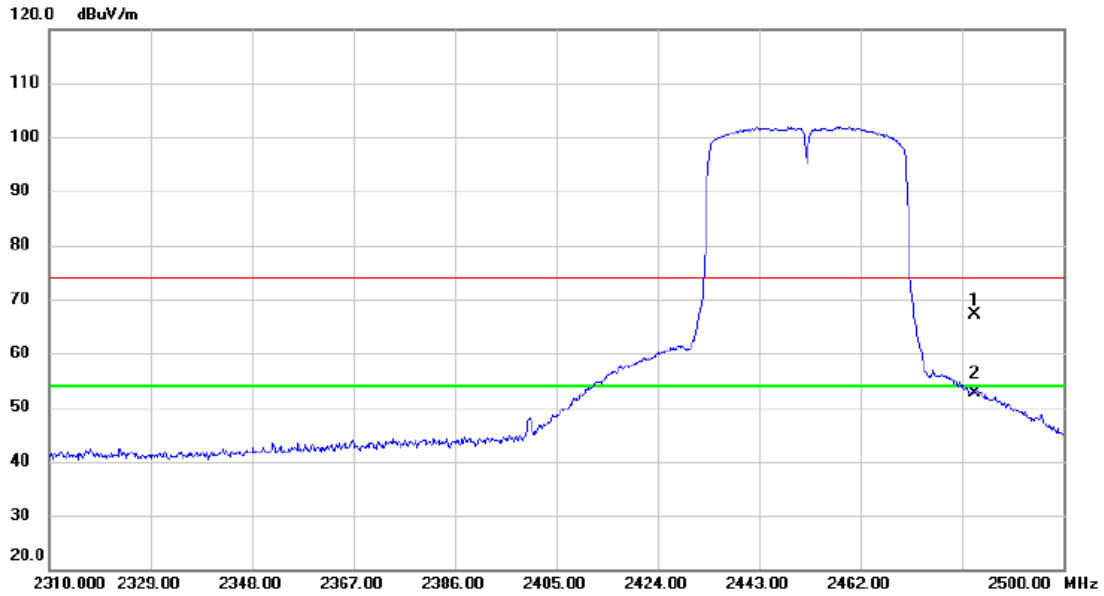

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	33.30	33.76	67.06	74.00	-6.94	peak	
2	*	2483.500	18.96	33.76	52.72	54.00	-1.28	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Horizontal

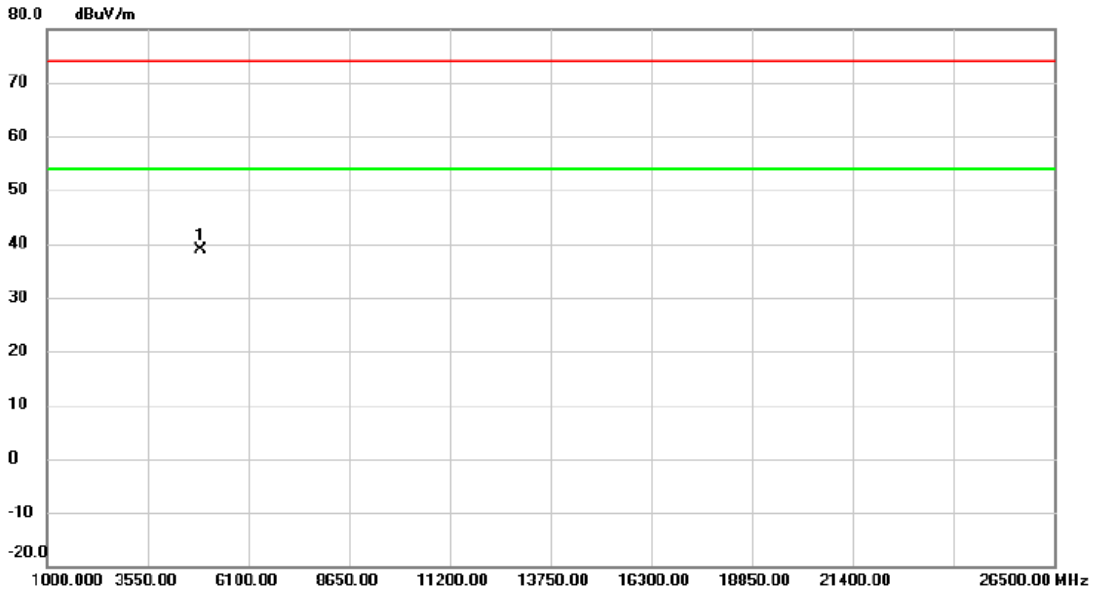

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4903.310	51.65	-12.78	38.87	74.00	-35.13	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

ANT2

Test Mode:	TX B Mode 2412 MHz

Vertical

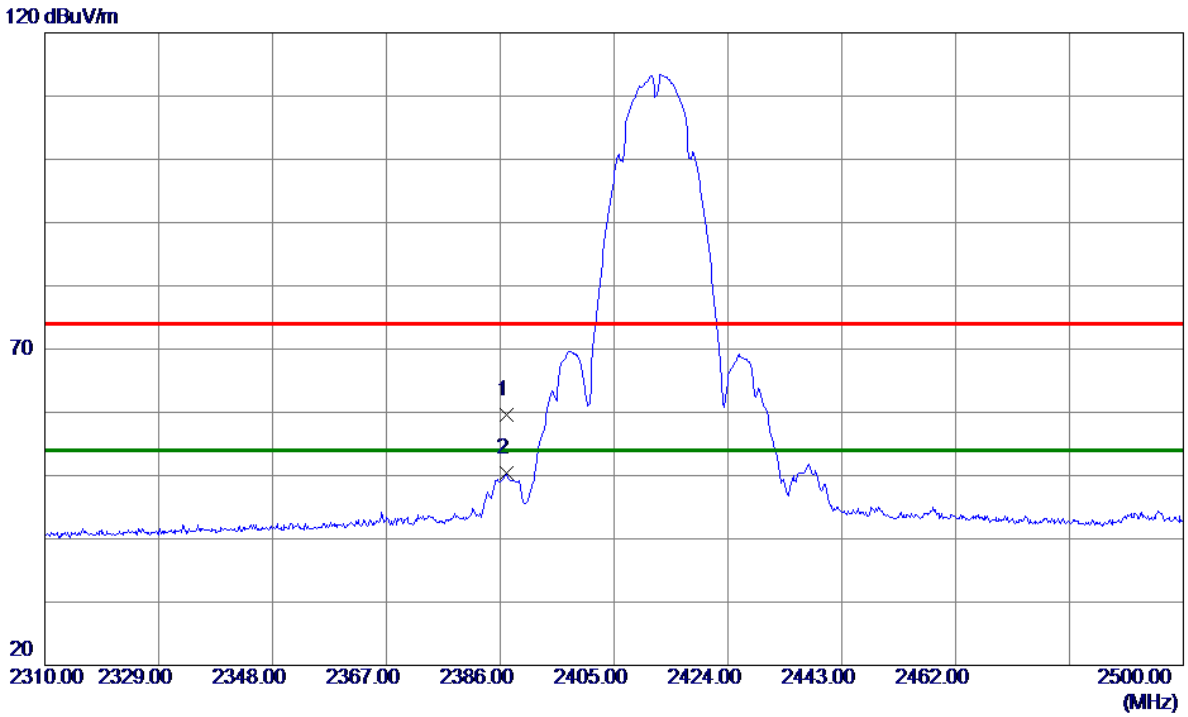

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2387.0450	26.24	33.35	59.59	74.00	-14.41	Peak	
2 *	2387.0450	17.11	33.35	50.46	54.00	-3.54	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2412 MHz

Vertical

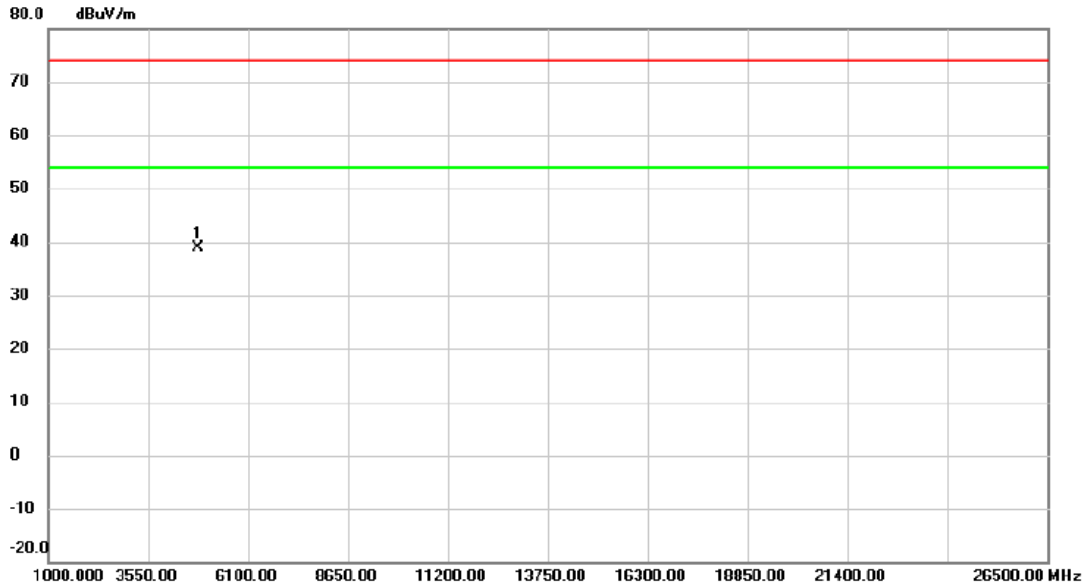

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	52.01	-13.03	38.98	74.00	-35.02	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2412 MHz

Horizontal

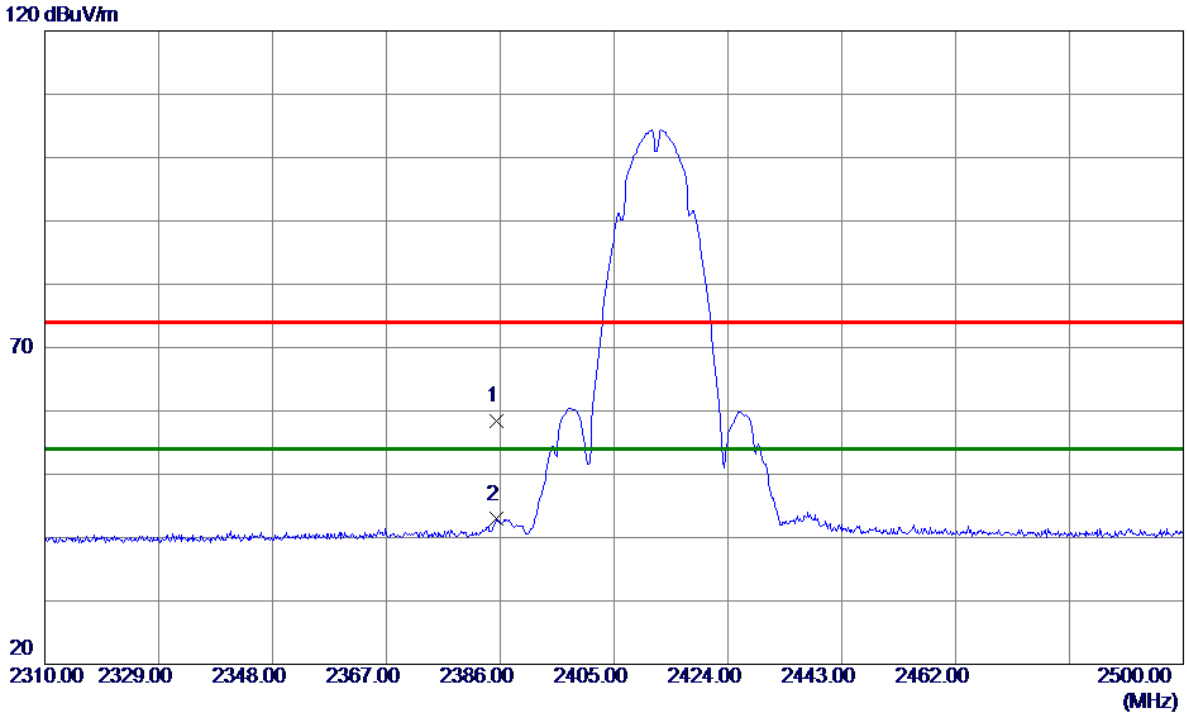

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2385.4300	25.06	33.34	58.40	74.00	-15.60	Peak	
2 *	2385.4300	9.56	33.34	42.90	54.00	-11.10	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2412 MHz

Horizontal

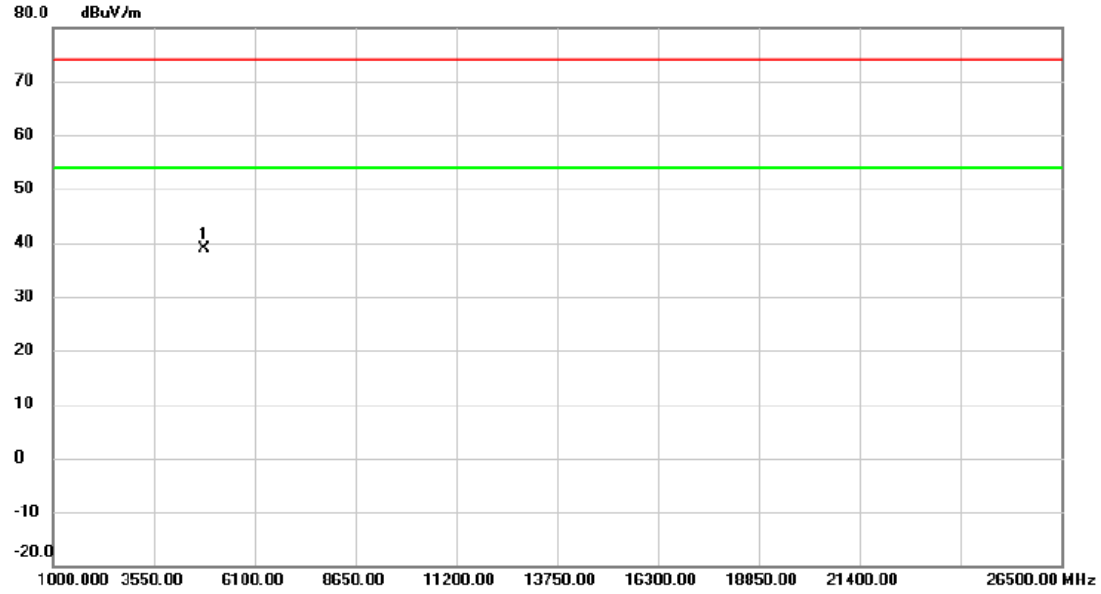

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	52.02	-13.03	38.99	74.00	-35.01	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2437 MHz

Vertical

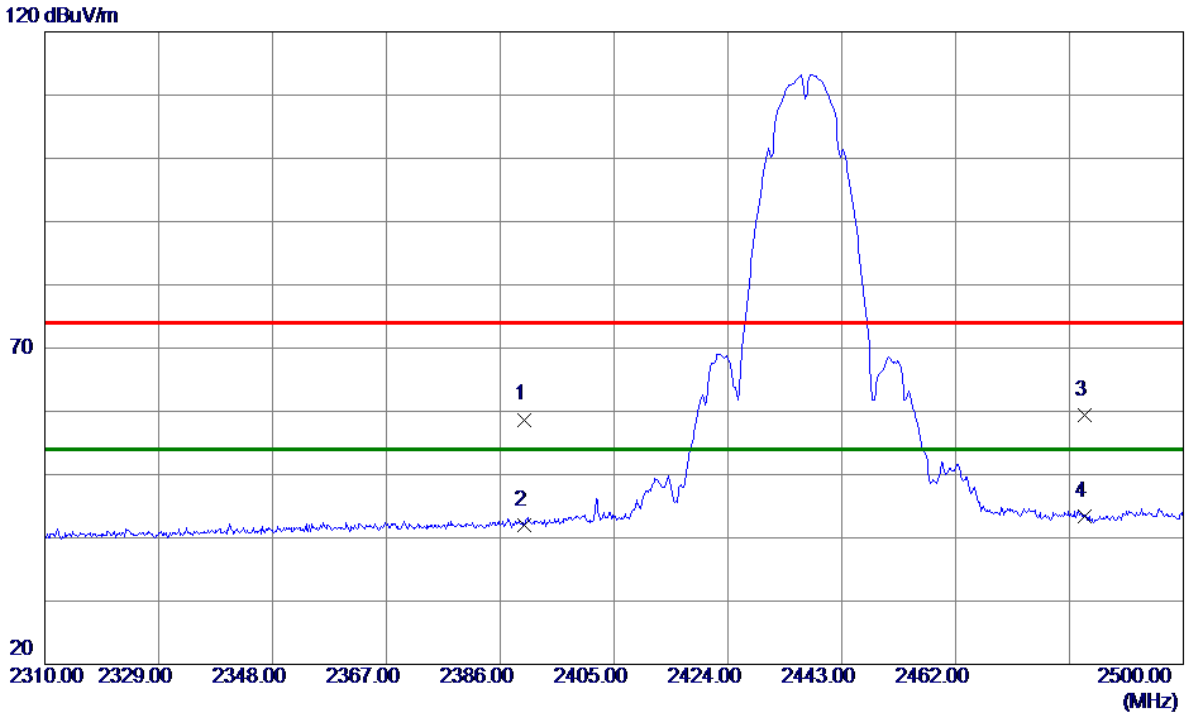

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	25.34	33.36	58.70	74.00	-15.30	Peak	
2	2390.0000	8.67	33.36	42.03	54.00	-11.97	AVG	
3	2483.5000	25.55	33.76	59.31	74.00	-14.69	Peak	
4 *	2483.5000	9.70	33.76	43.46	54.00	-10.54	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2437 MHz

Vertical

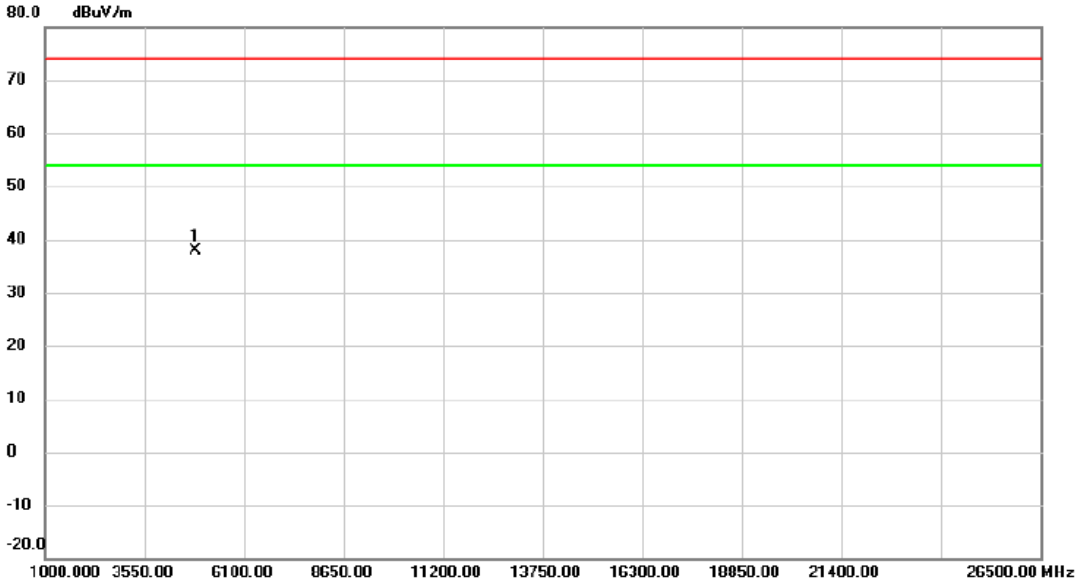

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.73	-12.86	37.87	74.00	-36.13	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2437 MHz

Horizontal

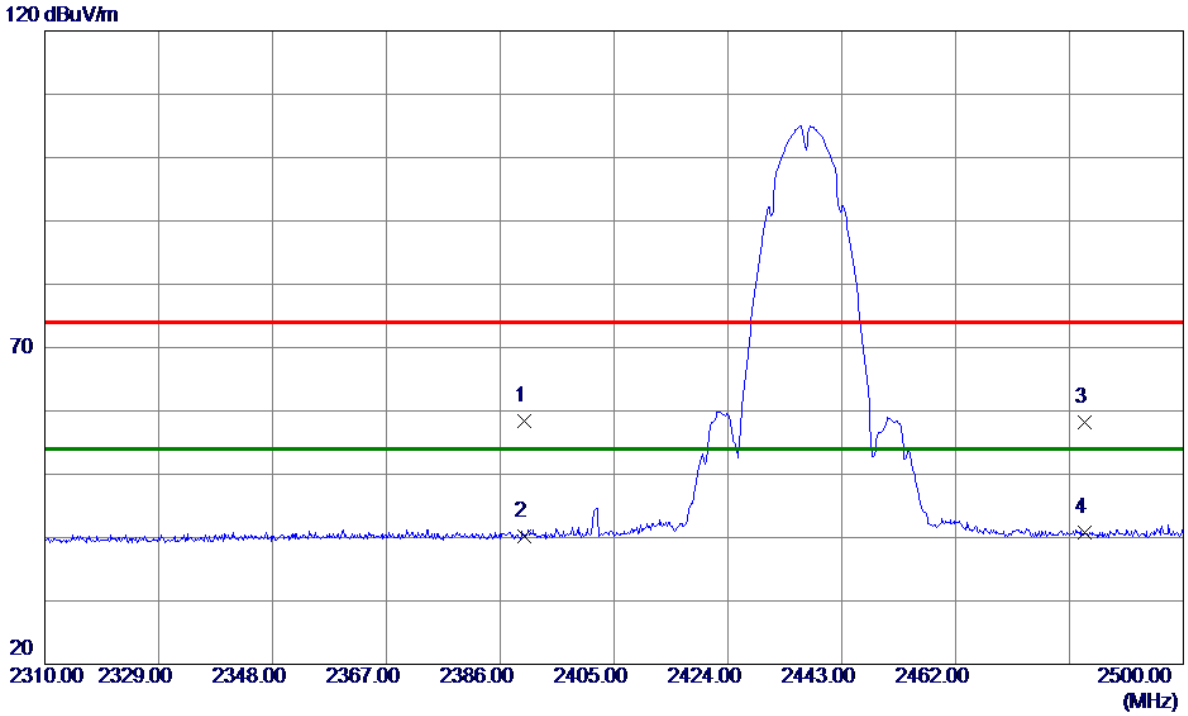

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	25.12	33.36	58.48	74.00	-15.52	Peak	
2	2390.0000	6.85	33.36	40.21	54.00	-13.79	AVG	
3	2483.5000	24.45	33.76	58.21	74.00	-15.79	Peak	
4 *	2483.5000	7.03	33.76	40.79	54.00	-13.21	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2437 MHz

Horizontal

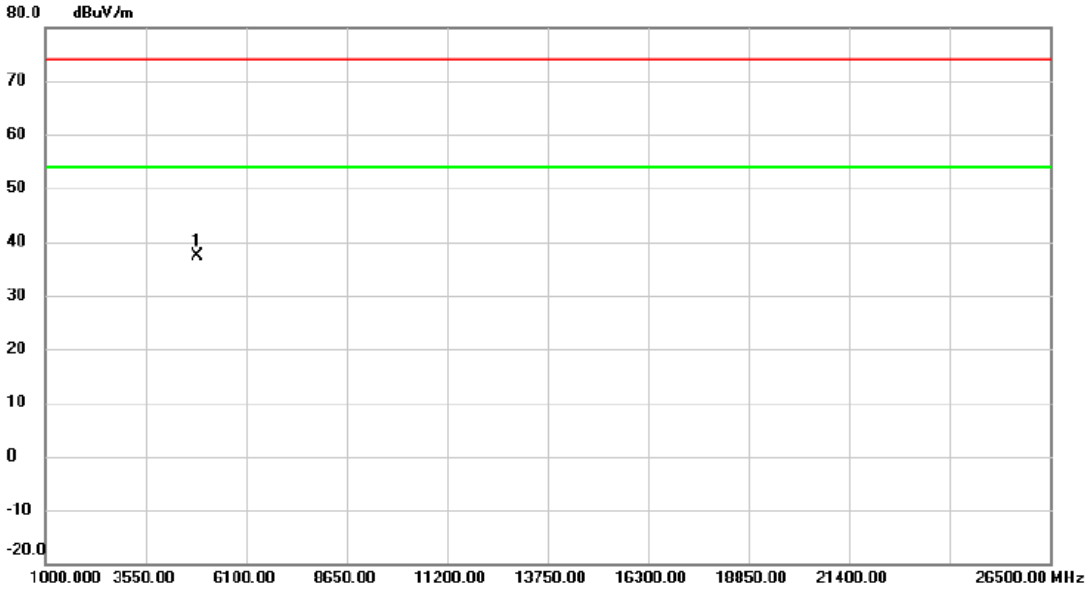

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.35	-12.86	37.49	74.00	-36.51	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Vertical

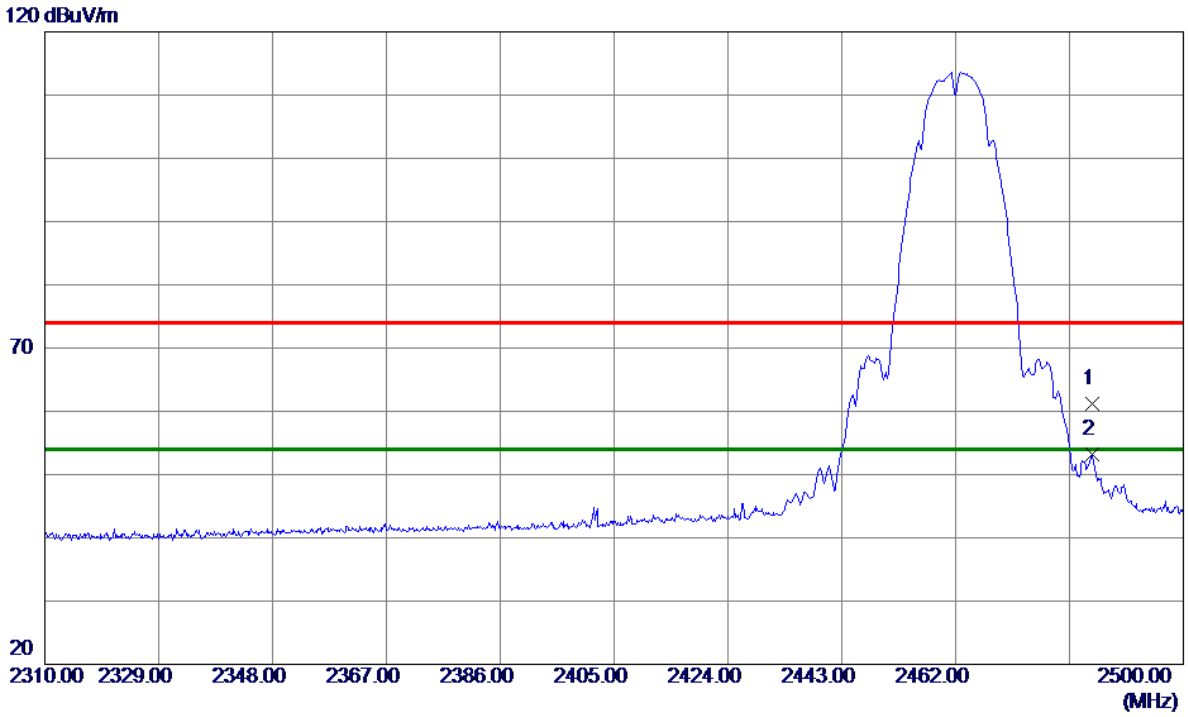

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2484.7050	27.40	33.76	61.16	74.00	-12.84	Peak	
2 *	2484.7050	19.36	33.76	53.12	54.00	-0.88	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Vertical

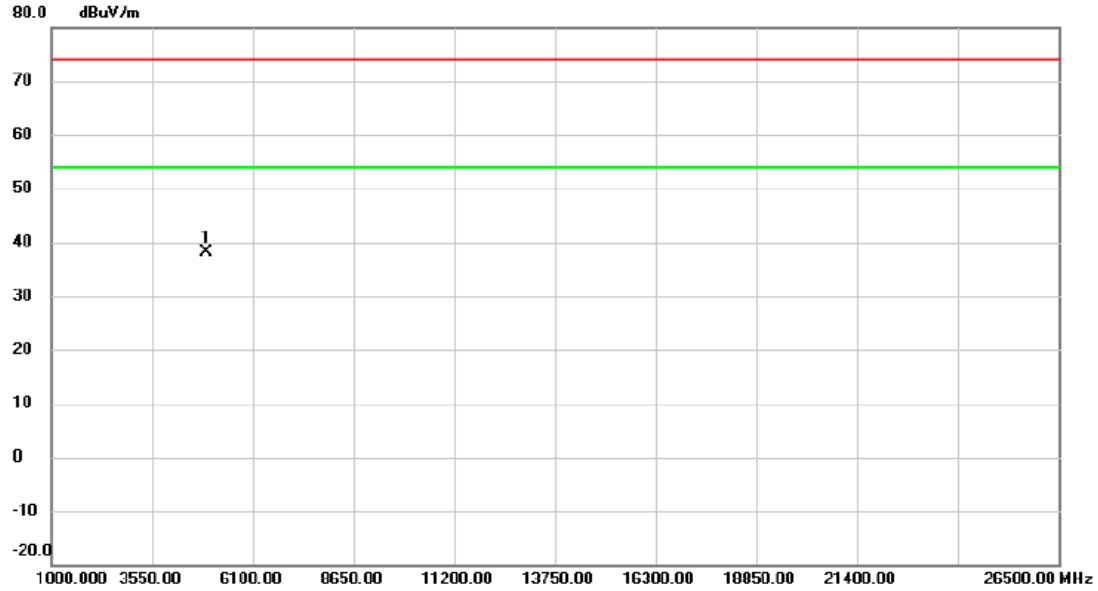

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	50.78	-12.71	38.07	74.00	-35.93	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Horizontal

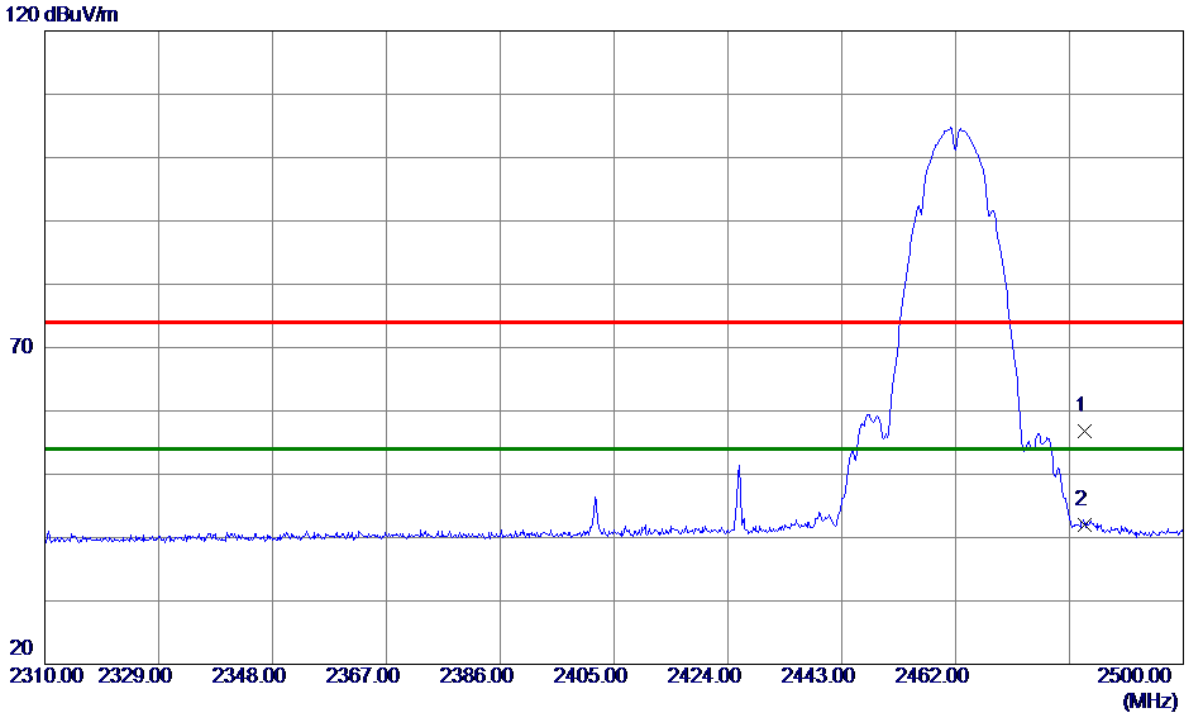

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	23.09	33.76	56.85	74.00	-17.15	Peak	
2 *	2483.5000	8.24	33.76	42.00	54.00	-12.00	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX B Mode 2462 MHz

Horizontal

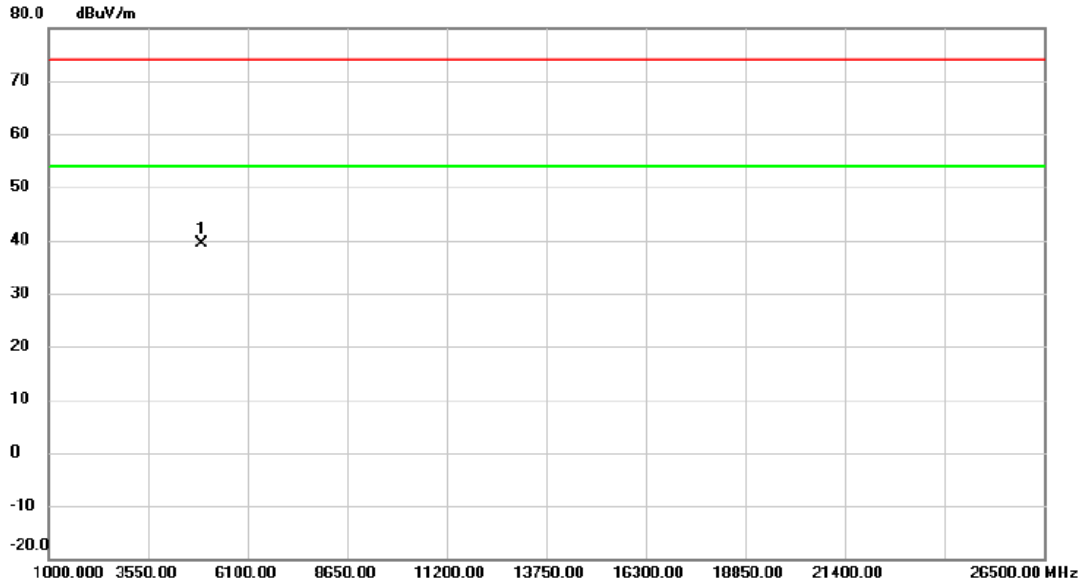

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	52.11	-12.71	39.40	74.00	-34.60	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Vertical

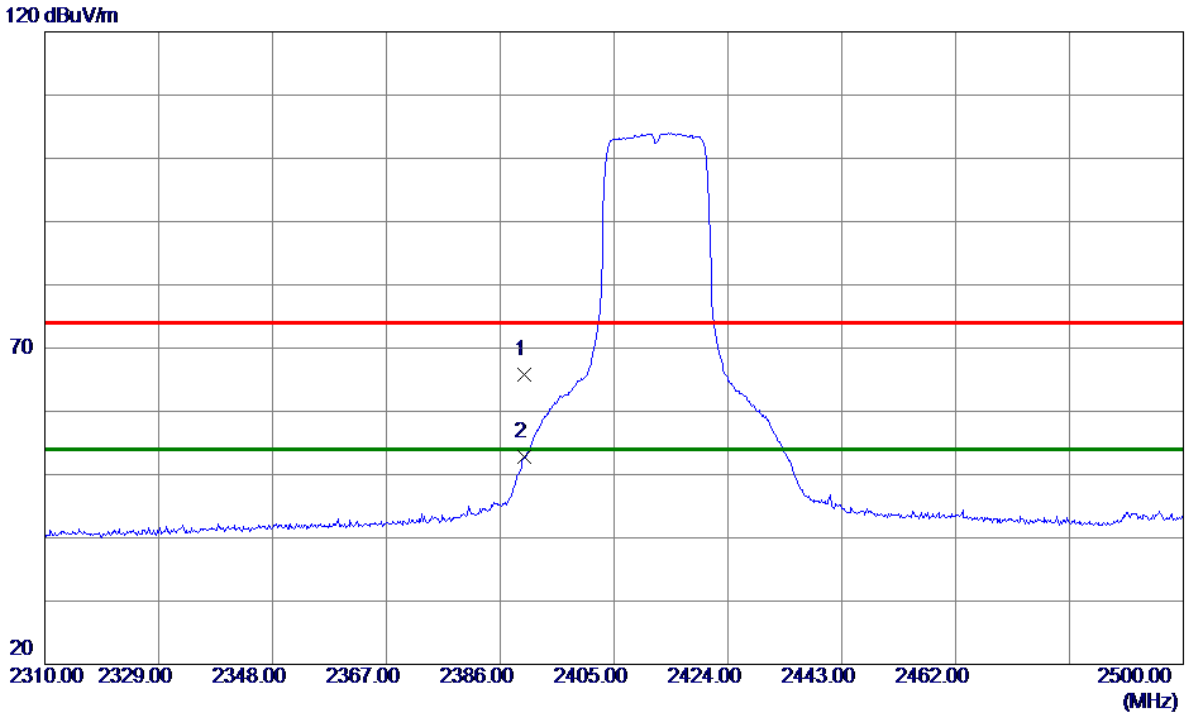

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	32.53	33.36	65.89	74.00	-8.11	Peak	
2 *	2390.0000	19.52	33.36	52.88	54.00	-1.12	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Vertical

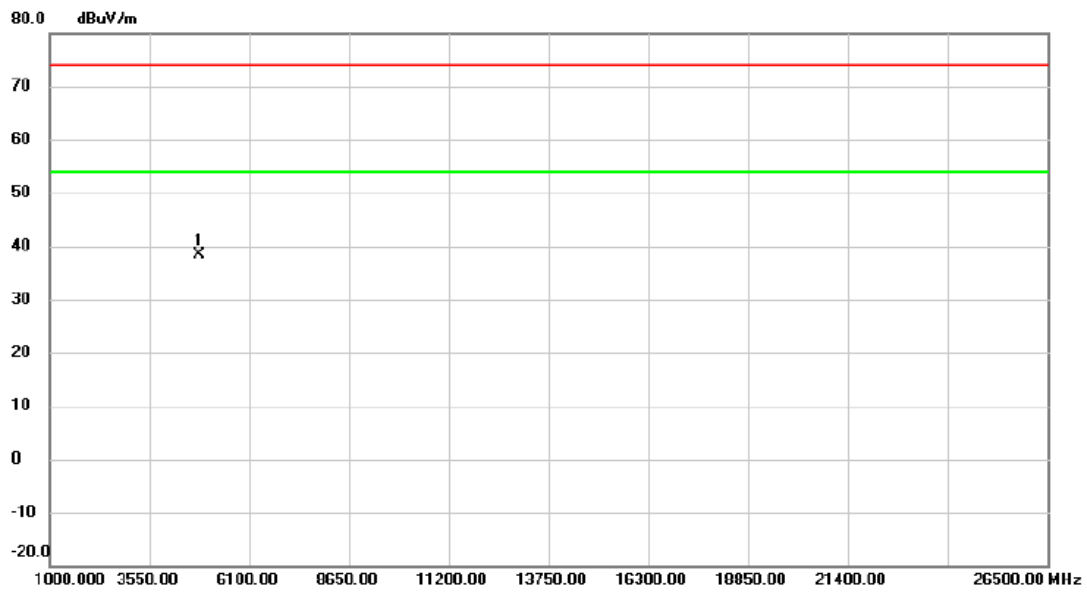

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	51.39	-13.03	38.36	74.00	-35.64	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Horizontal

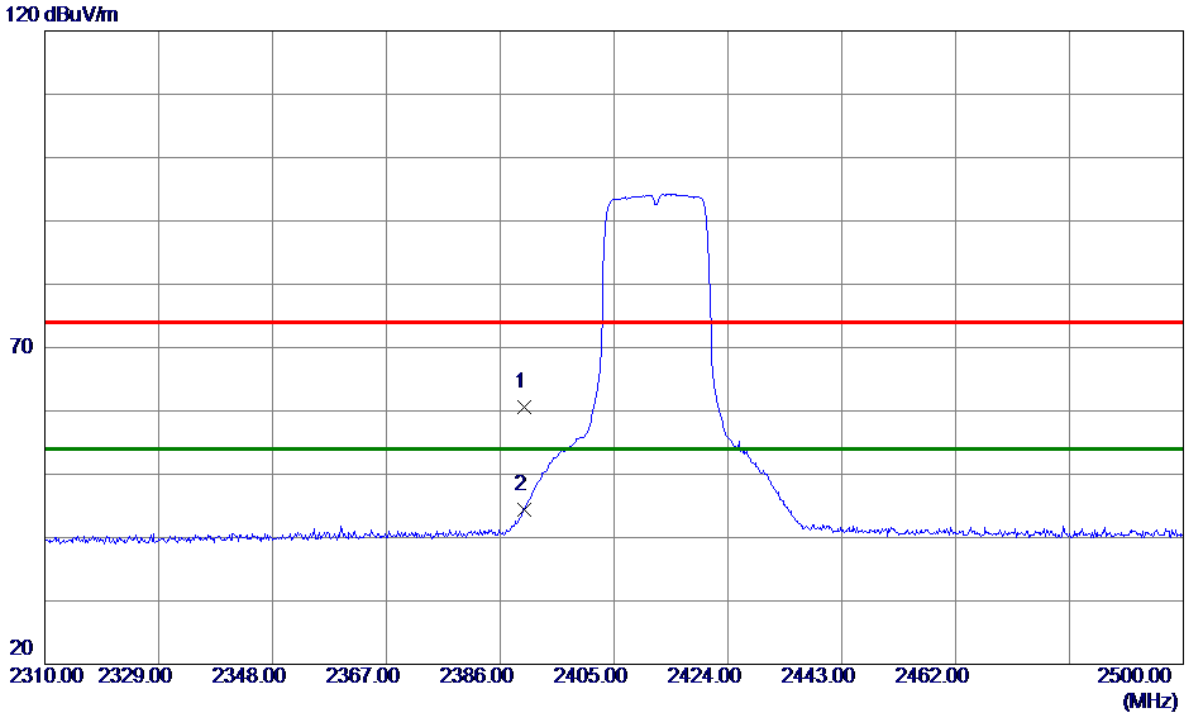

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	27.27	33.36	60.63	74.00	-13.37	Peak	
2 *	2390.0000	11.13	33.36	44.49	54.00	-9.51	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2412 MHz

Horizontal

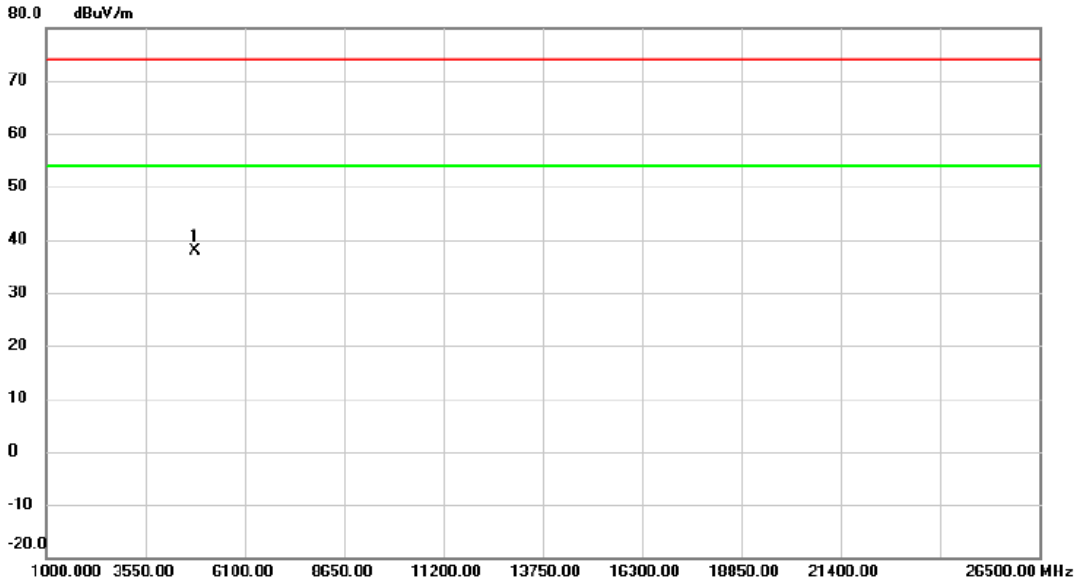

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	50.93	-13.03	37.90	74.00	-36.10	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Vertical

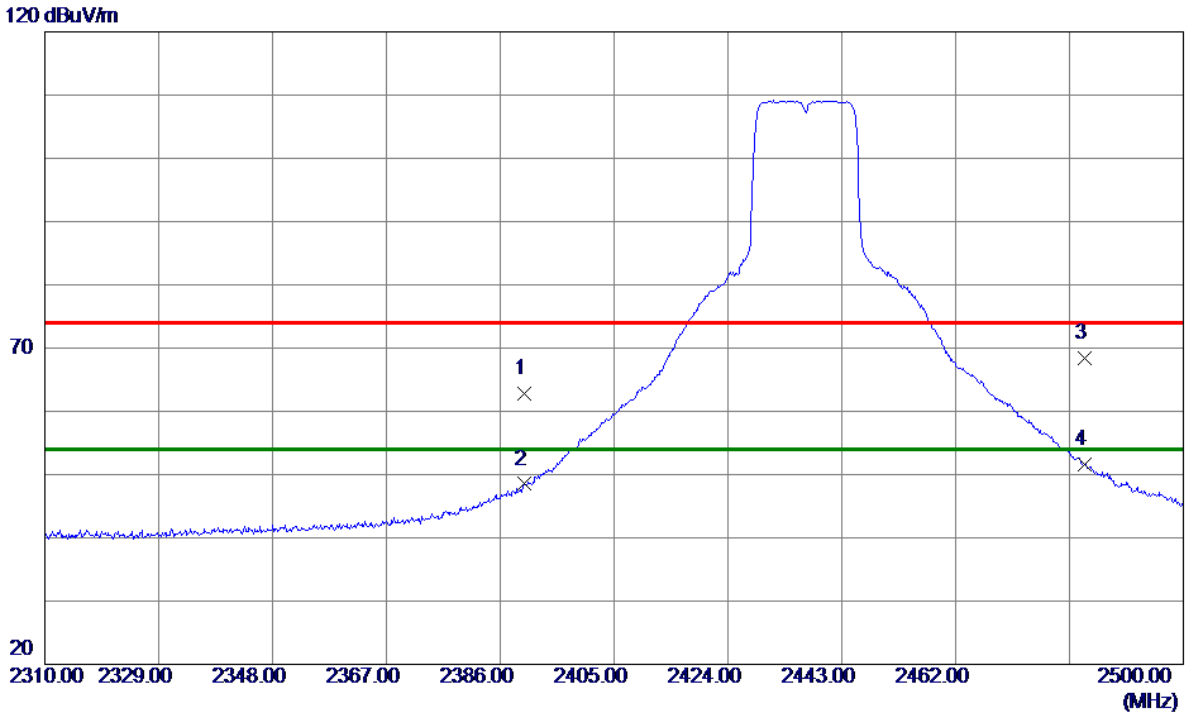

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	29.38	33.36	62.74	74.00	-11.26	Peak	
2	2390.0000	15.14	33.36	48.50	54.00	-5.50	AVG	
3	2483.5000	34.57	33.76	68.33	74.00	-5.67	Peak	
4 *	2483.5000	17.89	33.76	51.65	54.00	-2.35	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Vertical

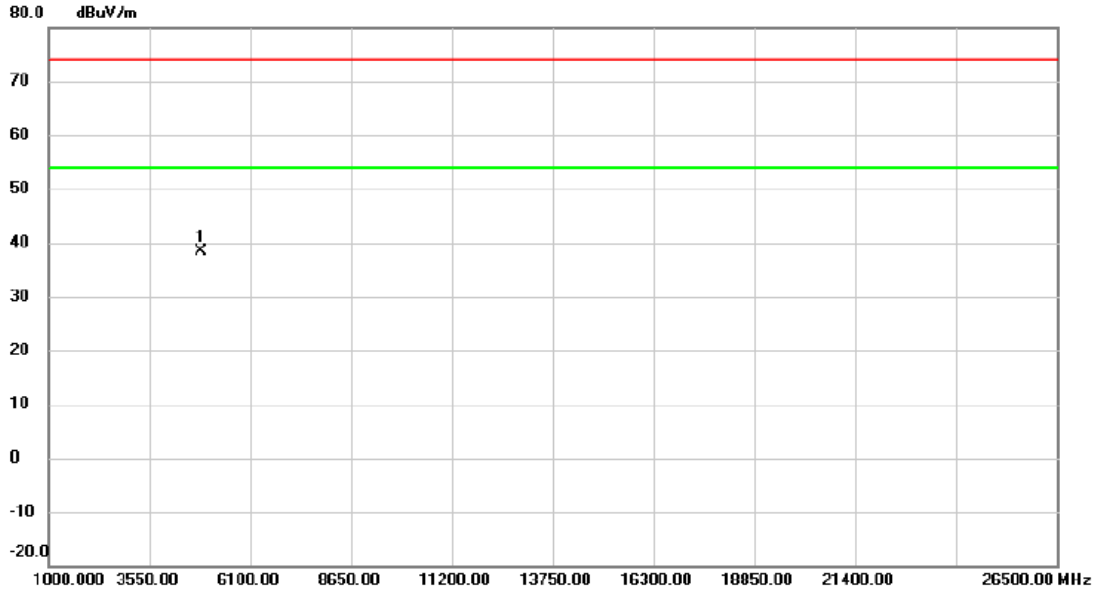

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	51.34	-12.86	38.48	74.00	-35.52	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Horizontal

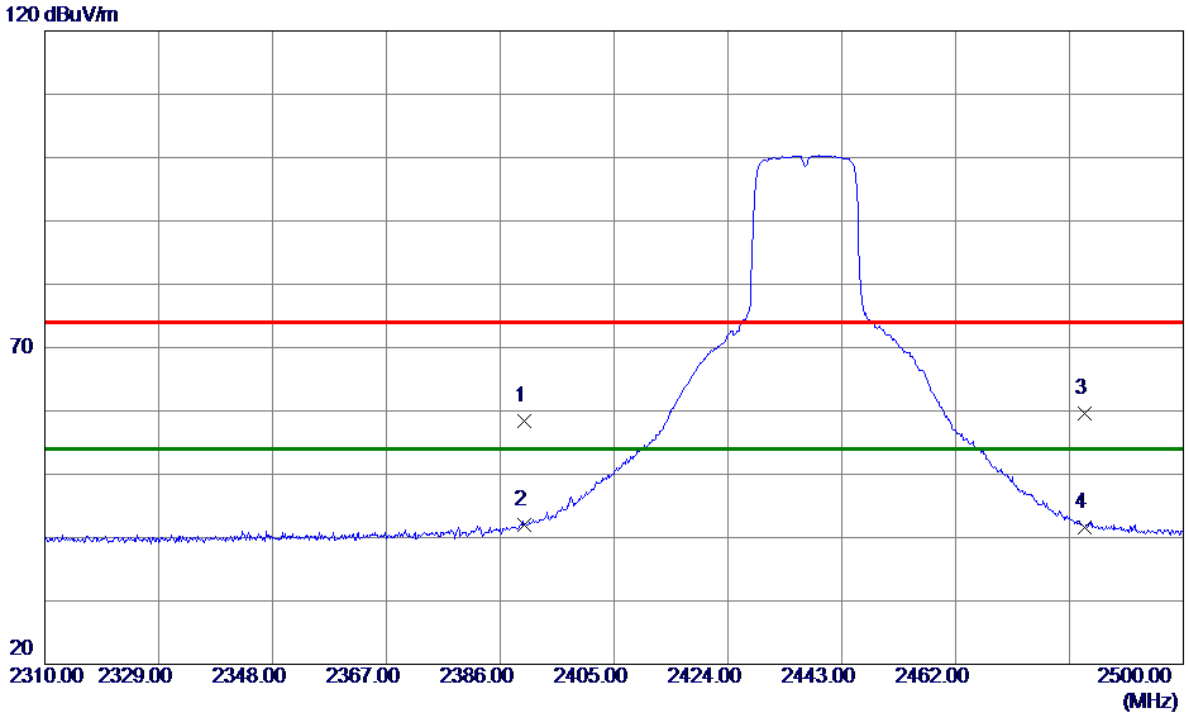

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	25.13	33.36	58.49	74.00	-15.51	Peak	
2 *	2390.0000	8.61	33.36	41.97	54.00	-12.03	AVG	
3	2483.5000	25.77	33.76	59.53	74.00	-14.47	Peak	
4	2483.5000	7.89	33.76	41.65	54.00	-12.35	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2437 MHz

Horizontal

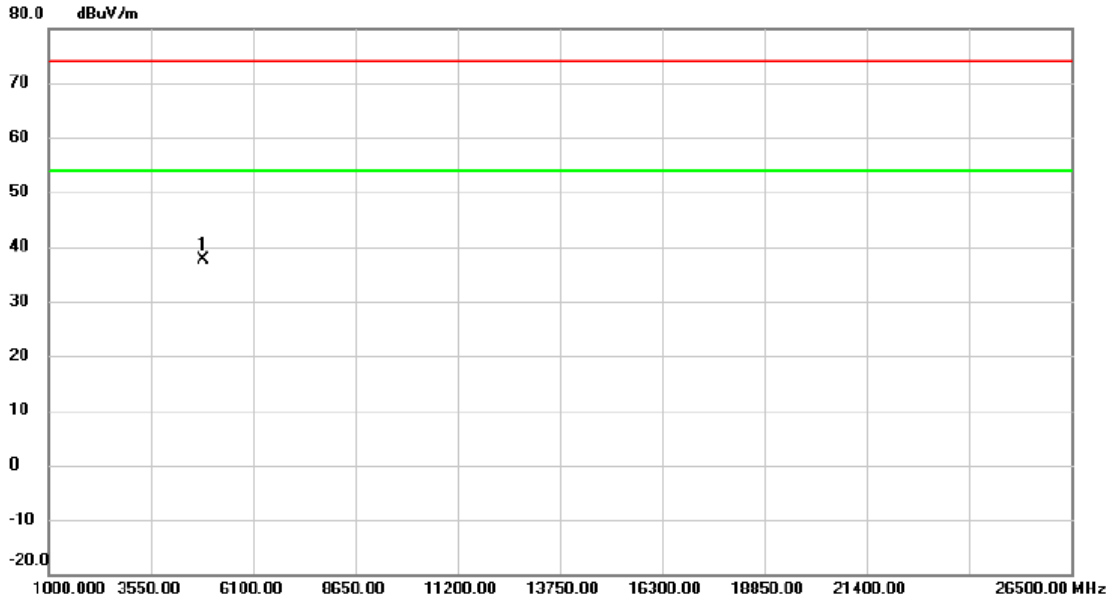

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.45	-12.86	37.59	74.00	-36.41	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Vertical

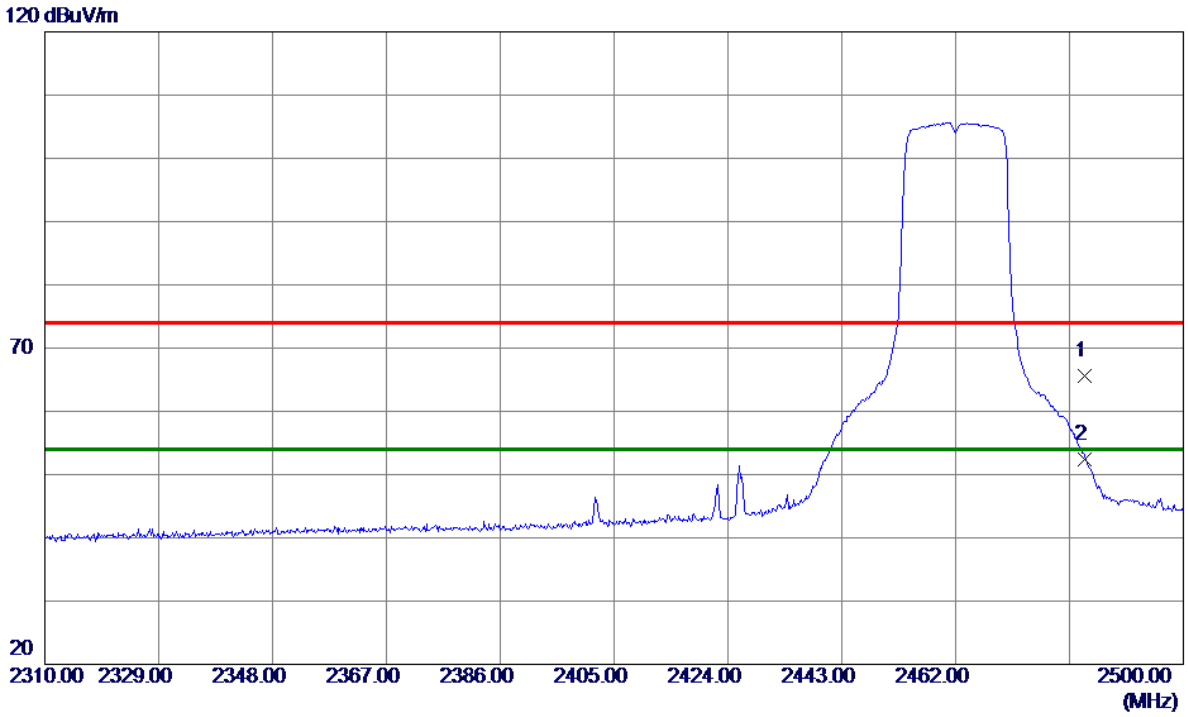

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	31.84	33.76	65.60	74.00	-8.40	Peak	
2 *	2483.5000	18.62	33.76	52.38	54.00	-1.62	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Vertical

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	52.22	-12.71	39.51	74.00	-34.49	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Horizontal

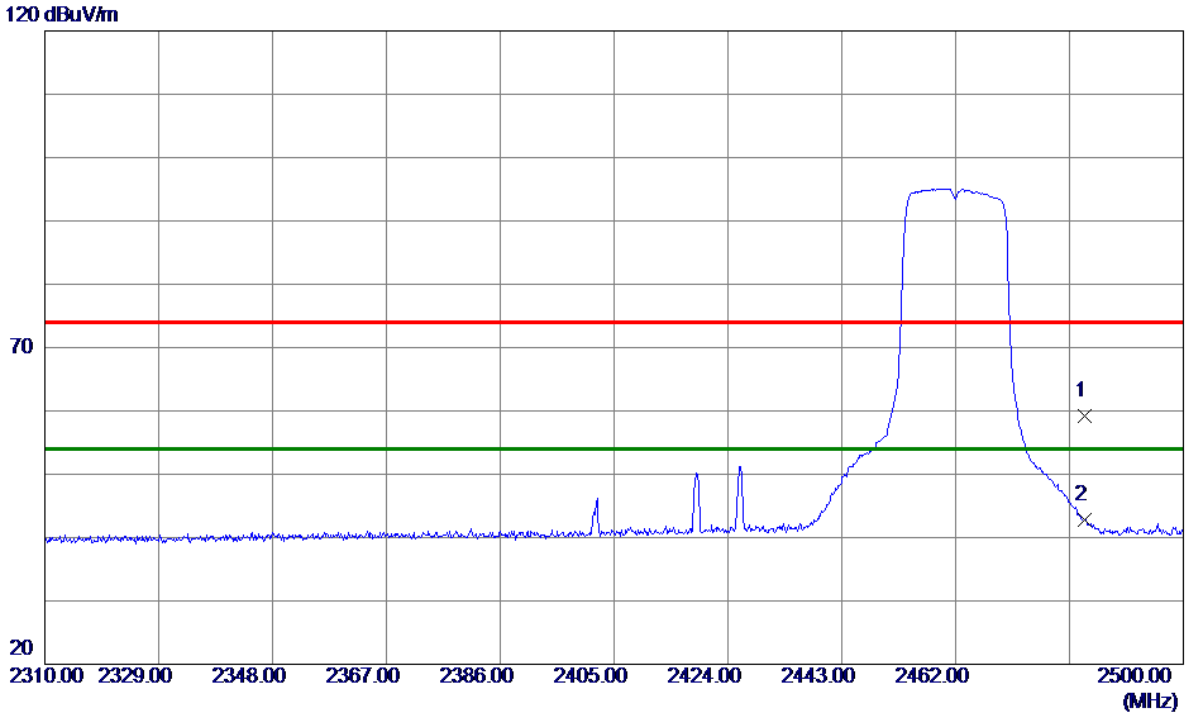

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	25.49	33.76	59.25	74.00	-14.75	Peak	
2 *	2483.5000	8.97	33.76	42.73	54.00	-11.27	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX G Mode 2462 MHz

Horizontal

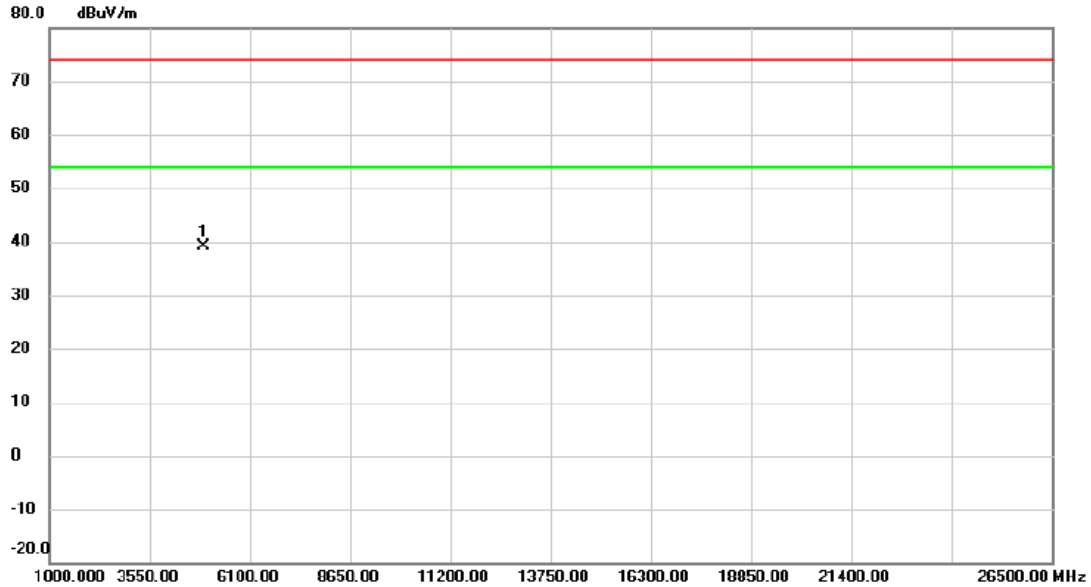

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	51.88	-12.71	39.17	74.00	-34.83	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Vertical

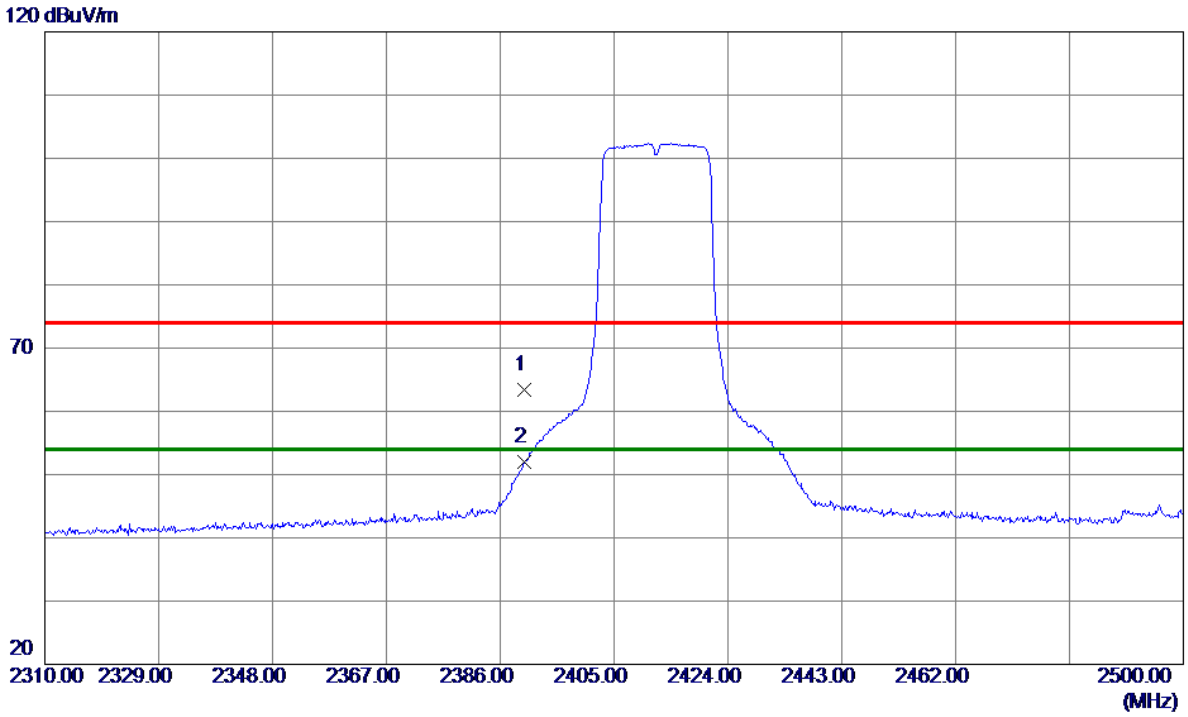

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	29.95	33.36	63.31	74.00	-10.69	Peak	
2 *	2390.0000	18.67	33.36	52.03	54.00	-1.97	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Vertical

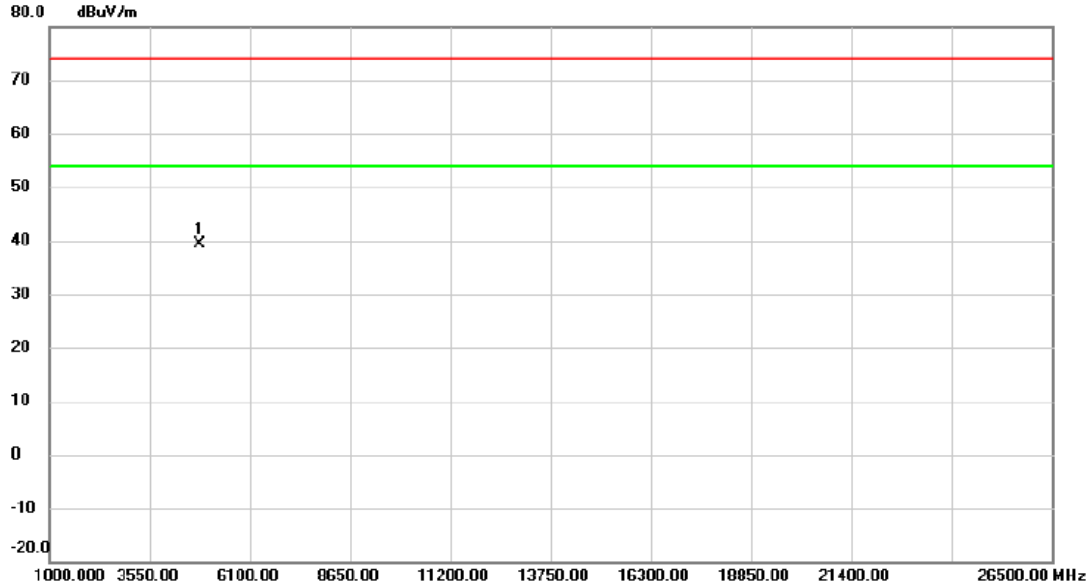

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	52.32	-13.03	39.29	74.00	-34.71	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Horizontal

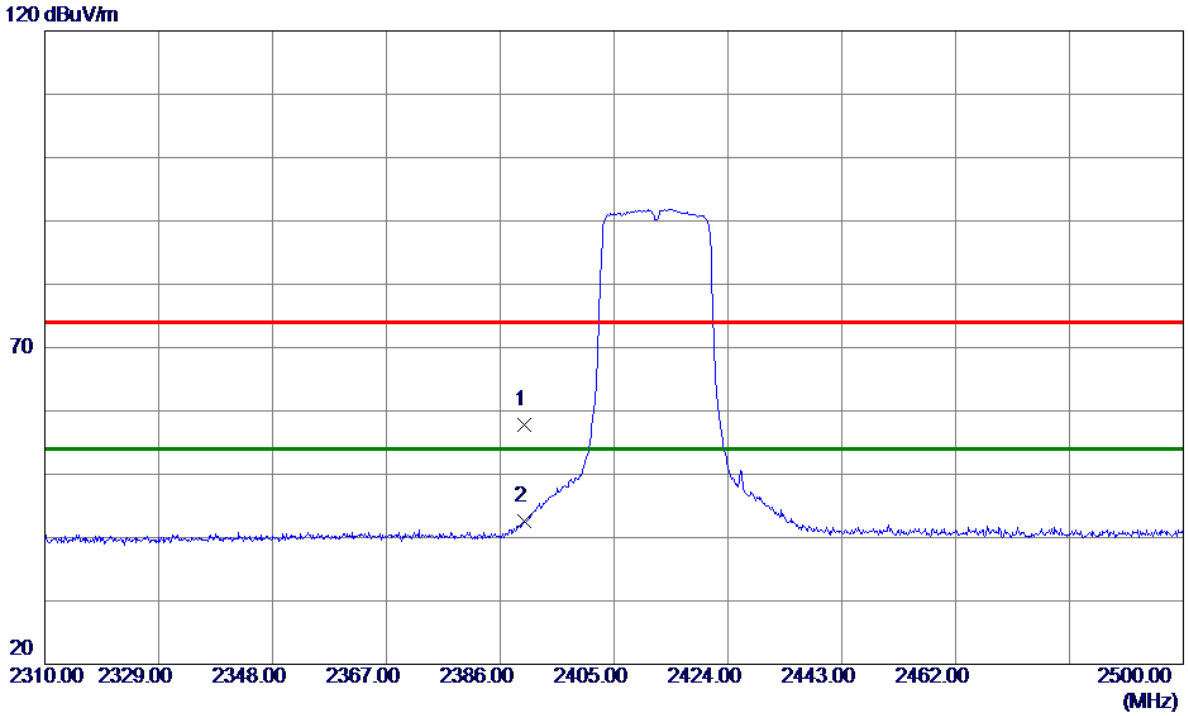

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.52	33.36	57.88	74.00	-16.12	Peak	
2 *	2390.0000	9.23	33.36	42.59	54.00	-11.41	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2412 MHz

Horizontal

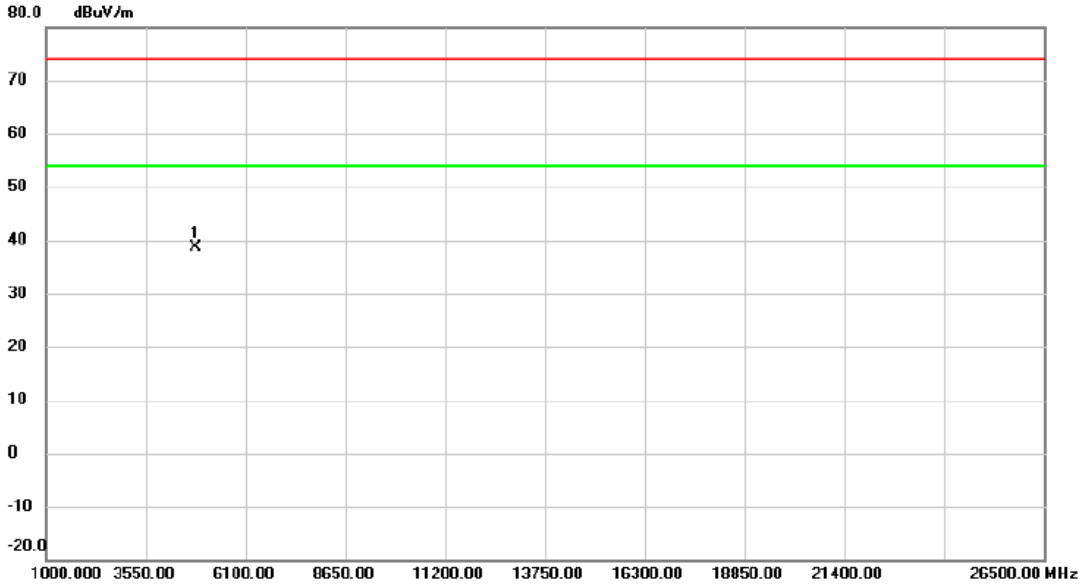

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4824.000	51.73	-13.03	38.70	74.00	-35.30	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Vertical

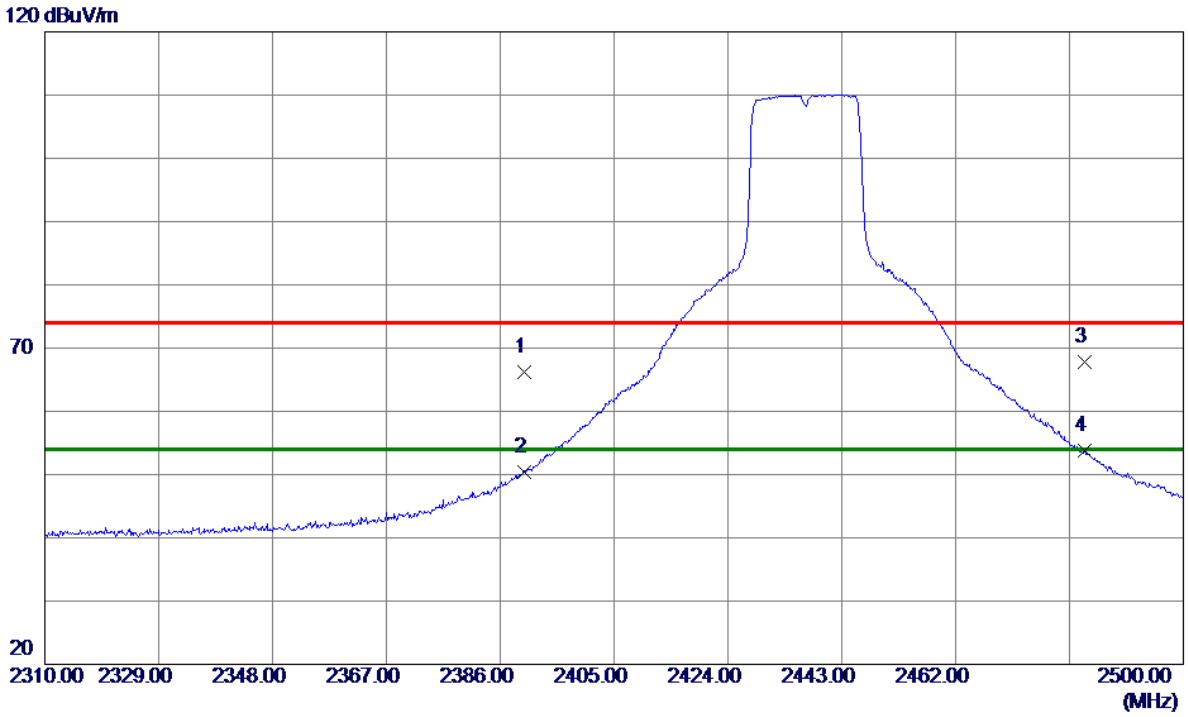

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	32.79	33.36	66.15	74.00	-7.85	Peak	
2	2390.0000	17.01	33.36	50.37	54.00	-3.63	AVG	
3	2483.5000	33.95	33.76	67.71	74.00	-6.29	Peak	
4 *	2483.5000	20.03	33.76	53.79	54.00	-0.21	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Vertical

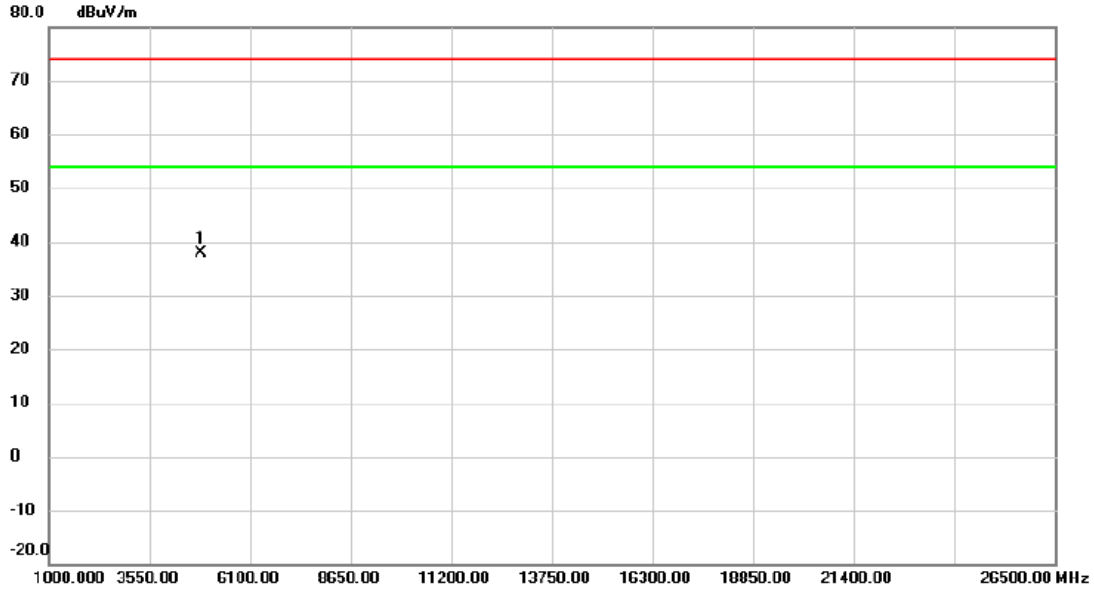

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	50.66	-12.86	37.80	74.00	-36.20	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Horizontal

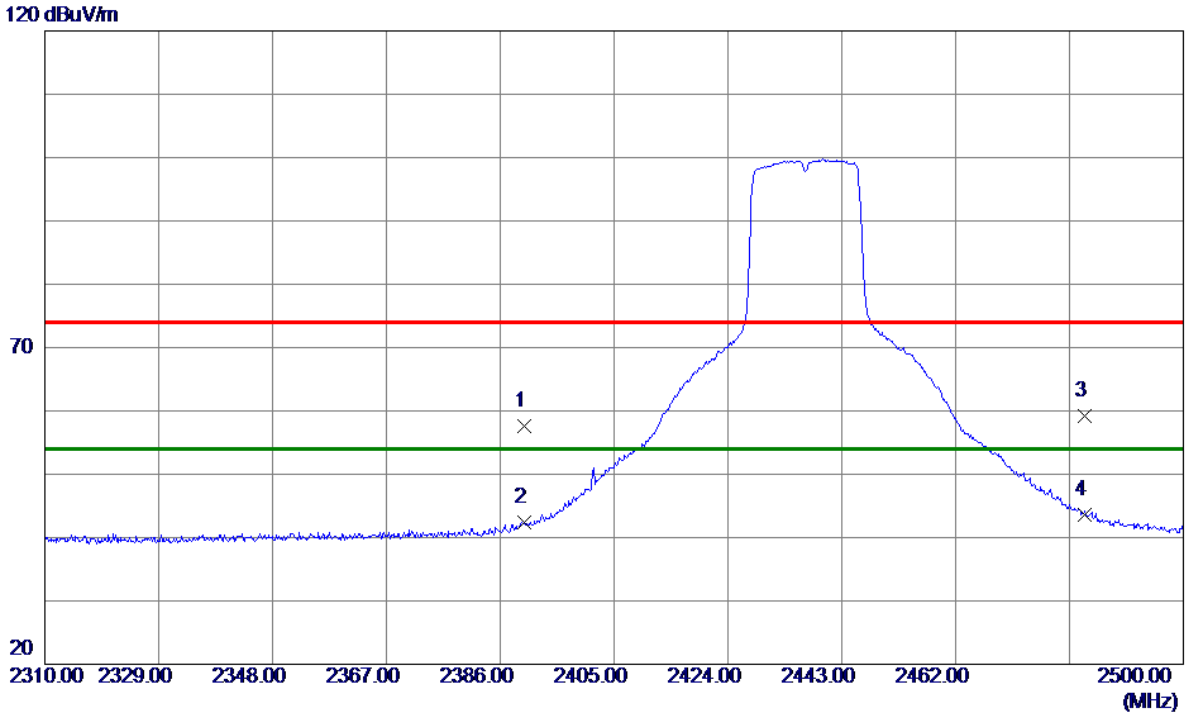

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.22	33.36	57.58	74.00	-16.42	Peak	
2	2390.0000	9.08	33.36	42.44	54.00	-11.56	AVG	
3	2483.5000	25.52	33.76	59.28	74.00	-14.72	Peak	
4 *	2483.5000	9.75	33.76	43.51	54.00	-10.49	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2437 MHz

Horizontal

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.000	51.52	-12.86	38.66	74.00	-35.34	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Vertical

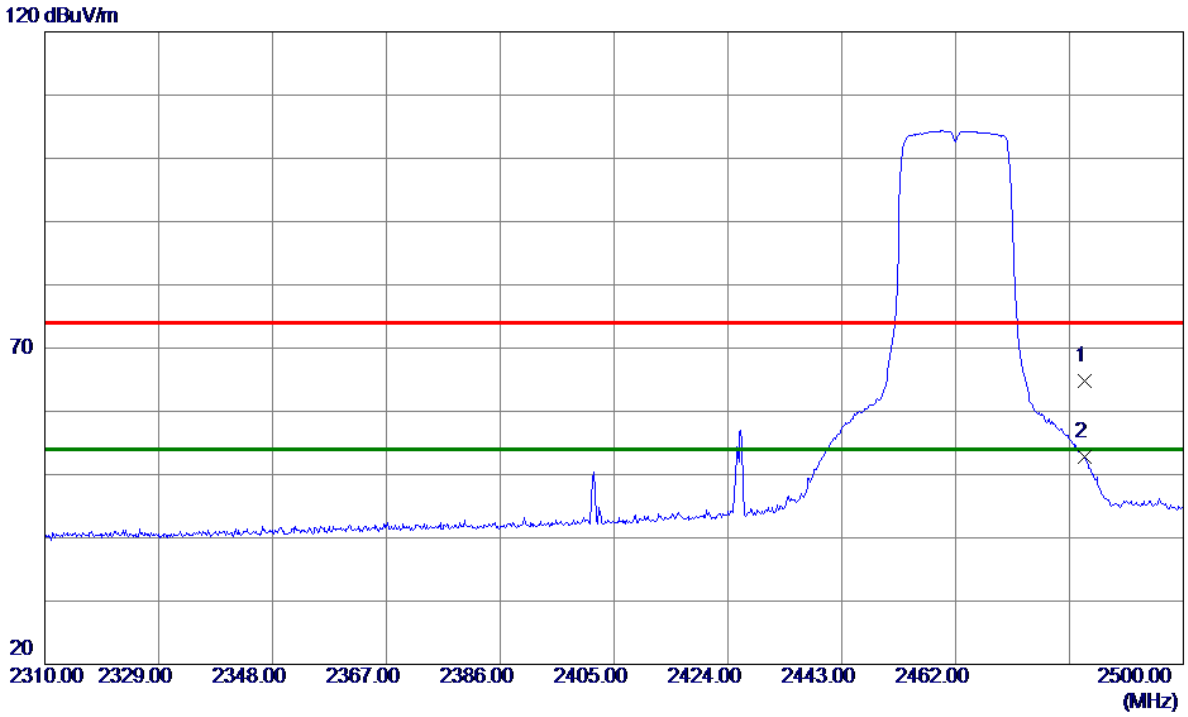

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	30.97	33.76	64.73	74.00	-9.27	Peak	
2 *	2483.5000	19.04	33.76	52.80	54.00	-1.20	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Vertical

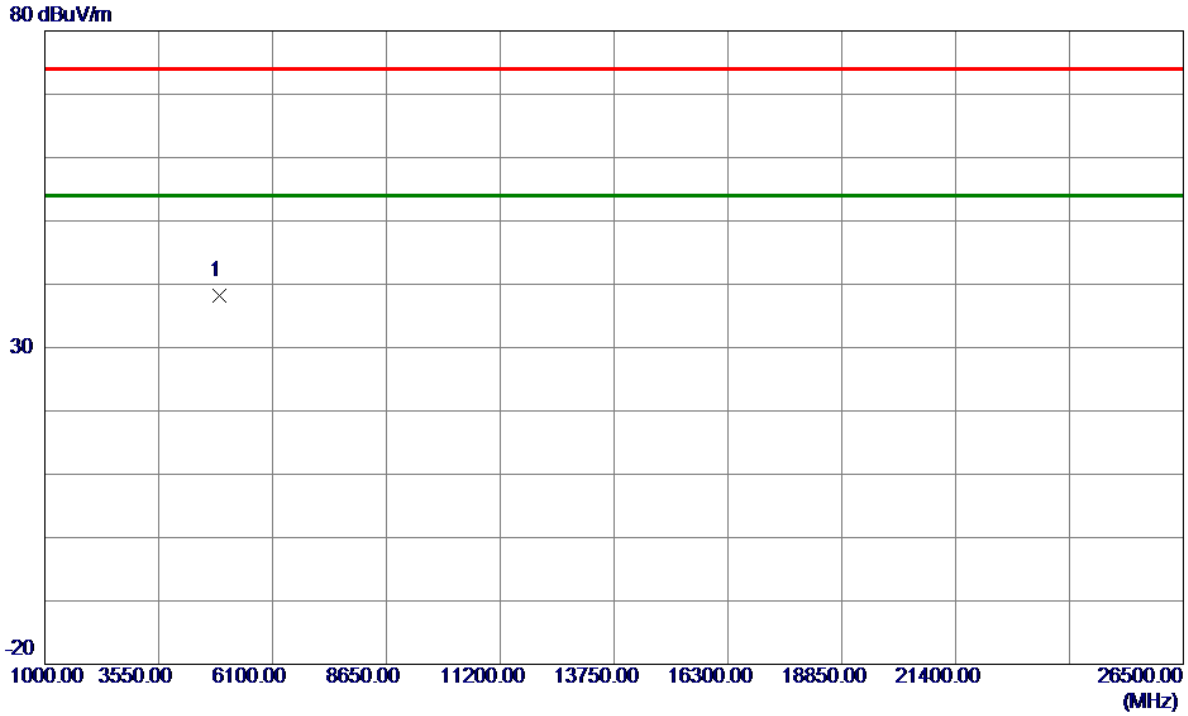

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4924.0000	50.90	-12.71	38.19	74.00	-35.81	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Horizontal

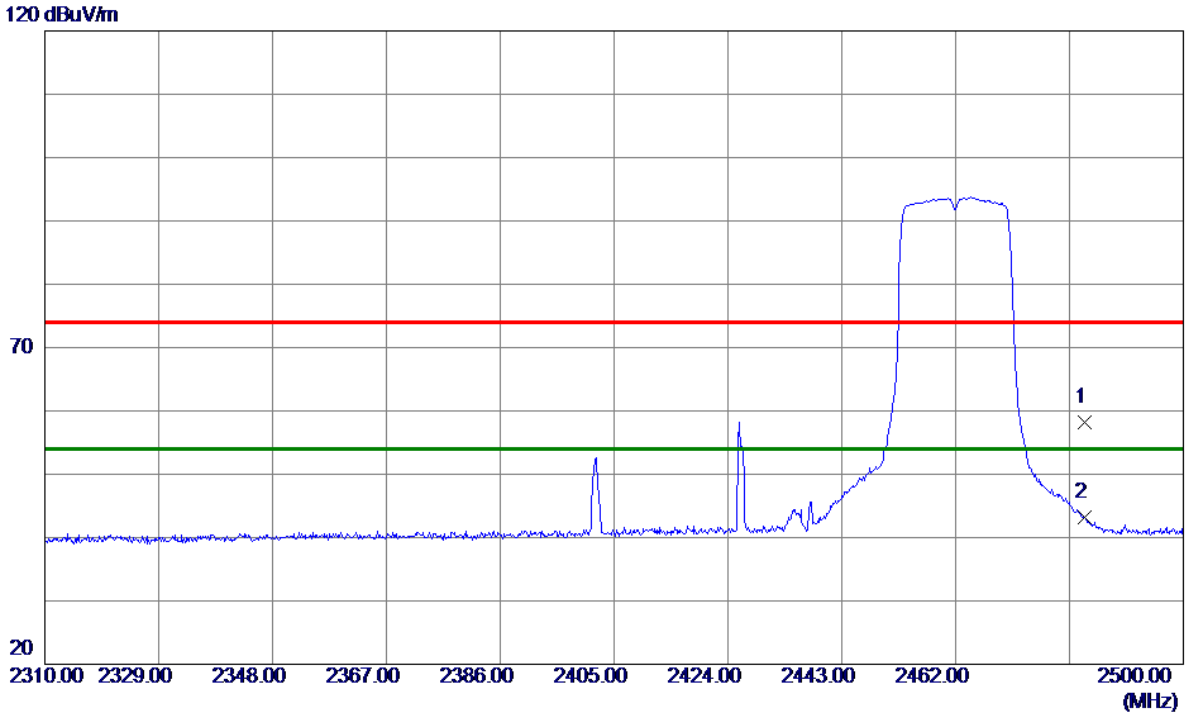

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	24.49	33.76	58.25	74.00	-15.75	Peak	
2 *	2483.5000	9.50	33.76	43.26	54.00	-10.74	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-20M Mode 2462 MHz

Horizontal

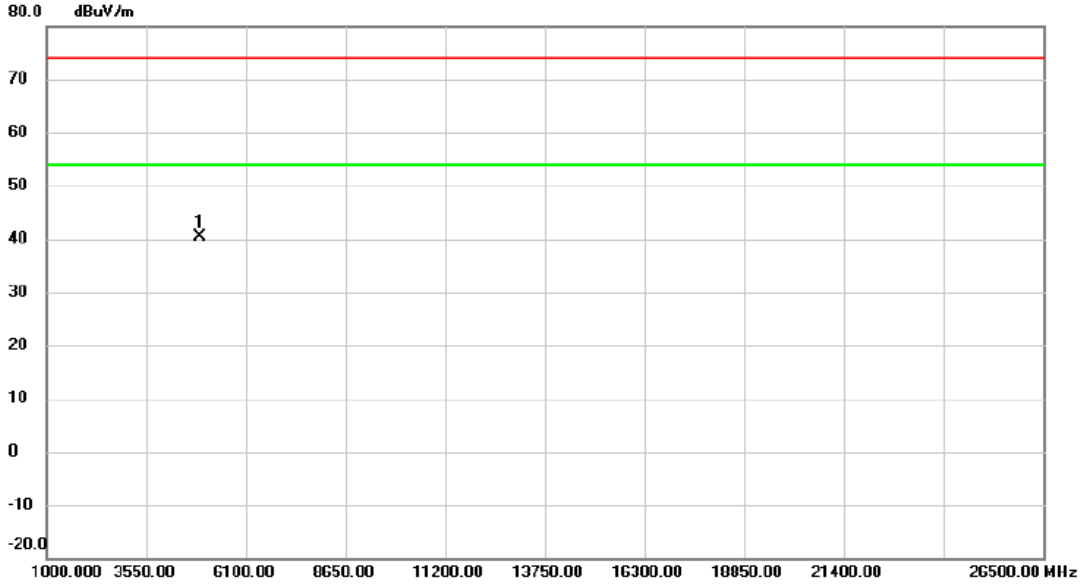

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.000	53.20	-12.71	40.49	74.00	-33.51	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Vertical

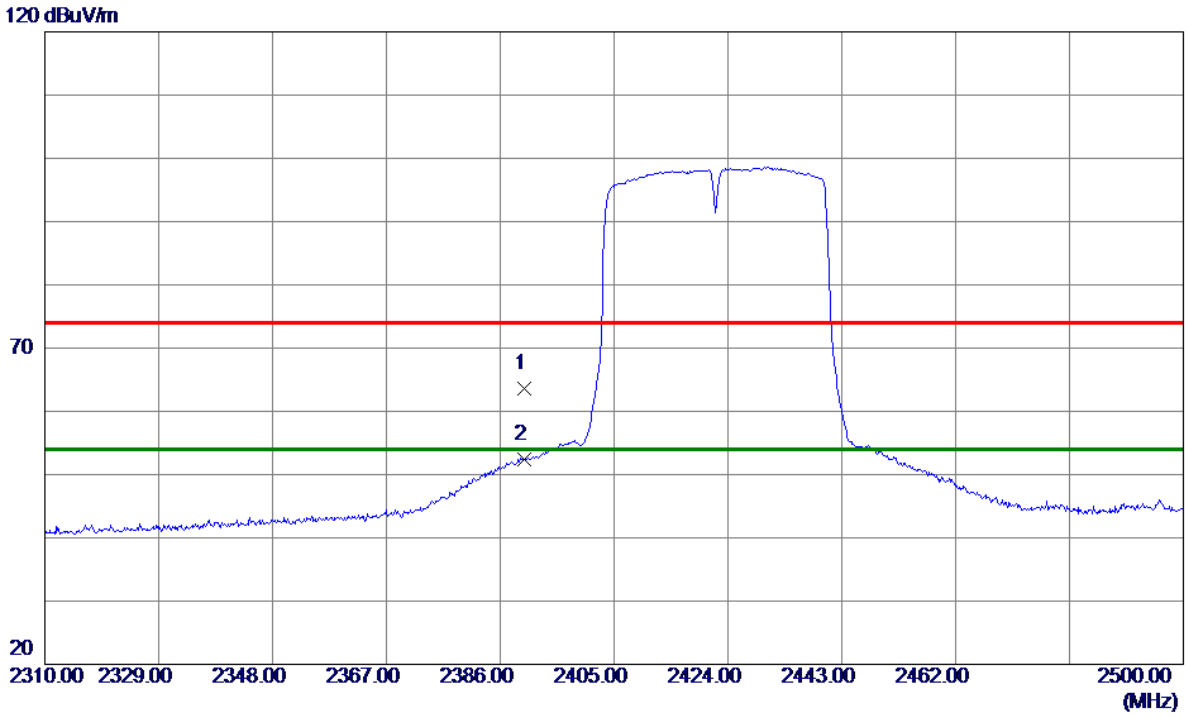

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	30.27	33.36	63.63	74.00	-10.37	Peak	
2 *	2390.0000	19.13	33.36	52.49	54.00	-1.51	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Vertical

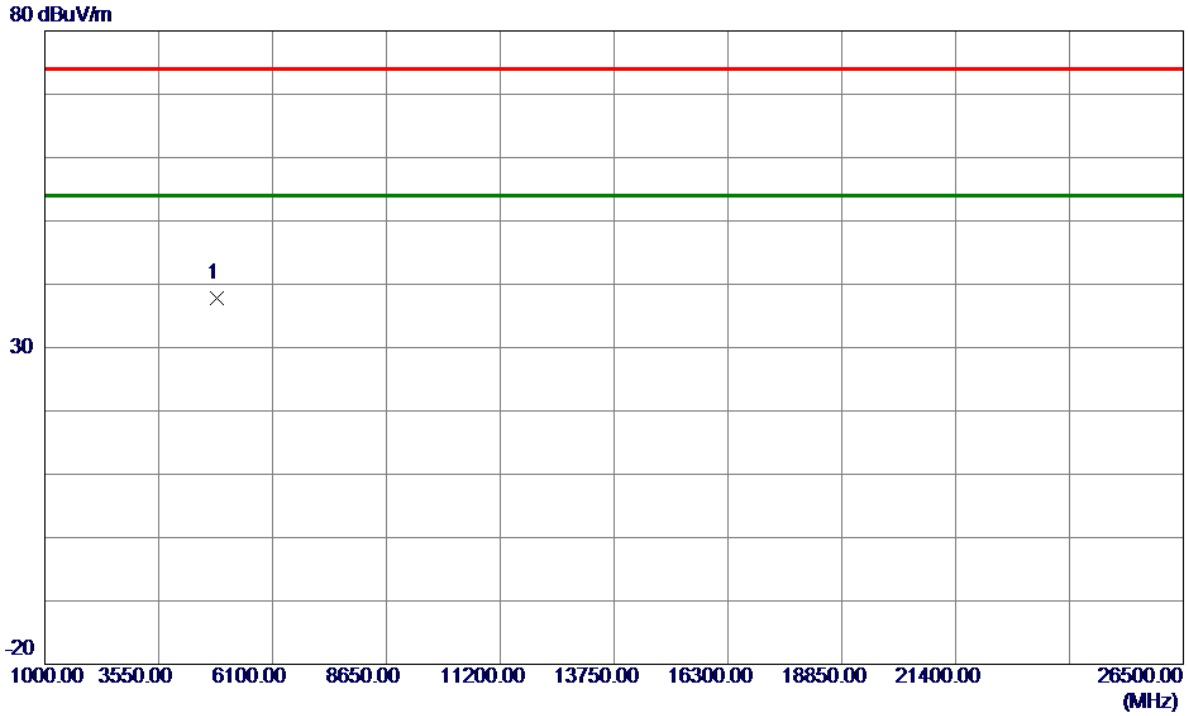

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4844.0000	50.73	-12.96	37.77	74.00	-36.23	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Horizontal

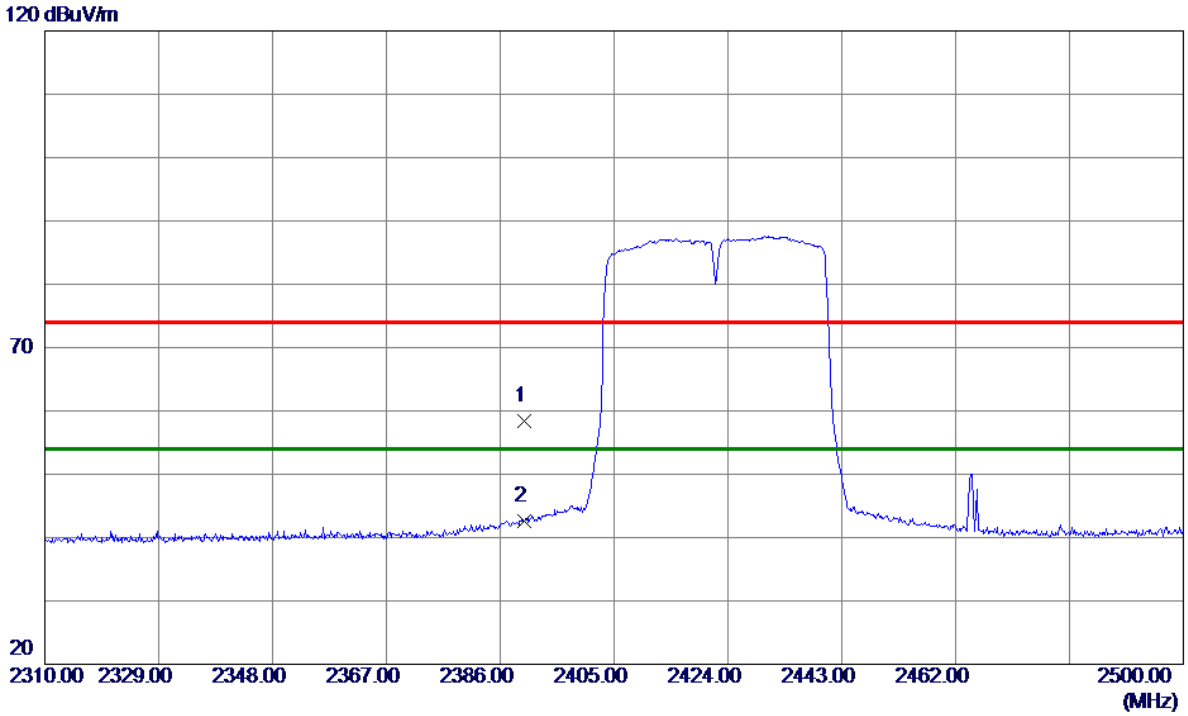

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.99	33.36	58.35	74.00	-15.65	Peak	
2 *	2390.0000	9.32	33.36	42.68	54.00	-11.32	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2422MHz

Horizontal

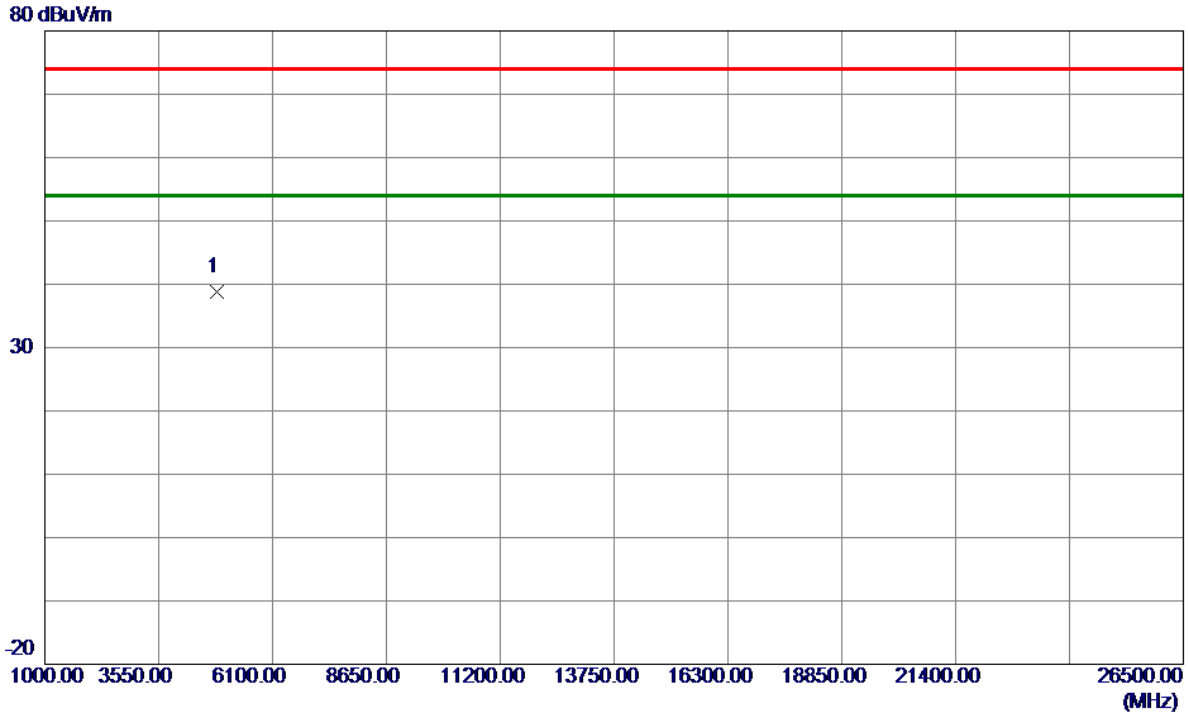

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4844.0000	51.81	-12.96	38.85	74.00	-35.15	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Vertical

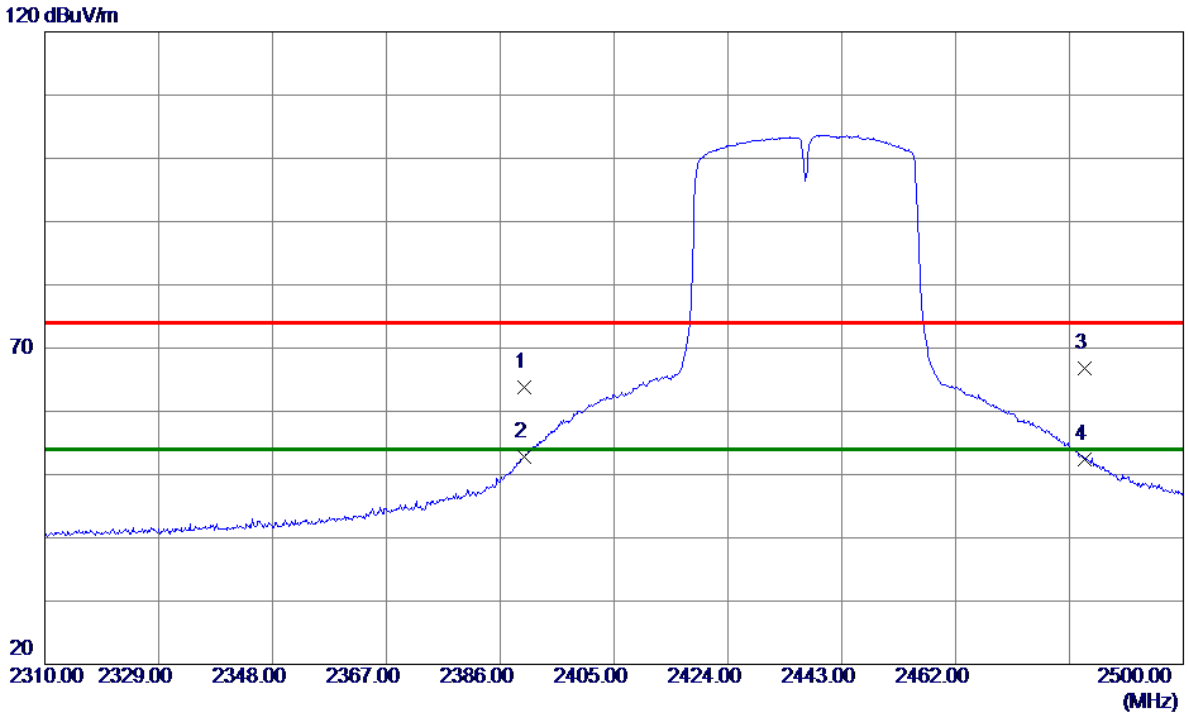

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	30.43	33.36	63.79	74.00	-10.21	Peak	
2 *	2390.0000	19.46	33.36	52.82	54.00	-1.18	AVG	
3	2483.5000	33.11	33.76	66.87	74.00	-7.13	Peak	
4	2483.5000	18.73	33.76	52.49	54.00	-1.51	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Vertical

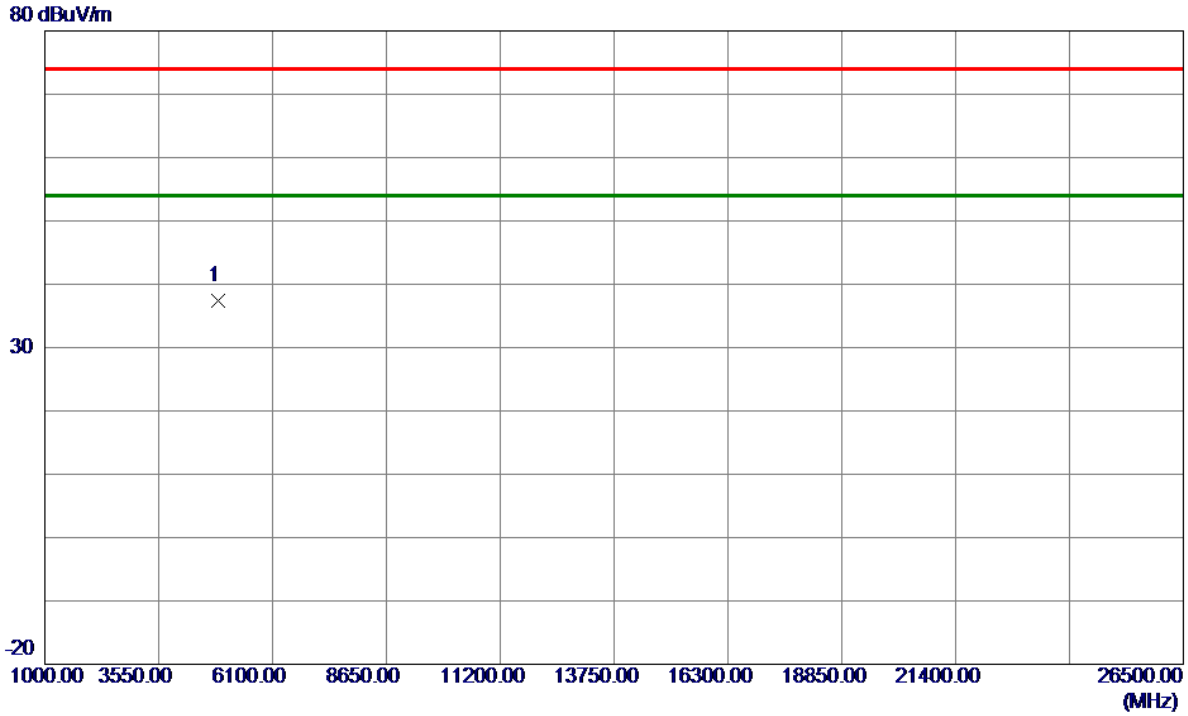

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4874.0000	50.20	-12.87	37.33	74.00	-36.67	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Horizontal

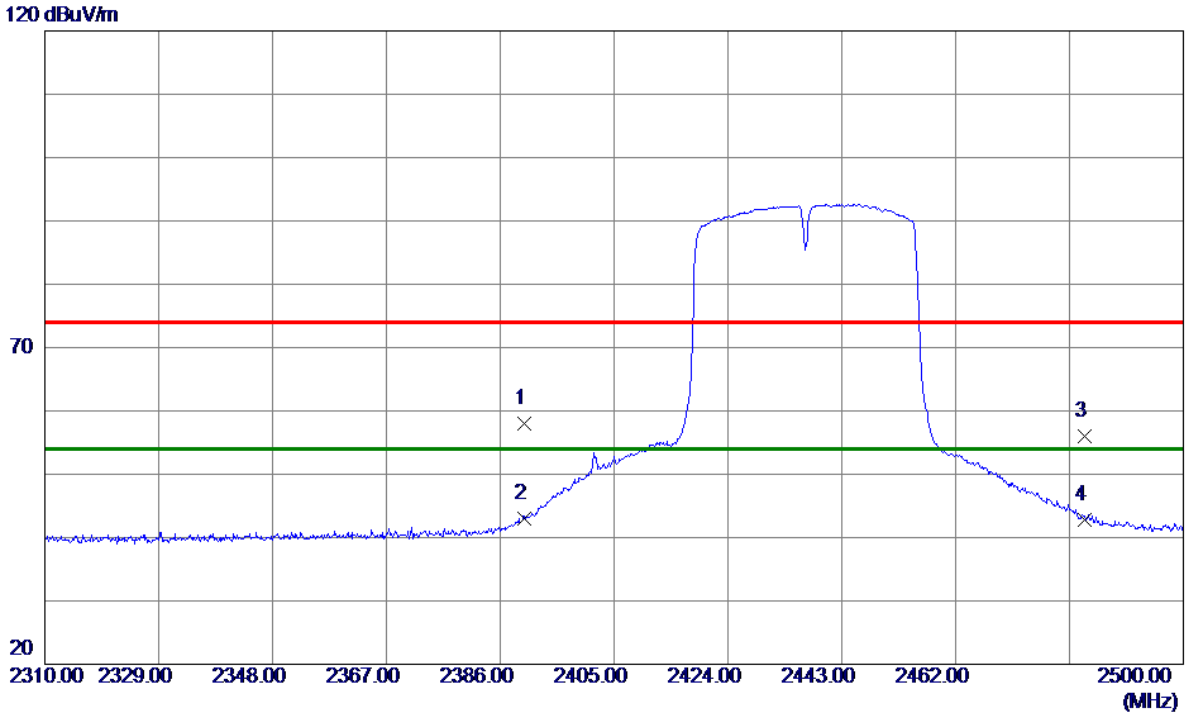

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2390.0000	24.66	33.36	58.02	74.00	-15.98	Peak	
2 *	2390.0000	9.67	33.36	43.03	54.00	-10.97	AVG	
3	2483.5000	22.28	33.76	56.04	74.00	-17.96	Peak	
4	2483.5000	8.98	33.76	42.74	54.00	-11.26	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2437 MHz

Horizontal

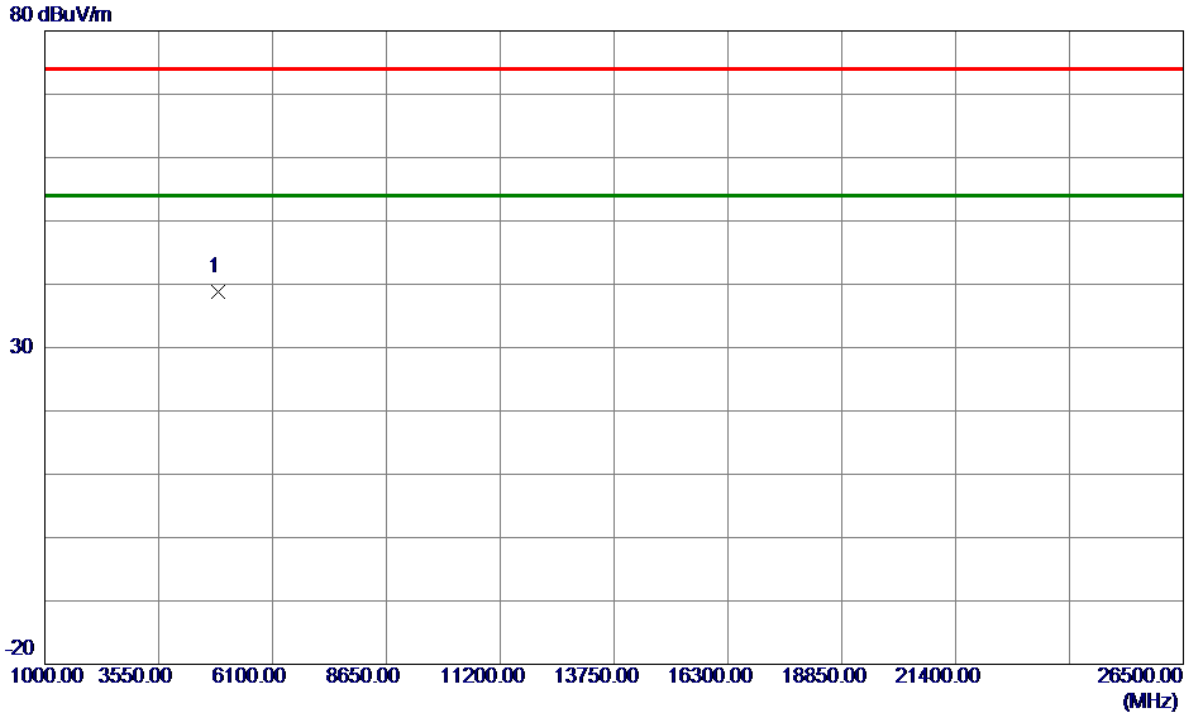

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4874.0000	51.63	-12.87	38.76	74.00	-35.24	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Vertical

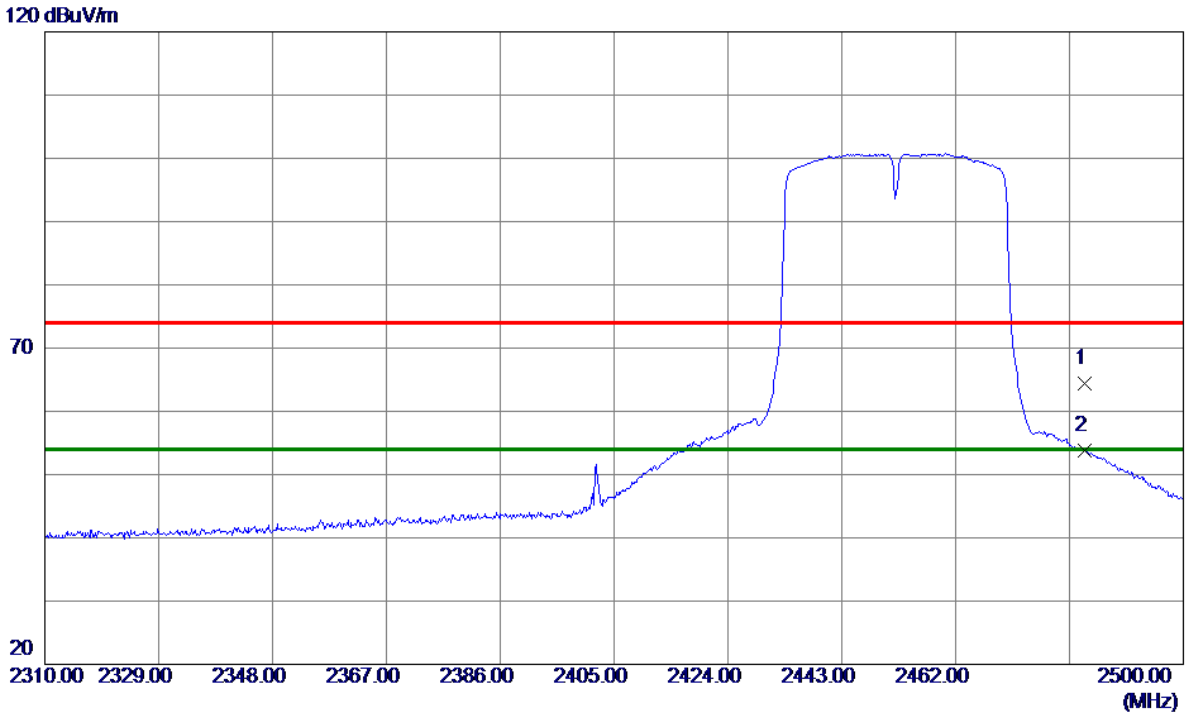

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	30.59	33.76	64.35	74.00	-9.65	Peak	
2 *	2483.5000	19.98	33.76	53.74	54.00	-0.26	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Vertical

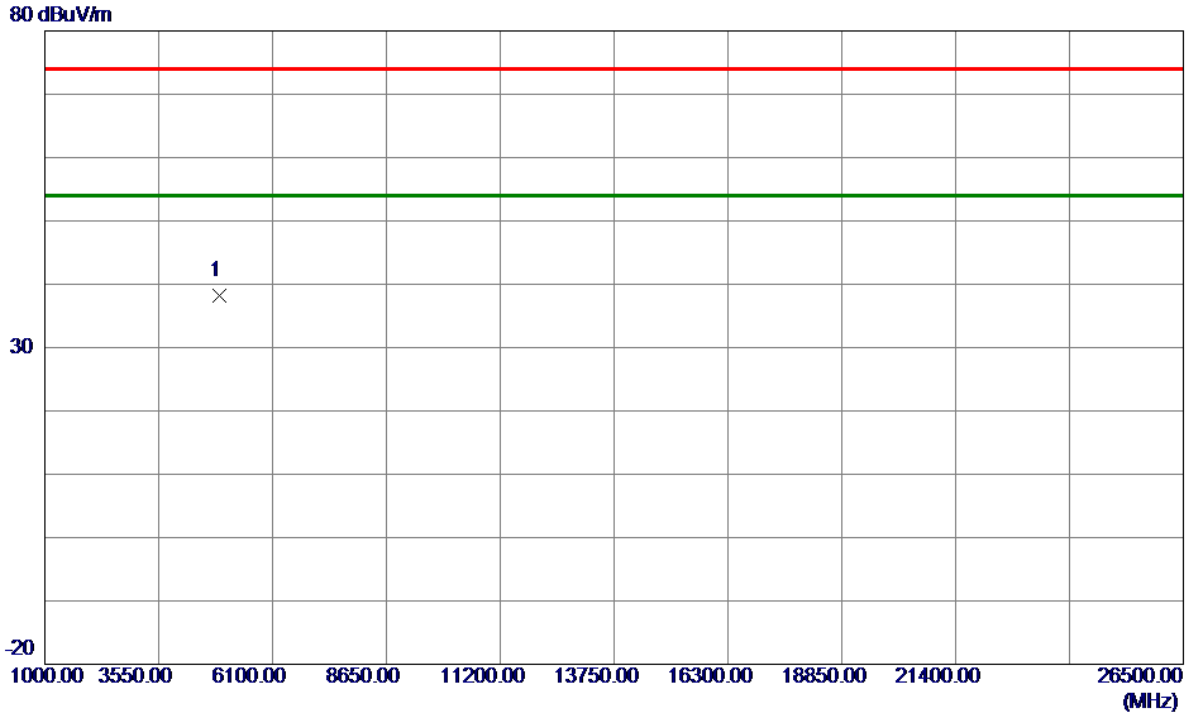

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4904.0000	51.01	-12.78	38.23	74.00	-35.77	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Horizontal

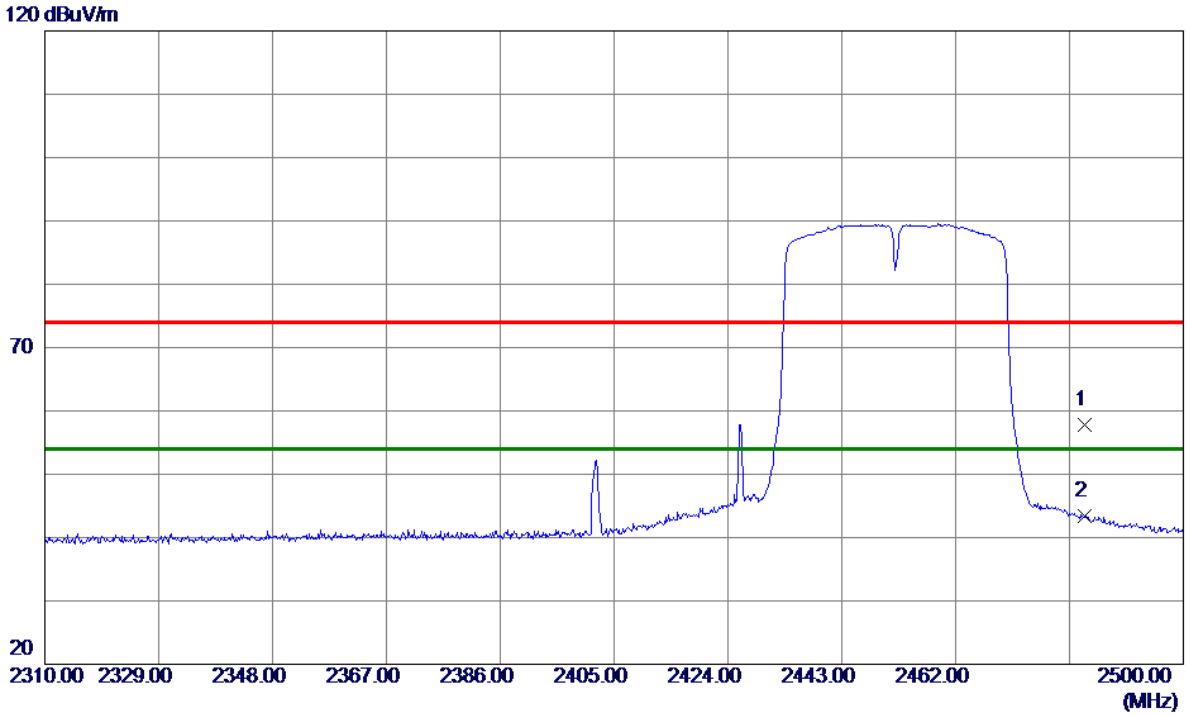

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	2483.5000	24.09	33.76	57.85	74.00	-16.15	Peak	
2 *	2483.5000	9.62	33.76	43.38	54.00	-10.62	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX N-40M Mode 2452 MHz

Horizontal

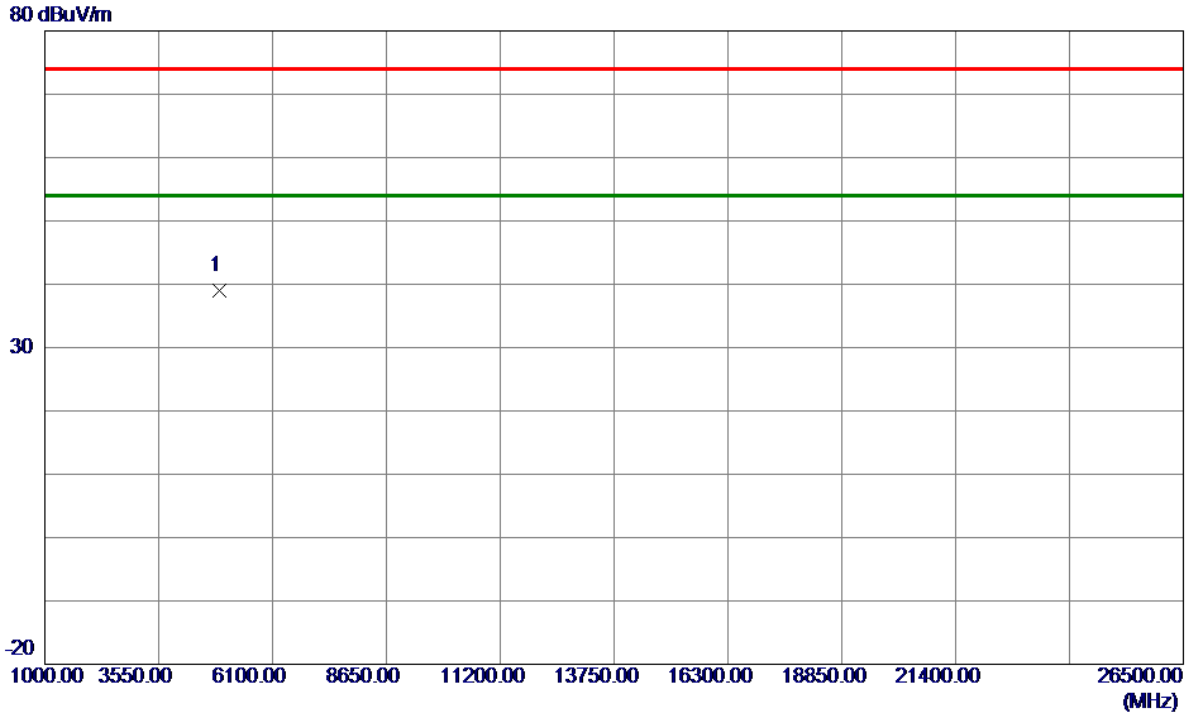

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	4904.0000	51.87	-12.78	39.09	74.00	-34.91	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2412 MHz

Vertical

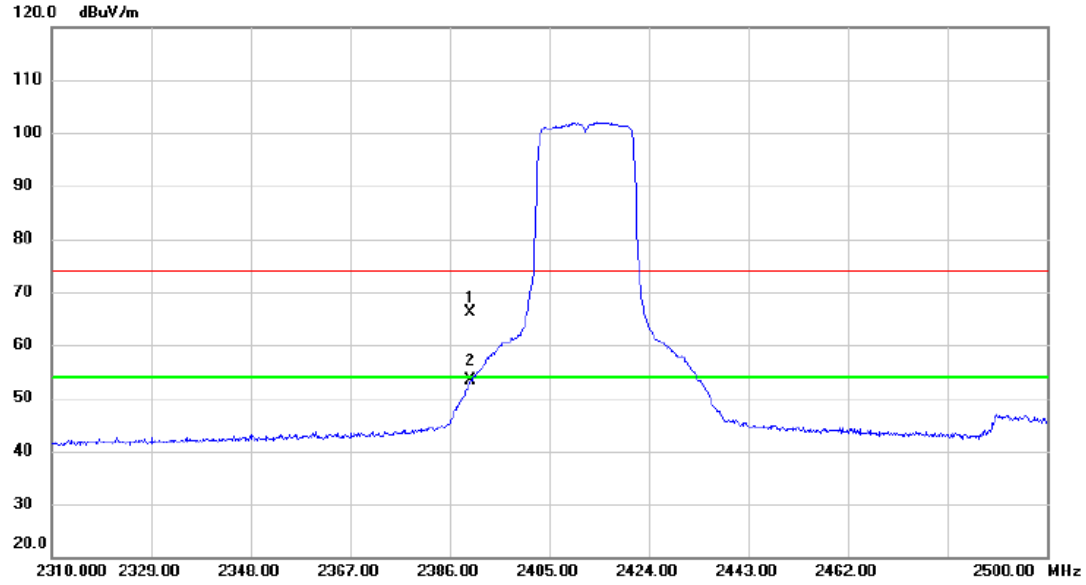

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	32.88	33.36	66.24	74.00	-7.76	peak	
2	*	2390.000	19.97	33.36	53.33	54.00	-0.67	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Vertical

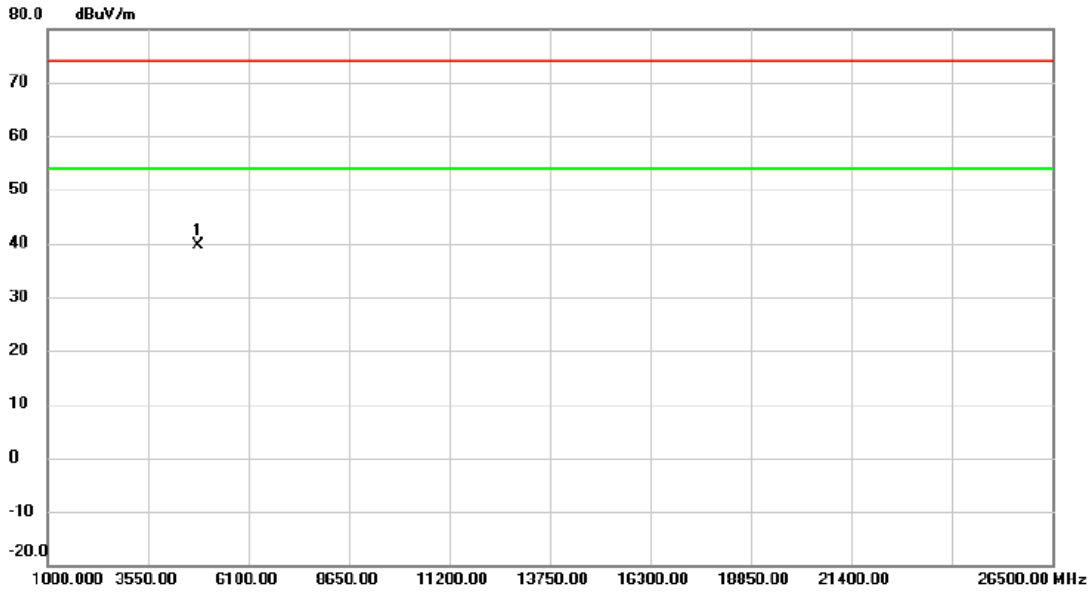

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4826.265	52.56	-13.01	39.55	74.00	-34.45	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Horizontal

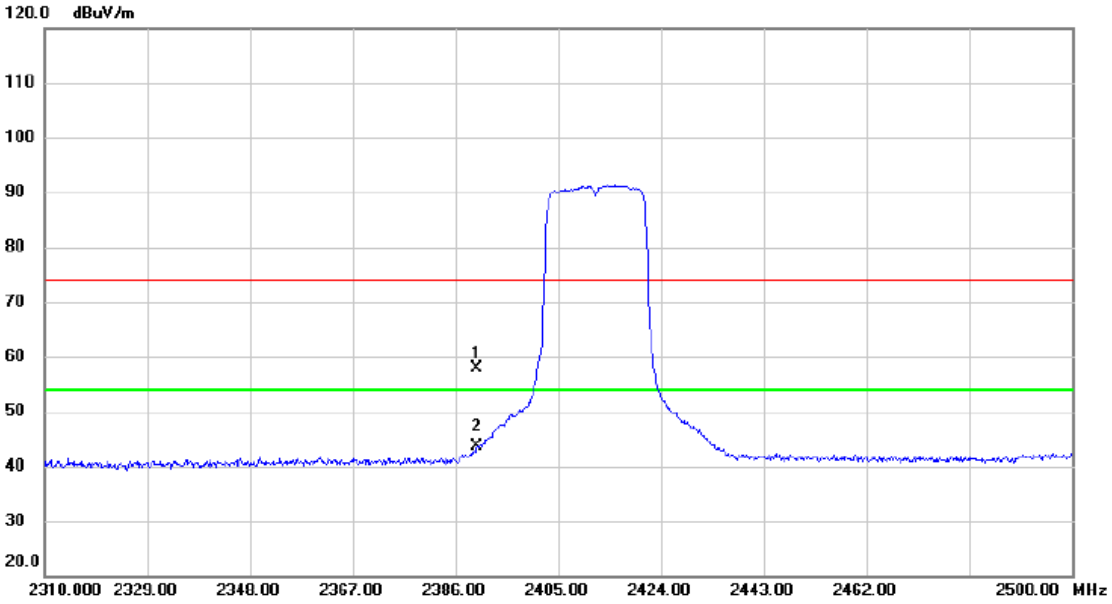

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	24.42	33.36	57.78	74.00	-16.22	peak	
2	*	2390.000	10.24	33.36	43.60	54.00	-10.40	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2412 MHz

Horizontal

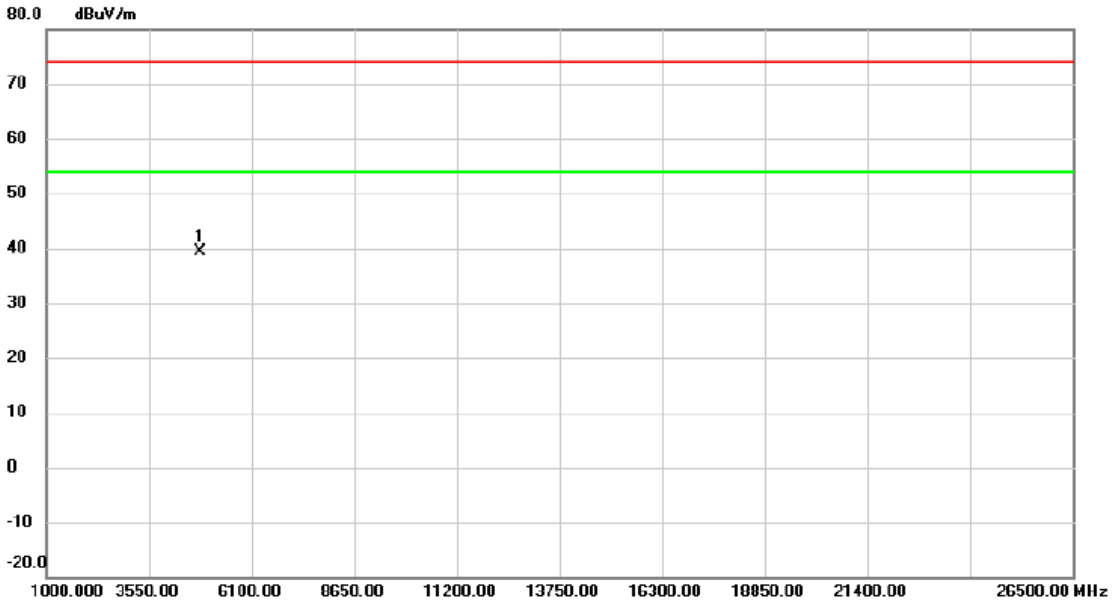

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4825.605	52.28	-13.01	39.27	74.00	-34.73	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2437 MHz

Vertical

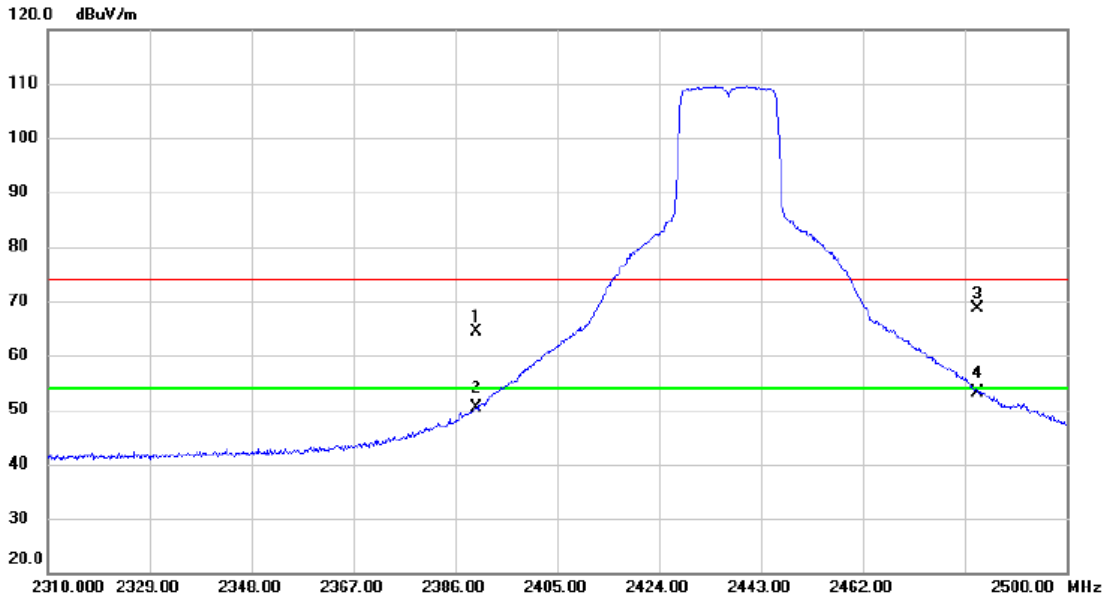

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	31.07	33.36	64.43	74.00	-9.57	peak	
2		2390.000	16.93	33.36	50.29	54.00	-3.71	AVG	
3		2483.500	34.82	33.76	68.58	74.00	-5.42	peak	
4	*	2483.500	19.47	33.76	53.23	54.00	-0.77	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Vertical

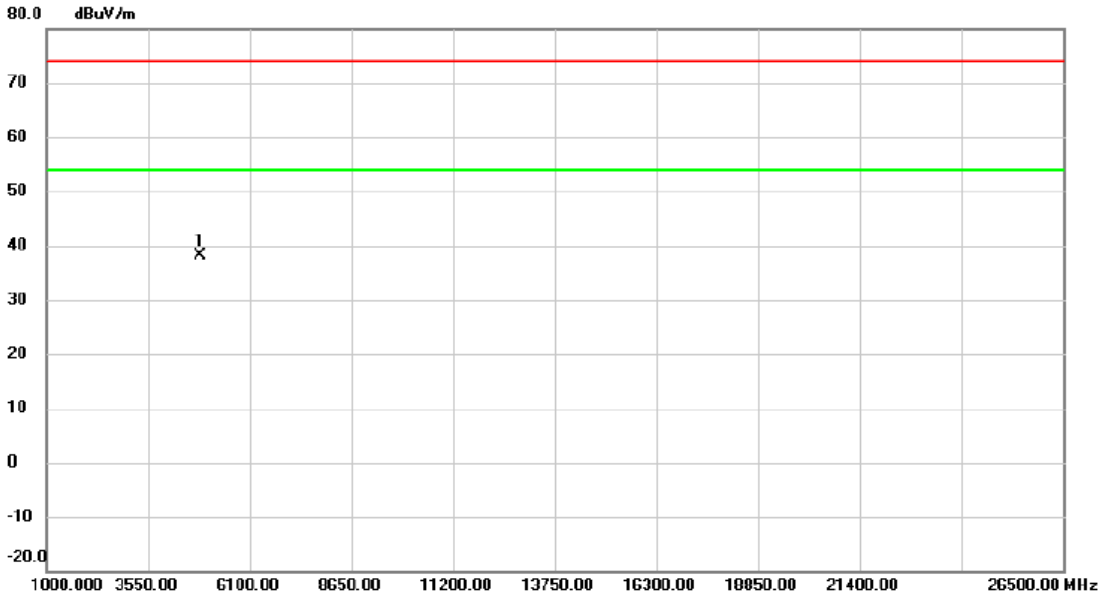

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4871.560	50.99	-12.88	38.11	74.00	-35.89	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Horizontal

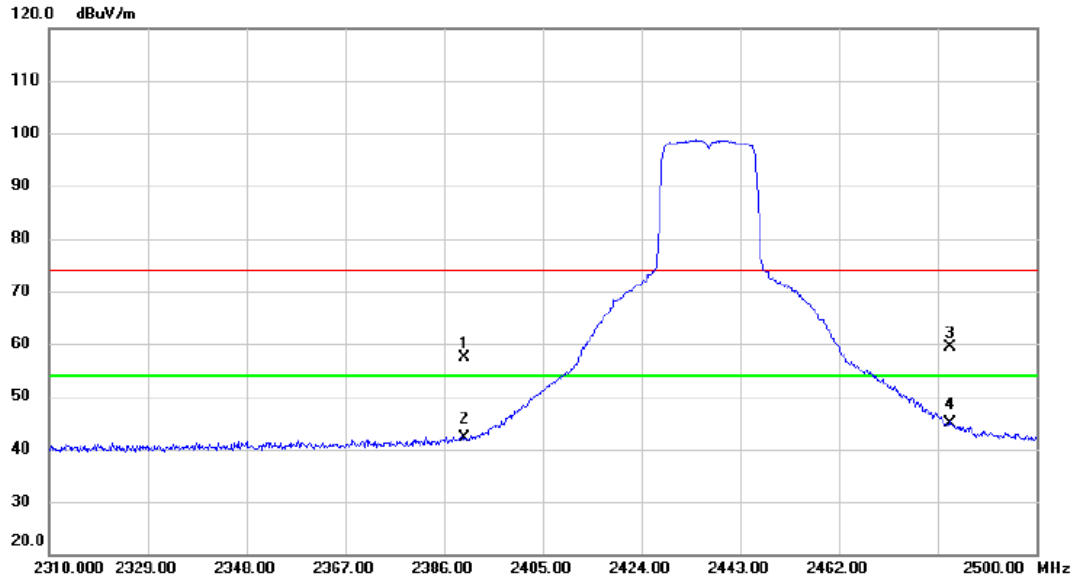

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	24.12	33.36	57.48	74.00	-16.52	peak	
2		2390.000	8.83	33.36	42.19	54.00	-11.81	AVG	
3		2483.500	25.67	33.76	59.43	74.00	-14.57	peak	
4	*	2483.500	11.01	33.76	44.77	54.00	-9.23	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2437 MHz

Horizontal

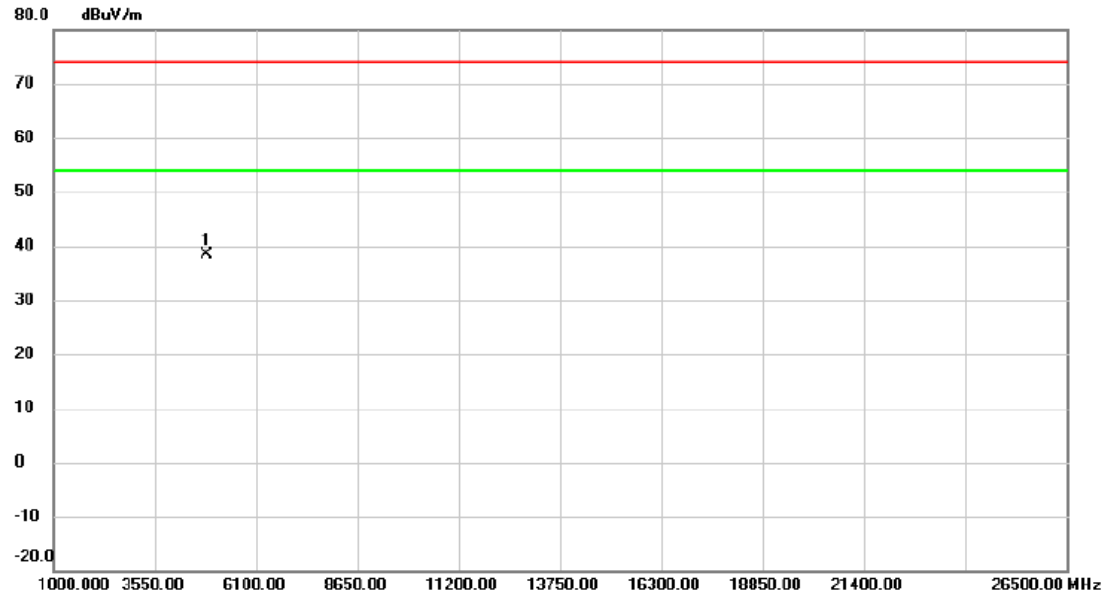

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4872.000	51.34	-12.88	38.46	74.00	-35.54	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC-20M Mode 2462 MHz

Vertical

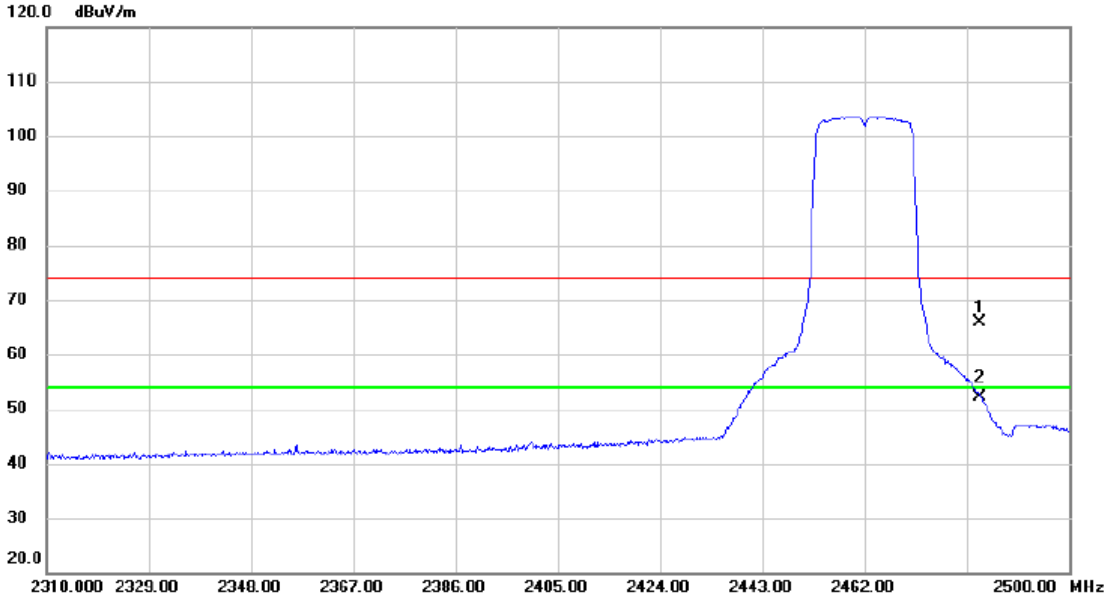

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	32.01	33.76	65.77	74.00	-8.23	peak	
2	*	2483.500	18.36	33.76	52.12	54.00	-1.88	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Vertical

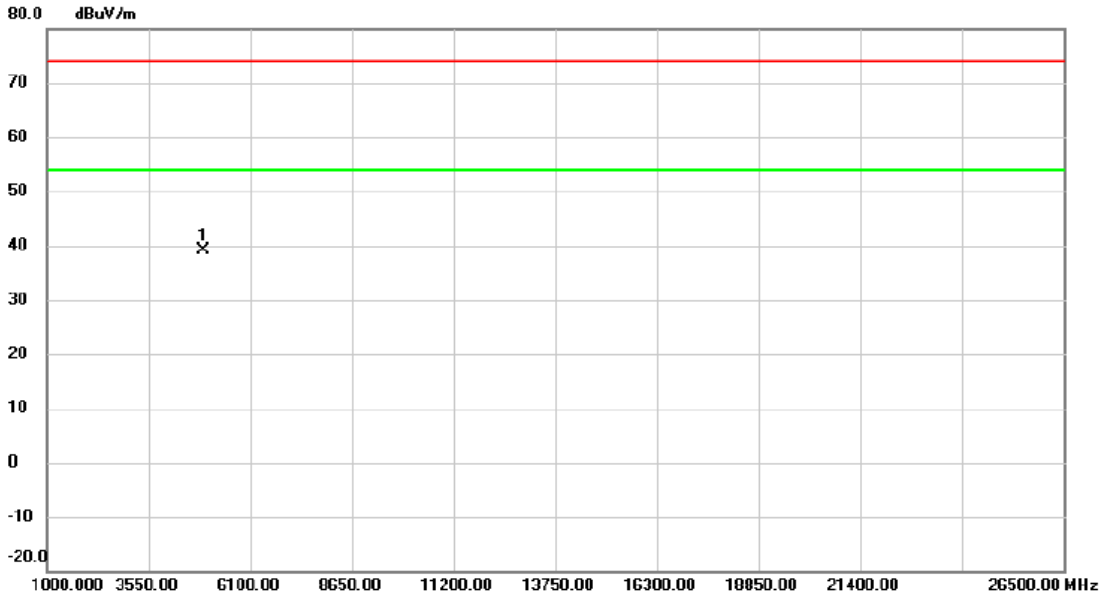

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4921.845	51.86	-12.72	39.14	74.00	-34.86	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Horizontal

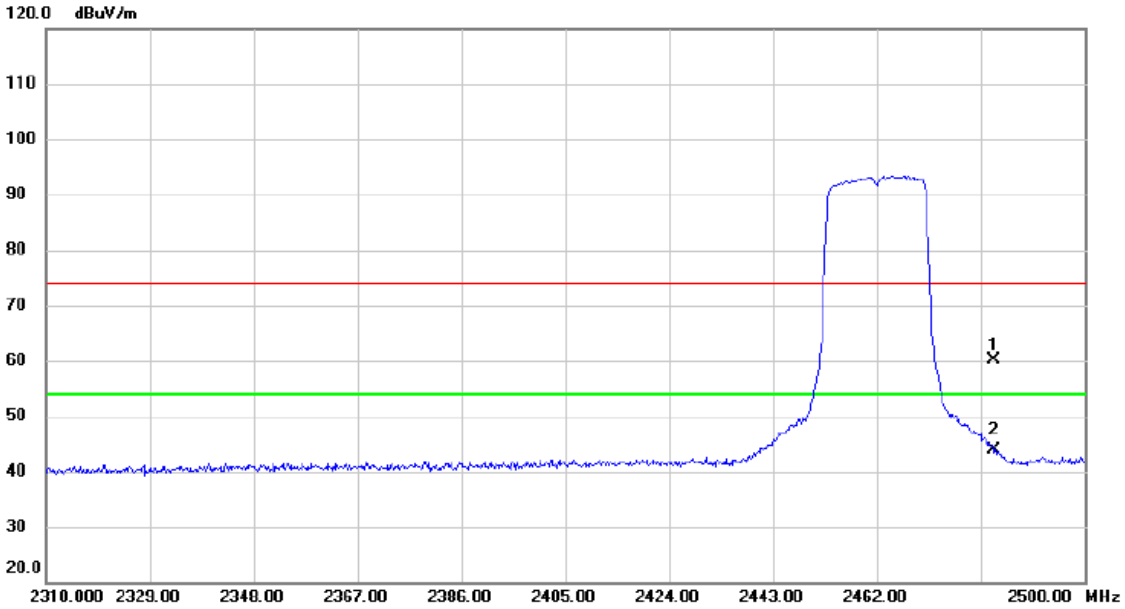

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	26.25	33.76	60.01	74.00	-13.99	peak	
2	*	2483.500	10.09	33.76	43.85	54.00	-10.15	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -20M Mode 2462 MHz

Horizontal

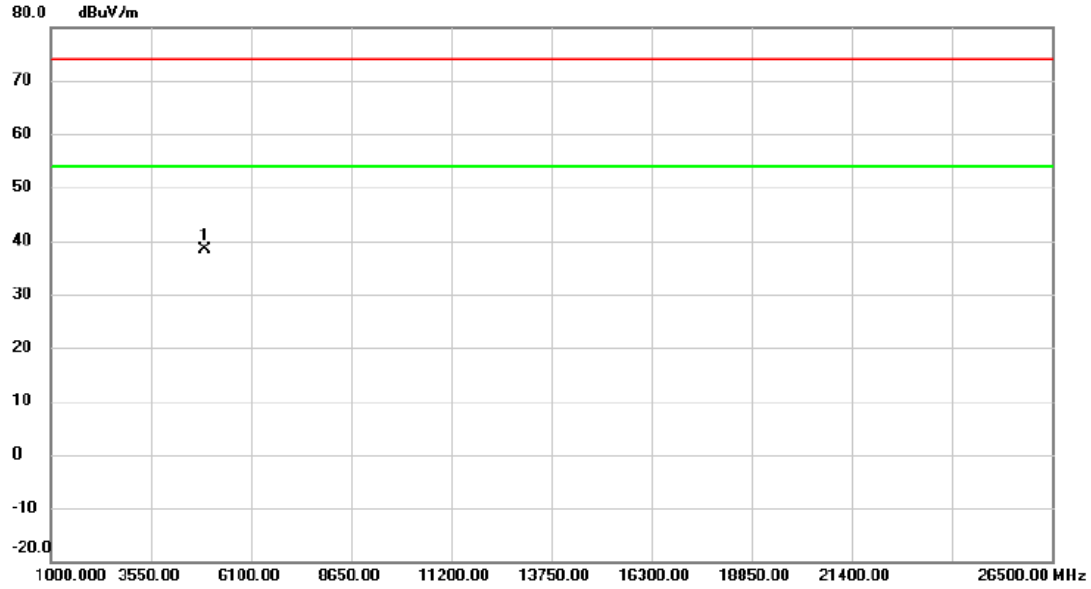

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4924.960	51.19	-12.71	38.48	74.00	-35.52	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Vertical

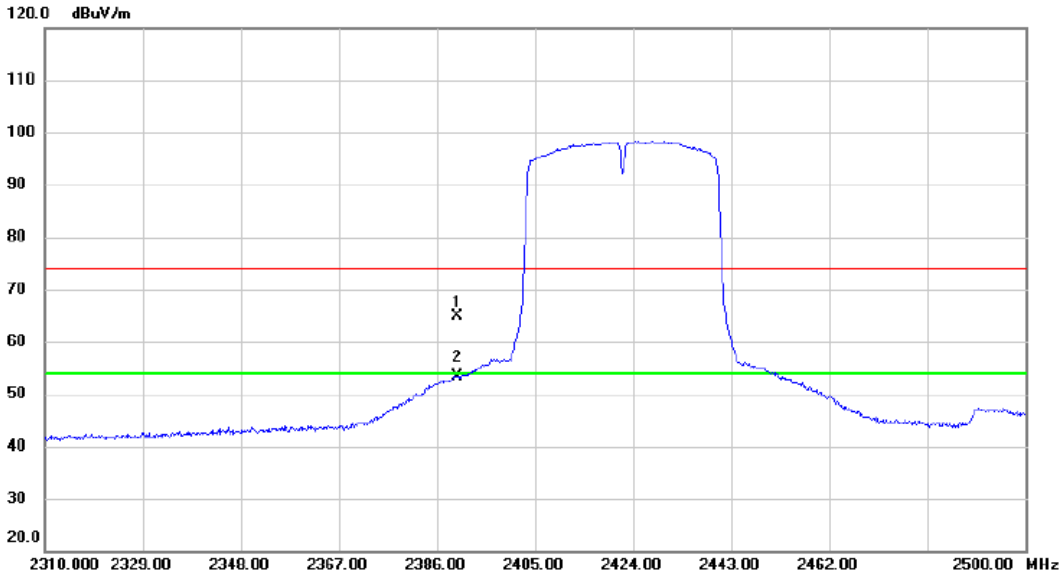

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	31.51	33.36	64.87	74.00	-9.13	peak	
2	*	2390.000	20.01	33.36	53.37	54.00	-0.63	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Vertical

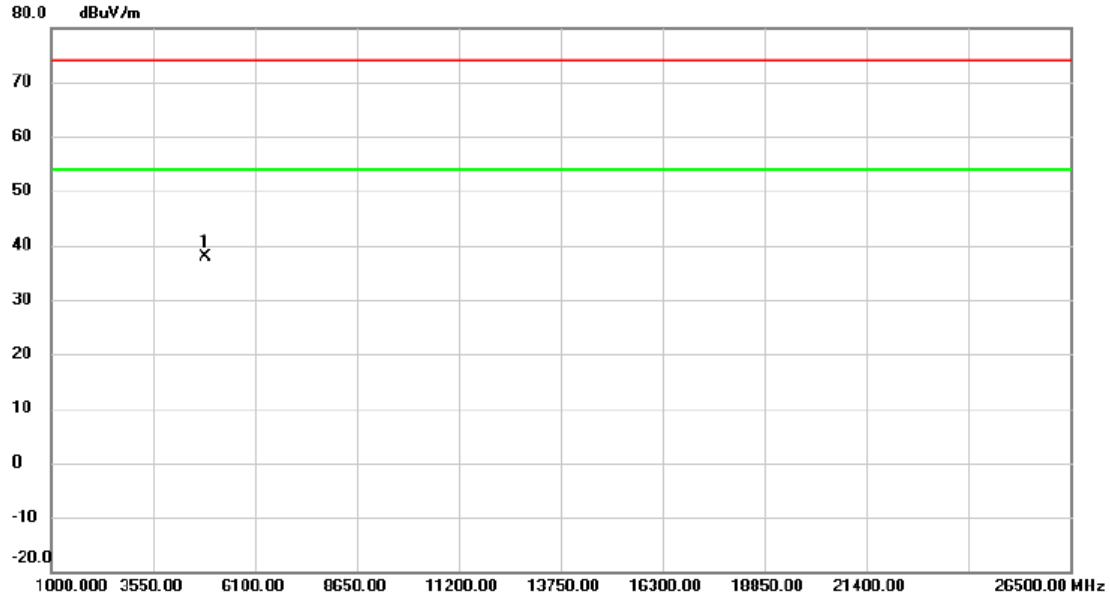

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4846.285	50.83	-12.95	37.88	74.00	-36.12	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Horizontal

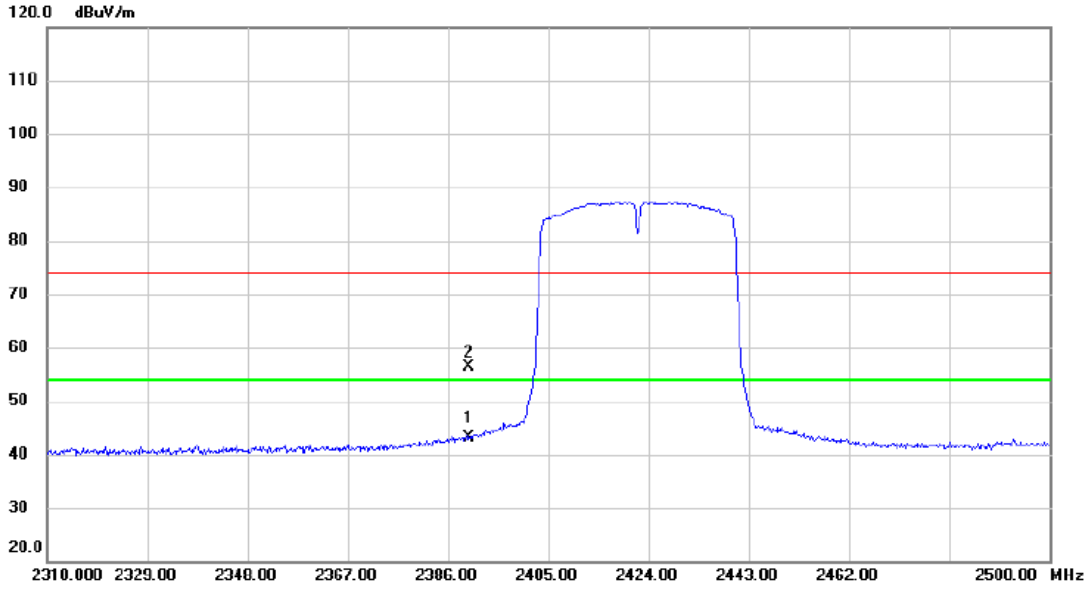

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	2390.000	9.67	33.36	43.03	54.00	-10.97	AVG	
2		2390.000	23.08	33.36	56.44	74.00	-17.56	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2422MHz

Horizontal

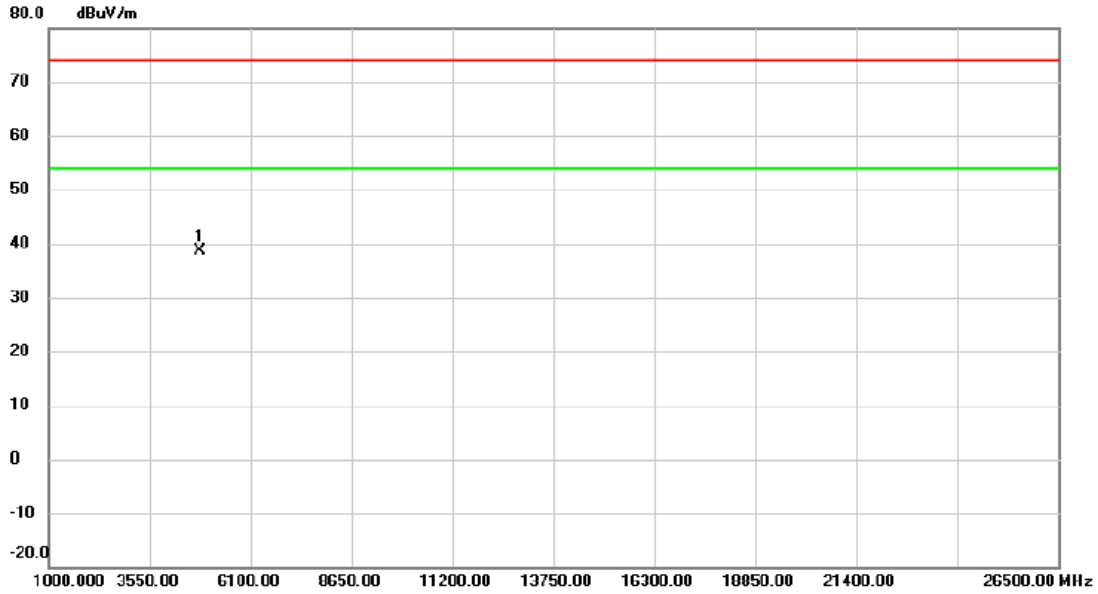

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4841.800	51.49	-12.97	38.52	74.00	-35.48	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Vertical

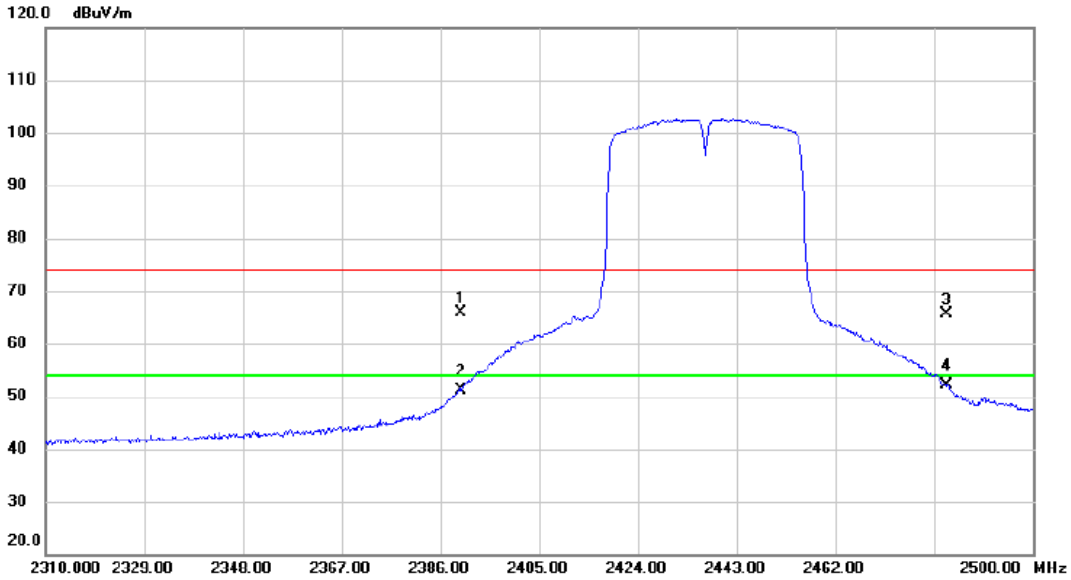

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	32.46	33.36	65.82	74.00	-8.18	peak	
2		2390.000	17.84	33.36	51.20	54.00	-2.80	AVG	
3		2483.500	31.80	33.76	65.56	74.00	-8.44	peak	
4	*	2483.500	18.25	33.76	52.01	54.00	-1.99	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Vertical

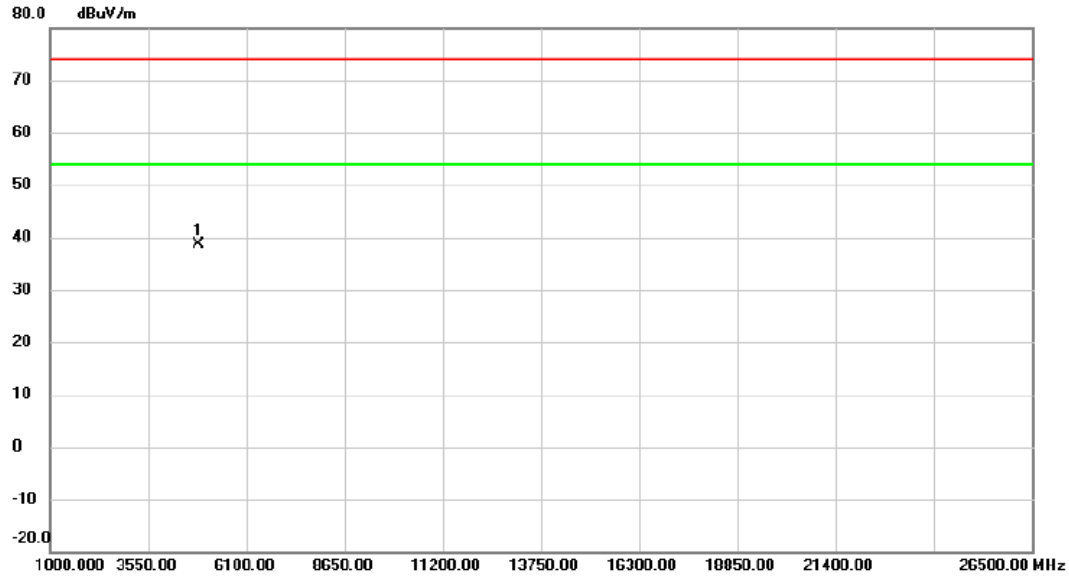

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4872.795	51.44	-12.87	38.57	74.00	-35.43	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Horizontal

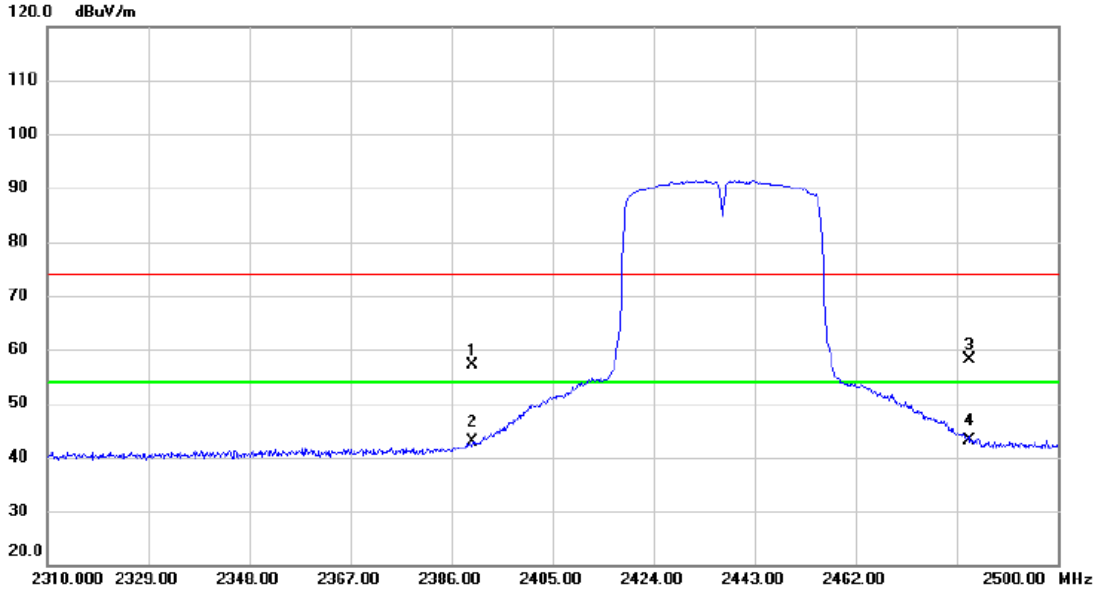

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2390.000	23.89	33.36	57.25	74.00	-16.75	peak	
2		2390.000	9.59	33.36	42.95	54.00	-11.05	AVG	
3		2483.500	24.29	33.76	58.05	74.00	-15.95	peak	
4	*	2483.500	9.26	33.76	43.02	54.00	-10.98	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2437 MHz

Horizontal

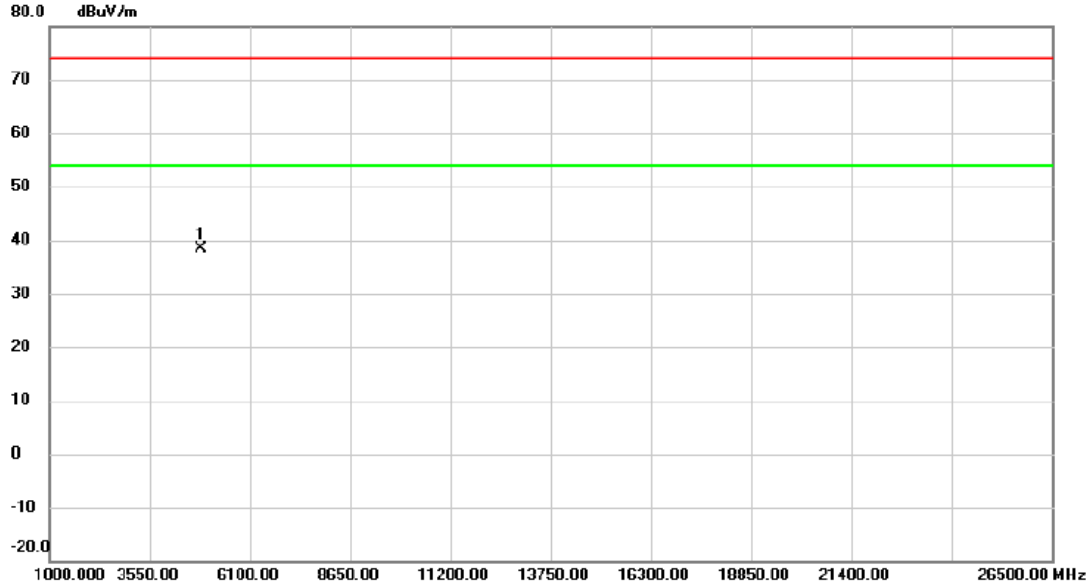

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4874.980	51.31	-12.86	38.45	74.00	-35.55	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Vertical

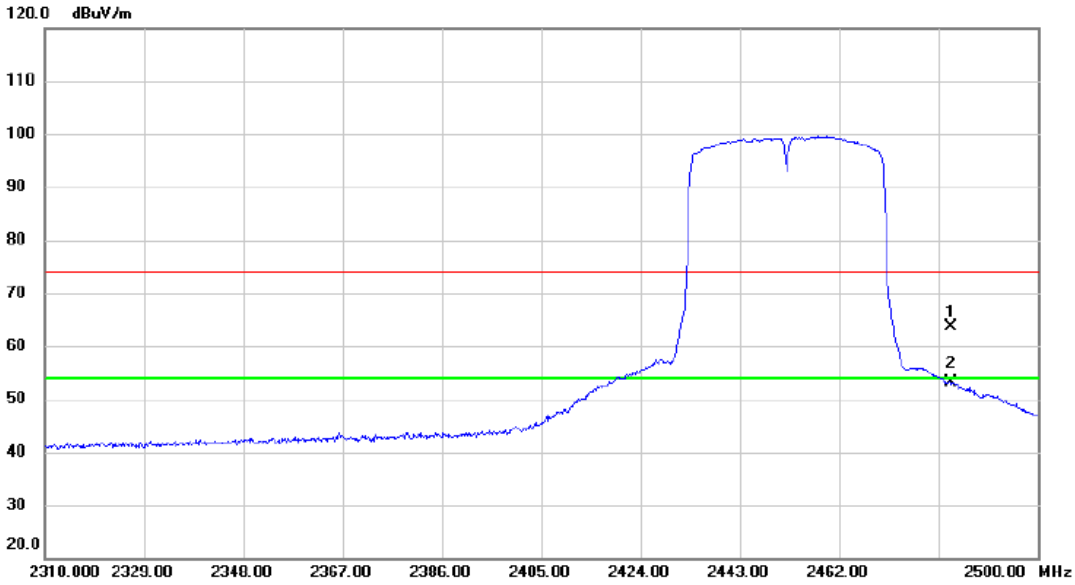

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	29.85	33.76	63.61	74.00	-10.39	peak	
2	*	2483.500	19.27	33.76	53.03	54.00	-0.97	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Vertical

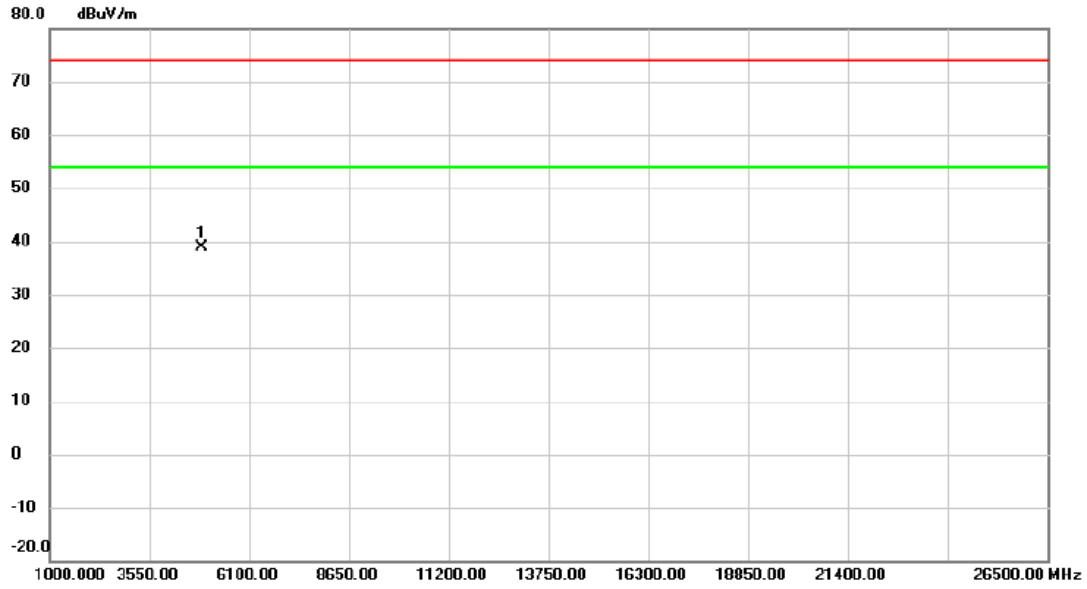

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4906.240	51.54	-12.77	38.77	74.00	-35.23	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Horizontal

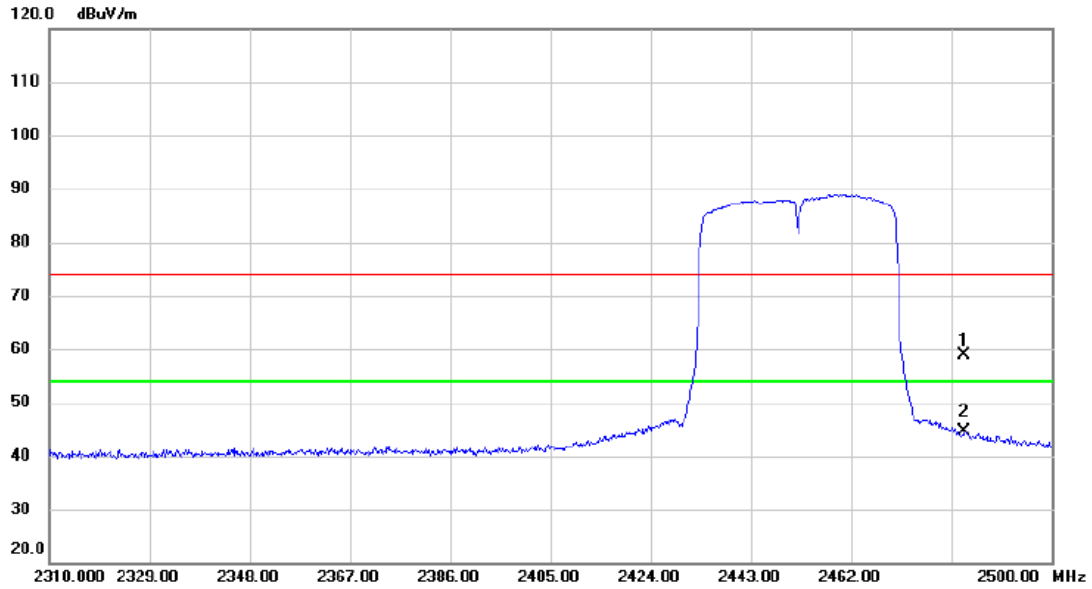

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		2483.500	25.08	33.76	58.84	74.00	-15.16	peak	
2	*	2483.500	10.80	33.76	44.56	54.00	-9.44	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode:	TX AC -40M Mode 2452 MHz

Horizontal

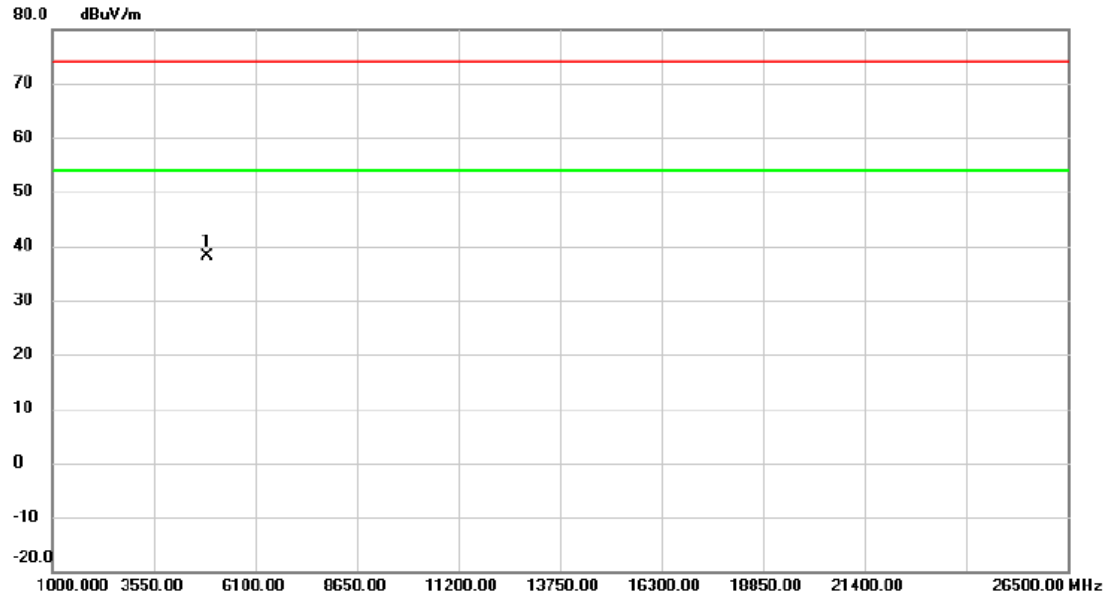

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	4902.135	50.89	-12.78	38.11	74.00	-35.89	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

APPENDIX E - BANDWIDTH

CDD

Test Mode	TX B Mode

Channel	Frequency (MHz)	6 dB Bandwidth (MHz)	6 dB Bandwidth Min. Limit (kHz)	Result
01	2412	8.06	500	Complies
06	2437	8.12	500	Complies
11	2462	9.10	500	Complies

CH01

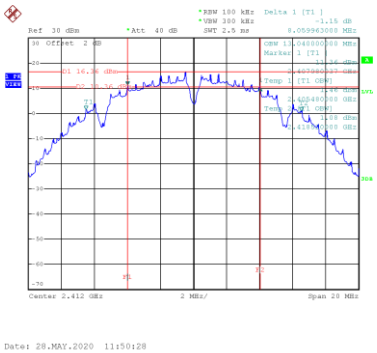

CH06

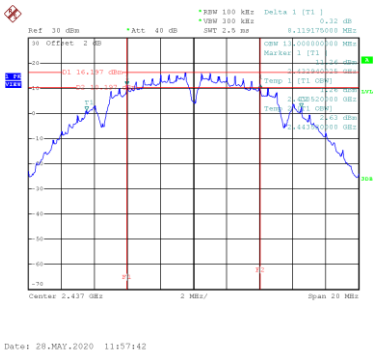

CH11

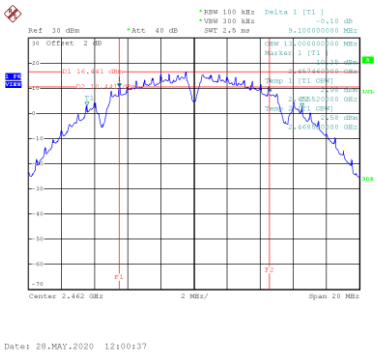

Channel	Frequency (MHz)	99 % Emission Bandwidth (MHz)	Result
01	2412	13.04	Complies
06	2437	12.96	Complies
11	2462	13.04	Complies

CH01

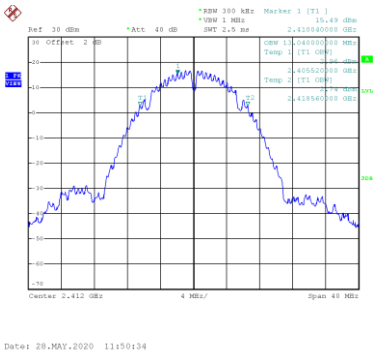

CH06

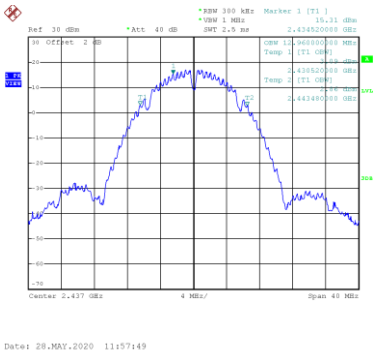

CH11

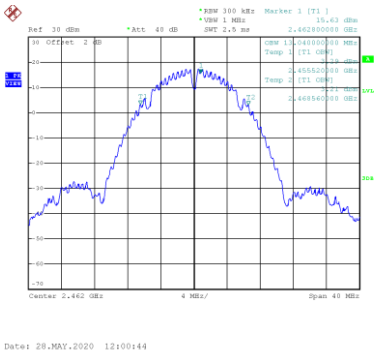

Test Mode	TX G Mode

Channel	Frequency (MHz)	6 dB Bandwidth (MHz)	6 dB Bandwidth Min. Limit (kHz)	Result
01	2412	16.41	500	Complies
06	2437	16.38	500	Complies
11	2462	16.38	500	Complies

CH01

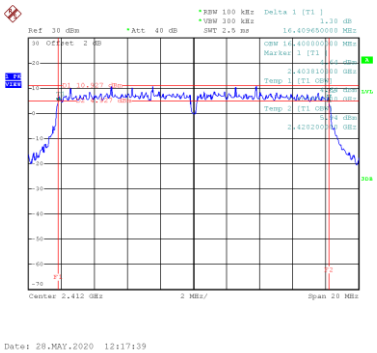

CH06

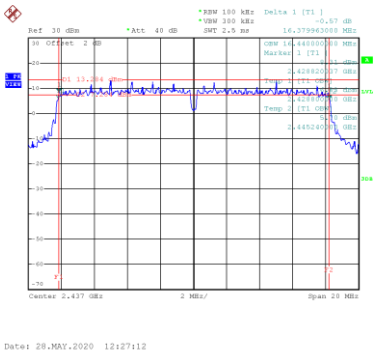

CH11

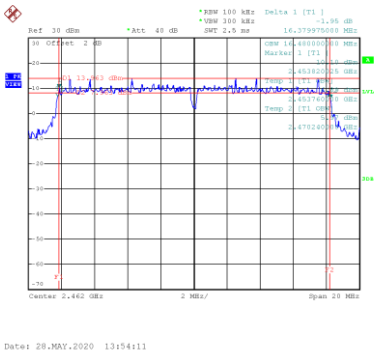

Channel	Frequency (MHz)	99 % Emission Bandwidth (MHz)	Result
01	2412	16.56	Complies
06	2437	16.88	Complies
11	2462	20.48	Complies

CH01

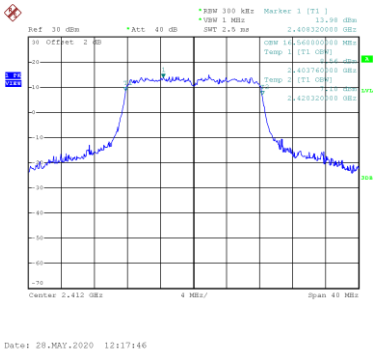

CH06

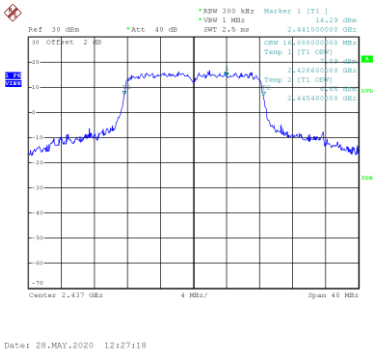

CH11

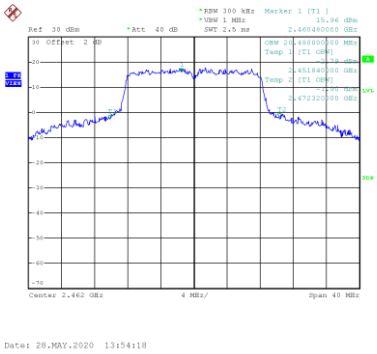

Test Mode	TX N-20M Mode

Channel	Frequency (MHz)	6 dB Bandwidth (MHz)	6 dB Bandwidth Min. Limit (kHz)	Result
01	2412	17.62	500	Complies
06	2437	17.66	500	Complies
11	2462	17.63	500	Complies

CH01

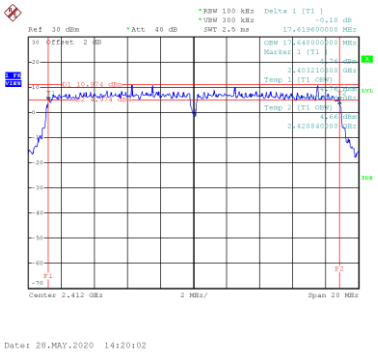

CH06

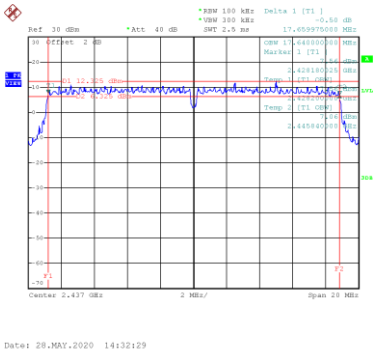

CH11

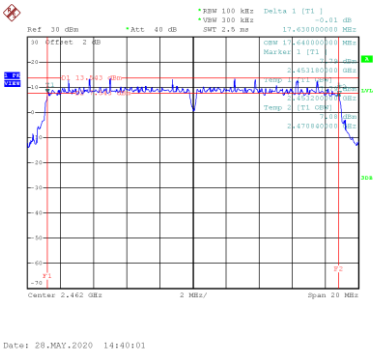

Channel	Frequency (MHz)	99 % Emission Bandwidth (MHz)	Result
01	2412	17.76	Complies
06	2437	17.92	Complies
11	2462	17.92	Complies

CH01

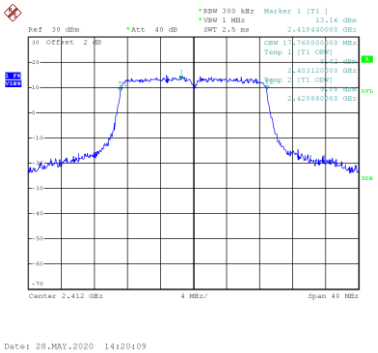

CH06

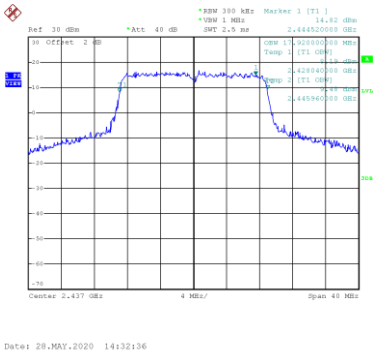

CH11

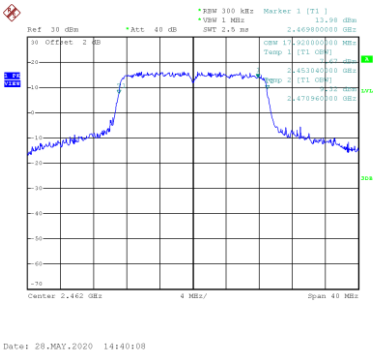

Test Mode	TX N-40M Mode

Channel	Frequency (MHz)	6 dB Bandwidth (MHz)	6 dB Bandwidth Min. Limit (kHz)	Result
03	2422	35.44	500	Complies
06	2437	35.64	500	Complies
09	2452	35.40	500	Complies

CH03

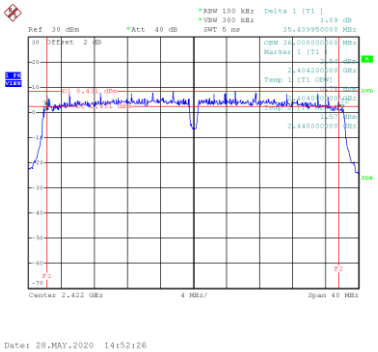

CH06

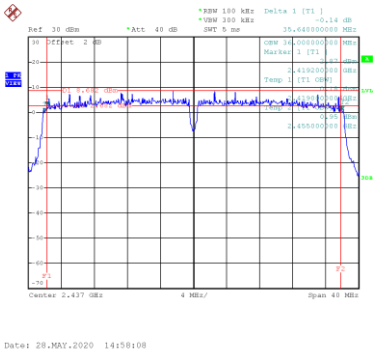

CH09

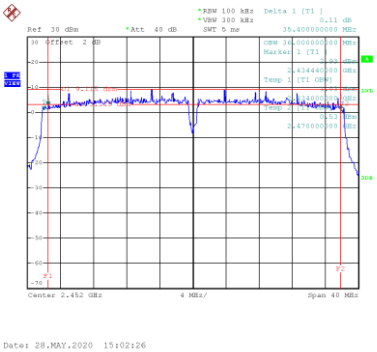

Channel	Frequency (MHz)	99 % Emission Bandwidth (MHz)	Result
03	2422	36.16	Complies
06	2437	36.32	Complies
09	2452	36.32	Complies

CH03

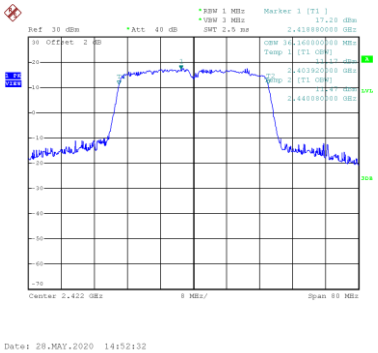

CH06

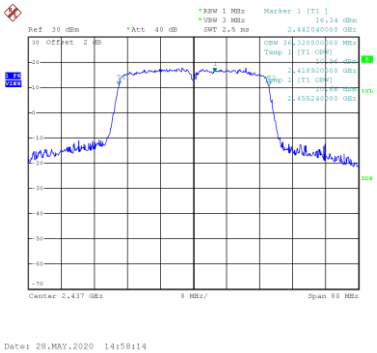
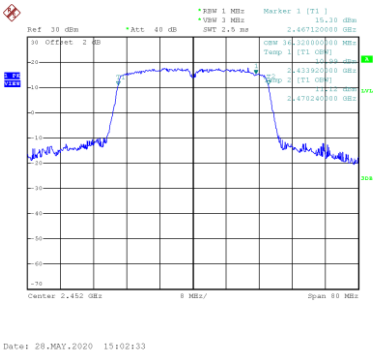
CH09