

HB6588说明书 (hellowbaby)

说明书为折叠式

尺寸: 540*120MM

材质: 100g双胶纸 (彩色)

版本: V1.3

类型: 环保

版本	修改内容
Ver: 1.2	地址和认证图标有更新.
Ver: 1.3	FCC内容更新.

日期

2022/03/26

2022/04/02

设计	审核	审批
王勇		
2022/04/02		

540.00 mm

HelloBaby®

HD 720p

Ver: 1.2

User Manual

2.4GHz Digital Wireless Video Baby Monitor



The pictures are for reference only, please subject to practicality.

www.hellowbaby.net.cn
service@hellowbaby.net.cn

Thank you for purchasing this HB6588 Baby Monitor. With our baby monitor, you could see and hear your baby sleeping or playing in their room anytime.

Please retain your original dated sales receipt for your records. For warranty service of your product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

Please make sure the following included in your package

Parent unit x 1
User manual x 1
Power Adapter x 2
Camera unit x 1
Wall-mounting kit x 1

1. SAFETY INSTRUCTIONS

CAUTION: Keep the device away from children.

Strangulation Hazard: Children have STRANGLING in cords. Keep this cord out of the reach of children (more than 3ft (0.9m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

Choking hazard: This product contains small parts, please be careful when unpack and assemble the product.

Read and keep to Instructions: All the safety and operating instructions should be read before the video baby monitor is operated. This product cannot replace responsible adult supervision.

Water and moisture: This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or inside the product, such as a glass or vase. This item should not be used near water.

DO NOT: Use the appliance if the cord or plug is damaged. If your baby monitor is not operating properly or has suffered any damage, contact "Hellowbaby" service center to request inspection and repair of the appliance in order to avoid any possible risk.

DO NOT: Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit. Otherwise, the guarantee will be made void.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area such as a bookcase or drawer that may impede air flow.

Keep away from sources of heat: This unit should not be exposed to direct heat sources such as a candle, radiator, heat register, stove or other appliance that emits heat. The unit should not be used in direct sunlight.

Power source: This unit should only be used with the AC power adapters included in this package (rated 5V DC 1.2A).

Damage requiring service: This unit should be serviced by qualified personnel only when: Objects have fallen or liquid has been spilled into the product.

The units have been exposed to rain;

The units do not appear to operate normally or exhibit a distinct change in performance; The units have been dropped or the enclosure damaged.

2. WARRANTY TERMS

We offer one year warranty from the original purchase date against defects in workmanship and materials. If you have warranty or support issues, please contact our after-sales service via email.

3. INSTALLATION GUIDELINES

To use your parent unit and camera unit together, you have to establish a radio link between them, and the range will be affected by environmental conditions.

- *Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the baby and parent unit may block the radio signal.
- *The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- *Use of other 2.4GHz products, such as wireless networks (Wi-Fi routers), Bluetooth speakers, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from such products, or turn them off if they cause interference.

4. PLACEMENT OF THE BABY MONITOR

The camera can be placed on the desktop or mounted on the wall. Don't place baby monitor on soft carpet blankets or in the corner of cupboards, shelves, etc. Keep the baby monitor away from heat sources such as radiators, chimneys, cookers and direct sunlight. Keep the baby unit away from TV sets, microwave oven and radios. If interference occurs, move the camera to elsewhere.

*Place the camera within 6 feet (2 meters) of the area being monitored for optimum performance.

5. GETTING STARTED

5.1 TURN ON THE BABY UNIT:

1. Insert the DC plug of the power adapter into the DC jack in the rear of the Baby Unit;

2. Insert the other end of the power adapter into a suitable electrical outlet;

3. Once the adapter is connected, the power LED will light up.

5.2 TURN ON THE PARENT UNIT:

1. Insert the DC plug of the power adapter into the DC Jack in the side of the parent unit;

2. Insert the other end of the power adapter into a suitable electrical outlet;

3. Press and hold the power key 3 seconds on the side of the parent unit;

4. Once parent unit is on, the power LED will light up and the image will display on the LCD

5.3 INFRARED NIGHT VISION (AUTOMATIC)


The infrared night vision function allows the camera to pick up images in dark or low light conditions. In this mode, only black and white images will be displayed on the monitor. The optimum image lies in where baby unit is 6ft (2m) away from object. The camera is in night vision mode, the icon will be displayed on the top of screen.

6. PRODUCT OVERVIEW


6.1 ICONS OVERVIEW:



6.2 PARENT UNIT OVERVIEW:

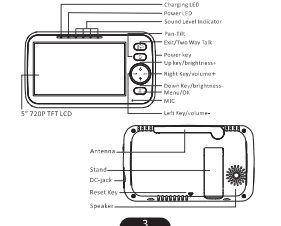

6.3 BABY UNIT OVERVIEW:

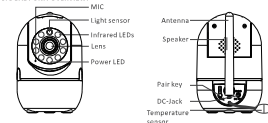

7. KEY OPERATION

7.1 TURN ON/OFF

Press and hold the power key for 3 seconds to turn on / off the parents unit.

7.2 VOLUME ADJUSTMENT

Press the key to increase the volume. Press the key to decrease the volume.

Note: The volume has 8 levels. The default volume level setting is level 4.

7.3 DISPLAY BRIGHTNESS ADJUSTMENT

Press the key to increase the brightness. Press the key to decrease the brightness.

Note: The brightness has 8 levels. The default brightness level setting is level 4.

7.4 REMOTE PAIR KEY

You can remote pair the camera.

1. Press the key. The direction arrow icon will display on the LCD screen.

2. Press the key to pair the camera.

3. Press the key to exit.

7.5 TWO-WAY TALK

Press and hold the key to enter two-way talk mode. A microphone icon will be displayed in the corner of the LCD screen. Release the key to stop.

Note: When you are in the two-way talk mode, the parent unit speaker is muted.

8. MENU OPERATION

8.1 LULLABY SETTING

You can enable the baby to sleep by playing a lullaby from the baby unit.

1. Press the MENU key and the menu will pop up.

2. Press the key until the lullaby icon is selected by blue bar.

3. Press the key to select one of 5 available lullabies or stop (3 lullabies) playback .

4. Press the to confirm.



Made in China

5. Select stop icon to stop.

6. Press the Return key to exit.

Note: The lullaby default setting is OFF.

8.2 VOX SETTING

This function in the parent unit menu allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit pick up, e.g. you would like to have your baby cry, but you may not be interested in his babbling.

1. Press the MENU key and the menu will pop up.

2. Press the key until the Vox icon is selected by blue bar.

3. Press the key to select desired level.

4. Select icon and press to confirm. This icon will show on the LCD screen.

Note: The noise level icon is low sensitivity level.

8.3 FEEDING TIME SETTING

Press the MENU key and the menu will pop up.

2. Press the key until the Feeding Time icon is selected by blue bar.

3. Press the key to select the Feeding Time icon on the LCD screen.

Note: The minimum setting is 0.5 hours, and the maximum setting is 6 hours (5 levels).

Note 2: The feeding alarm default setting is OFF.

4. Press the key to select 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000.

8.4 ROOM SETTING

Press the MENU key and the menu will pop up.

2. Press the key until the Room icon is selected by blue bar.

3. Press the key to select the Room icon on the LCD screen.

Note: The Room default setting is level 1.

8.5 TIME SETTING

Press the MENU key and the menu will pop up.

2. Press the key until the Time icon is selected by blue bar.

3. Press the key to select the Time icon on the LCD screen.

Note: The Time default setting is 12:01 or 24H.

4. Press the key to enter sub menu.

5. Press the key to select Hour or Minute.

6. Press the key to select the Time hour and minute.

8.6 TEMPERATURE SETTING

Press the MENU key and the menu will pop up.

2. Press the key until the Temp icon is selected by blue bar.

Battery (Parent Unit)	Li-ion 3.7V 5000mAh (7.4Wh)
Operating time	Up to 12 hours
Maximum power	<150mW
Operation temperature	Operating Temperature: +33°F~104°F (0°C~40°C)
Operation environment	Battery Charging Temperature: 50°F~104°F (10°C~40°C)
	Relative Humidity: 15%~85%

10. TROUBLE SHOOTING

No reception on the monitor

- * Confirm the camera and monitor are ON.
- * Camera may be far away from the monitor.
- * Camera and monitor may not be properly paired; follow PAIRING instructions.

Interference or poor reception

- * Move the monitor closer to the camera.
- * The camera or monitor may be placed too close to many metal objects; otherwise please try to interfere with the signal.
- * Audio feedback (high pitched noise) may be placed too close.
- * The volume on the monitor may be set too high.

Freeze Picture on Screen

- * Release the Baby unit (plug out the adapter, then plug it into the socket again).
- * Press the RESET key at the back of parent unit.

11. MAINTENANCE

1. Clean your baby monitor with a slightly damp and anti-static cloth.

2. Never use cleaning agents or solvents.

12. DISPOSAL GUIDE FOR BATTERY AND PRODUCT

* Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.

* Remember to dispose of the product in an environmentally responsible way.

* For proper collection and processing of these products, take them to the collection points designated by local authorities. You can also contact the store where you purchased the product.

Frequency	2410MHz~2470MHz
Power: Adapter	Parent Unit: Input: 100-240VAC 50/60Hz Output: 5V DC 1.2A Camera Unit: Input: 100-240VAC 50/60Hz Output: 5V DC 1.2A
Operating Range	Up to 1000ft (300m) outdoor / line of sight Up to 100ft (30m) indoor
Display	5" 720P TFT LCD

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

- The battery shall not be exposed to excessive heat such as sunshine, fire or the like;

FCC/ICR/DOE Statement

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Cet appareil ne crée pas de interférence nuisible, et il doit accepter toute interférence reçue, y compris les interférences provenant d'autres appareils sans licence.

Interference or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian Information on RF exposure and compliance.

This device does not conform to a exemption des limites d'évaluation courante dans la section 2.5 du cr. 102 et conformité avec la RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des renseignements sur l'exposition aux ondes radioélectriques et la conformité.

CAUTION: Risk of fire and burns. Do Not Open, Crush, Heat Above 45 degree C or Incinerate. Follow Manufacturer's Instructions.

Radiation Exposure Statement for camera

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

SAR Statement for Monitor

Specific Absorption Rate (SAR) Information

This Monitor meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through peer review and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. SAR is a measure of the rate at which energy is absorbed by the body. The SAR for this device is 0.001 W/kg averaged over one gram of tissue. Device types: Monitor has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Monitor kept away from the body. To maintain compliance with SAR RF exposure requirements, use accessories that maintain an open separation distance between the user's body and the back of the Monitor. The use of belt clips, holsters and similar accessories should not contain metallic components. In its assembly, the use of accessories that do not satisfy these requirements may not comply with SAR RF exposure requirements, and should be avoided.

Informations sur le débit d'absorption spécifique (DAS)

Cet Moniteur répond aux exigences du gouvernement en matière d'exposition aux ondes radio. Les lignes directrices sont basées sur des normes élaborées par des organisations scientifiques indépendantes à travers une évaluation préliminaire et approfond