

Alnanny C3 Kit

Smart baby monitor

User manual



Email: support@arenti.com

Phone: 1-866-999-7868, Mon-Fri 9AM-5PM (PT)

Toll free for USA&Canada, subject to charges for other regions

Phone Service Language only available in English

Product description

Please read this manual carefully before using the product and keep it properly. Label information is located on the side of the camera.

Packing list



Monitor x1



Reset pin x1



Power cable x1



Power adapter x1




Quick guide x1

Microphone

Status light of charging

Status light of using

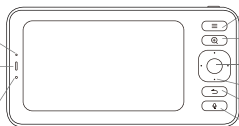

Menu

Zoom in/out

OK

Direction

Back


Call

Antenna

ON/OFF button

Speaker

Stand

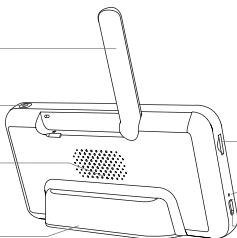

Micro SD card slot

RESET

Power port

Status light of charging	• Orange light: Charging • Green light: Fully charged
Status light of using	• Yellow light: Monitor on • No light: Monitor off
Antenna	Adjust the angle to get better signals
ON/OFF button	Long press 5s to turn on/turn off the monitor
Zoom in/out	Adjust the image magnification in 1X, 2X or 4X
Menu	Access the settings and options
Direction	Navigate and select options

OK	Confirm selections or wake the screen
Call	Make a call after pressing the button
Back	Press to back up; Long press to stop playing music

Specifications

Model	Alnanny-Screen3
Battery capacity	3350mAh
Working temp	0°C to 40°C
Local storage	Micro SD card (up to 128GB)
Resolution	480P (854x480)
Size	157x81x39mm
Power input	DC 5V/1A
2.4GHz Wi-Fi	2412-2462MHz (Max. power<30dBm)
SRD	2402-2480MHz (Max. power<20dBm)

Monitor using tips

- Pairing of camera and monitor:


Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance limited, please determine the appropriate distance according to the signal strength of the monitor.

- Bind the monitor and camera:

1. Press the **Menu** button on the monitor, and select  > **Camera**.
2. Select **Camera 1** or **Camera 2** which you need to pair.
3. Long press the camera pairing button until you hear the prompt tone.
4. Press the **OK** button on the monitor to start pairing.
5. If you need pair 2 cameras, please repeat step 2~ step 4.

- Unbind the monitor and camera:


1. Press the **Menu** button on the monitor, and select  > **Camera**.
2. Select **Camera 1** or **Camera 2** which you need to unbind.
3. Long press the **OK** button to release the binding.

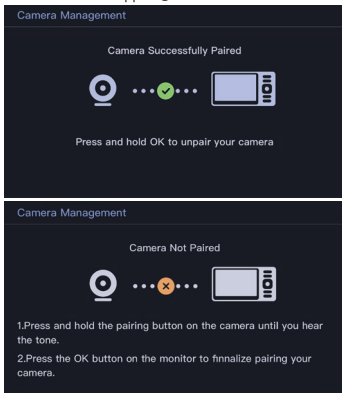


- Camera switching method

If you have added 2 cameras, the monitor will display 2 live views at the same time. If you want to set parameters or enable functions of one of the cameras, you need to select and switch to the camera first.

On the home page, press  button and use the **Direction** button to switch the camera between Cam1 or 2 if you have added 2 cameras. Select one camera you need and press the **OK** button on the monitor to enter full-screen viewing mode. And then you can press  button again to zoom in and zoom out. (Zooming function does not work when the screen is not in full screen.)

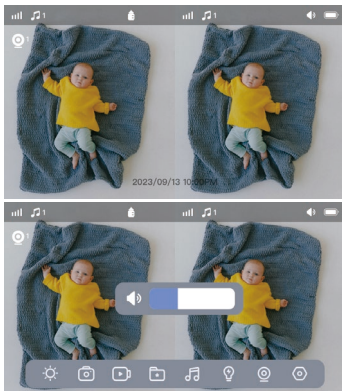

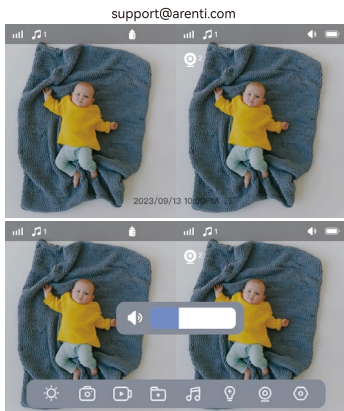

- Rotate the camera

You can adjust the monitoring angle for better vision.

The direction buttons on the monitor are available when the camera is powered on. Press the direction buttons to rotate the camera horizontally and vertically for better vision.

- Photo & video

Note:

A Micro SD card needs to be inserted to use this function. The maximum capacity supported is 128GB.

- Take a photo:

You can take a photo when you want to capture an interesting scene of the baby. Press **Menu** button on the monitor, select

 and press **OK** to take a photo.

- Record a video:

You can record a video when you want to capture a meaningful time for the baby. Press **Menu** button on the monitor, select  and press **OK** to record a video.


- View the taken photos and recorded videos:

1. Press the **Menu** button on the monitor, select  and press **OK** to enter the interface.

2. Select the camera and date, select the photo or video you want to view and press **OK** to enter preview mode.

* Press **OK** to play or pause the video in the preview mode.


* Press the **Return** button to the quit preview or return to the main menu.

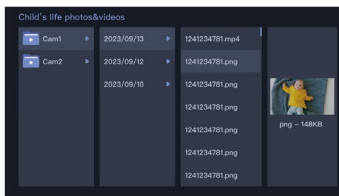

- Play music

You can play music when your baby needs to be soothed. There are various soft music to select.


Press the **Menu** button on the monitor screen, and select  and press **OK** to enter the music interface. You can select different music, change the music cycle mode, or adjust the music volume.

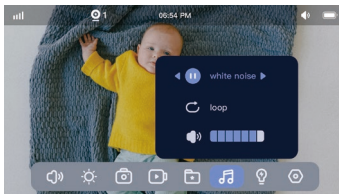

- Feeding reminder

Remind you to feed your baby when you are too busy, or when you want to give your baby a regular diet.


1. Press the **Menu** button on the monitor, and select  > **Feeding Reminder**.
2. Select on or off to open or close feeding reminders. You can set up to 10 feeding times one day. And when the set time is up, a feeding alarm will appear on the monitor screen.
3. Press **UP** and **DOWN** direction buttons to select between 10 time options, and press **OK** to start the time setting.

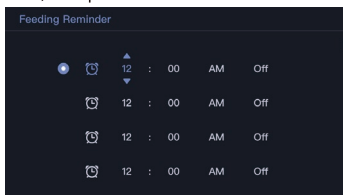

- Smart care

You can turn on functions of motion detection, noise detection and cry detection, so that you can know the baby's status immediately, no matter what you are doing.

1. Press **Menu** on the monitor and select  > **Smart Care**.
 2. Select **Alarm Type**, press **UP** and **DOWN** direction buttons to select options between motion, noise, cry detection, and press **LEFT** and **RIGHT** direction buttons to adjust the sensitivity, then press **OK** to save.
 3. Select **Reminder Method**, press **UP** and **DOWN** direction buttons to change options, and press **LEFT** and **RIGHT** direction buttons to choose on/off or adjust alarm volume.
- * You can select different sensitivity according to your needs. Low refers to low sensitivity, and high refers to high sensitivity.

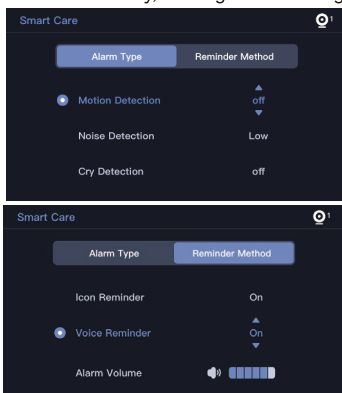


- Safety protection

- Wi-Fi network channel

If you turn off the Wi-Fi network channel, the App will not be able to view the camera.

- Visited records

You can also view the visited records as all visits through the App will be recorded.

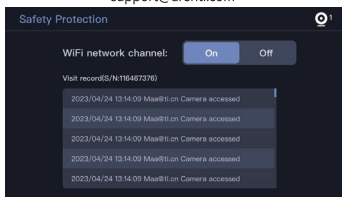

- General setting

- Set up brightness:

1. Press **Menu** button on the monitor, select and press **OK** to enter.
2. Press **UP** and **DOWN** buttons to adjust brightness.

- Set up time:

1. Press **Menu** button on the monitor and select > **Date and time**.
2. Press the **Direction** buttons to change the date, time, and time displaying mode.

- Set up language:

1. Press **Menu** button on the monitor and select > **Language**.
2. Select the language you need.

- Set up sleep mode:

You can set up sleep mode to increase standby time.

1. Press **Menu** button on the monitor and select > **Sleep mode**.
2. In default mode(Audio off), the audio from the camera can not be heard after the display is off, so the standby time is long. In Audio on mode, the audio from camera can still be heard even after the screen is turned off, and you can choose the time(1,5,10,30 or 60min), but the standby time is shorter. In Always on mode, the monitor remains on unless the power button is pressed, with short standby time.

- Turn on and off status indicator:

If you turn on the status indicator, you can get the working status of the camera. You can also turn off the status indicator if you think it will affect your baby's sleep.

Press **Menu** button on the monitor and select > **On** . (Or Press the **Menu** button to select > **Light** > **Status light**.)

- SD card:

1. Press **Menu** button on the monitor and select  > **SD card management**. Then you can view the total capacity and remaining capacity of your SD card.
2. (Optional) You can format the SD card as you needed, but make sure that the important data is backed up.

- Upgrade:

You can upgrade your camera when the upgrade alarm appears. Or press **Menu** button on the monitor and select  > **Device information** to check whether there is an upgrade.

- Low battery alarm:

When the monitor is low on battery, the low battery alarm will appear on the monitor screen. Please charge the monitor as soon as possible.

FAQ

- Q: What should I do if the monitor is stuck?

A: Press the reset button located near the power port on the monitor, or long press the power button to turn on the monitor again.

- Q: How can I change the wallpaper of monitor screen?

A: Press **Menu** button on the monitor and select  > **Wallpaper**.

- Q: How can I upgrade the version of the monitor?

A: Firstly, add the camera to the App. Then press **Menu** button on the monitor and select  > **Device Information**, then check for available upgrades.

- Q: The monitor cannot be previewed properly?

A: Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

- Q: Why the camera or the monitor cannot identify the Micro SD card?

A: Confirm whether the Micro SD card is normally available and the format is FAT32.

- Q: Why is the battery's standby time short?

A: In the always on mode, the battery will consume power more rapidly. Please confirm that the sleep mode is enabled.

If none of the solutions works or you have any other problems, please call **1-866-999-7868** (Mon-Fri 9AM-5PM (PT), toll free for USA&Canada, subject to charges for other regions, Phone Service Language only available in English) or contact **support@arenti.com** to get help.

Precautions

- The applicable working temperature of this product is 0°C~40°C, please do not use it in an environment where the temperature is too high or too low.
- To use this product better, avoid the front and side of the lens close to the glass, white walls, light objects etc., so as not to cause the picture to be bright near, dark, or whitish in the distance.
- Please make sure that the monitor is put within the range covered by the Wi-Fi signal, and placed as far as possible on the location where the signal is better. Please try to place it away from metal and microwave ovens that may affect the signal.

After-Sale Service and Technical Support

- To get more information, please visit www.arenti.com.
- Access Support from the Arenti App, log in to your Arenti App and tap to get support.
- You can send an email to support@arenti.com. Describe the camera issue, and inform us of the camera model and SN from the camera body. We will try to reply you in 24h.

Legal notice

Symbols:  Direct current (DC)



Don't throw batteries or out of order products with household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collection of garbage proposed by your city.



Hereby, Arenti, declares the radio equipment type **Alnanny-Screen3** complies with the Directive 2014/53/EU

The full test of the EU declaration of conformity is available on the Internet address:

www.arenti.com/pages/intellectual-property-rights.



Specific precautions for EMC

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF EXPOSURE INFORMATION

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

Safety information

• Power adapter safety

1. The power plug is intended to serve as a disconnect device. Do not drop or cause an impact to the power adapter.
2. If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
3. Do not touch the device or the power adapter with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.

Note: The adapter is compatible with LPS.

• Child's safety

1. Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous.
2. The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

• Operation safety

1. Use the device under allowed humidity and temperature conditions.
2. Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
3. Observe local laws and regulations, and respect the privacy and legal rights of others.

• Battery safety

1. Your device contains a rechargeable lithium-ion battery and should be replaced only by a qualified service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt to access the battery in your device

2. Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard.
3. Do not use a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
4. Do not put the battery in trash that is disposed of in landfills. When disposing of the battery, comply with local ordinances or regulations.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada (ISED) Compliance Statement

This device complies with CAN ICES-003 (B)/NMB-003(B) CAN ICES-003 (B)

Déclaration d'ISED Canada

Cet appareil est conforme à la norme CAN ICES-3 (B)/ NMB-3 (B).

Industry Canada (ISED) Compliance Statement

This device complies with ISED's licence - exempt RSSs.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Exposure warnings

The device meets the exemption from the routine evaluation limits in section 6.6 of RSS 102 and compliance with RSS - 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 6.6 de RSS 102 et la conformité à l'exposition de RSS - 102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co - placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur.

Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

© 2026. All rights reserved. All trade names are registered trademarks of respective companies Apple, the Apple logo, iPhone are trademarks of Apple Inc. registered in the U.S. and other countries. Google, the Google logo, Android are trademarks of Google Inc. App Store is a service mark of Apple Inc. Google Play is a service mark of Google Inc.