

成型尺寸120*120mm

材质：128g双铜双面印刷，单色印刷

封面



Fuxi-H8 Instruction Manual

CREATE FOR GAME

Trouble shooting

If the microphone doesn't work, please follow below steps to check if everything is all set.

1. Plug the detachable microphone into the microphone port in the correct direction till you hear a click sound.



2. In the Windows system, you can also adjust the default audio output device through the "Sound" settings to ensure that both the front and rear panels can be correctly recognized and used.

Headphone Specification

Speaker: Ø32mm
Impedance: 16±15%Ω
Sensitivity: 96±3dB
Frequency response: 20Hz to 20kHz
Microphone: Ø4.0±1.5mm
Microphone sensitivity: -40±3dB
Wireless distance: 10m
Plug: 2.4G(44Type-C+USB)+BT+Type-C to USB Audio cable+3.5mm Audio cable+Type-C to Type-C Audio cable
Lithium battery: 600mAh
Charging time: about 4H
Charging method: (Type-C) USB 5V
Size: 90*60*210mm
Weight: 300g
Continuity Play: 2.4G: 15H(No backlight), 11.2H(brightest backlight); BT: 30H(No backlight), 17.7H(brightest backlight)

01

Function Image

2.4G transmitter

2.4G transmitter indicator

USB adapter

Power Switch

Volume +

Volume -

Status Indicator

TYPE-C port

Spatial sound button

Microphone switch

Detachable microphone

02

Operation Guide

Wired mode(Type-C Audio cable)

1) Plug in the Type-C to USB/Type-C to Type-C cable, and long press the power switch to turn on the headphone. At this time, the headphone is in wired mode. **(Note: In BT mode and 2.4G, plugging in the Type-C to USB/Type-C to Type-C cable can directly switch to wired mode, and double-tapping the power button can switch between the three modes.)**
2) Short/Long press the volume +/- for volume adjustment. Double click volume +/- for up/down song adjustment.
3) The microphone is turned on by default. To turn off the microphone, press the microphone key once (a "MIC off" tone is emitted and the indicator light on the Dongle goes out). To turn on the microphone, press the microphone key again (a "MIC on" tone is emitted and the indicator light on the Dongle lights up).
4) The headset defaults to stereo. Short press the spatial sound button to switch to the spatial sound (voice prompt "Gaming mode"), press again to switch to the spatial sound (voice prompt "Spatial sound"), and press again to switch back to the stereo channel (The voice prompt is "Stereo sound").

Wired mode(3.5mm Audio cable)

1) Plug and play: Connecting the headphone to a music player with the provided Type-C to 3.5mm audio cable, the headphone can be used as wired headphone without starting.
2) In this mode, you can't use any function of the headphone, including pause playback, volume adjustment, microphone and so on.

2.4G mode(USB4Type-C)

1. How to match

1) Turn off the headphones and remove the transmitter.
2) Press the power button to turn on the headphone, and the indicator lights up and flashes slowly. Then double-click the power button switch to "Dongle mode".
3) Turn on the 2.4G receiver (plug the receiver into PC, PS4 and other devices)
4) The headphone and receiver are automatically paired and the indicator lights up (for headphone that have already been paired).

2. Operating instructions

1) Connect the receiver to PC/PS4/Android phone or other devices, the indicator lights up and flashes.
2) Turn on the headphones, it will automatically pair to the transmitter. The indicator will be always on after the pairing is successful.
3) Short/Long press the volume +/- for volume adjustment. Double click volume +/- for up/down song adjustment.
4) The microphone is turned on by default. To turn off the microphone, press the microphone key once (a "MIC off" tone is emitted and the indicator light on the Dongle goes out). To turn on the microphone, press the microphone key again (a "MIC on" tone is emitted and the indicator light on the Dongle lights up)

5) The headset defaults to stereo. Short press the spatial sound button to switch to the gaming mode sound (voice prompt "Gaming mode"), press again to switch to the spatial sound (voice prompt "Spatial sound"), and press again to switch back to the stereo channel (The voice prompt is "Stereo sound"). **(See 2.4G UI below for specific operations)**
6) Low Power Mode: When the battery power supply voltage is less than 3.30V, the sound will beep one times every one minute.
7) Power off mode: when the battery power supply voltage is less than 3.25V or when there is no sound source connection the with 10 minutes, the headset will turn off.

	Bottom/Function/Light	Function instruction	Operation	Prompt/Voice
Space sound button	Audio Switching	Volume+	Short click	Gaming mode/ Spatial sound/ Stereo sound
			Click	One beep at maximum volume
		Next song	Long click press	
			Double click	
Volume +	Volume+	Volume-	Click	Minimum volume beeps once
			Long click press	
	Previous		Double click	
Mic on/off	Mic on/off	Light Bar Lighting Control	Short click	Default is on, the transmitter indicator is always on. If the indicator is off, the pairing will have "connected" tone
			Double click	3 lighting effects can be switched
	2.4G mode code matching		Long press 5s	Successful code pairing will have "connected" tone
Power switch	2.4G mode and BT mode switching	ON/OFF	Double click	2.4G mode beep: Dongle mode
			ON: Long press 3s OFF: Long press 3s	2.4G mode "Dongle mode", power off: "Power off"
	Play/Pause		Short click	

03

04

封底

HAVIT

BT mode

1) Turn on the headphone, double-click the power button switch to BT mode, and you can hear the voice prompt "BT mode , Pairing". When the headphone enter the pairing mode, the indicator will flash.
2) This headphone is compatible with most of smart phones and other devices that support wireless headphone protocol.
3) Turn on your phone and enter BT mode. Then search "Fuxi-H8" for pairing.
4) Click "Fuxi-H8" to pair. After pairing is successful, the voice prompt is "connected", and the indicator will be always on. **(If the device have been paired before, the headphone will automatically connect with it under BT mode.)**

Key function

Answer an incoming call

Short press the power button to answer the incoming call.
Tip: As some mobile phones answer calls through their own receivers by default, please refer to your mobile phone instructions and set them on your mobile phone.

End current call

Short press the power button to end the current call.

Refuse to answer the phone

When there is an incoming call, press the power button for 1.5 seconds.

Play music

1) Play/Pause: short press the power button.
2) Previous song: Double-click "Volume" to previous song.
3) Next song: Double-click "Volume" for the next song.
4) Volume+: Short/long press "Volume" to increase the volume.
5) Volume-: Short/long press "Volume" to decrease the volume. **(See the BT UI below for details.)**

05

BT UI

	Bottom/Function/Light	Function instruction	Operation	Prompt/Voice
Space sound button	Audio Switching	Volume+	Short click	Spatial sound/ Stereo sound
			Click	One beep at maximum volume
	Next song		Long click press	
			Double click	
Volume +	Volume+	Volume-	Click	Minimum volume beeps once
			Long click press	
	Previous		Double click	
Mic on/off	Mic on/off	Light Bar Lighting Control	Short click	With "MIC on" and "MIC off" beeps
			Double click	3 lighting effects can be switched
	Enter BT pairing mode		Long press 3s	Cue: pairing
Power switch	2.4G mode and BT mode switching		Double click	BT mode beep: BT mode, waiting for pairing: Pairing
	ON/OFF		ON: Long press 3s OFF: Long press 3s	BT mode "BT mode", Waiting for pairing: "Pairing", "Power off: "power off"
	Play/Pause		Short click	
	Answer/hang up phone		Short click	
Decline a call			Long press 1.5s	

For more functions, please enter "<https://havitsmart.com/zh/pages/driver-download>" to download the driver.

06


Warnings

- Please follow the instruction to operate
- PLS charge the headphone with input power below 3.3V, in order to protect the battery;
- Please store or use the headphone in a normal temperature environment.
- PLS keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.
- Don't jam the ports of the headphone, such as charger port, LED port and microphone etc..
- In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time.
- Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.



Cód. de Homologação 06467-25-12374

ESTE EQUIPAMENTO NÃO TEM DIREITO À PROTEÇÃO CONTRA INTERFERÊNCIA PREJUDICIAL E NÃO PODE CAUSAR INTERFERÊNCIA EM SISTEMAS DEVIDAMENTE AUTORIZADOS.

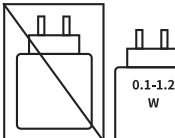

Headphone FCC ID: 2A16F-FUXIH8
Dongle FCC ID: 2A16F-FUXIH8D

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

07

产品名称：	Fuxi-H8说明书
材 质：	128g双铜
折 法：	风琴折
尺 寸：	120*120(mm)
设 计 人：	设计部——何筱杰
定稿日期：	2025.10.31