


 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2026-6-15
	System Instruction	Author:	Alexandria
Instruction of KSRH.100.20		Edition:	1.1
		Page 1 of 5	

Instruction of KSRH.100.20

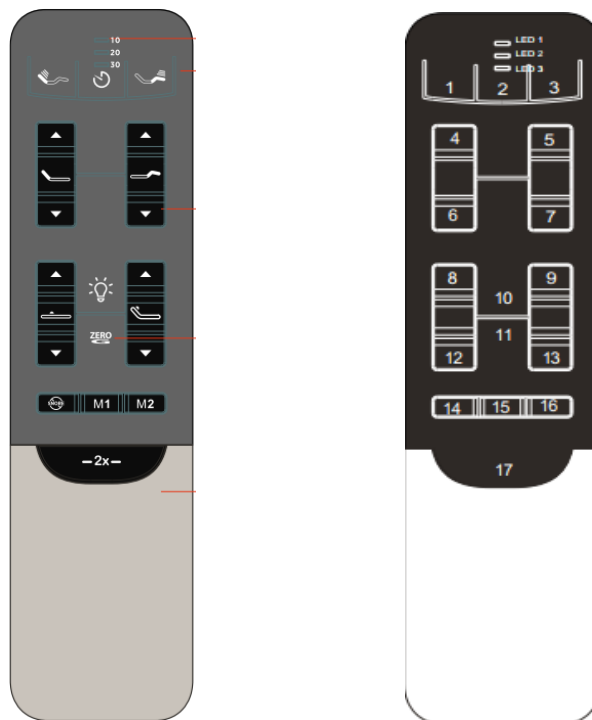

	Issue Department: Bedding Division	Date:	2026-6-15
	System Instruction	Author:	Alexandria
Instruction of KSRH.100.20		Edition:	1.1
		Page 2 of 5	

Figure 1 button of remote control

1.1 Massage Head button 1

Press the button to start head massage. Release the button to stop the actuator.

1.2 MESSAGE TIMER button 2

When the massage function is activated, press the button to switch the massage duration (10-20-30min-Off).

1.3 Massage Foot button 3

Press the button to start foot massage. Release the button to stop the actuator.

1.4 HEAD UP button 4

Hold the button to extend the head actuator. Release the button to stop the actuator.

1.5 FOOT UP button 5

Hold the button to extend the foot actuator. Release the button to stop the actuator.

1.6 HEAD DOWN button 6

Hold the button to retract the head actuator. Release the button to stop the actuator.

1.7 FOOT DOWN button 7

Hold the button to retract the foot actuator. Release the button to stop the actuator.

1.8 Lumbar Up button 8

Press and hold the Lumbar Up button on the remote control to extend the lumbar actuator; release to stop.

1.9 Tilt Up button 9

Press and hold the Tilt Up button on the remote control to extend the headrest actuator; release to stop.

1.10 UBB button 10

Press this button to turn the RGB light strip on or off.

 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2026-6-15
	System Instruction	Author:	Alexandria
Instruction of KSRH.100.20		Edition:	1.1
		Page 3 of 5	

1.11 ZeroG button 11

Press the zeroG button, and the bed will move to the zeroG position. Hold the zeroG button for 5 seconds until the backlight blinks, and the control box will set the current position as the zeroG position.

1.12 Lumbar Up button 12

Press and hold the Lumbar Down button on the remote control to retract the lumbar actuator; release to stop.

1.13 Tilt Down button 13

Press and hold the Tilt Down button on the remote control to retract the headrest actuator; release to stop.

1.14 AntiSnore button 14

Press the ANTI SNORE button, and the bed will move to the ANTI SNORE position.

1.15 M1 button 15

Press the M1 button, and the bed will move to the M1 position. Hold the M1 button for 5 seconds until the backlight blinks, and the control box will set the current position as the M1 position.

1.16 M2 button 16

Press the M2 button, and the bed will move to the M2 position. Hold the M2 button for 5 seconds until the backlight blinks, and the control box will set the current position as the M2 position.

1.17 FLAT button 17

Press this button to recline the bed to a flat position.

	Issue Department: Bedding Division	Date:	2026-6-15
	System Instruction	Author:	Alexandria
Instruction of KSRH.100.20		Edition:	1.1
		Page 4 of 5	

Other functions.

zero G+flat

Press and hold the zeroG+flat buttons for 5 seconds until the backlight flashes, and the control box will restore the memory positions to the factory settings.

UBB BRIGHTNESS + UBB COLOR

Press and hold this combination of buttons, and the backlight will flash indicating that the remote control has entered the pairing mode. When the backlight remains steadily lit, it signifies a successful pairing. If the backlight turns off, it indicates that the pairing has failed.

 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2026-6-15
	System Instruction	Author:	Alexandria
Instruction of KSRH.100.20		Edition:	1.1
		Page 5 of 5	

FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.