




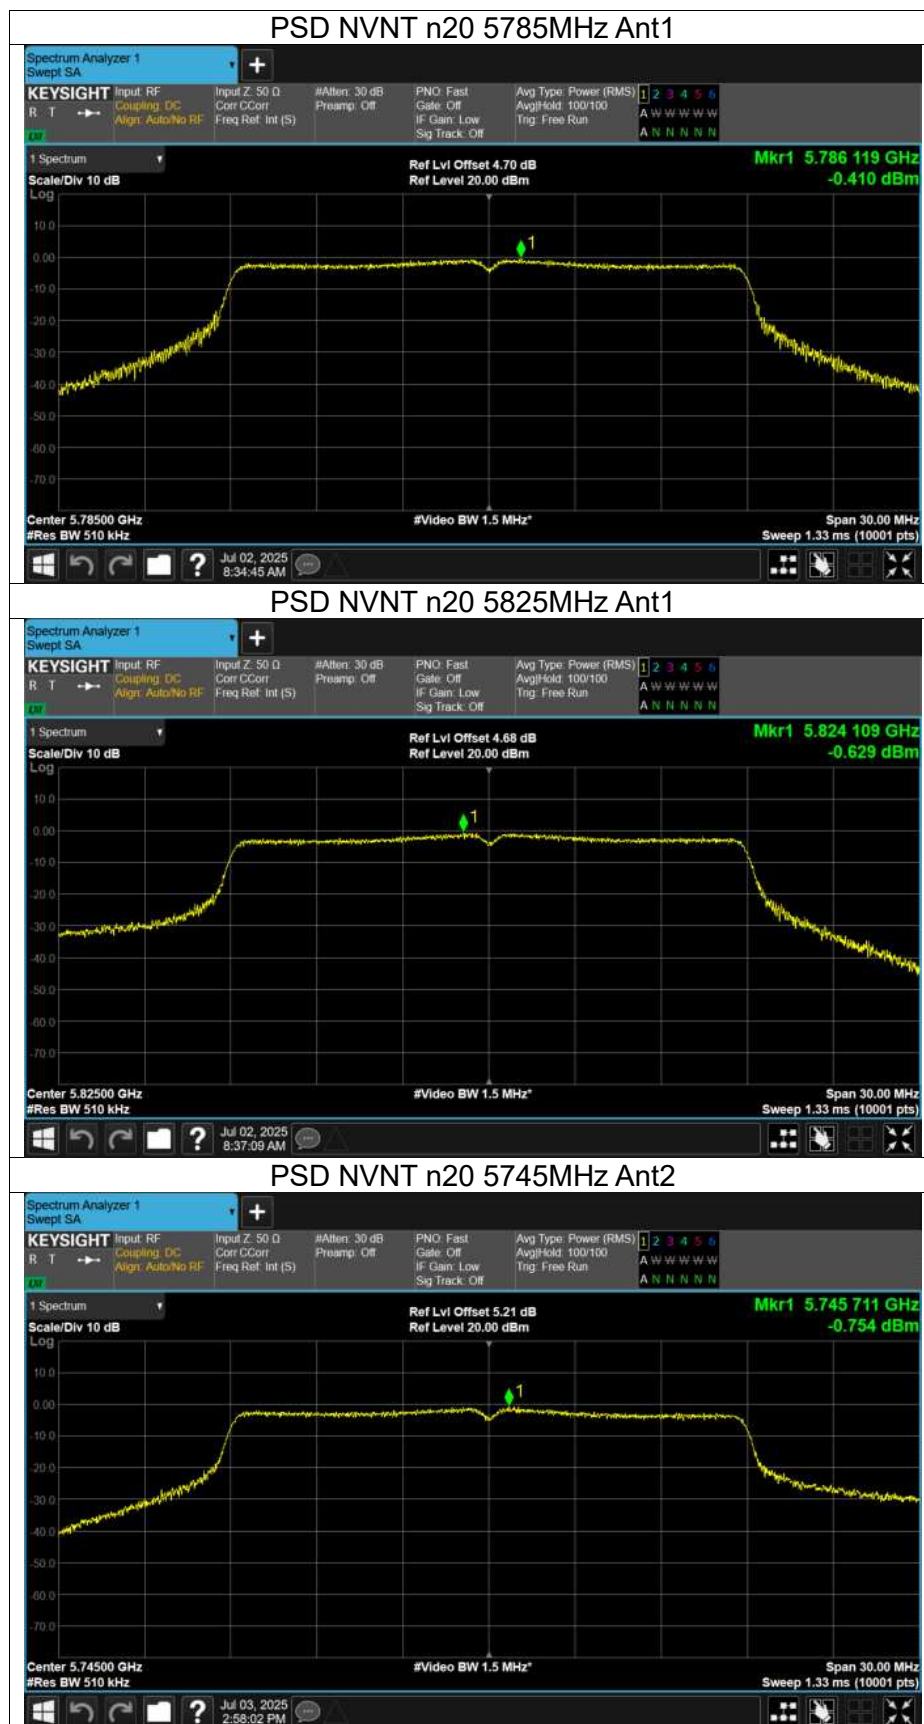
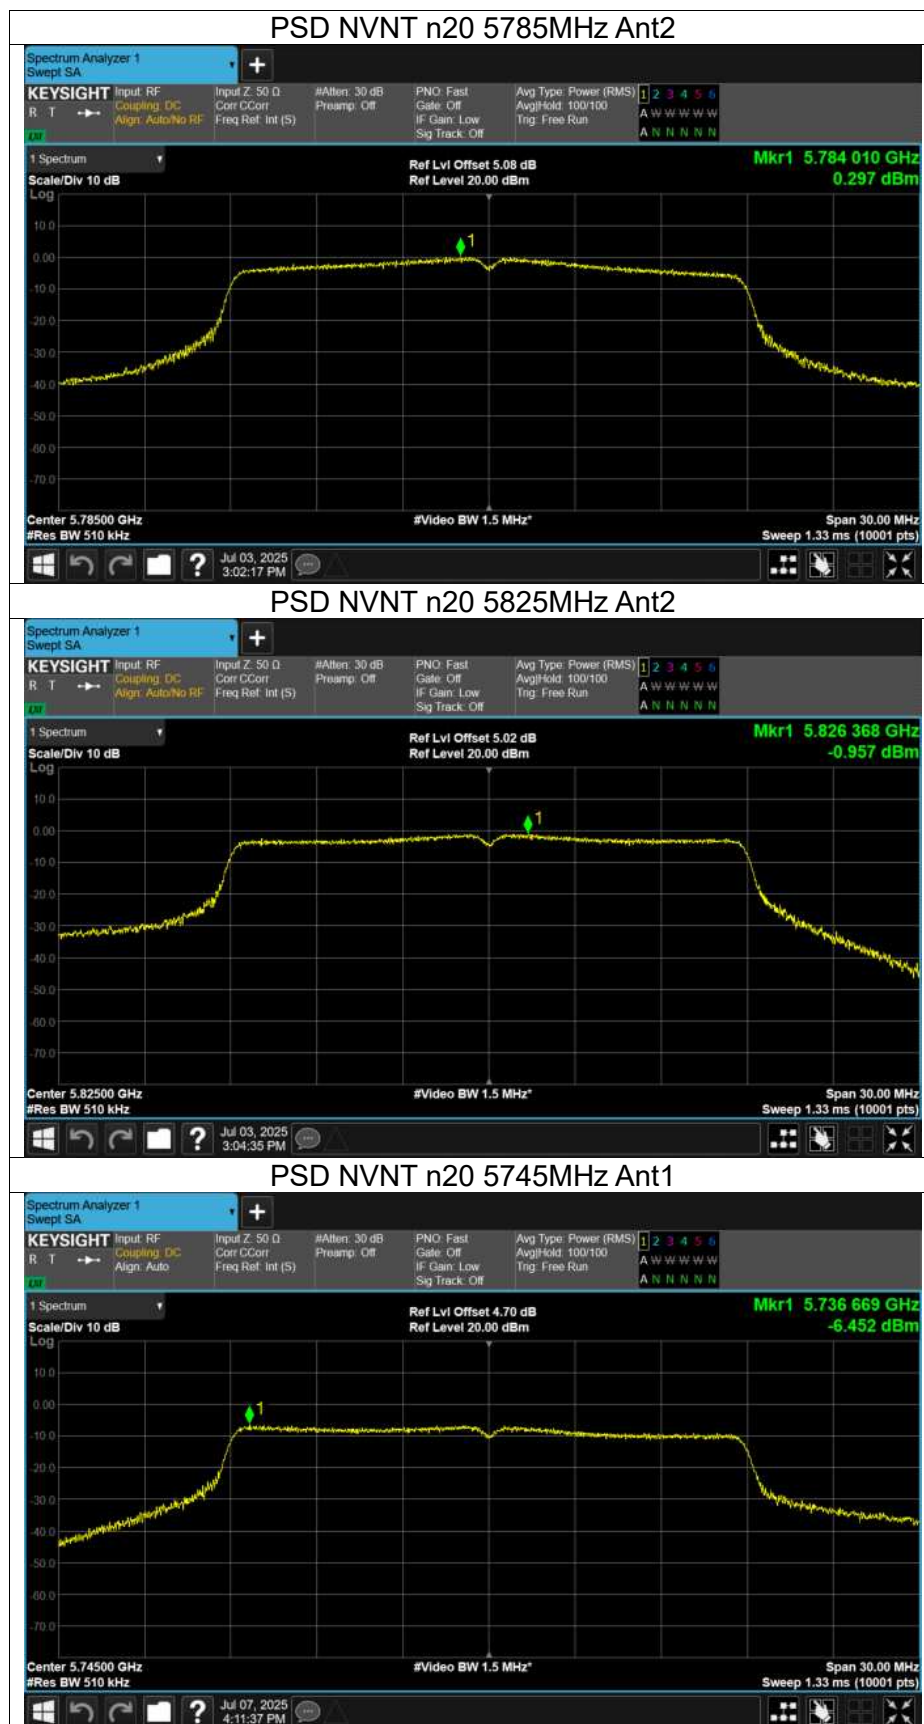
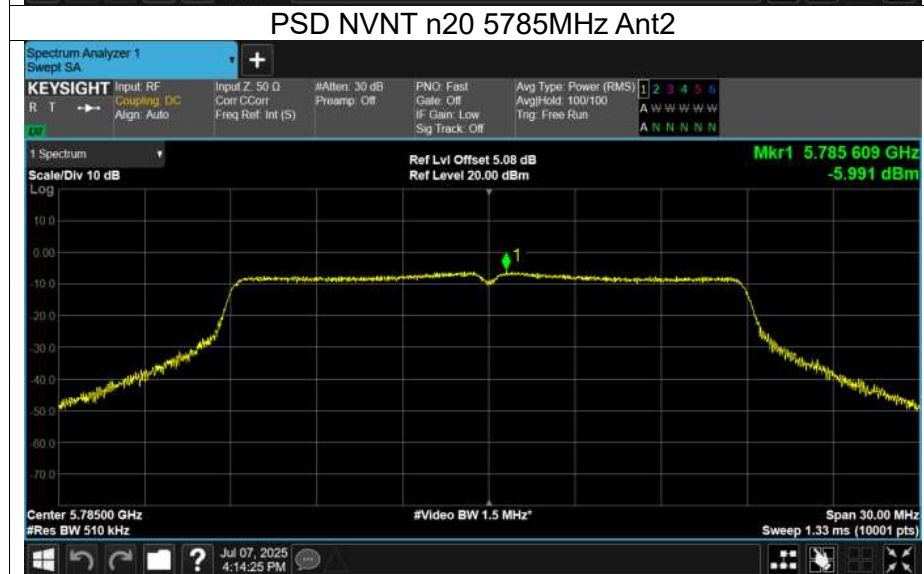
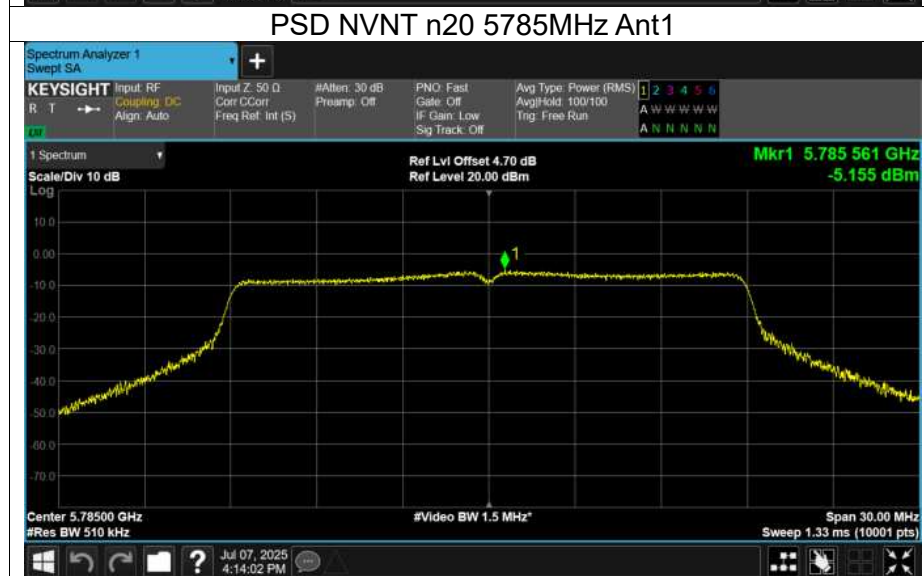
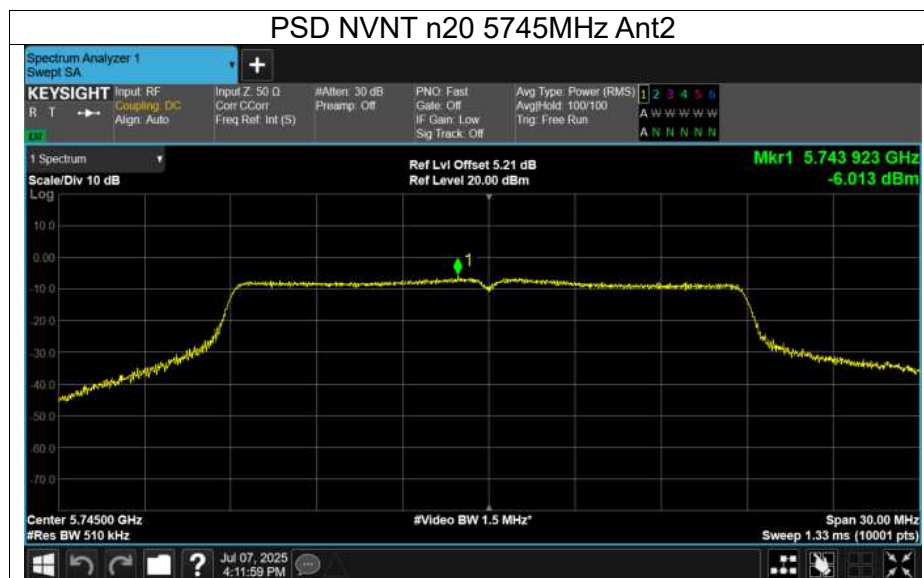
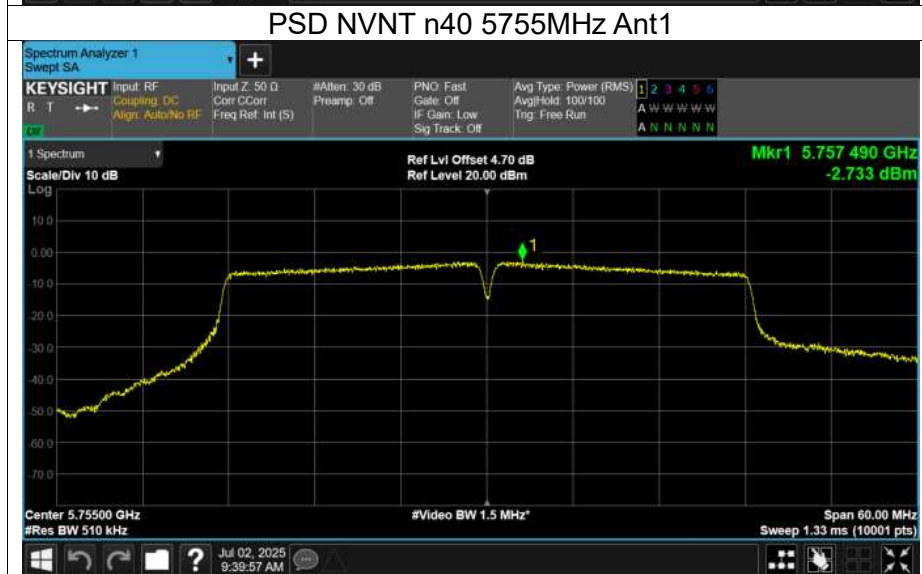




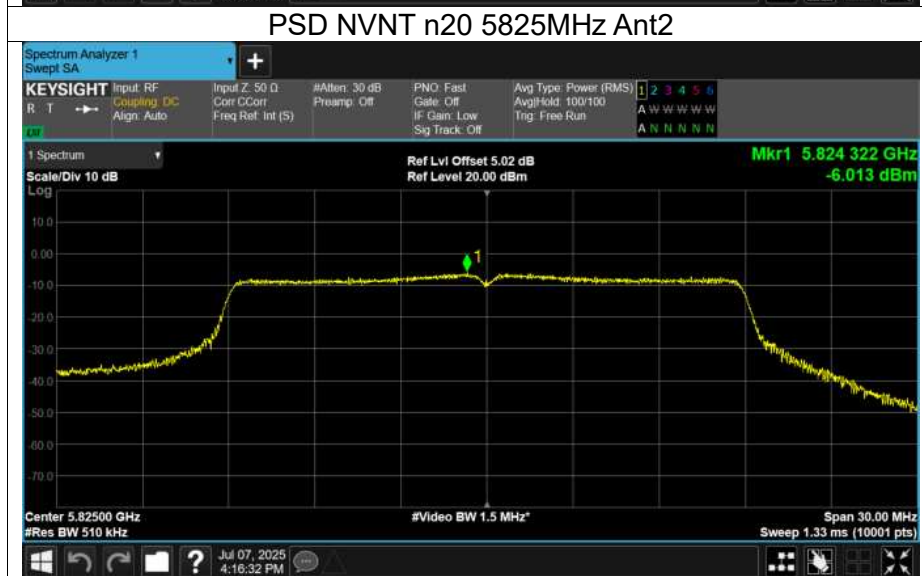


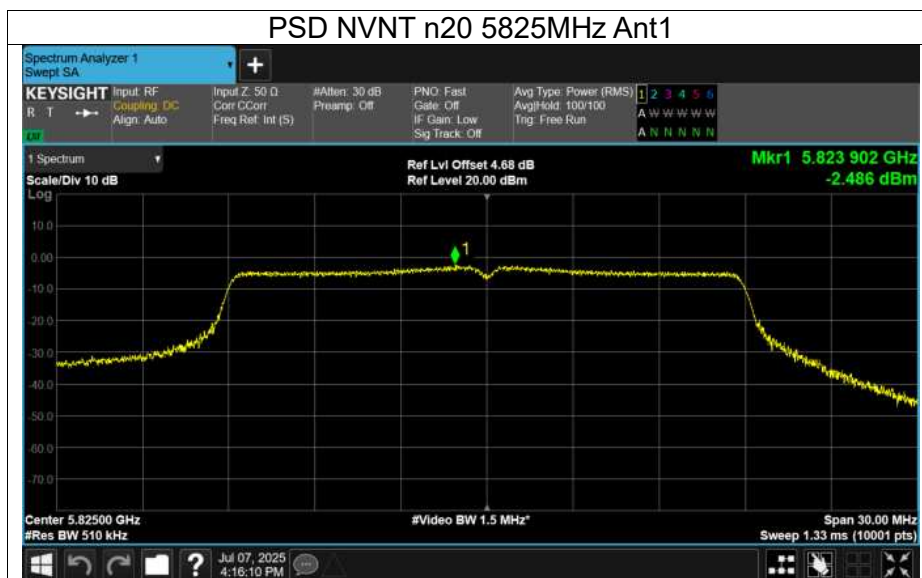


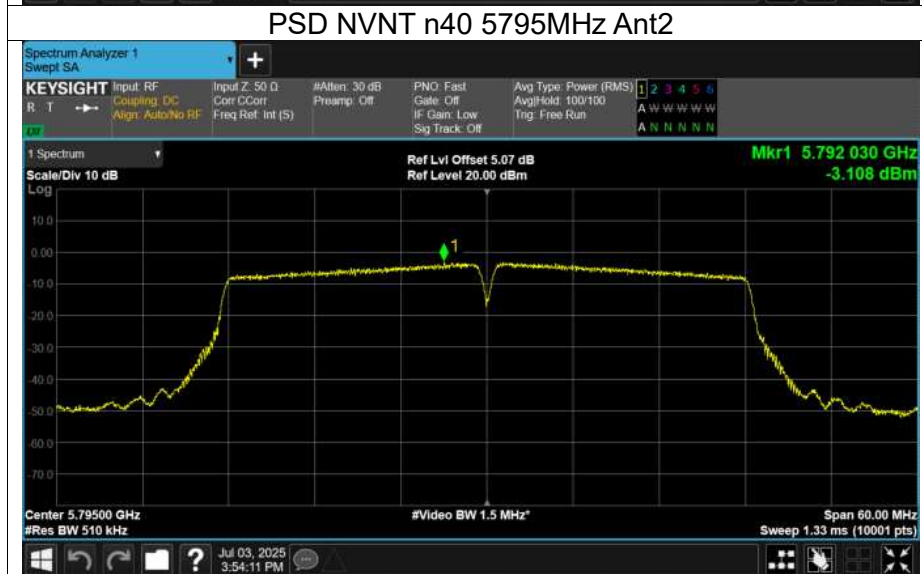




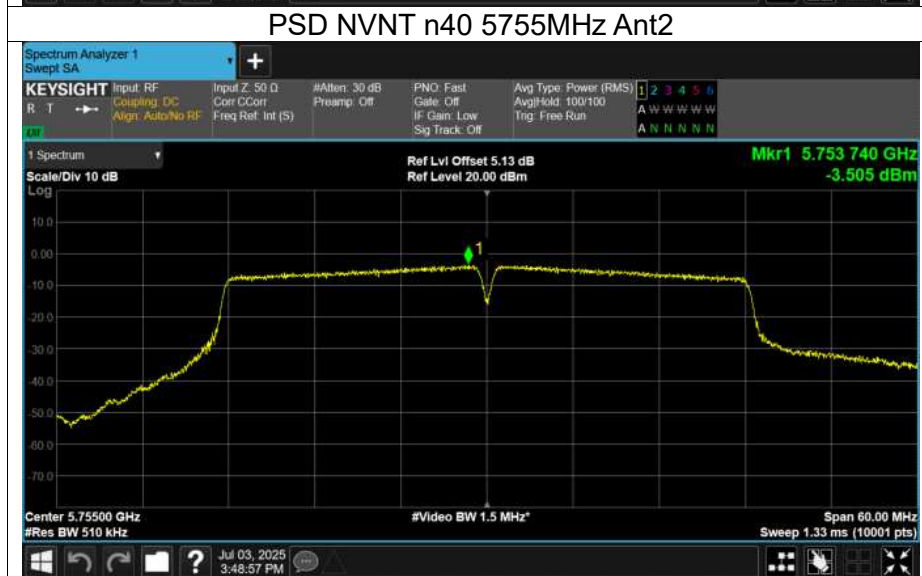


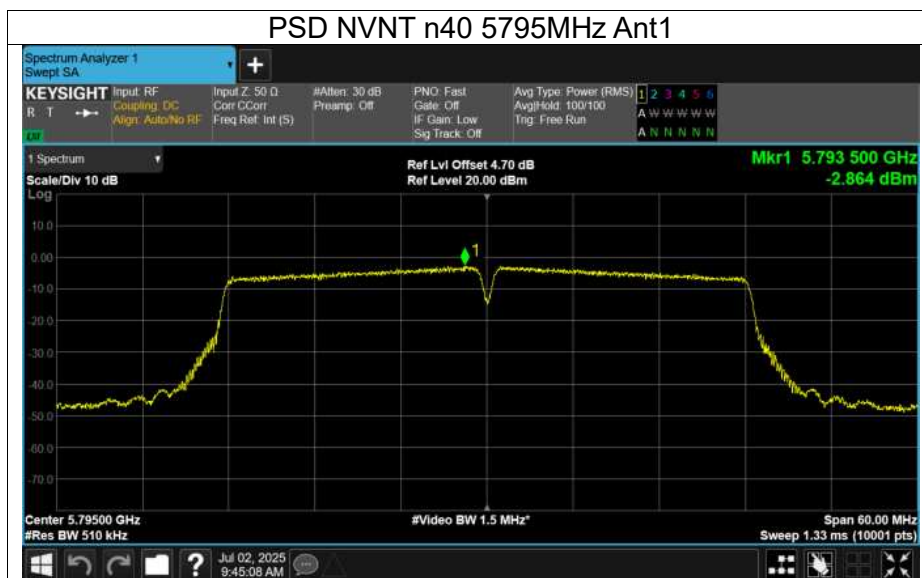


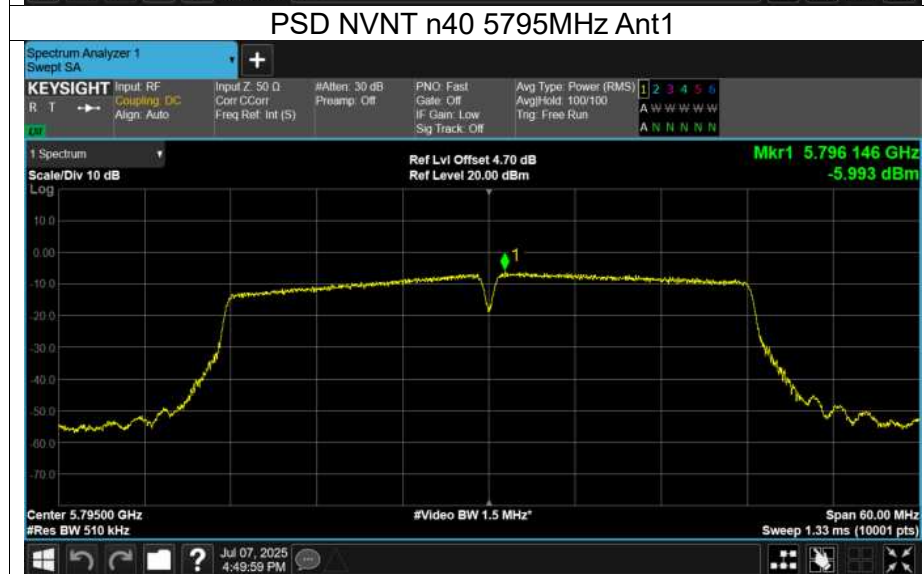
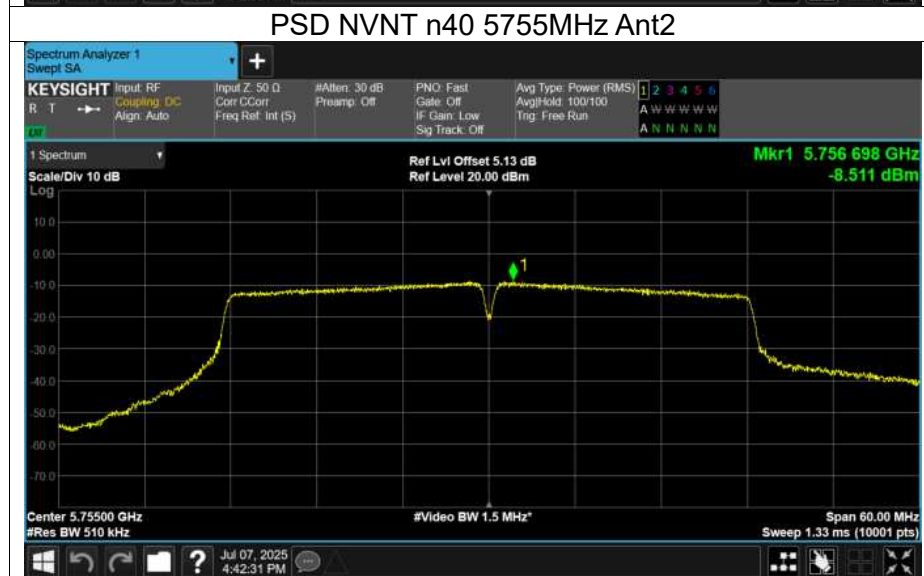
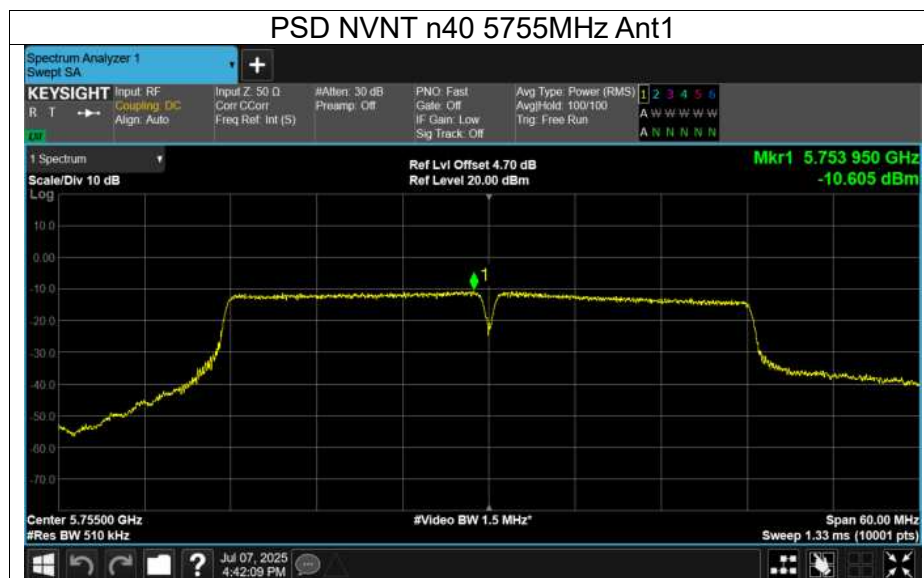


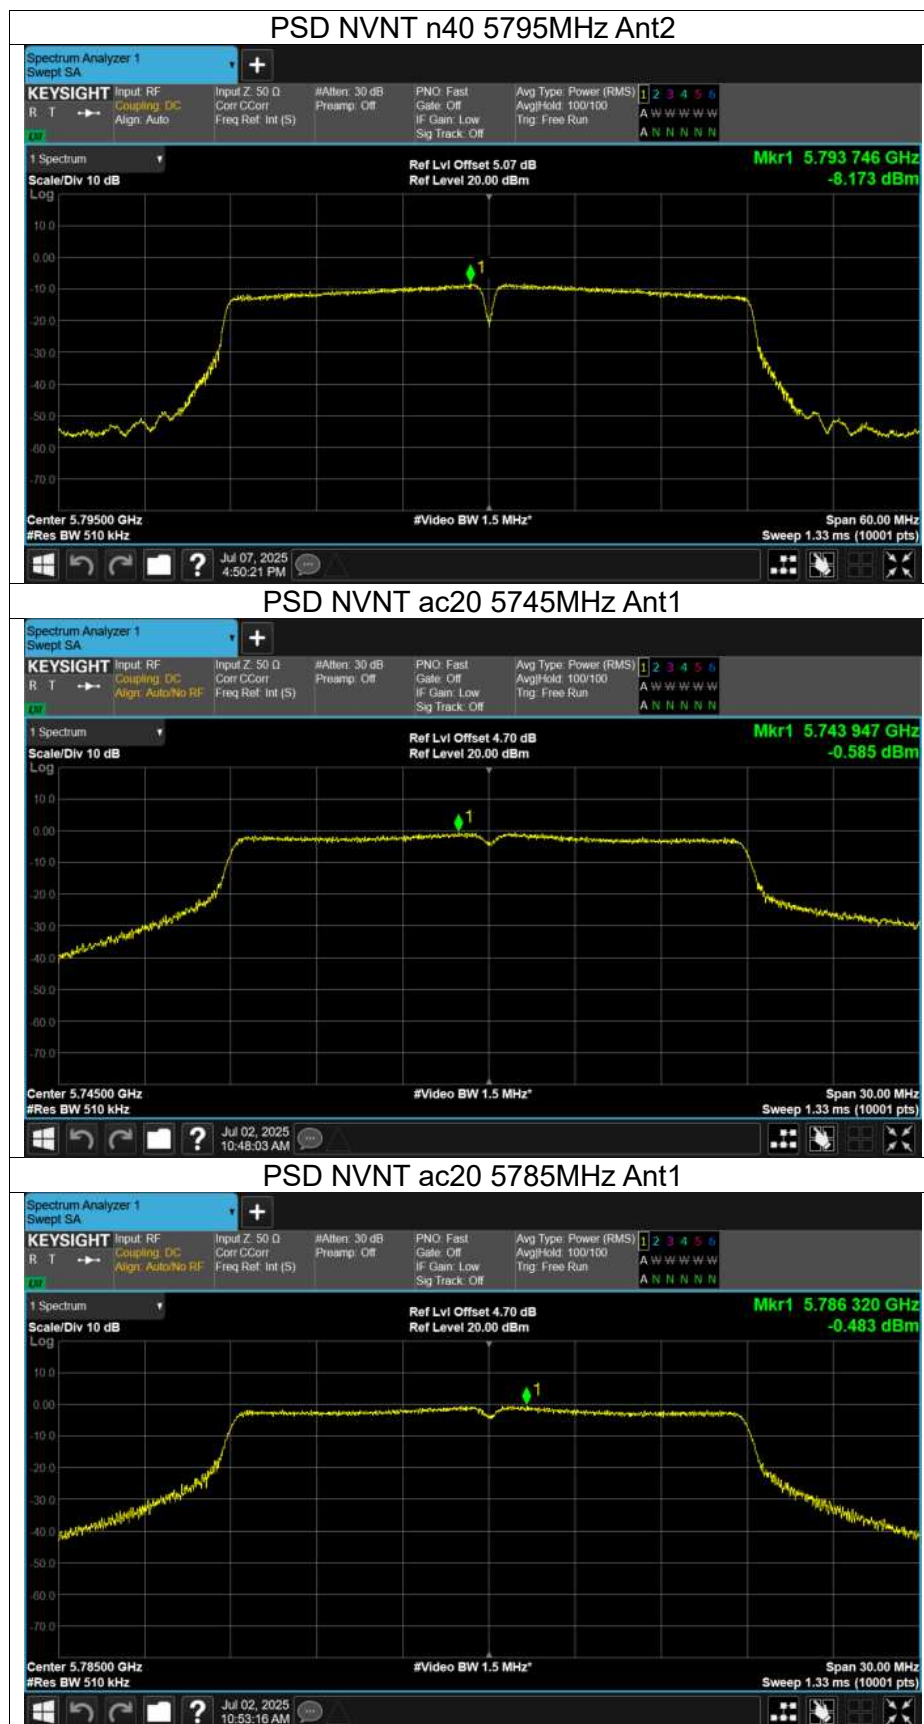


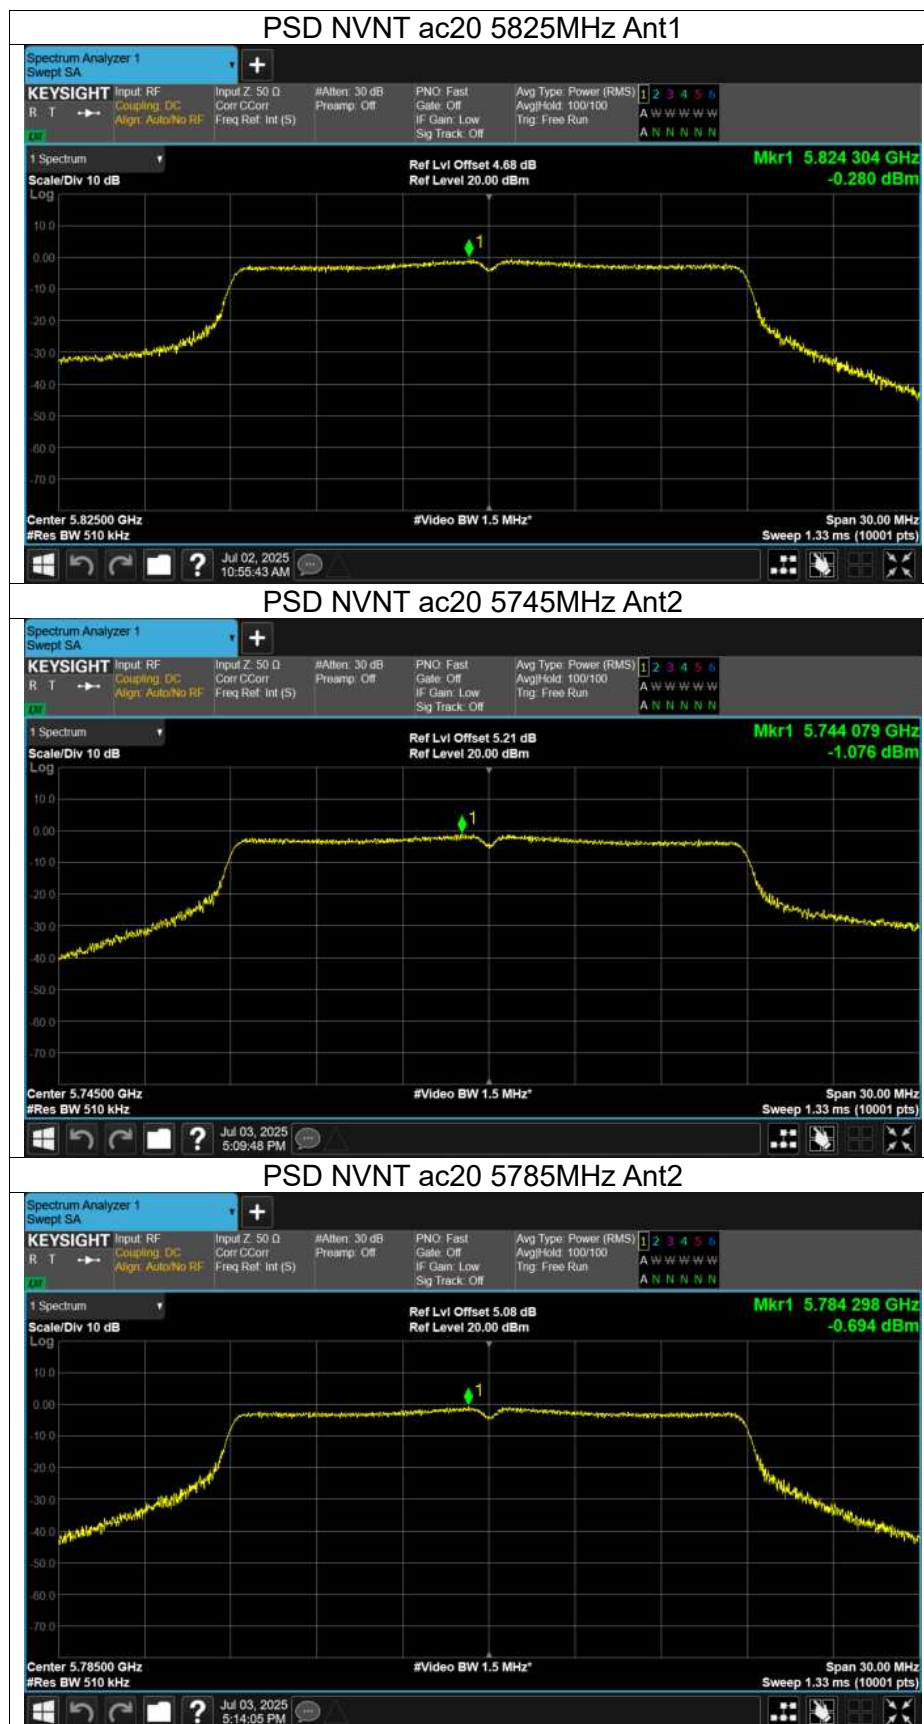


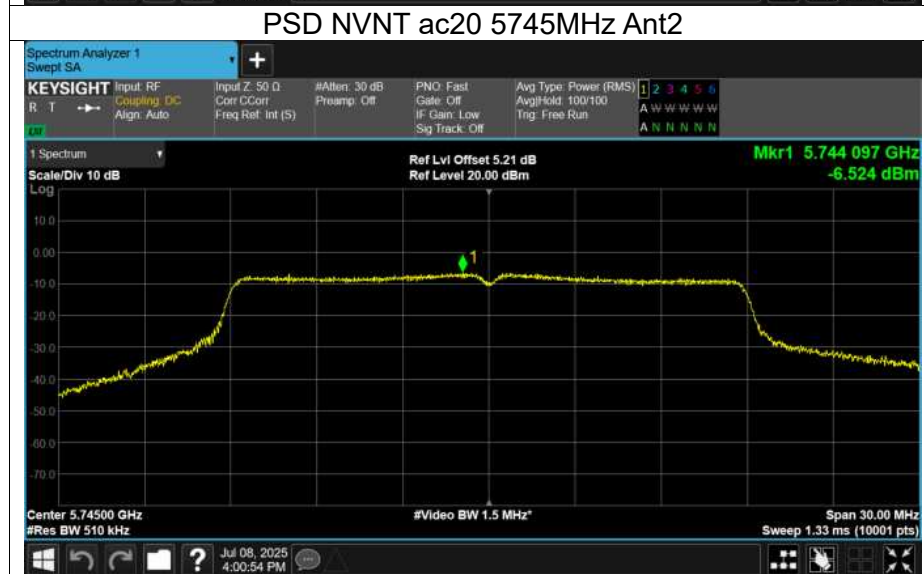
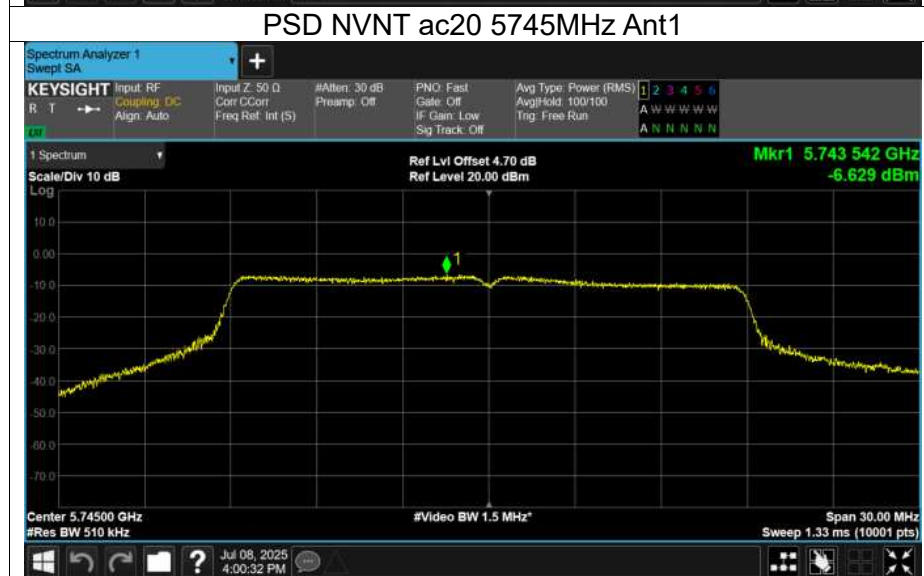
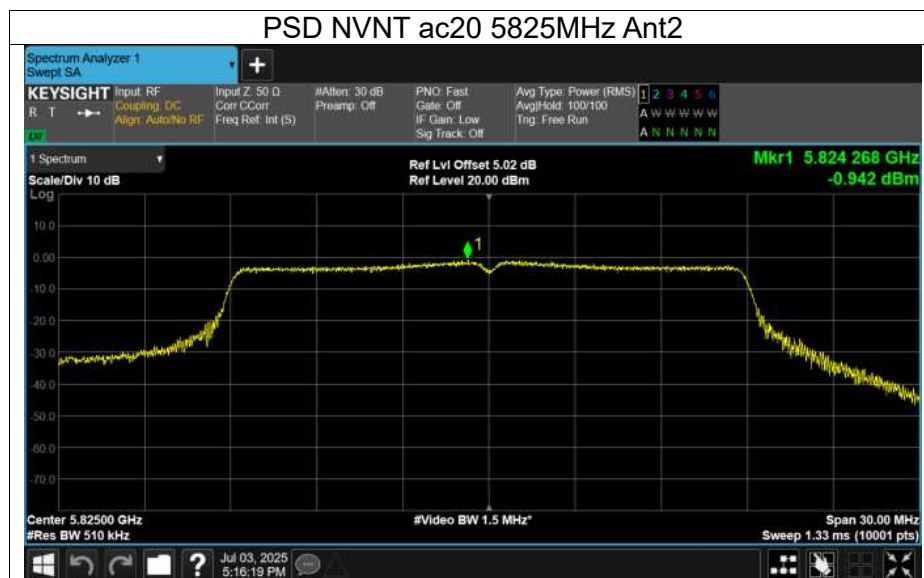




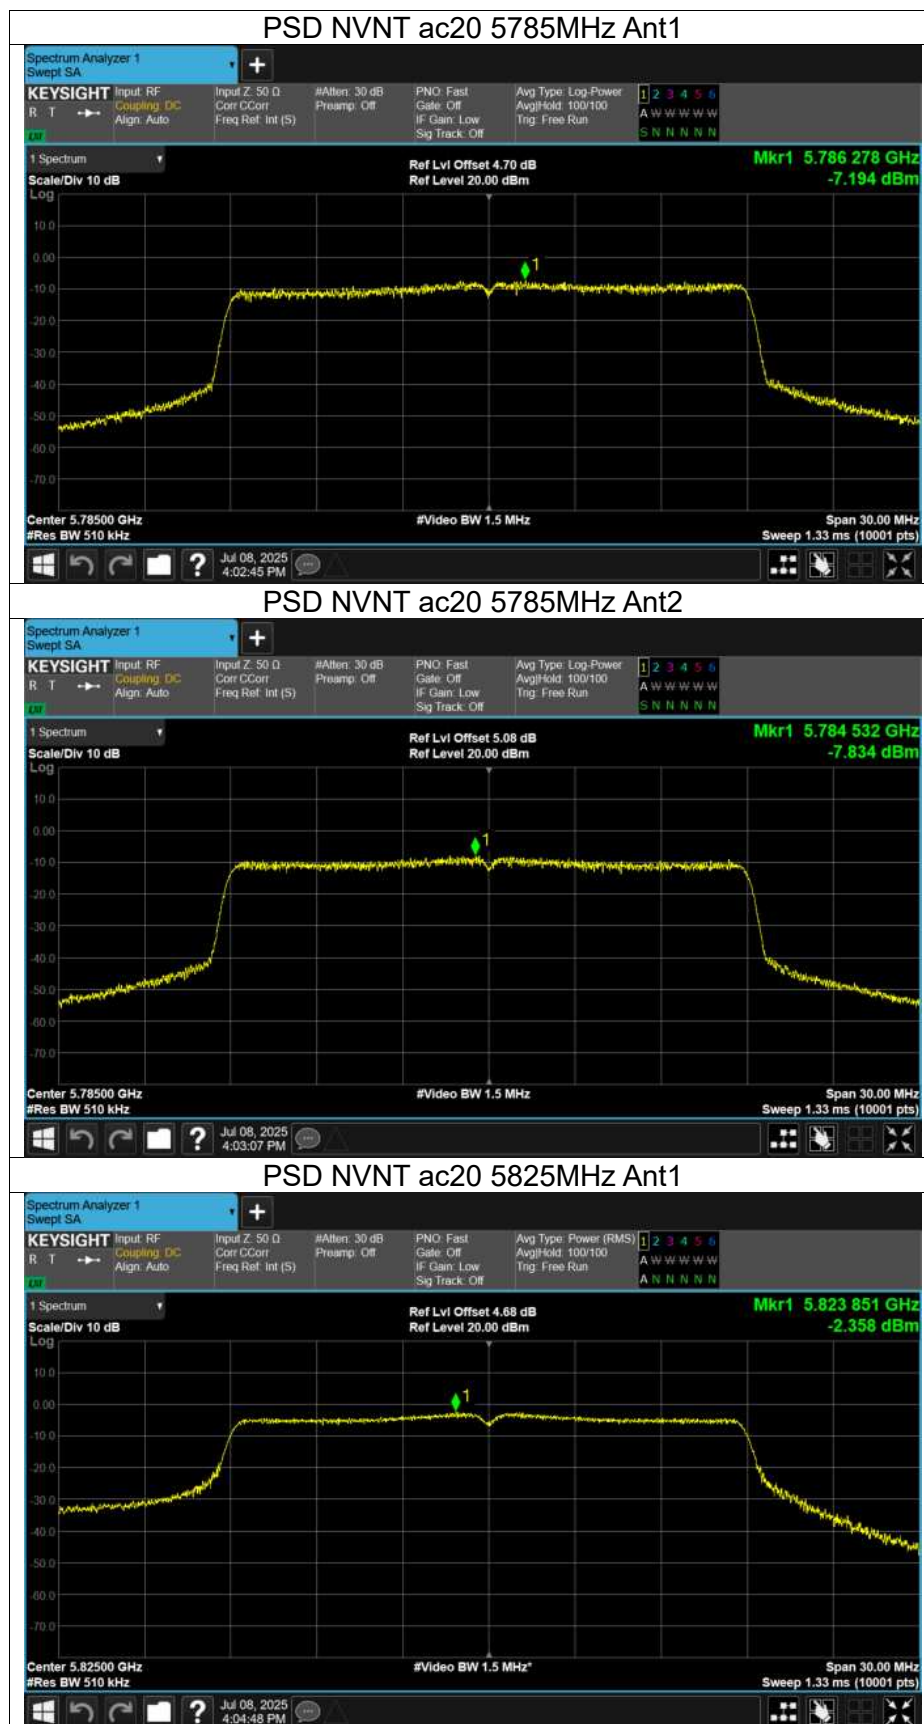


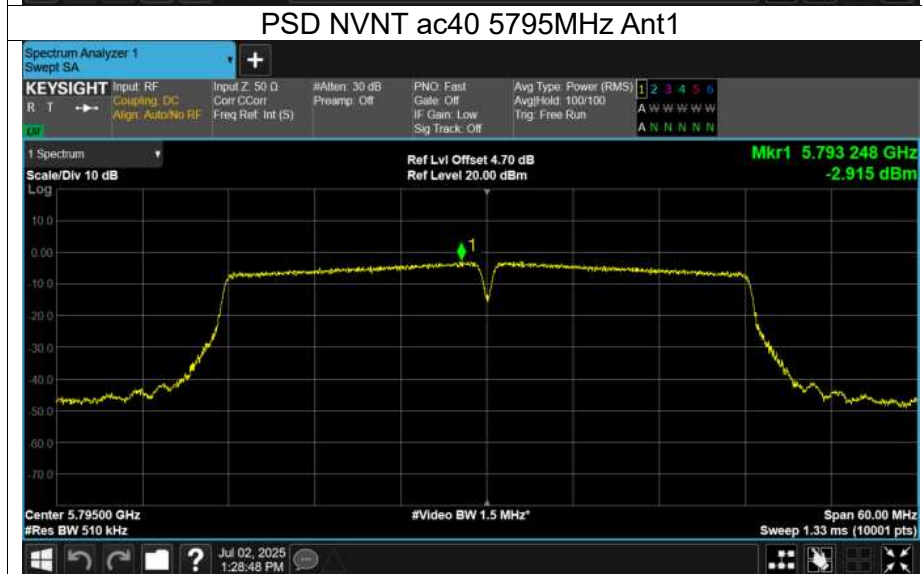
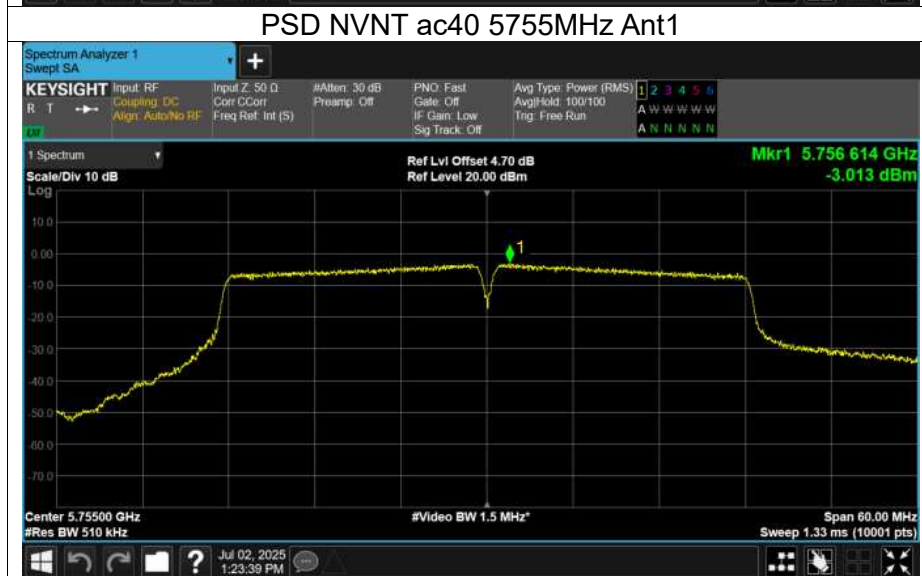
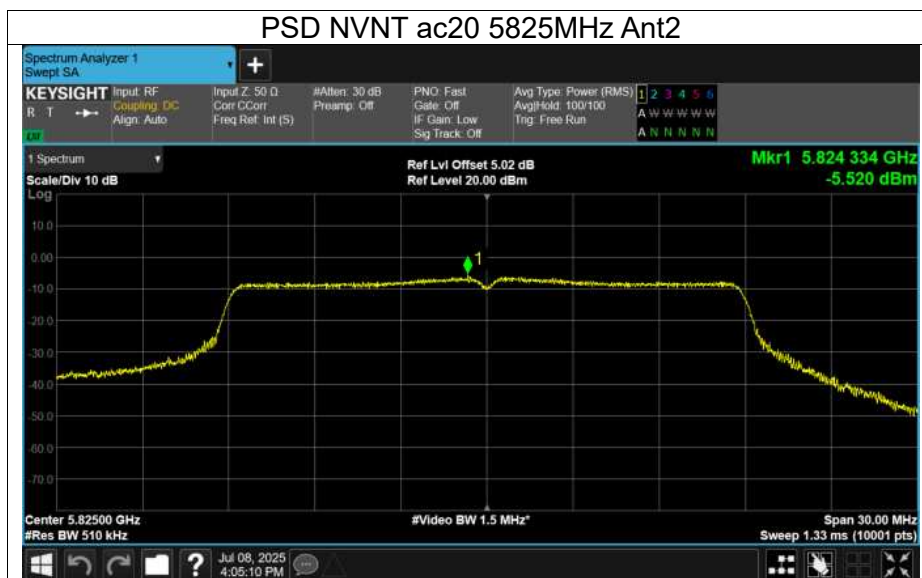




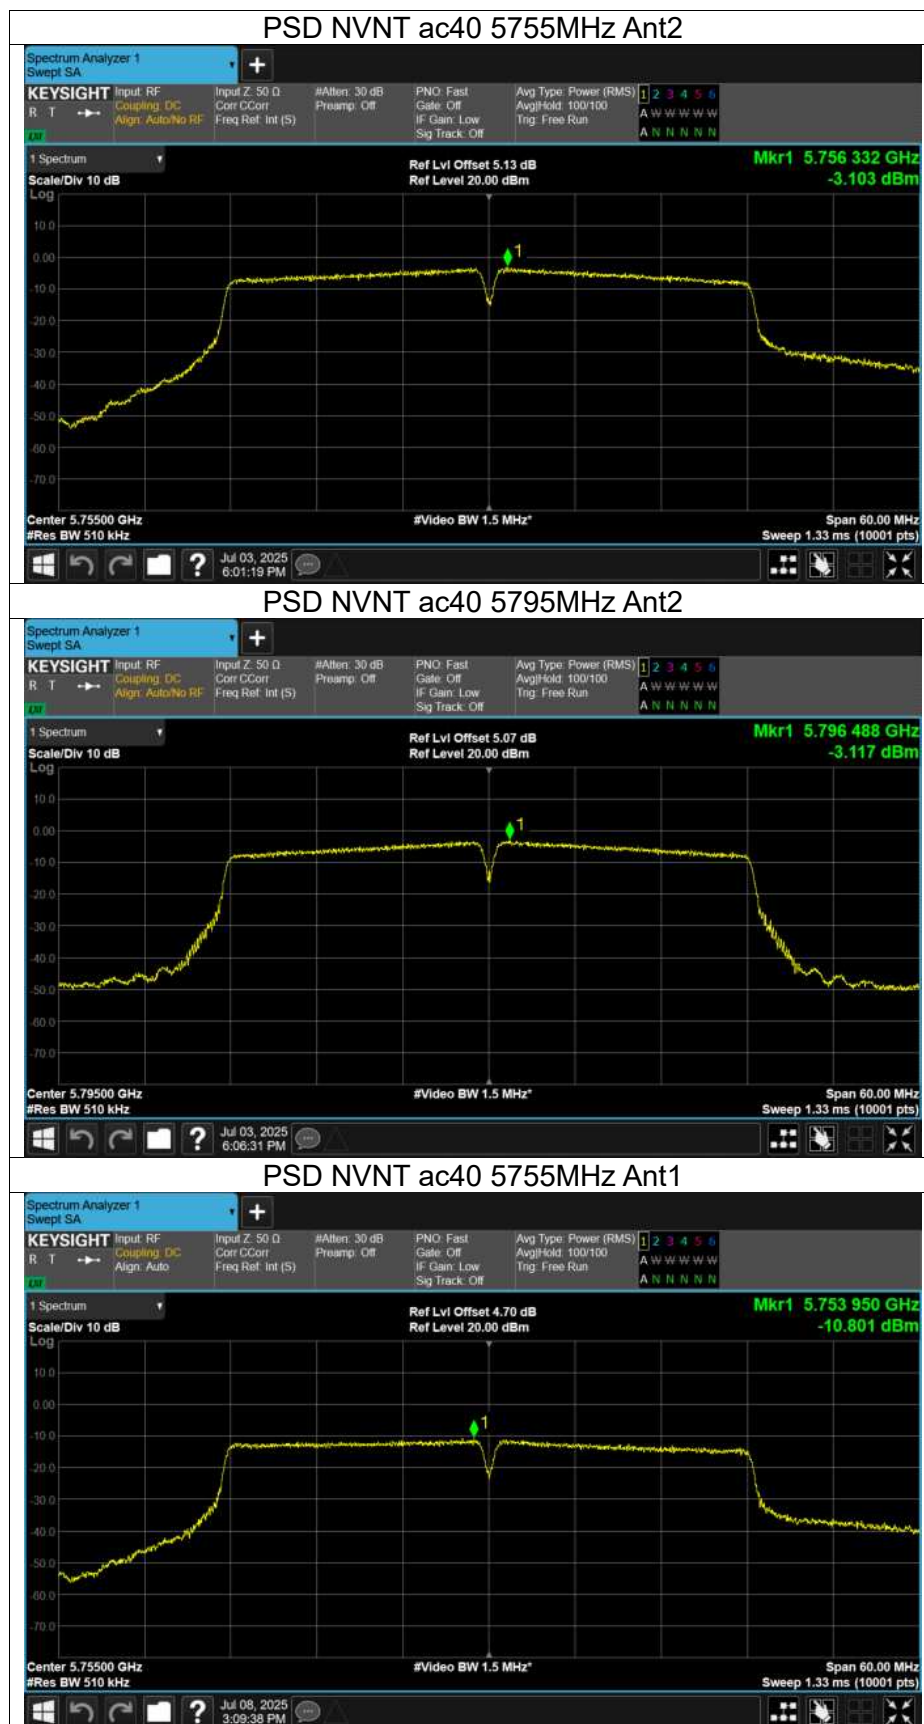




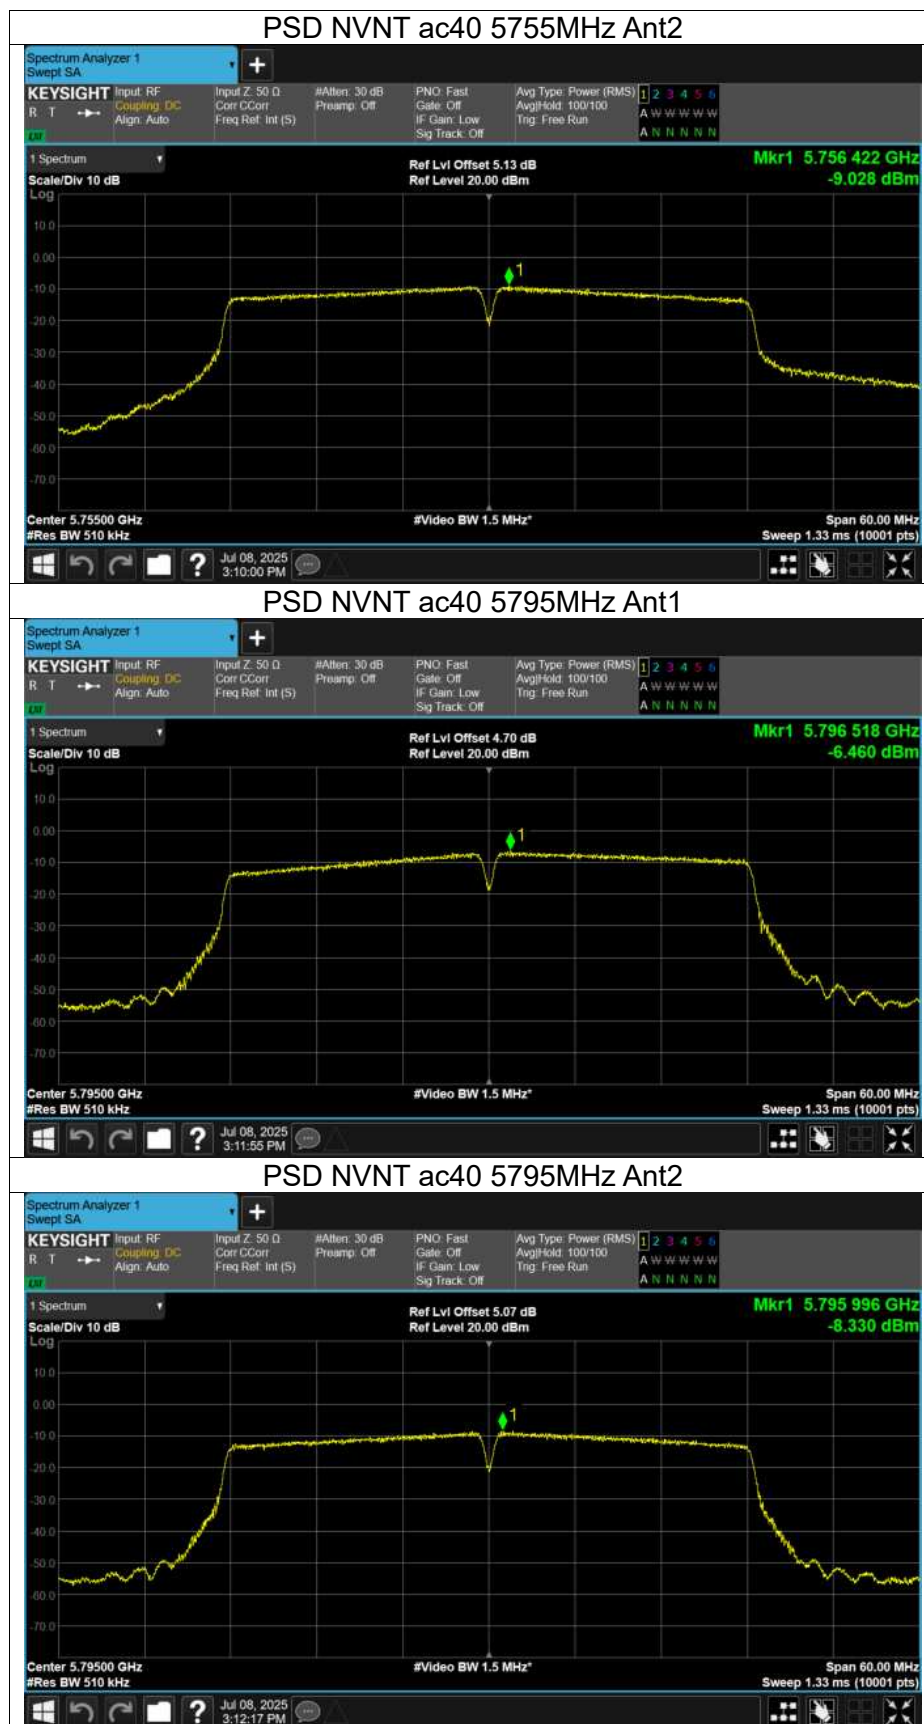


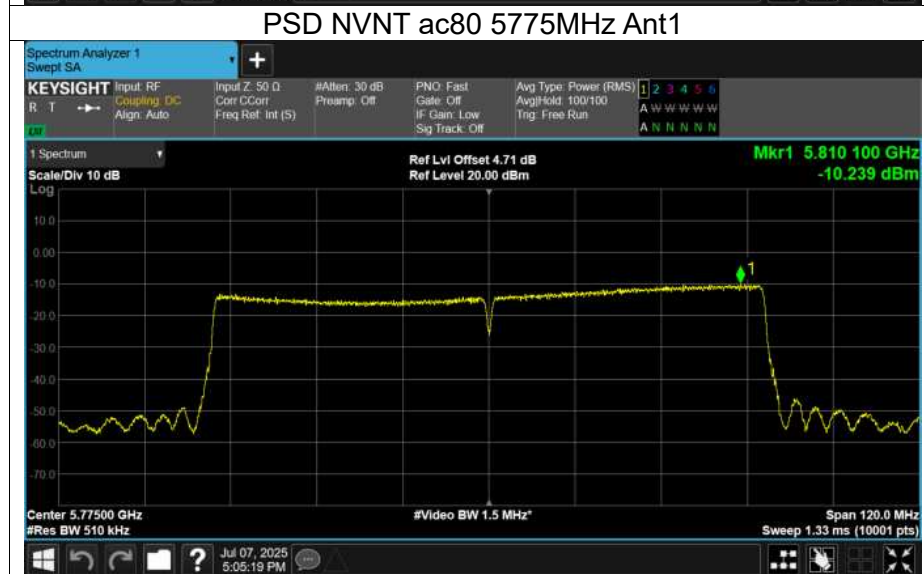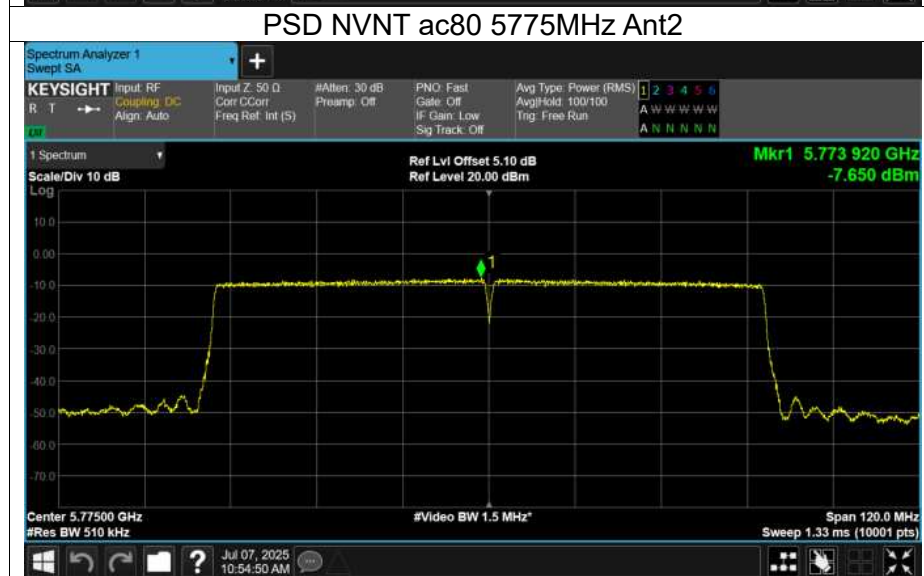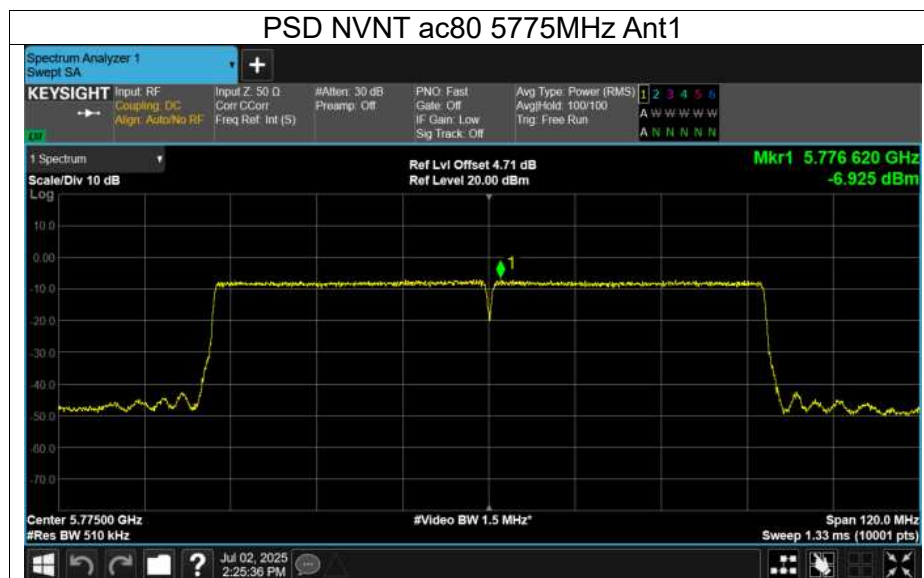


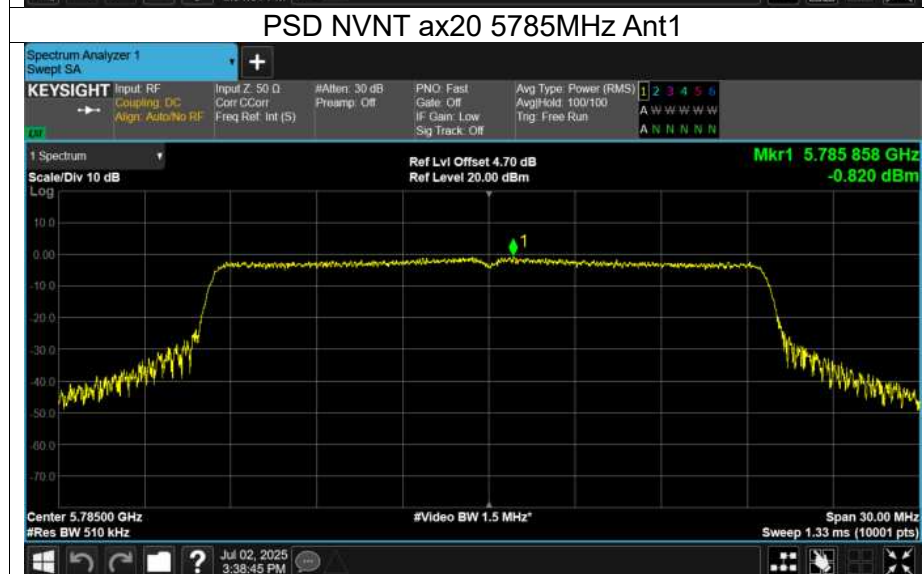
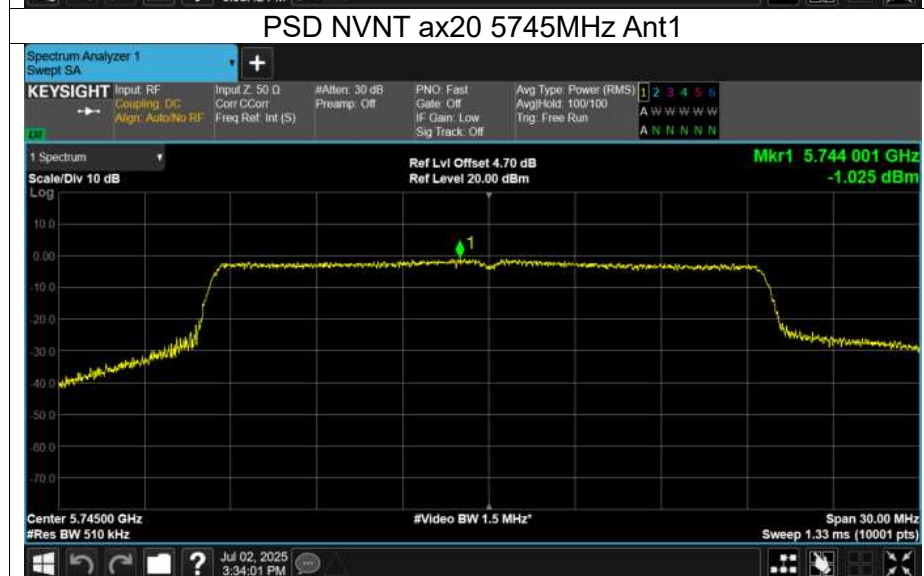
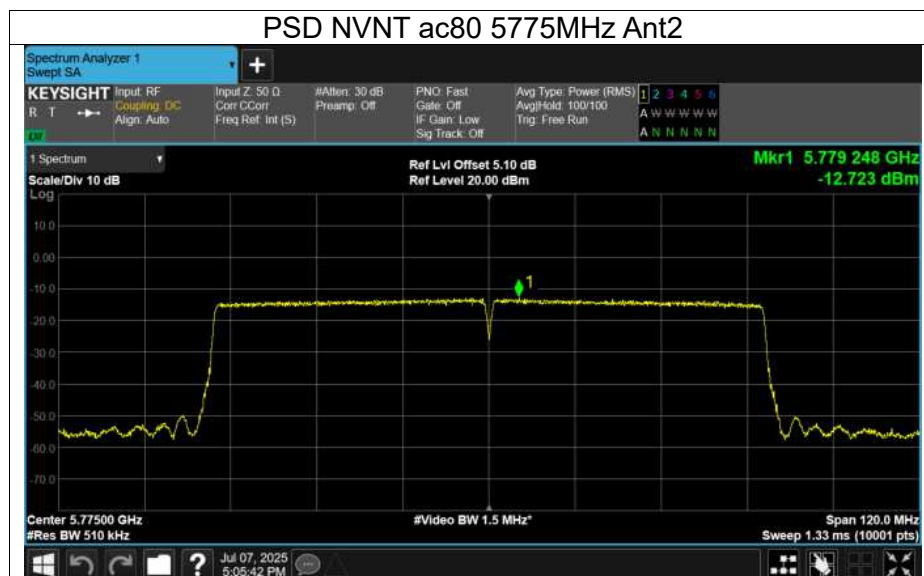


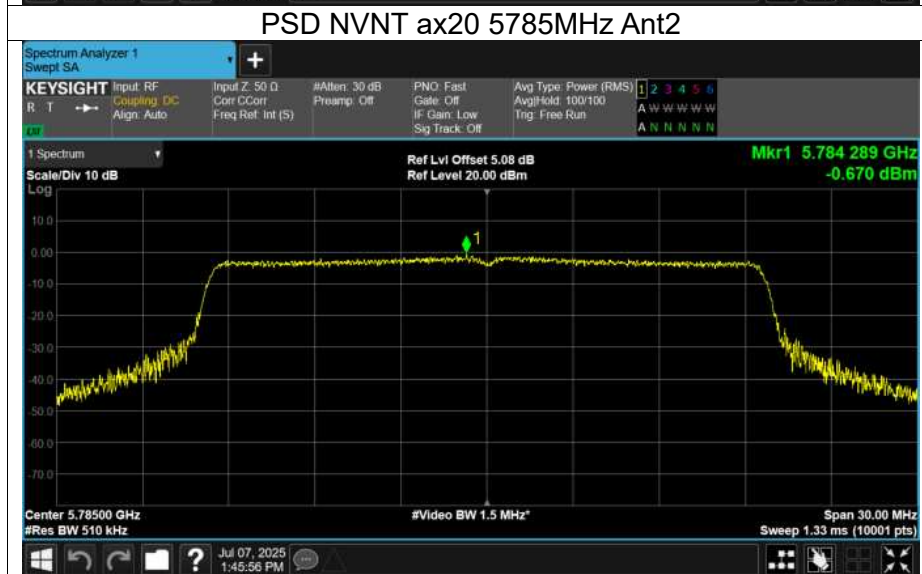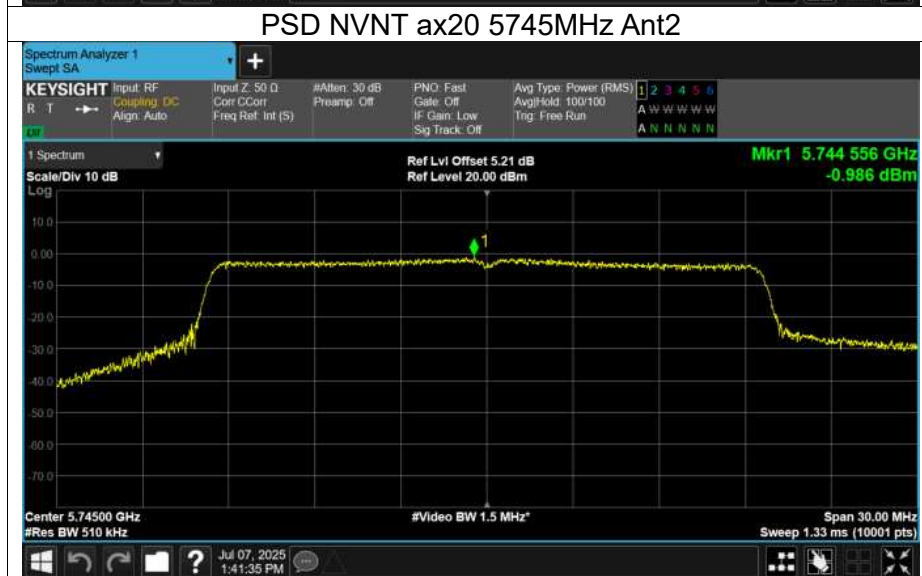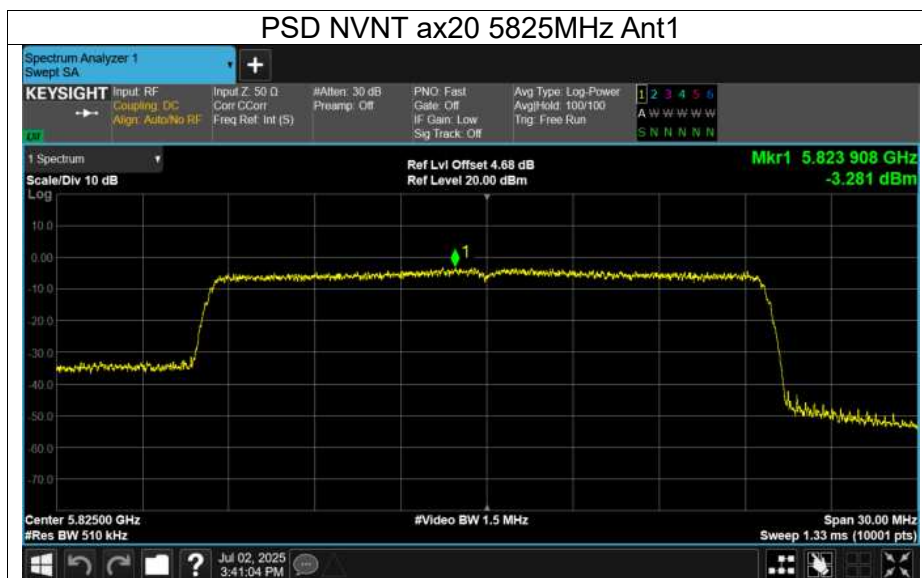


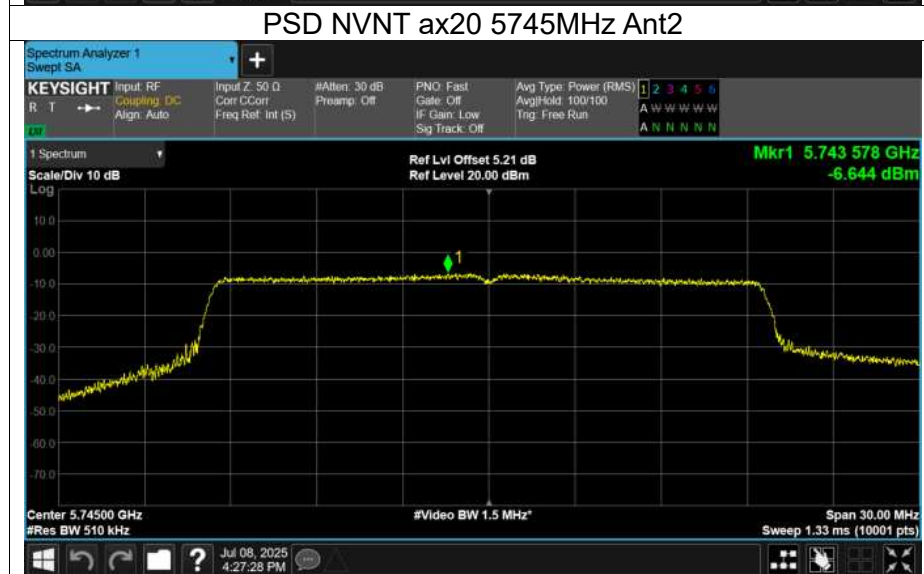
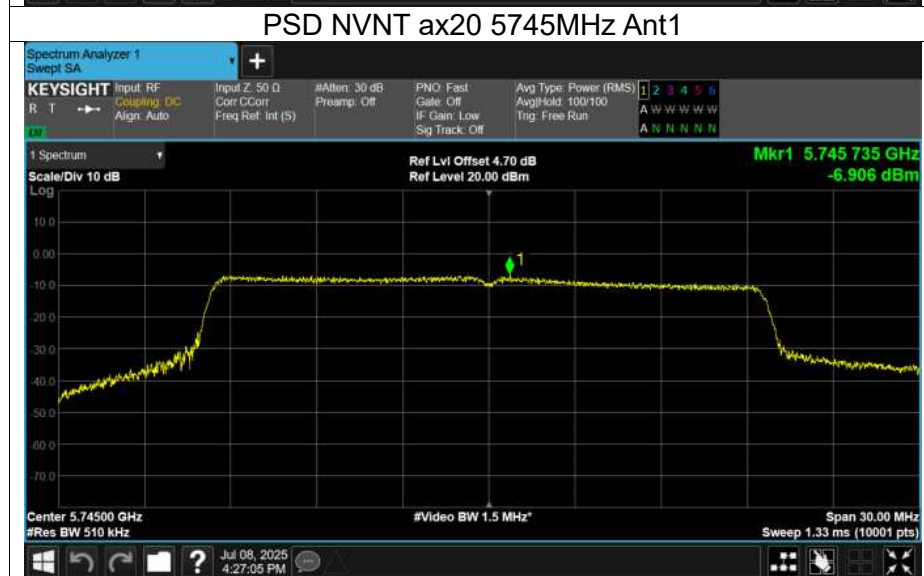
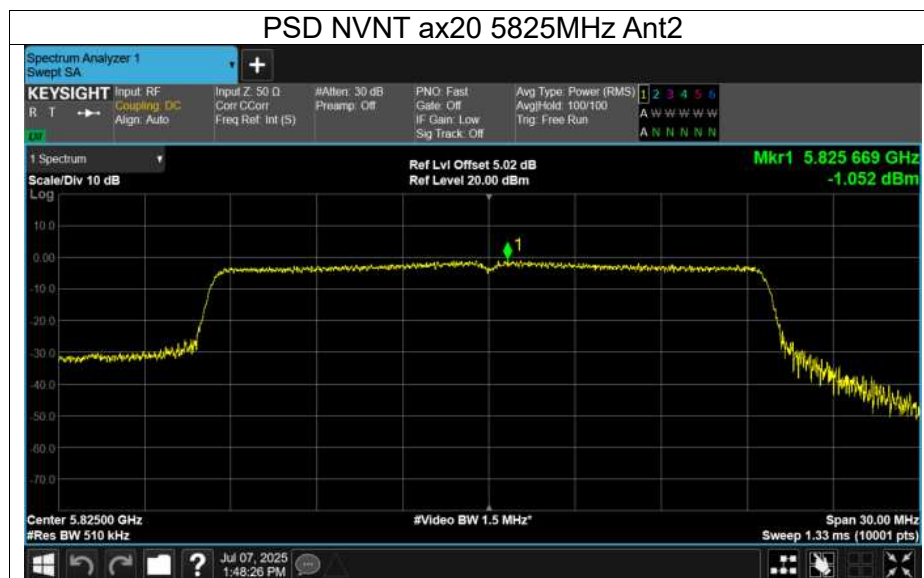


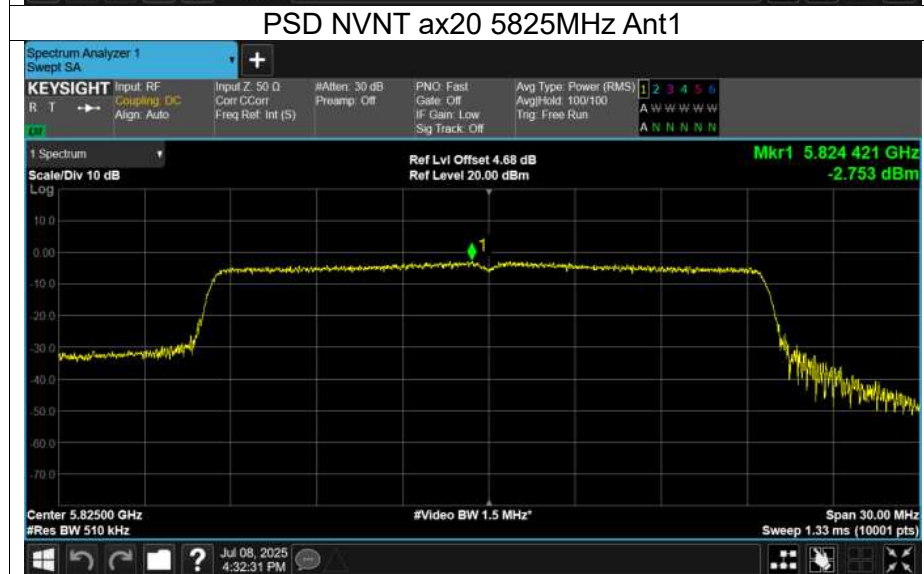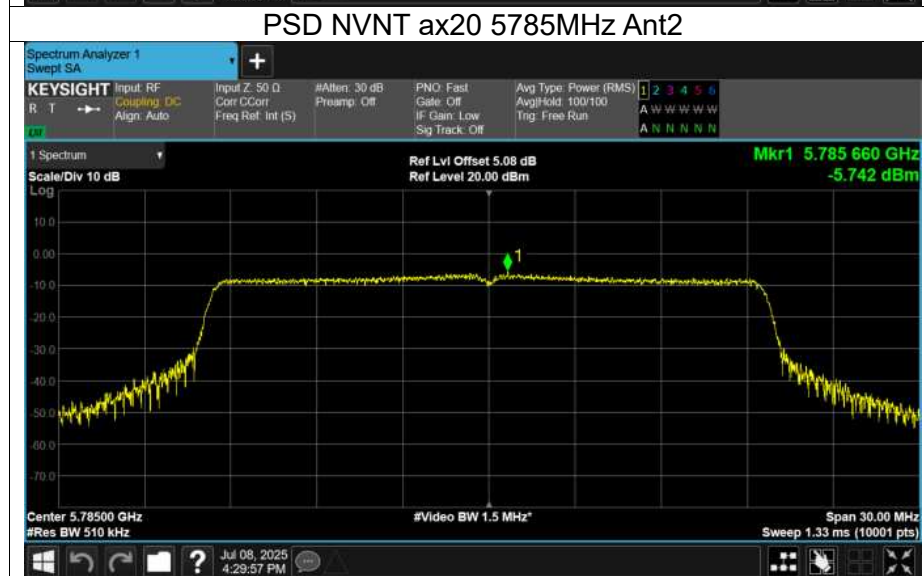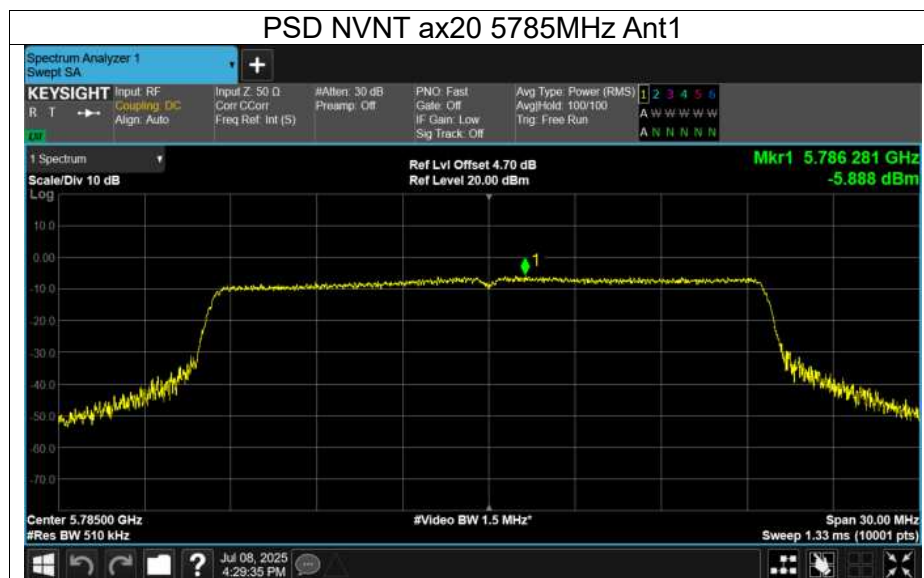


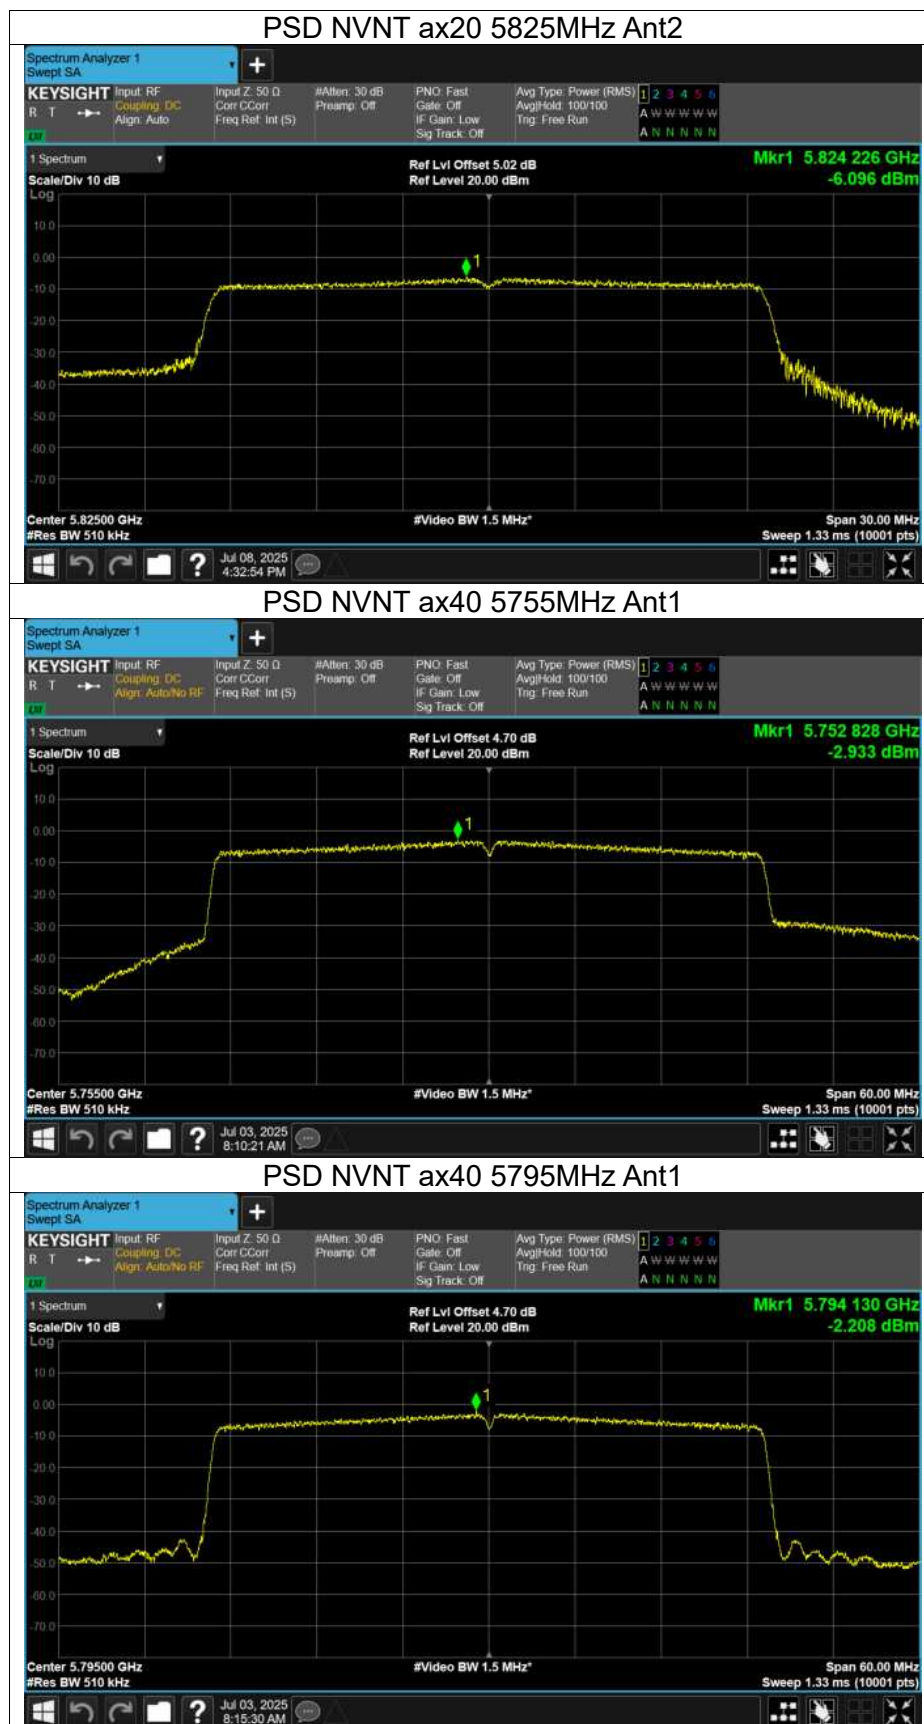

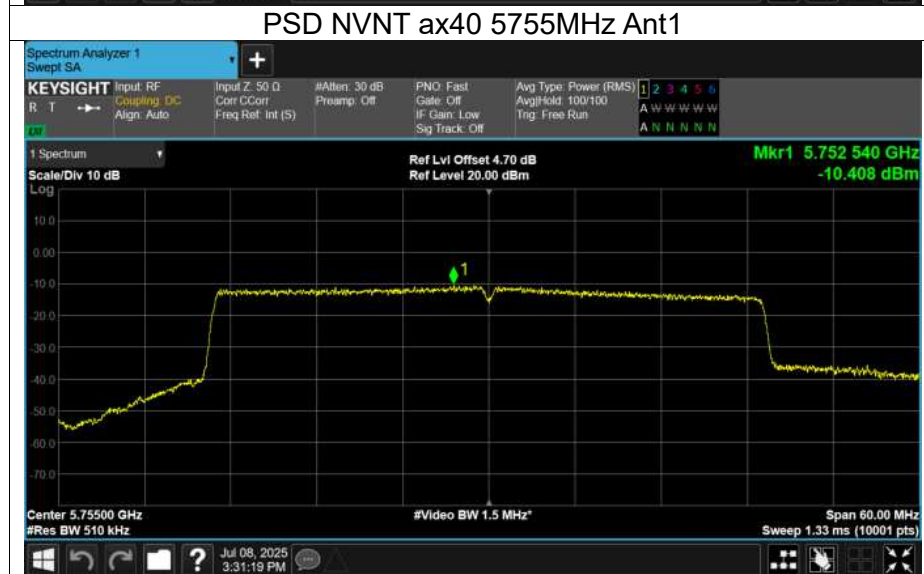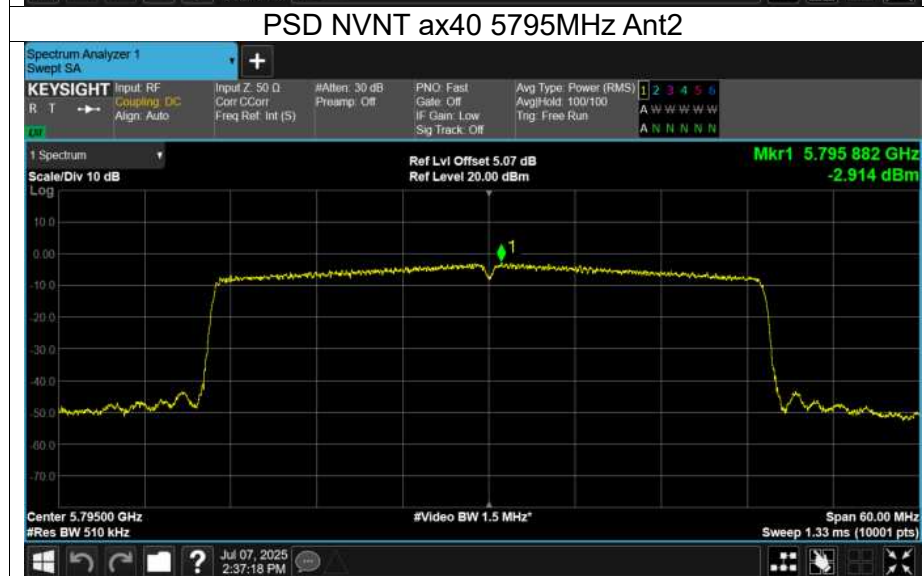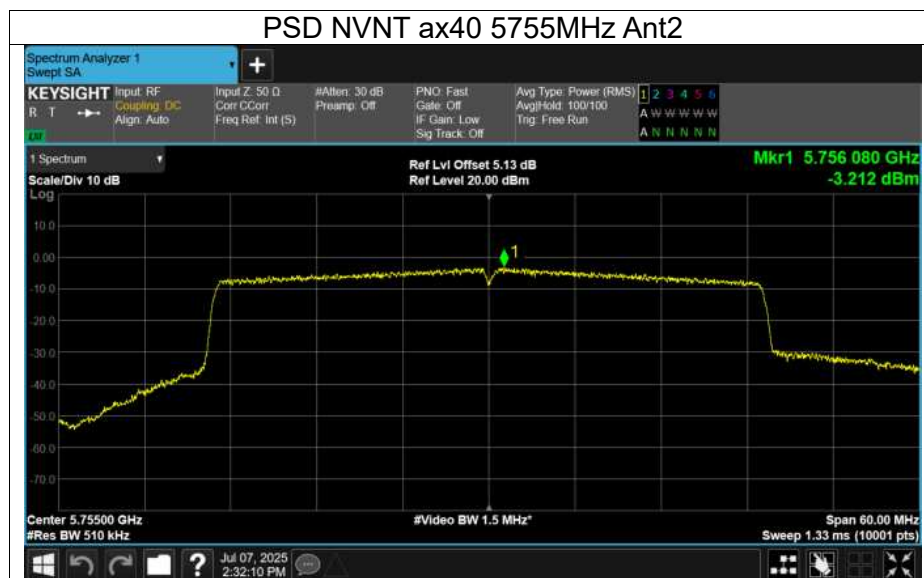

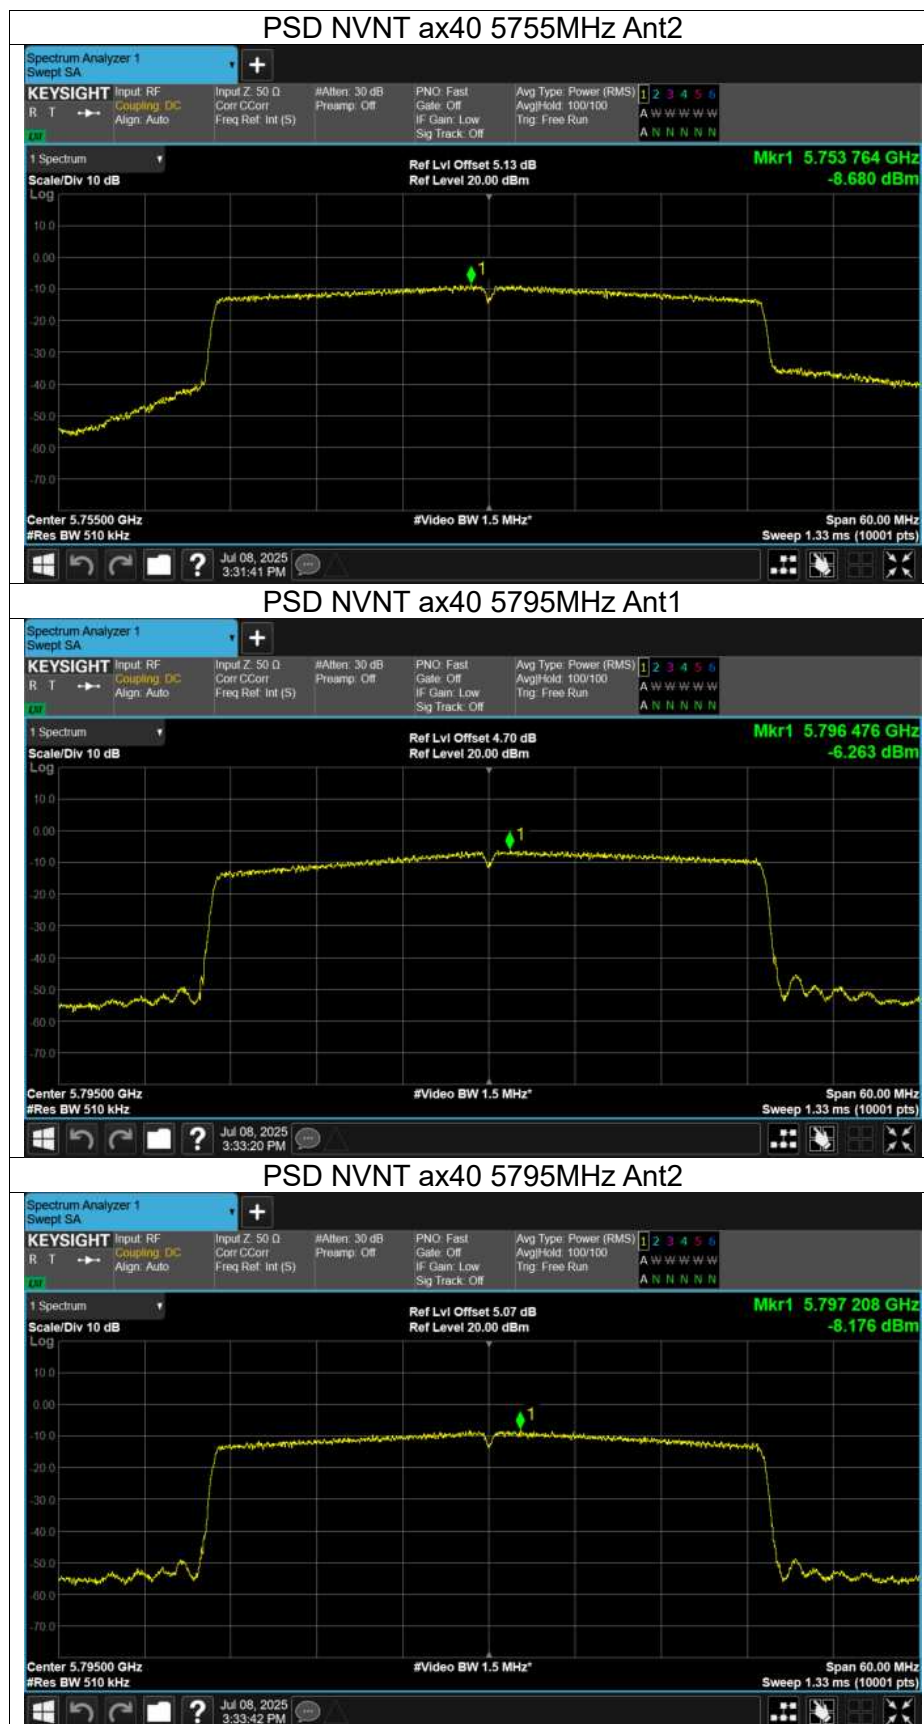

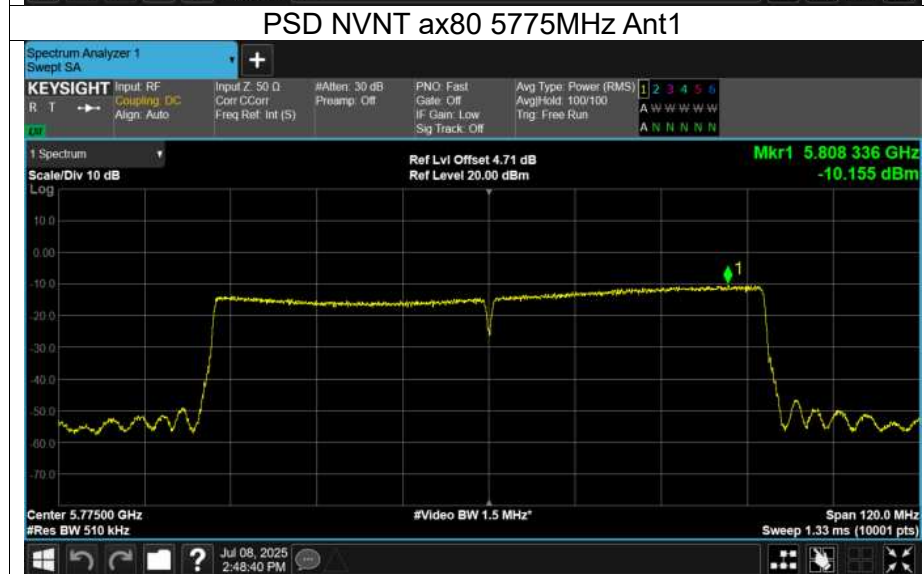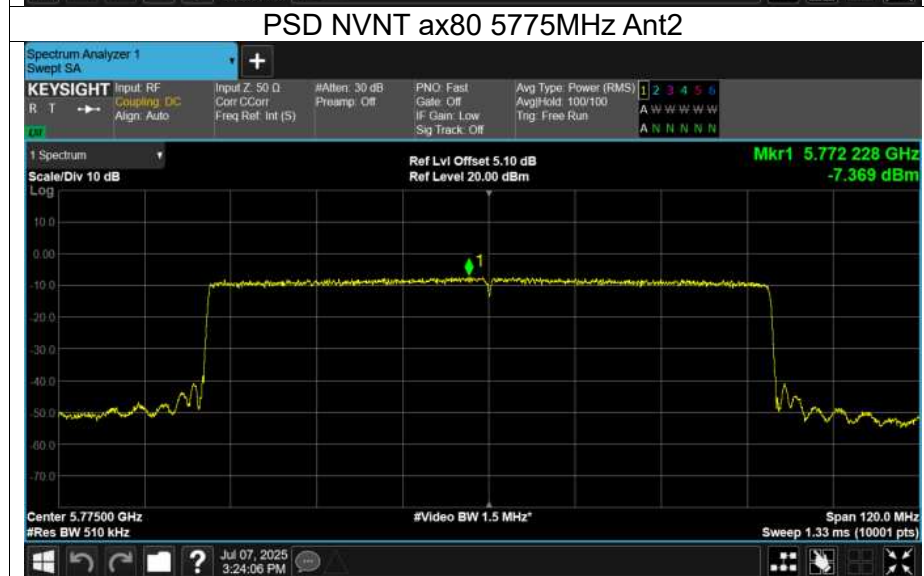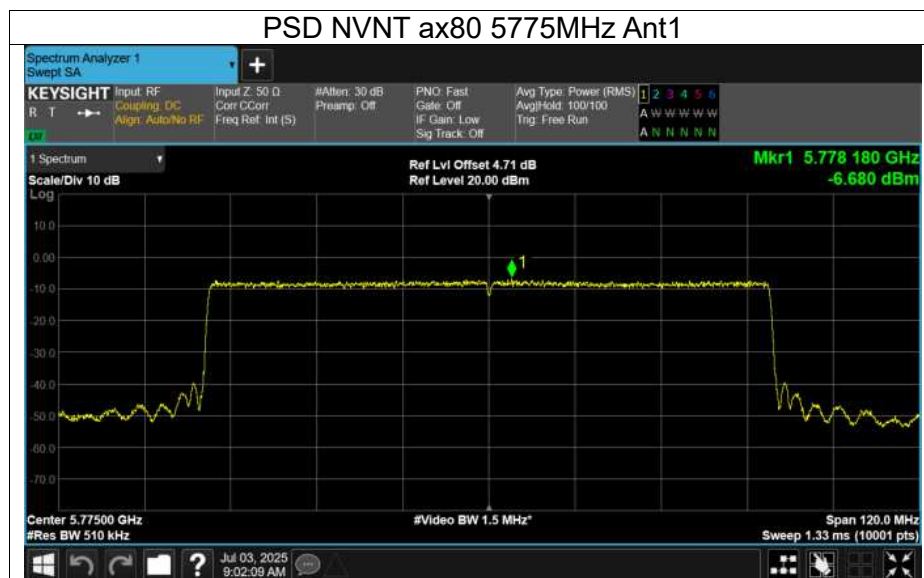

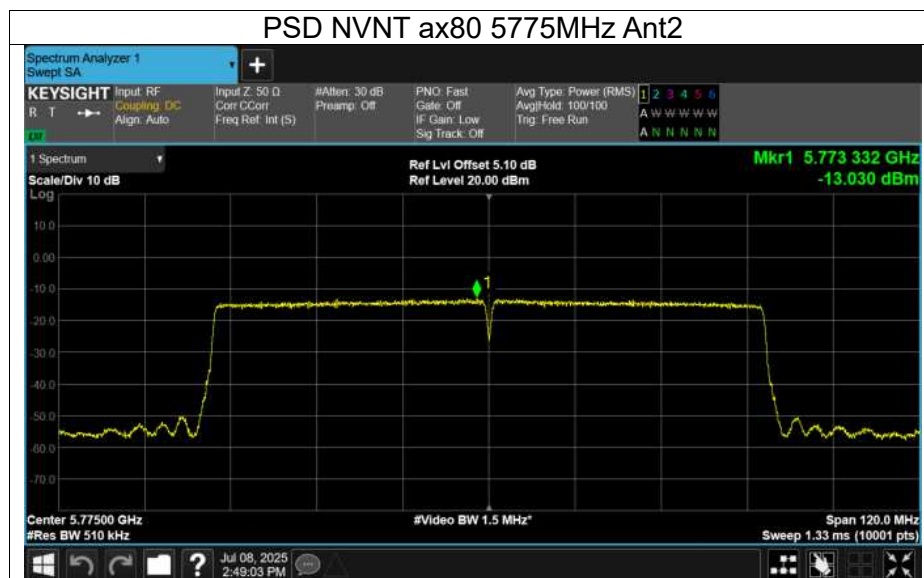



Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5180	Ant1	-38.93	-27	Pass
NVNT	a	5240	Ant1	-40.8	-27	Pass
NVNT	a	5260	Ant1	-39.32	-27	Pass
NVNT	a	5320	Ant1	-39.78	-27	Pass
NVNT	a	5500	Ant1	-39.27	-27	Pass
NVNT	a	5700	Ant1	-37.7	-27	Pass
NVNT	a	5180	Ant2	-38.15	-27	Pass
NVNT	a	5240	Ant2	-41.18	-27	Pass
NVNT	a	5260	Ant2	-38.78	-27	Pass
NVNT	a	5320	Ant2	-38.83	-27	Pass
NVNT	a	5500	Ant2	-40.1	-27	Pass
NVNT	a	5700	Ant2	-39.24	-27	Pass
NVNT	n20	5180	Ant1	-38.53	-27	Pass
NVNT	n20	5240	Ant1	-40.85	-27	Pass
NVNT	n20	5260	Ant1	-39.18	-27	Pass
NVNT	n20	5320	Ant1	-39.3	-27	Pass
NVNT	n20	5500	Ant1	-38.93	-27	Pass
NVNT	n20	5700	Ant1	-39.02	-27	Pass
NVNT	n20	5180	Ant2	-38.55	-27	Pass
NVNT	n20	5240	Ant2	-40.38	-27	Pass
NVNT	n20	5260	Ant2	-38.66	-27	Pass
NVNT	n20	5320	Ant2	-40.8	-27	Pass
NVNT	n20	5500	Ant2	-39.42	-27	Pass
NVNT	n20	5700	Ant2	-39.4	-27	Pass
NVNT	n40	5190	Ant1	-38.5	-27	Pass
NVNT	n40	5230	Ant1	-41.87	-27	Pass
NVNT	n40	5270	Ant1	-39.61	-27	Pass
NVNT	n40	5310	Ant1	-39.94	-27	Pass
NVNT	n40	5510	Ant1	-39.31	-27	Pass
NVNT	n40	5670	Ant1	-39.32	-27	Pass
NVNT	n40	5190	Ant2	-37.69	-27	Pass
NVNT	n40	5230	Ant2	-41.05	-27	Pass
NVNT	n40	5270	Ant2	-39.32	-27	Pass
NVNT	n40	5310	Ant2	-40.51	-27	Pass
NVNT	n40	5510	Ant2	-39.8	-27	Pass
NVNT	n40	5670	Ant2	-40.13	-27	Pass
NVNT	ac20	5180	Ant1	-38.63	-27	Pass
NVNT	ac20	5240	Ant1	-41.49	-27	Pass
NVNT	ac20	5260	Ant1	-39.24	-27	Pass
NVNT	ac20	5320	Ant1	-39.37	-27	Pass
NVNT	ac20	5500	Ant1	-39.36	-27	Pass
NVNT	ac20	5700	Ant1	-38.8	-27	Pass
NVNT	ac20	5180	Ant2	-38.23	-27	Pass
NVNT	ac20	5240	Ant2	-40.9	-27	Pass
NVNT	ac20	5260	Ant2	-38.28	-27	Pass
NVNT	ac20	5320	Ant2	-39.68	-27	Pass
NVNT	ac20	5500	Ant2	-38.96	-27	Pass
NVNT	ac20	5700	Ant2	-38.62	-27	Pass
NVNT	ac40	5190	Ant1	-38.84	-27	Pass
NVNT	ac40	5230	Ant1	-40.96	-27	Pass
NVNT	ac40	5270	Ant1	-38.01	-27	Pass
NVNT	ac40	5310	Ant1	-40.1	-27	Pass
NVNT	ac40	5510	Ant1	-39.24	-27	Pass



NVNT	ac40	5670	Ant1	-39.26	-27	Pass
NVNT	ac40	5190	Ant2	-38.18	-27	Pass
NVNT	ac40	5230	Ant2	-40.56	-27	Pass
NVNT	ac40	5270	Ant2	-39.26	-27	Pass
NVNT	ac40	5310	Ant2	-39.47	-27	Pass
NVNT	ac40	5510	Ant2	-39.8	-27	Pass
NVNT	ac40	5670	Ant2	-39.83	-27	Pass
NVNT	ac80	5210	Ant1	-35.68	-27	Pass
NVNT	ac80	5290	Ant1	-37.75	-27	Pass
NVNT	ac80	5530	Ant1	-35.22	-27	Pass
NVNT	ac80	5610	Ant1	-39.35	-27	Pass
NVNT	ac80	5210	Ant2	-32.16	-27	Pass
NVNT	ac80	5290	Ant2	-37.16	-27	Pass
NVNT	ac80	5530	Ant2	-39	-27	Pass
NVNT	ac80	5610	Ant2	-40.82	-27	Pass
NVNT	ax20	5180	Ant1	-37.5	-27	Pass
NVNT	ax20	5240	Ant1	-41.14	-27	Pass
NVNT	ax20	5260	Ant1	-38.98	-27	Pass
NVNT	ax20	5320	Ant1	-40.15	-27	Pass
NVNT	ax20	5500	Ant1	-40.24	-27	Pass
NVNT	ax20	5700	Ant1	-38.88	-27	Pass
NVNT	ax20	5180	Ant2	-38.42	-27	Pass
NVNT	ax20	5240	Ant2	-40.8	-27	Pass
NVNT	ax20	5260	Ant2	-39.23	-27	Pass
NVNT	ax20	5320	Ant2	-39.88	-27	Pass
NVNT	ax20	5500	Ant2	-39.43	-27	Pass
NVNT	ax20	5700	Ant2	-38.75	-27	Pass
NVNT	ax40	5190	Ant1	-38.47	-27	Pass
NVNT	ax40	5230	Ant1	-40.93	-27	Pass
NVNT	ax40	5270	Ant1	-39.45	-27	Pass
NVNT	ax40	5310	Ant1	-39.99	-27	Pass
NVNT	ax40	5510	Ant1	-40.01	-27	Pass
NVNT	ax40	5670	Ant1	-39.63	-27	Pass
NVNT	ax40	5190	Ant2	-38.67	-27	Pass
NVNT	ax40	5230	Ant2	-41.06	-27	Pass
NVNT	ax40	5270	Ant2	-39.42	-27	Pass
NVNT	ax40	5310	Ant2	-39.93	-27	Pass
NVNT	ax40	5510	Ant2	-39.99	-27	Pass
NVNT	ax40	5670	Ant2	-39.32	-27	Pass
NVNT	ax80	5210	Ant1	-35.58	-27	Pass
NVNT	ax80	5290	Ant1	-36.41	-27	Pass
NVNT	ax80	5530	Ant1	-36.31	-27	Pass
NVNT	ax80	5610	Ant1	-40.86	-27	Pass
NVNT	ax80	5210	Ant2	-36.26	-27	Pass
NVNT	ax80	5290	Ant2	-37.65	-27	Pass
NVNT	ax80	5530	Ant2	-38	-27	Pass
NVNT	ax80	5610	Ant2	-39.64	-27	Pass

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-35.81	15.6	Pass
NVNT	a	5825	Ant1	-36.7	15.6	Pass
NVNT	n20	5745	Ant1	-38.19	15.6	Pass
NVNT	n20	5825	Ant1	-38.34	15.6	Pass
NVNT	n40	5755	Ant1	-34.67	15.6	Pass
NVNT	n40	5795	Ant1	-39.12	15.6	Pass
NVNT	n40	5755	Ant2	-37.27	15.6	Pass



NVNT	n40	5795	Ant2	-39.55	15.6	Pass
NVNT	ac20	5745	Ant1	-38.32	15.6	Pass
NVNT	ac20	5825	Ant1	-38.37	15.6	Pass
NVNT	ac40	5755	Ant1	-36.89	15.6	Pass
NVNT	ac40	5795	Ant1	-37.89	15.6	Pass
NVNT	ac40	5755	Ant2	-37.16	15.6	Pass
NVNT	ac40	5795	Ant2	-38.77	15.6	Pass
NVNT	ac80	5775	Ant1	-31.43	15.6	Pass
NVNT	ac80	5775	Ant2	-33.5	15.6	Pass
NVNT	ax20	5745	Ant1	-36.59	15.6	Pass
NVNT	ax20	5825	Ant1	-38.02	15.6	Pass
NVNT	ax40	5755	Ant1	-34.69	15.6	Pass
NVNT	ax40	5795	Ant1	-38.96	15.6	Pass
NVNT	ax40	5755	Ant2	-38.15	15.6	Pass
NVNT	ax40	5795	Ant2	-38.83	15.6	Pass
NVNT	ax80	5775	Ant1	-33.62	15.6	Pass
NVNT	ax80	5775	Ant2	-33.68	15.6	Pass



Test Graphs

Band Edge NVNT a 5180MHz Low Ant1



Band Edge NVNT a 5240MHz High Ant1



Band Edge NVNT a 5260MHz Low Ant1





Band Edge NVNT a 5320MHz High Ant1



Band Edge NVNT a 5500MHz Low Ant1



Band Edge NVNT a 5700MHz High Ant1





Band Edge NVNT a 5180MHz Low Ant2



Band Edge NVNT a 5240MHz High Ant2



Band Edge NVNT a 5260MHz Low Ant2





Band Edge NVNT a 5320MHz High Ant2



Band Edge NVNT a 5500MHz Low Ant2



Band Edge NVNT a 5700MHz High Ant2





Band Edge NVNT n20 5180MHz Low Ant1



Band Edge NVNT n20 5240MHz High Ant1



Band Edge NVNT n20 5260MHz Low Ant1





Band Edge NVNT n20 5320MHz High Ant1



Band Edge NVNT n20 5500MHz Low Ant1



Band Edge NVNT n20 5700MHz High Ant1





Band Edge NVNT n20 5180MHz Low Ant2



Band Edge NVNT n20 5240MHz High Ant2



Band Edge NVNT n20 5260MHz Low Ant2





Band Edge NVNT n20 5320MHz High Ant2



Band Edge NVNT n20 5500MHz Low Ant2



Band Edge NVNT n20 5700MHz High Ant2





Band Edge NVNT n40 5190MHz Low Ant1



Band Edge NVNT n40 5230MHz High Ant1



Band Edge NVNT n40 5270MHz Low Ant1





Band Edge NVNT n40 5310MHz High Ant1



Band Edge NVNT n40 5510MHz Low Ant1




Band Edge NVNT n40 5670MHz High Ant1





Band Edge NVNT n40 5190MHz Low Ant2

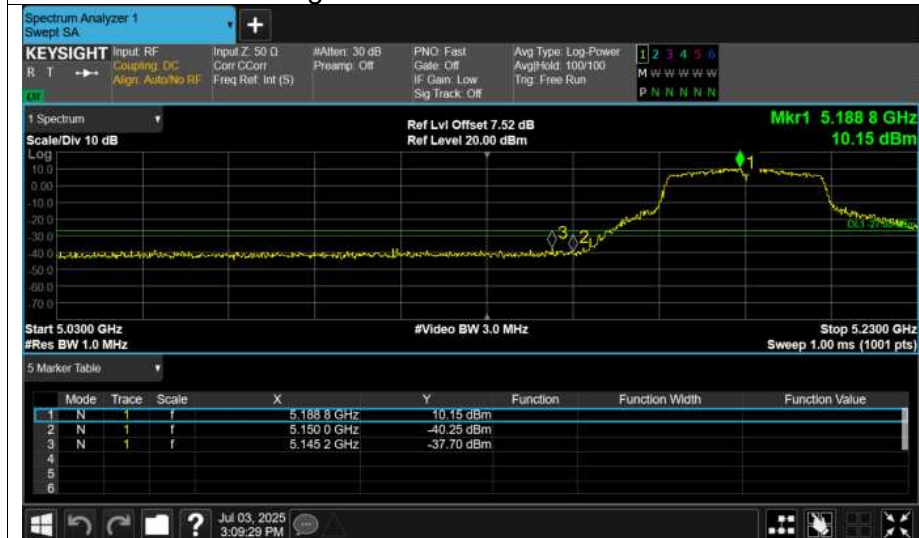

Band Edge NVNT n40 5230MHz High Ant2



Band Edge NVNT n40 5270MHz Low Ant2





Band Edge NVNT n40 5310MHz High Ant2



Band Edge NVNT n40 5510MHz Low Ant2



Band Edge NVNT n40 5670MHz High Ant2





Band Edge NVNT ac20 5180MHz Low Ant1



Band Edge NVNT ac20 5240MHz High Ant1



Band Edge NVNT ac20 5260MHz Low Ant1





Band Edge NVNT ac20 5320MHz High Ant1



Band Edge NVNT ac20 5500MHz Low Ant1



Band Edge NVNT ac20 5700MHz High Ant1





Band Edge NVNT ac20 5180MHz Low Ant2



Band Edge NVNT ac20 5240MHz High Ant2



Band Edge NVNT ac20 5260MHz Low Ant2





Band Edge NVNT ac20 5320MHz High Ant2



Band Edge NVNT ac20 5500MHz Low Ant2



Band Edge NVNT ac20 5700MHz High Ant2

