




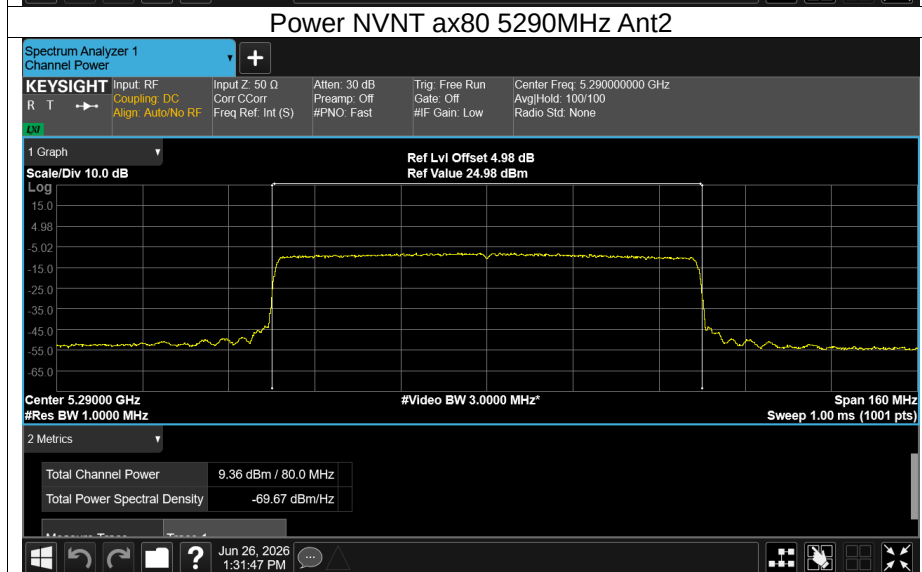
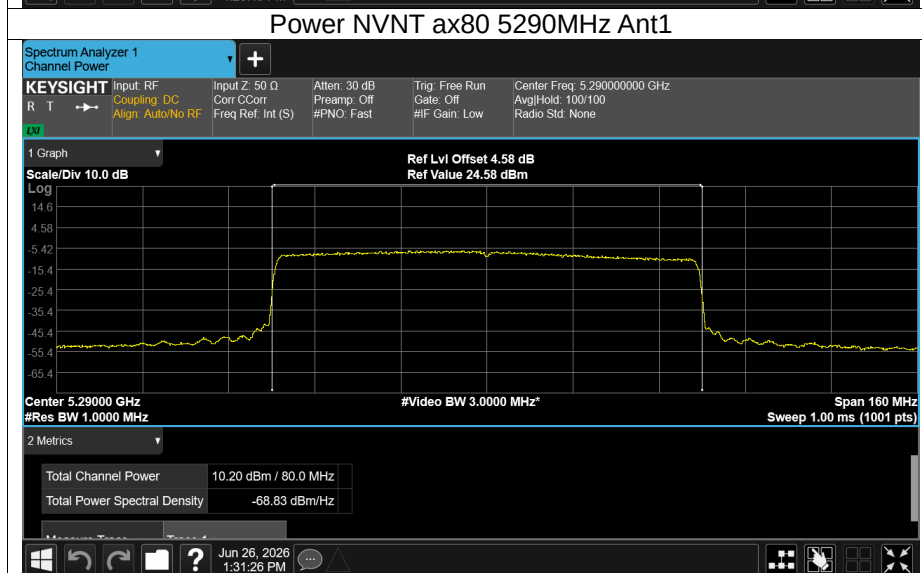
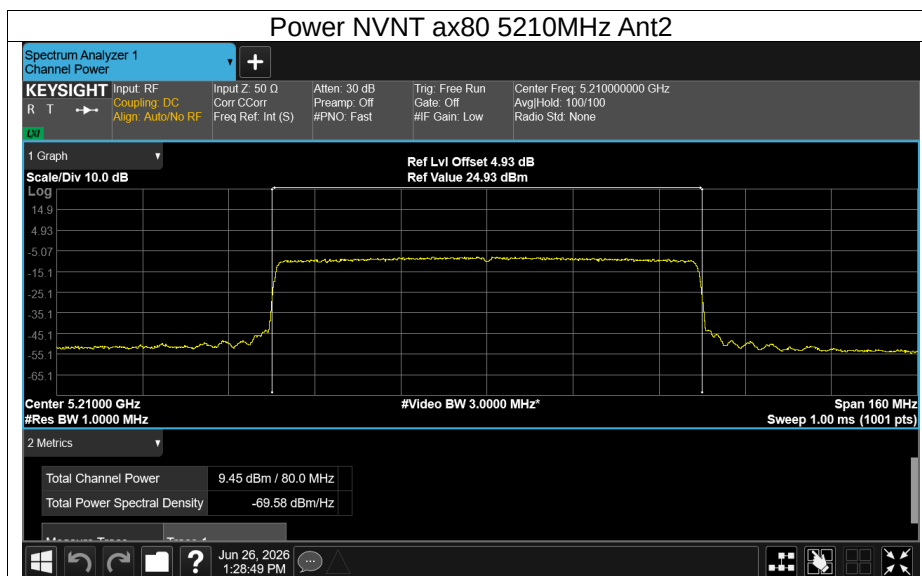
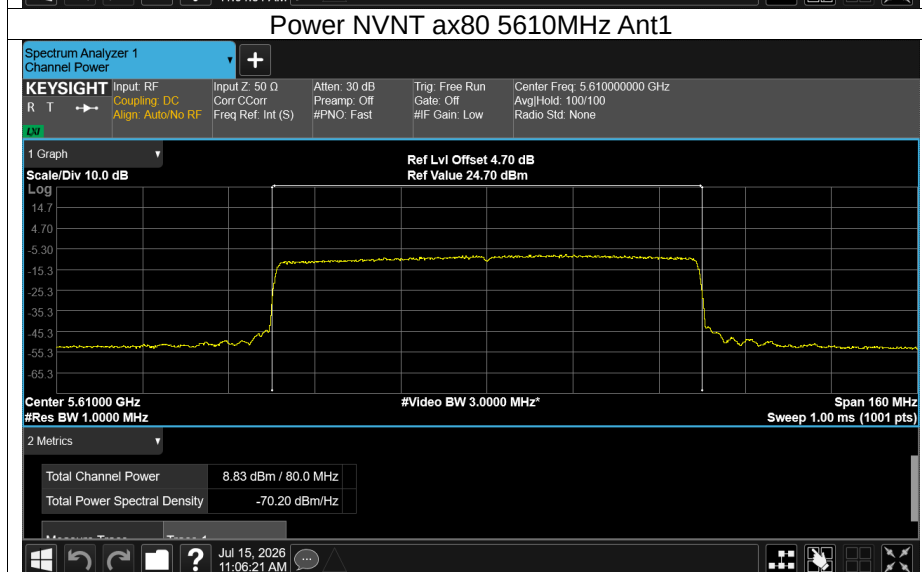
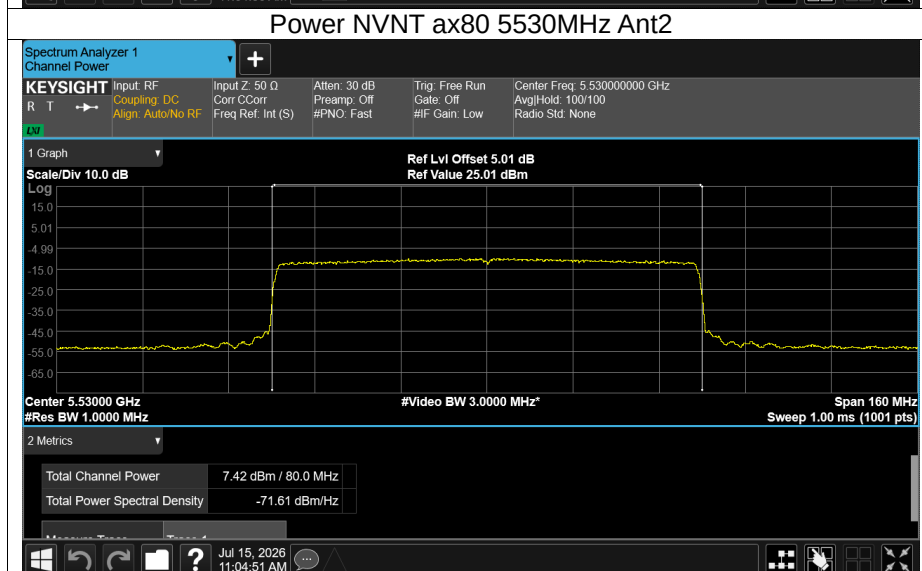
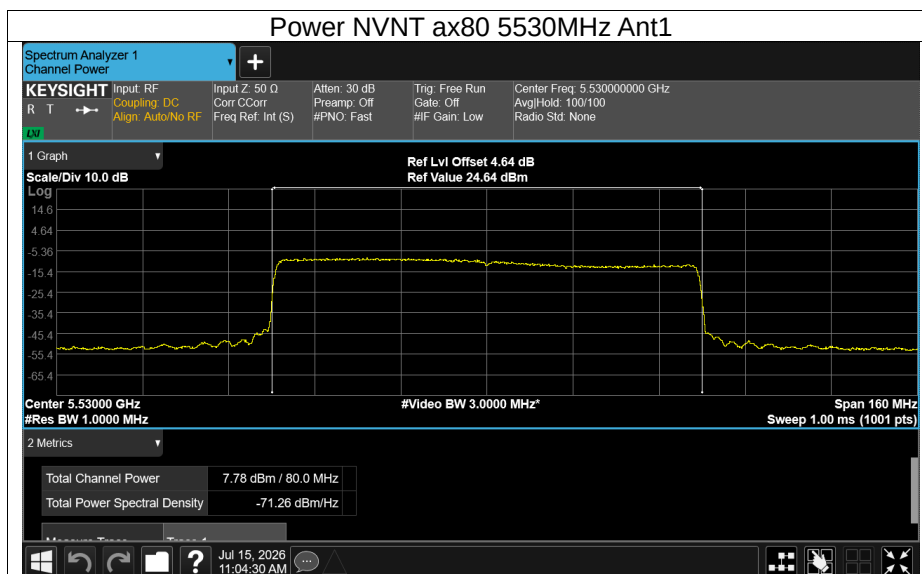
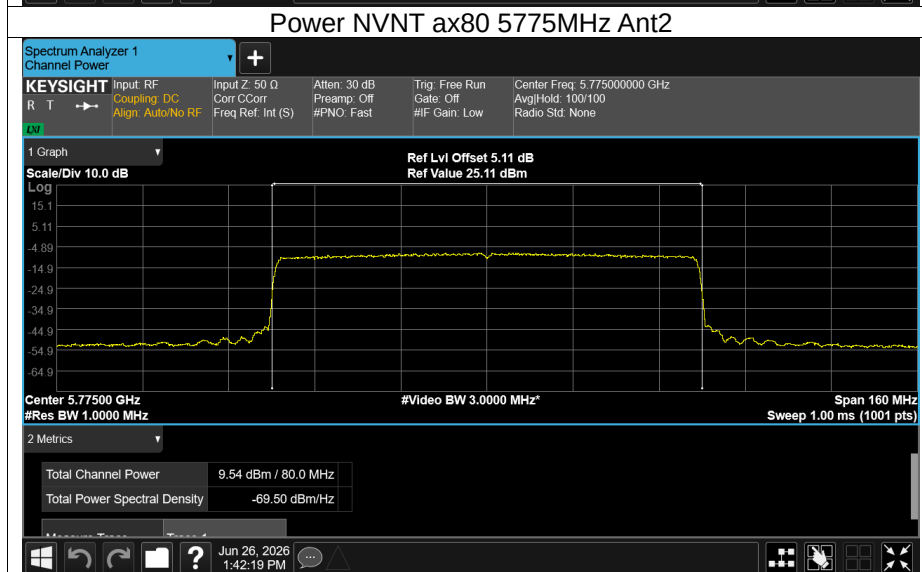
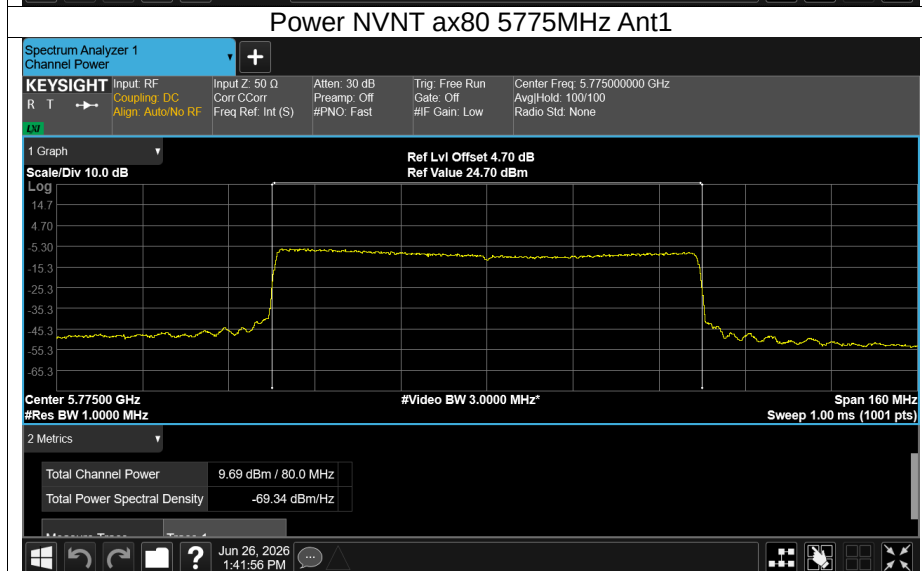
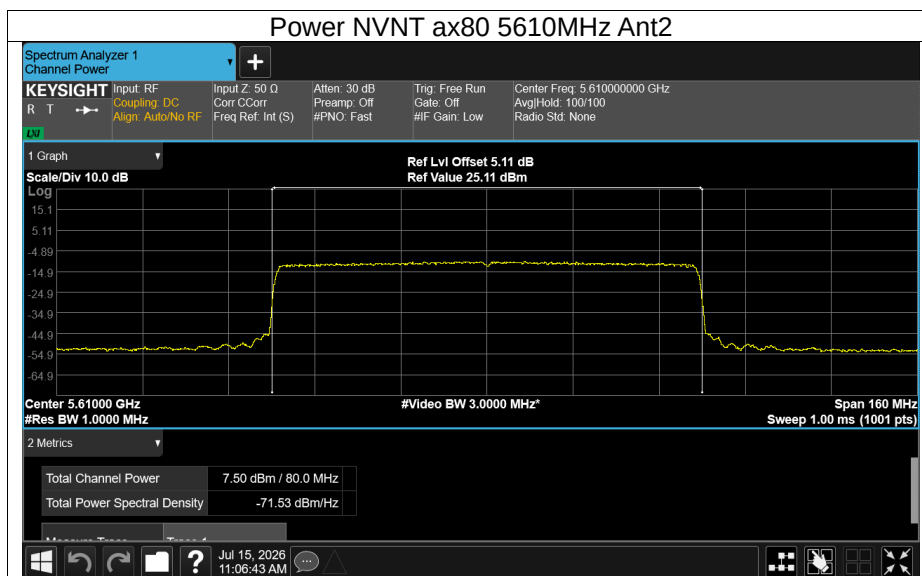
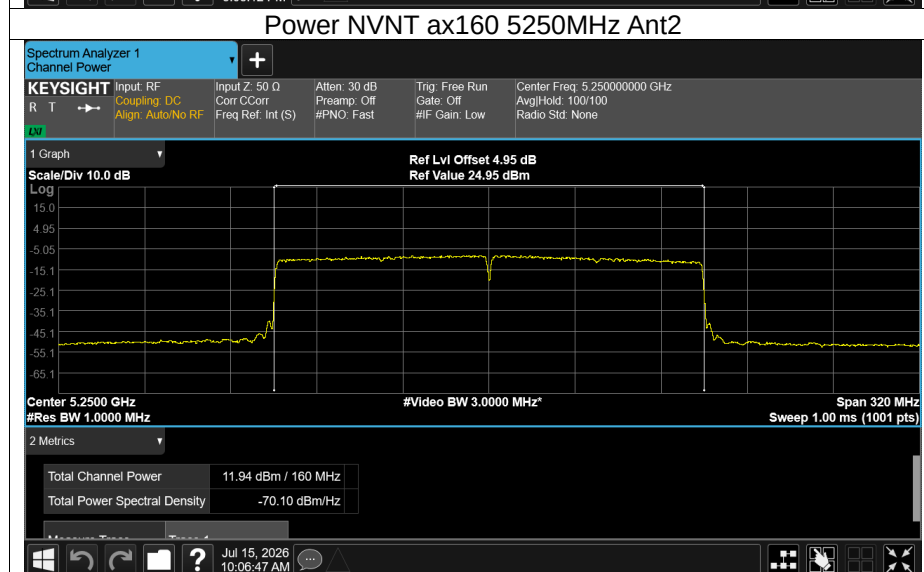


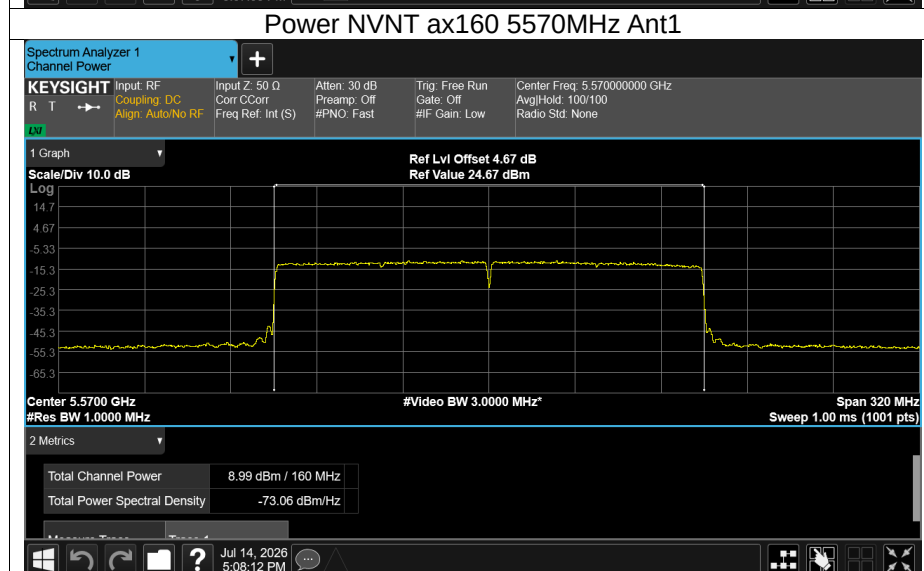


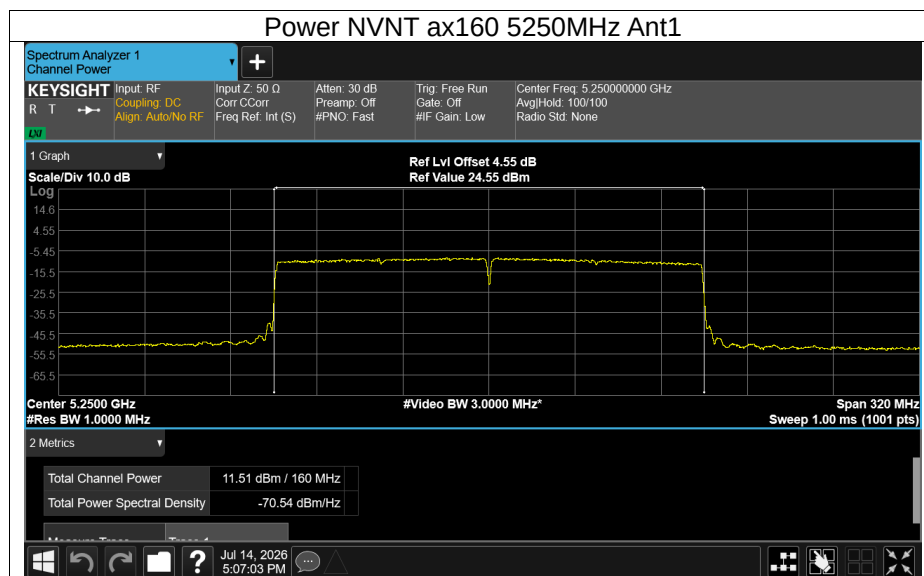

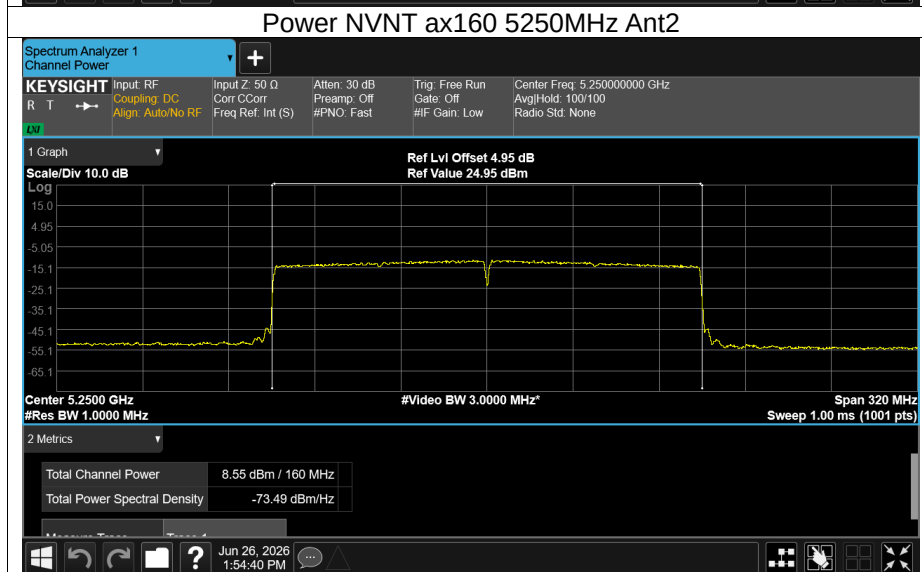

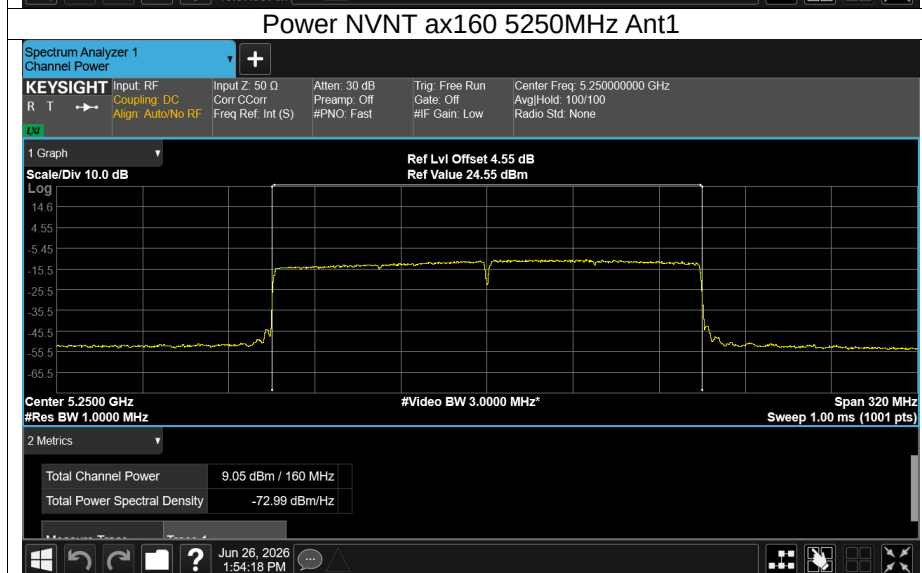

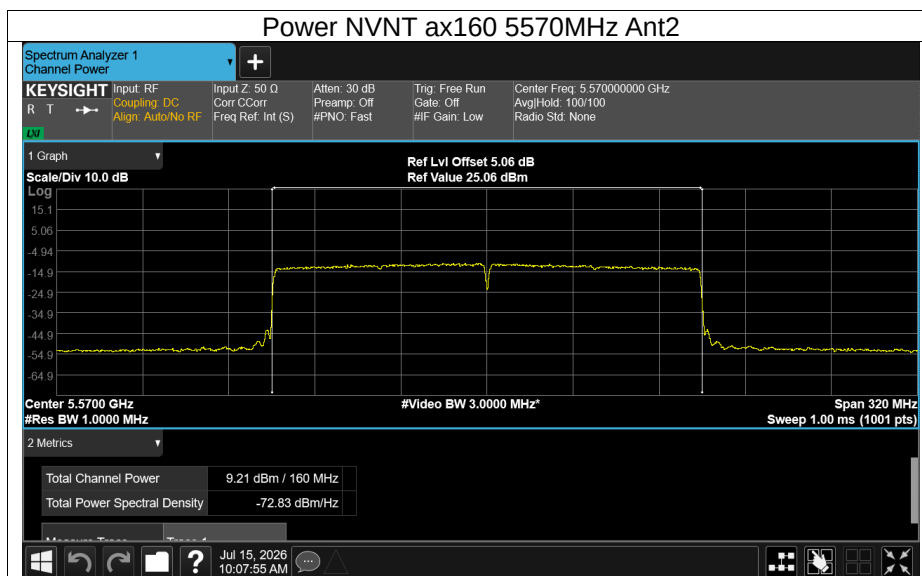

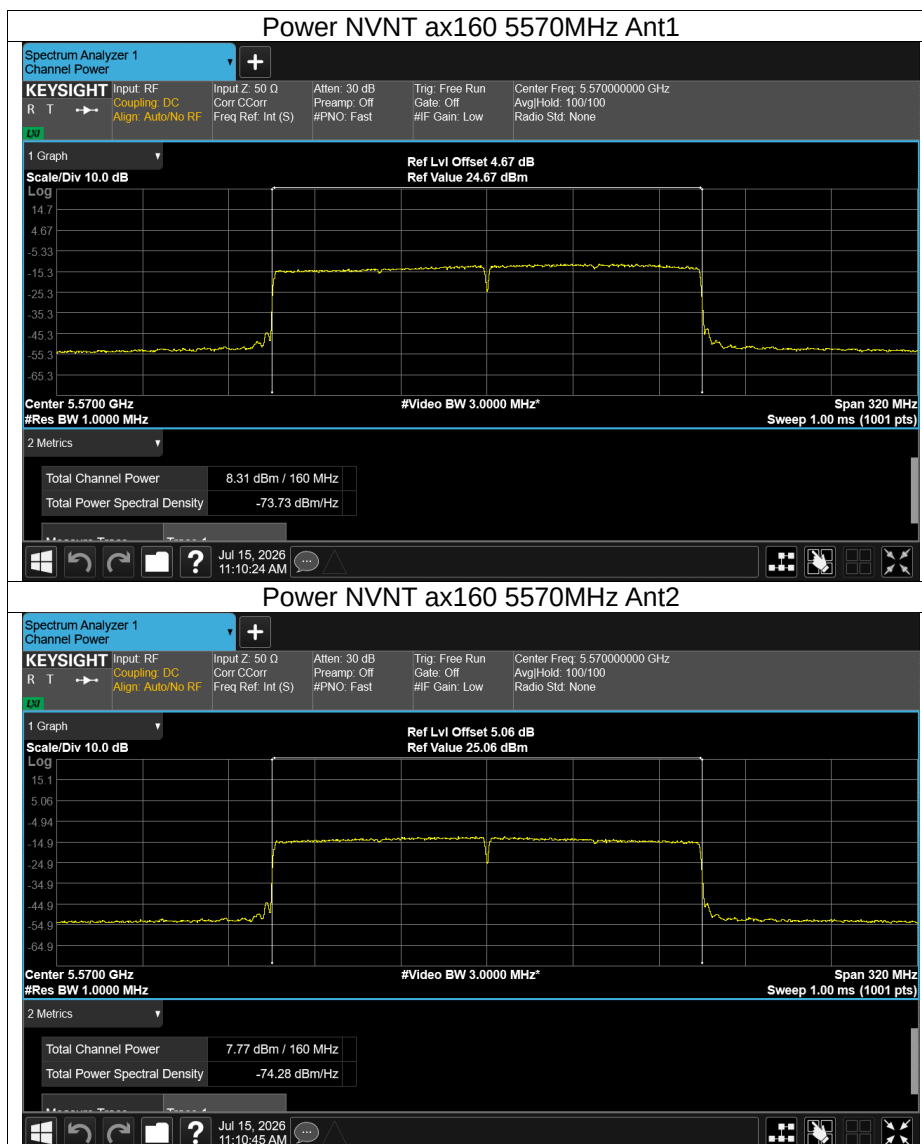



-26dB Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	-26 dB Bandwidth (MHz)	Verdict
NVNT	a	5180	Ant1	29.6	Pass
NVNT	a	5200	Ant1	29.16	Pass
NVNT	a	5240	Ant1	22.06	Pass
NVNT	a	5260	Ant1	22.05	Pass
NVNT	a	5300	Ant1	28.9	Pass
NVNT	a	5320	Ant1	29.17	Pass
NVNT	a	5500	Ant1	28.76	Pass
NVNT	a	5580	Ant1	22.32	Pass
NVNT	a	5700	Ant1	27.14	Pass
NVNT	a	5180	Ant2	27.63	Pass
NVNT	a	5200	Ant2	29.11	Pass
NVNT	a	5240	Ant2	22.3	Pass
NVNT	a	5260	Ant2	22.2	Pass
NVNT	a	5300	Ant2	29.06	Pass
NVNT	a	5320	Ant2	28.26	Pass
NVNT	a	5500	Ant2	27.55	Pass
NVNT	a	5580	Ant2	22.06	Pass
NVNT	a	5700	Ant2	26.63	Pass
NVNT	n20	5180	Ant1	28.97	Pass
NVNT	n20	5200	Ant1	29.63	Pass
NVNT	n20	5240	Ant1	22.93	Pass
NVNT	n20	5260	Ant1	23.44	Pass
NVNT	n20	5300	Ant1	29.64	Pass
NVNT	n20	5320	Ant1	29.15	Pass
NVNT	n20	5500	Ant1	29.44	Pass
NVNT	n20	5580	Ant1	23.41	Pass
NVNT	n20	5700	Ant1	28.22	Pass
NVNT	n20	5180	Ant2	28.71	Pass
NVNT	n20	5200	Ant2	29.66	Pass
NVNT	n20	5240	Ant2	23.08	Pass
NVNT	n20	5260	Ant2	22.72	Pass
NVNT	n20	5300	Ant2	29.52	Pass
NVNT	n20	5320	Ant2	29.28	Pass
NVNT	n20	5500	Ant2	28.54	Pass
NVNT	n20	5580	Ant2	22.88	Pass
NVNT	n20	5700	Ant2	28.16	Pass
NVNT	n40	5190	Ant1	49.47	Pass
NVNT	n40	5230	Ant1	40.9	Pass
NVNT	n40	5270	Ant1	41.37	Pass
NVNT	n40	5310	Ant1	52.89	Pass
NVNT	n40	5510	Ant1	53.58	Pass
NVNT	n40	5550	Ant1	40.9	Pass
NVNT	n40	5670	Ant1	59.81	Pass
NVNT	n40	5190	Ant2	49.37	Pass
NVNT	n40	5230	Ant2	40.51	Pass
NVNT	n40	5270	Ant2	40.59	Pass
NVNT	n40	5310	Ant2	52.99	Pass
NVNT	n40	5510	Ant2	49.68	Pass
NVNT	n40	5550	Ant2	40.73	Pass
NVNT	n40	5670	Ant2	56.86	Pass
NVNT	ac20	5180	Ant1	29.9	Pass
NVNT	ac20	5200	Ant1	29.7	Pass
NVNT	ac20	5240	Ant1	23.25	Pass
NVNT	ac20	5260	Ant1	23.09	Pass
NVNT	ac20	5300	Ant1	29.68	Pass
NVNT	ac20	5320	Ant1	29.63	Pass
NVNT	ac20	5500	Ant1	29.53	Pass
NVNT	ac20	5580	Ant1	23.03	Pass



NVNT	ac20	5700	Ant1	27.46	Pass
NVNT	ac20	5180	Ant2	29.37	Pass
NVNT	ac20	5200	Ant2	29.47	Pass
NVNT	ac20	5240	Ant2	23.44	Pass
NVNT	ac20	5260	Ant2	23.53	Pass
NVNT	ac20	5300	Ant2	22.25	Pass
NVNT	ac20	5320	Ant2	28.94	Pass
NVNT	ac20	5500	Ant2	28.46	Pass
NVNT	ac20	5580	Ant2	23.05	Pass
NVNT	ac20	5700	Ant2	28.94	Pass
NVNT	ac40	5190	Ant1	50.53	Pass
NVNT	ac40	5230	Ant1	40.89	Pass
NVNT	ac40	5270	Ant1	41.05	Pass
NVNT	ac40	5310	Ant1	52.88	Pass
NVNT	ac40	5510	Ant1	54.54	Pass
NVNT	ac40	5550	Ant1	40.83	Pass
NVNT	ac40	5670	Ant1	57.87	Pass
NVNT	ac40	5190	Ant2	52.23	Pass
NVNT	ac40	5230	Ant2	40.72	Pass
NVNT	ac40	5270	Ant2	40.84	Pass
NVNT	ac40	5310	Ant2	52.01	Pass
NVNT	ac40	5510	Ant2	49.85	Pass
NVNT	ac40	5550	Ant2	40.83	Pass
NVNT	ac40	5670	Ant2	54.29	Pass
NVNT	ac80	5210	Ant1	106.1	Pass
NVNT	ac80	5290	Ant1	106.8	Pass
NVNT	ac80	5530	Ant1	106.8	Pass
NVNT	ac80	5610	Ant1	81.44	Pass
NVNT	ac80	5210	Ant2	103.2	Pass
NVNT	ac80	5290	Ant2	101.6	Pass
NVNT	ac80	5530	Ant2	103.7	Pass
NVNT	ac80	5610	Ant2	81.31	Pass
NVNT	ac160	5250	Ant1	172.1	Pass
NVNT	ac160	5570	Ant1	170.9	Pass
NVNT	ac160	5250	Ant2	165.3	Pass
NVNT	ac160	5570	Ant2	166.5	Pass
NVNT	ax20	5180	Ant1	23.24	Pass
NVNT	ax20	5200	Ant1	23.4	Pass
NVNT	ax20	5240	Ant1	23.28	Pass
NVNT	ax20	5260	Ant1	23.15	Pass
NVNT	ax20	5300	Ant1	22.79	Pass
NVNT	ax20	5320	Ant1	23.38	Pass
NVNT	ax20	5500	Ant1	23.23	Pass
NVNT	ax20	5580	Ant1	23.11	Pass
NVNT	ax20	5700	Ant1	22.49	Pass
NVNT	ax20	5180	Ant2	22.66	Pass
NVNT	ax20	5200	Ant2	22.6	Pass
NVNT	ax20	5240	Ant2	22.85	Pass
NVNT	ax20	5260	Ant2	22.75	Pass
NVNT	ax20	5300	Ant2	20.68	Pass
NVNT	ax20	5320	Ant2	22.41	Pass
NVNT	ax20	5500	Ant2	23.3	Pass
NVNT	ax20	5580	Ant2	23.19	Pass
NVNT	ax20	5700	Ant2	22.65	Pass
NVNT	ax40	5190	Ant1	39.59	Pass
NVNT	ax40	5230	Ant1	39.59	Pass
NVNT	ax40	5270	Ant1	39.72	Pass
NVNT	ax40	5310	Ant1	39.73	Pass
NVNT	ax40	5510	Ant1	39.59	Pass
NVNT	ax40	5550	Ant1	39.49	Pass
NVNT	ax40	5670	Ant1	39.67	Pass



NVNT	ax40	5190	Ant2	39.63	Pass
NVNT	ax40	5230	Ant2	39.76	Pass
NVNT	ax40	5270	Ant2	39.65	Pass
NVNT	ax40	5310	Ant2	39.49	Pass
NVNT	ax40	5510	Ant2	39.74	Pass
NVNT	ax40	5550	Ant2	39.72	Pass
NVNT	ax40	5670	Ant2	39.52	Pass
NVNT	ax80	5210	Ant1	82.3	Pass
NVNT	ax80	5290	Ant1	82.3	Pass
NVNT	ax80	5530	Ant1	82.37	Pass
NVNT	ax80	5610	Ant1	82.19	Pass
NVNT	ax80	5210	Ant2	81.97	Pass
NVNT	ax80	5290	Ant2	82.14	Pass
NVNT	ax80	5530	Ant2	82.21	Pass
NVNT	ax80	5610	Ant2	82.35	Pass
NVNT	ax160	5250	Ant1	169.3	Pass
NVNT	ax160	5570	Ant1	166.9	Pass
NVNT	ax160	5250	Ant2	166.7	Pass
NVNT	ax160	5570	Ant2	166.5	Pass

