





eufy Baby Monitor E20

Quick Start Guide

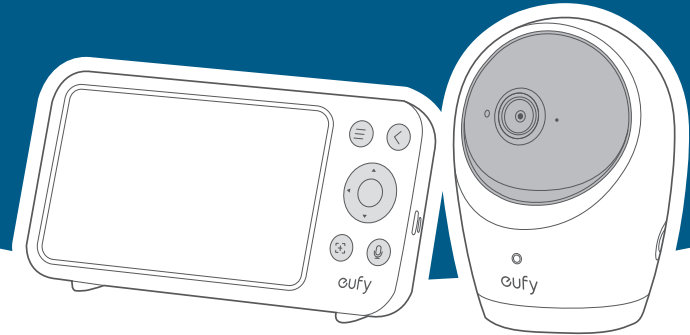


What's in the Box




Monitor




Camera




Camera Power Cable
(3m)

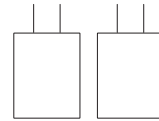


Power Adapters × 2
(5V 2A)

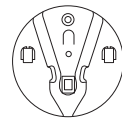


Mounting Plate



Screw Pack



Monitor Power Cable
(1.5 m)



Quick Start Guide


Using Your Camera and Monitor

Power On

Press and hold the power buttons for 2 seconds to turn on the camera and the monitor.

View Live Video on the Monitor

When powered on, the camera and the monitor are automatically connected, and you can view the live video stream on the monitor screen now.

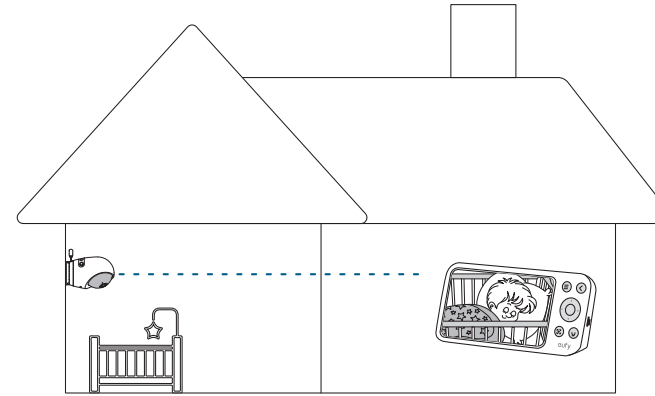

- The camera includes a 5000mAh battery, allowing you to use the camera wirelessly and backup the data during a power outage.

View Live Video on your Phone

To control your camera and watch live video from anywhere:

1. Download and install the eufy Baby app from the App Store(ios devices) or Google Play(Android devices), and sign up for an account.




Anker Innovations Limited. All rights reserved, registered in the United States and other countries.



Video/User Guide/FAQ


Model: T8352, T8353
51005004831_V1

2. Scan the QR code at the bottom of the camera base, to add the camera to the device list on the eufy Baby app.

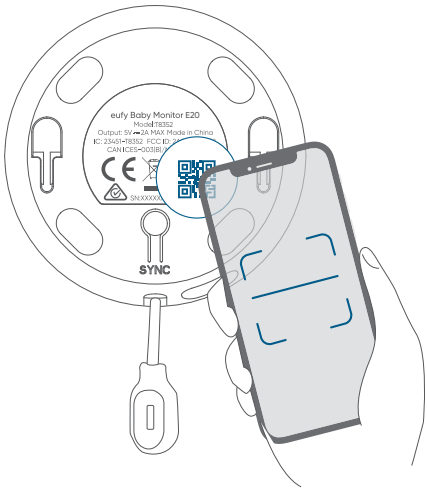

3. Follow the in-app instructions to connect the camera and monitor to your Wi-Fi network.

Monitor – Button Controls

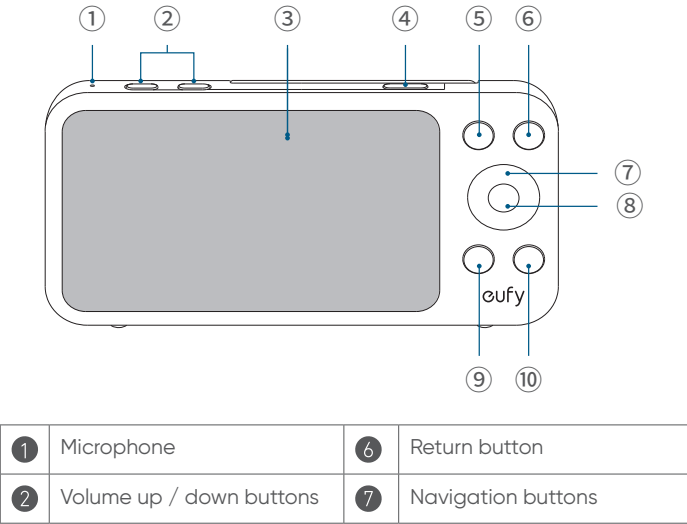


3	Screen	8	OK button - Press to confirm the selection. - One press to get a close-up of your baby on the monitoring screen, and press again to resume full-screen display.
4	Power button - Lock / Unlock Screen: Press - Power On / Off: Press and hold for 2 seconds	9	Zoom button Press to zoom in the image.
5	Menu button	10	Talk button Press and hold to speak to the camera.

Monitor – Key Features


Alert	Follow the quick start instructions on the monitor to turn on/off the sound alert and select the desired alert types: Crying – sends alerts when baby crying is detected. Loud Sound – sends alerts when the sound reaches the preset sound level. Abnormal Temperature – send alerts when the measured room temperature exceeds the preset range.
Sleep Mode	On the monitor screen, go to Monitor Settings > Sleep Mode to set the sleep mode. Two options are available for sleep mode: Only Audio – the video monitoring stops and the audio continues when the screen is off. VOX Mode (default) – both video and audio monitoring stops when the screen is off. Sound and video monitoring will be activated only when crying or loud sound is detected.
Disable Camera LED Light	On the monitor screen, go to Camera Settings > LED Lighting to set the LED light mode as desired: Auto (default) – LED indicator light is automatically activated during the day and deactivated at night. On Off

Mounting the Camera


Option 1 On the Wall

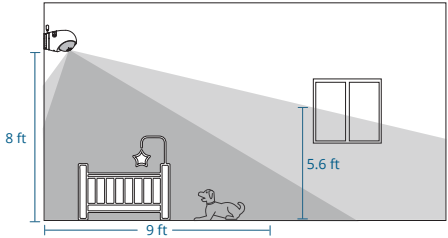


Option 2 On a Table or Shelf

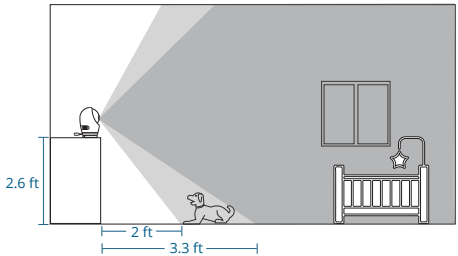

Option 3 On the Crib

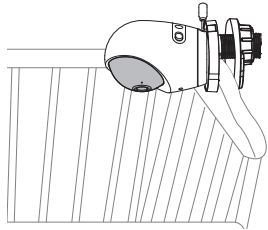

Option 4 On the Crib (with Gooseneck Arm)

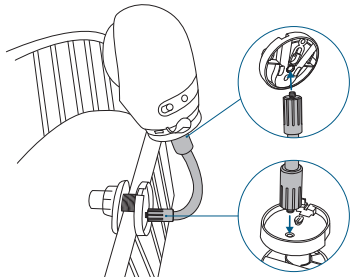

*The cot mount and the gooseneck arm are sold separately.

OTA Update



• Make sure that the camera and the monitor are always using the latest firmware version.

To view the version and update manually:

1. Make sure the device is added to the device list on the eufy Baby app.

2. Camera OTA

Open the eufy Baby App, and go to **Me > My Devices > Settings > About Device > Check for Firmware Update**.

3. Monitor OTA

On the monitor screen, tap **Monitor Settings > About Device > Firmware Updates**.

Refer to <http://support.eufy.com/s/> for more details.

Customer Service



12-month limited warranty



(US/CA) +1 (800) 988 7973
(UK) +44 (0) 1604 936200
(DE) +49 (0) 69 9579 7960
(中国) +86 400 0550 036
(日本) 03 4455 7823
(AU) +61 3 8331 4800
(Egypt) +20 8000000826
(UAE) +971 8000320817
(Kuwait) +965 22069086
(KSA) +966 8008500030



support@eufy.com

Anker Innovations Limited
Unit 56, 8th Floor, Tower 2, Admiralty Centre, 18 Harcourt Road, Hong Kong



@EufyOfficial



@EufyOfficial



@EufyOfficial