



1

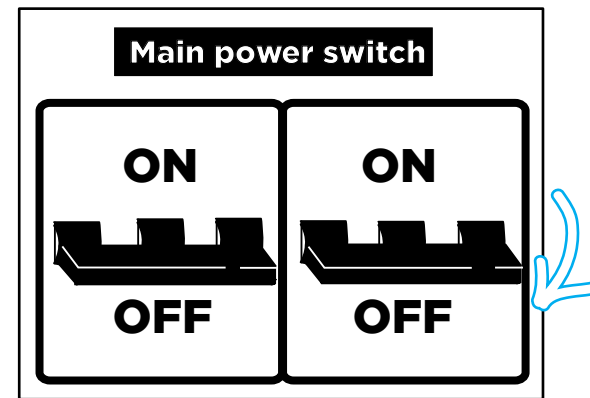


Turn off the power at the circuit breaker for the switch you are replacing.

2

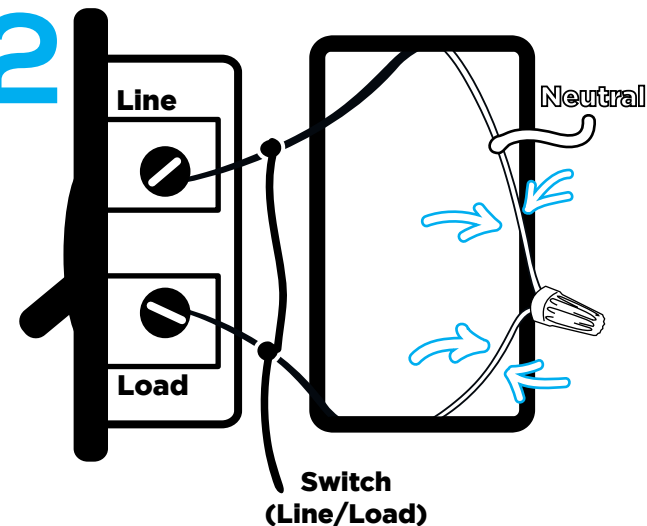


Remove your old switch and label your wires. Remember that you **must** have a Neutral wire to install iotty Light Switch.

3

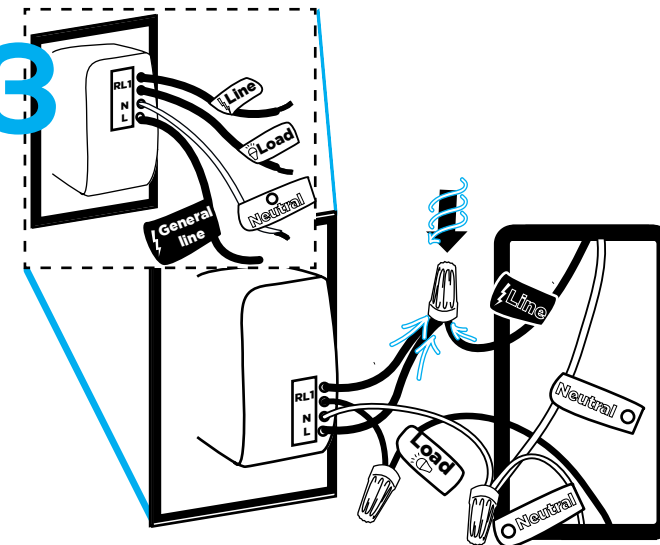


Connect Neutral wires together. Each RL has two wires, connect one to the Load and the other to the General Line together with the iotty wire labeled with L. In case you found the ground wire, just place it into the wall box.

4

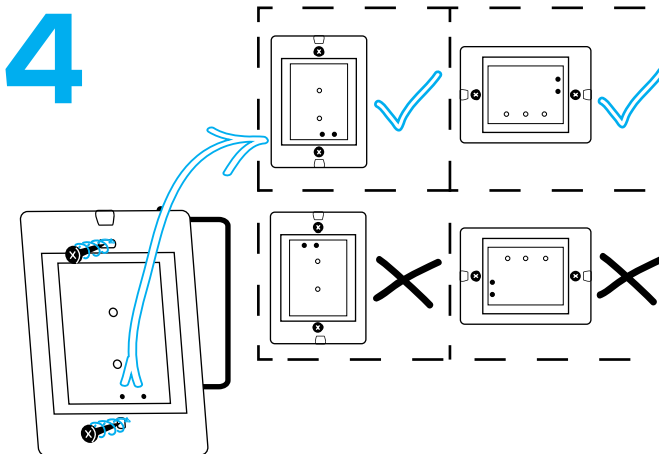


Push all the wires back into the wall box and try to allow as much space for the switch as possible. Place the iotty Light Switch into the box and screw in. Place the two black buttons **down** (or **right** if you have multiple gangs)

5

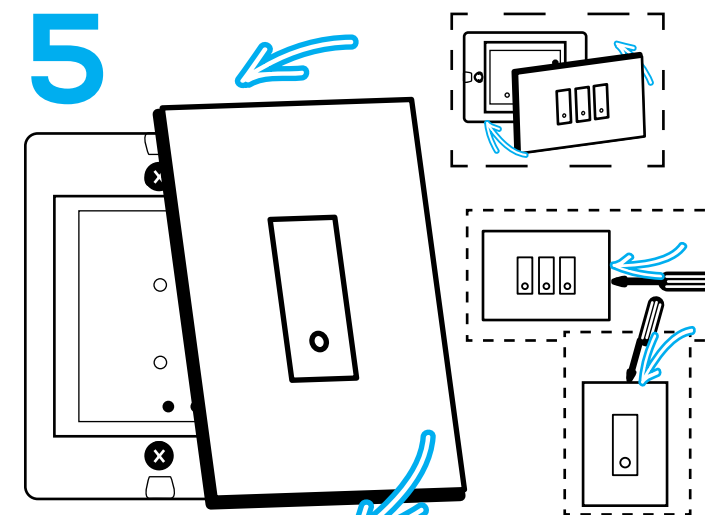

Attach your iotty Light Switch faceplate starting from one of the two short side. To remove use a screwdriver to lift the faceplate.

6

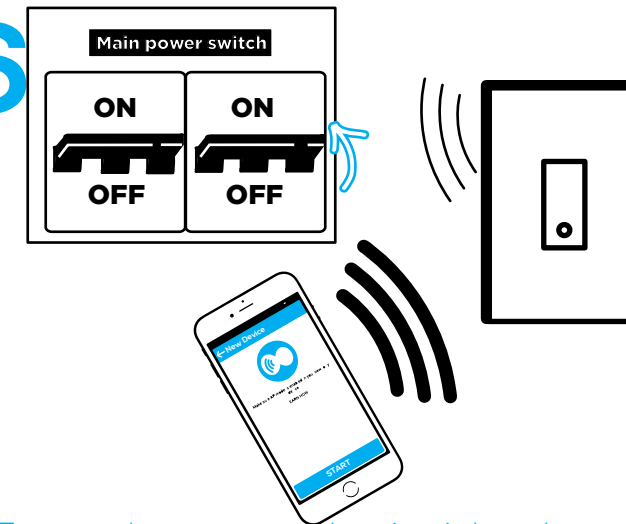


Turn on the power at the circuit breaker. Download the iotty app and sign in. Connect to your iotty Light Switch wifi [IOTTY_serial-number]. Now go to the app and add a new device.


WARNING: Electrical wirings of the iotty Light Switch should be done by a professional electrician. Incorrect installation is dangerous or illegal. Please call a professional electrician if you are unfamiliar or uncomfortable with electrical work.

more info at:
www.iotty.com/support

How to install a multiple gang iotty Light Switch:

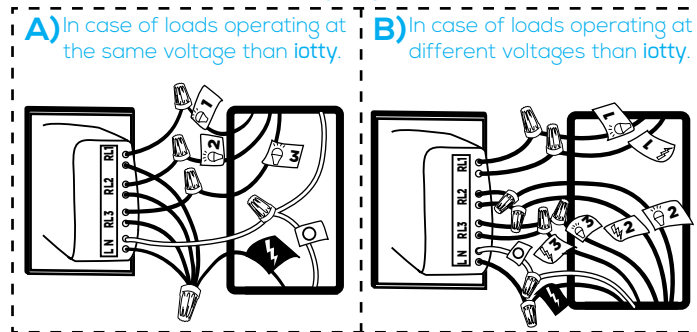

Overview of a iotty Light Switch with multiple gangs.

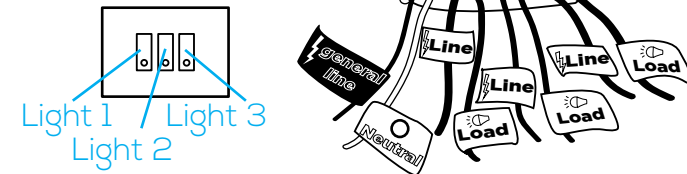

WARNING: Electrical wirings of the iotty Light Switch should be done by a professional electrician. Incorrect installation is dangerous or illegal. Please call a professional electrician if you are unfamiliar or uncomfortable with electrical work.

In **both cases** start with steps 1 and 2

A)

Connect the Neutral wires together.
Connect the General line wire, labeled with L, with one of the two wires that come out from each RL, together with the general wire from your wall.
Connect each of the other wire of the RL with each load you want to control.


B)

Connect the Neutral wires together.
Connect the General line wire with the line in the wall.
Every RL has two wires, connect one to the external power supply (necessary if it has different voltage from the general line),
Connect the other wire to the load.

In **both cases** finish following steps 4, 5 and 6.

How to install a multiple gang iotty Light Switch as a 2 way switch application (to control a load from two point).

Instructions on the next page.

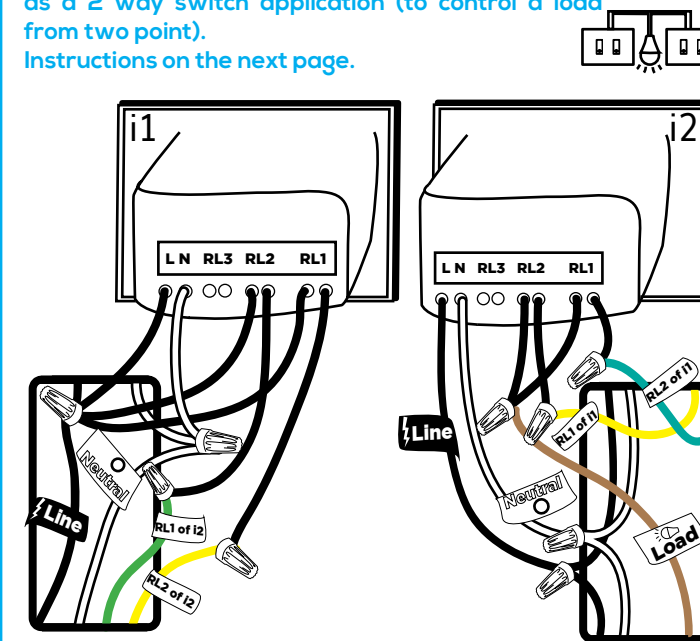

Remember:

If you are connecting a three gangs switch you won't be able to use **one of the three gangs**.

If you are making a 2 ways between two switches, one mechanical and one iotty, you won't be able to control the iotty from the app, **you will lose all smart functions**. [For the instructions of this case go to www.iotty.com/support]

Start with steps 1 and 2.

Choose which iotty will become **i1** and **i2**.

iotty 1 (i1):

Connect the Neutral wires together.

Connect the General line wire with one of the two wires that come out from each RL, together with the General wire from your wall.

Connect the other wire of RL1 with the RL2 of i2 and RL2 with the RL1 of i2.

iotty 2 (i2):

Connect the Neutral wire together.

Connect the General line wire with the General wire from your wall.

Connect one of the two wires that come out from each RL with the Load you want to control.

Connect the other wire of RL1 with the RL2 of i1 and RL2 with the RL1 of i1.

Now follow steps 4, 5, 6. Set the light in each **iotty** as Deviator.

iotty
Light Switch