

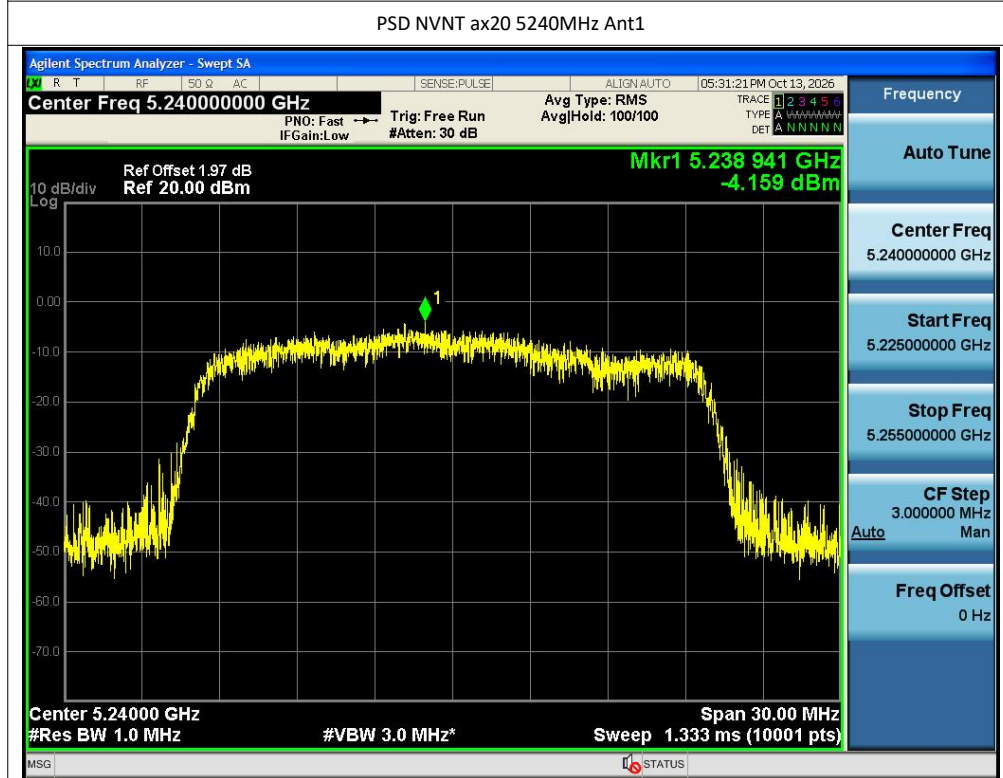
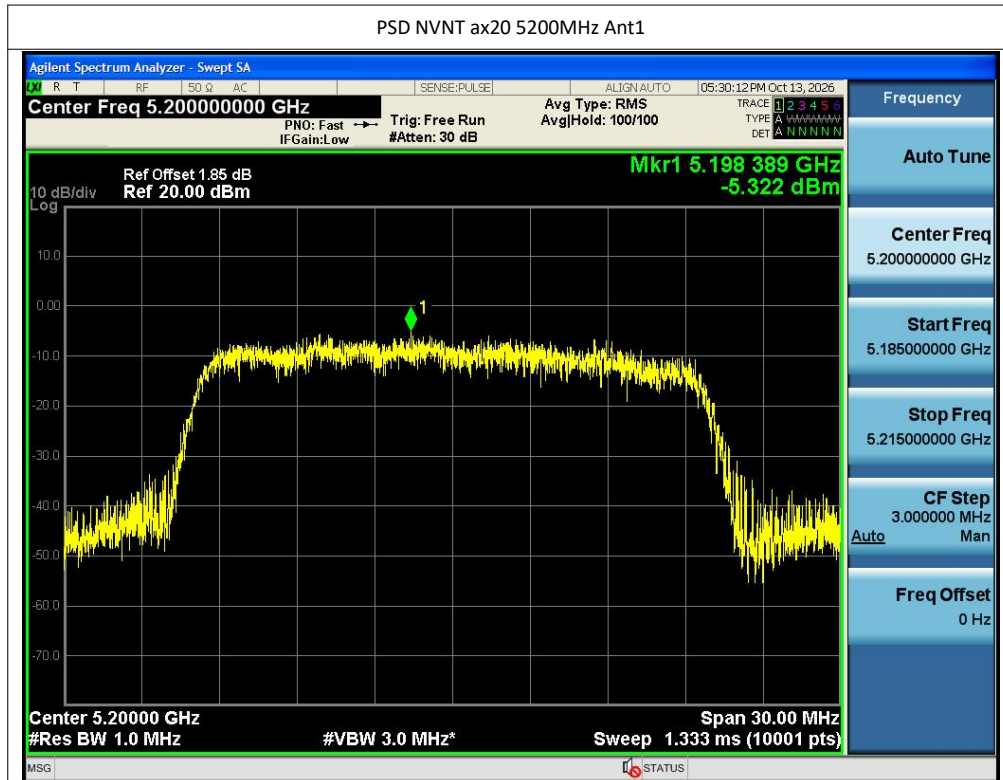


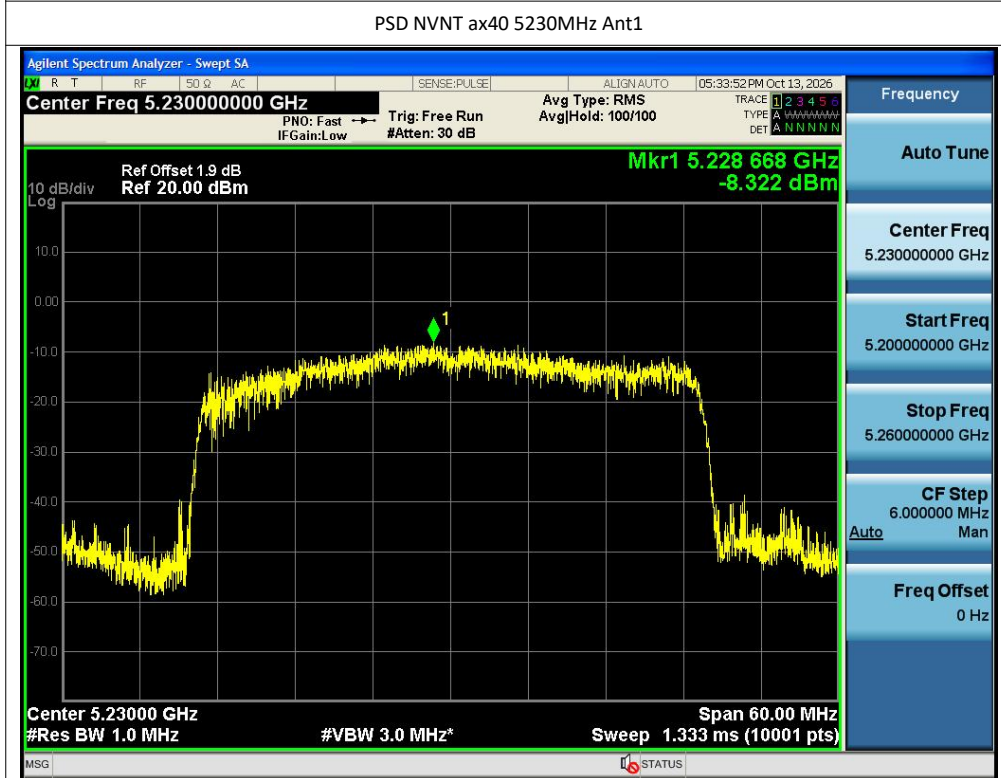

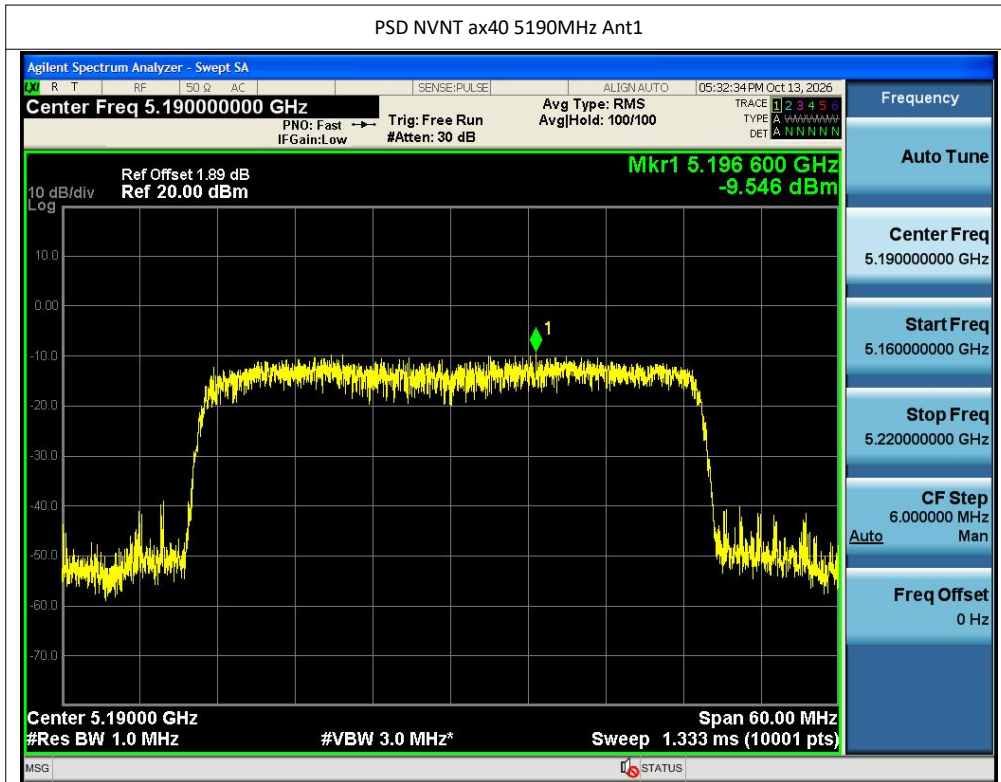


Band Edge


Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	-38.89	-27	Pass
NVNT	a	5240	Ant1	-47.47	-27	Pass
NVNT	n20	5180	Ant1	-36.5	-27	Pass
NVNT	n20	5240	Ant1	-47.18	-27	Pass
NVNT	n40	5190	Ant1	-31.61	-27	Pass
NVNT	n40	5230	Ant1	-46.69	-27	Pass
NVNT	ac20	5180	Ant1	-38.47	-27	Pass
NVNT	ac20	5240	Ant1	-47.23	-27	Pass
NVNT	ac40	5190	Ant1	-30.79	-27	Pass
NVNT	ac40	5230	Ant1	-46.71	-27	Pass
NVNT	ax20	5180	Ant1	-36.77	-27	Pass
NVNT	ax20	5240	Ant1	-47.67	-27	Pass
NVNT	ax40	5190	Ant1	-27.6	-27	Pass
NVNT	ax40	5230	Ant1	-46.43	-27	Pass



Test Graphs



Band Edge NVNT a 5180MHz Low Ant1

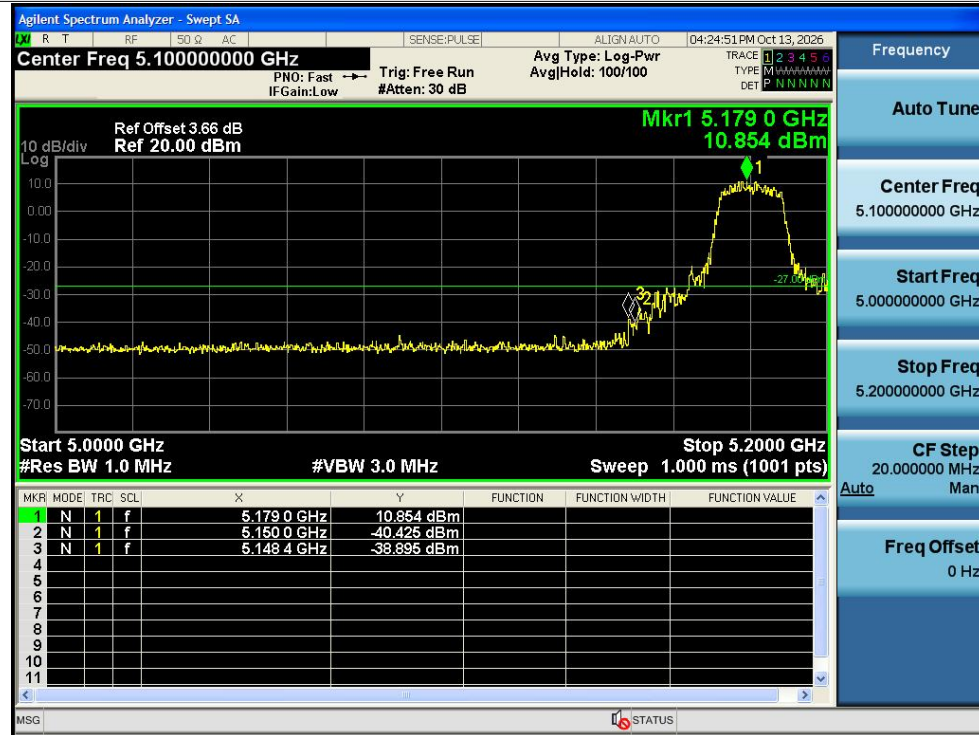


Band Edge NVNT a 5240MHz High Ant1

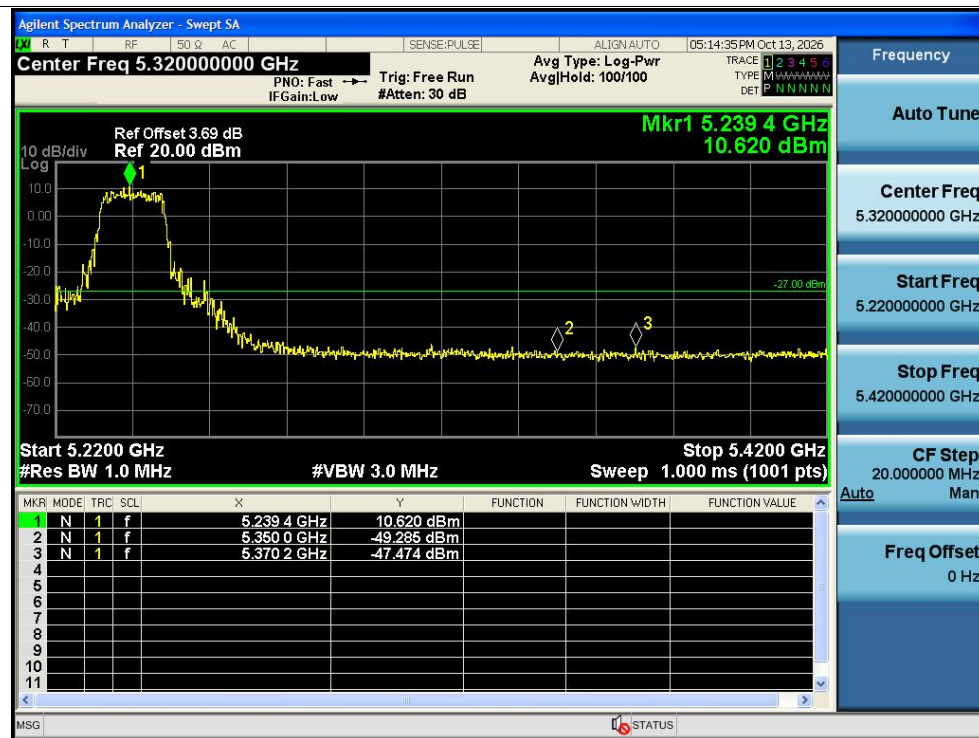


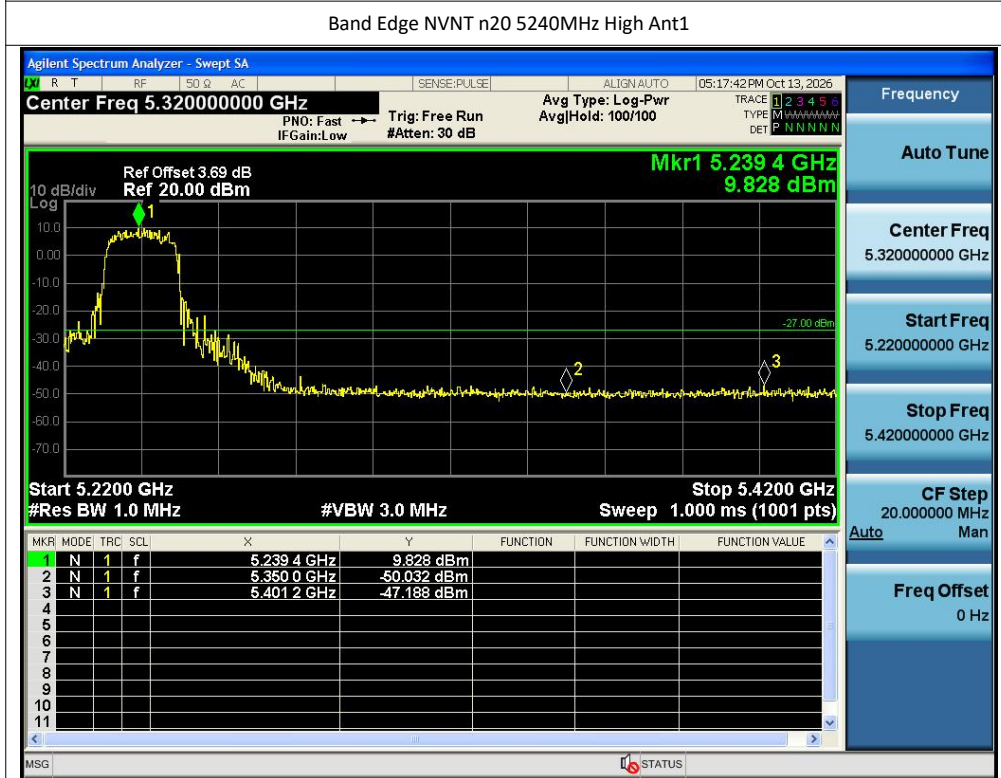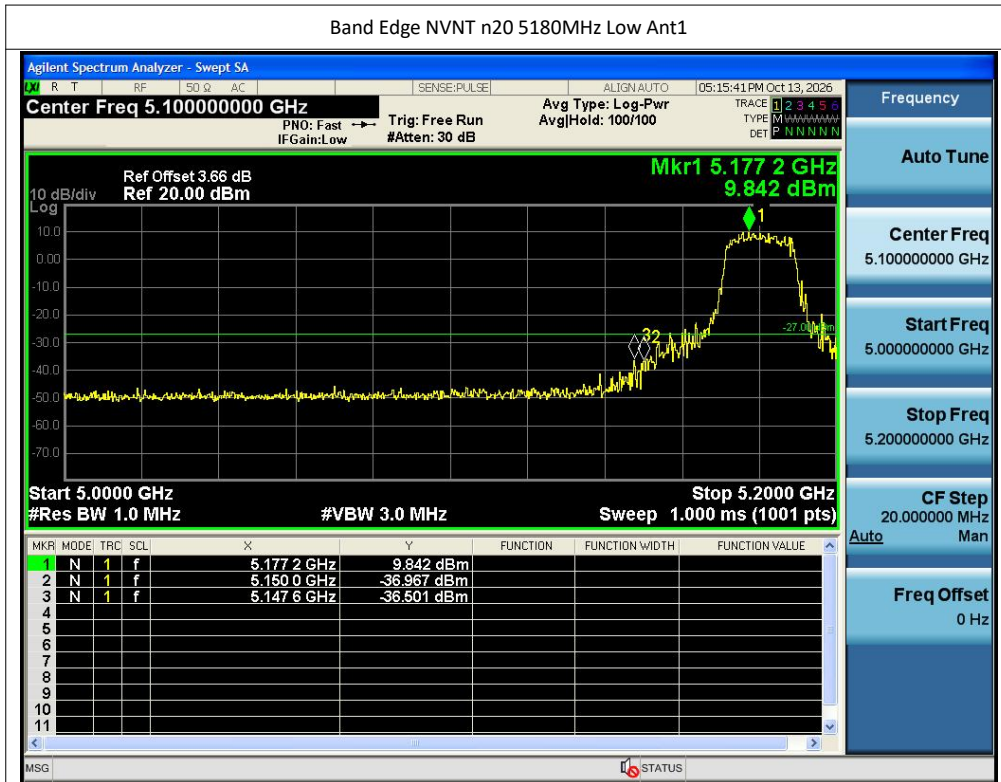

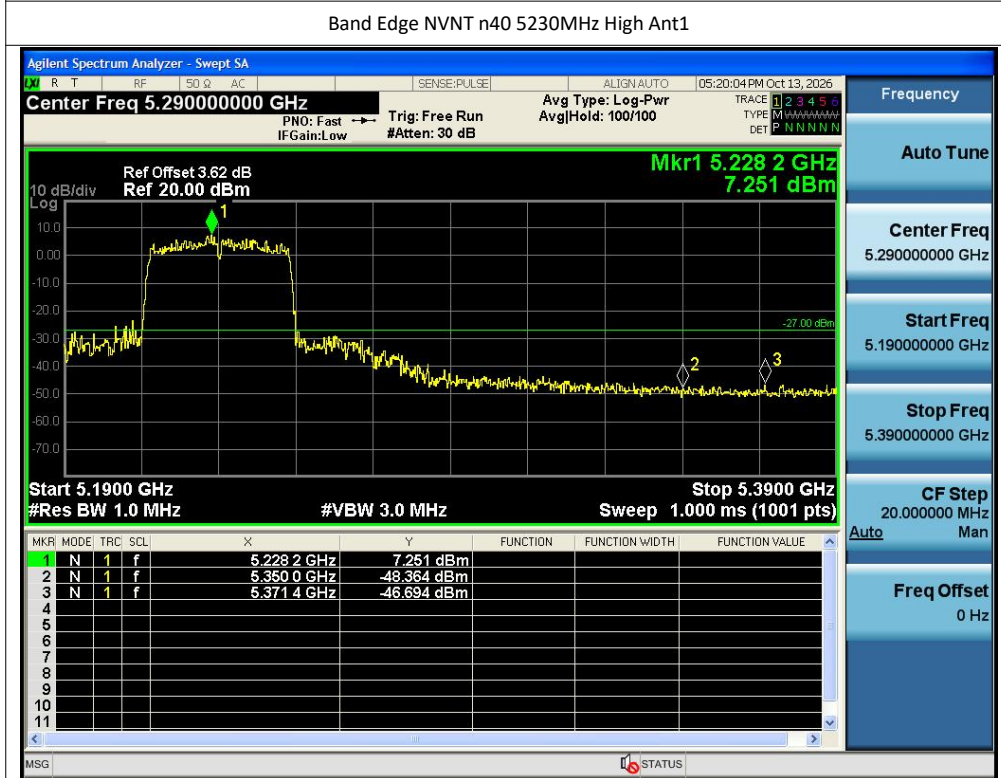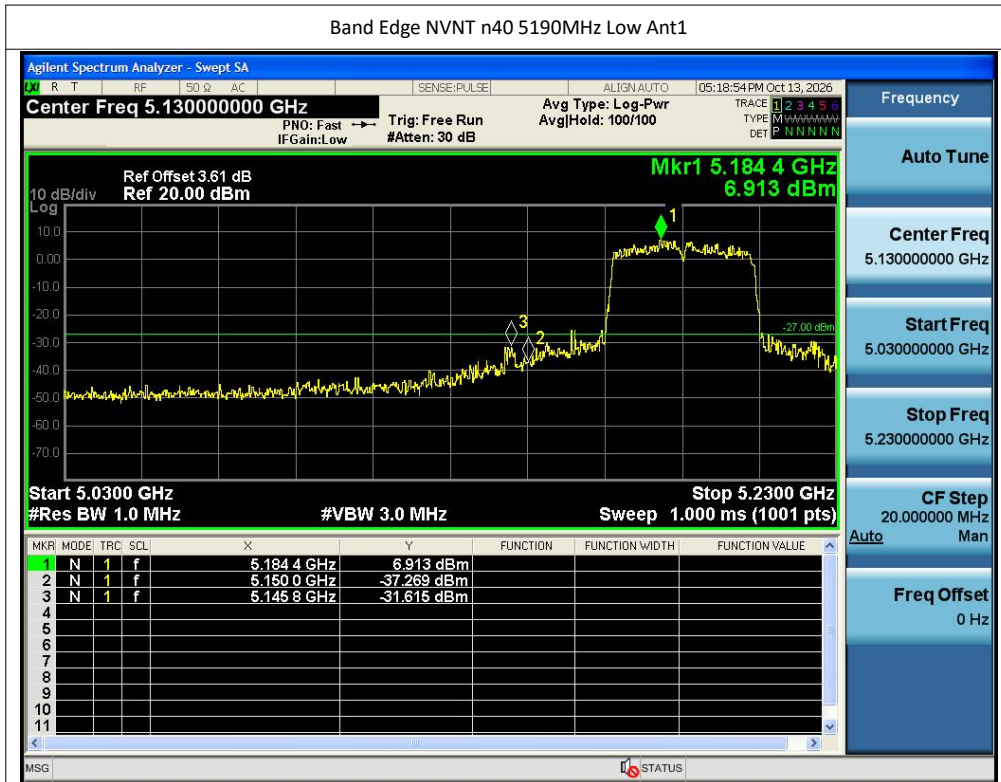

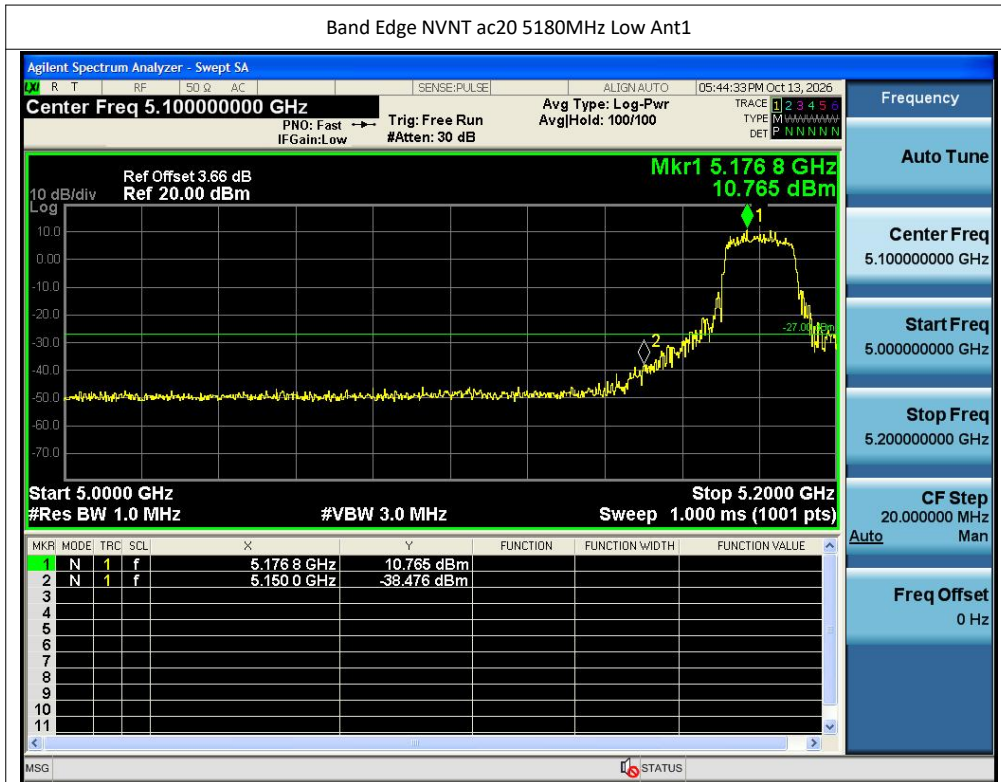


Band Edge NVNT ac40 5190MHz Low Ant1

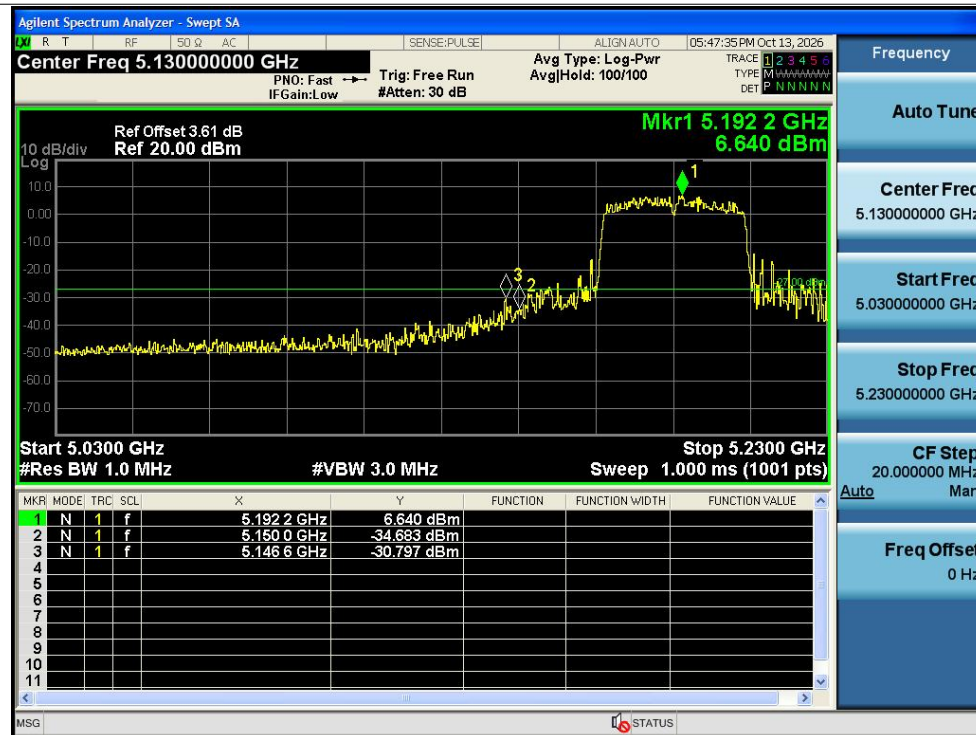


Band Edge NVNT ac40 5230MHz High Ant1



Band Edge NVNT ax20 5180MHz Low Ant1

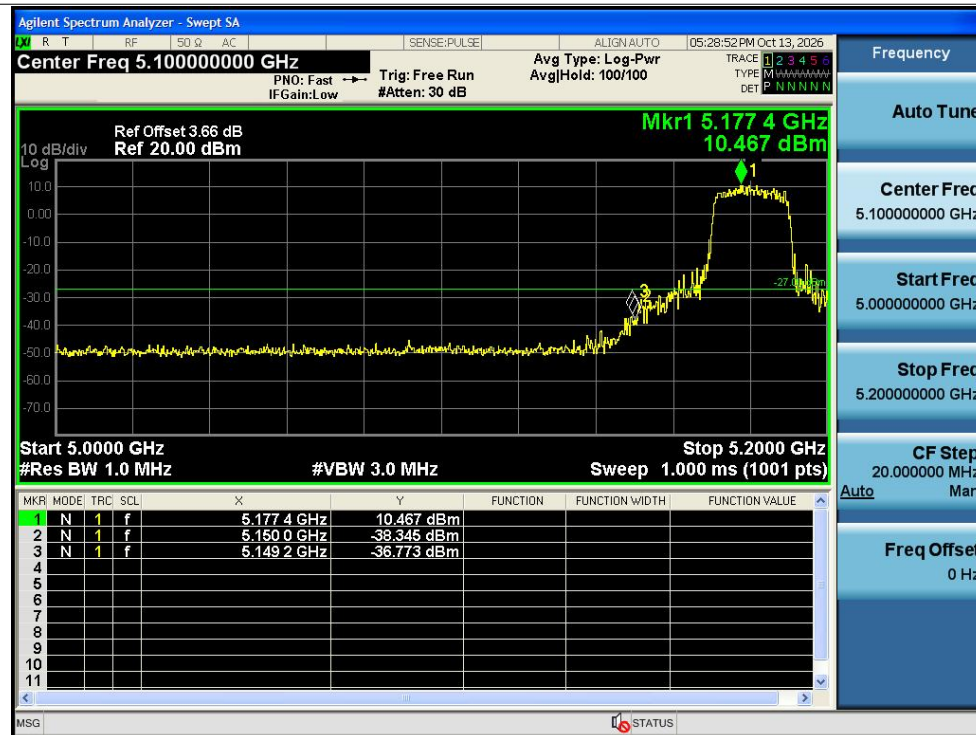

Band Edge NVNT ax20 5240MHz High Ant1

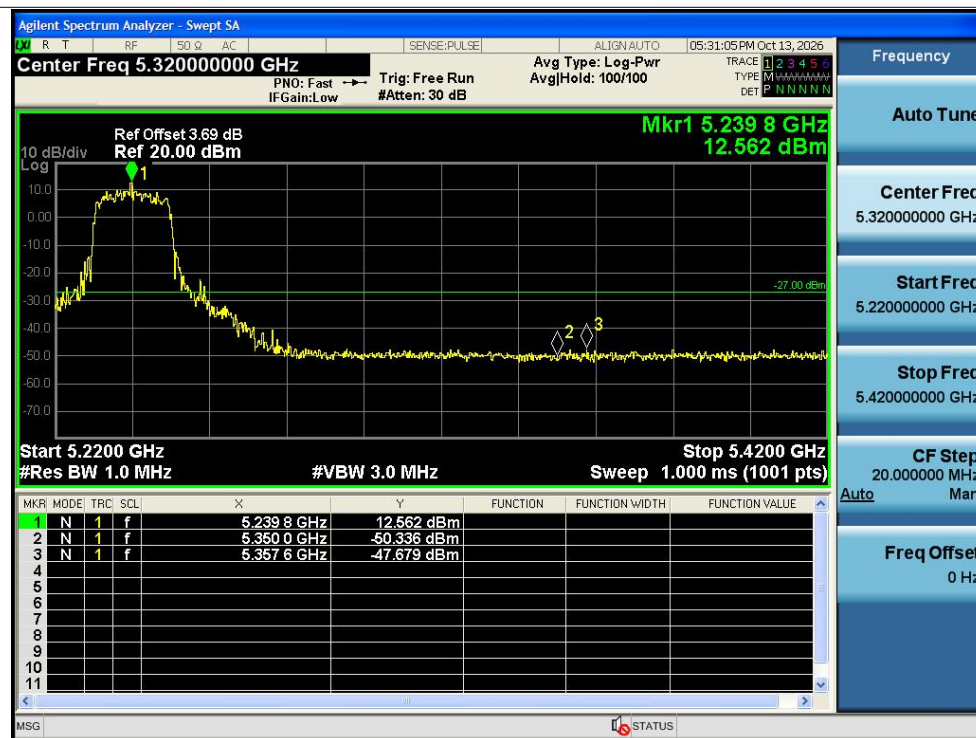

Band Edge NVNT ax40 5190MHz Low Ant1



Band Edge NVNT ax40 5230MHz High Ant1




Frequency Stability


Condition	Mode	Time (mins)	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	0	5180	Ant1	5179.98	-20000	-3.86	25	Pass
NVNT	a	0	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	a	0	5240	Ant1	5239.98	-20000	-3.82	25	Pass
NVNT	n20	0	5180	Ant1	5179.98	-20000	-3.86	25	Pass
NVNT	n20	0	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	n20	0	5240	Ant1	5239.98	-20000	-3.82	25	Pass
NVNT	n40	0	5190	Ant1	5190	0	0	25	Pass
NVNT	n40	0	5230	Ant1	5230	0	0	25	Pass
NVNT	ac20	0	5180	Ant1	5180	0	0	25	Pass
NVNT	ac20	0	5200	Ant1	5199.96	-40000	-7.69	25	Pass
NVNT	ac20	0	5240	Ant1	5239.98	-20000	-3.82	25	Pass
NVNT	ac40	0	5190	Ant1	5189.96	-40000	-7.71	25	Pass
NVNT	ac40	0	5230	Ant1	5229.96	-40000	-7.65	25	Pass
NVNT	ax20	0	5180	Ant1	5179.96	-40000	-7.72	25	Pass
NVNT	ax20	0	5200	Ant1	5199.96	-40000	-7.69	25	Pass
NVNT	ax20	0	5240	Ant1	5239.96	-40000	-7.63	25	Pass
NVNT	ax40	0	5190	Ant1	5190.04	40000	7.71	25	Pass
NVNT	ax40	0	5230	Ant1	5230	0	0	25	Pass

Test Graphs


Freq. Stability NVNT a 5180MHz Ant1 0 Minutes

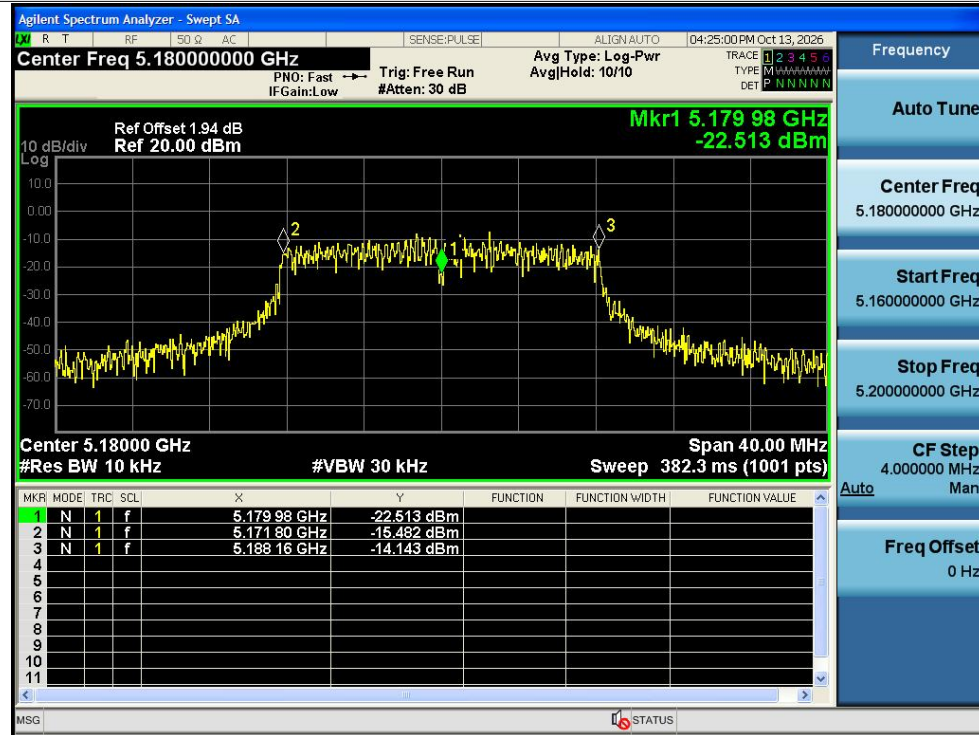


Freq. Stability NVNT a 5200MHz Ant1 0 Minutes

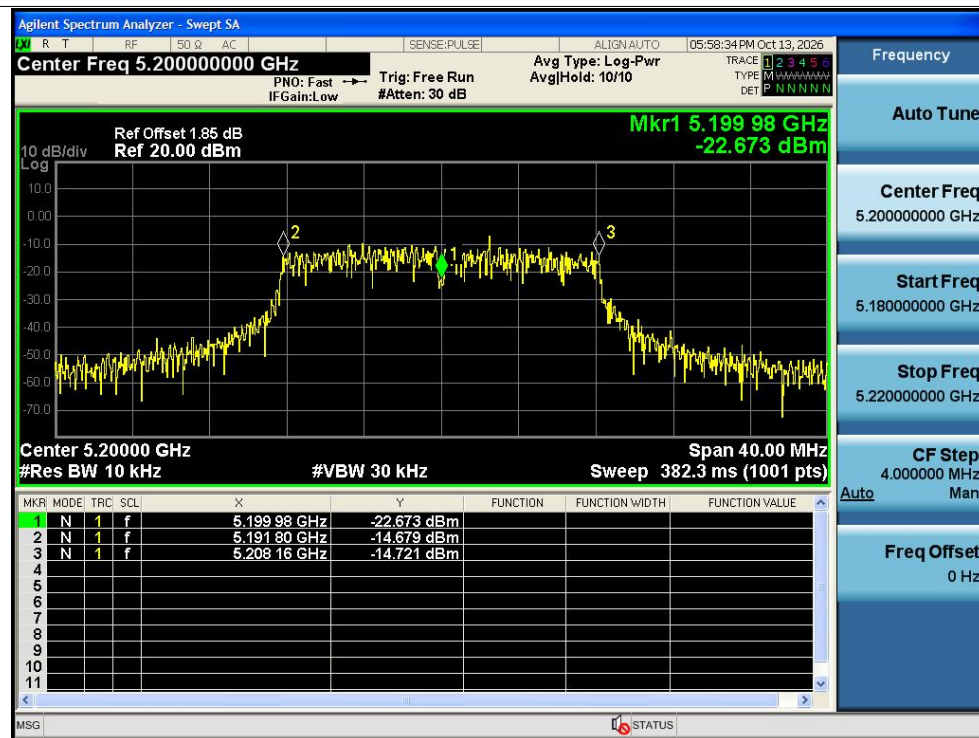


Freq. Stability NVNT a 5240MHz Ant1 0 Minutes

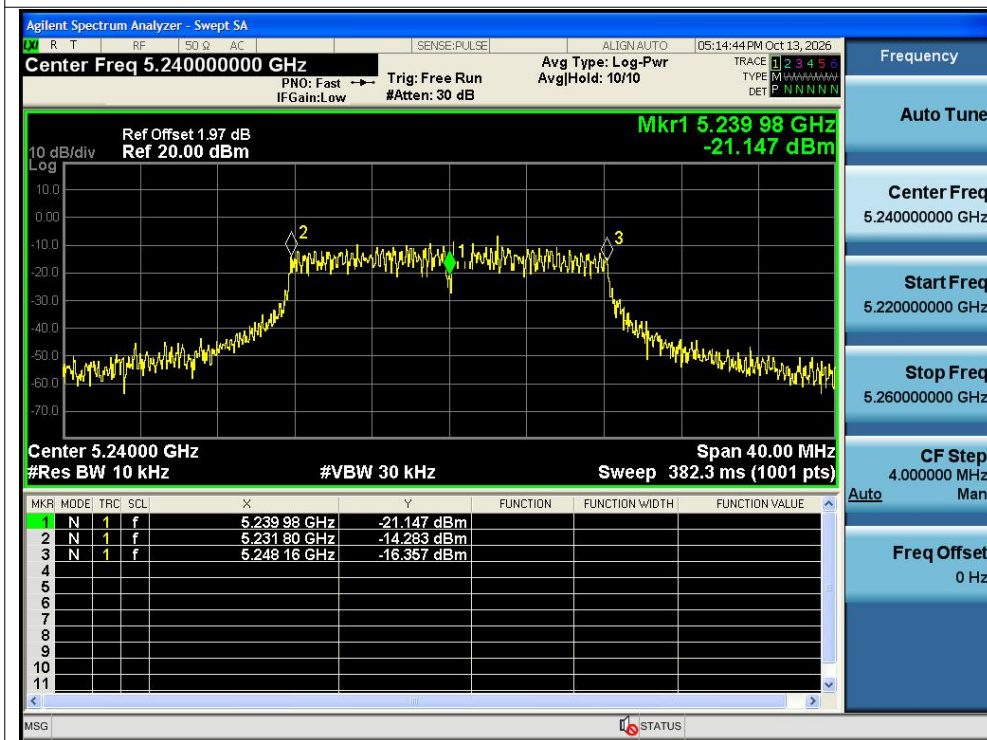


Freq. Stability NVNT n20 5180MHz Ant1 0 Minutes

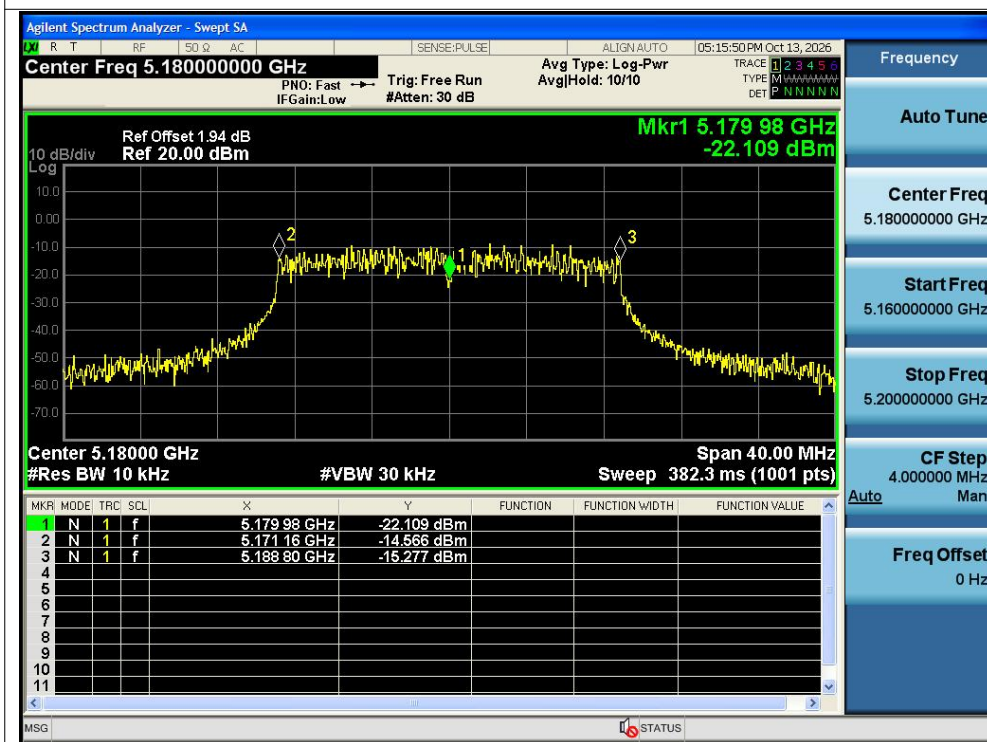


Freq. Stability NVNT n20 5200MHz Ant1 0 Minutes

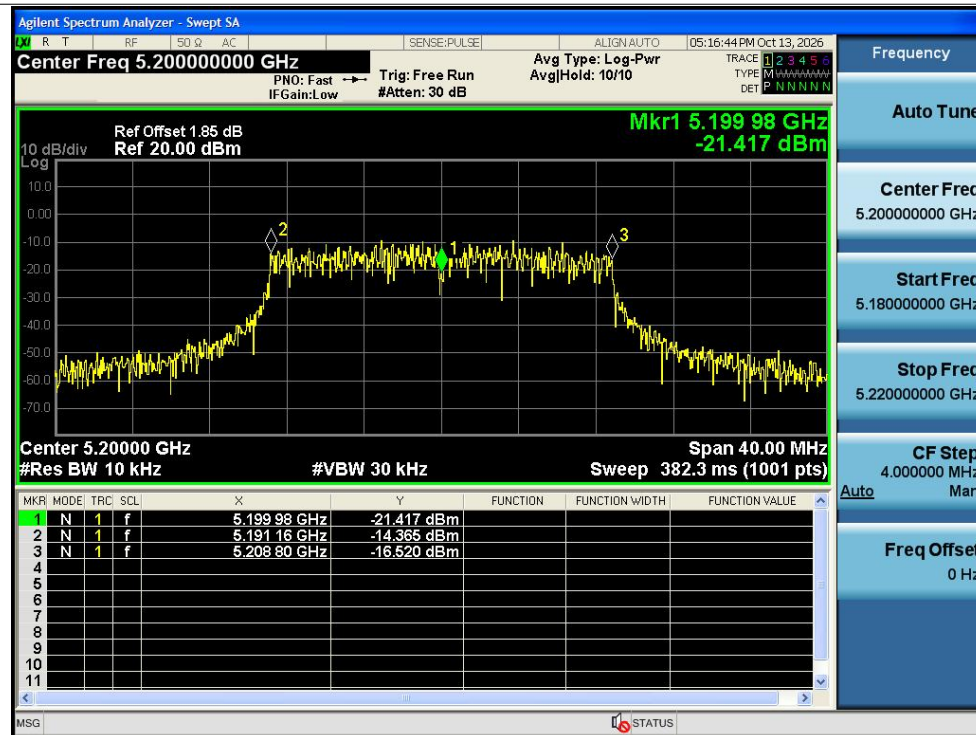


Freq. Stability NVNT n20 5240MHz Ant1 0 Minutes

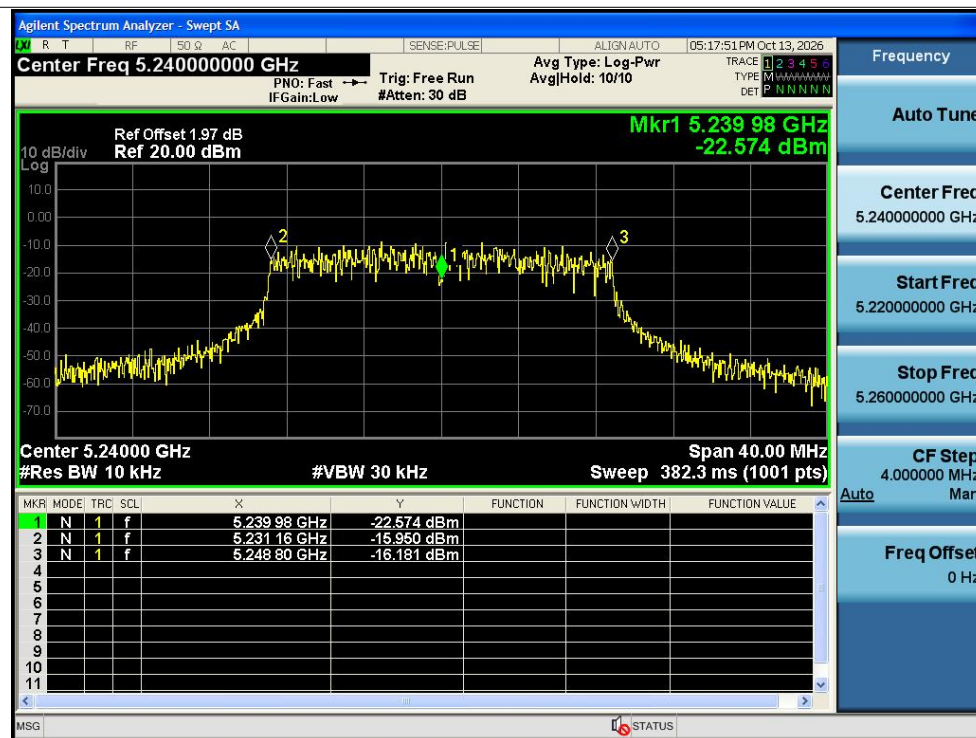


Freq. Stability NVNT n40 5190MHz Ant1 0 Minutes

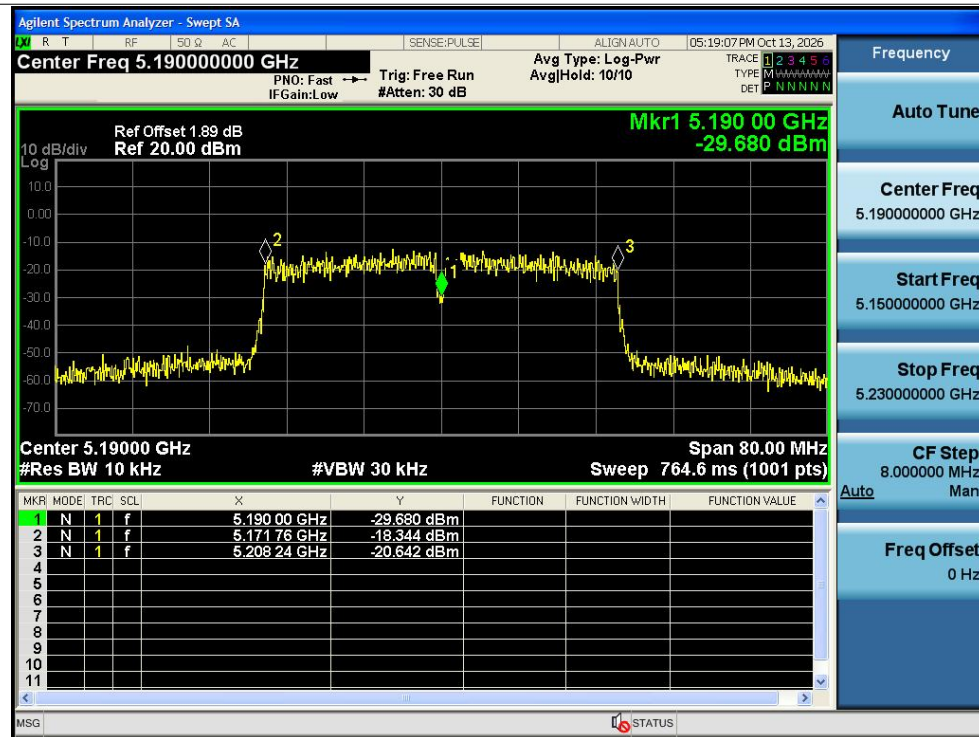


Freq. Stability NVNT n40 5230MHz Ant1 0 Minutes

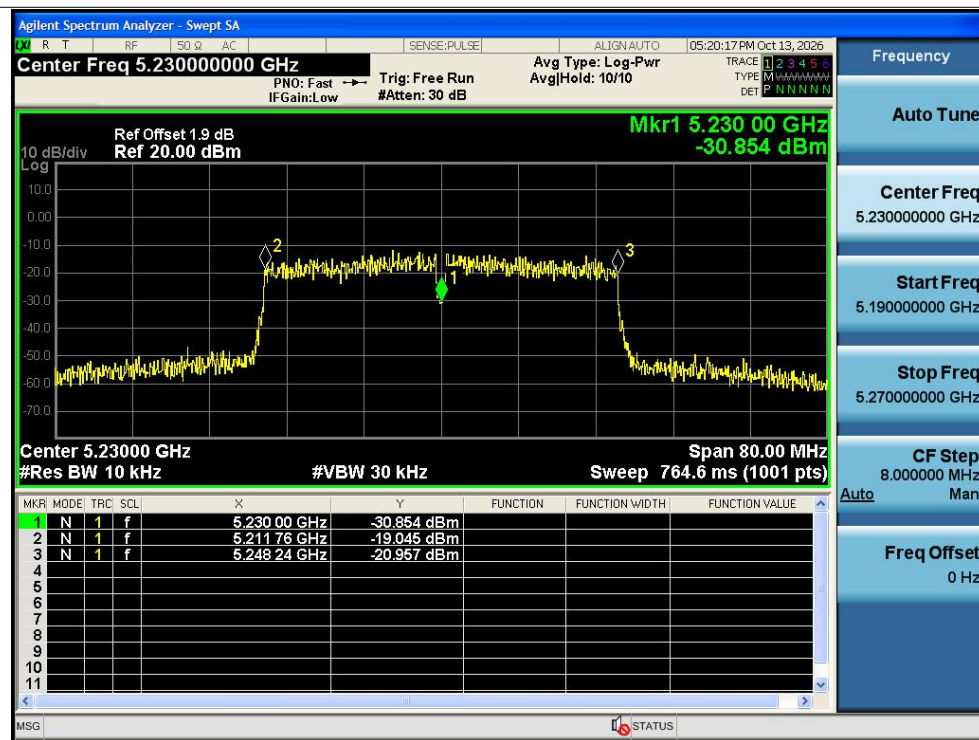


Freq. Stability NVNT ac20 5180MHz Ant1 0 Minutes

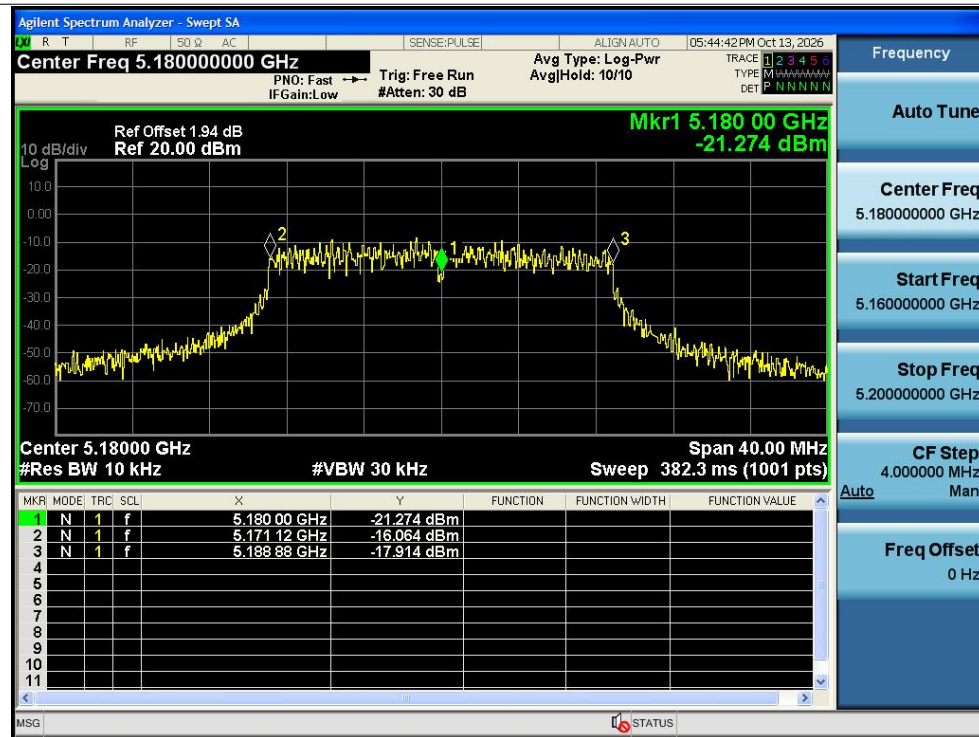


Freq. Stability NVNT ac20 5200MHz Ant1 0 Minutes

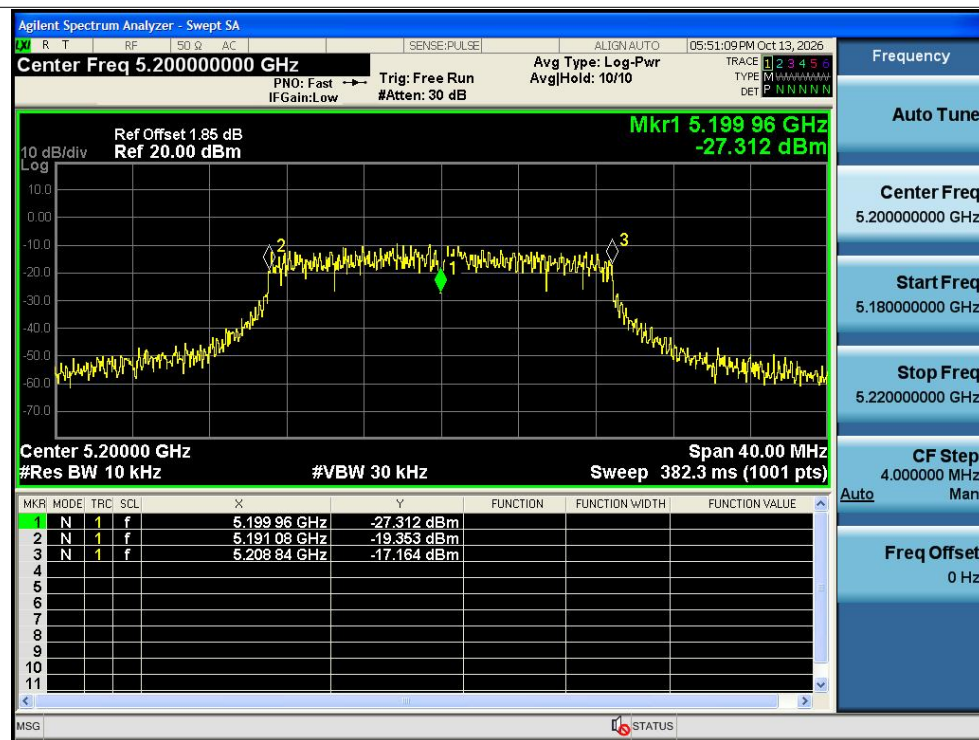


Freq. Stability NVNT ac20 5240MHz Ant1 0 Minutes

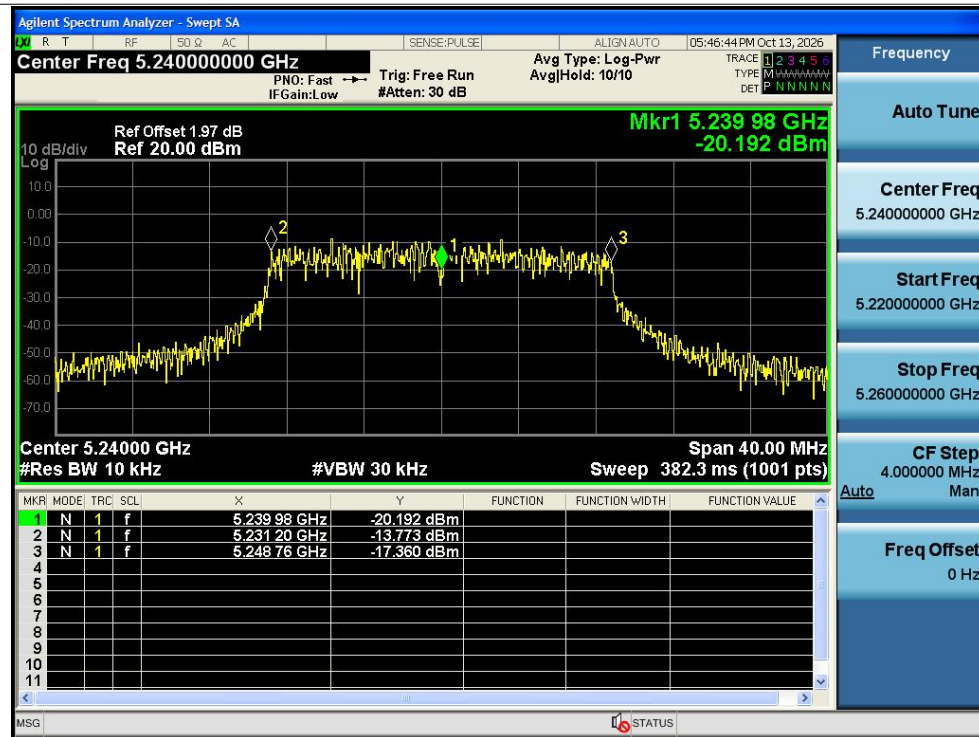


Freq. Stability NVNT ac40 5190MHz Ant1 0 Minutes

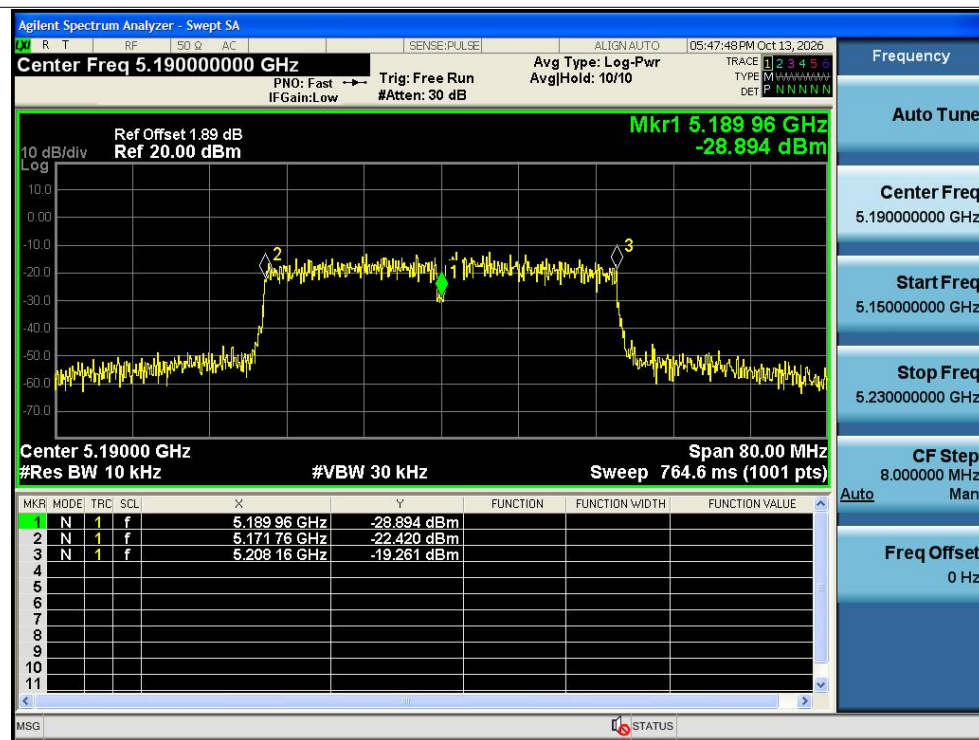


Freq. Stability NVNT ac40 5230MHz Ant1 0 Minutes

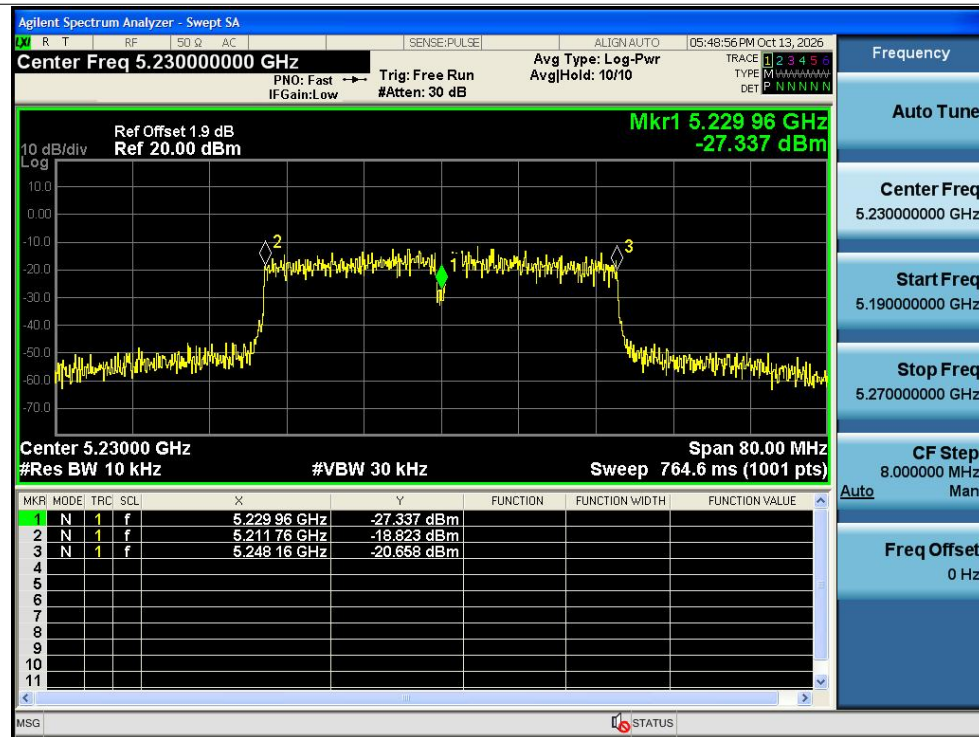


Freq. Stability NVNT ax20 5180MHz Ant1 0 Minutes

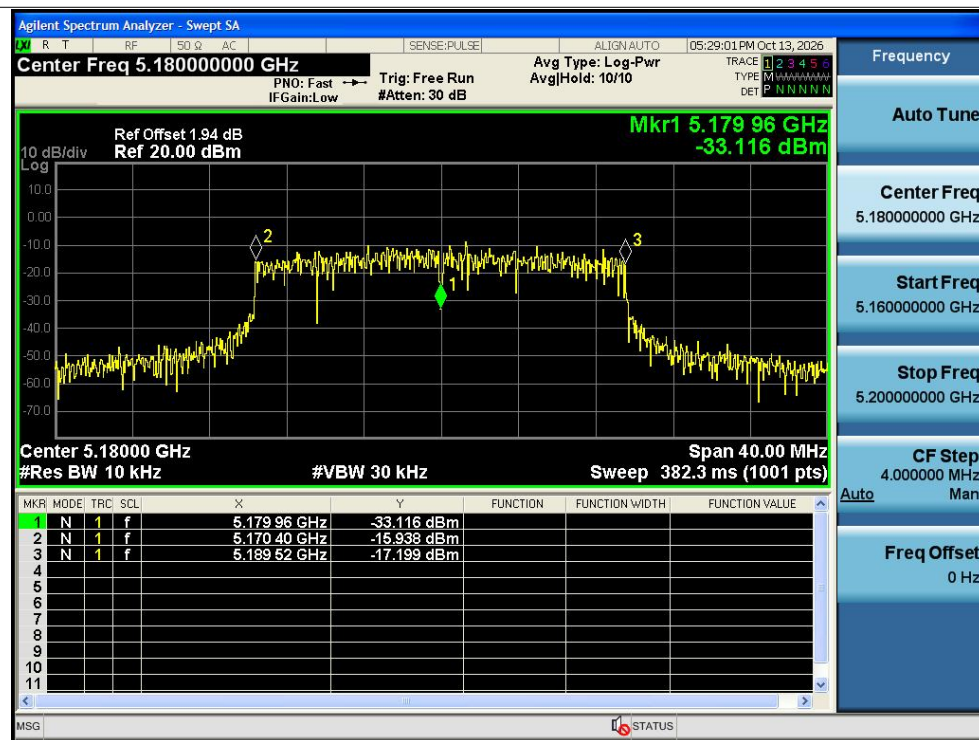


Freq. Stability NVNT ax20 5200MHz Ant1 0 Minutes

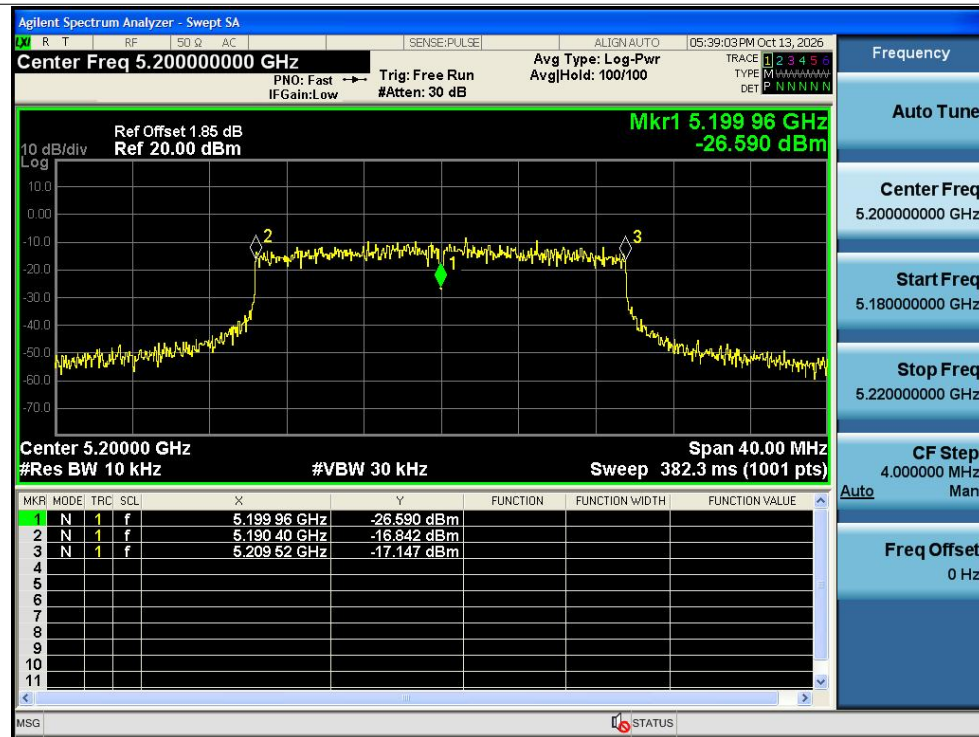

Freq. Stability NVNT ax20 5240MHz Ant1 0 Minutes

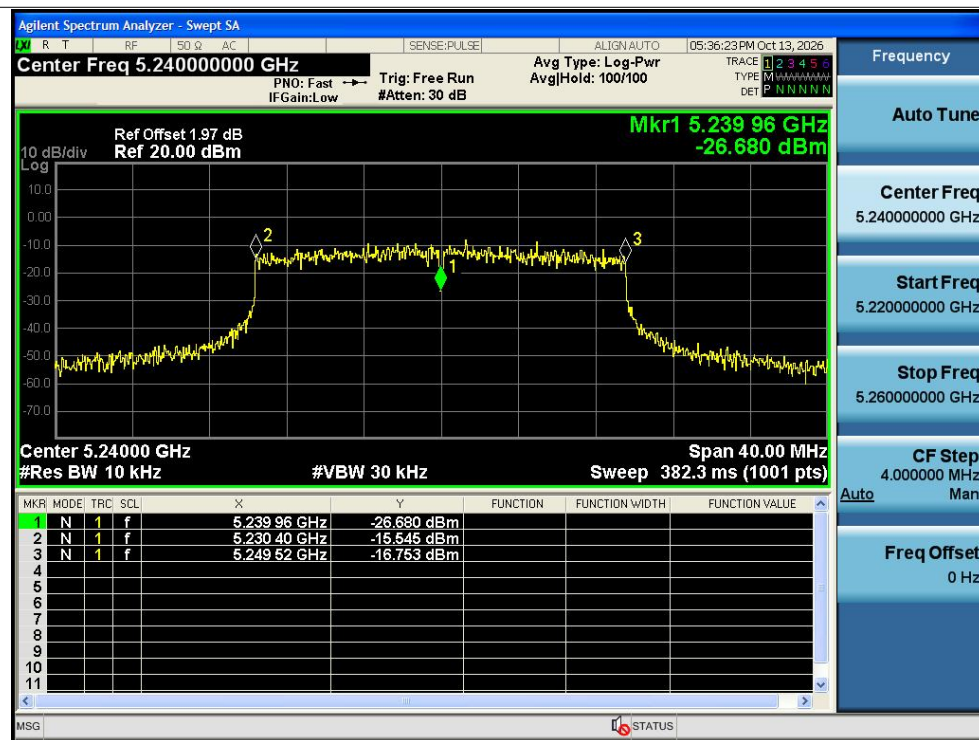

Freq. Stability NVNT ax40 5190MHz Ant1 0 Minutes

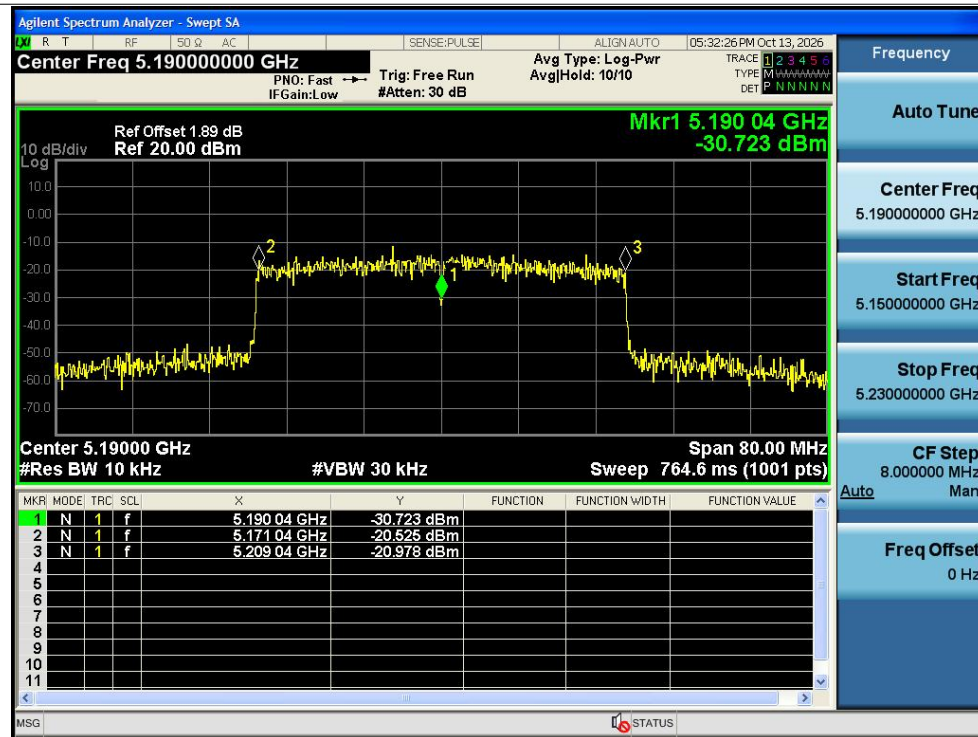

Freq. Stability NVNT ax40 5230MHz Ant1 0 Minutes

