

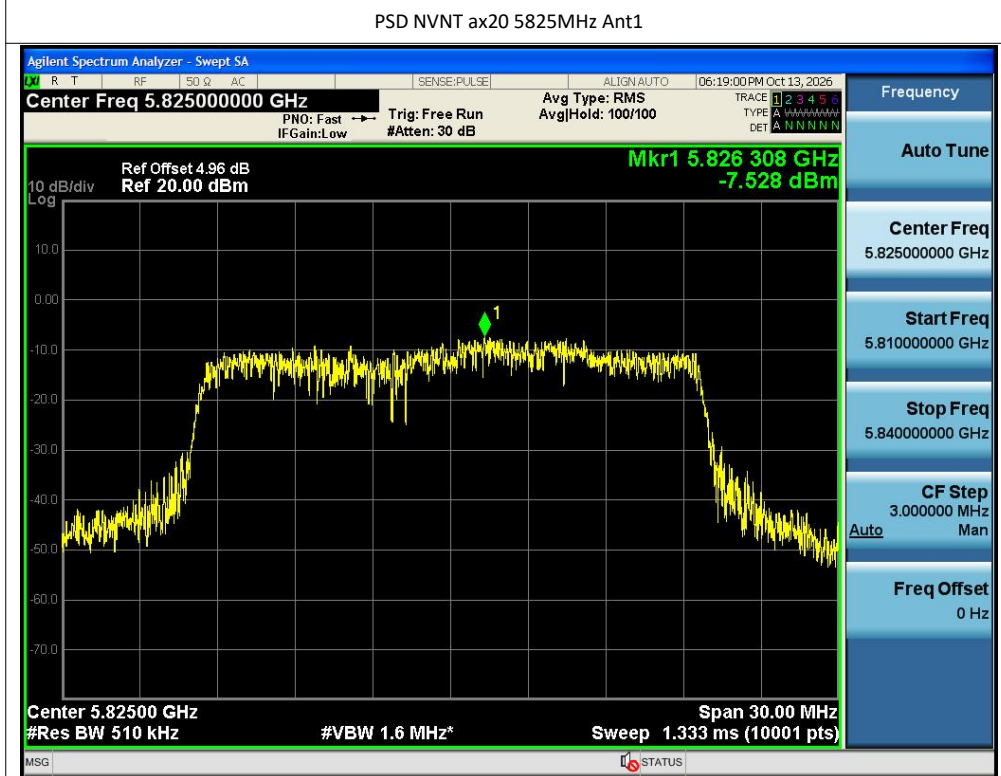
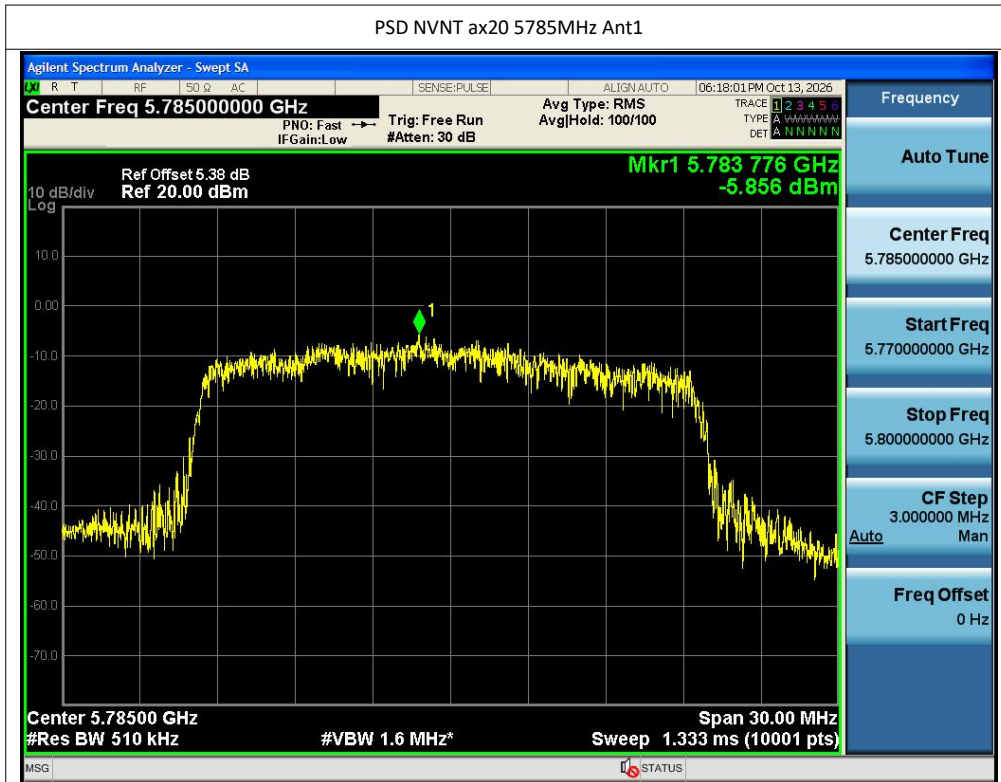


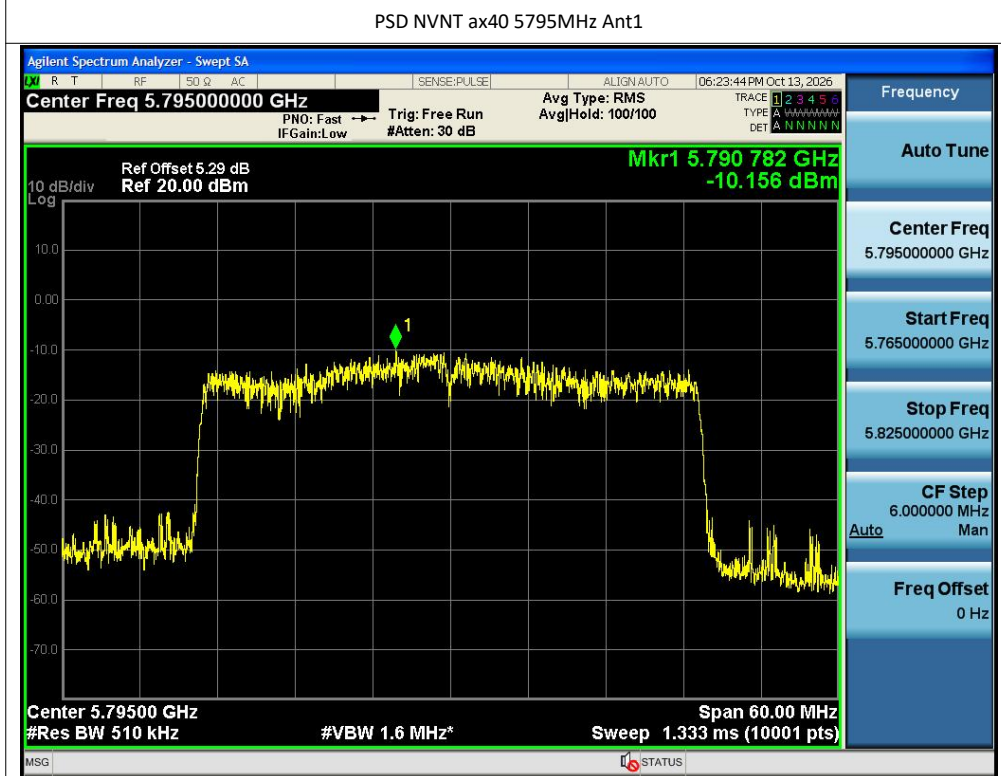

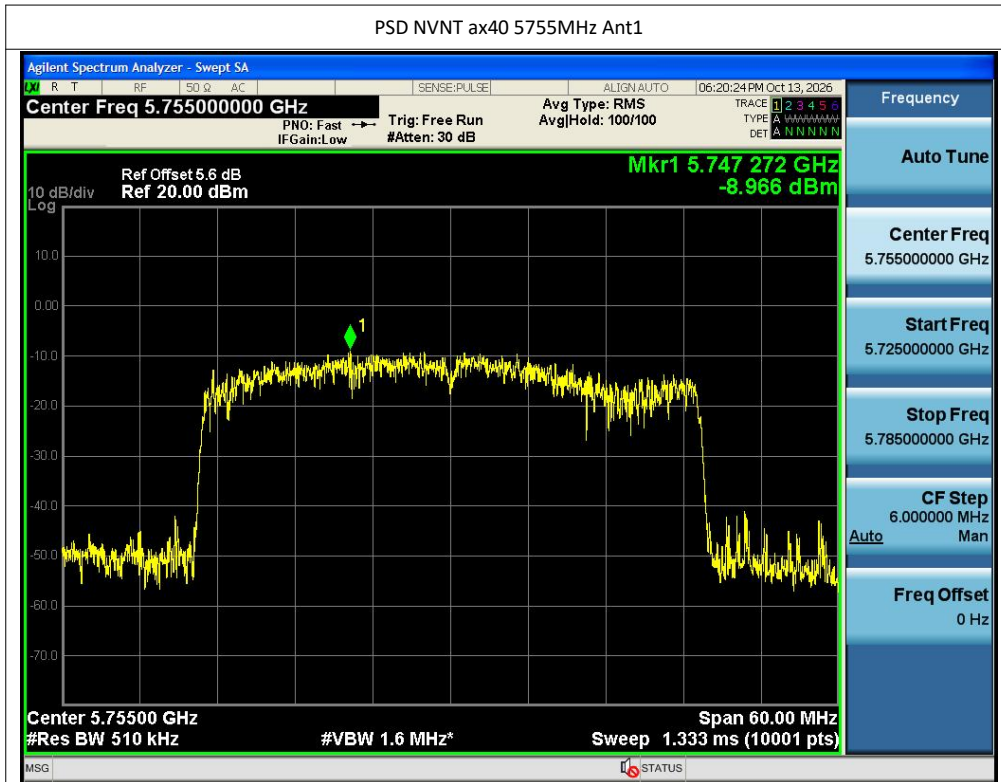


Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-31.86	See test Graph	Pass
NVNT	a	5825	Ant1	-30.93	See test Graph	Pass
NVNT	n20	5825	Ant1	-31.36	See test Graph	Pass
NVNT	n40	5755	Ant1	-25.54	See test Graph	Pass
NVNT	n40	5795	Ant1	-36.96	See test Graph	Pass
NVNT	ac20	5745	Ant1	-22.88	See test Graph	Pass
NVNT	ac20	5825	Ant1	-32.56	See test Graph	Pass
NVNT	ac40	5755	Ant1	-19.06	See test Graph	Pass
NVNT	ac40	5795	Ant1	-35.71	See test Graph	Pass
NVNT	ax20	5745	Ant1	-23.89	See test Graph	Pass
NVNT	ax20	5825	Ant1	-32.9	See test Graph	Pass
NVNT	ax40	5755	Ant1	-17.59	See test Graph	Pass
NVNT	ax40	5795	Ant1	-33.27	See test Graph	Pass


Test Graphs

Band Edge NVNT a 5745MHz Low Ant1

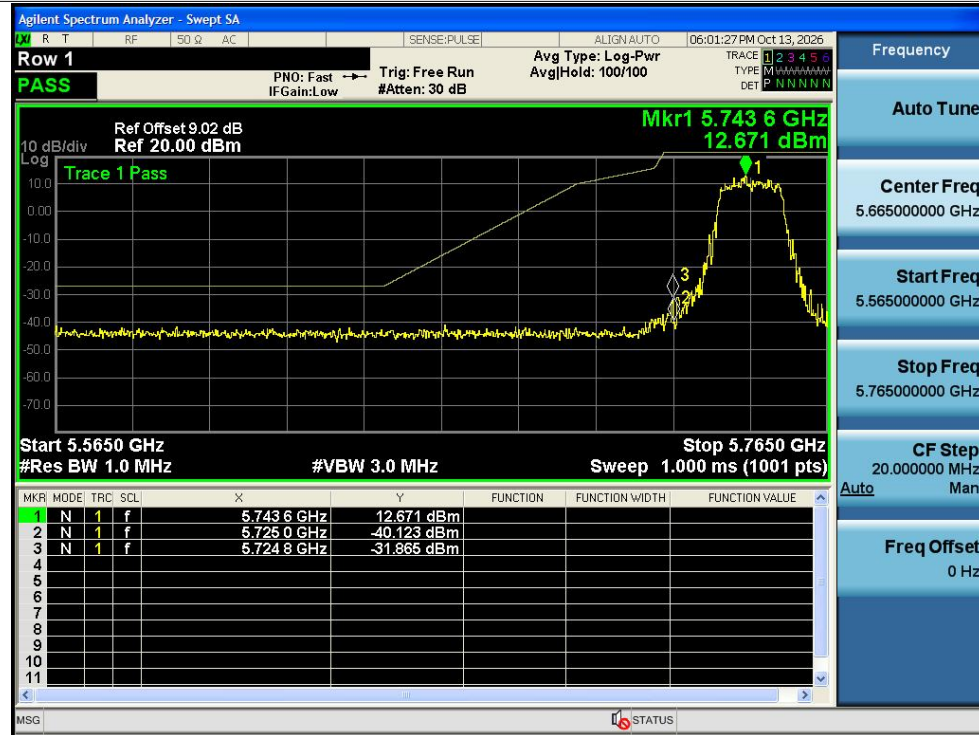

Band Edge NVNT a 5825MHz High Ant1




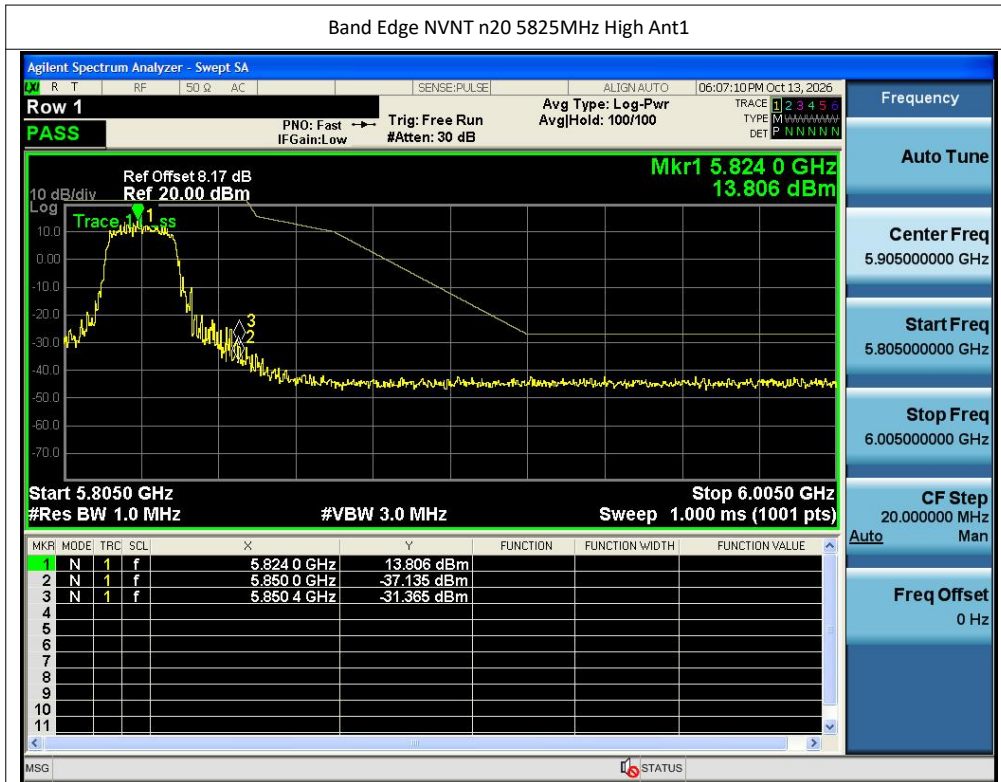

Band Edge NVNT n40 5795MHz High Ant1



Band Edge NVNT ac20 5745MHz Low Ant1

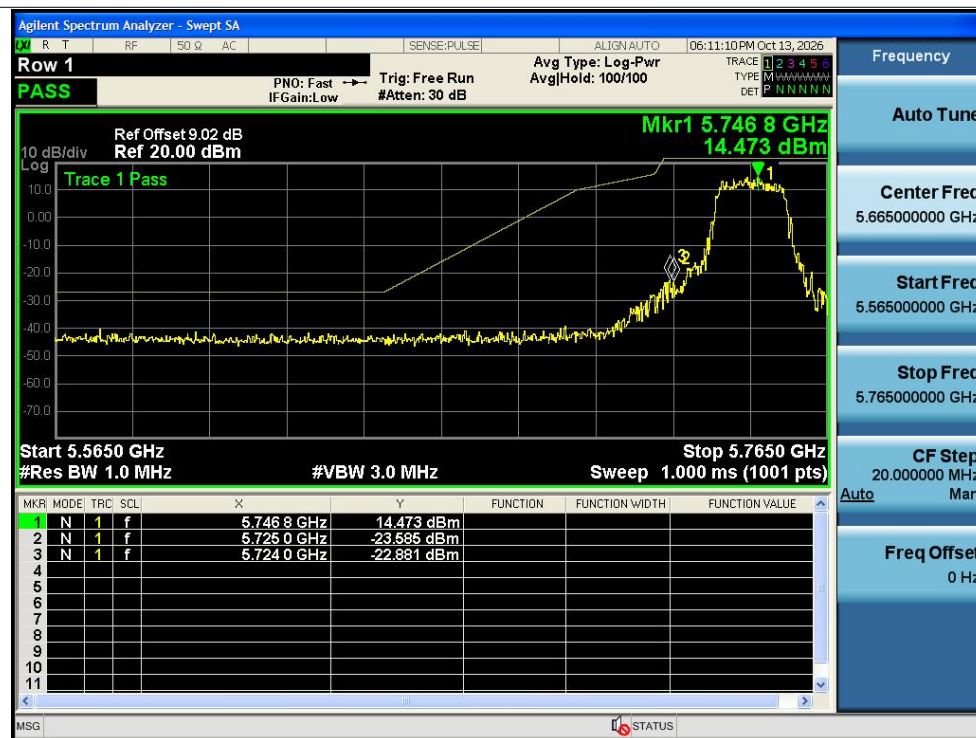

Band Edge NVNT ac20 5825MHz High Ant1



Band Edge NVNT ac40 5755MHz Low Ant1



Band Edge NVNT ac40 5795MHz High Ant1




Band Edge NVNT ax20 5745MHz Low Ant1



Band Edge NVNT ax20 5825MHz High Ant1



Band Edge NVNT ax40 5755MHz Low Ant1

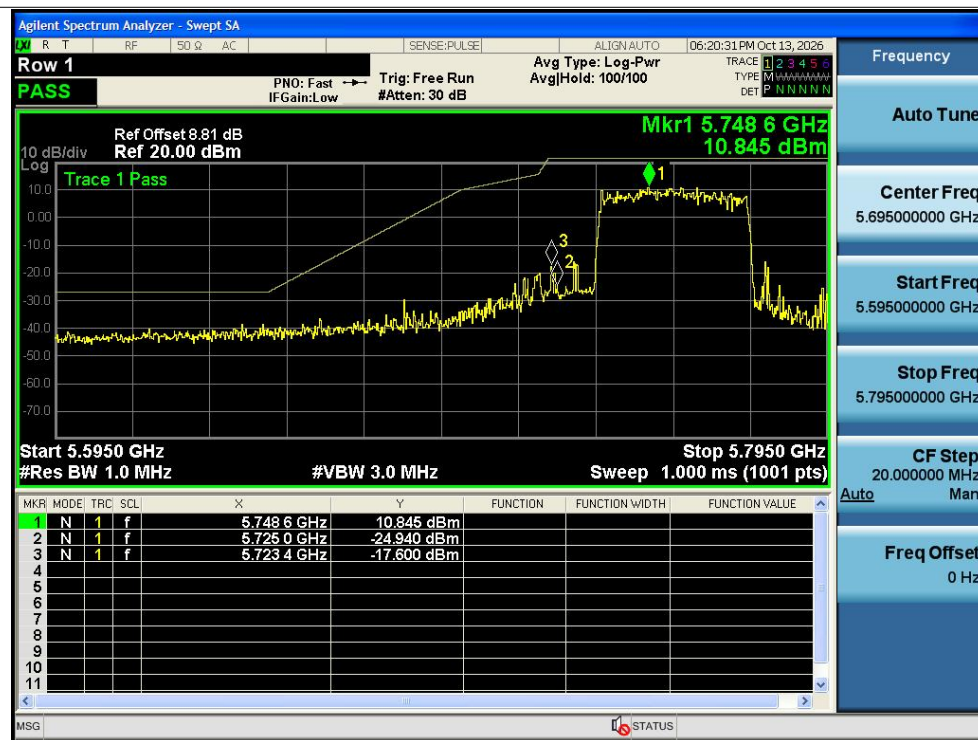




Frequency Stability


Condition	Mode	Time (mins)	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	0	5745	Ant1	5744.96	-40000	-6.96	25	Pass
NVNT	a	0	5785	Ant1	5784.94	-60000	-10.37	25	Pass
NVNT	a	0	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n20	0	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	n20	0	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	n20	0	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n40	0	5755	Ant1	5755.04	40000	6.95	25	Pass
NVNT	n40	0	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	0	5745	Ant1	5744.96	-40000	-6.96	25	Pass
NVNT	ac20	0	5785	Ant1	5785	0	0	25	Pass
NVNT	ac20	0	5825	Ant1	5824.94	-60000	-10.3	25	Pass
NVNT	ac40	0	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	ac40	0	5795	Ant1	5794.92	-80000	-13.81	25	Pass
NVNT	ax20	0	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	ax20	0	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	ax20	0	5825	Ant1	5824.94	-60000	-10.3	25	Pass
NVNT	ax40	0	5755	Ant1	5755	0	0	25	Pass
NVNT	ax40	0	5795	Ant1	5794.92	-80000	-13.81	25	Pass

Test Graphs


Freq. Stability NVNT a 5745MHz Ant1 0 Minutes

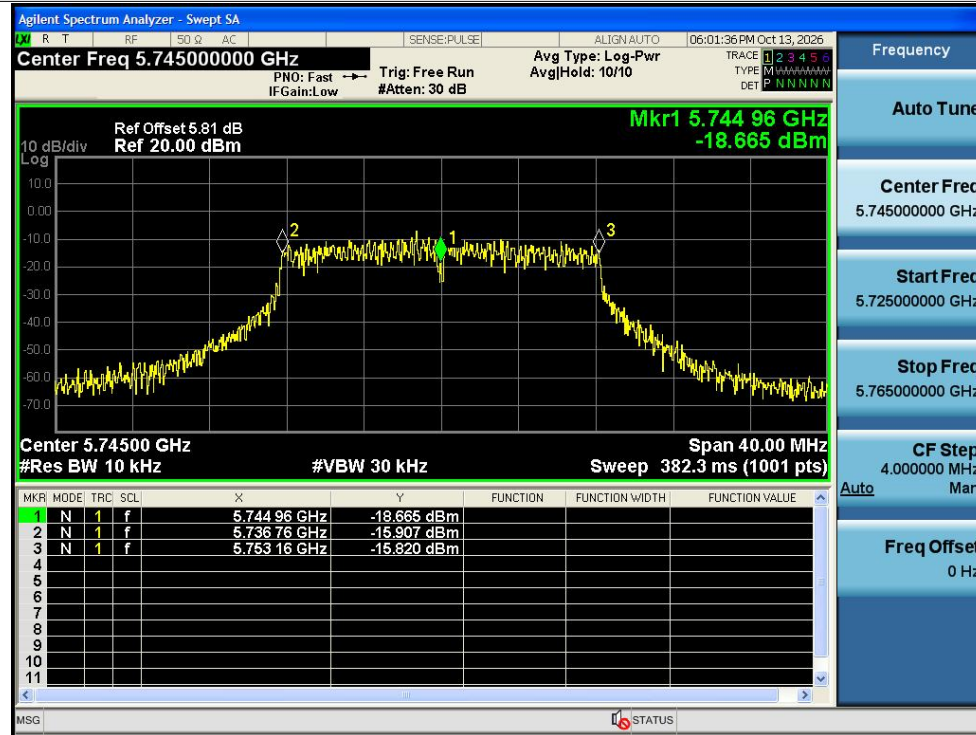


Freq. Stability NVNT a 5785MHz Ant1 0 Minutes

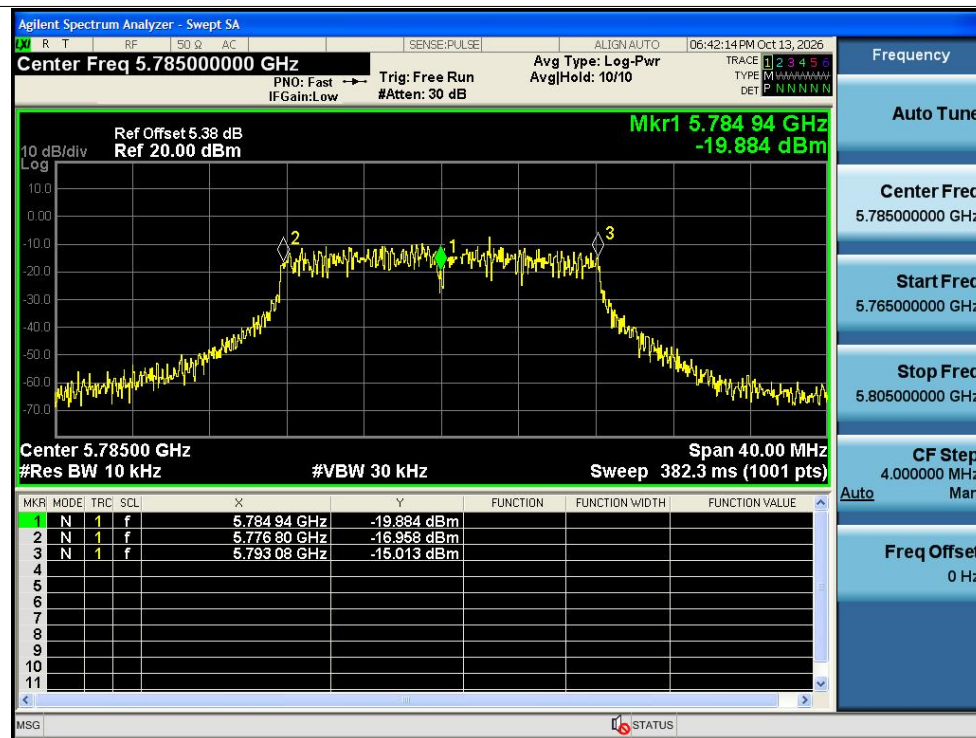


Freq. Stability NVNT a 5825MHz Ant1 0 Minutes

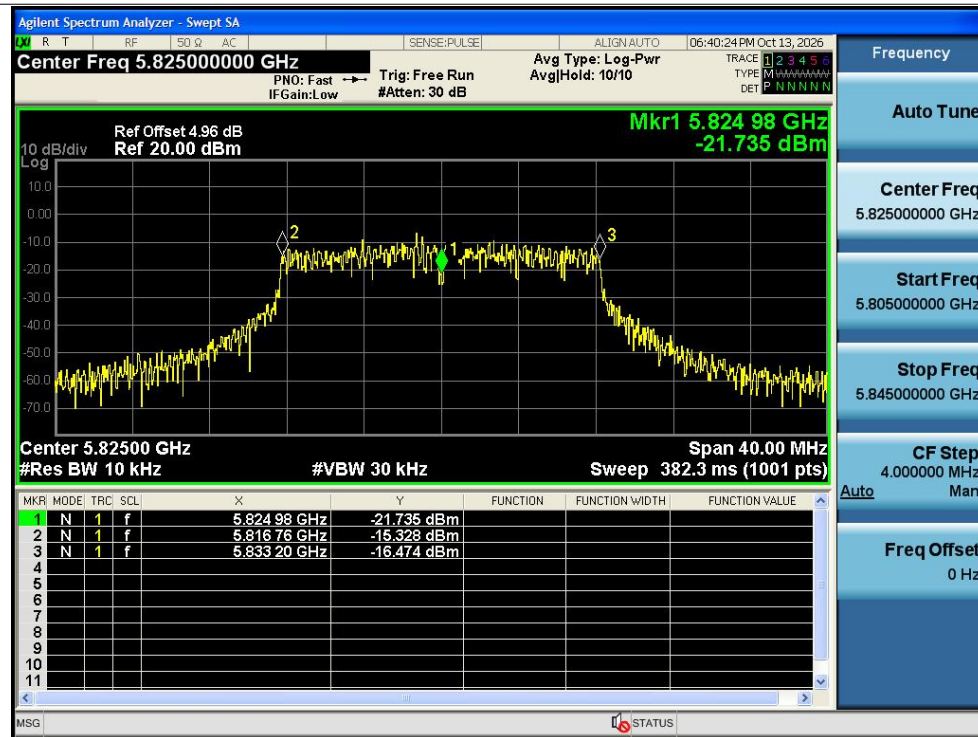


Freq. Stability NVNT n20 5745MHz Ant1 0 Minutes

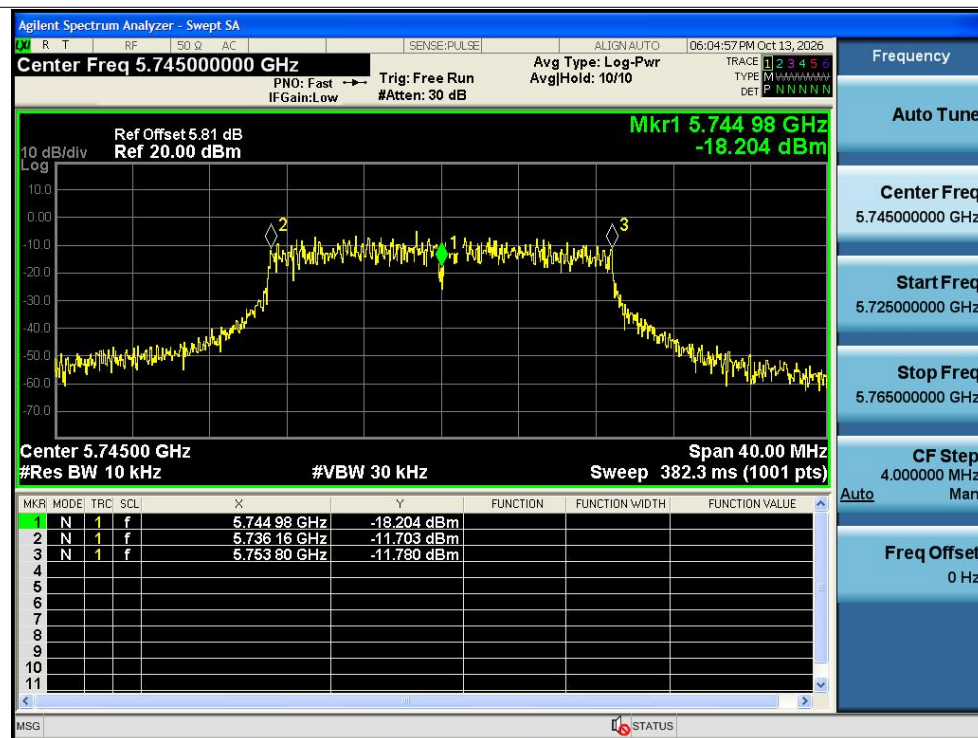


Freq. Stability NVNT n20 5785MHz Ant1 0 Minutes

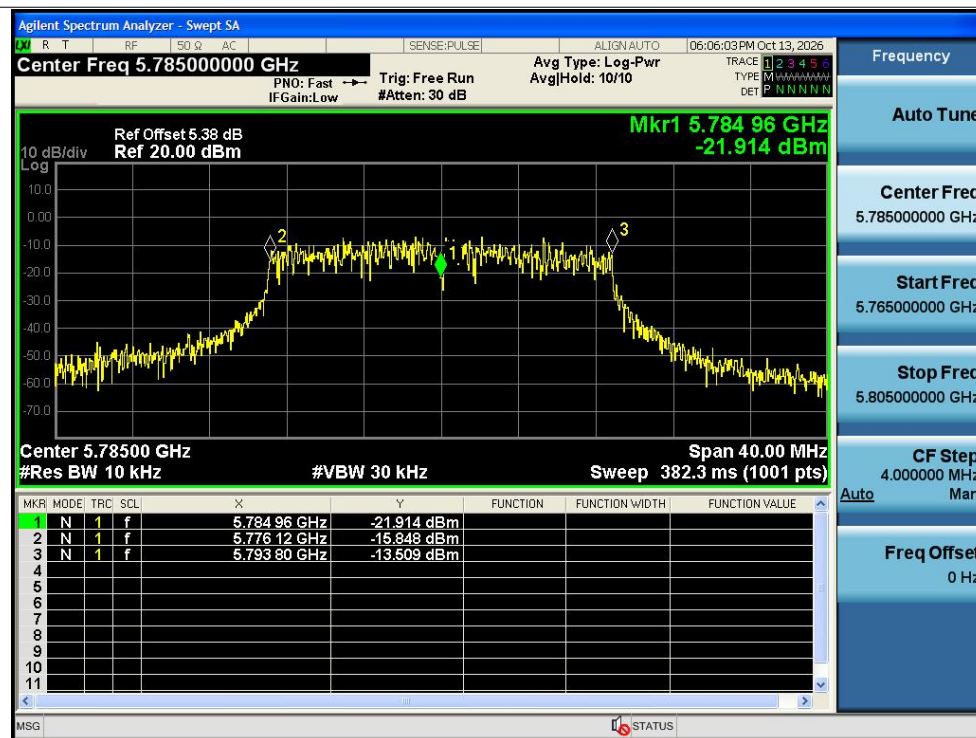


Freq. Stability NVNT n20 5825MHz Ant1 0 Minutes

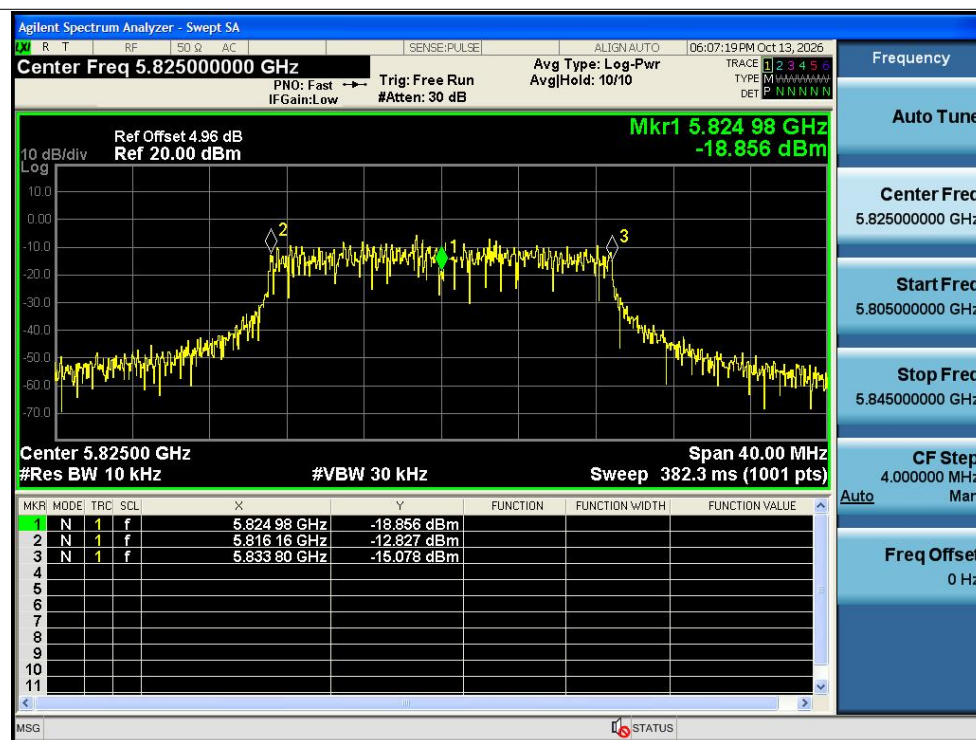


Freq. Stability NVNT n40 5755MHz Ant1 0 Minutes

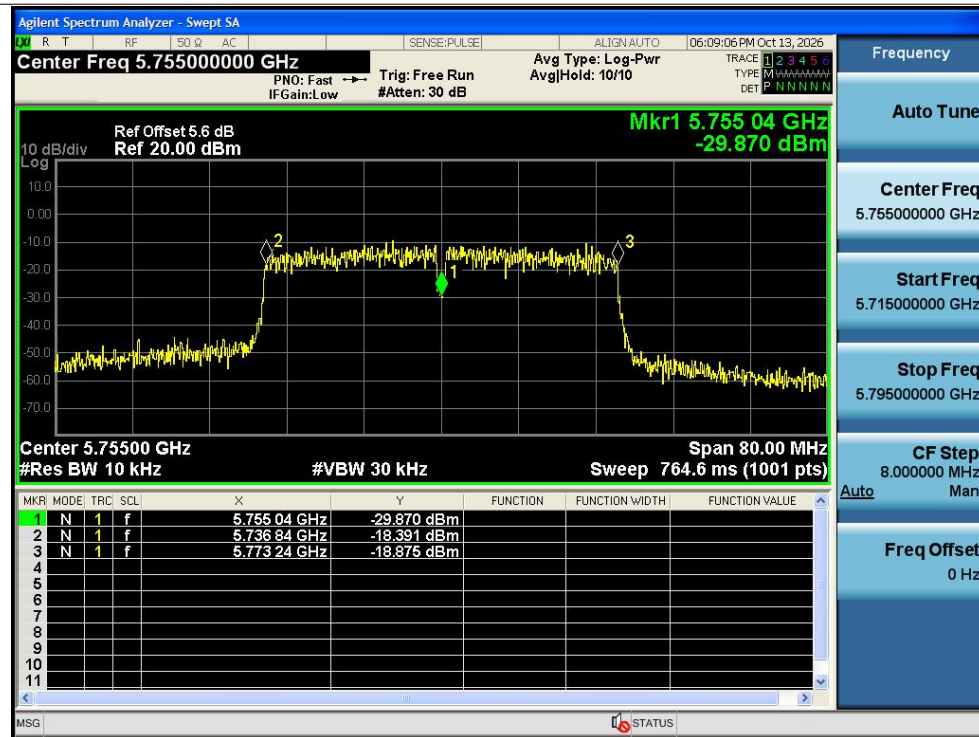


Freq. Stability NVNT n40 5795MHz Ant1 0 Minutes

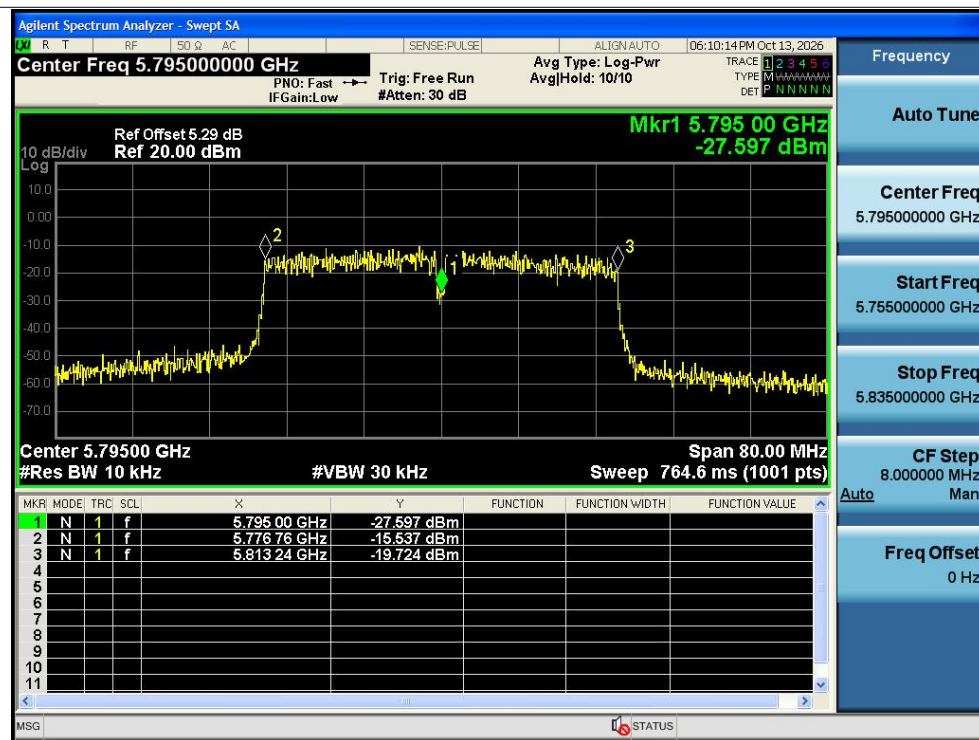


Freq. Stability NVNT ac20 5745MHz Ant1 0 Minutes

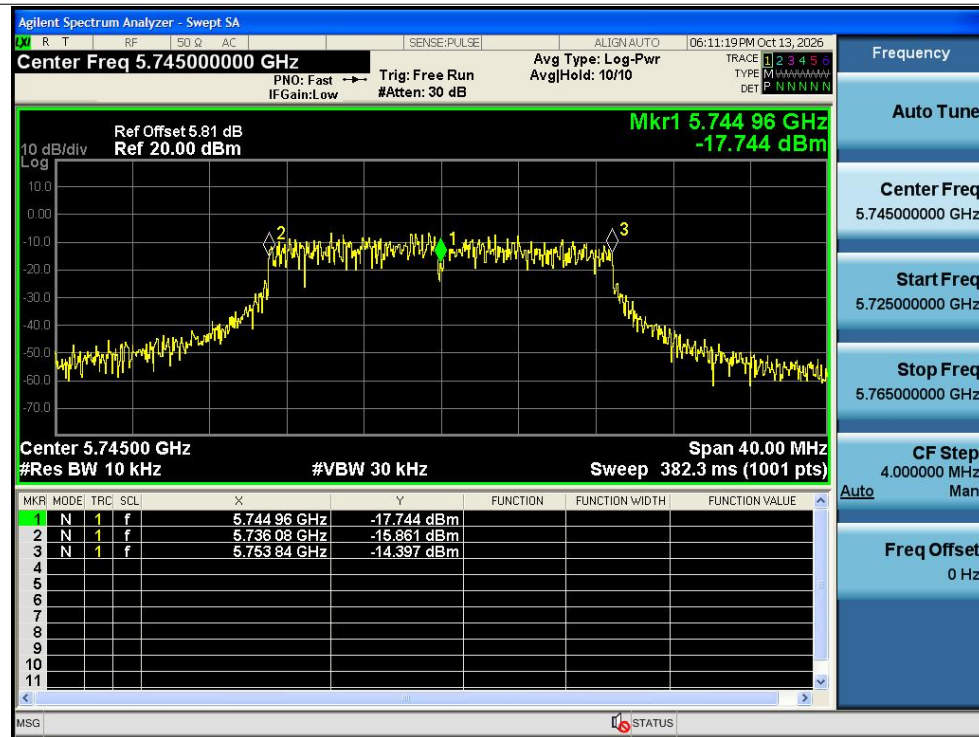


Freq. Stability NVNT ac20 5785MHz Ant1 0 Minutes

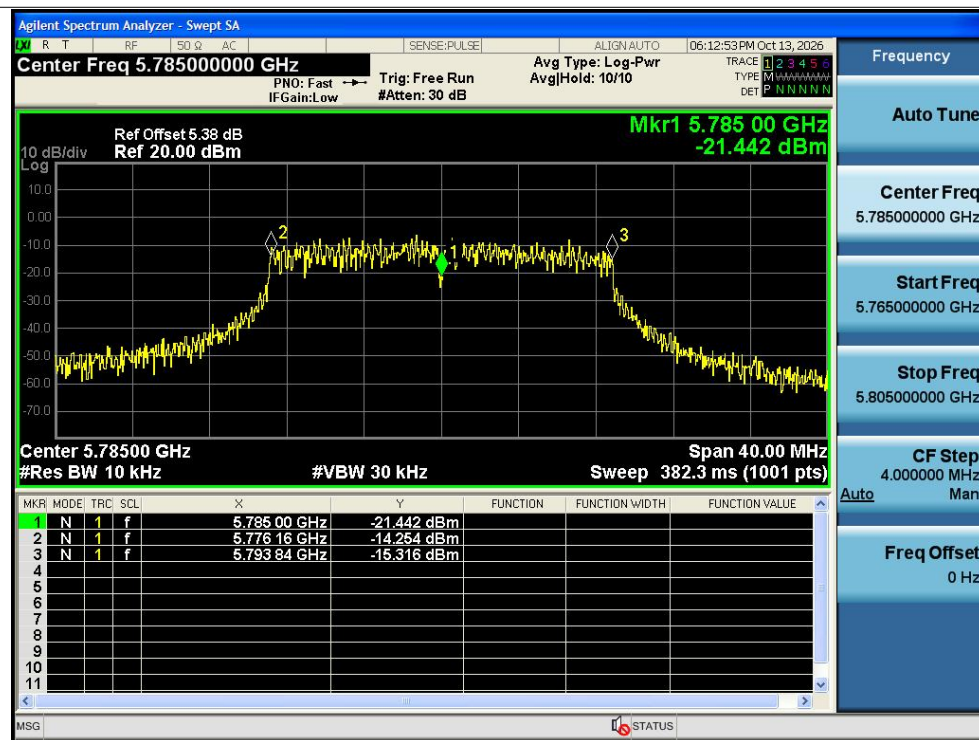


Freq. Stability NVNT ac20 5825MHz Ant1 0 Minutes

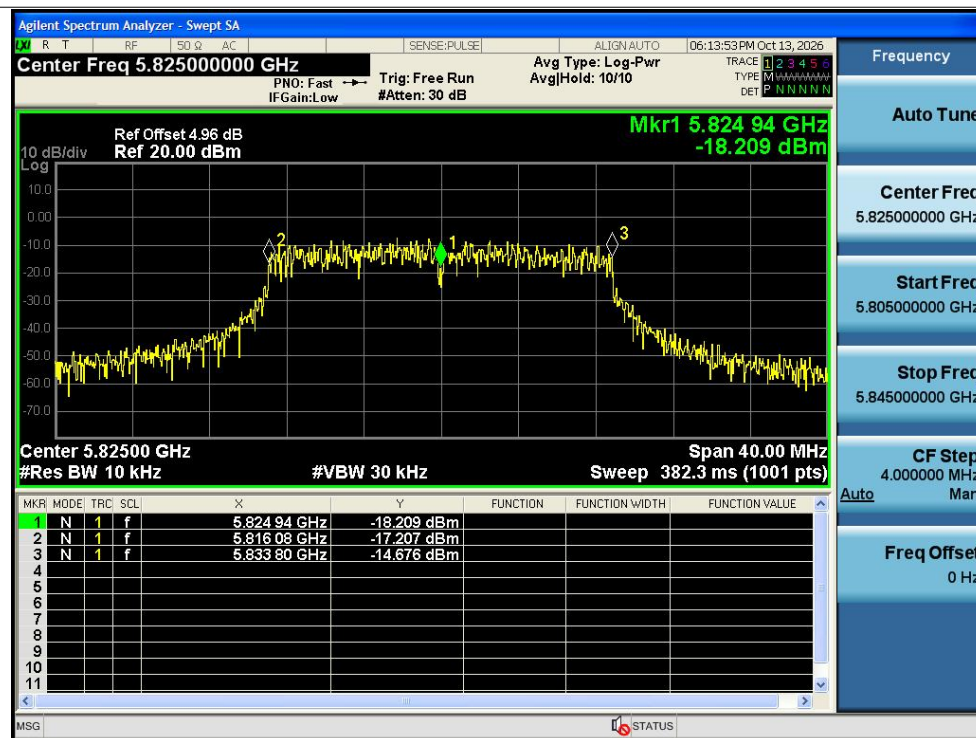


Freq. Stability NVNT ac40 5755MHz Ant1 0 Minutes

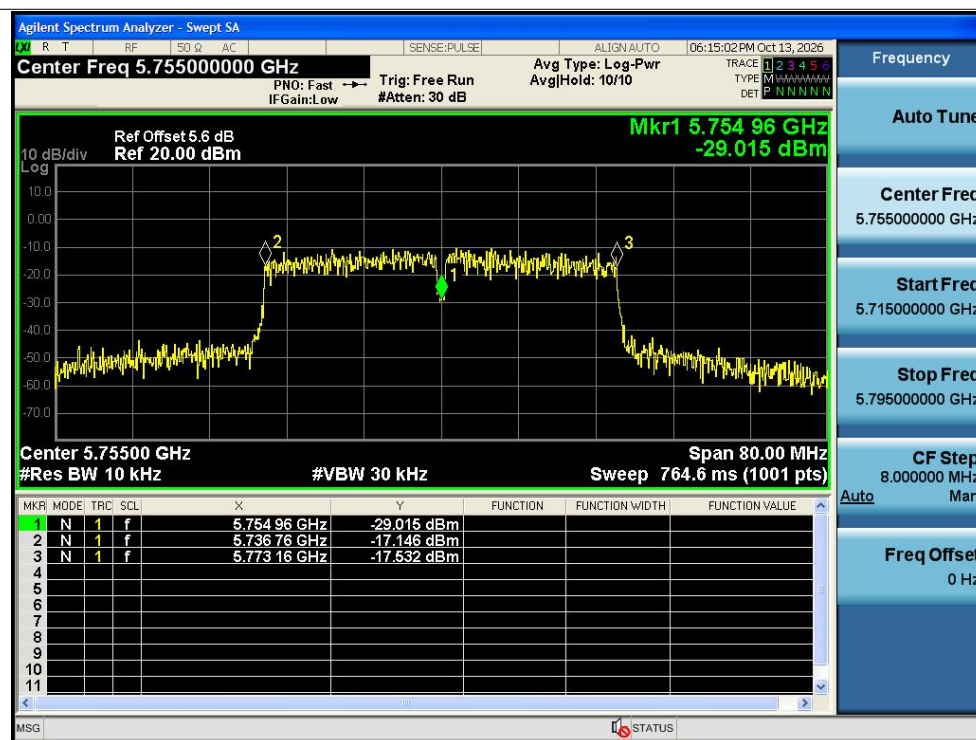


Freq. Stability NVNT ac40 5795MHz Ant1 0 Minutes

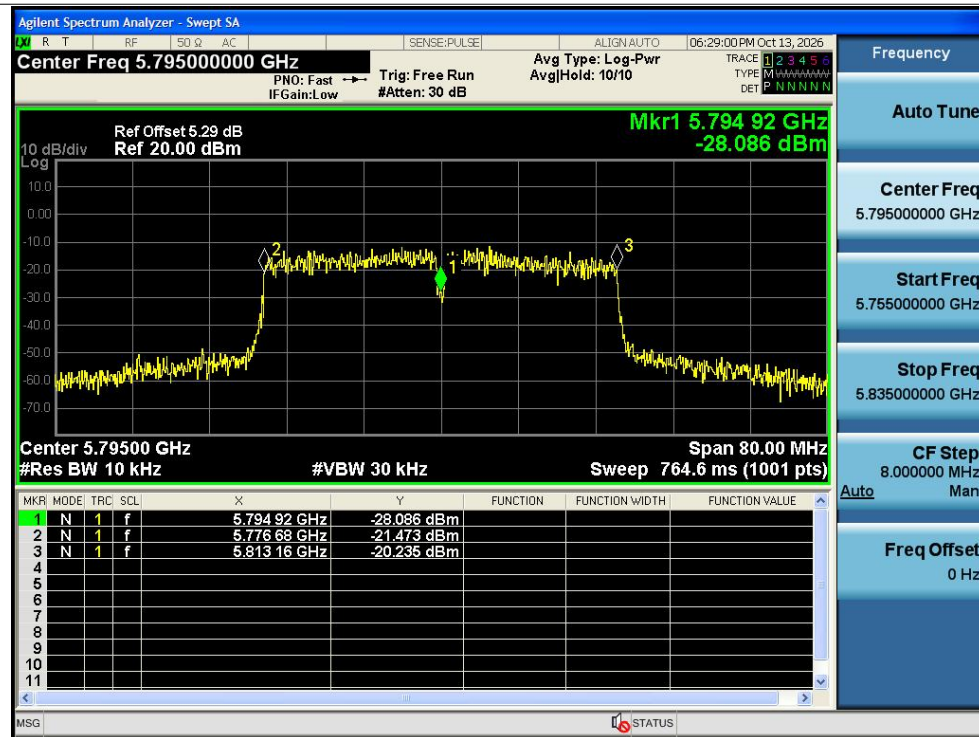


Freq. Stability NVNT ax20 5745MHz Ant1 0 Minutes

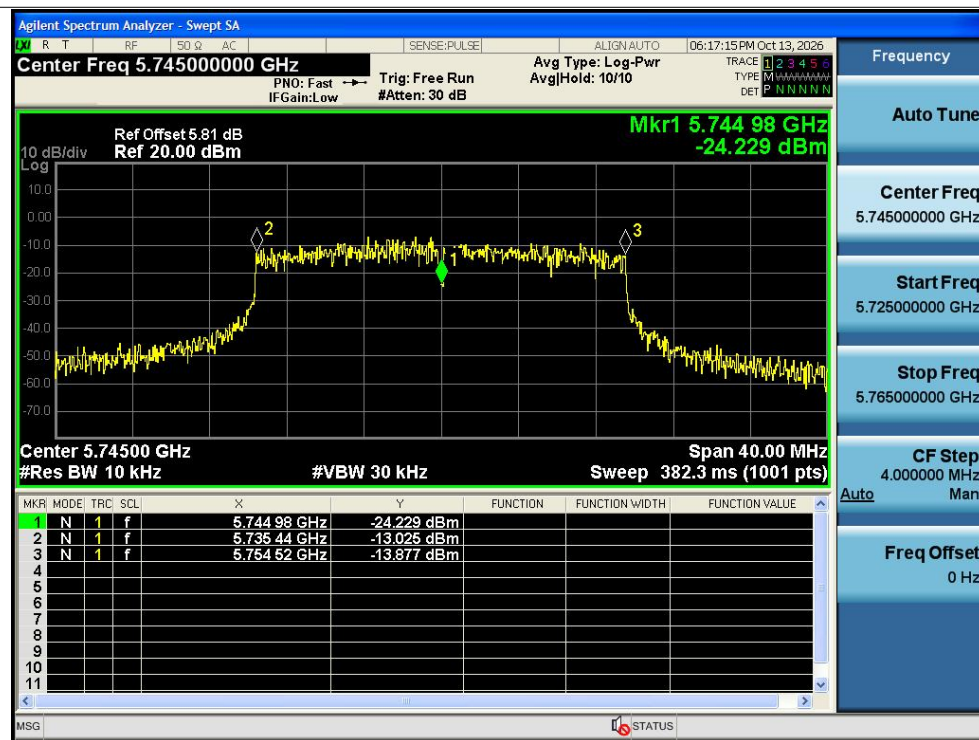


Freq. Stability NVNT ax20 5785MHz Ant1 0 Minutes

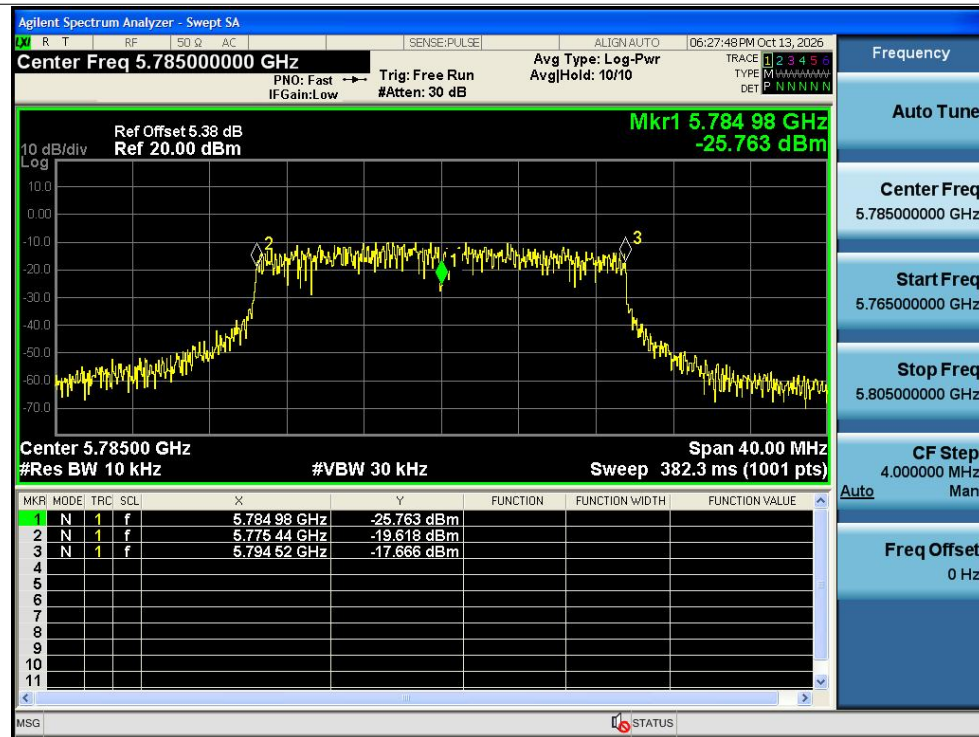

Freq. Stability NVNT ax20 5825MHz Ant1 0 Minutes

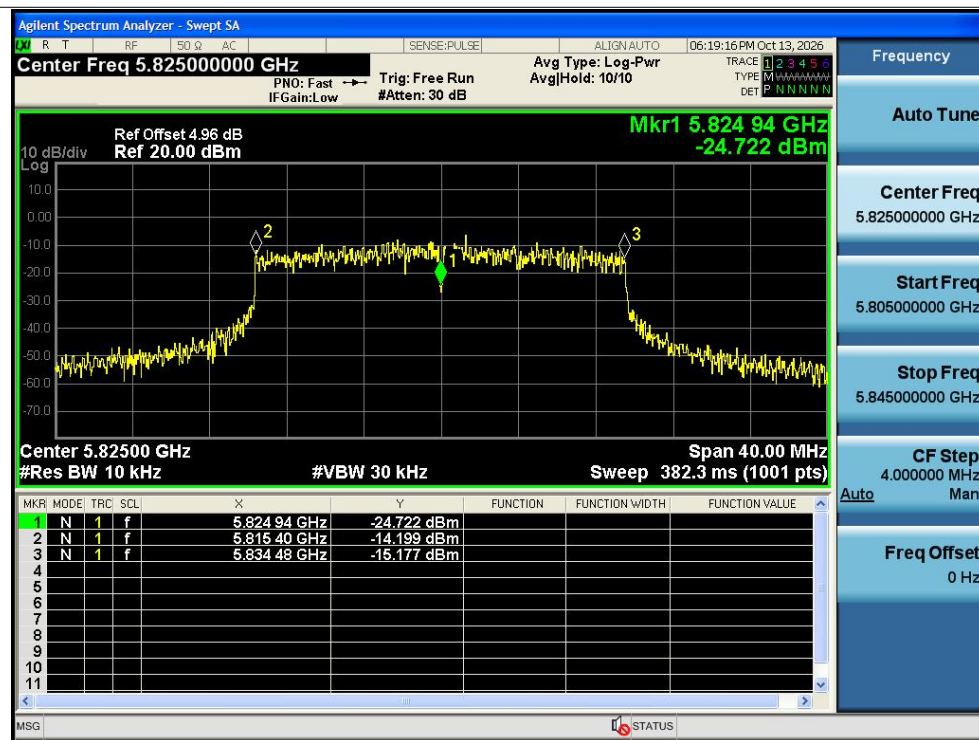

Freq. Stability NVNT ax40 5755MHz Ant1 0 Minutes

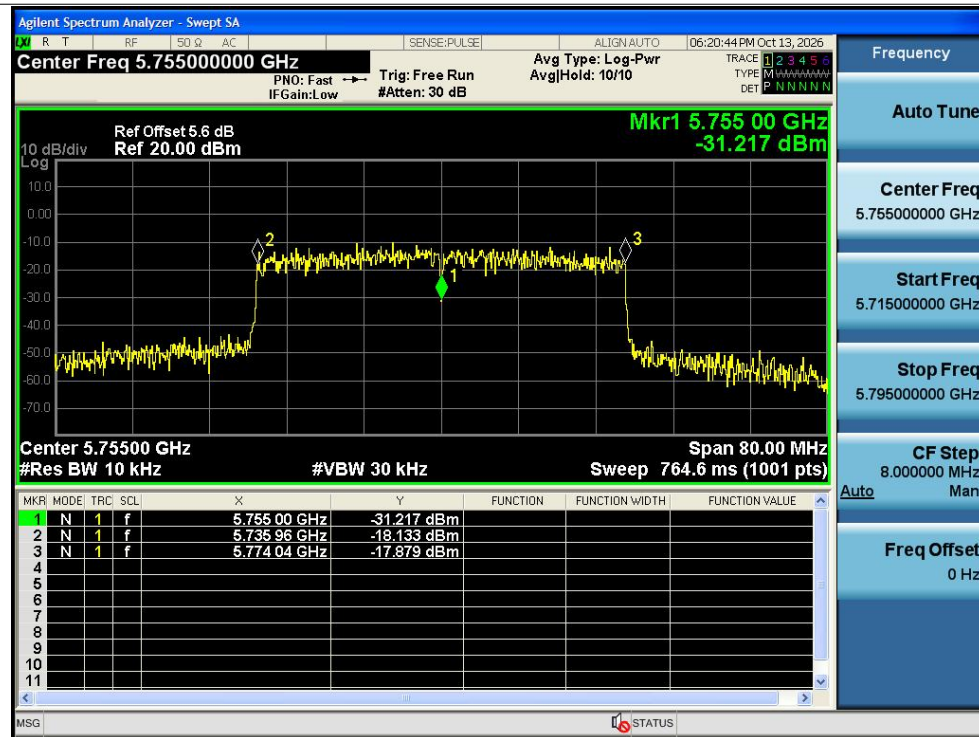

Freq. Stability NVNT ax40 5795MHz Ant1 0 Minutes

