




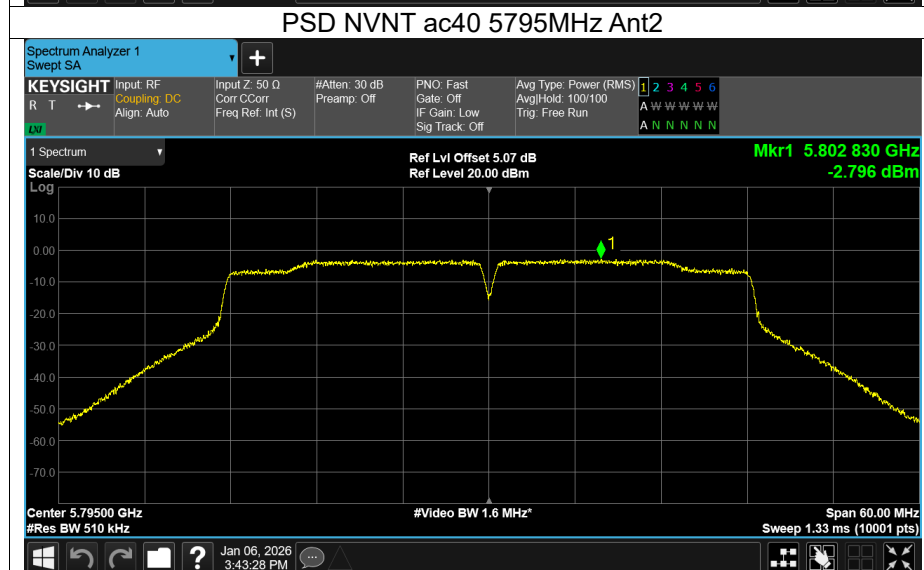
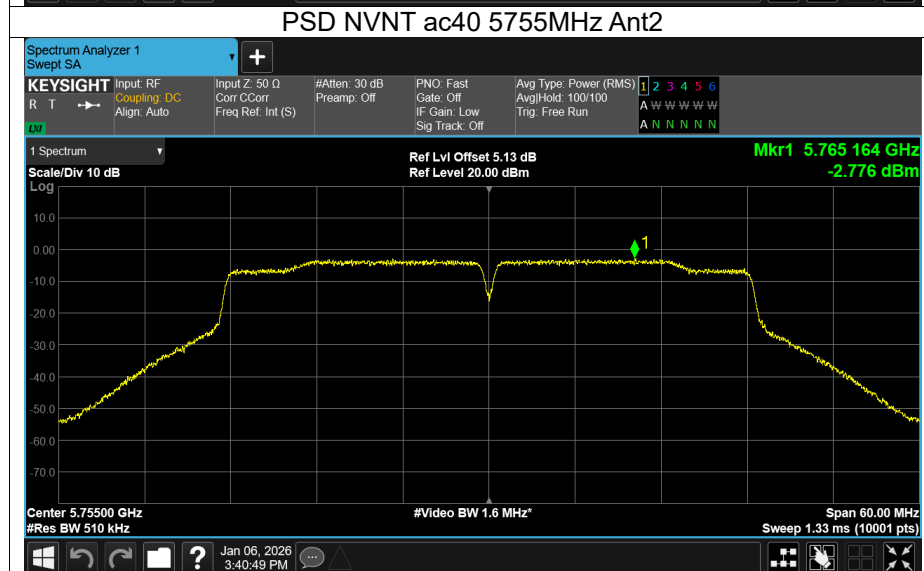
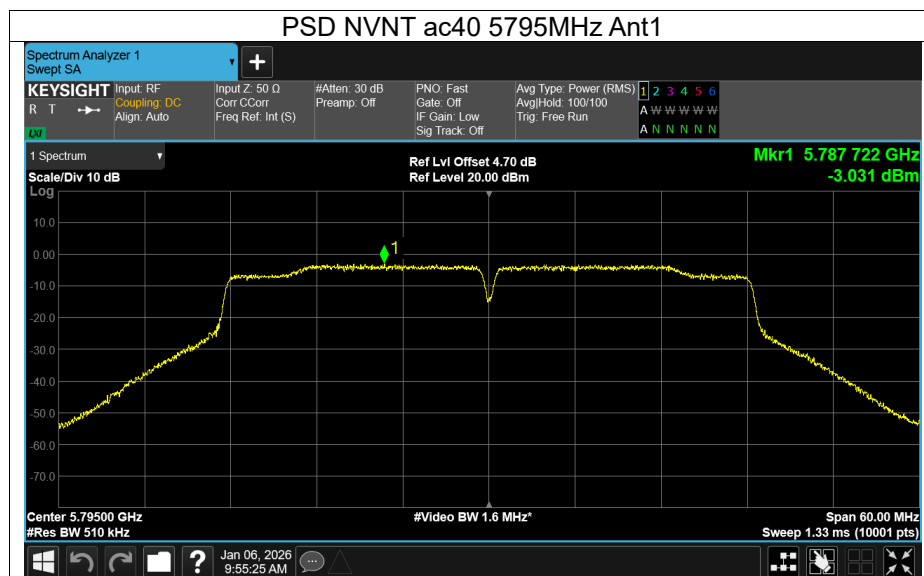
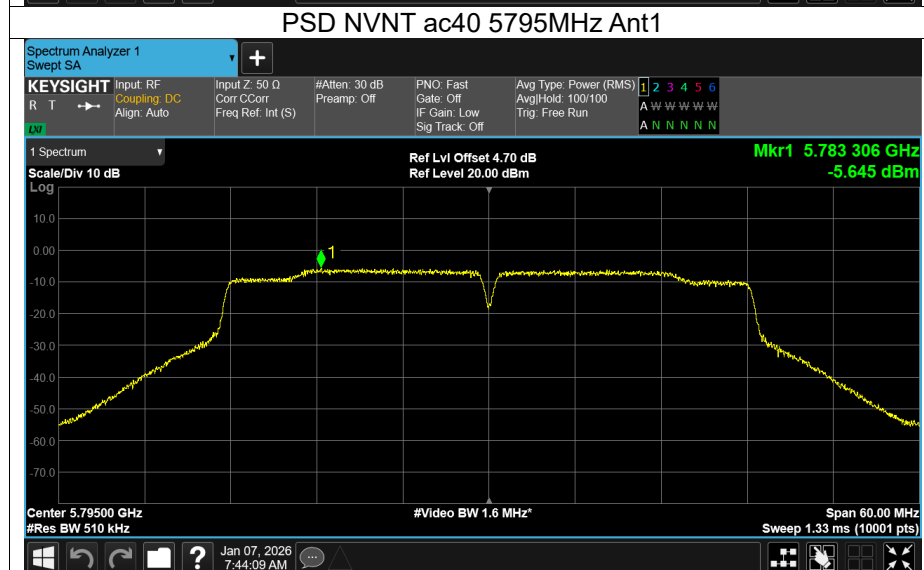


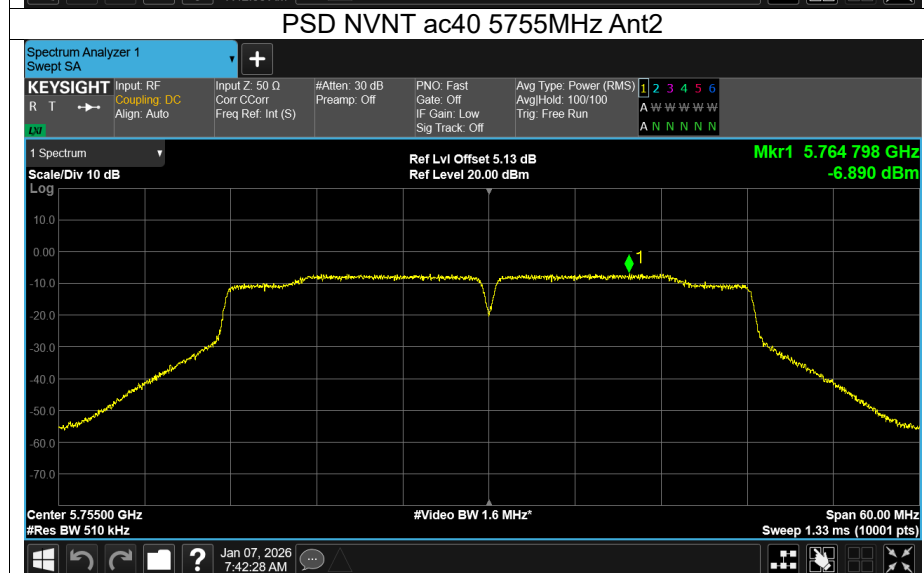




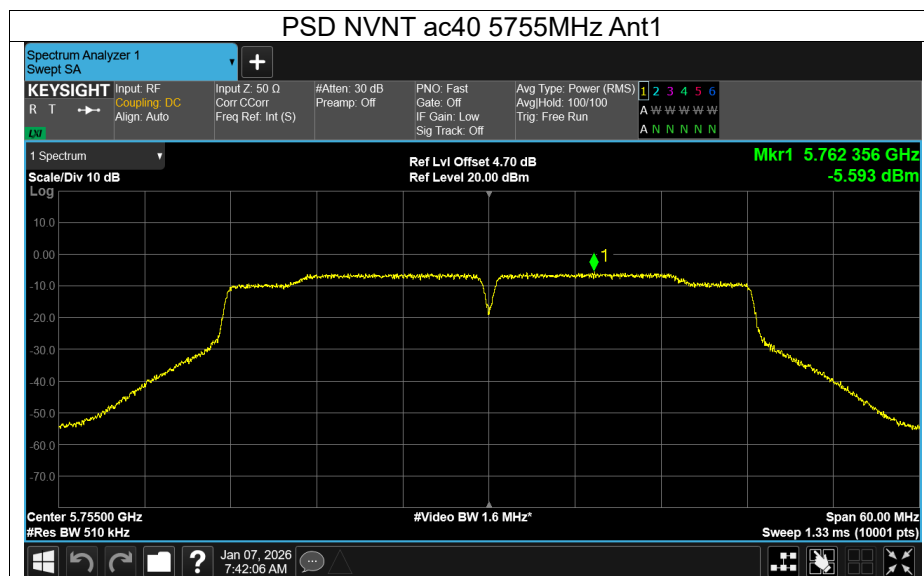




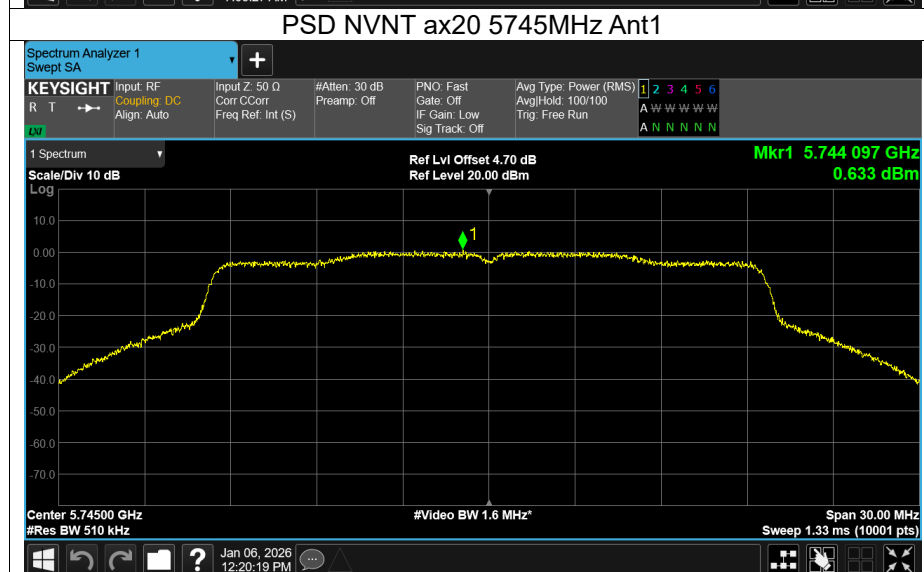




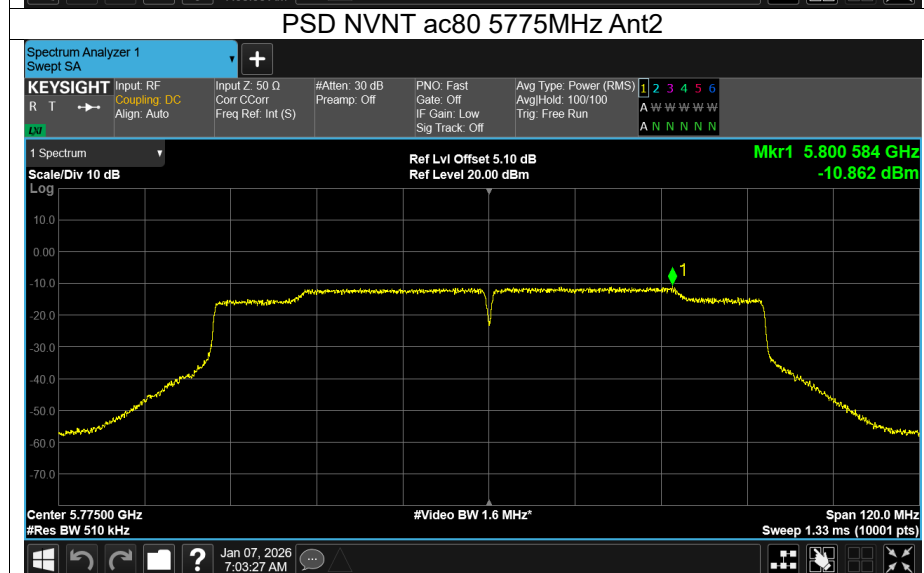




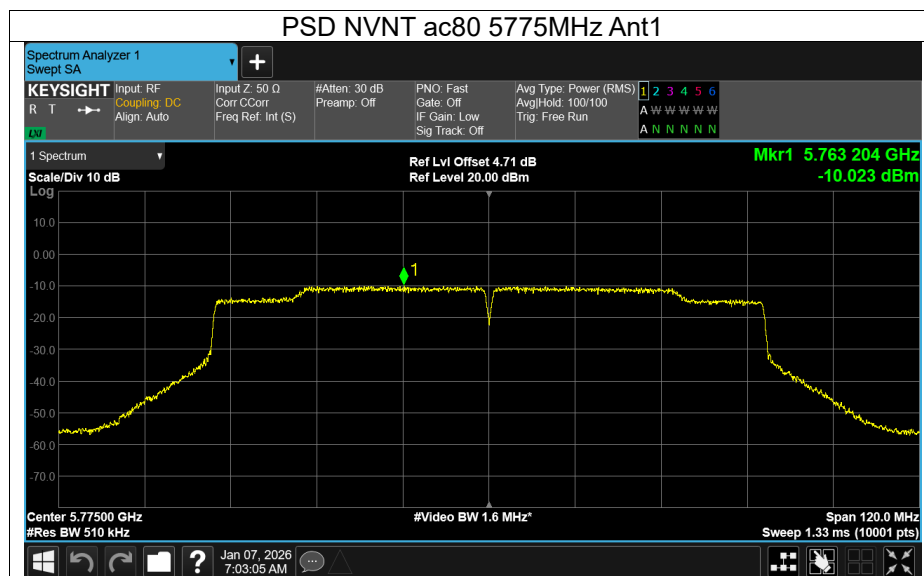




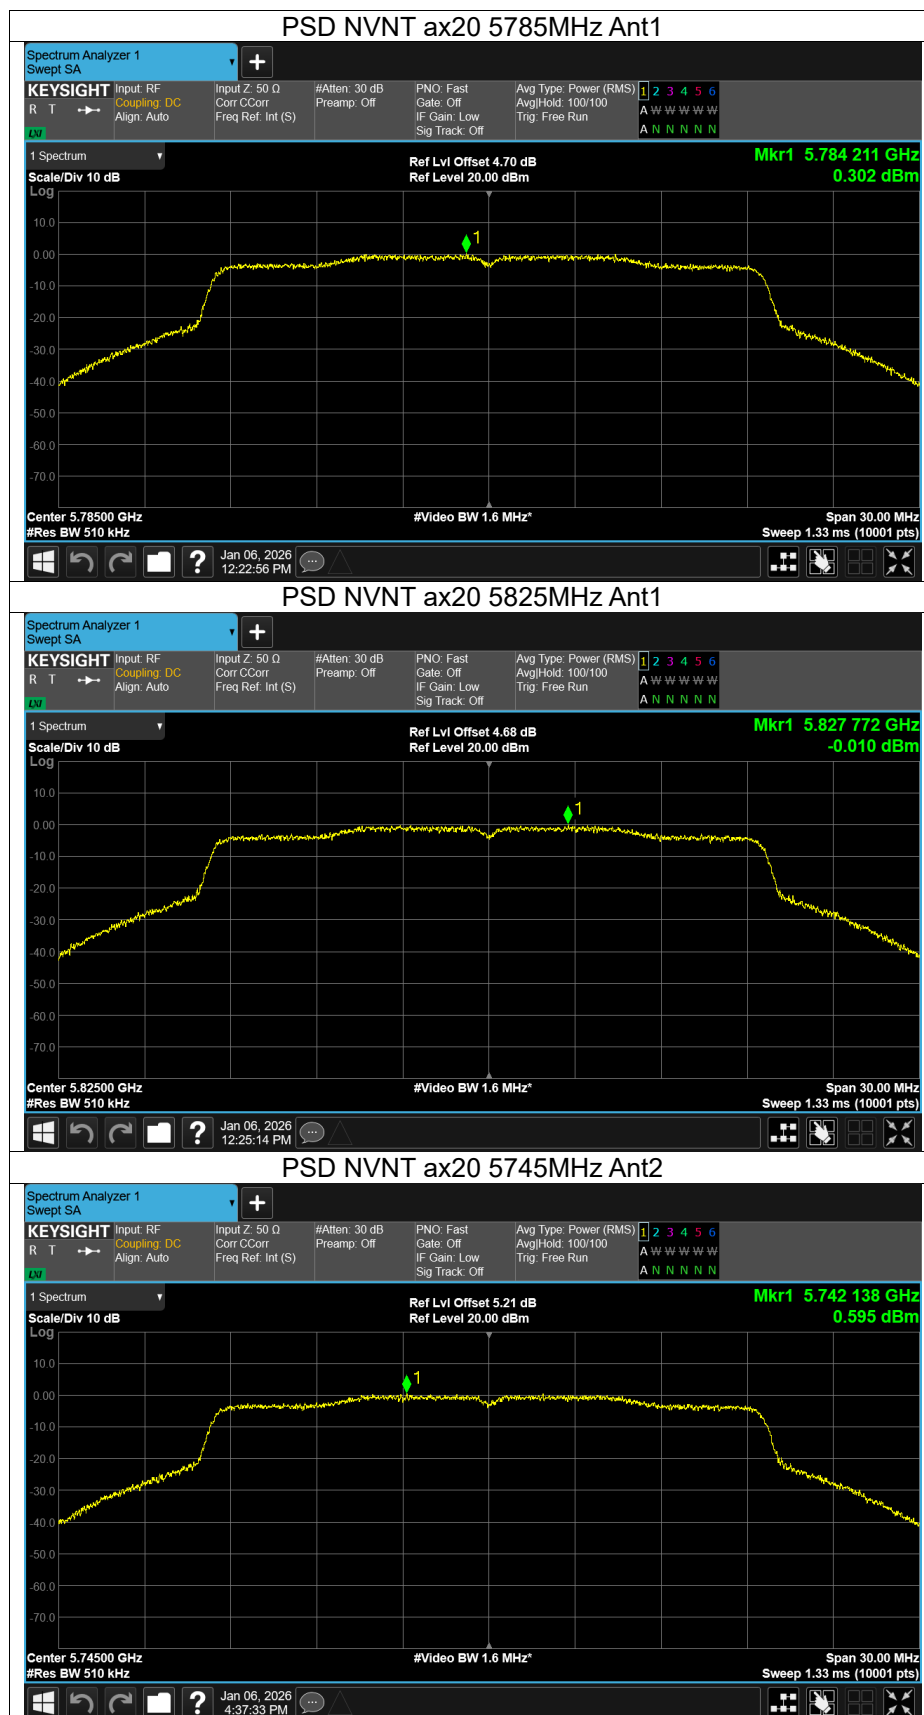


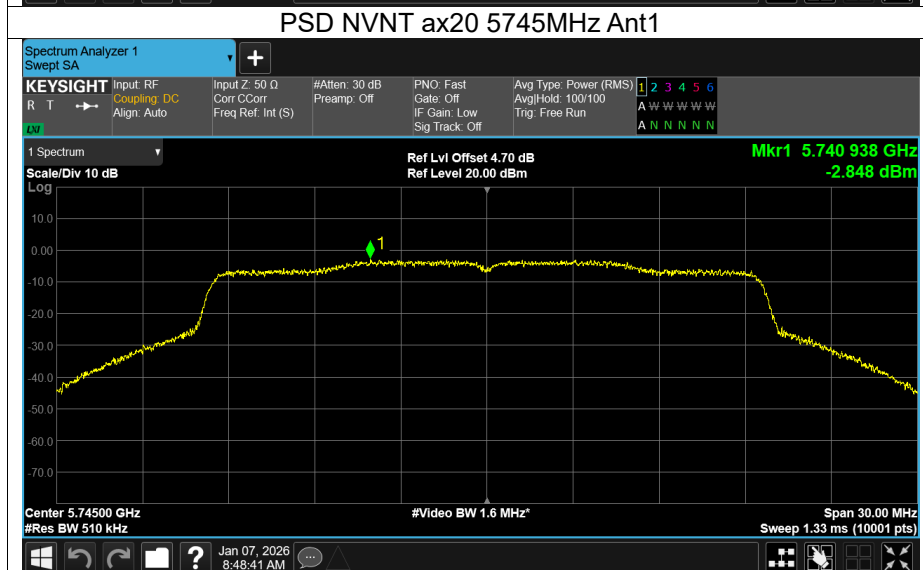
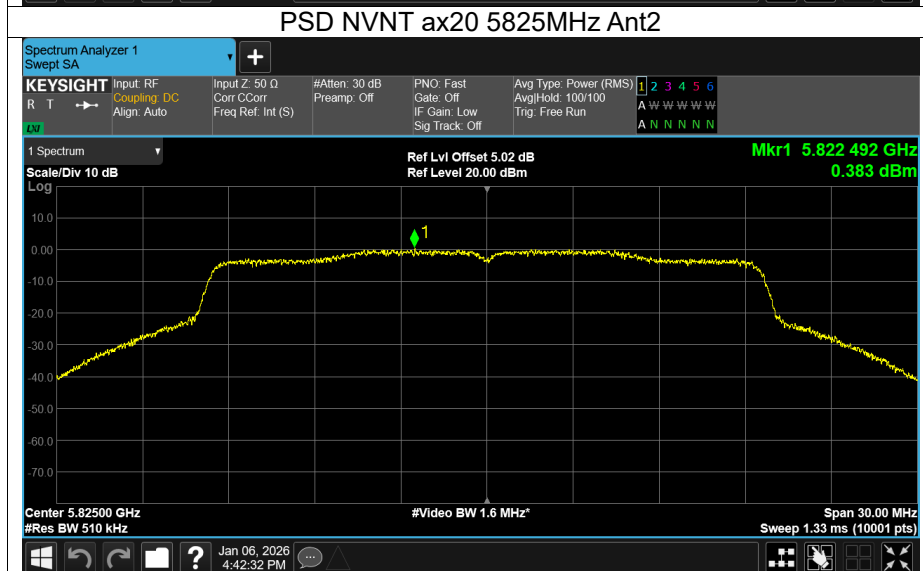
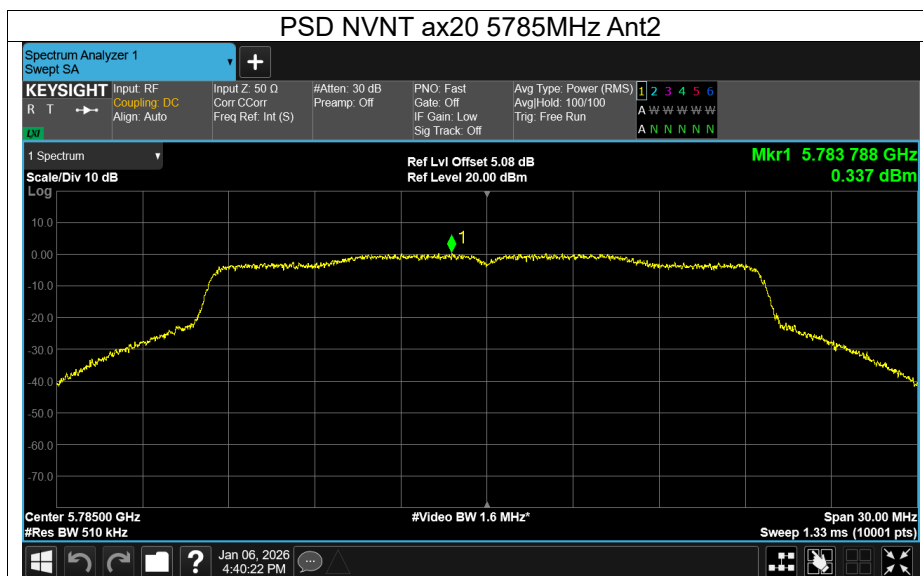


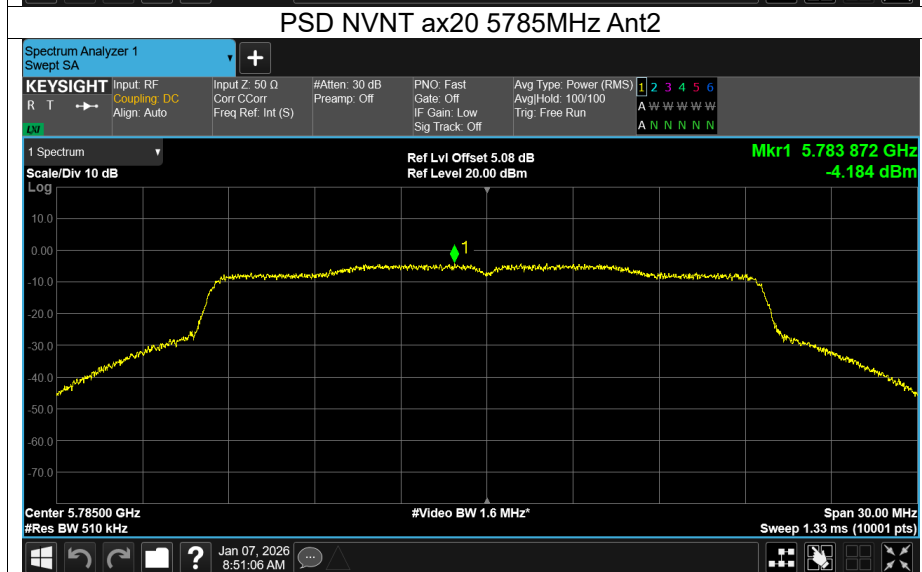
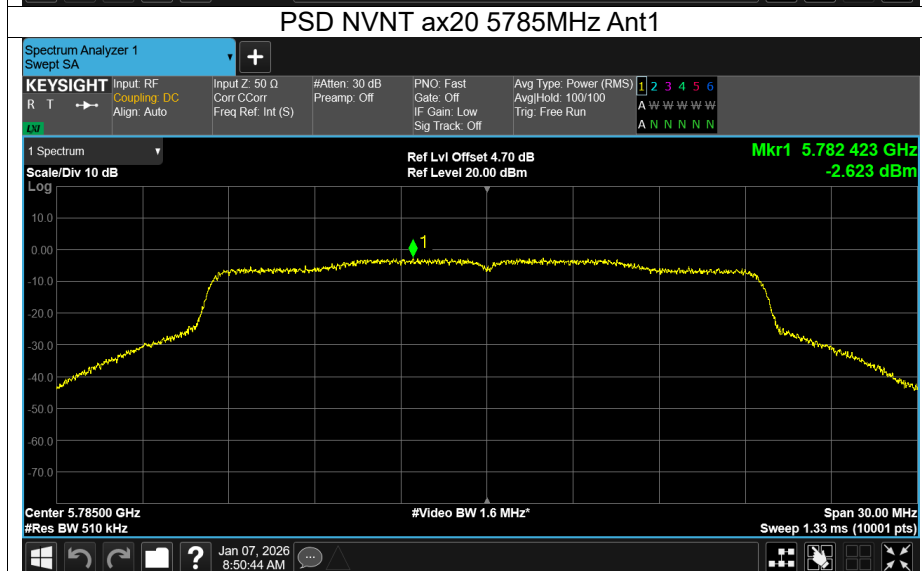
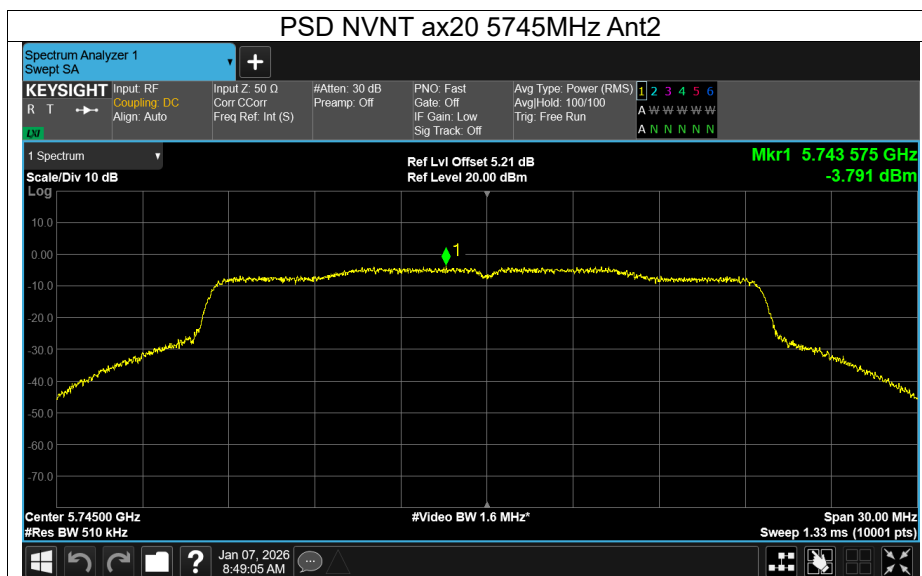


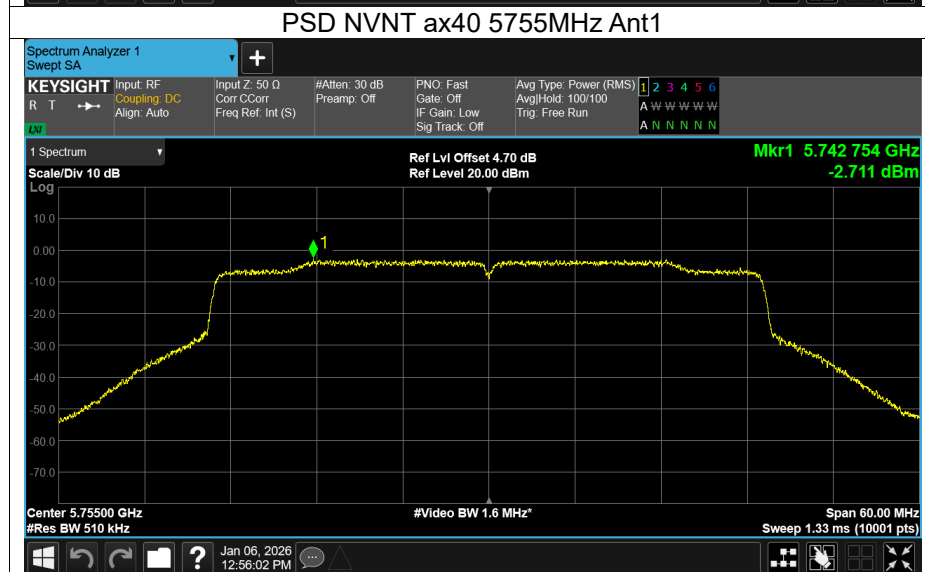
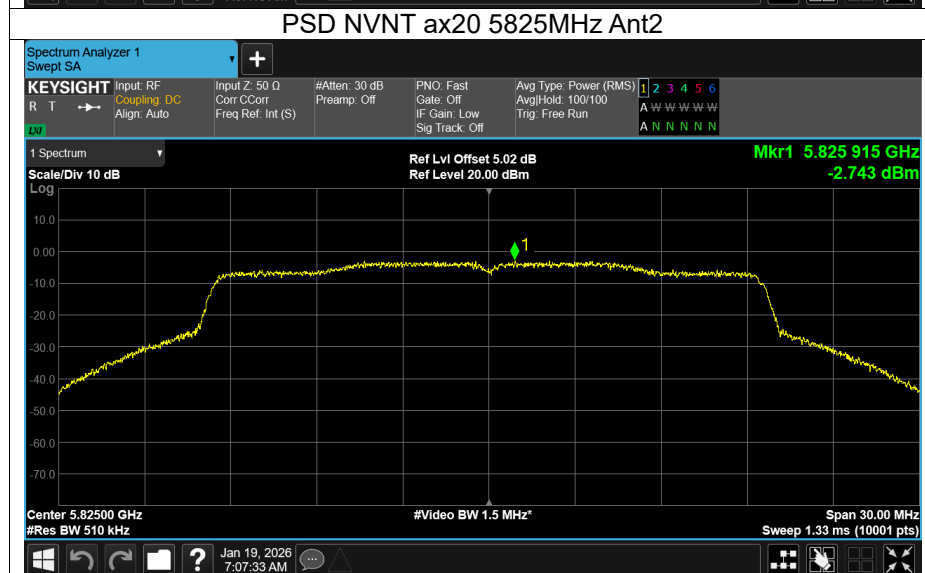
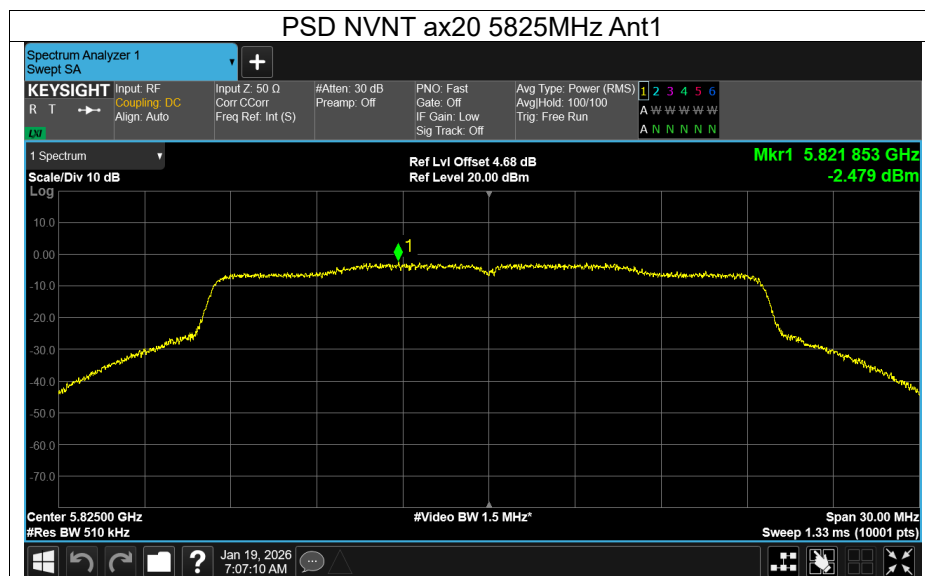


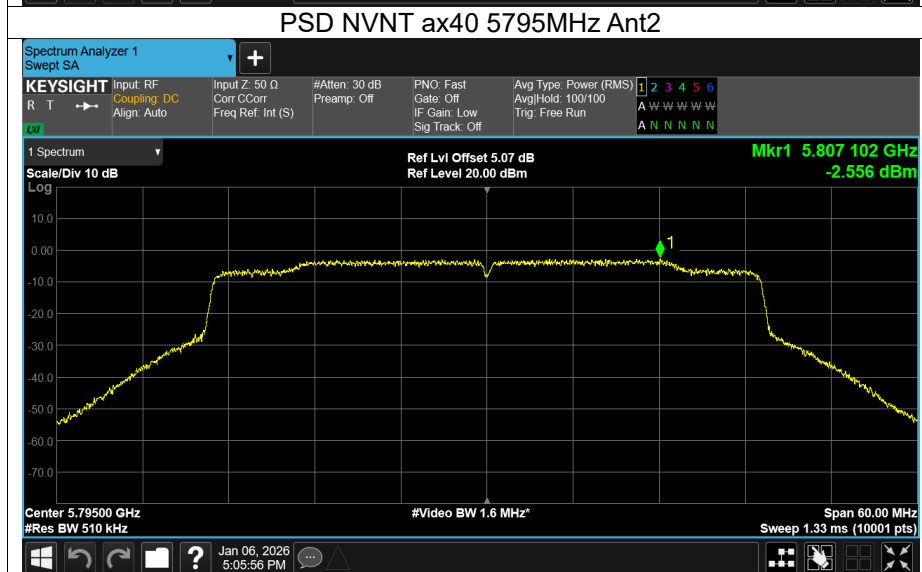
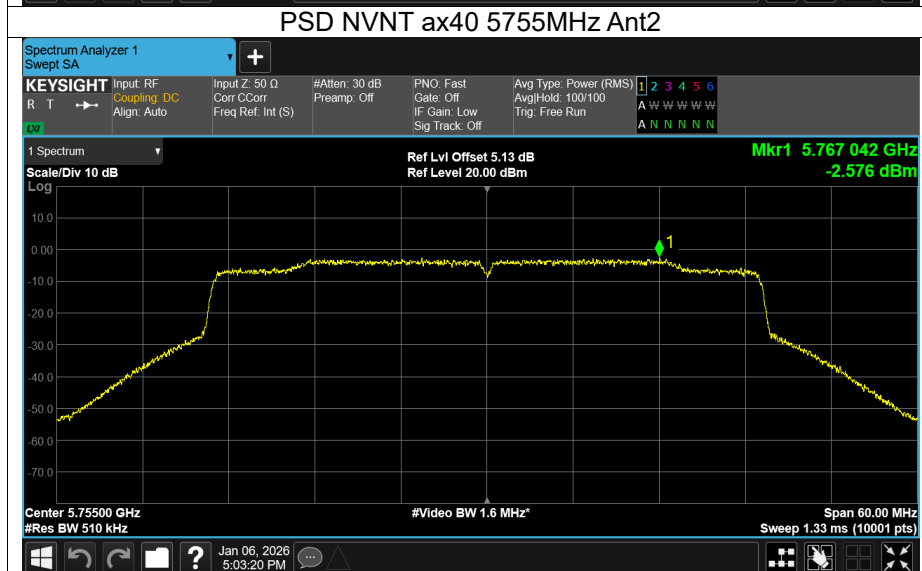
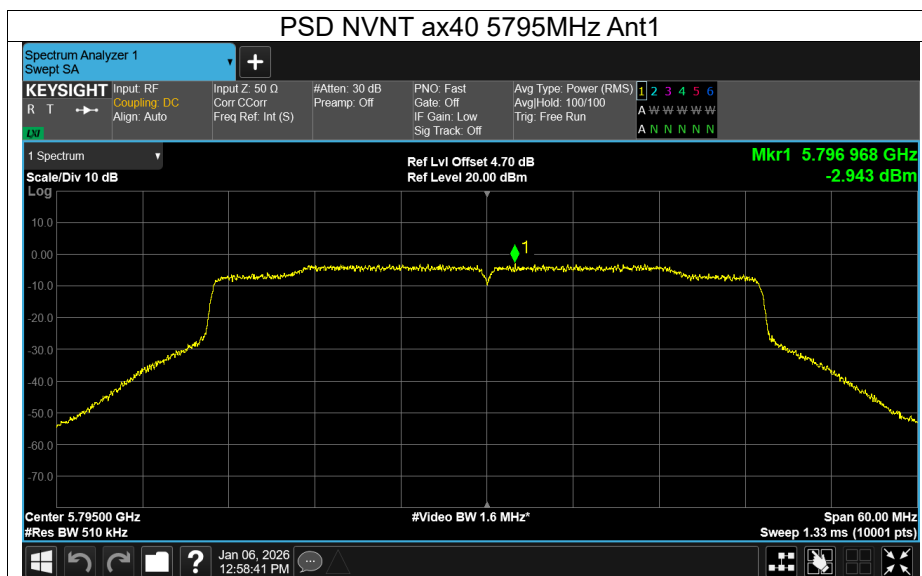


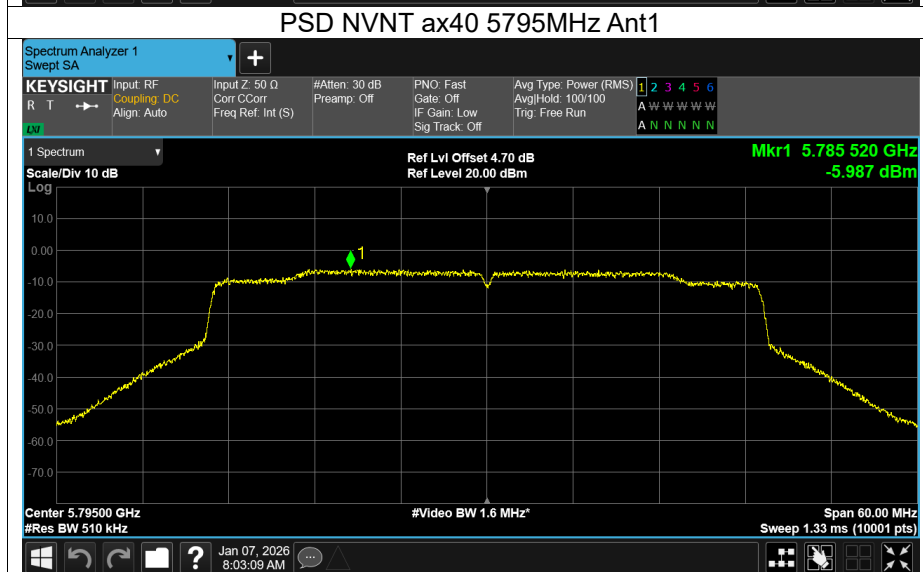
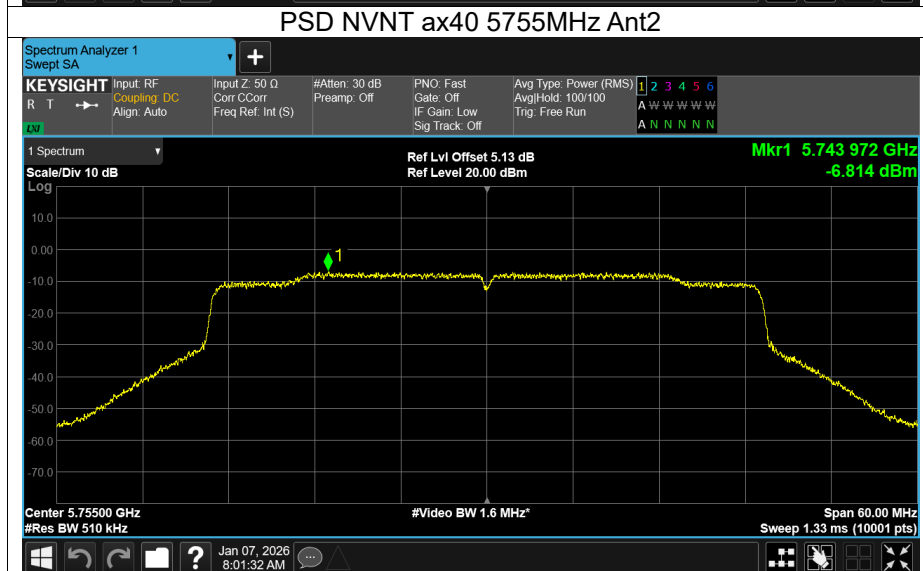
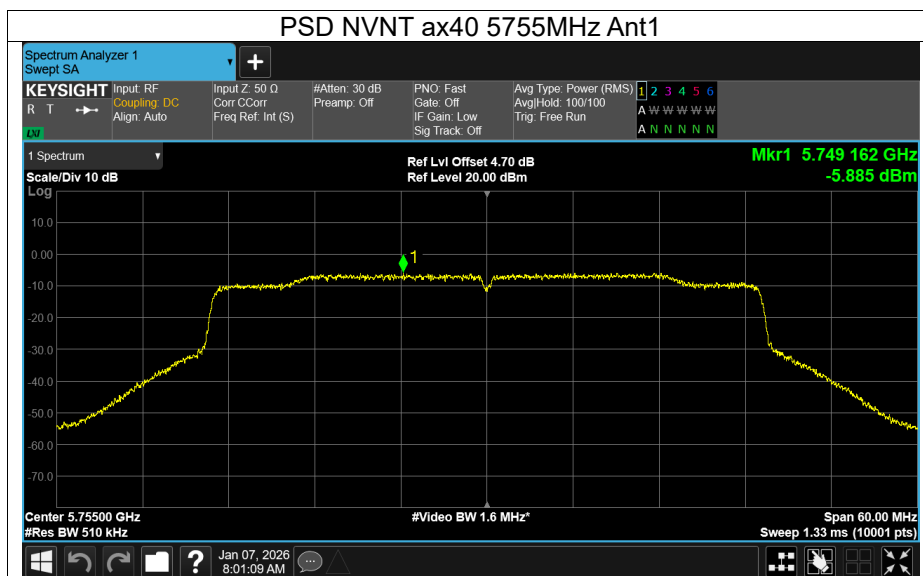


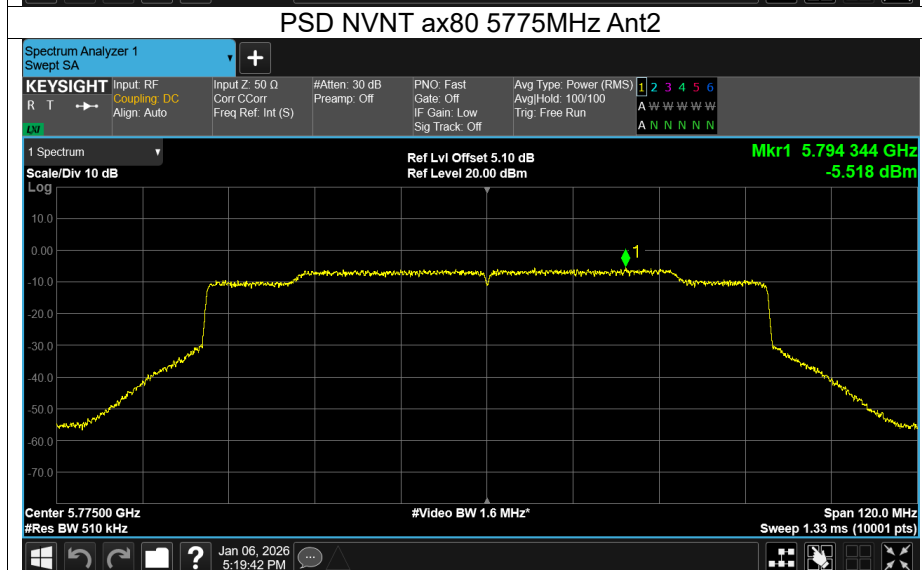
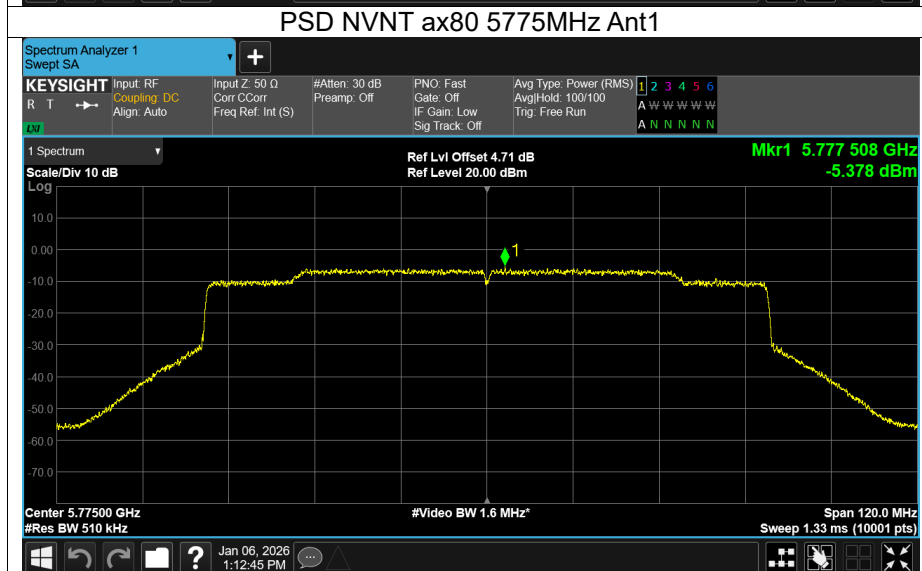
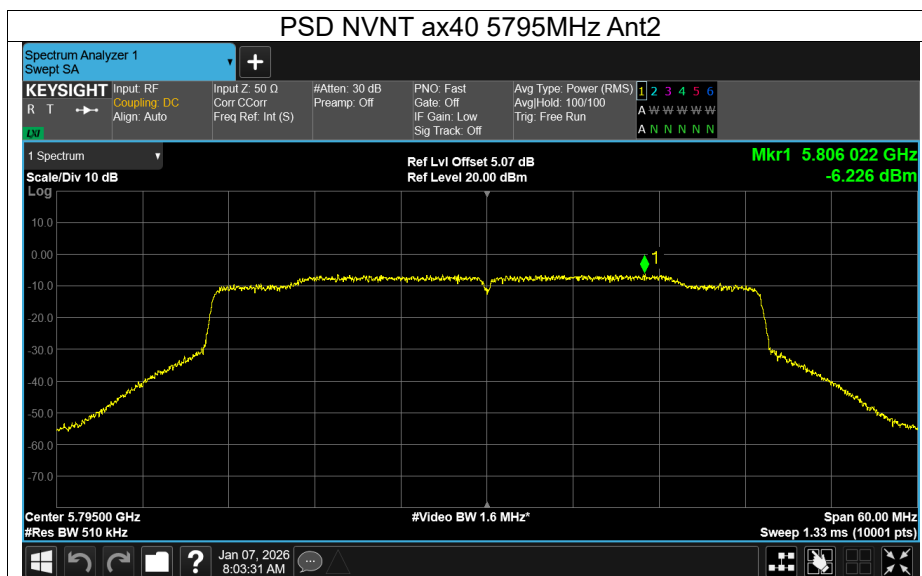


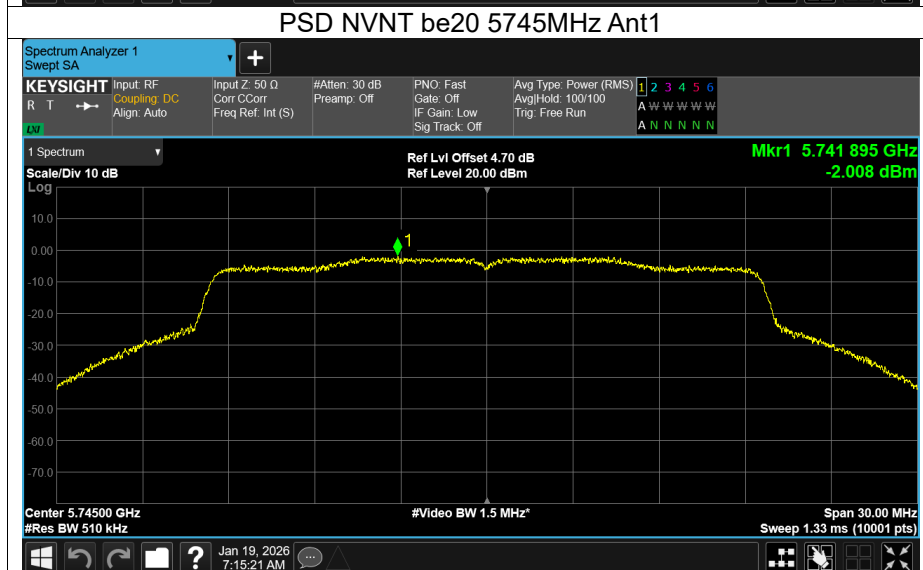
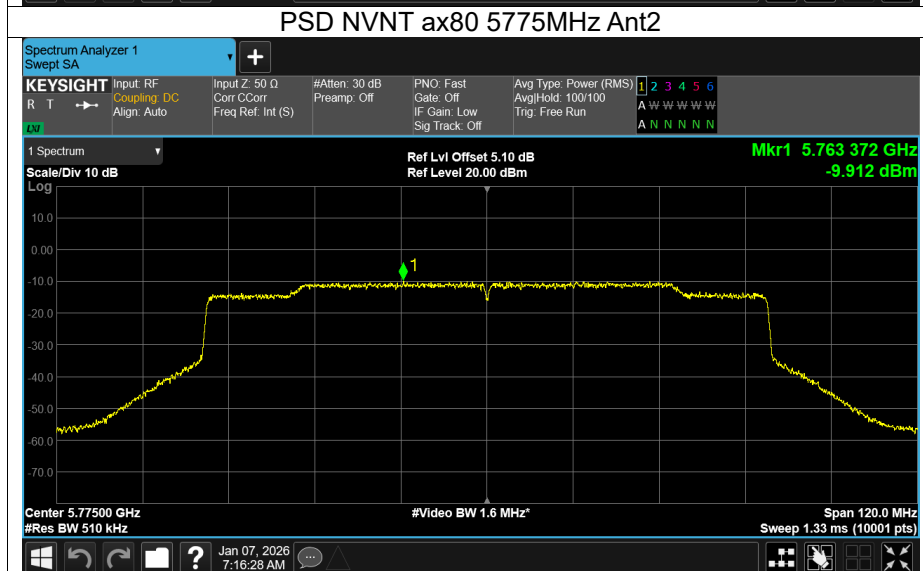
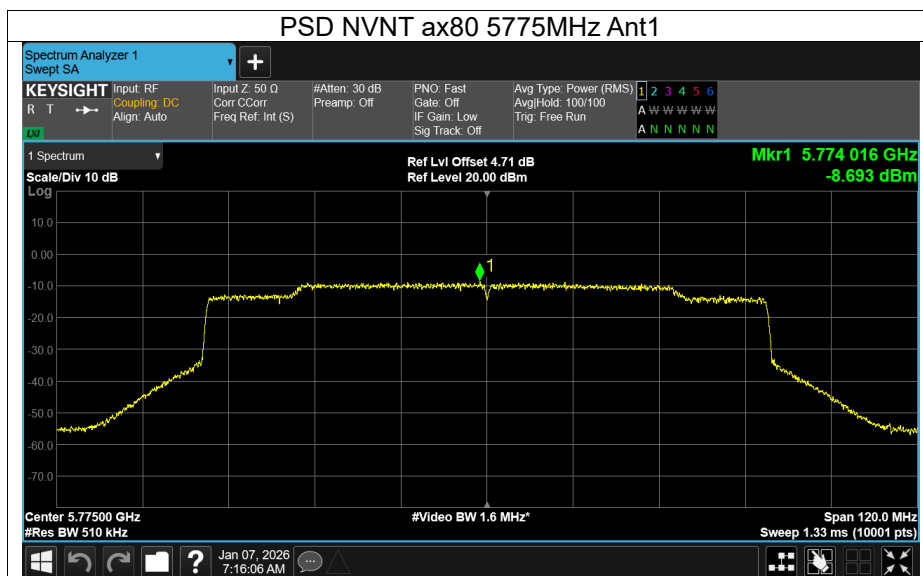


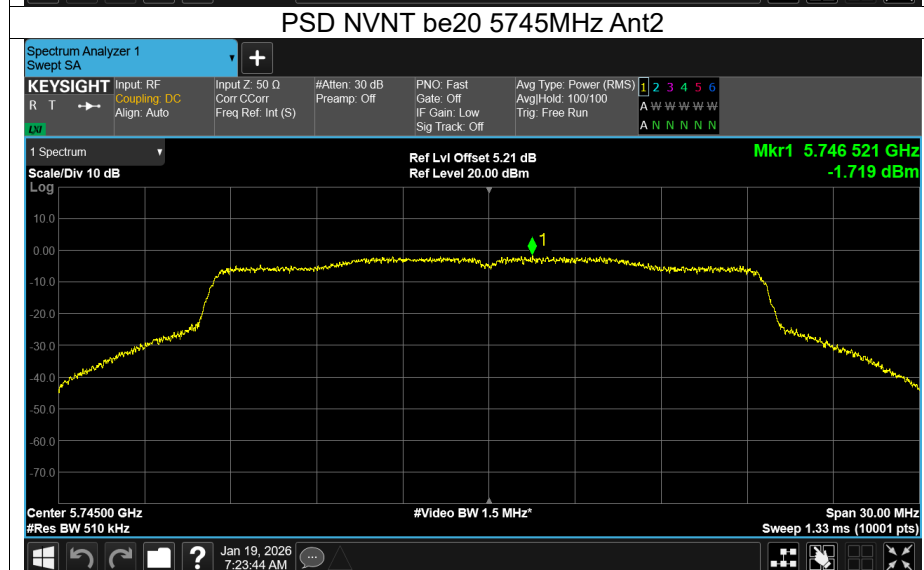
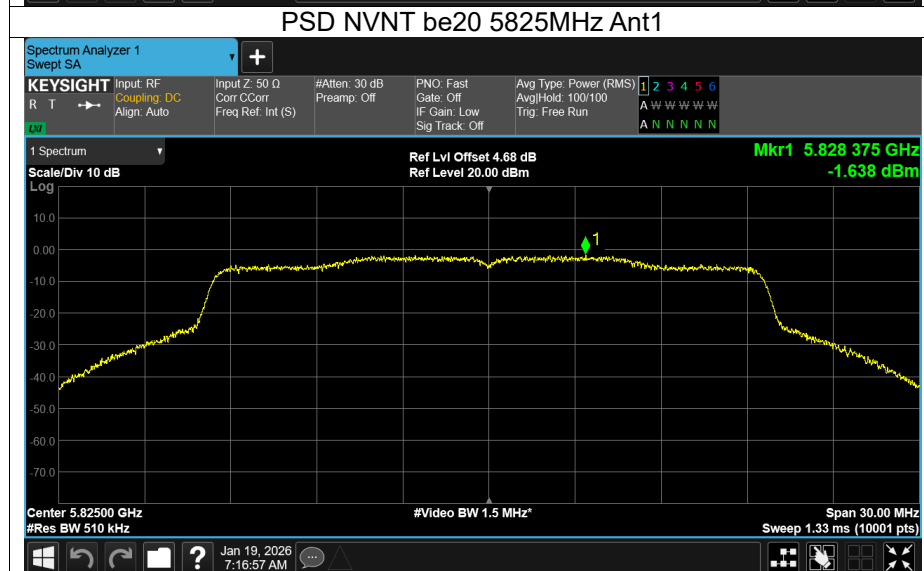
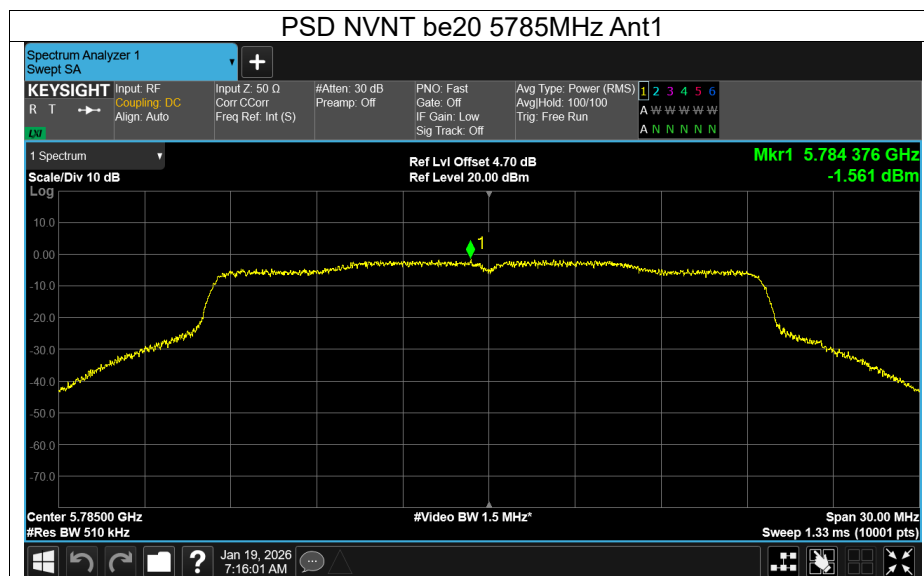


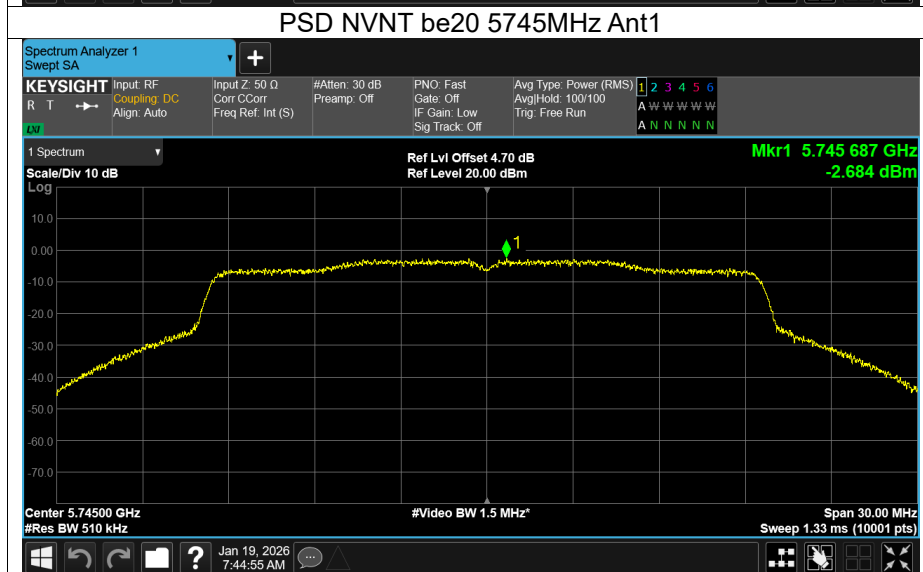
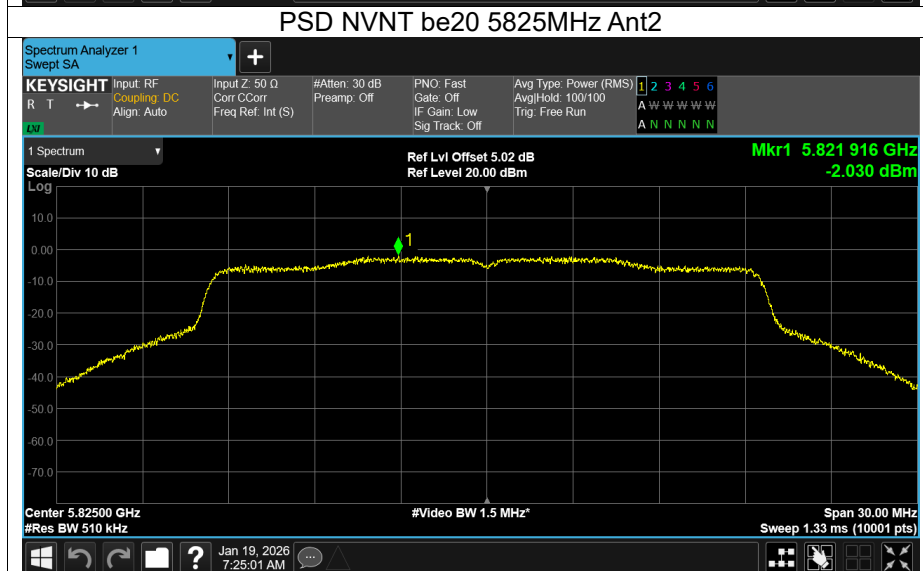
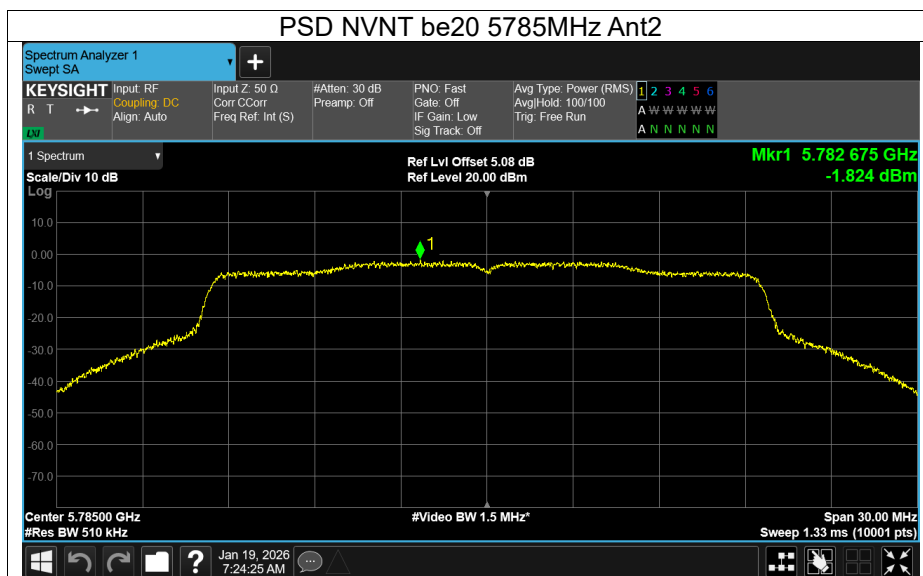


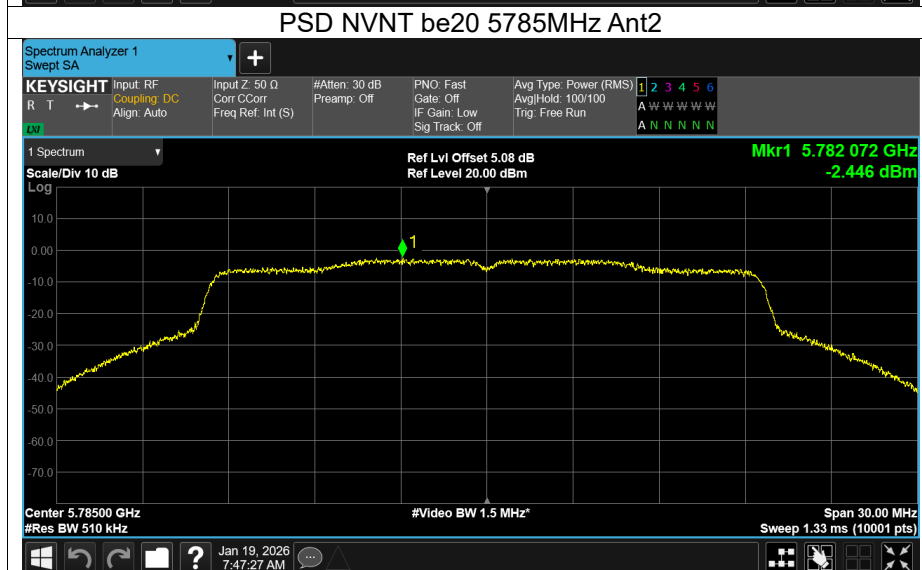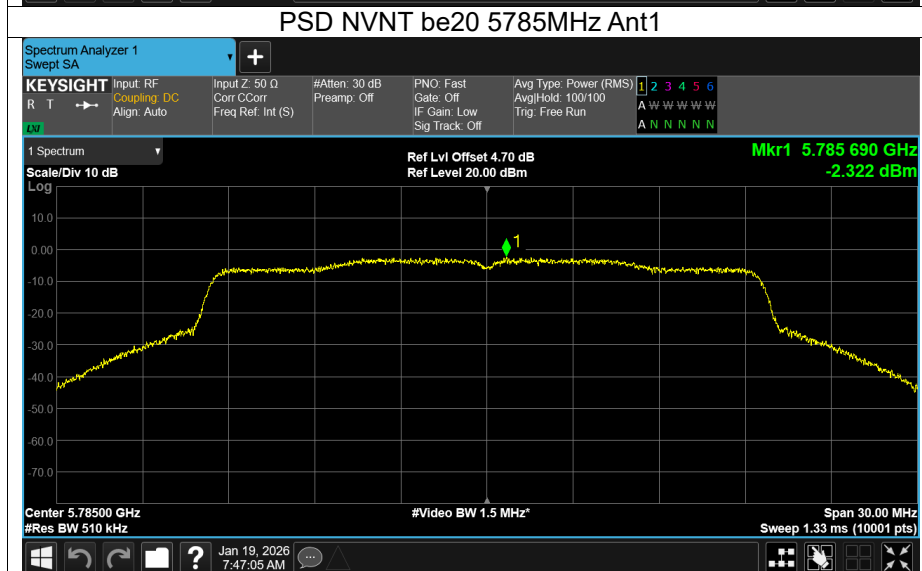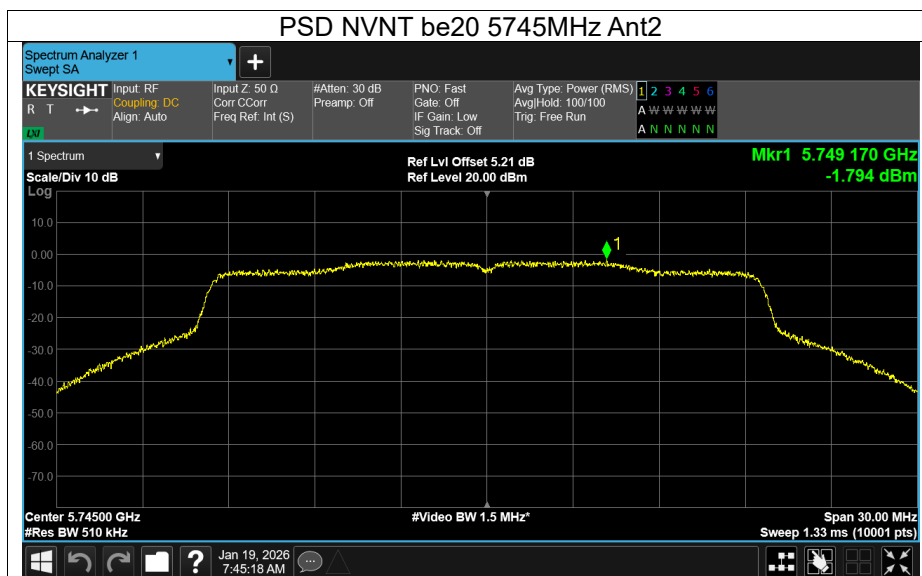

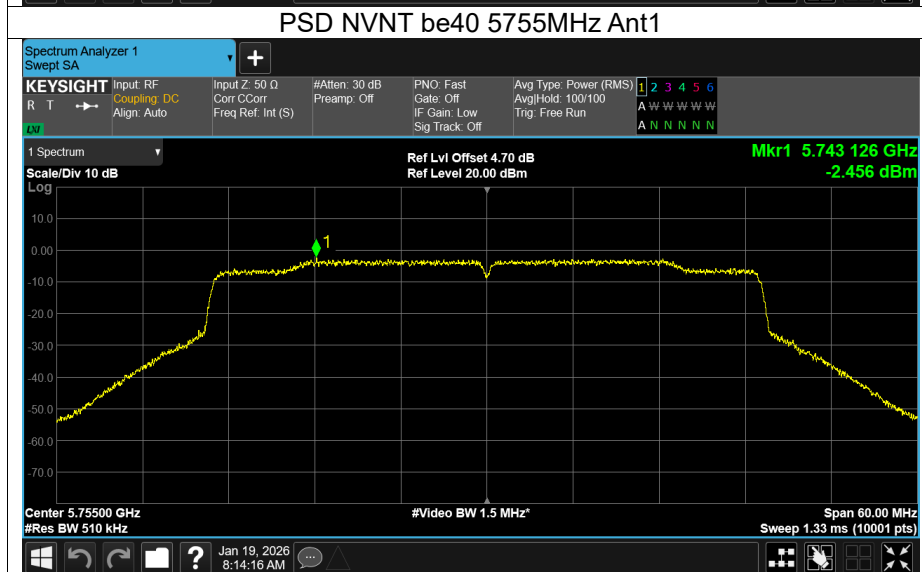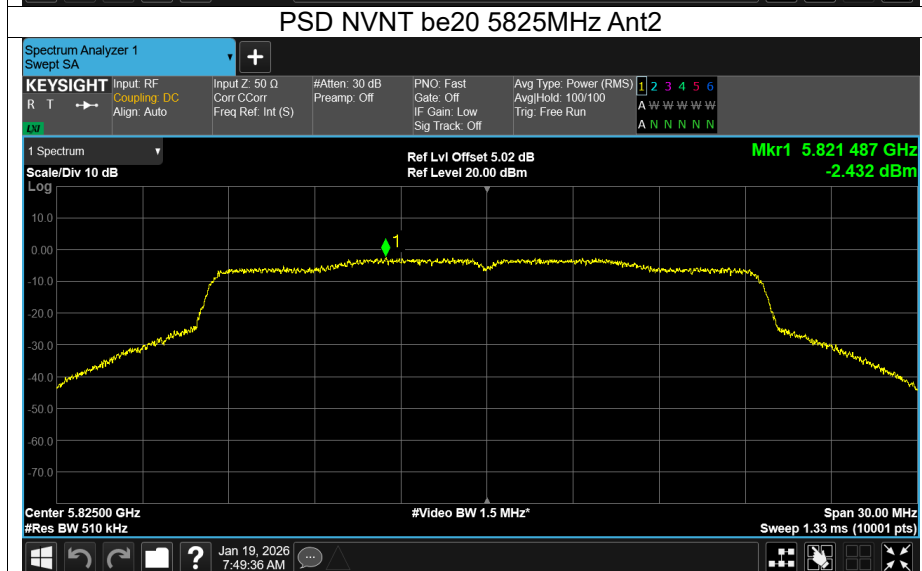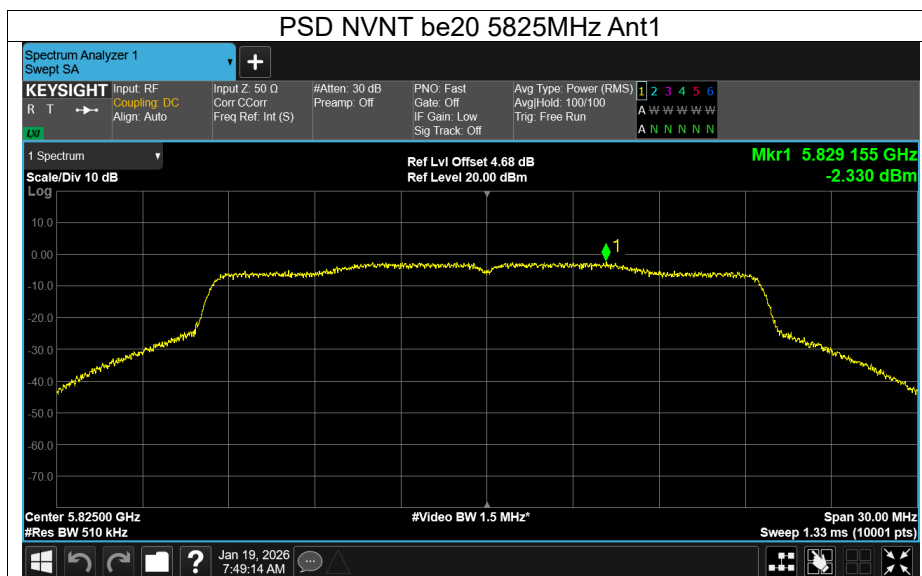

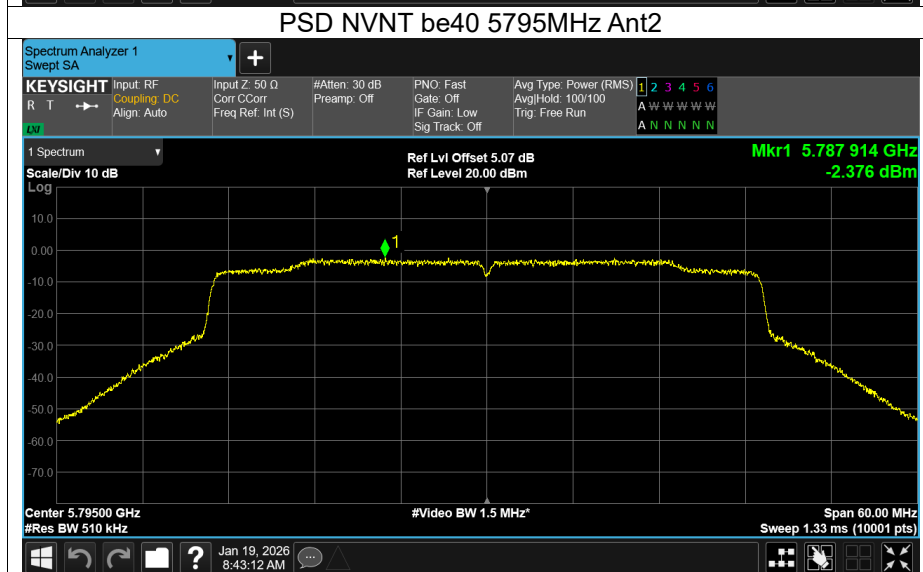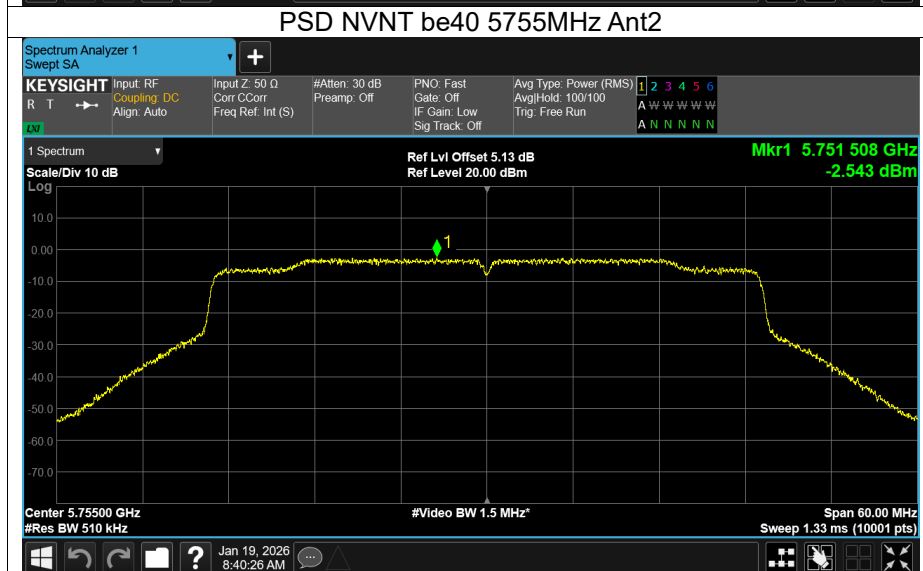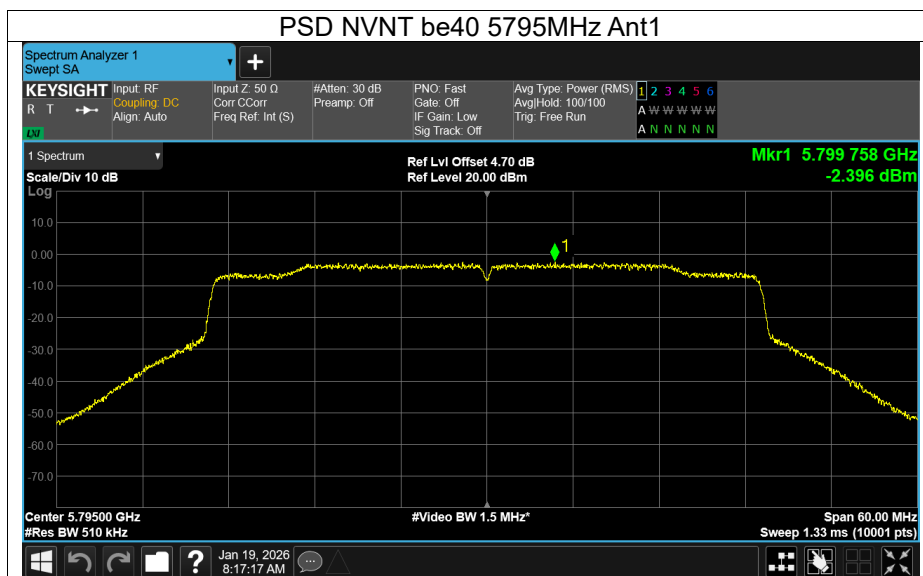

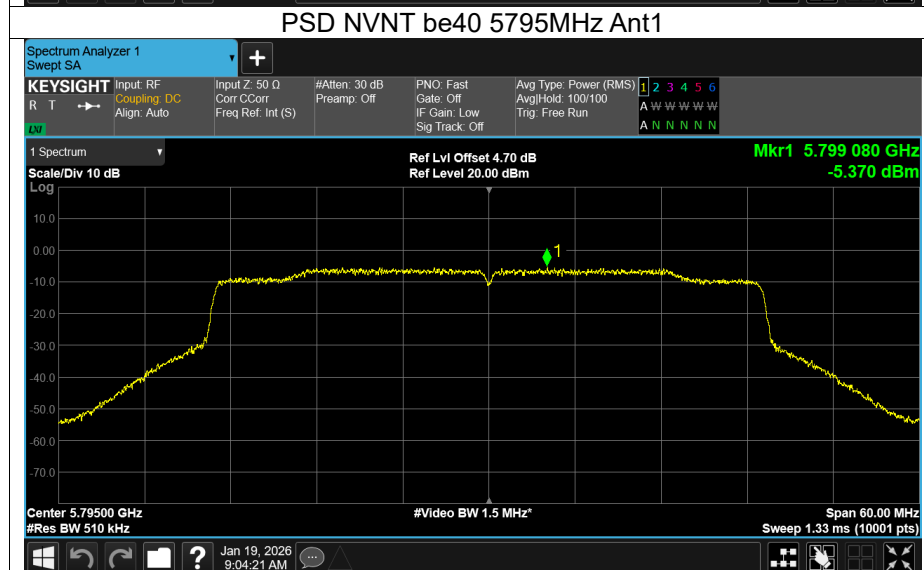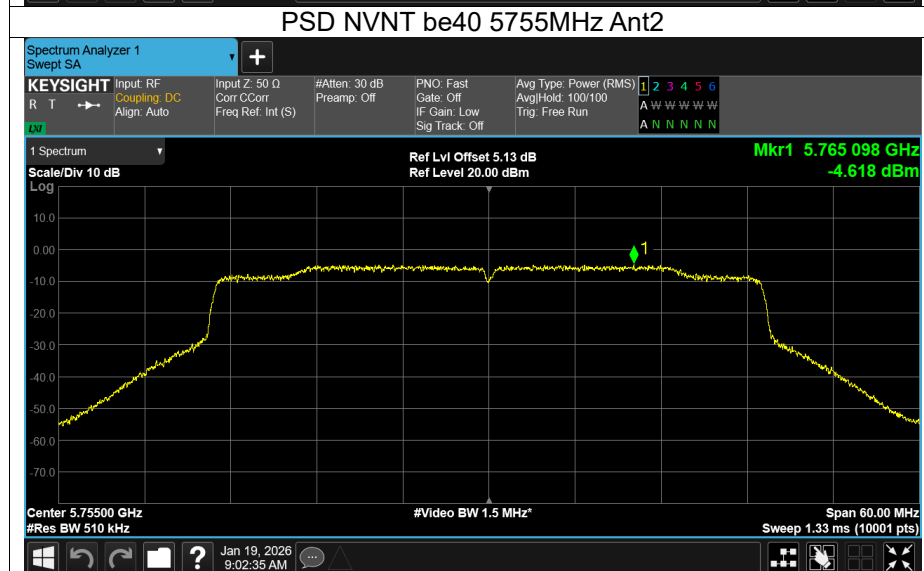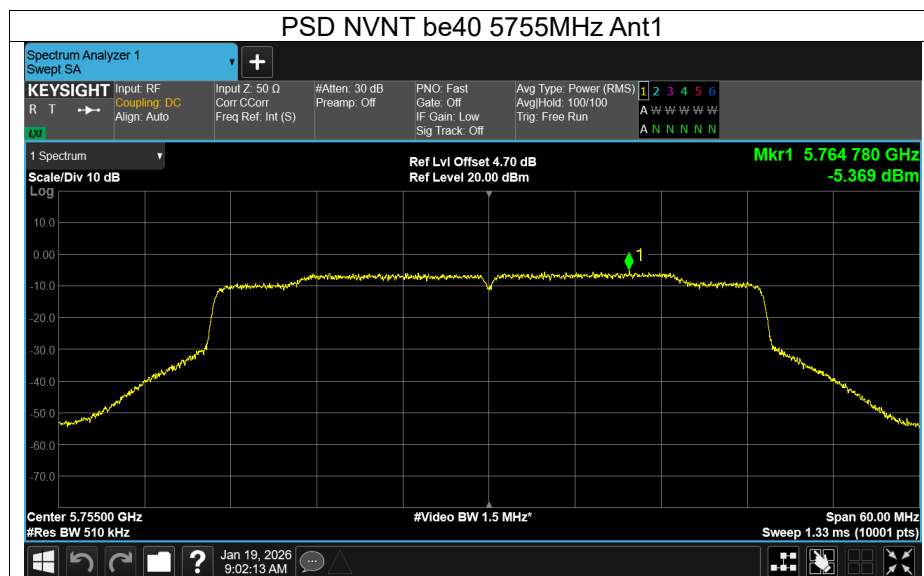

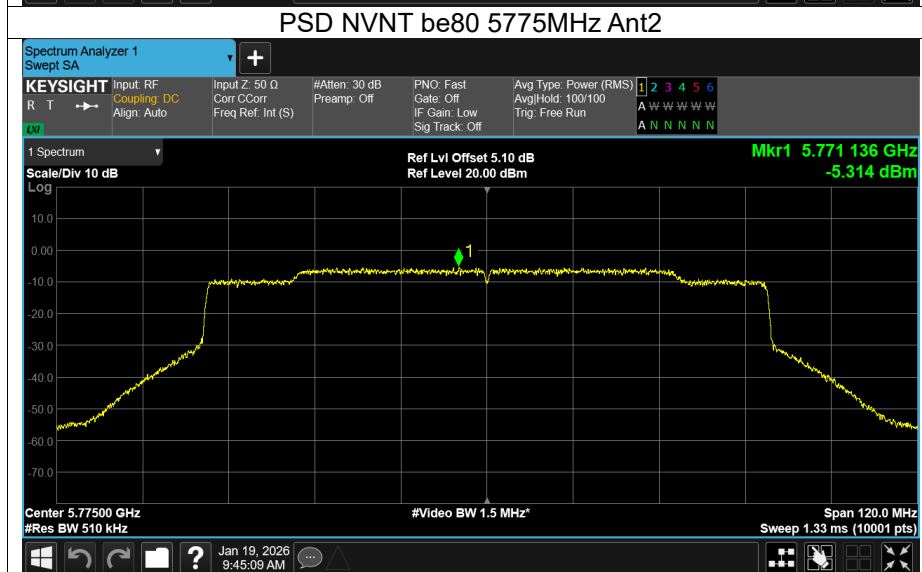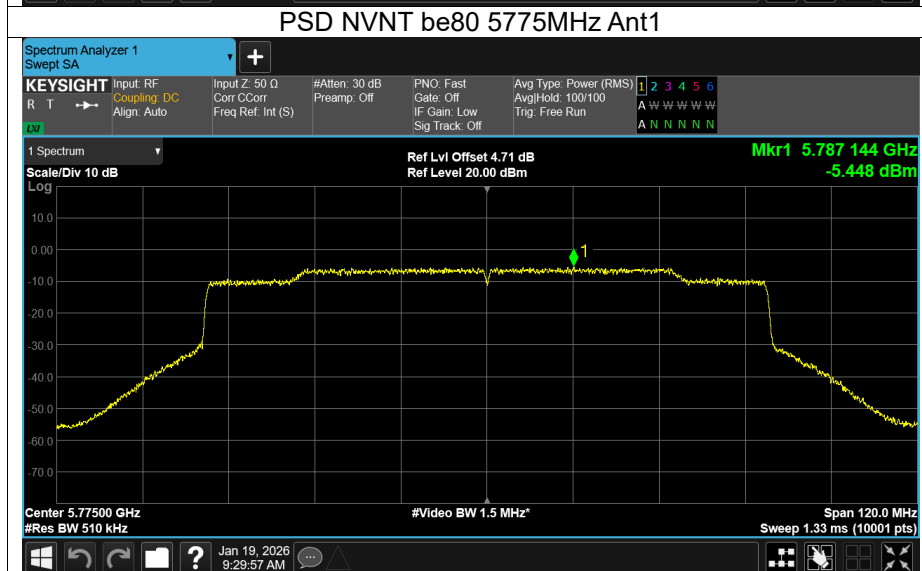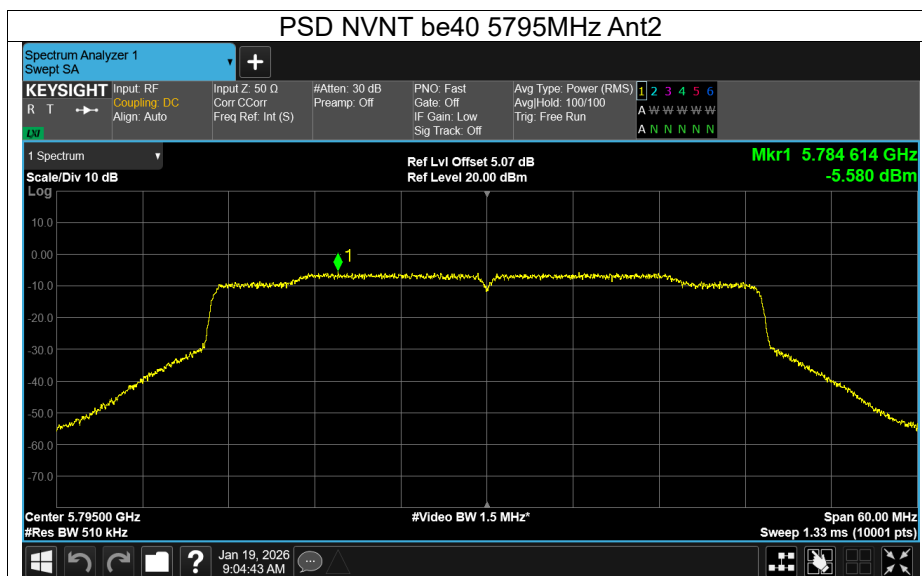





Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	-40.03	-27	Pass
NVNT	a	5240	Ant1	-42.62	-27	Pass
NVNT	a	5260	Ant1	-40.76	-27	Pass
NVNT	a	5320	Ant1	-41.39	-27	Pass
NVNT	a	5500	Ant1	-40.78	-27	Pass
NVNT	a	5700	Ant1	-39.85	-27	Pass
NVNT	a	5180	Ant2	-38.11	-27	Pass
NVNT	a	5240	Ant2	-40.12	-27	Pass
NVNT	a	5260	Ant2	-39.42	-27	Pass
NVNT	a	5320	Ant2	-40.91	-27	Pass
NVNT	a	5500	Ant2	-40.29	-27	Pass
NVNT	a	5700	Ant2	-39.61	-27	Pass
NVNT	n20	5180	Ant1	-39.87	-27	Pass
NVNT	n20	5240	Ant1	-42.24	-27	Pass
NVNT	n20	5260	Ant1	-40.13	-27	Pass
NVNT	n20	5320	Ant1	-40.81	-27	Pass
NVNT	n20	5500	Ant1	-40.41	-27	Pass
NVNT	n20	5700	Ant1	-39.73	-27	Pass
NVNT	n20	5180	Ant2	-39.45	-27	Pass
NVNT	n20	5240	Ant2	-41.7	-27	Pass
NVNT	n20	5260	Ant2	-38.95	-27	Pass
NVNT	n20	5320	Ant2	-41.31	-27	Pass
NVNT	n20	5500	Ant2	-40.61	-27	Pass
NVNT	n20	5700	Ant2	-39.26	-27	Pass
NVNT	n40	5190	Ant1	-38.65	-27	Pass
NVNT	n40	5230	Ant1	-42.83	-27	Pass
NVNT	n40	5270	Ant1	-40.86	-27	Pass
NVNT	n40	5310	Ant1	-41.03	-27	Pass
NVNT	n40	5510	Ant1	-39.75	-27	Pass
NVNT	n40	5670	Ant1	-39.53	-27	Pass
NVNT	n40	5190	Ant2	-38.29	-27	Pass
NVNT	n40	5230	Ant2	-41.03	-27	Pass
NVNT	n40	5270	Ant2	-39.86	-27	Pass
NVNT	n40	5310	Ant2	-40.41	-27	Pass
NVNT	n40	5510	Ant2	-39.86	-27	Pass
NVNT	n40	5670	Ant2	-38.35	-27	Pass
NVNT	ac20	5180	Ant1	-40.2	-27	Pass
NVNT	ac20	5240	Ant1	-42.36	-27	Pass
NVNT	ac20	5260	Ant1	-39.85	-27	Pass
NVNT	ac20	5320	Ant1	-41.29	-27	Pass
NVNT	ac20	5500	Ant1	-41.66	-27	Pass
NVNT	ac20	5700	Ant1	-38.93	-27	Pass
NVNT	ac20	5180	Ant2	-39.68	-27	Pass
NVNT	ac20	5240	Ant2	-42	-27	Pass
NVNT	ac20	5260	Ant2	-39.78	-27	Pass
NVNT	ac20	5320	Ant2	-40.2	-27	Pass
NVNT	ac20	5500	Ant2	-40.72	-27	Pass
NVNT	ac20	5700	Ant2	-40.35	-27	Pass
NVNT	ac40	5190	Ant1	-38.96	-27	Pass
NVNT	ac40	5230	Ant1	-41.75	-27	Pass
NVNT	ac40	5270	Ant1	-40.07	-27	Pass
NVNT	ac40	5310	Ant1	-40.46	-27	Pass
NVNT	ac40	5510	Ant1	-40.32	-27	Pass
NVNT	ac40	5670	Ant1	-40.96	-27	Pass
NVNT	ac40	5190	Ant2	-37.89	-27	Pass
NVNT	ac40	5230	Ant2	-42.08	-27	Pass
NVNT	ac40	5270	Ant2	-40.05	-27	Pass
NVNT	ac40	5310	Ant2	-40.28	-27	Pass



NVNT	ac40	5510	Ant2	-35.75	-27	Pass
NVNT	ac40	5670	Ant2	-38.92	-27	Pass
NVNT	ac80	5210	Ant1	-39.55	-27	Pass
NVNT	ac80	5290	Ant1	-42.33	-27	Pass
NVNT	ac80	5530	Ant1	-41.04	-27	Pass
NVNT	ac80	5610	Ant1	-41.02	-27	Pass
NVNT	ac80	5210	Ant2	-38.77	-27	Pass
NVNT	ac80	5290	Ant2	-40.83	-27	Pass
NVNT	ac80	5530	Ant2	-39.96	-27	Pass
NVNT	ac80	5610	Ant2	-41	-27	Pass
NVNT	ac160	5250	Ant1	-40.29	-27	Pass
NVNT	ac160	5570	Ant1	-39.22	-27	Pass
NVNT	ac160	5250	Ant2	-39.17	-27	Pass
NVNT	ac160	5570	Ant2	-39.32	-27	Pass
NVNT	ax20	5180	Ant1	-39.51	-27	Pass
NVNT	ax20	5240	Ant1	-42.34	-27	Pass
NVNT	ax20	5260	Ant1	-39.99	-27	Pass
NVNT	ax20	5320	Ant1	-41.77	-27	Pass
NVNT	ax20	5500	Ant1	-39.94	-27	Pass
NVNT	ax20	5700	Ant1	-38.76	-27	Pass
NVNT	ax20	5180	Ant2	-39.88	-27	Pass
NVNT	ax20	5240	Ant2	-42.37	-27	Pass
NVNT	ax20	5260	Ant2	-39.6	-27	Pass
NVNT	ax20	5320	Ant2	-40.58	-27	Pass
NVNT	ax20	5500	Ant2	-39.62	-27	Pass
NVNT	ax20	5700	Ant2	-39.8	-27	Pass
NVNT	ax40	5190	Ant1	-38.23	-27	Pass
NVNT	ax40	5230	Ant1	-42.67	-27	Pass
NVNT	ax40	5270	Ant1	-39.54	-27	Pass
NVNT	ax40	5310	Ant1	-41.34	-27	Pass
NVNT	ax40	5510	Ant1	-38.88	-27	Pass
NVNT	ax40	5670	Ant1	-39.93	-27	Pass
NVNT	ax40	5190	Ant2	-38.85	-27	Pass
NVNT	ax40	5230	Ant2	-41.27	-27	Pass
NVNT	ax40	5270	Ant2	-39.44	-27	Pass
NVNT	ax40	5310	Ant2	-40.83	-27	Pass
NVNT	ax40	5510	Ant2	-36.04	-27	Pass
NVNT	ax40	5670	Ant2	-38.99	-27	Pass
NVNT	ax80	5210	Ant1	-39	-27	Pass
NVNT	ax80	5290	Ant1	-41.52	-27	Pass
NVNT	ax80	5530	Ant1	-40.94	-27	Pass
NVNT	ax80	5610	Ant1	-41.35	-27	Pass
NVNT	ax80	5210	Ant2	-39.34	-27	Pass
NVNT	ax80	5290	Ant2	-41.05	-27	Pass
NVNT	ax80	5530	Ant2	-41.42	-27	Pass
NVNT	ax80	5610	Ant2	-41.52	-27	Pass
NVNT	ax160	5250	Ant1	-39.42	-27	Pass
NVNT	ax160	5570	Ant1	-41.19	-27	Pass
NVNT	ax160	5250	Ant2	-39.45	-27	Pass
NVNT	ax160	5570	Ant2	-40.62	-27	Pass
NVNT	be20	5180	Ant1	-38.83	-27	Pass
NVNT	be20	5240	Ant1	-41.12	-27	Pass
NVNT	be20	5260	Ant1	-39.71	-27	Pass
NVNT	be20	5320	Ant1	-40.87	-27	Pass
NVNT	be20	5500	Ant1	-41.41	-27	Pass
NVNT	be20	5700	Ant1	-37.49	-27	Pass
NVNT	be20	5180	Ant2	-38.64	-27	Pass
NVNT	be20	5240	Ant2	-41.29	-27	Pass
NVNT	be20	5260	Ant2	-39.58	-27	Pass
NVNT	be20	5320	Ant2	-39.72	-27	Pass
NVNT	be20	5500	Ant2	-39.97	-27	Pass



NVNT	be20	5700	Ant2	-38.58	-27	Pass
NVNT	be40	5190	Ant1	-35.03	-27	Pass
NVNT	be40	5230	Ant1	-41.73	-27	Pass
NVNT	be40	5270	Ant1	-39.68	-27	Pass
NVNT	be40	5310	Ant1	-40.16	-27	Pass
NVNT	be40	5510	Ant1	-38.93	-27	Pass
NVNT	be40	5670	Ant1	-38.74	-27	Pass
NVNT	be40	5190	Ant2	-37.21	-27	Pass
NVNT	be40	5230	Ant2	-40.61	-27	Pass
NVNT	be40	5270	Ant2	-39.97	-27	Pass
NVNT	be40	5310	Ant2	-39.53	-27	Pass
NVNT	be40	5510	Ant2	-41.08	-27	Pass
NVNT	be40	5670	Ant2	-38.68	-27	Pass
NVNT	be80	5210	Ant1	-37.62	-27	Pass
NVNT	be80	5290	Ant1	-40.6	-27	Pass
NVNT	be80	5530	Ant1	-40.77	-27	Pass
NVNT	be80	5610	Ant1	-41.76	-27	Pass
NVNT	be80	5210	Ant2	-37.06	-27	Pass
NVNT	be80	5290	Ant2	-40.23	-27	Pass
NVNT	be80	5530	Ant2	-40.65	-27	Pass
NVNT	be80	5610	Ant2	-40.71	-27	Pass
NVNT	be160	5250	Ant1	-31.73	-27	Pass
NVNT	be160	5570	Ant1	-38.92	-27	Pass
NVNT	be160	5250	Ant2	-35.13	-27	Pass
NVNT	be160	5570	Ant2	-39.52	-27	Pass

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-36.45	15.6	Pass
NVNT	a	5825	Ant1	-39.44	15.6	Pass
NVNT	a	5745	Ant2	-38.82	15.6	Pass
NVNT	a	5825	Ant2	-39.91	15.6	Pass
NVNT	n20	5745	Ant1	-38.89	15.6	Pass
NVNT	n20	5825	Ant1	-39.64	15.6	Pass
NVNT	n20	5745	Ant2	-38	15.6	Pass
NVNT	n20	5825	Ant2	-39.72	15.6	Pass
NVNT	n40	5755	Ant1	-38.56	15.6	Pass
NVNT	n40	5795	Ant1	-40.15	15.6	Pass
NVNT	n40	5755	Ant2	-32.08	15.6	Pass
NVNT	n40	5795	Ant2	-39.8	15.6	Pass
NVNT	ac20	5745	Ant1	-38.38	15.6	Pass
NVNT	ac20	5825	Ant1	-40.62	15.6	Pass
NVNT	ac20	5745	Ant2	-39.21	15.6	Pass
NVNT	ac20	5825	Ant2	-39.02	15.6	Pass
NVNT	ac40	5755	Ant1	-36.51	15.6	Pass
NVNT	ac40	5795	Ant1	-40.11	15.6	Pass
NVNT	ac40	5755	Ant2	-34.62	15.6	Pass
NVNT	ac40	5795	Ant2	-38.92	15.6	Pass
NVNT	ac80	5775	Ant1	-31.25	15.6	Pass
NVNT	ac80	5775	Ant2	-30.37	15.6	Pass
NVNT	ax20	5745	Ant1	-38.68	15.6	Pass
NVNT	ax20	5825	Ant1	-39.73	15.6	Pass
NVNT	ax20	5745	Ant2	-38.42	15.6	Pass
NVNT	ax20	5825	Ant2	-38.94	15.6	Pass
NVNT	ax40	5755	Ant1	-38.93	15.6	Pass
NVNT	ax40	5795	Ant1	-39.99	15.6	Pass
NVNT	ax40	5755	Ant2	-33.7	15.6	Pass
NVNT	ax40	5795	Ant2	-39.25	15.6	Pass
NVNT	ax80	5775	Ant1	-30.12	15.6	Pass
NVNT	ax80	5775	Ant2	-30.12	15.6	Pass
NVNT	be20	5745	Ant1	-39.9	15.6	Pass
NVNT	be20	5825	Ant1	-39.59	15.6	Pass



NVNT	be20	5745	Ant2	-37.63	15.6	Pass
NVNT	be20	5825	Ant2	-40.08	15.6	Pass
NVNT	be40	5755	Ant1	-37.59	15.6	Pass
NVNT	be40	5795	Ant1	-39.01	15.6	Pass
NVNT	be40	5755	Ant2	-31.02	15.6	Pass
NVNT	be40	5795	Ant2	-39.61	15.6	Pass
NVNT	be80	5775	Ant1	-30.66	15.6	Pass
NVNT	be80	5775	Ant2	-29.36	15.6	Pass

