


## Functions & Operation

### Manual Flush

※ Follow the procedure below to run the flushing function in the event of a power outage or remote control does not work.

1. Press the 1 of Rim button for 4 seconds.
2. Press the 2 of Jet button for 4 seconds.
3. Press the 1 of Rim button for 4 seconds.

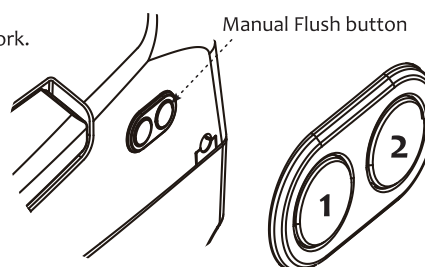


### User Memory Mode

- Pressing  or  button for 4 seconds saves the currently set functions of water pressure, nozzle position, dry temperature, seat temperature, water temperature with long beep sound.
- Pressing  or  button shortly activates the saved functions with short beep sound


# Installation

## Installation of ceramic


- 1 Connect the Angle-valve at the Shut-off valve.

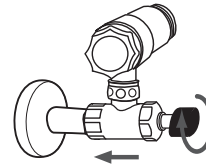

- 2 Insert the flange-packing into the flange.

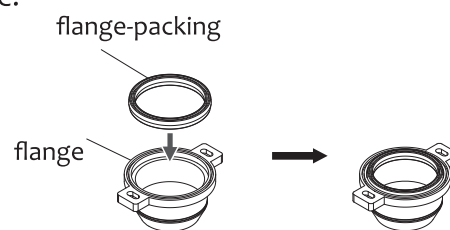


- 3 Turn the ceramic over. Place the flange at the bottom of ceramic and insert the bolts assemble the flange and ceramic with packing nuts.

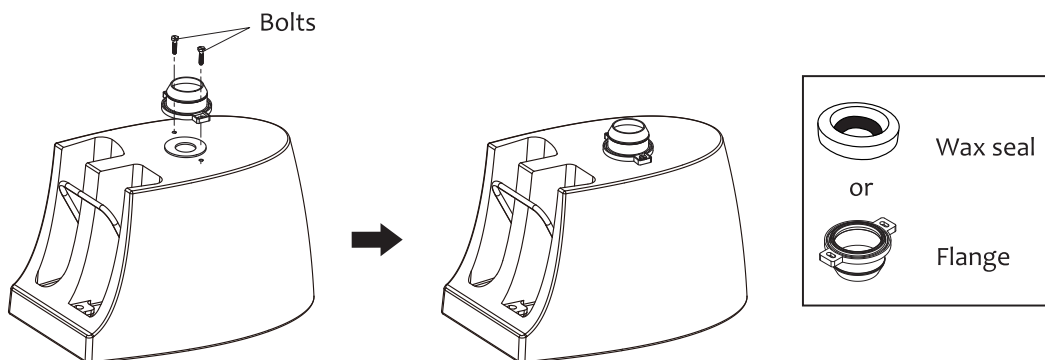

- 4 Lift up the ceramic and fix the flange at a drain. Set the ceramic at level not to lean when fixing the flange.


- Ceramic is heavy. Recommend 2 workers when lifting up the ceramic.

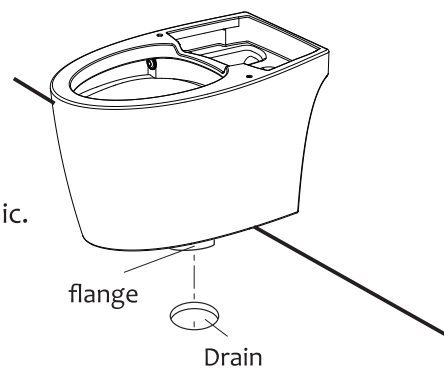

# Installation


## Installation of Bidet

- 1 Insert the supplied packing nuts into the fixing holes on the ceramic.

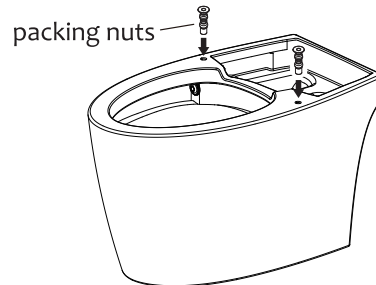


- 2 Connect the nozzle hoses(Upper, Lower each) to the water inlets.


- 3 Connect the bidet hose to the water inlet of the bidet.

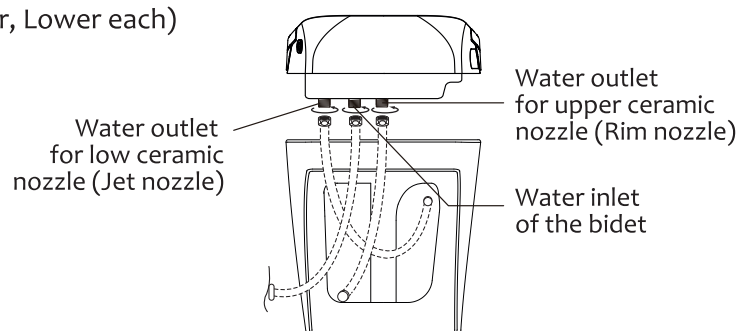


- 4 Insert a square-head bolt to the groove at the bottom of the bidet.

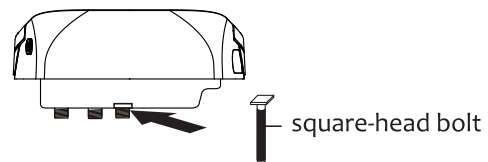


- 5 Insert the square-head bolt into an installation hole on the ceramic fix the bolt with rubber packing, washer and nut.

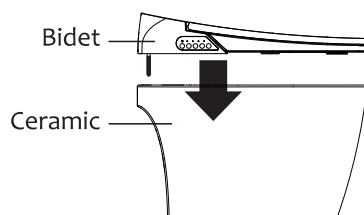

Rubber packing  
washer  
Fixing nut

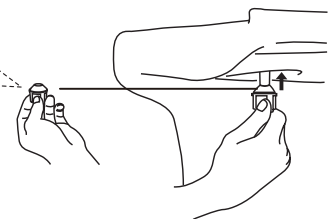


- 6 Connect the bidet hose to the Angle-valve.

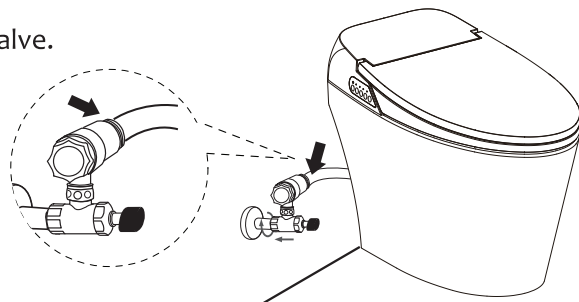

## Installation


### Installation of Bidet

- 7 Open the shut-off valve.  
Check the flushing condition  
by pushing manual flushing buttons.  
(Upper, Lower both)

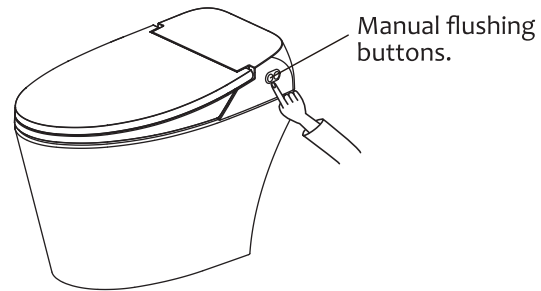

- 8 Fasten the washer and fixation bolts as shown at below illustration to fix the bidet at the ceramic. Cover the front installation caps.

- Fasten the mounting bolts tightly with screw driver

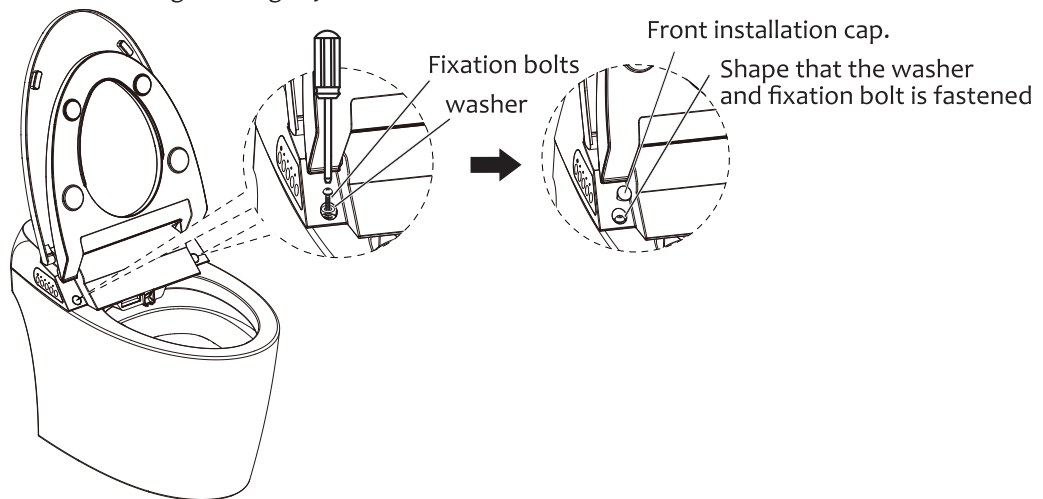

- 9 Check any water leakage from the bidet and ceramic with Trial Operation at 14th page.  
Apply Silicone sealant to the bottom of the ceramic.

- Recommend to use the product 24 hours later to have the Silicone sealant wholly dried.

