

Test Mode	UNII-1_TX AX(HE20) Mode 5200 MHz	Polarization	Horizontal

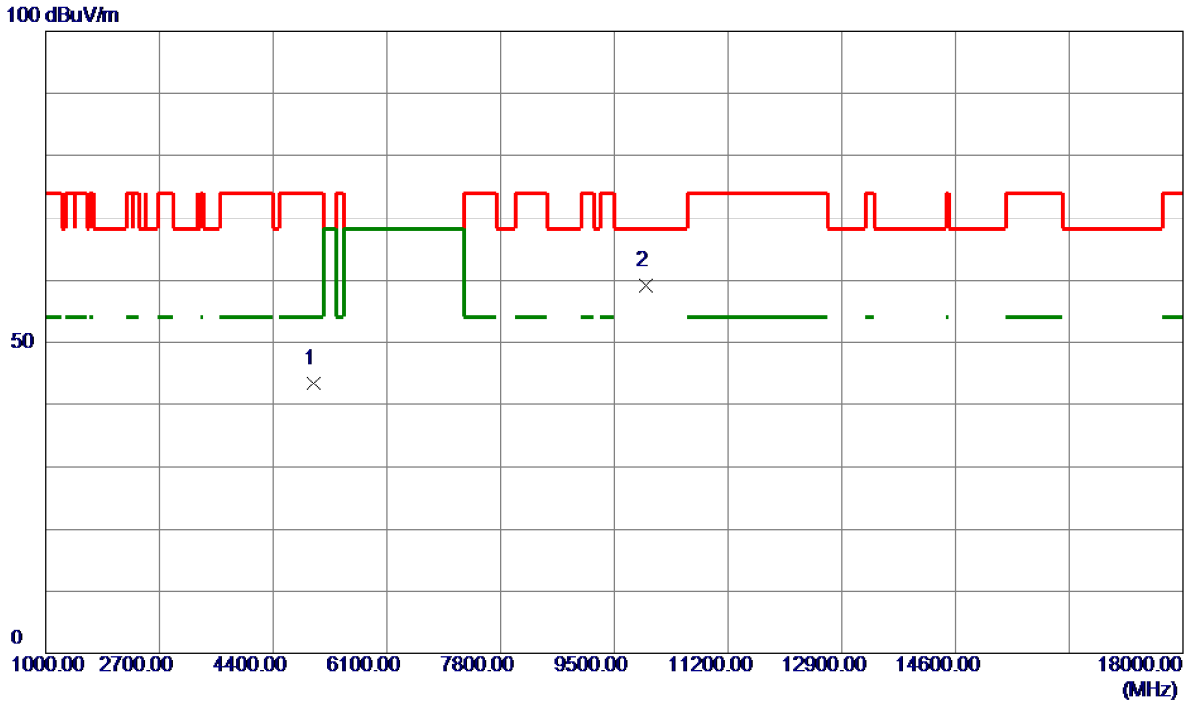

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4995.8500	44.71	-1.33	43.38	74.00	-30.62	Peak	
2 *	9978.5500	54.55	4.68	59.23	68.20	-8.97	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE20) Mode 5240 MHz	Polarization	Vertical

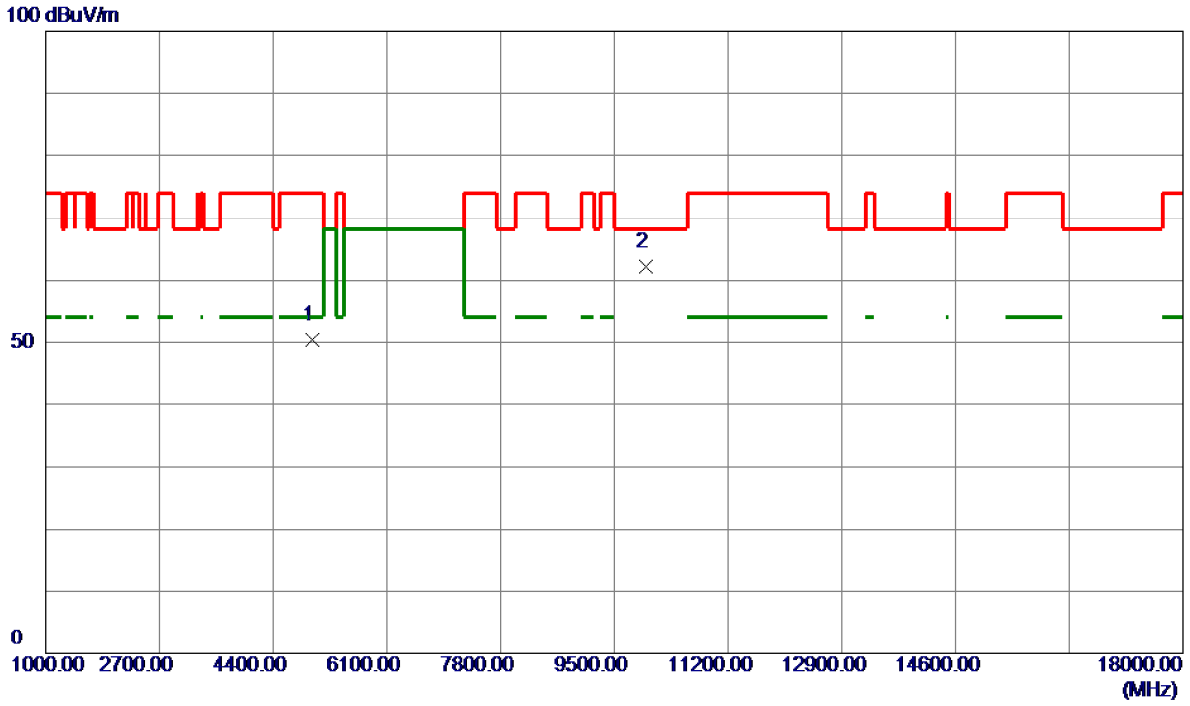

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4993.3000	51.67	-1.33	50.34	74.00	-23.66	Peak	
2 *	9980.2500	57.47	4.68	62.15	68.20	-6.05	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE20) Mode 5240 MHz	Polarization	Horizontal

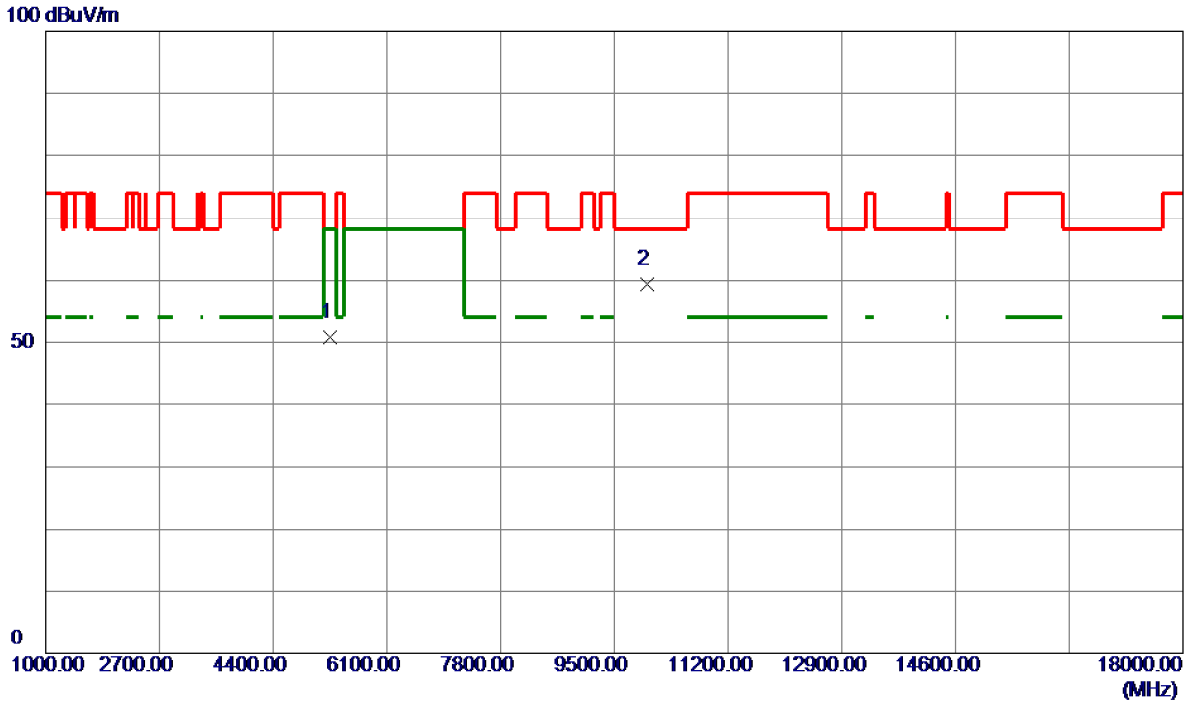

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5241.5000	51.94	-1.18	50.76	68.20	-17.44	Peak	
2 *	9987.0500	54.79	4.68	59.47	68.20	-8.73	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5190 MHz	Polarization	Vertical

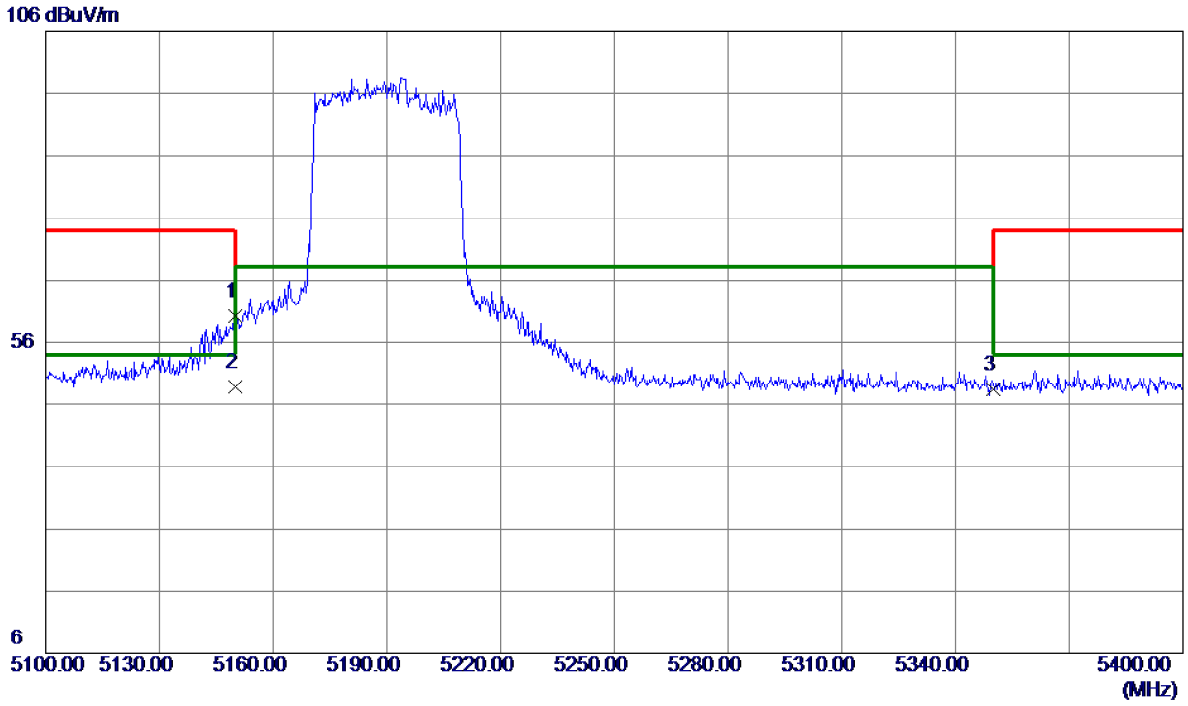

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	51.36	8.77	60.13	74.00	-13.87	Peak	
2 *	5150.0000	40.08	8.77	48.85	54.00	-5.15	AVG	
3	5350.0000	39.50	8.88	48.38	74.00	-25.62	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5190 MHz	Polarization	Vertical

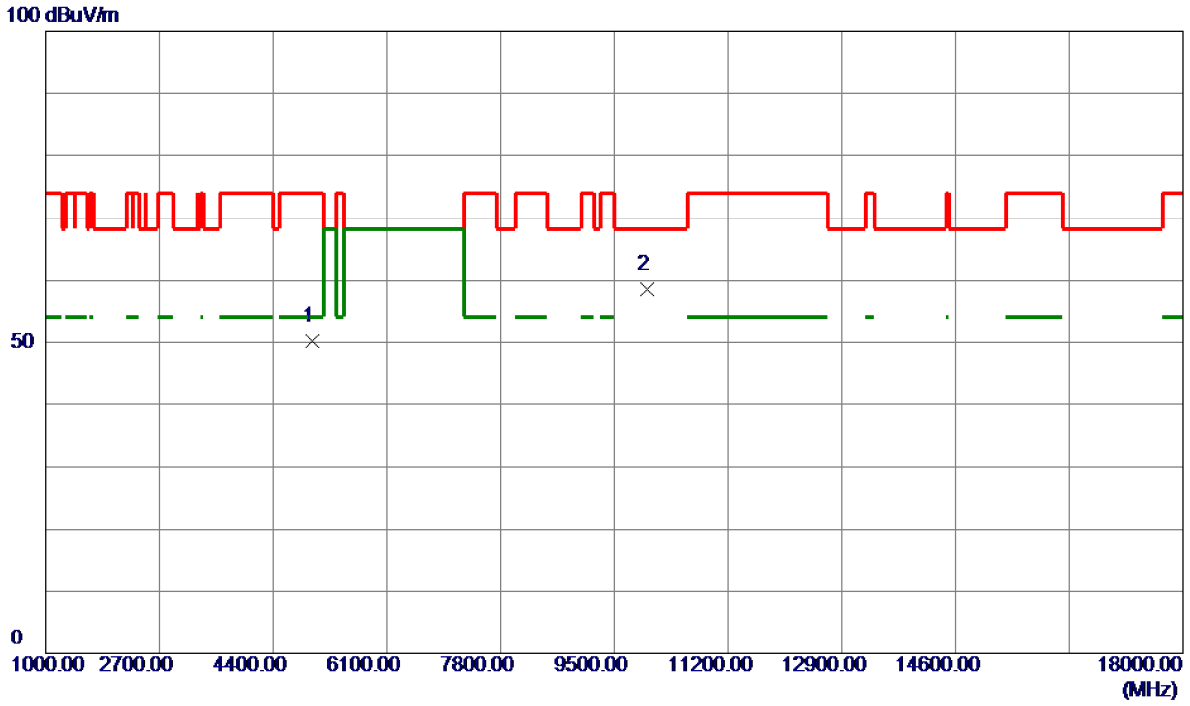

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4992.4500	51.61	-1.34	50.27	74.00	-23.73	Peak	
2 *	9991.3000	53.91	4.68	58.59	68.20	-9.61	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5190 MHz	Polarization	Horizontal

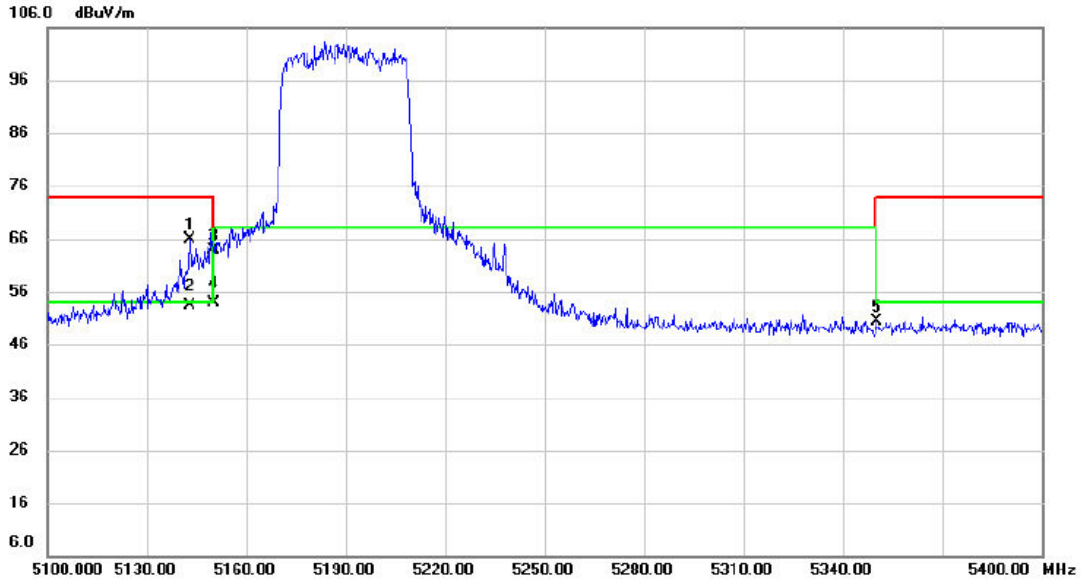

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1		5143.050	57.05	8.77	65.82	74.00	-8.18	peak	
2		5143.050	44.50	8.77	53.27	54.00	-0.73	AVG	
3		5150.000	55.09	8.76	63.85	74.00	-10.15	peak	
4	*	5150.000	45.22	8.76	53.98	54.00	-0.02	AVG	
5		5350.000	41.50	8.89	50.39	74.00	-23.61	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5190 MHz	Polarization	Horizontal

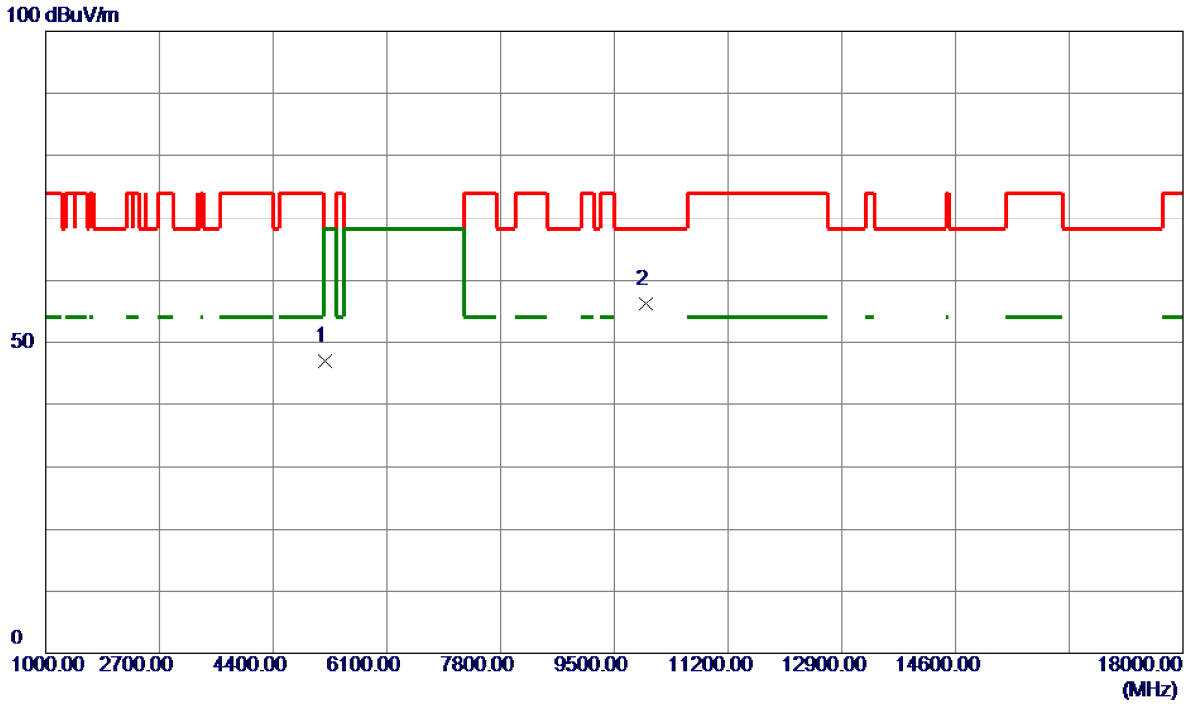

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5182.0000	48.23	-1.21	47.02	68.20	-21.18	Peak	
2 *	9968.3500	51.45	4.68	56.13	68.20	-12.07	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5230 MHz	Polarization	Vertical

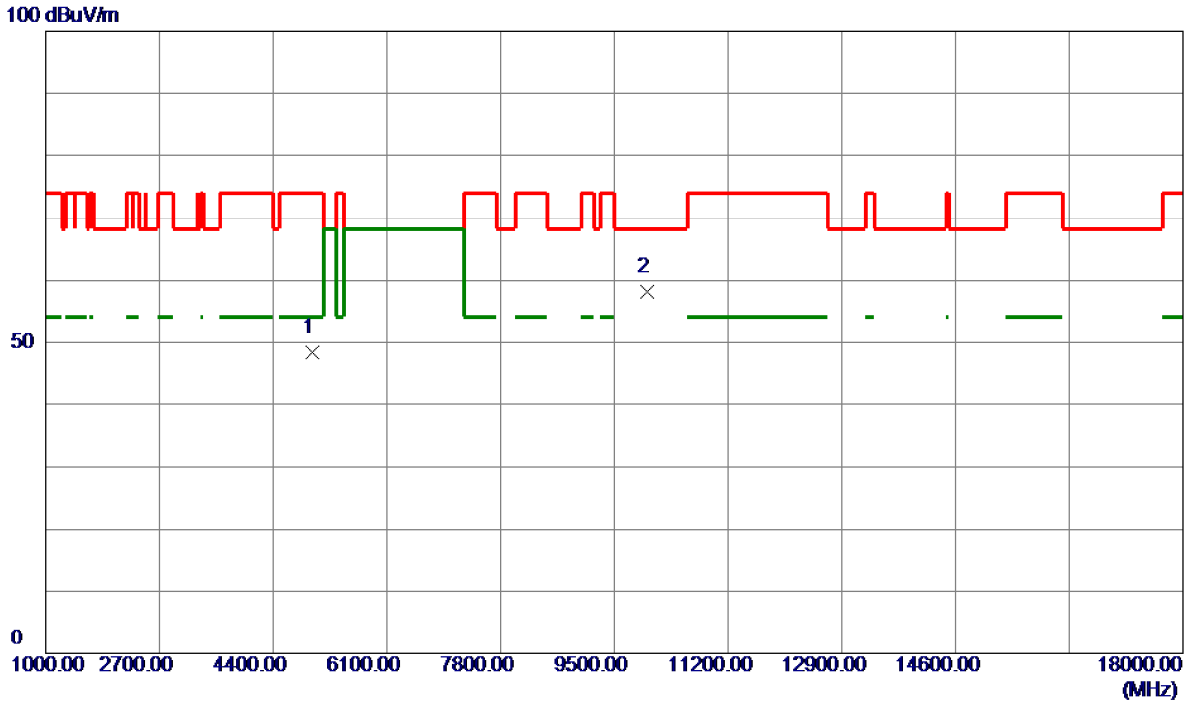

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4989.0500	49.81	-1.34	48.47	74.00	-25.53	Peak	
2 *	9986.2000	53.46	4.68	58.14	68.20	-10.06	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE40) Mode 5230 MHz	Polarization	Horizontal

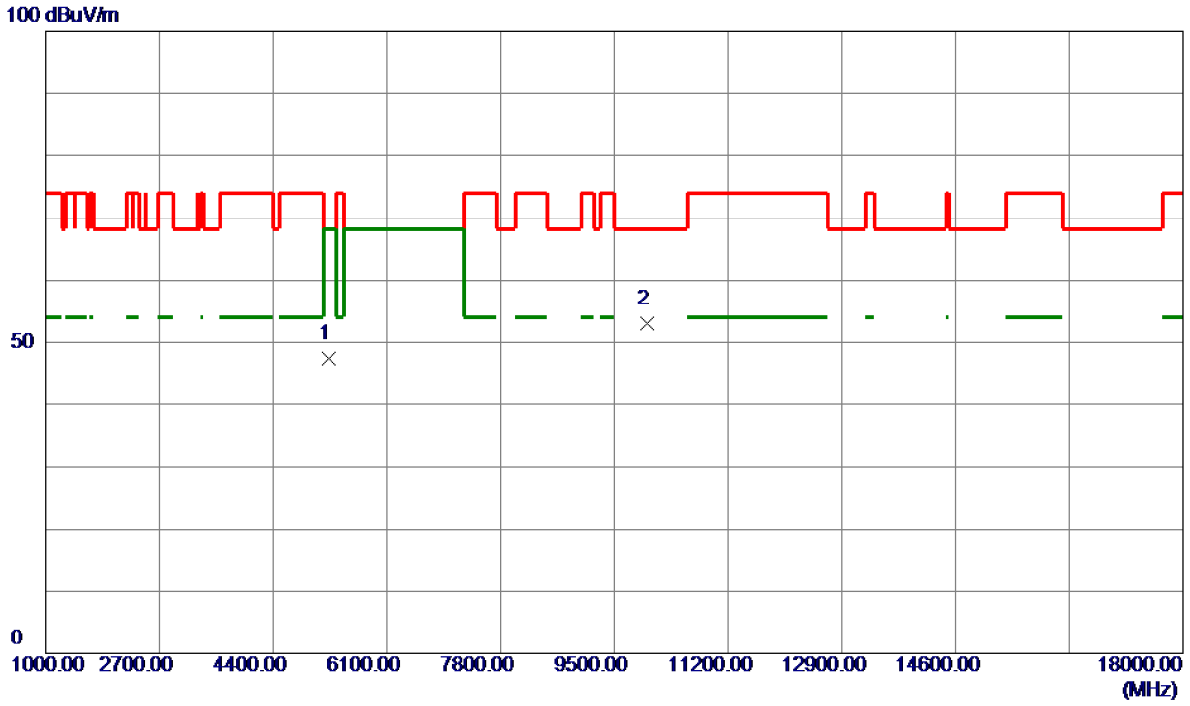

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5227.9000	48.67	-1.19	47.48	68.20	-20.72	Peak	
2 *	9982.8000	48.31	4.68	52.99	68.20	-15.21	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE80) Mode 5210 MHz	Polarization	Vertical

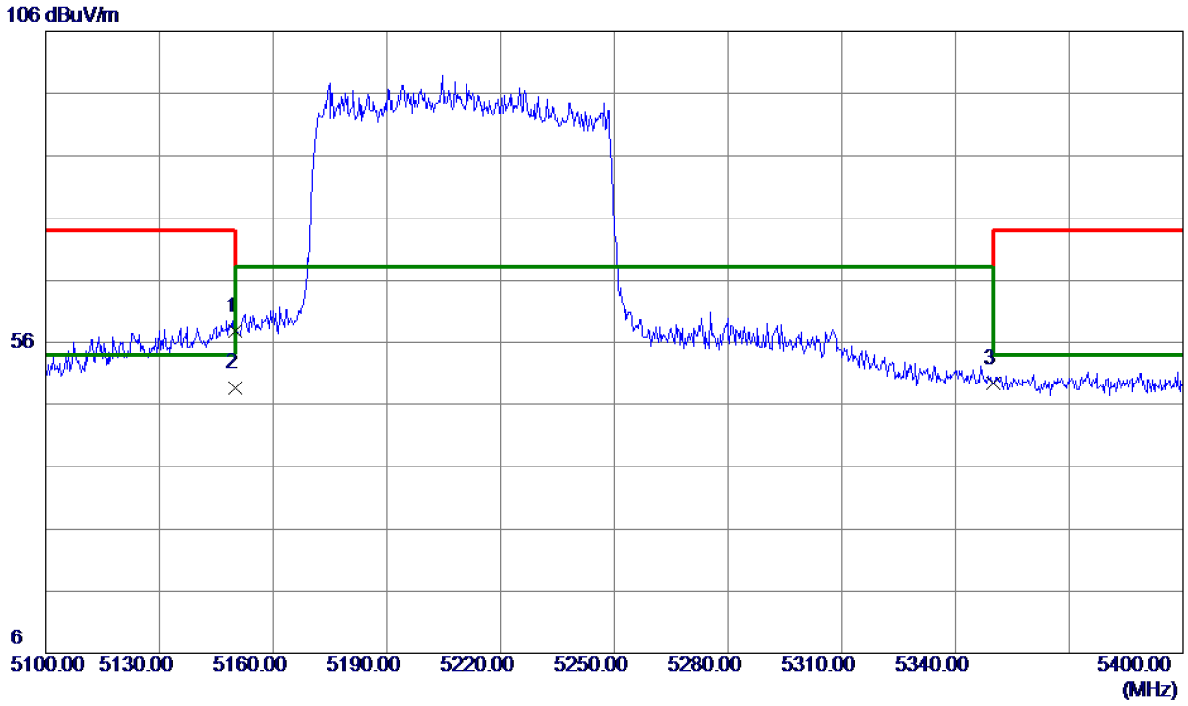

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	49.10	8.77	57.87	74.00	-16.13	Peak	
2 *	5150.0000	39.93	8.77	48.70	54.00	-5.30	AVG	
3	5350.0000	40.54	8.88	49.42	74.00	-24.58	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE80) Mode 5210 MHz	Polarization	Vertical

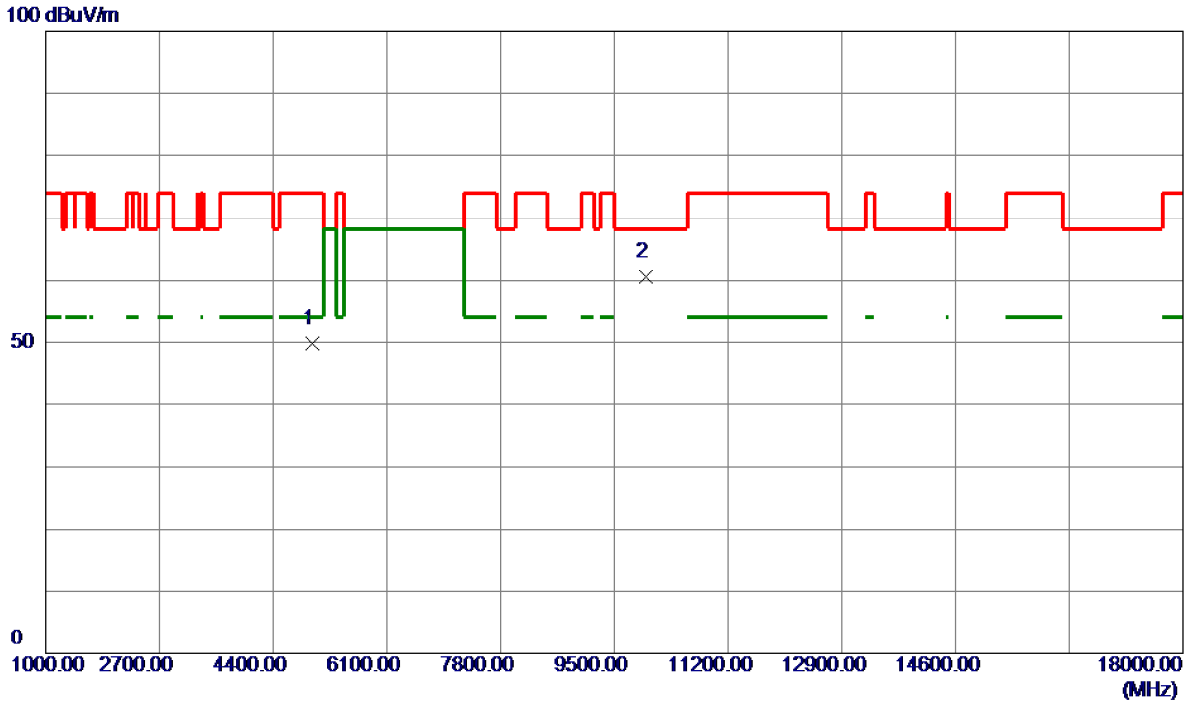

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4989.9000	51.11	-1.34	49.77	74.00	-24.23	Peak	
2 *	9972.6000	55.85	4.68	60.53	68.20	-7.67	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE80) Mode 5210 MHz	Polarization	Horizontal

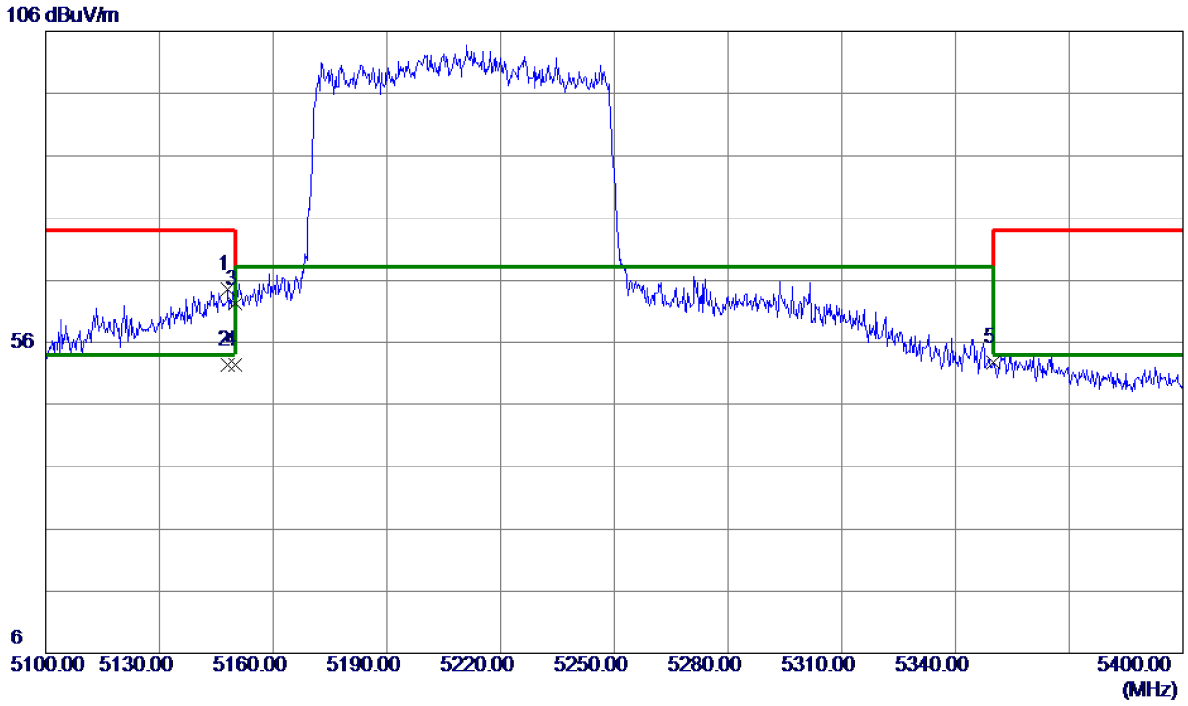

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5148.1500	55.89	8.77	64.66	74.00	-9.34	Peak	
2	5148.1500	43.61	8.77	52.38	54.00	-1.62	AVG	
3	5150.0000	53.42	8.77	62.19	74.00	-11.81	Peak	
4 *	5150.0000	43.65	8.77	52.42	54.00	-1.58	AVG	
5	5350.0000	43.93	8.88	52.81	74.00	-21.19	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-1_TX AX(HE80) Mode 5210 MHz	Polarization	Horizontal

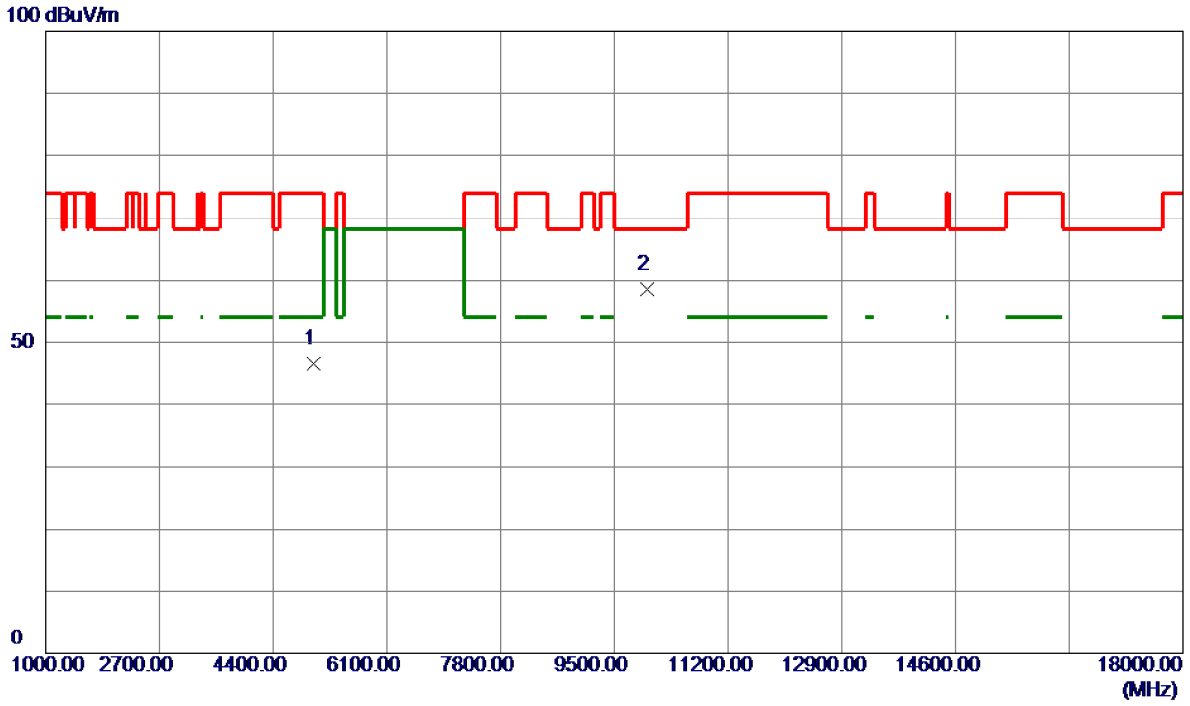

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5006.0500	47.94	-1.32	46.62	74.00	-27.38	Peak	
2 *	9992.1500	53.87	4.68	58.55	68.20	-9.65	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5260 MHz	Polarization	Vertical

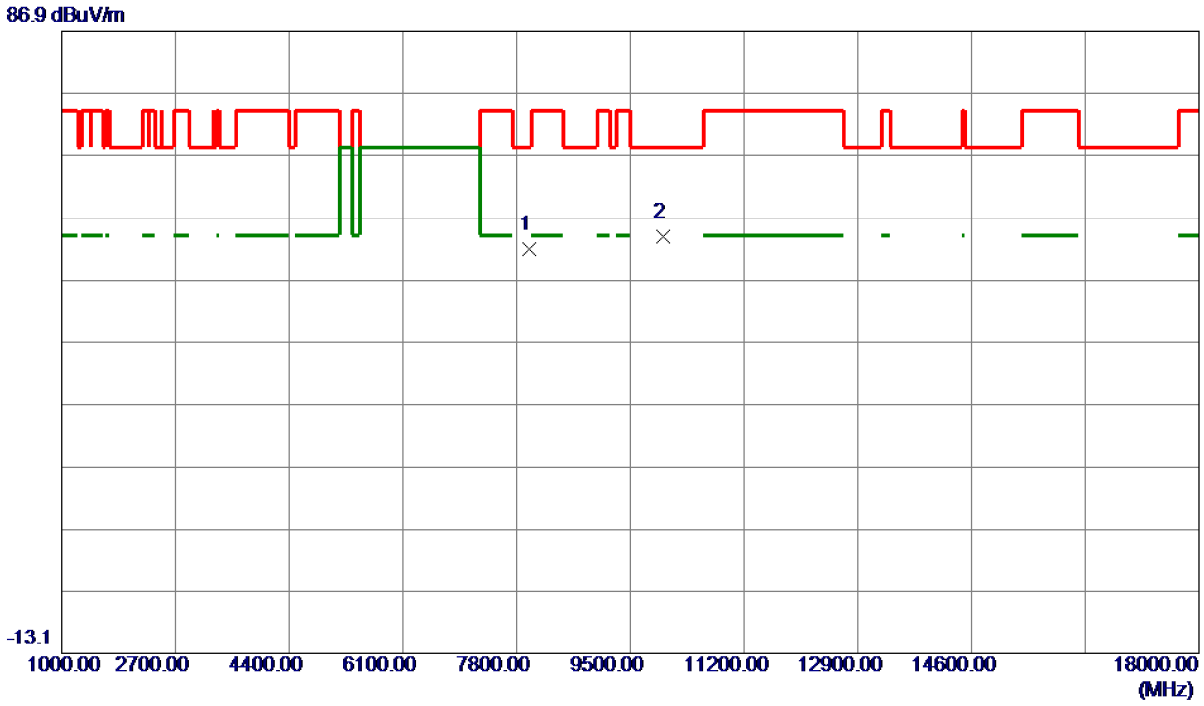

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7987.0000	47.24	4.71	51.95	68.20	-16.25	Peak	
2 *	9998.9500	49.22	4.68	53.90	68.20	-14.30	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5260 MHz	Polarization	Horizontal

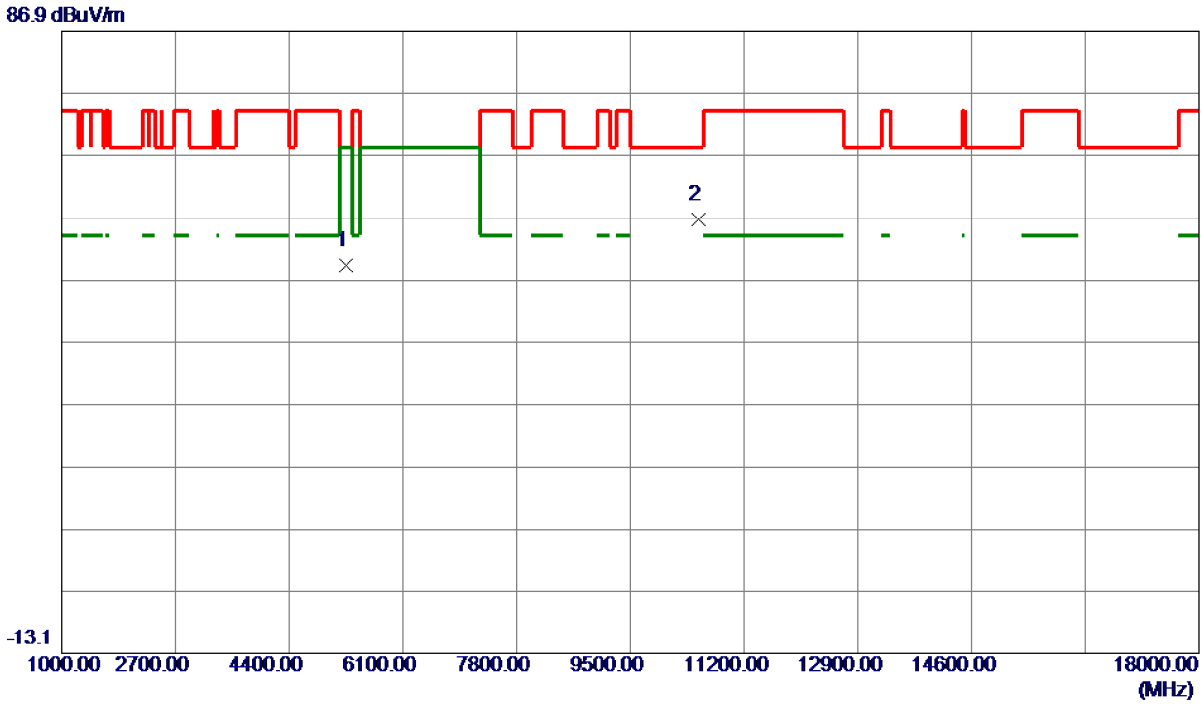

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5252.5500	50.39	-1.17	49.22	68.20	-18.98	Peak	
2 *	10521.7000	51.20	5.54	56.74	68.20	-11.46	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5300 MHz	Polarization	Vertical

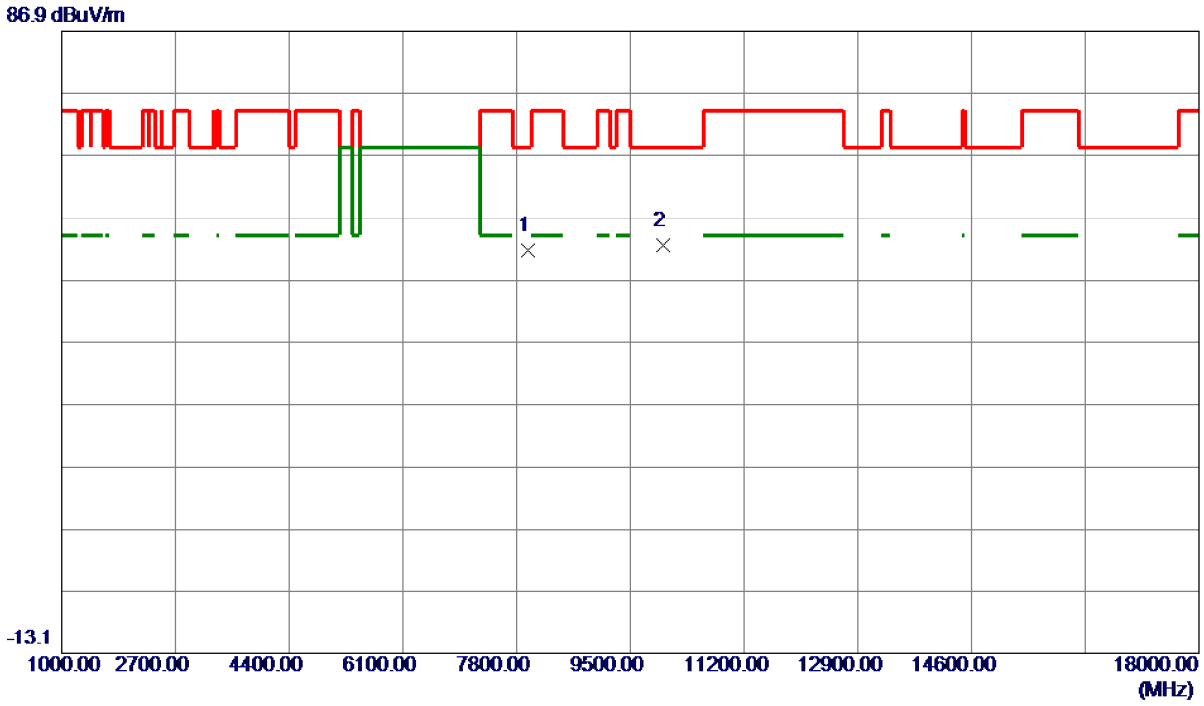

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7974.2500	46.94	4.69	51.63	68.20	-16.57	Peak	
2 *	9999.8000	47.87	4.68	52.55	68.20	-15.65	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5300 MHz	Polarization	Horizontal

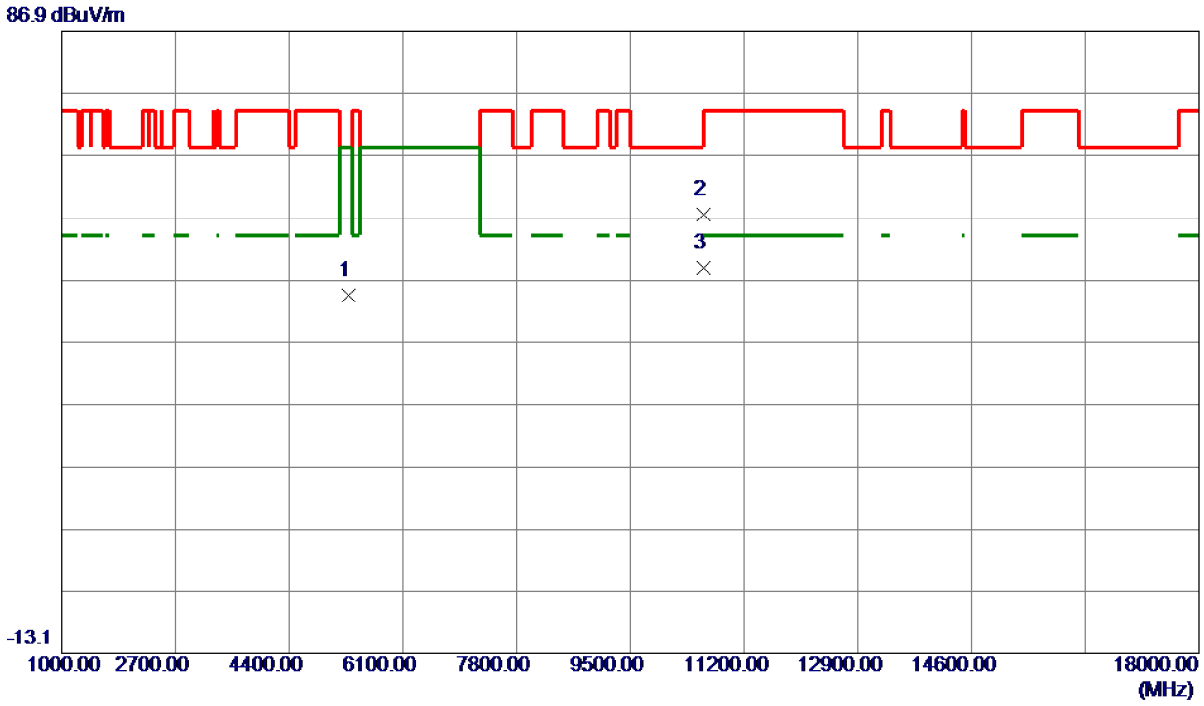

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5296.7500	45.56	-1.15	44.41	68.20	-23.79	Peak	
2	10600.7500	51.85	5.63	57.48	74.00	-16.52	Peak	
3 *	10600.7500	43.29	5.63	48.92	54.00	-5.08	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5320 MHz	Polarization	Vertical

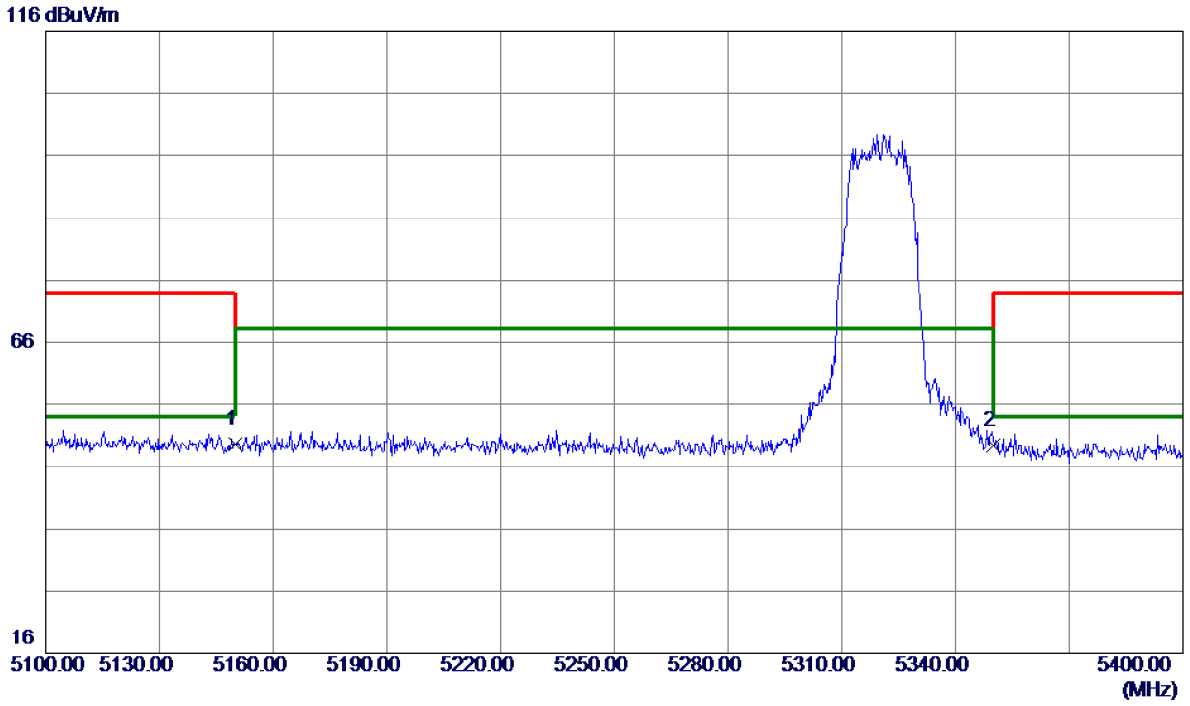

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5150.0000	50.98	-1.32	49.66	74.00	-24.34	Peak	
2	5350.0000	50.73	-1.32	49.41	74.00	-24.59	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5320 MHz	Polarization	Vertical

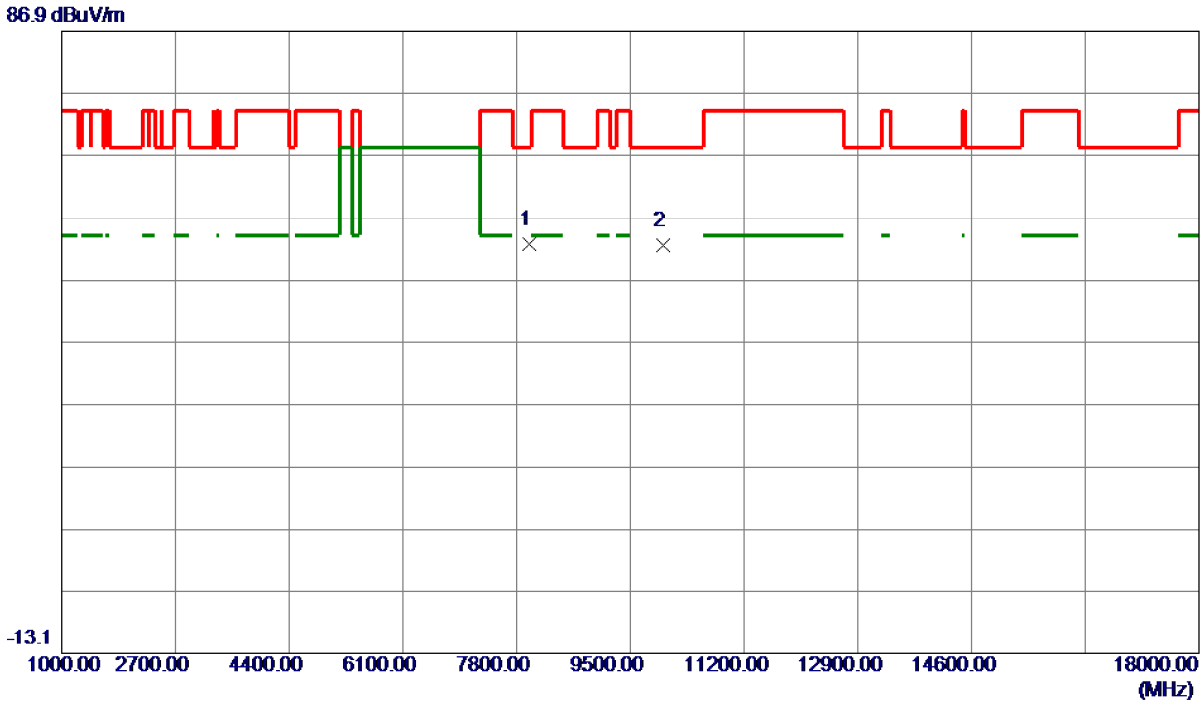

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	7987.0000	47.92	4.71	52.63	68.20	-15.57	Peak	
2	9998.9500	47.89	4.68	52.57	68.20	-15.63	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5320 MHz	Polarization	Horizontal

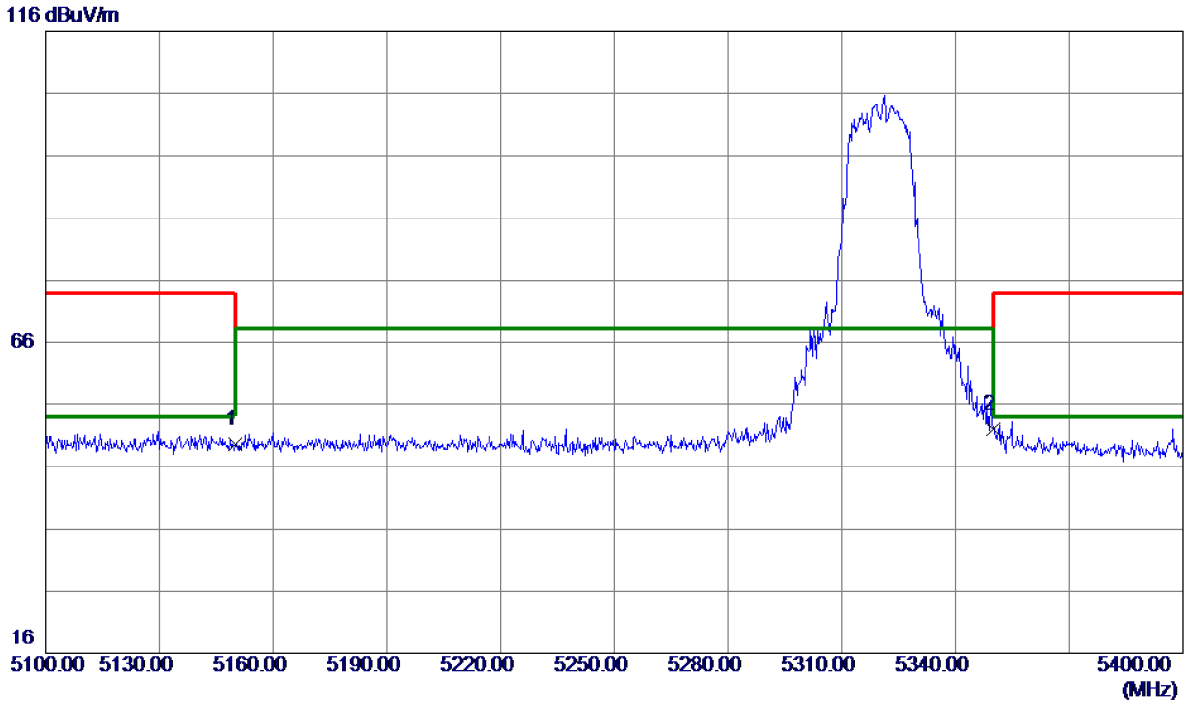

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	50.85	-1.32	49.53	74.00	-24.47	Peak	
2 *	5350.0000	53.33	-1.32	52.01	74.00	-21.99	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX A Mode 5320 MHz	Polarization	Horizontal

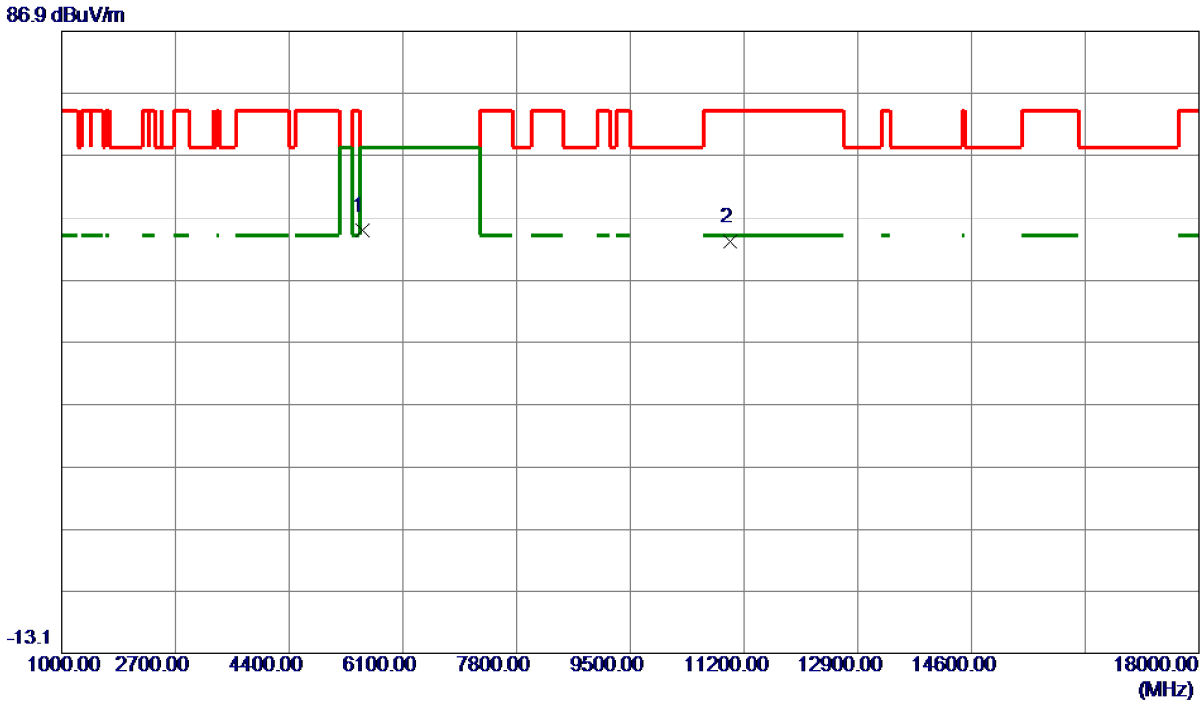

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5499.0500	55.98	-1.03	54.95	68.20	-13.25	Peak	
2	10995.1500	47.08	6.10	53.18	74.00	-20.82	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5260 MHz	Polarization	Vertical

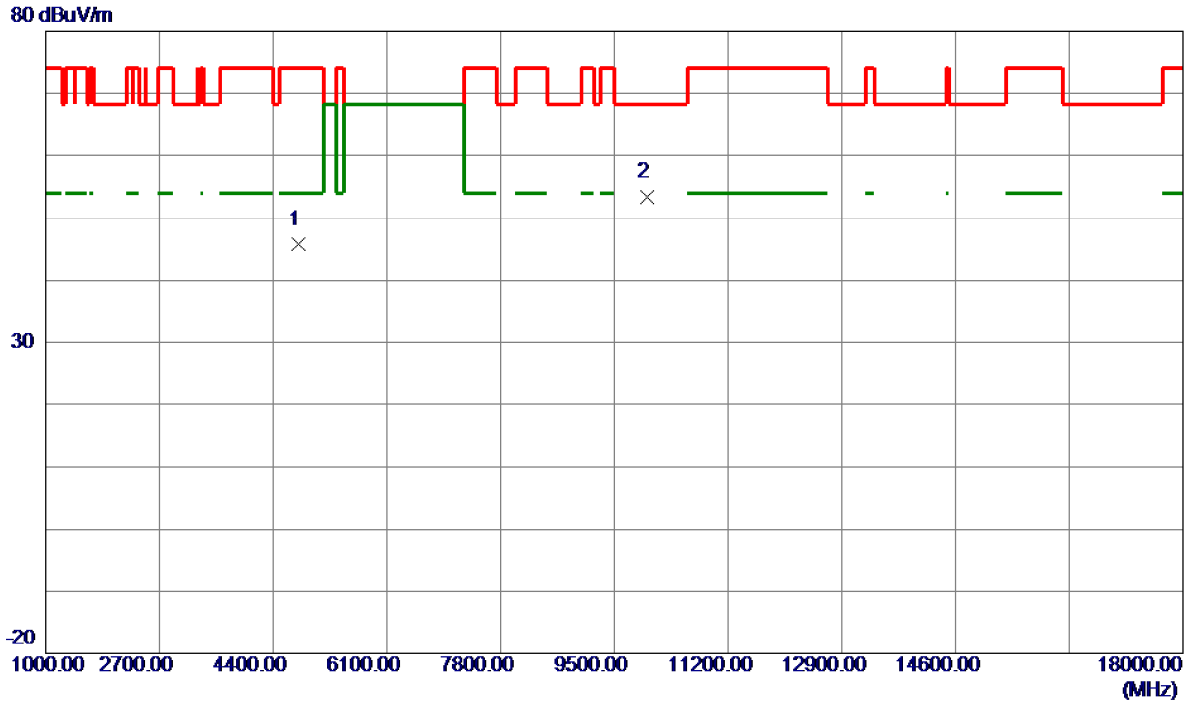

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4786.7500	47.64	-1.76	45.88	74.00	-28.12	Peak	
2 *	9999.8000	48.71	4.68	53.39	68.20	-14.81	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5260 MHz	Polarization	Horizontal

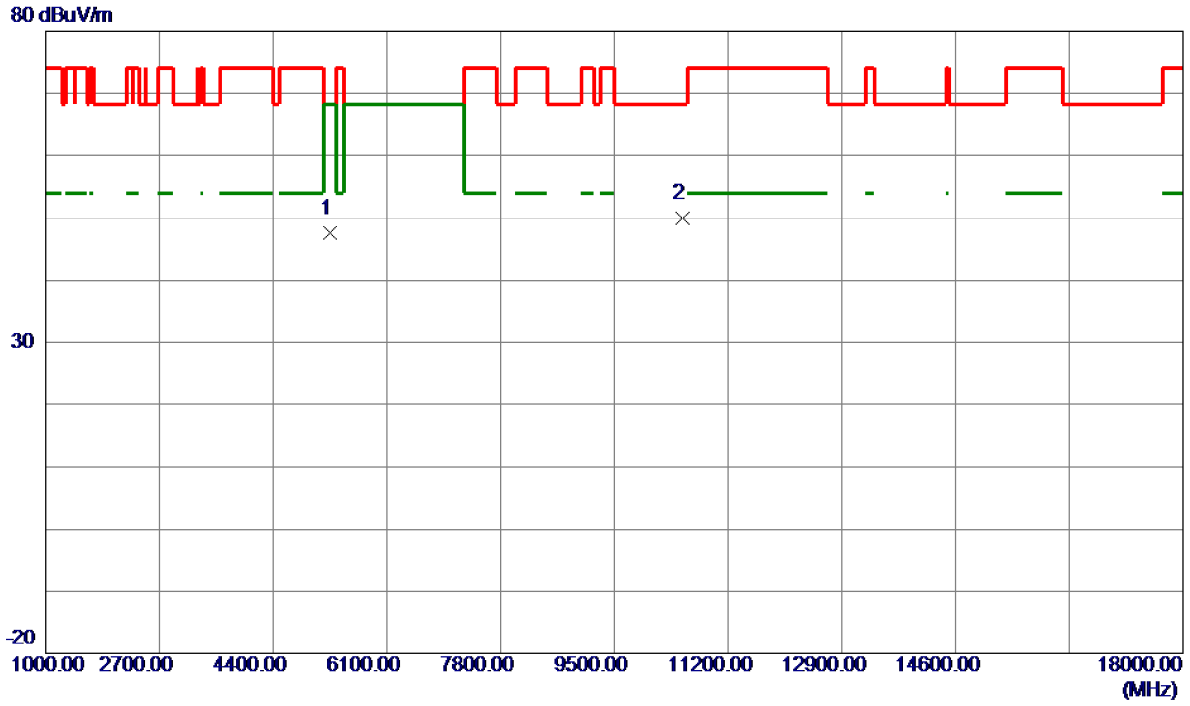

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5255.1000	48.73	-1.17	47.56	68.20	-20.64	Peak	
2 *	10519.1500	44.50	5.53	50.03	68.20	-18.17	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5300 MHz	Polarization	Vertical

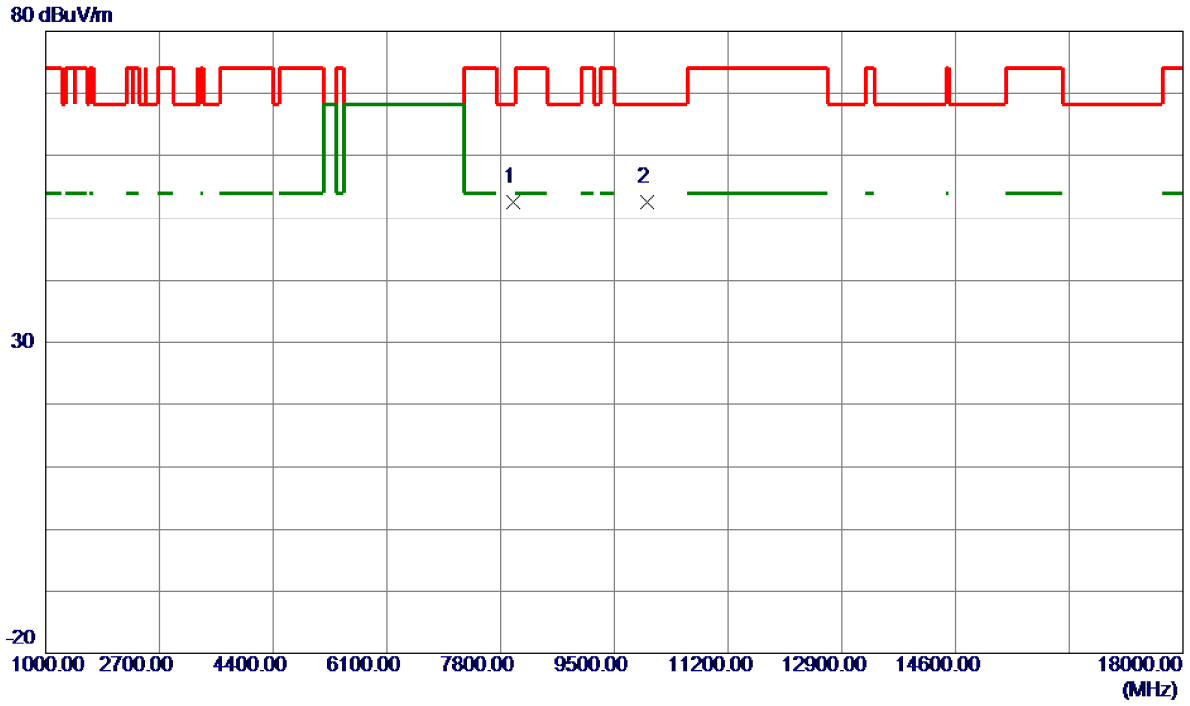

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	7990.4000	47.91	4.72	52.63	68.20	-15.57	Peak	
2	9999.8000	47.91	4.68	52.59	68.20	-15.61	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5300 MHz	Polarization	Horizontal

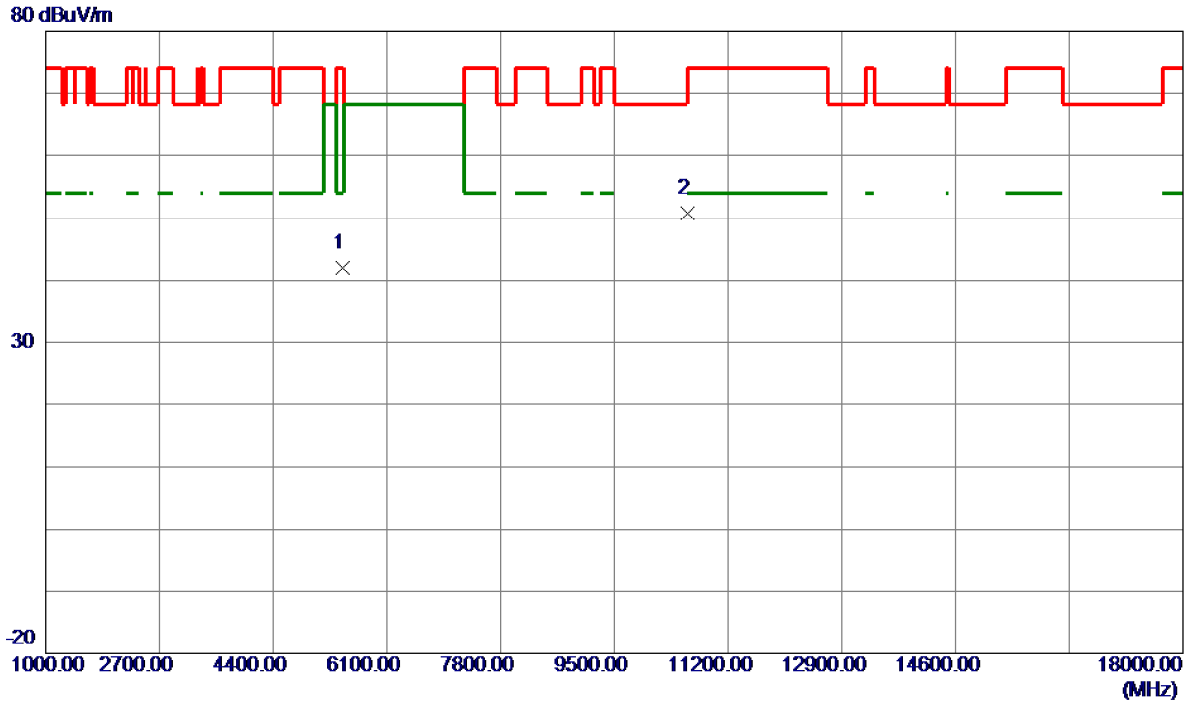

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5443.8000	43.14	-1.06	42.08	74.00	-31.92	Peak	
2 *	10600.7500	45.20	5.63	50.83	74.00	-23.17	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5320 MHz	Polarization	Vertical

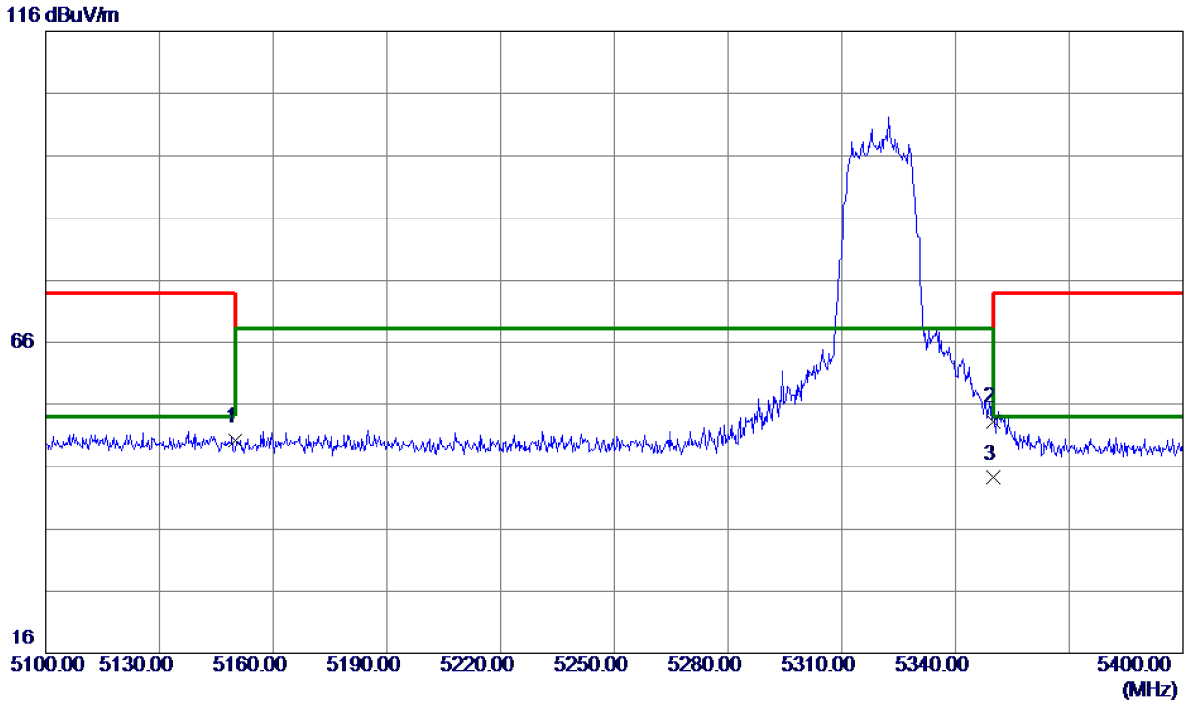

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	51.42	-1.32	50.10	74.00	-23.90	Peak	
2	5350.0000	54.58	-1.32	53.26	74.00	-20.74	Peak	
3 *	5350.0000	45.42	-1.32	44.10	54.00	-9.90	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5320 MHz	Polarization	Vertical

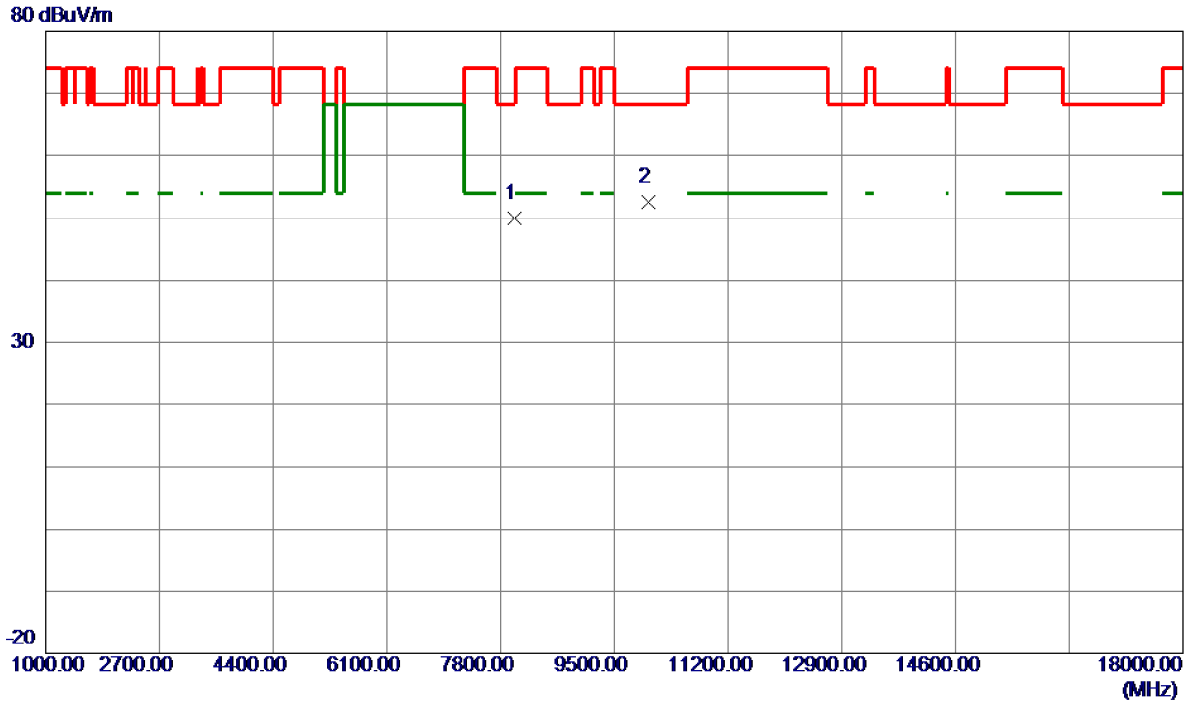

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7999.7500	45.19	4.74	49.93	68.20	-18.27	Peak	
2 *	10000.6500	47.99	4.68	52.67	68.20	-15.53	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5320 MHz	Polarization	Horizontal

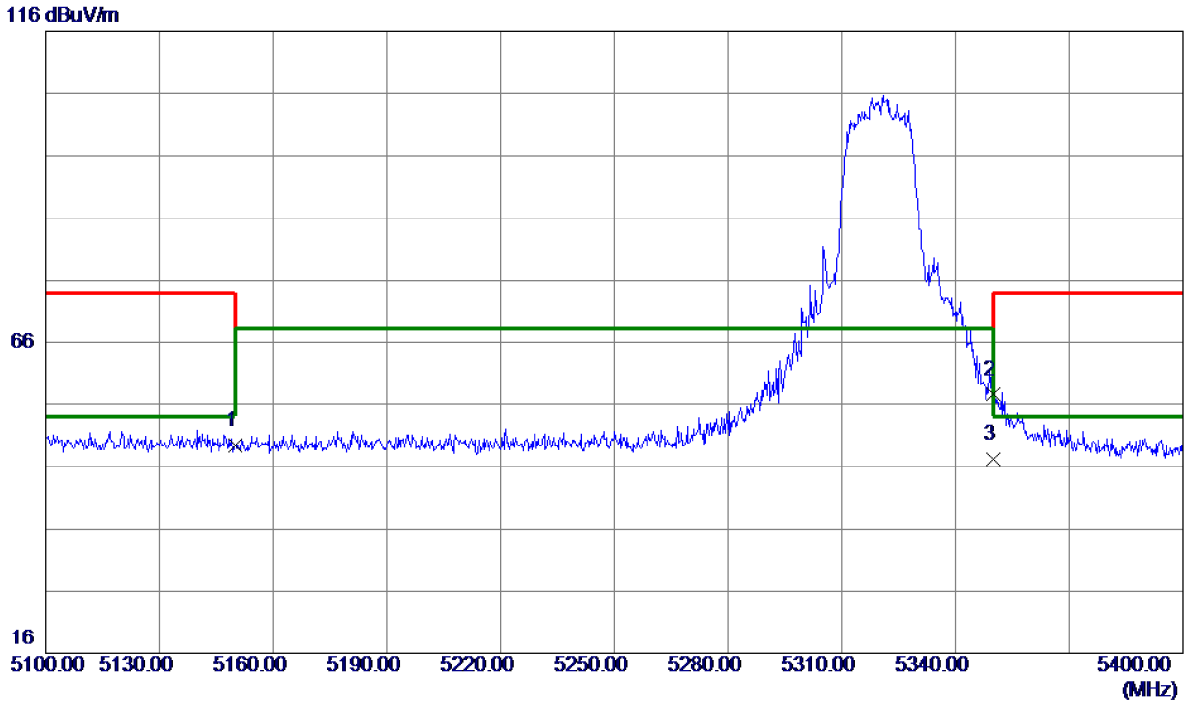

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	50.78	-1.32	49.46	74.00	-24.54	Peak	
2	5350.0000	59.01	-1.32	57.69	74.00	-16.31	Peak	
3 *	5350.0000	48.43	-1.32	47.11	54.00	-6.89	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT20) Mode 5320 MHz	Polarization	Horizontal

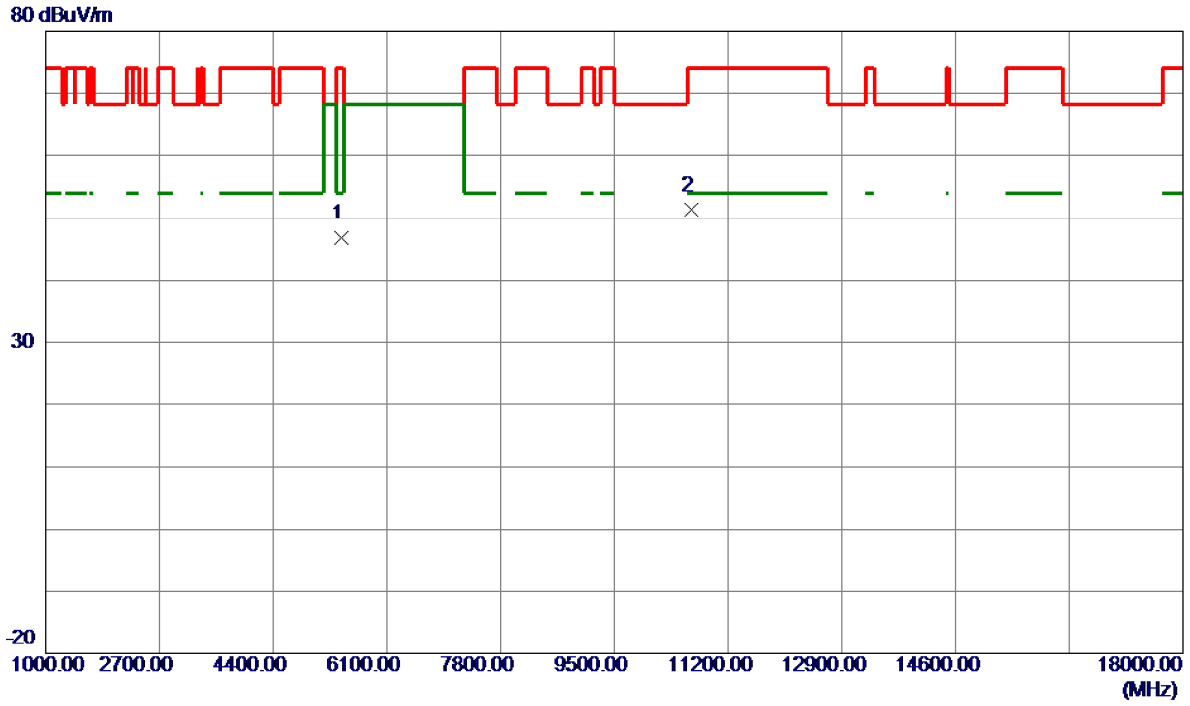

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5428.5000	47.85	-1.07	46.78	74.00	-27.22	Peak	
2 *	10644.1000	45.62	5.68	51.30	74.00	-22.70	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5270 MHz	Polarization	Vertical

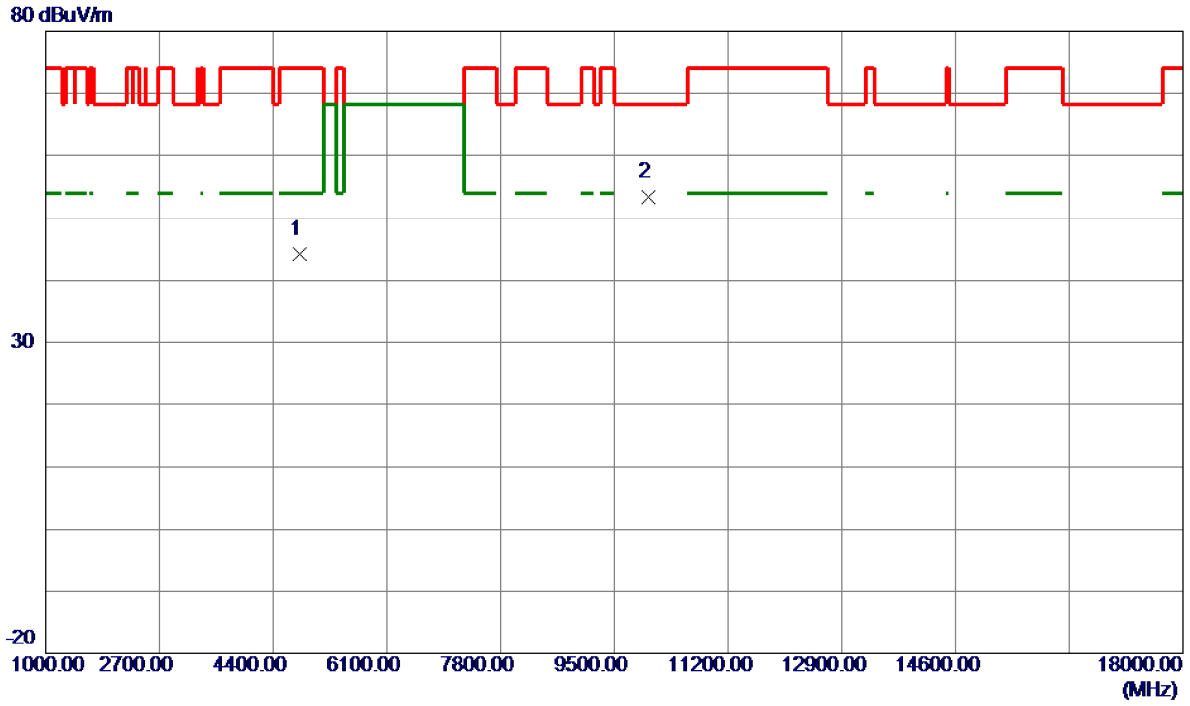

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4796.1000	45.87	-1.74	44.13	74.00	-29.87	Peak	
2 *	10001.5000	48.76	4.68	53.44	68.20	-14.76	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5270 MHz	Polarization	Horizontal

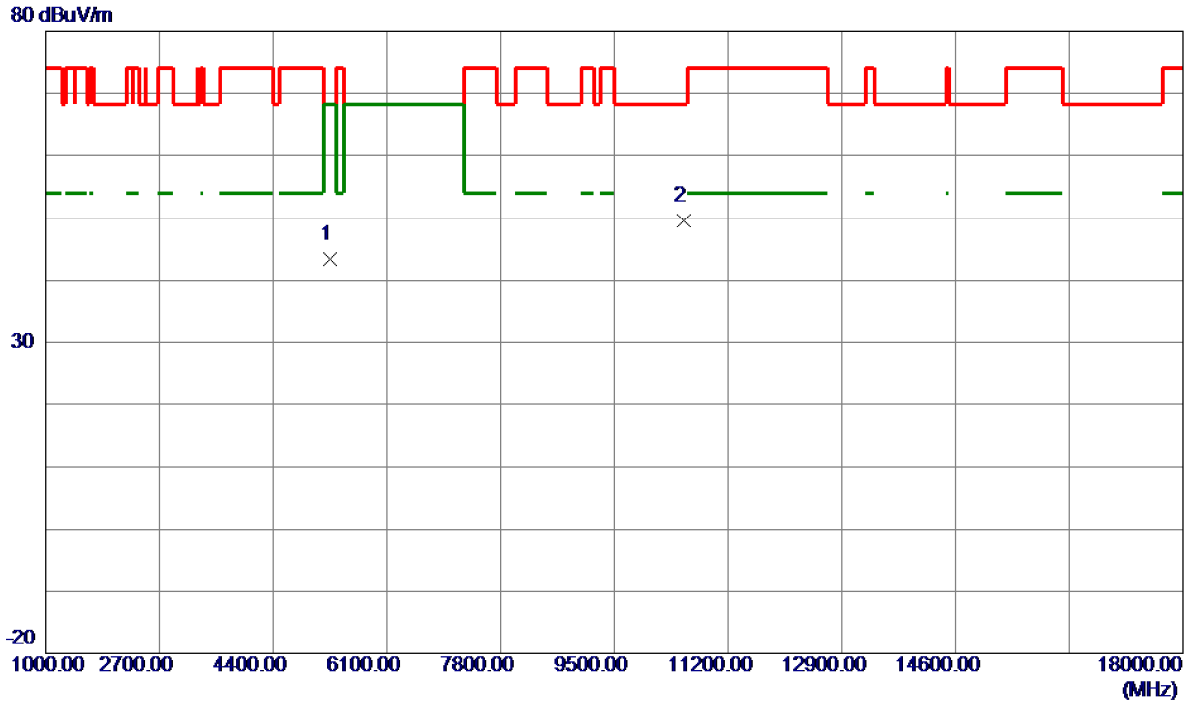

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5256.8000	44.55	-1.17	43.38	68.20	-24.82	Peak	
2 *	10538.7000	43.99	5.56	49.55	68.20	-18.65	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5310 MHz	Polarization	Vertical

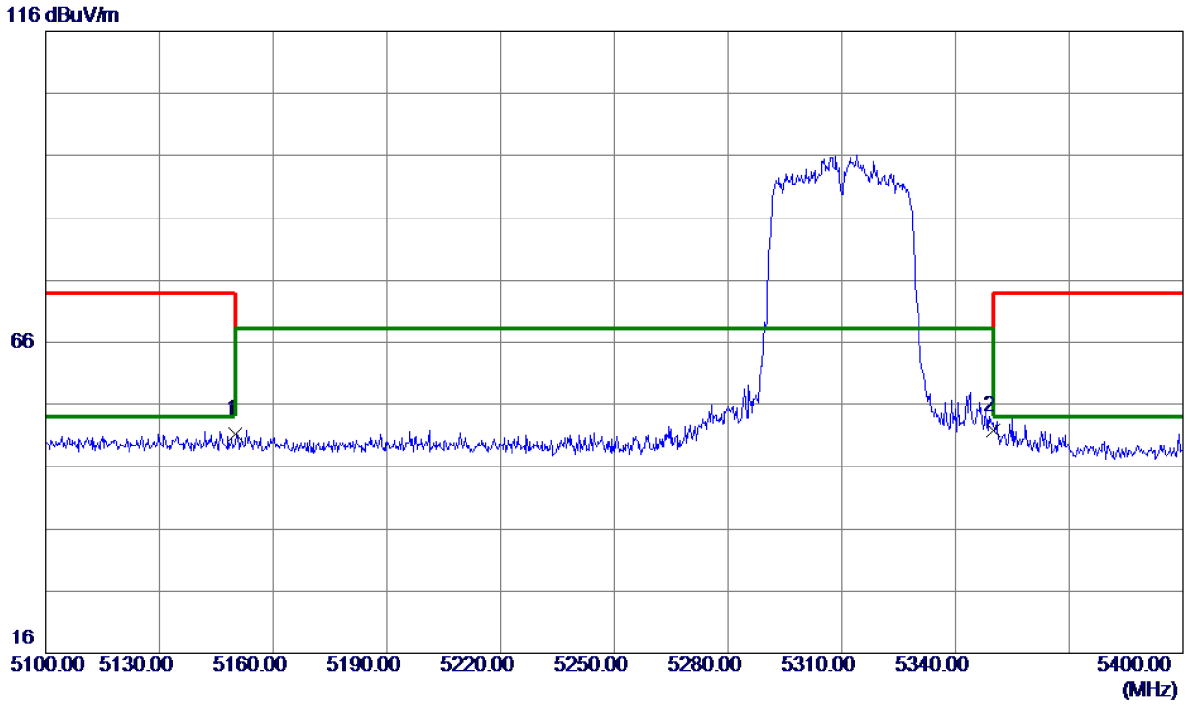

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	52.43	-1.32	51.11	74.00	-22.89	Peak	
2 *	5350.0000	53.08	-1.32	51.76	74.00	-22.24	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5310 MHz	Polarization	Vertical

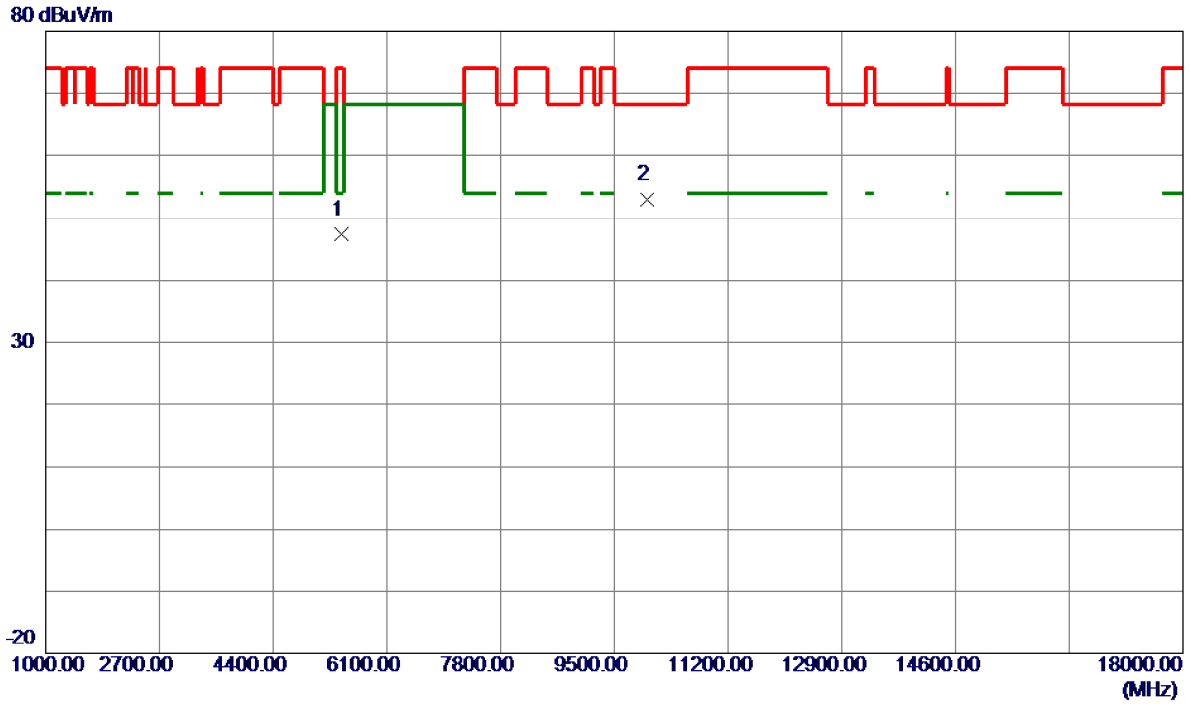

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5418.3000	48.52	-1.08	47.44	74.00	-26.56	Peak	
2 *	9999.8000	48.40	4.68	53.08	68.20	-15.12	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5310 MHz	Polarization	Horizontal

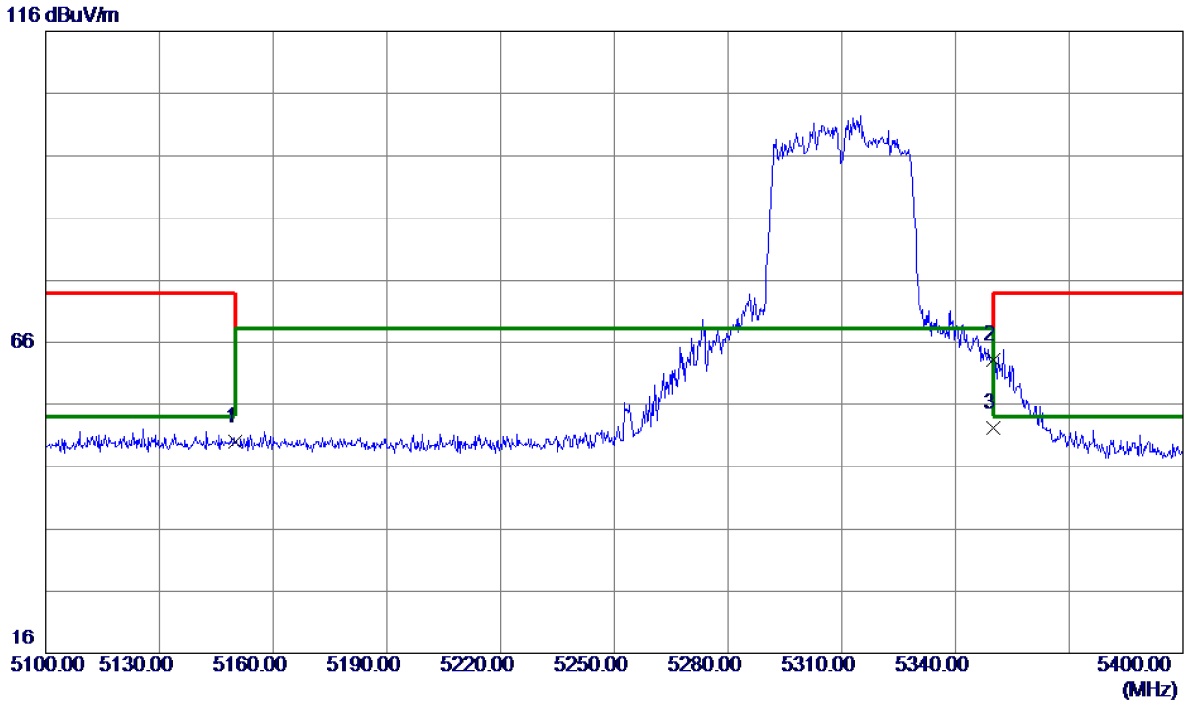

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	51.37	-1.32	50.05	74.00	-23.95	Peak	
2	5350.0000	64.61	-1.32	63.29	74.00	-10.71	Peak	
3 *	5350.0000	53.60	-1.32	52.28	54.00	-1.72	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT40) Mode 5310 MHz	Polarization	Horizontal

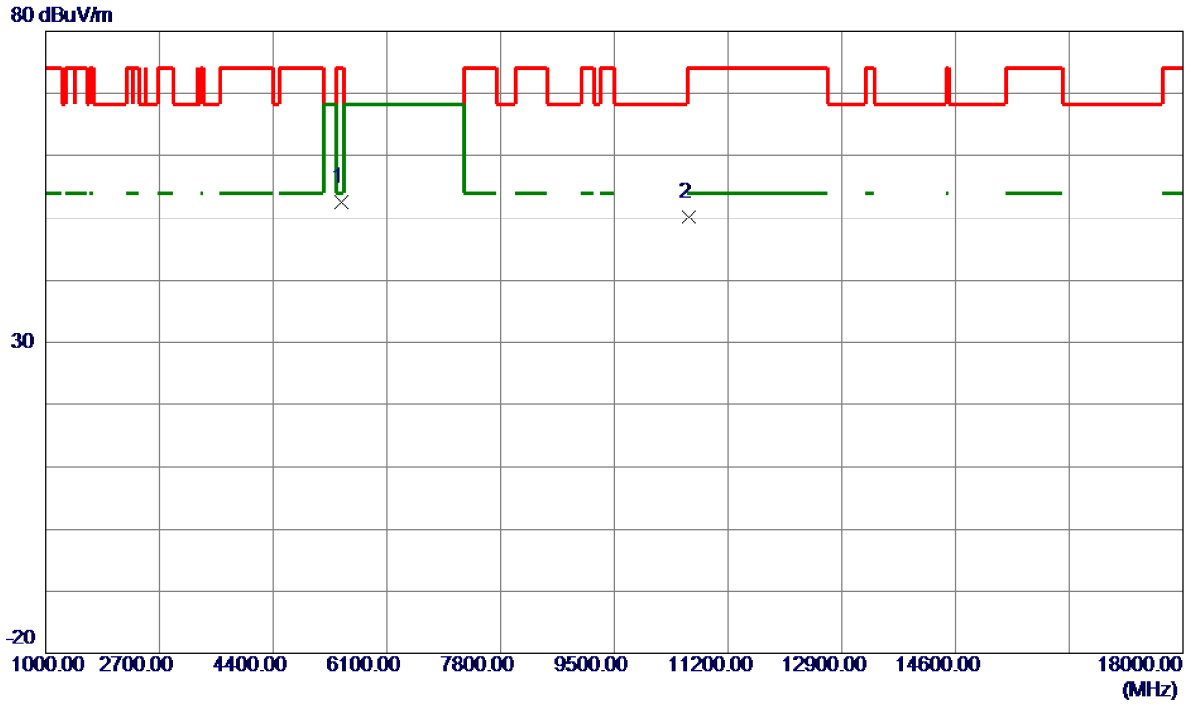

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5419.1500	53.67	-1.08	52.59	74.00	-21.41	Peak	
2	10623.7000	44.62	5.66	50.28	74.00	-23.72	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT80) Mode 5290 MHz	Polarization	Vertical

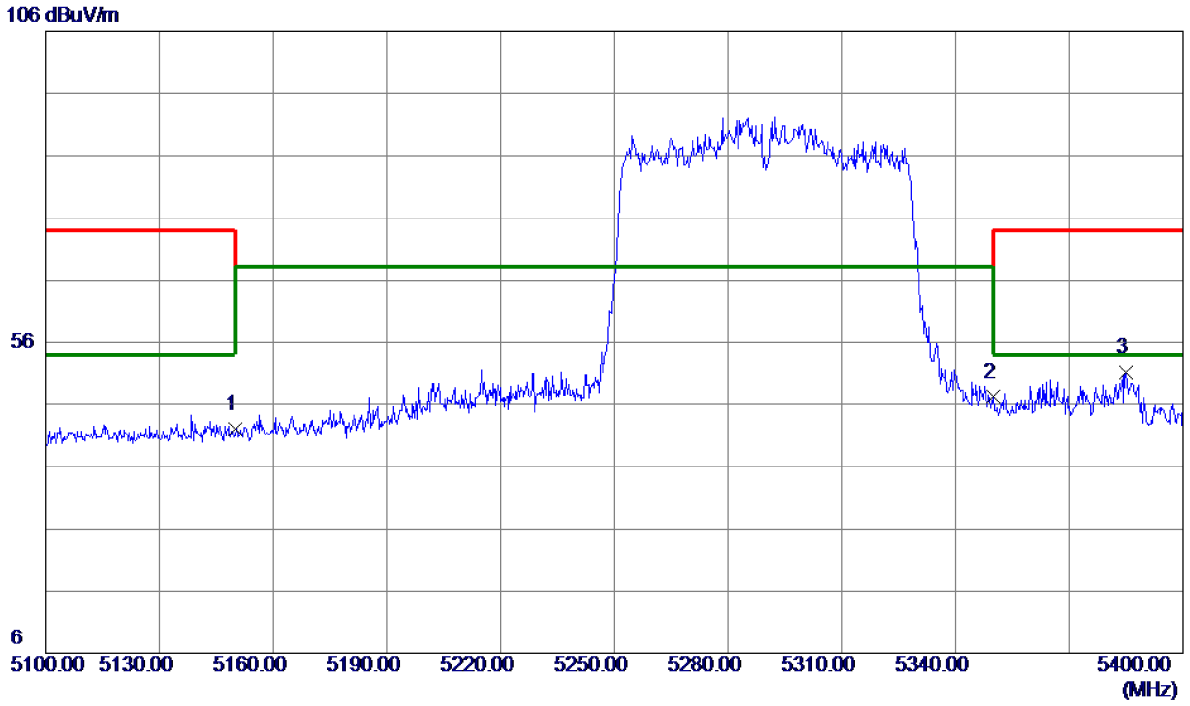

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	43.23	-1.23	42.00	74.00	-32.00	Peak	
2	5350.0000	48.25	-1.12	47.13	74.00	-26.87	Peak	
3 *	5385.0600	52.21	-1.10	51.11	74.00	-22.89	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT80) Mode 5290 MHz	Polarization	Vertical

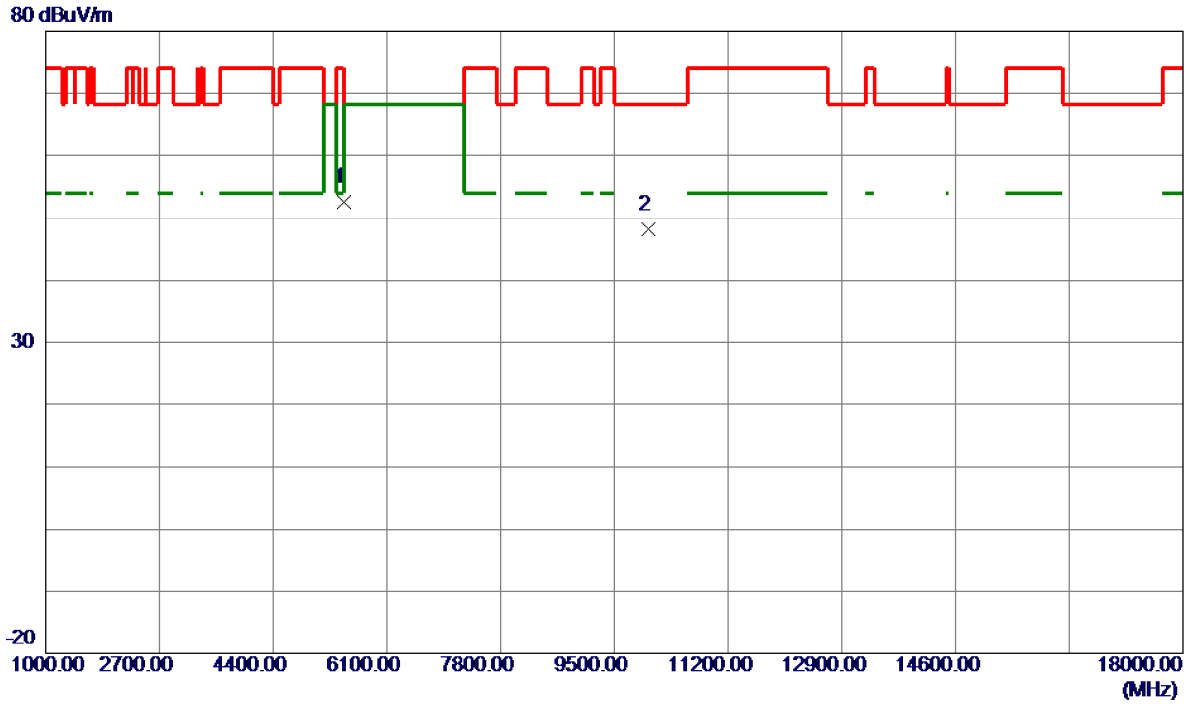

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5449.7500	53.70	-1.06	52.64	74.00	-21.36	Peak	
2 *	10000.6500	43.57	4.68	48.25	68.20	-19.95	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT80) Mode 5290 MHz	Polarization	Horizontal

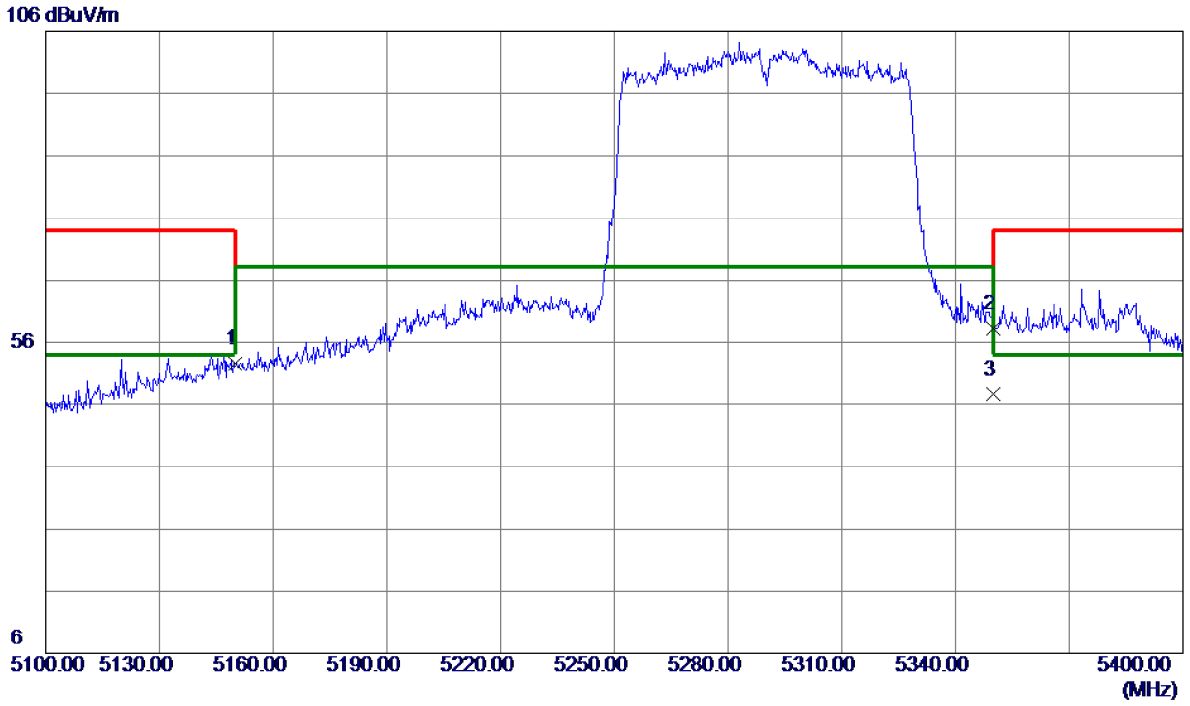

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	53.79	-1.23	52.56	74.00	-21.44	Peak	
2	5350.0000	59.38	-1.12	58.26	74.00	-15.74	Peak	
3 *	5350.0000	48.68	-1.12	47.56	54.00	-6.44	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AC(VHT80) Mode 5290 MHz	Polarization	Horizontal

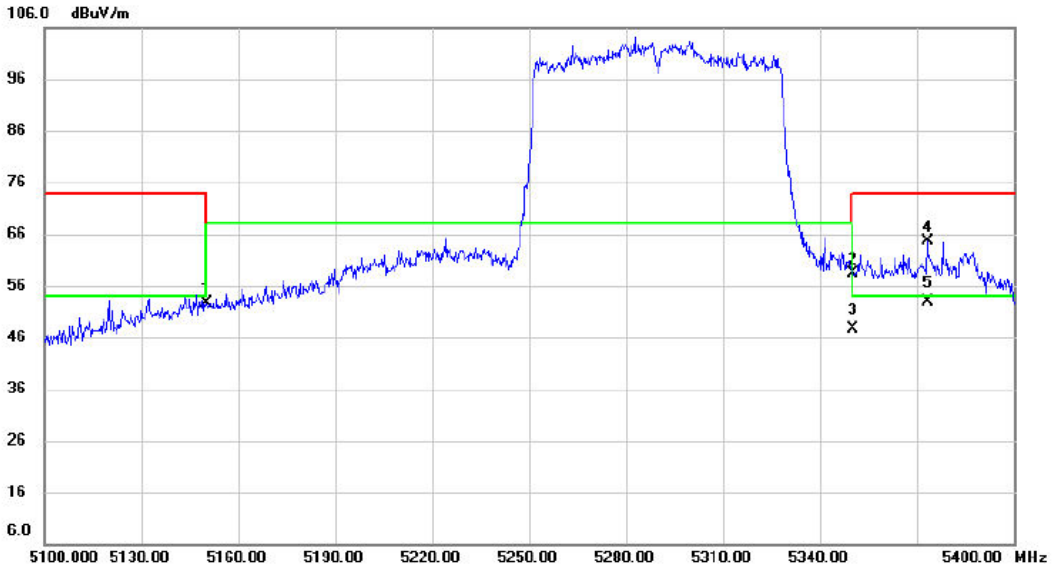

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	53.80	-1.24	52.56	74.00	-21.44	peak	
2		5350.000	59.37	-1.11	58.26	74.00	-15.74	peak	
3		5350.000	48.67	-1.11	47.56	54.00	-6.44	AVG	
4		5373.210	65.77	-1.10	64.67	74.00	-9.33	peak	
5	*	5373.210	54.03	-1.10	52.93	54.00	-1.07	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5260 MHz	Polarization	Vertical

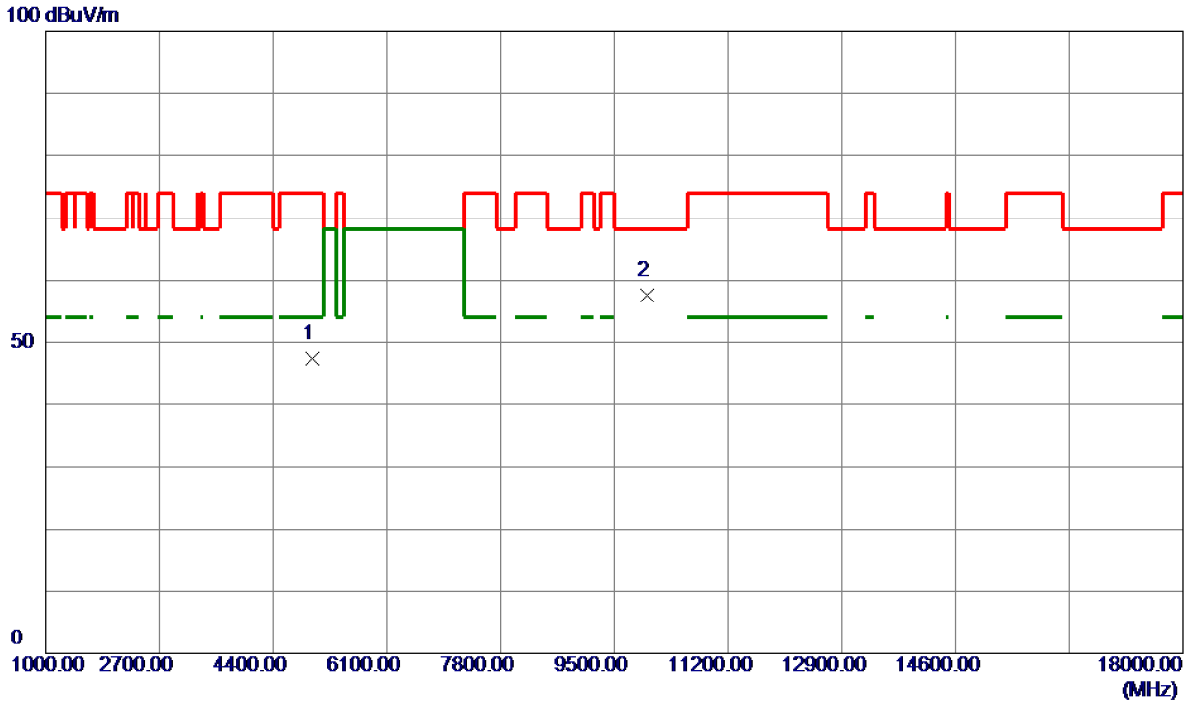

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4986.5000	48.83	-1.35	47.48	74.00	-26.52	Peak	
2 *	9986.2000	52.84	4.68	57.52	68.20	-10.68	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5260 MHz	Polarization	Horizontal

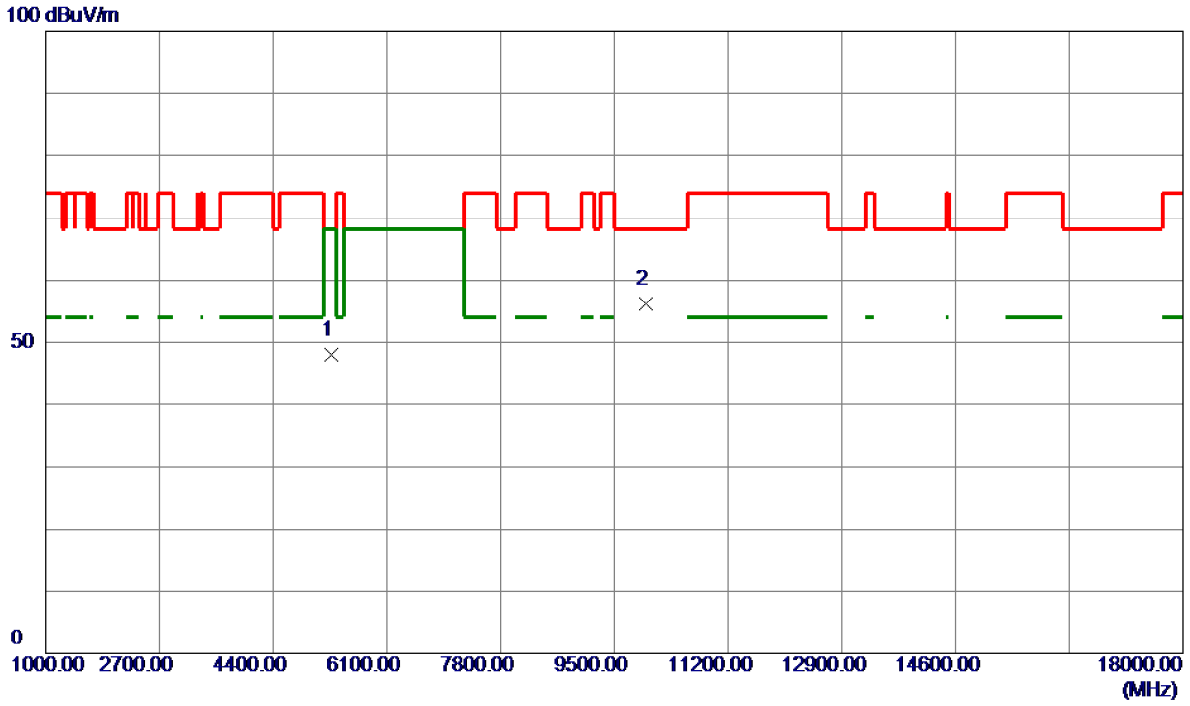

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5261.0500	49.10	-1.17	47.93	68.20	-20.27	Peak	
2 *	9966.6500	51.52	4.68	56.20	68.20	-12.00	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5300 MHz	Polarization	Vertical

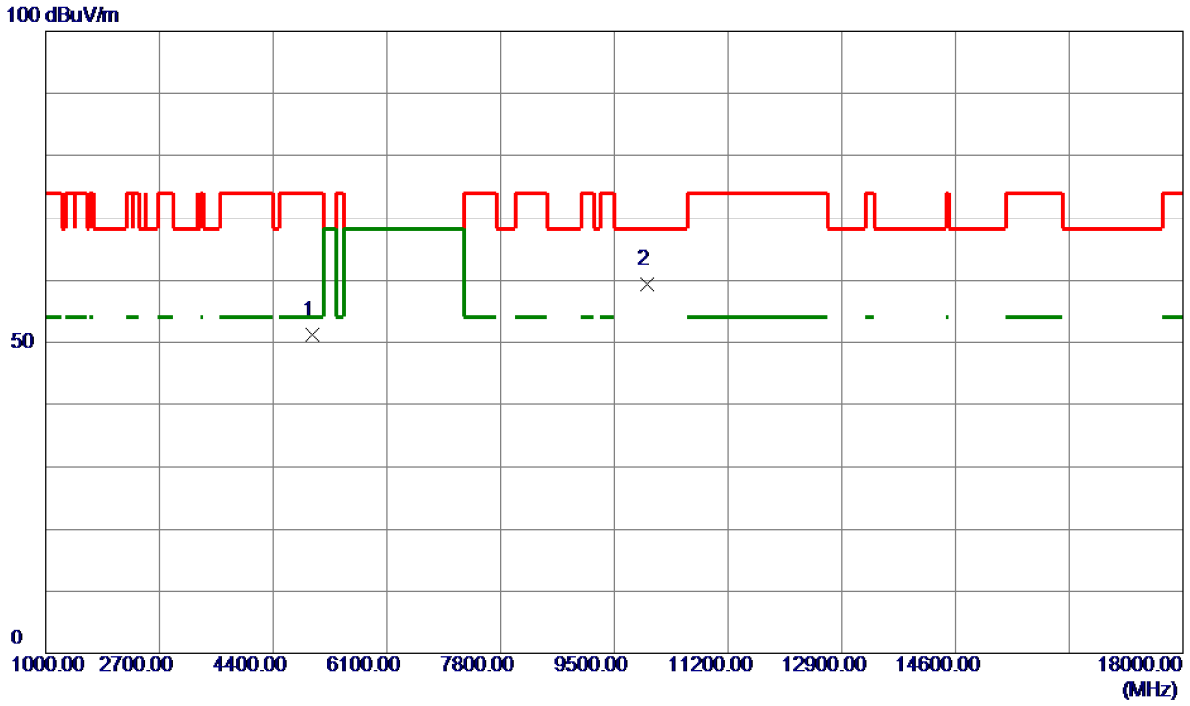

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4989.0500	52.46	-1.34	51.12	74.00	-22.88	Peak	
2 *	9999.8000	54.66	4.68	59.34	68.20	-8.86	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5300 MHz	Polarization	Horizontal

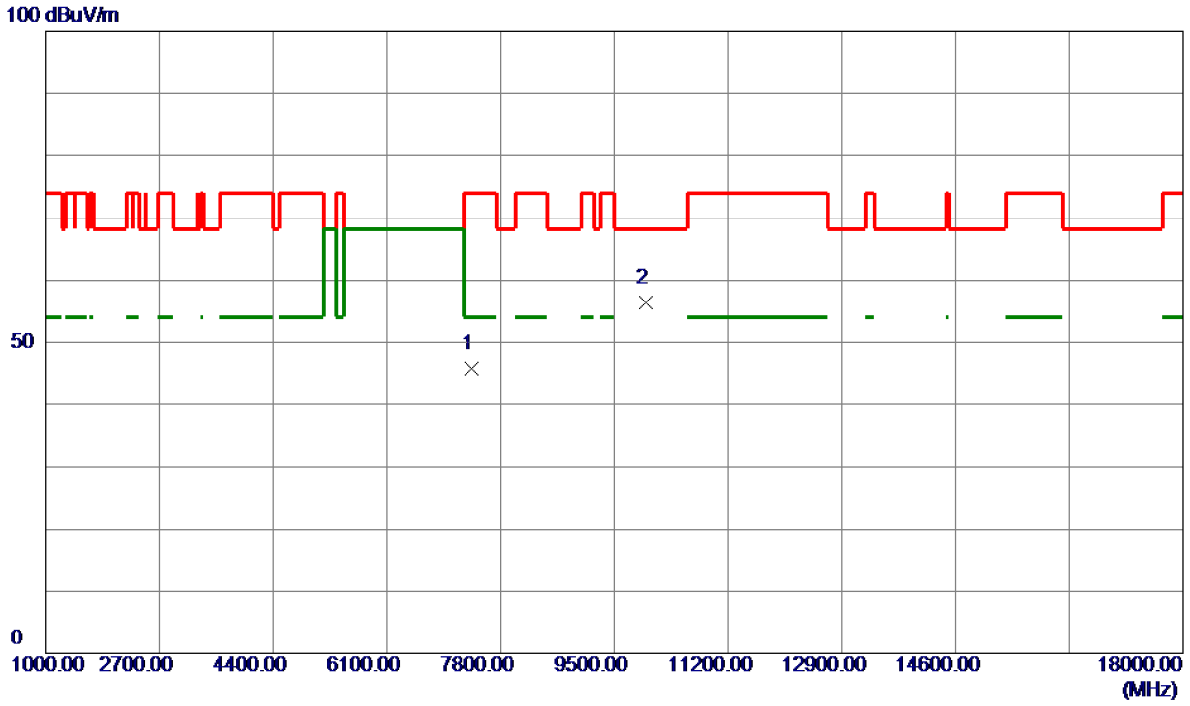

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7372.4500	42.45	3.36	45.81	74.00	-28.19	Peak	
2 *	9972.6000	51.64	4.68	56.32	68.20	-11.88	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5320 MHz	Polarization	Vertical

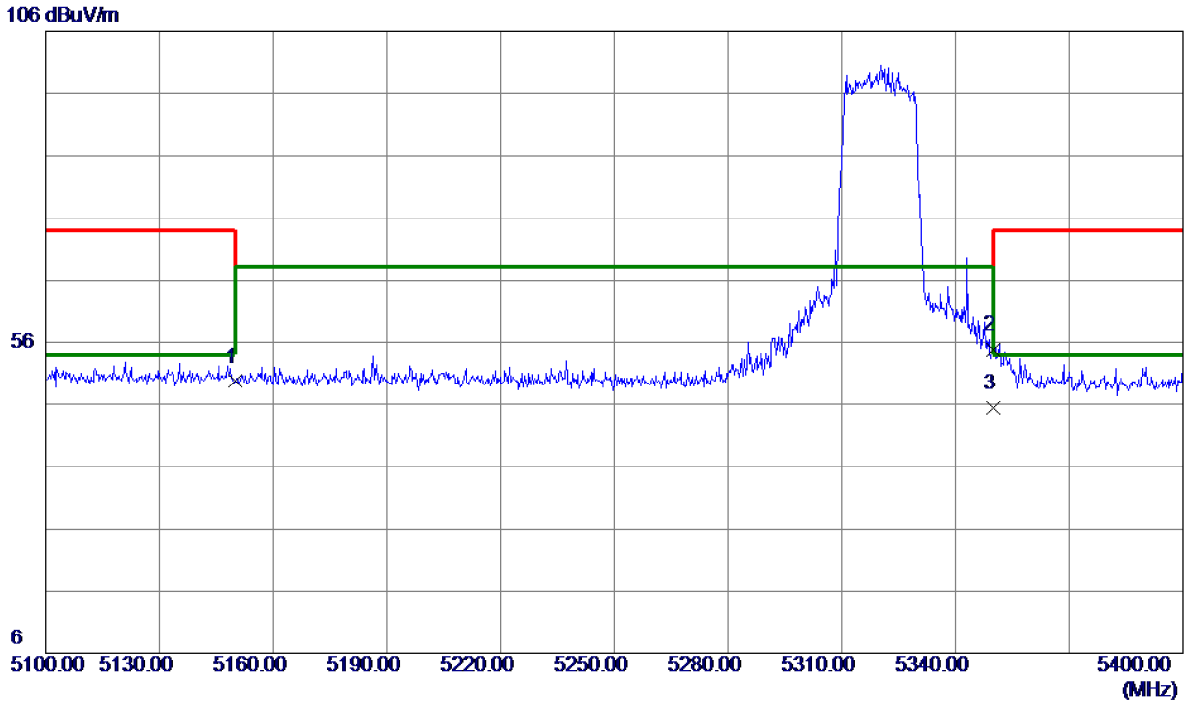

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	40.93	8.77	49.70	74.00	-24.30	Peak	
2	5350.0000	45.96	8.88	54.84	74.00	-19.16	Peak	
3 *	5350.0000	36.45	8.88	45.33	54.00	-8.67	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5320 MHz	Polarization	Vertical

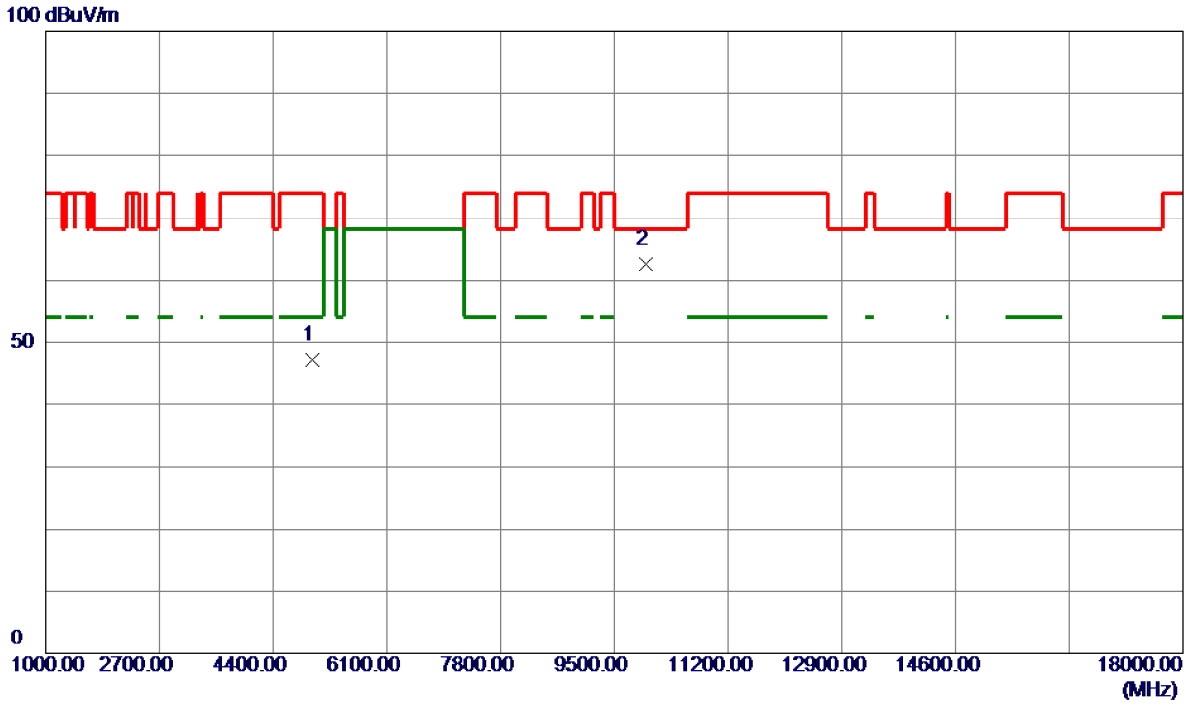

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4993.3000	48.52	-1.33	47.19	74.00	-26.81	Peak	
2 *	9975.1500	57.99	4.68	62.67	68.20	-5.53	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5320 MHz	Polarization	Horizontal

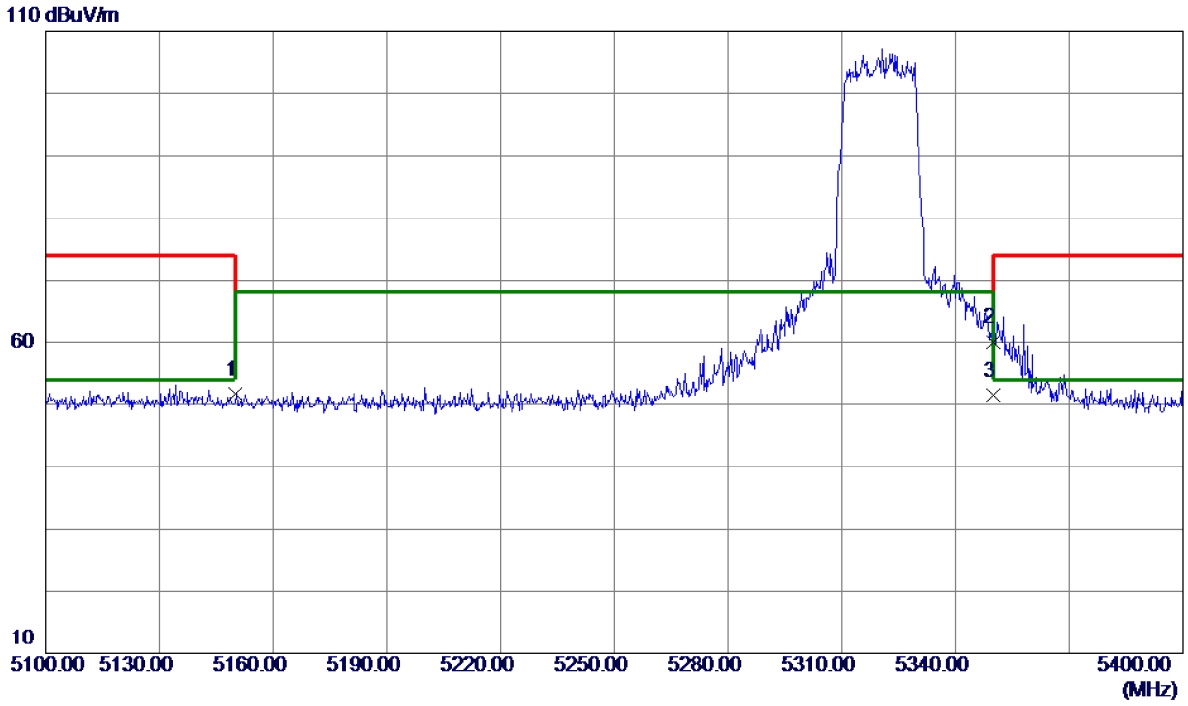

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	42.88	8.77	51.65	74.00	-22.35	Peak	
2	5350.0000	51.06	8.88	59.94	74.00	-14.06	Peak	
3 *	5350.0000	42.45	8.88	51.33	54.00	-2.67	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE20) Mode 5320 MHz	Polarization	Horizontal

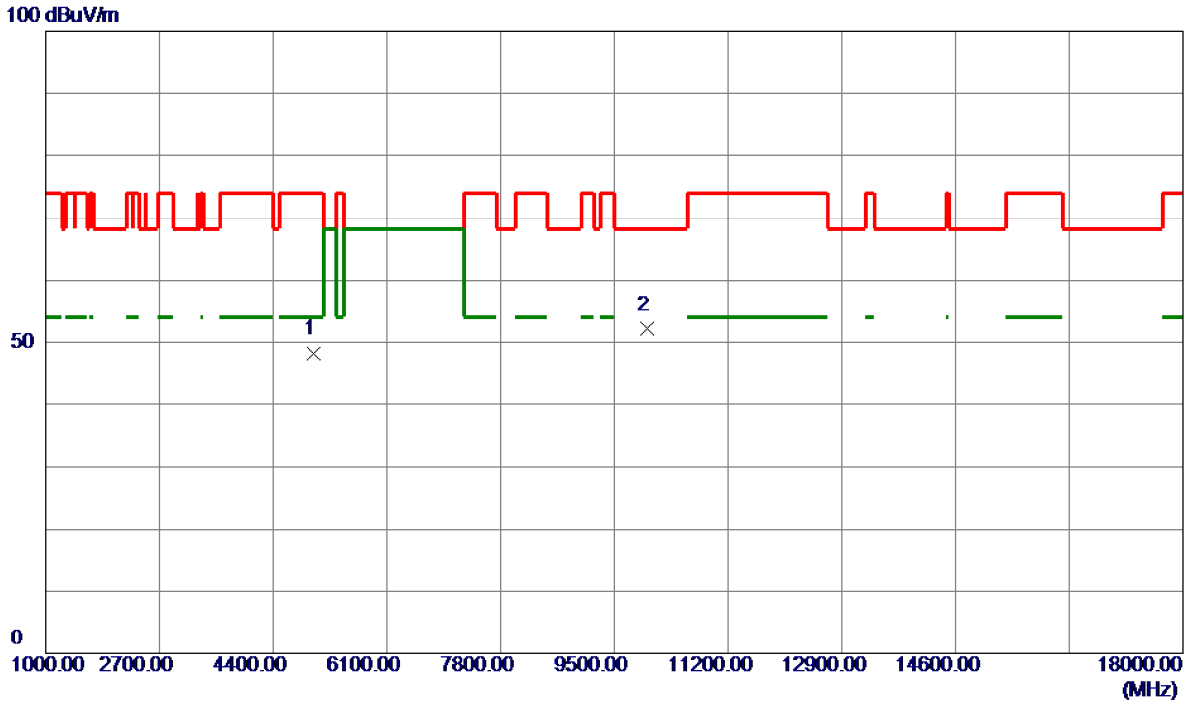

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4998.4000	49.43	-1.32	48.11	74.00	-25.89	Peak	
2 *	9994.7000	47.42	4.68	52.10	68.20	-16.10	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5270 MHz	Polarization	Vertical

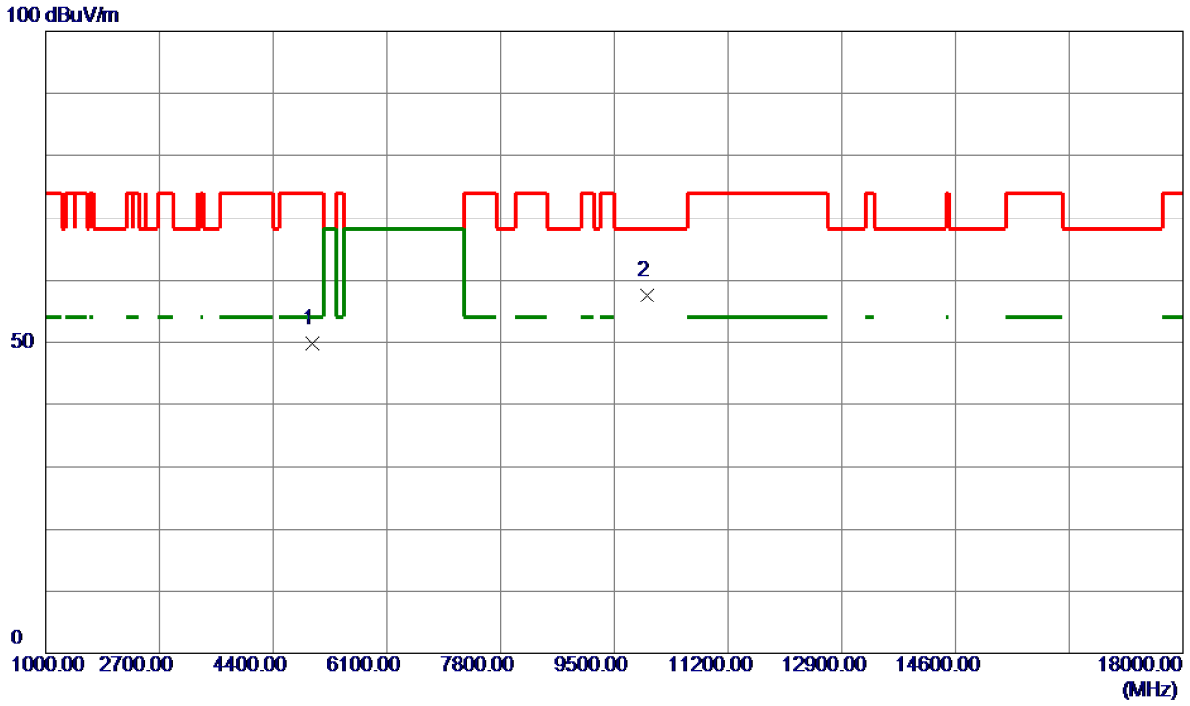

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4993.3000	51.04	-1.33	49.71	74.00	-24.29	Peak	
2 *	9983.6500	52.97	4.68	57.65	68.20	-10.55	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5270 MHz	Polarization	Horizontal

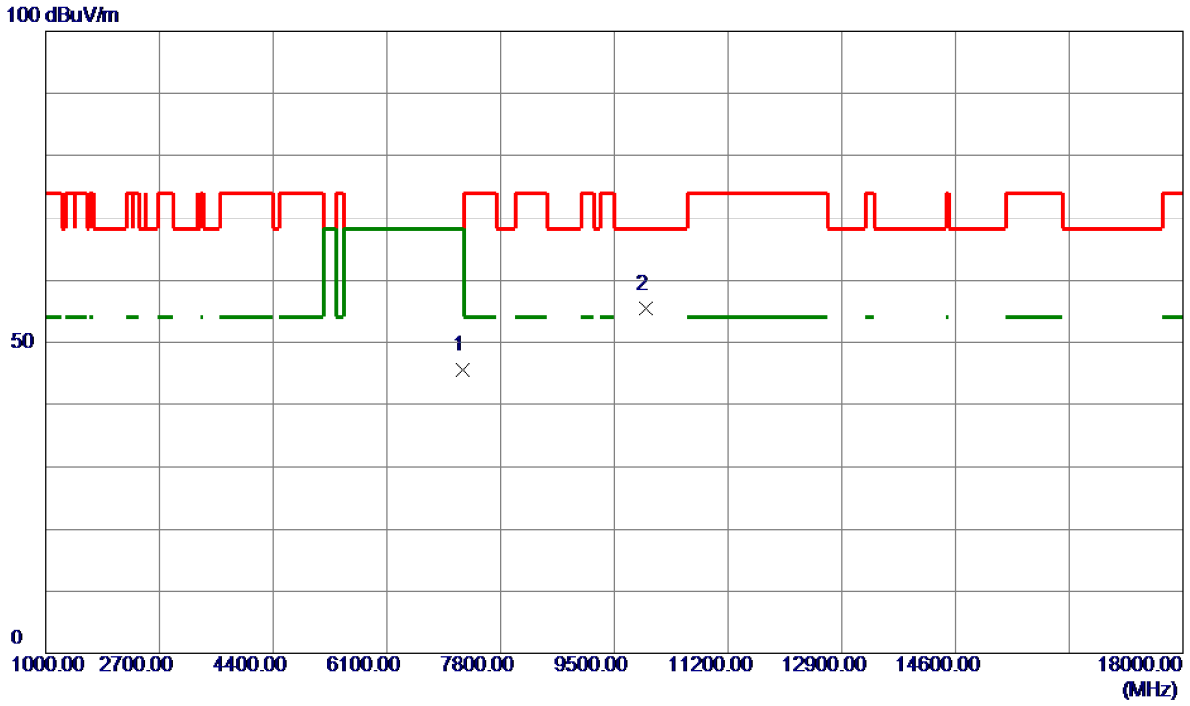

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7231.3500	42.56	2.97	45.53	68.20	-22.67	Peak	
2 *	9965.8000	50.66	4.68	55.34	68.20	-12.86	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5310 MHz	Polarization	Vertical

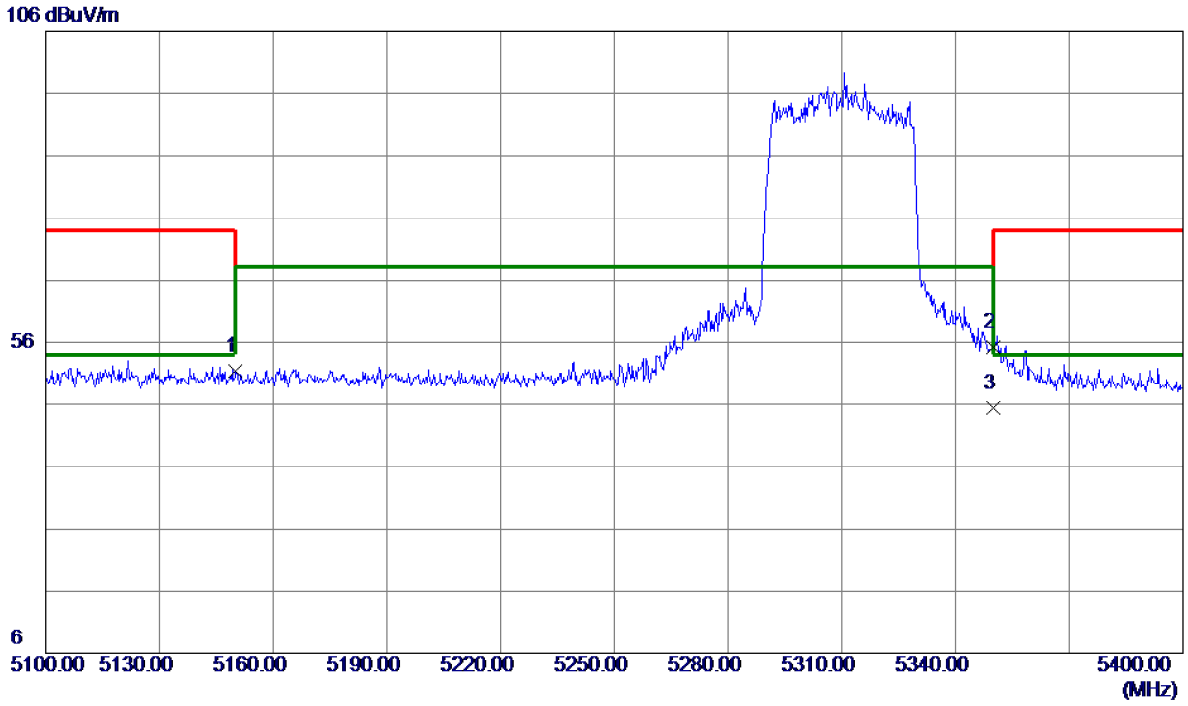

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	42.65	8.77	51.42	74.00	-22.58	Peak	
2	5350.0000	46.26	8.88	55.14	74.00	-18.86	Peak	
3 *	5350.0000	36.60	8.88	45.48	54.00	-8.52	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5310 MHz	Polarization	Vertical

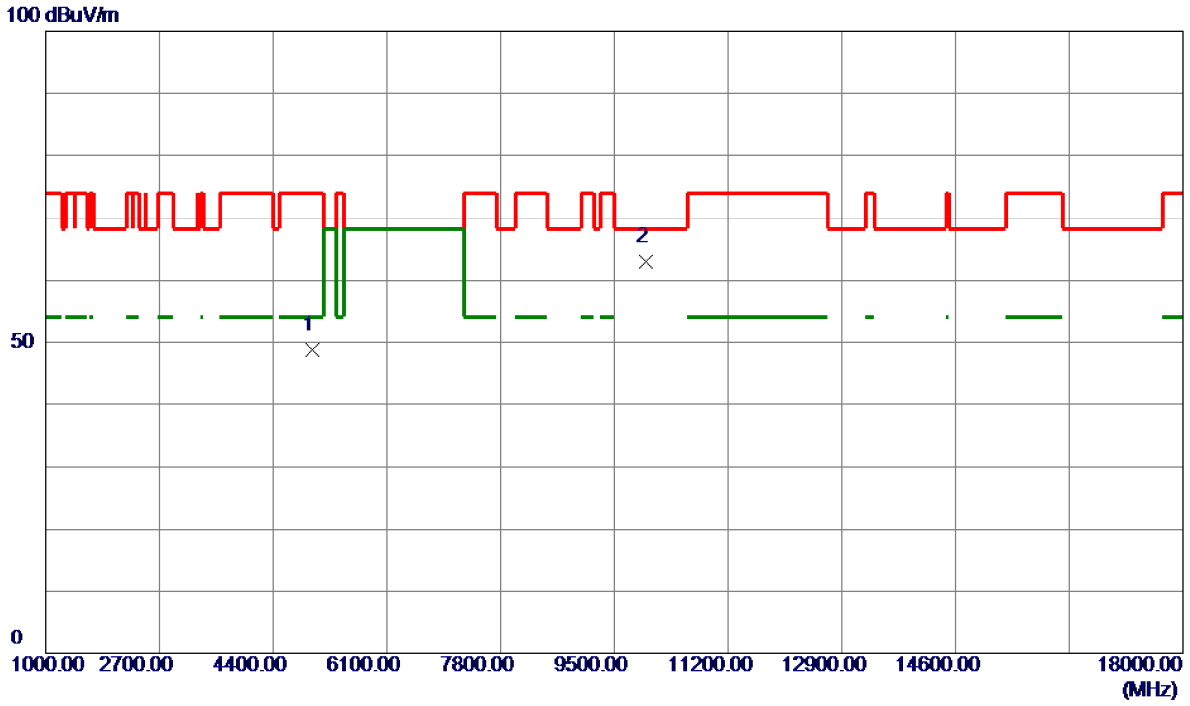

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4985.6500	50.17	-1.35	48.82	74.00	-25.18	Peak	
2 *	9964.9500	58.40	4.68	63.08	68.20	-5.12	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5310 MHz	Polarization	Horizontal

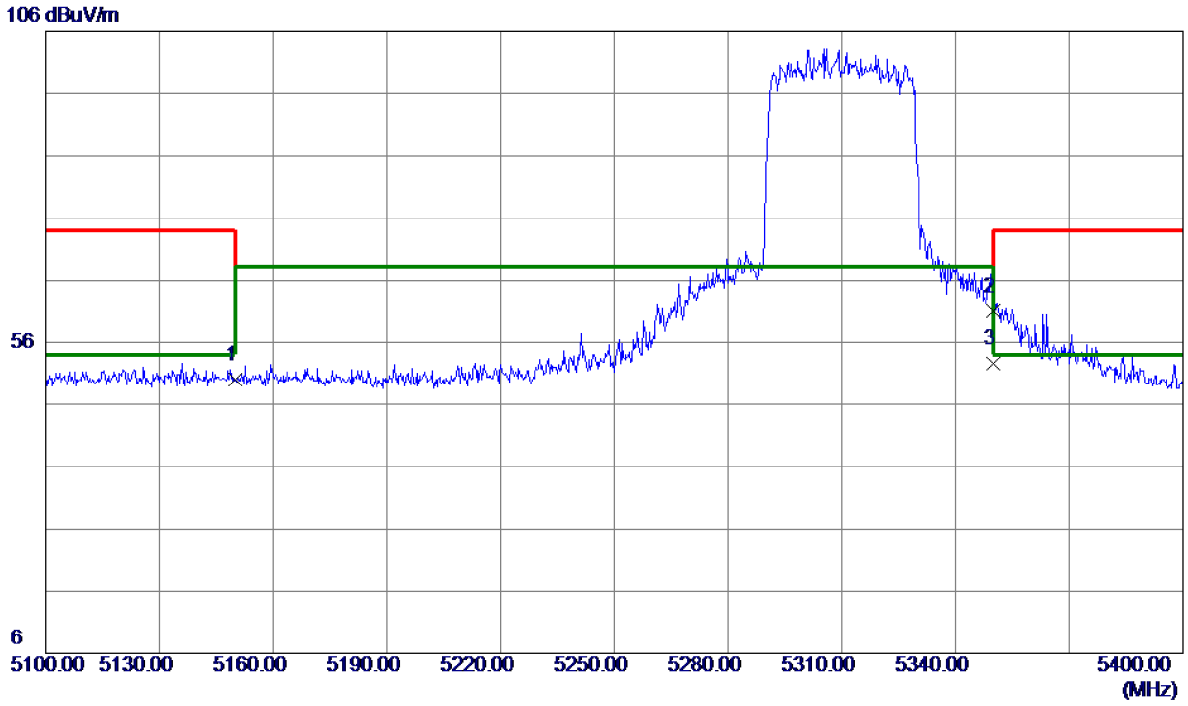

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	41.25	8.77	50.02	74.00	-23.98	Peak	
2	5350.0000	52.04	8.88	60.92	74.00	-13.08	Peak	
3 *	5350.0000	43.76	8.88	52.64	54.00	-1.36	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE40) Mode 5310 MHz	Polarization	Horizontal

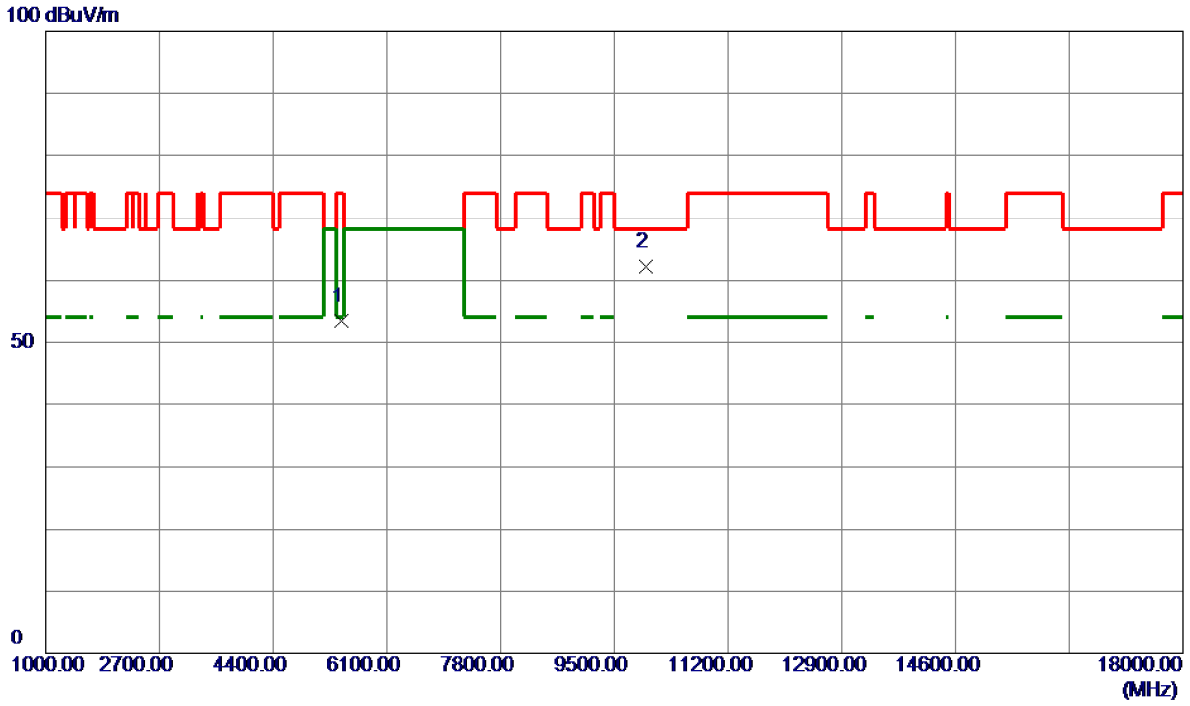

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5416.6000	54.53	-1.08	53.45	74.00	-20.55	Peak	
2 *	9969.2000	57.46	4.68	62.14	68.20	-6.06	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE80) Mode 5290 MHz	Polarization	Vertical

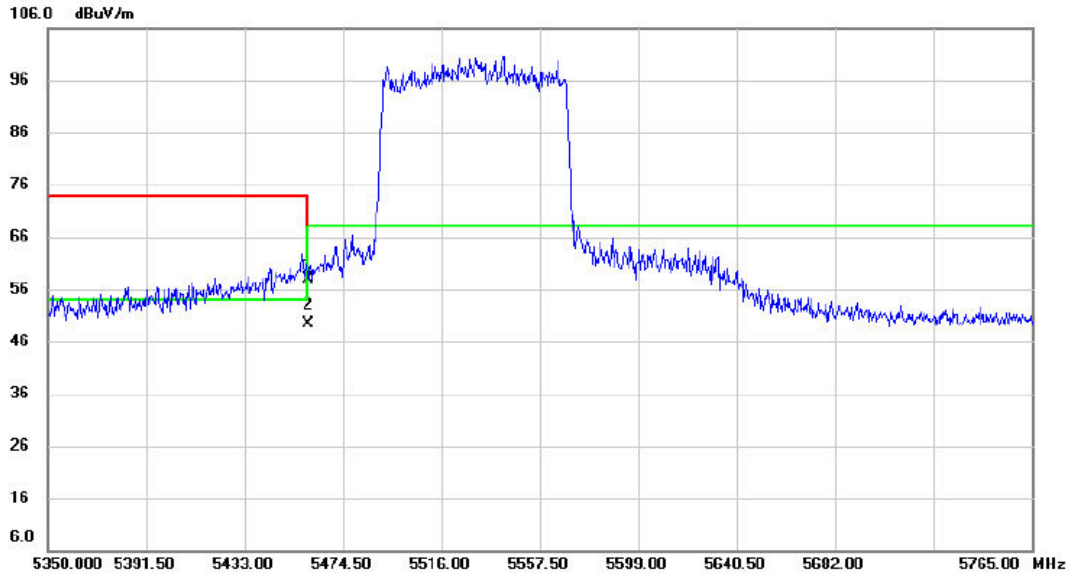

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1		5460.000	48.98	8.95	57.93	74.00	-16.07	peak	
2	*	5460.000	40.46	8.95	49.41	54.00	-4.59	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE80) Mode 5290 MHz	Polarization	Vertical

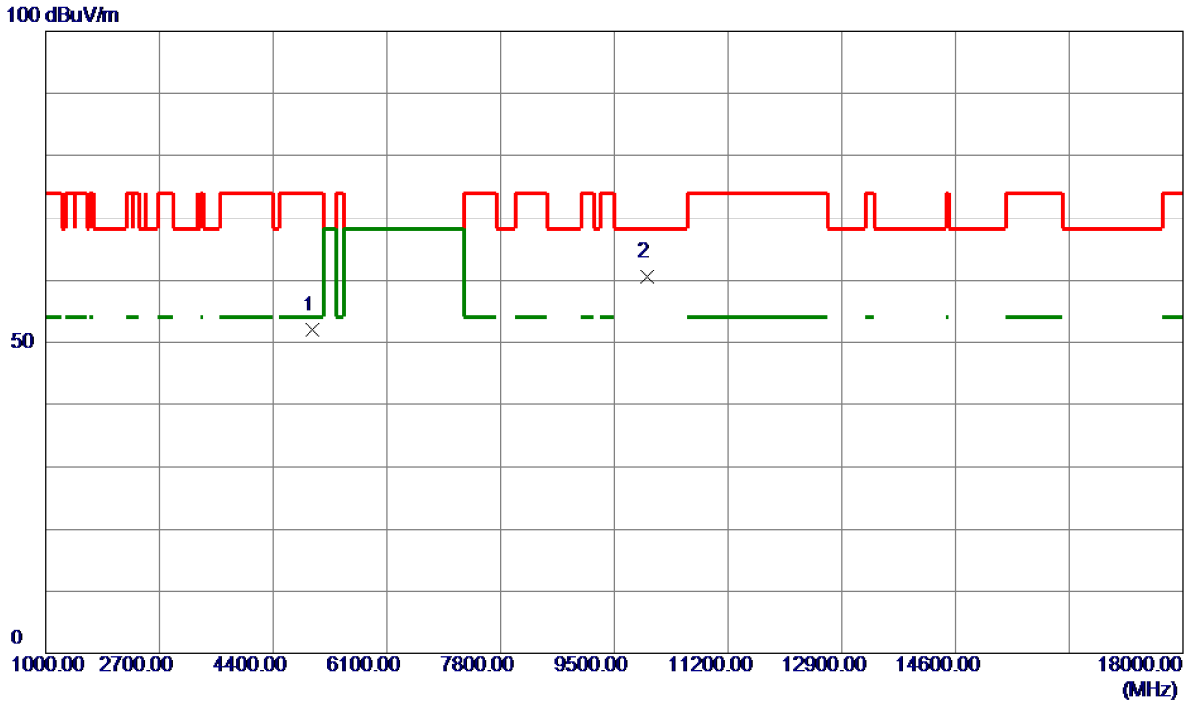

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4990.7500	53.41	-1.34	52.07	74.00	-21.93	Peak	
2 *	9999.8000	55.91	4.68	60.59	68.20	-7.61	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE80) Mode 5290 MHz	Polarization	Horizontal

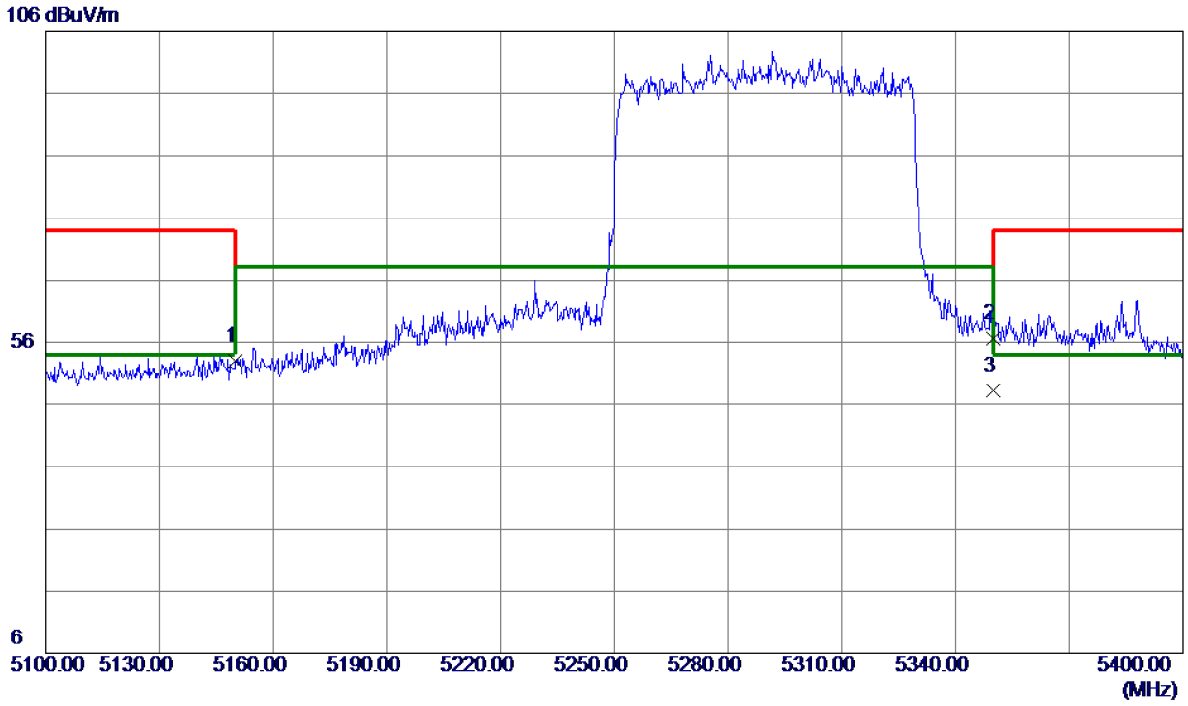

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5150.0000	44.18	8.77	52.95	74.00	-21.05	Peak	
2	5350.0000	47.79	8.88	56.67	74.00	-17.33	Peak	
3 *	5350.0000	39.27	8.88	48.15	54.00	-5.85	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2A_TX AX(HE80) Mode 5290 MHz	Polarization	Horizontal

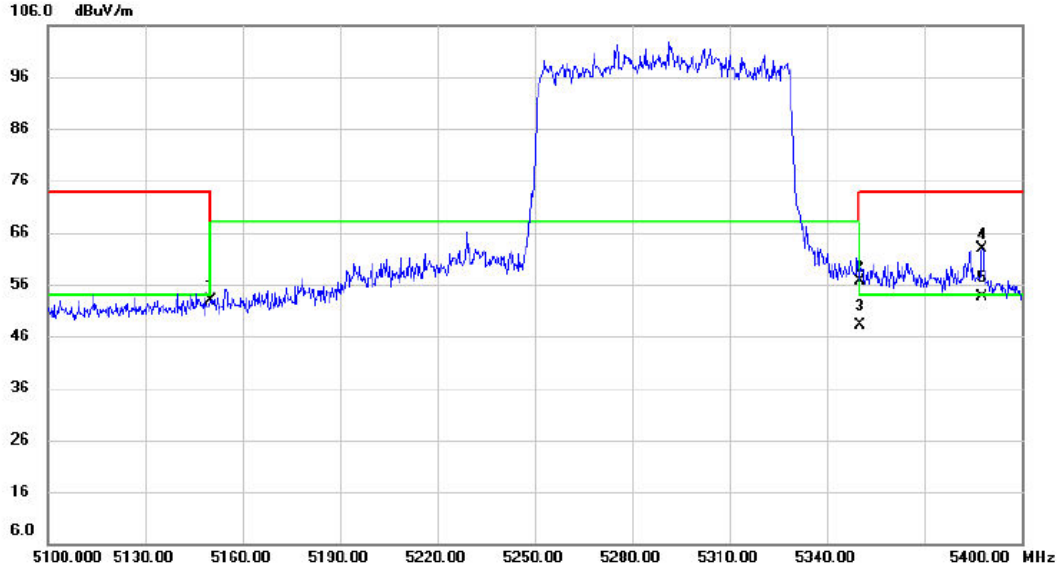

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1		5150.000	44.19	8.76	52.95	74.00	-21.05	peak	
2		5350.000	47.78	8.89	56.67	74.00	-17.33	peak	
3		5350.000	39.26	8.89	48.15	54.00	-5.85	AVG	
4		5387.850	53.99	8.90	62.89	74.00	-11.11	peak	
5	*	5387.850	44.81	8.90	53.71	54.00	-0.29	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5500 MHz	Polarization	Vertical

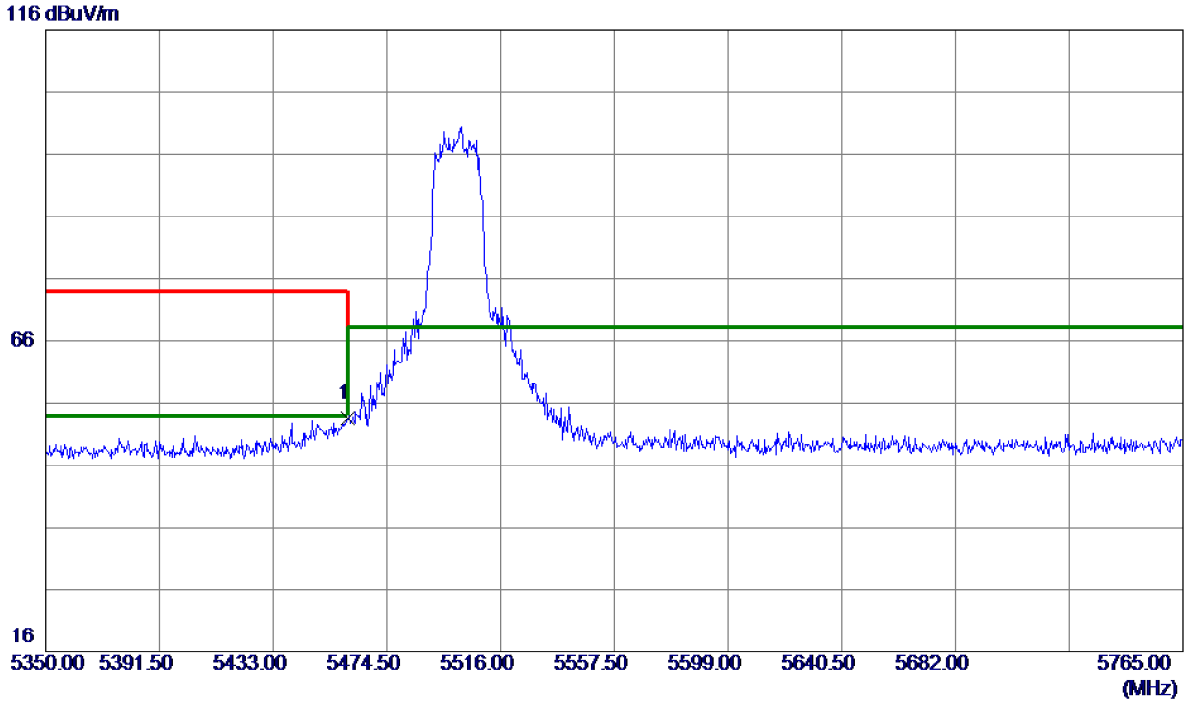

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5460.0000	54.89	-1.31	53.58	74.00	-20.42	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5500 MHz	Polarization	Vertical

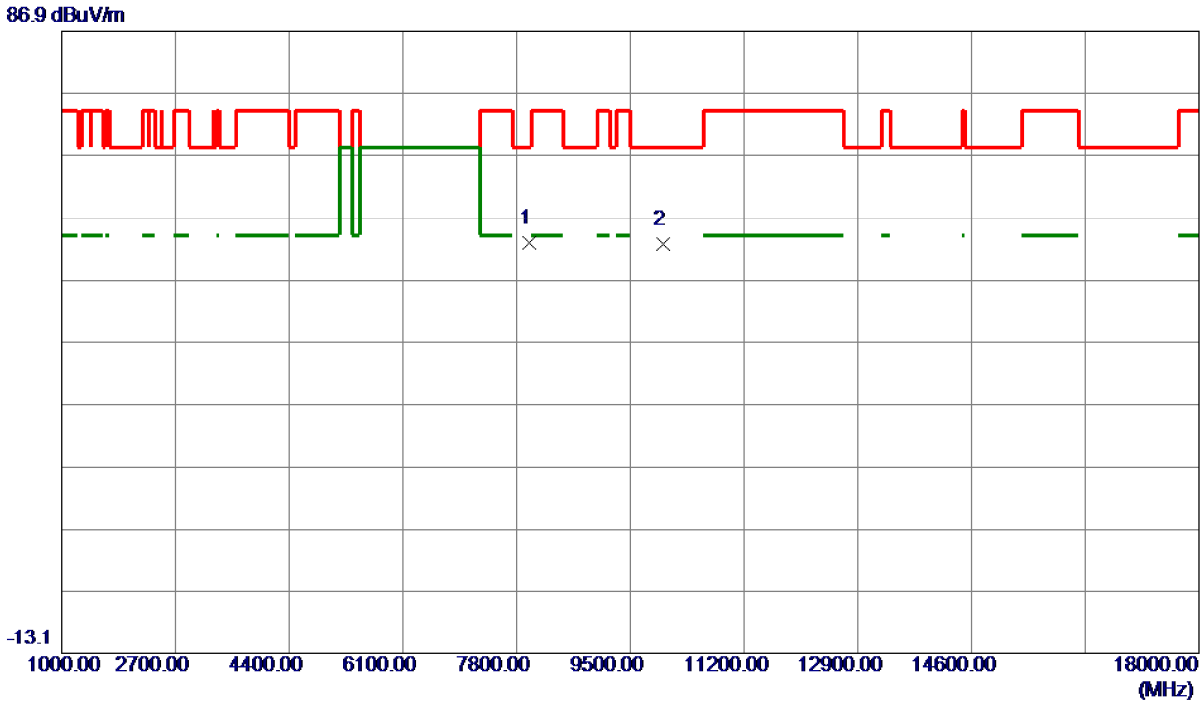

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	7998.0500	48.12	4.74	52.86	68.20	-15.34	Peak	
2	9999.8000	47.96	4.68	52.64	68.20	-15.56	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5500 MHz	Polarization	Horizontal

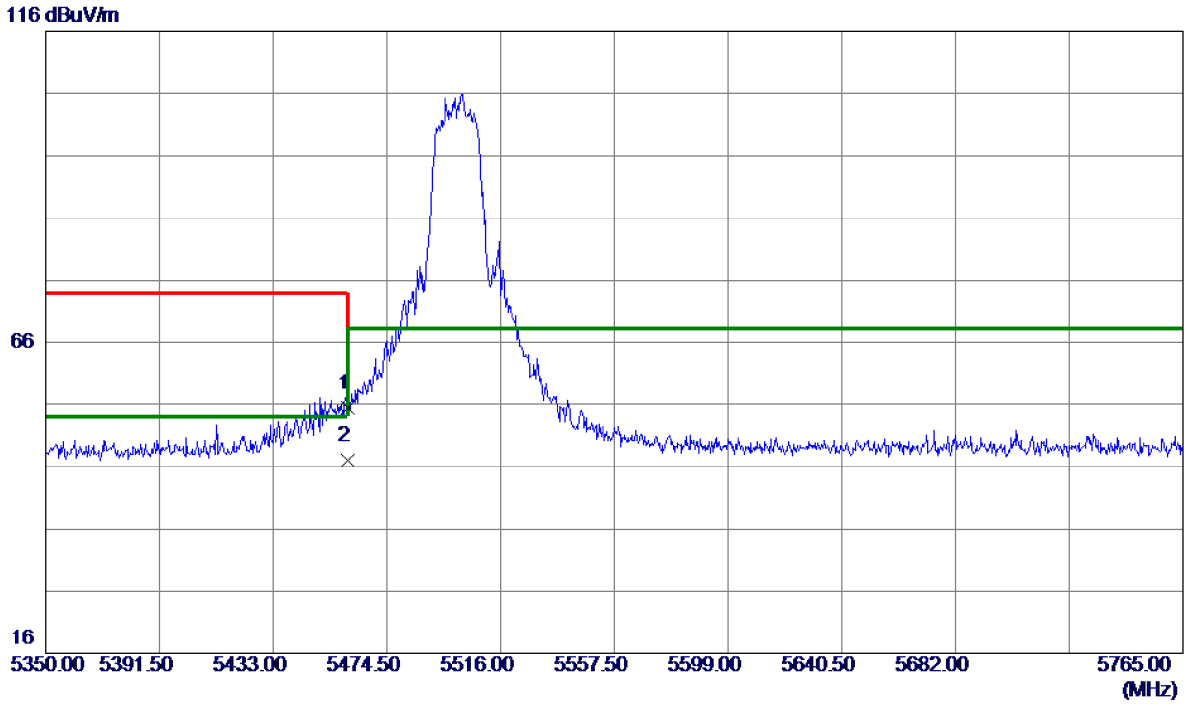

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	56.77	-1.31	55.46	74.00	-18.54	Peak	
2 *	5460.0000	48.23	-1.31	46.92	54.00	-7.08	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5500 MHz	Polarization	Horizontal

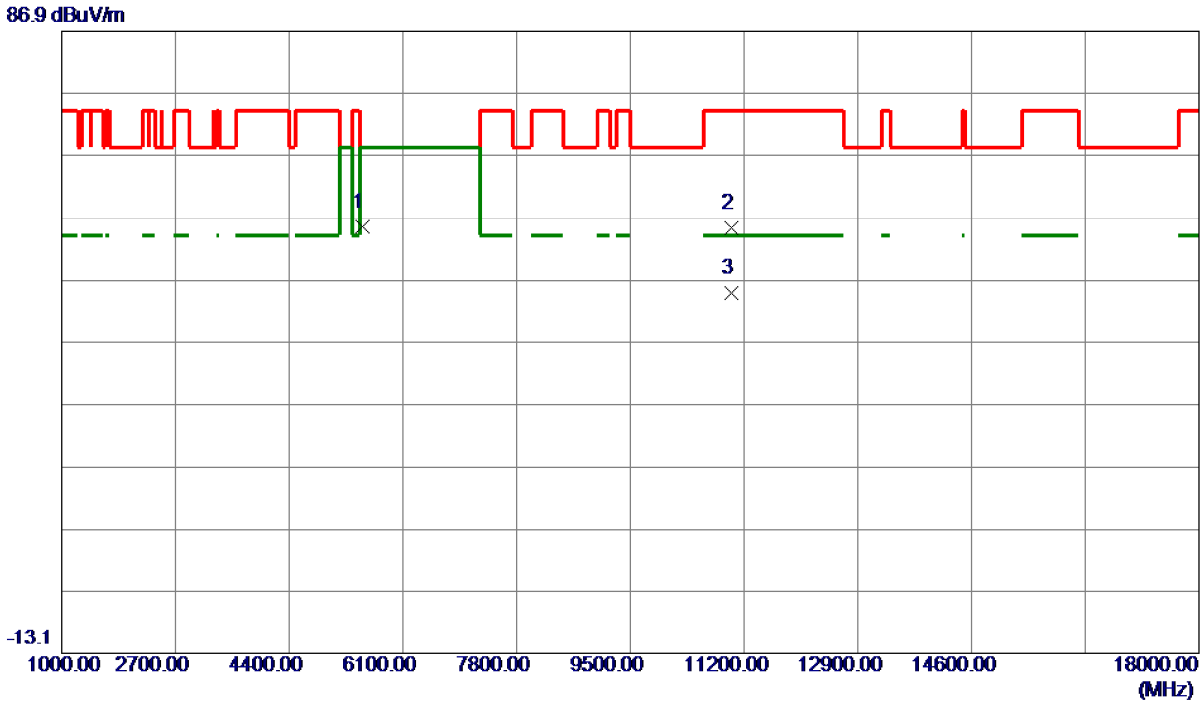

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5501.6000	56.57	-1.03	55.54	68.20	-12.66	Peak	
2	11005.3500	49.22	6.11	55.33	74.00	-18.67	Peak	
3 *	11005.3500	38.72	6.11	44.83	54.00	-9.17	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5580 MHz	Polarization	Vertical

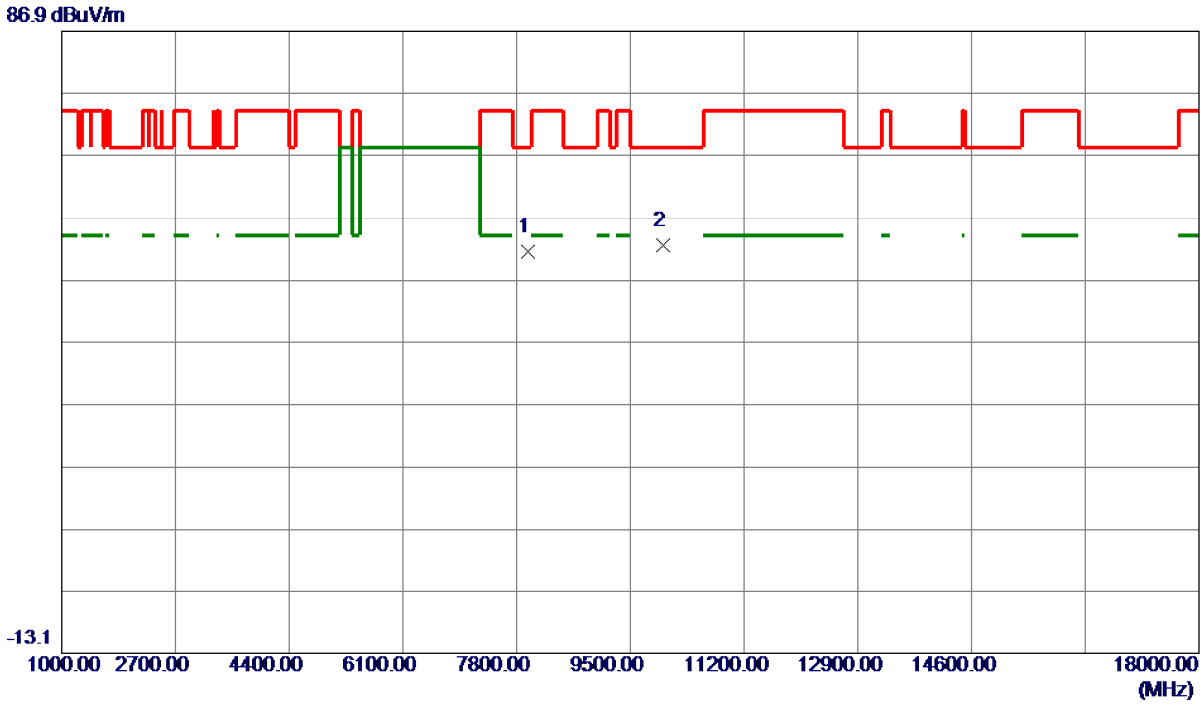

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7979.3500	46.82	4.70	51.52	68.20	-16.68	Peak	
2 *	9999.8000	47.88	4.68	52.56	68.20	-15.64	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5580 MHz	Polarization	Horizontal

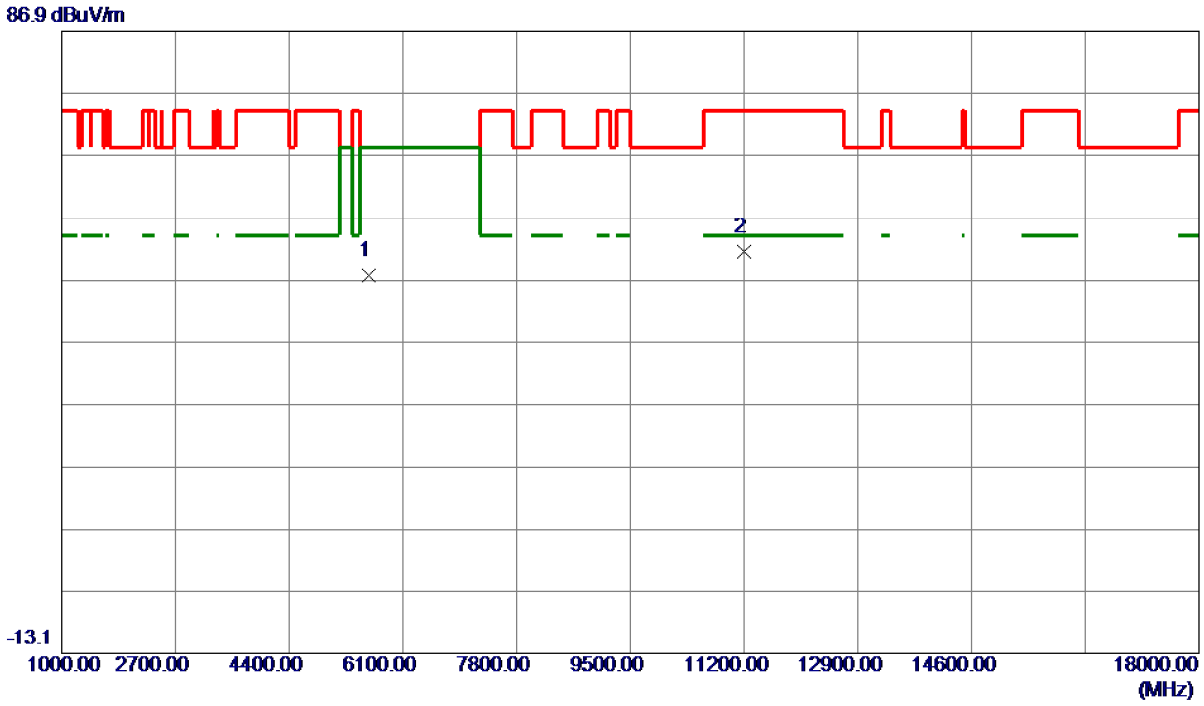

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5596.8000	48.50	-0.87	47.63	68.20	-20.57	Peak	
2	11199.1500	45.51	6.02	51.53	74.00	-22.47	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5700 MHz	Polarization	Vertical

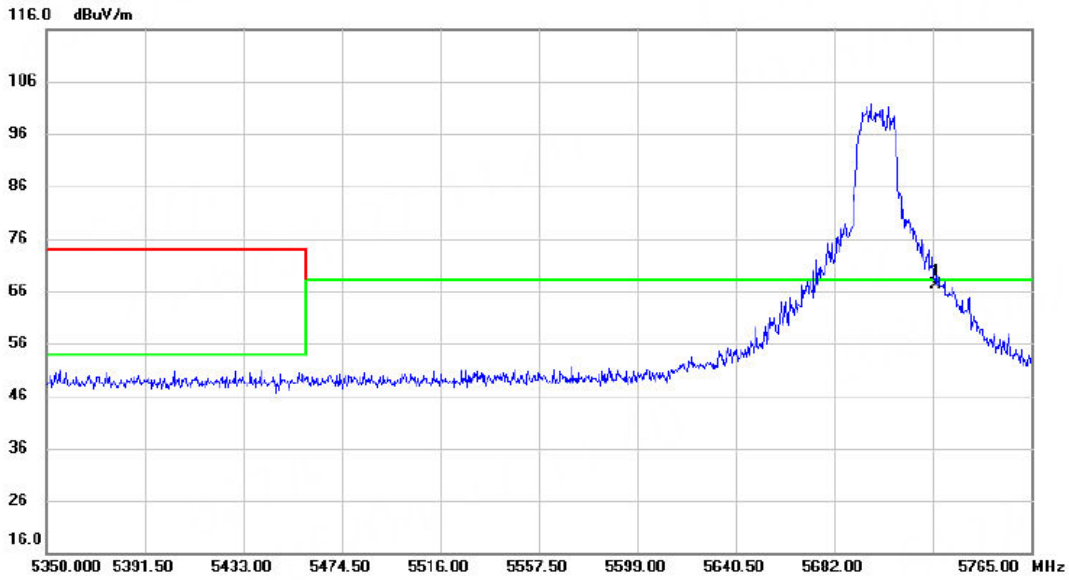

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5725.000	68.15	-1.06	67.09	68.20	-1.11	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5700 MHz	Polarization	Vertical

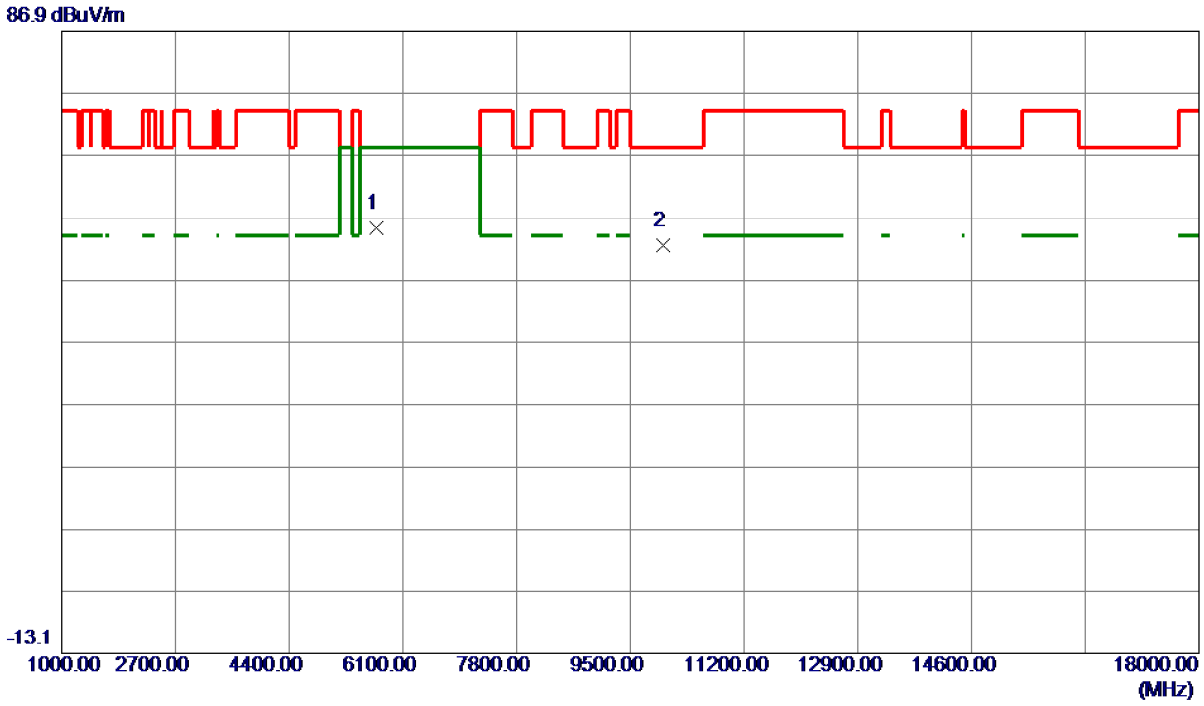

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5703.0500	55.98	-0.70	55.28	68.20	-12.92	Peak	
2	9999.8000	47.75	4.68	52.43	68.20	-15.77	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5700 MHz	Polarization	Horizontal

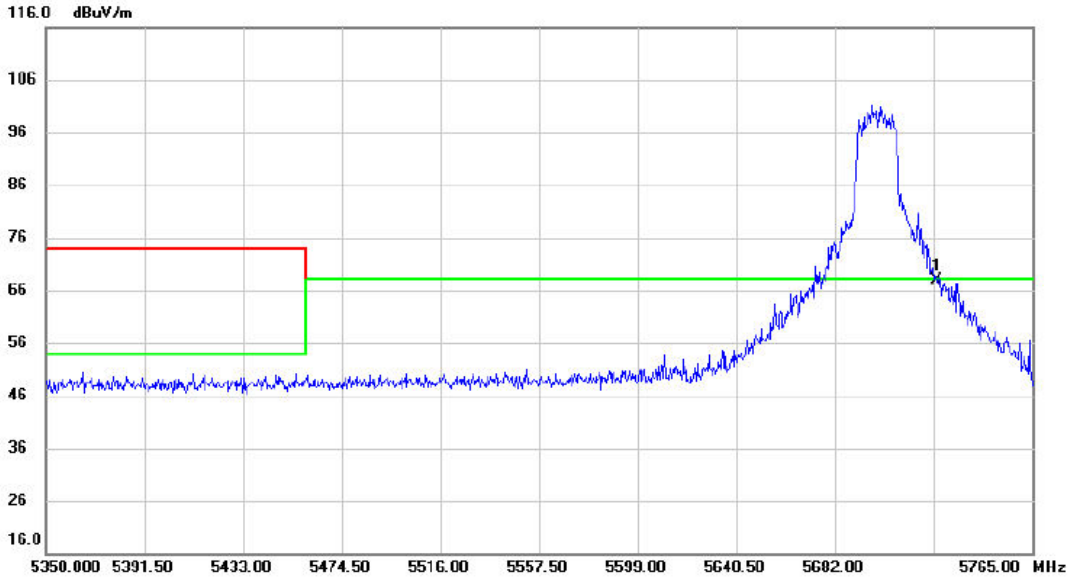

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1	*	5725.000	68.95	-1.06	67.89	68.20	-0.31	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX A Mode 5700 MHz	Polarization	Horizontal

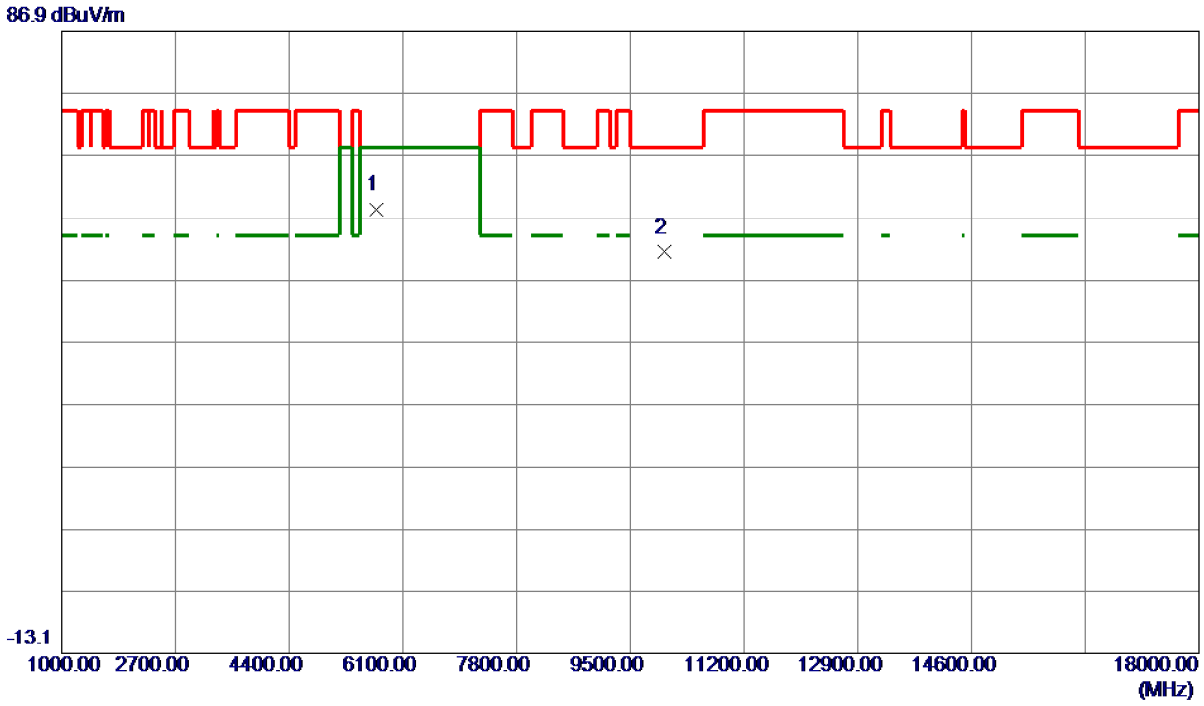

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5699.6500	59.06	-0.70	58.36	68.20	-9.84	Peak	
2	10000.6500	46.72	4.68	51.40	68.20	-16.80	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5500 MHz	Polarization	Vertical

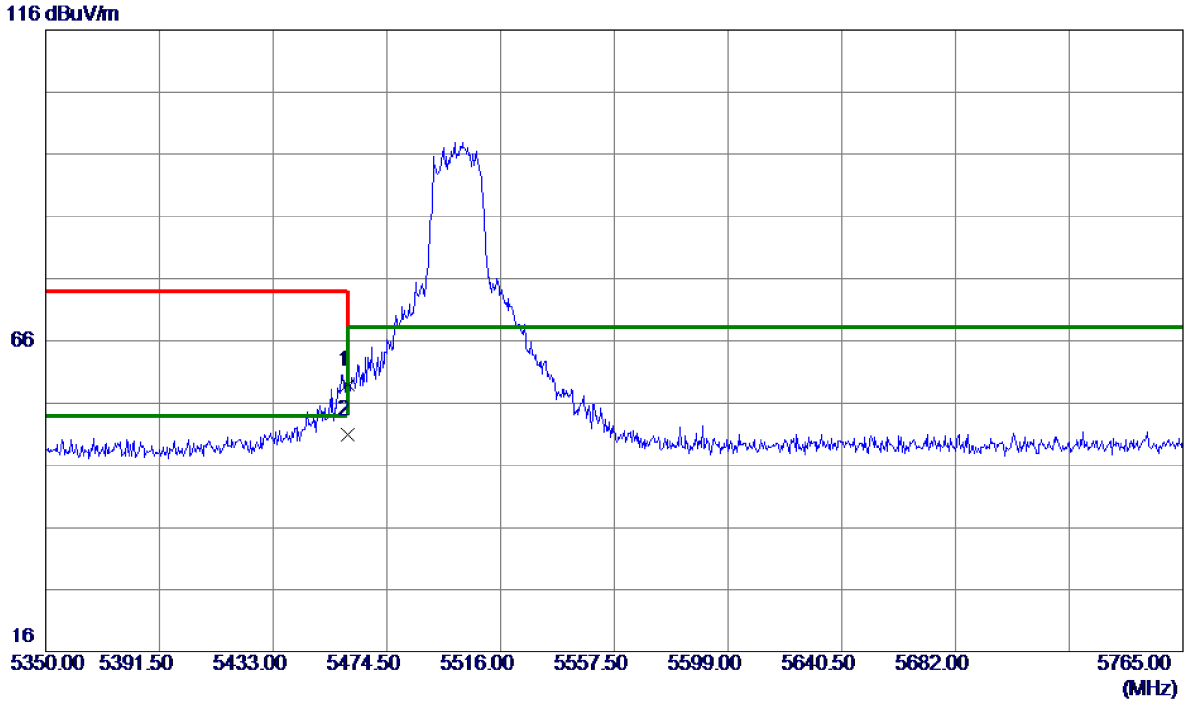

No.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	60.31	-1.31	59.00	74.00	-15.00	Peak	
2 *	5460.0000	52.37	-1.31	51.06	54.00	-2.94	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5500 MHz	Polarization	Vertical

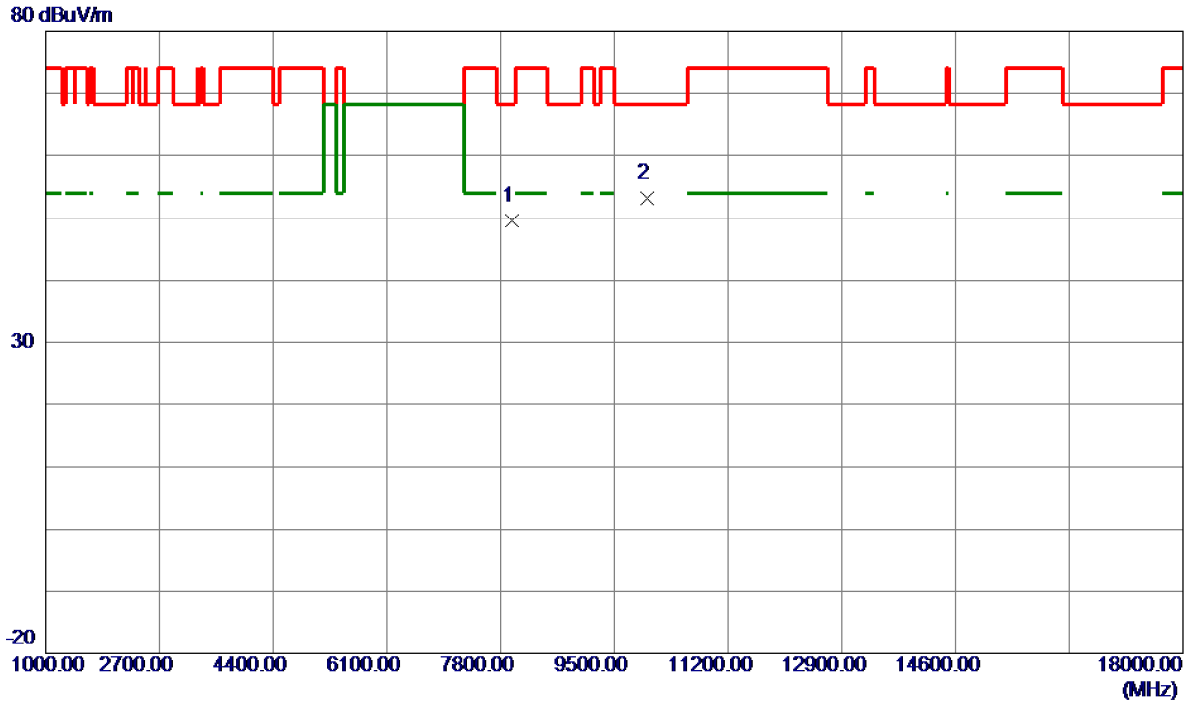

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7977.6500	44.99	4.69	49.68	68.20	-18.52	Peak	
2 *	9999.8000	48.46	4.68	53.14	68.20	-15.06	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5500 MHz	Polarization	Horizontal

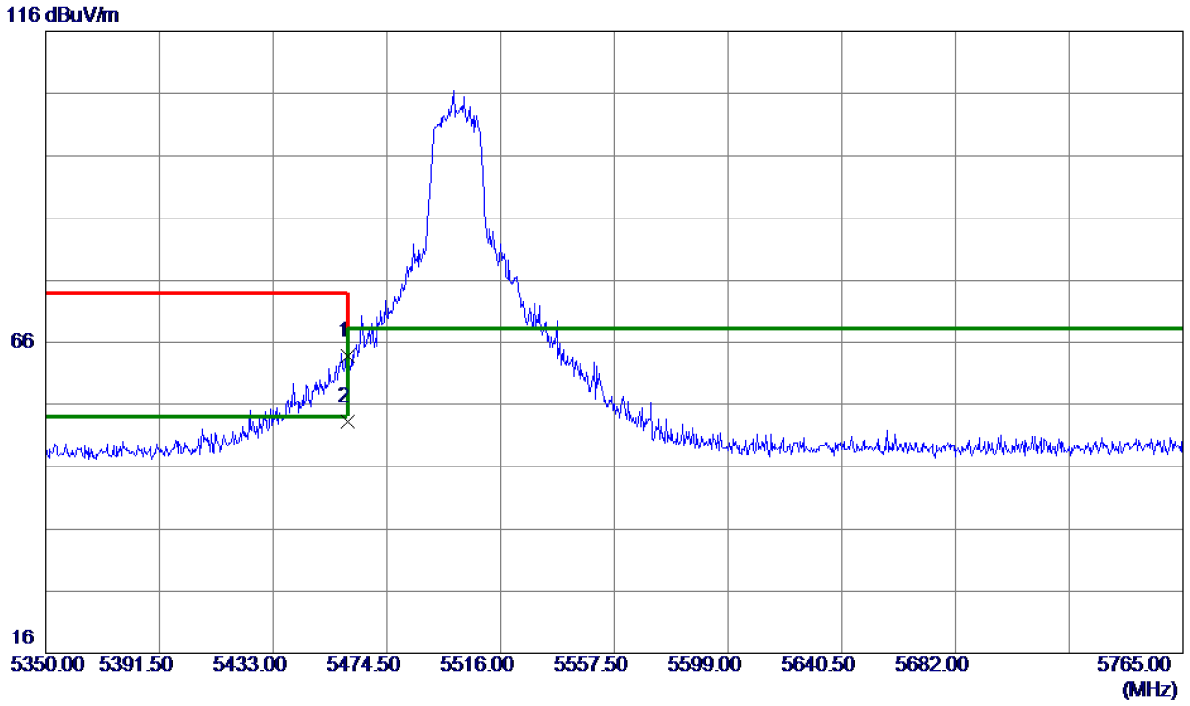

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	65.07	-1.31	63.76	74.00	-10.24	Peak	
2 *	5460.0000	54.59	-1.31	53.28	54.00	-0.72	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5500 MHz	Polarization	Horizontal

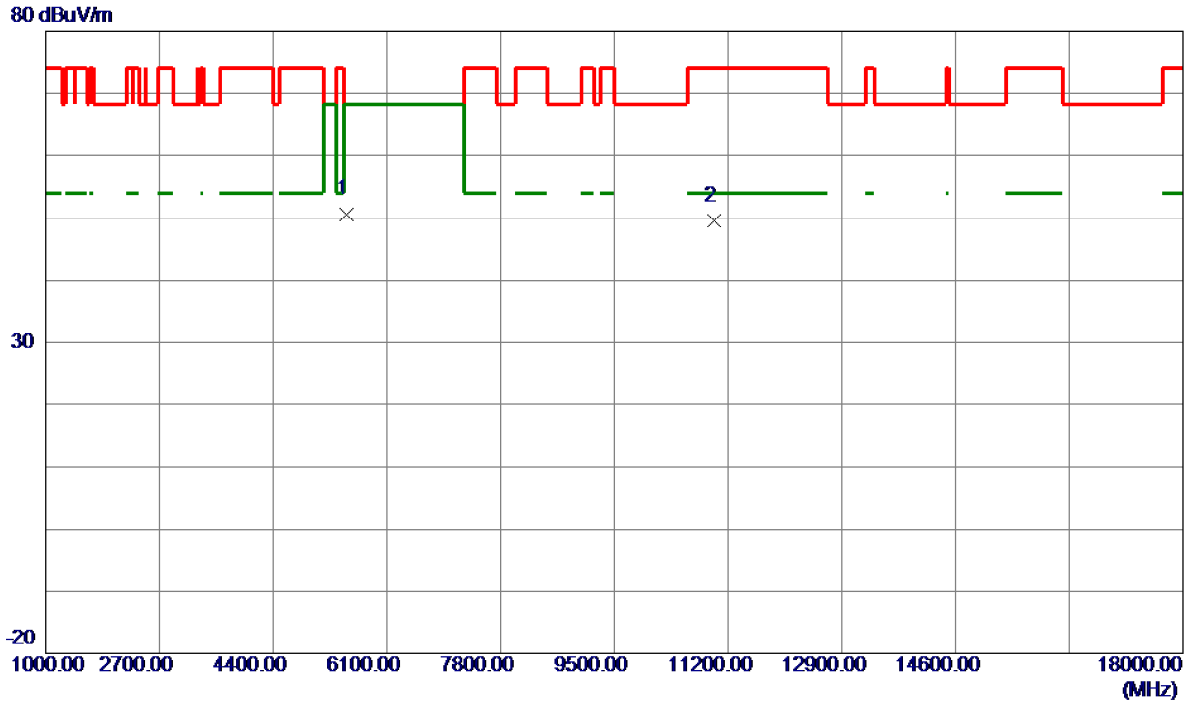

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5498.2000	51.73	-1.03	50.70	68.20	-17.50	Peak	
2	10995.1500	43.58	6.10	49.68	74.00	-24.32	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5580 MHz	Polarization	Vertical

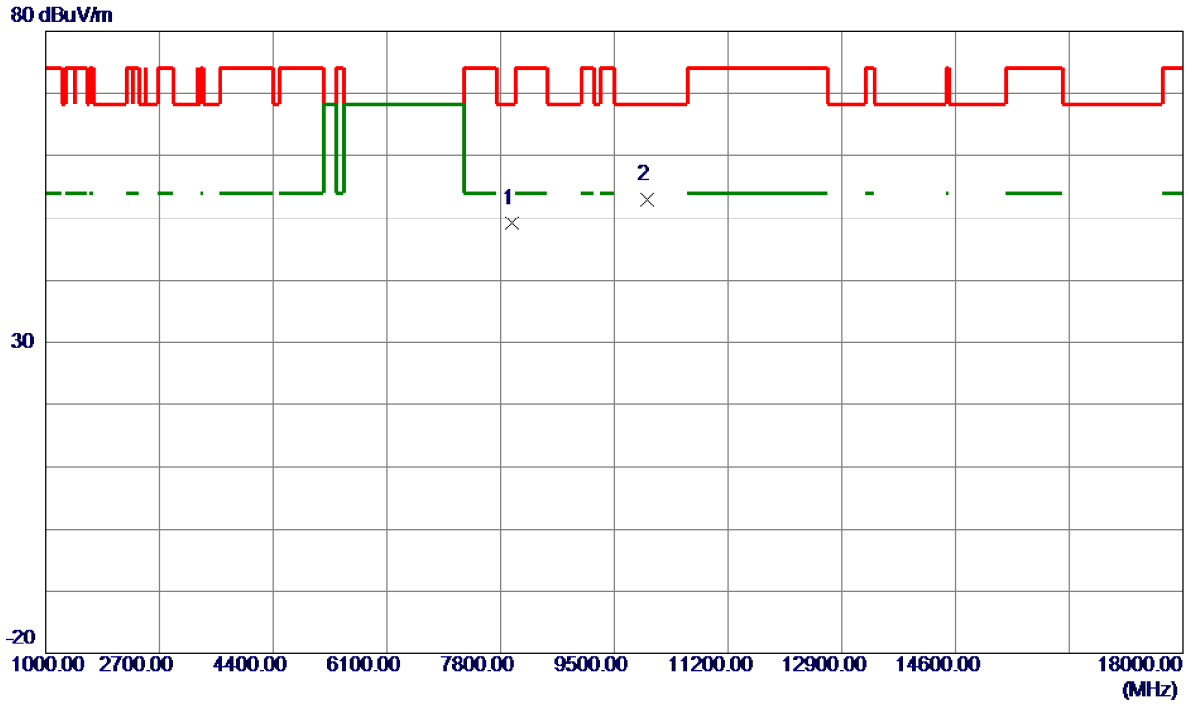

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7975.1000	44.42	4.69	49.11	68.20	-19.09	Peak	
2 *	9999.8000	48.29	4.68	52.97	68.20	-15.23	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5580 MHz	Polarization	Horizontal

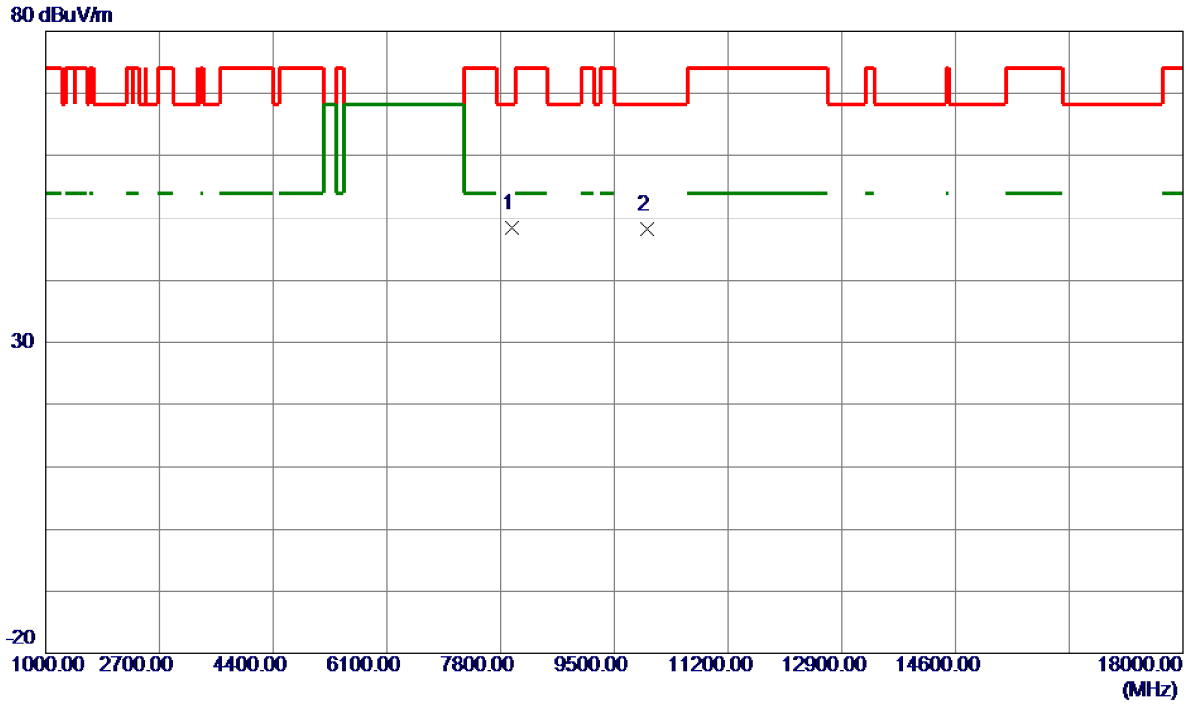

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	7978.5000	43.66	4.70	48.36	68.20	-19.84	Peak	
2	9999.8000	43.58	4.68	48.26	68.20	-19.94	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5700 MHz	Polarization	Vertical

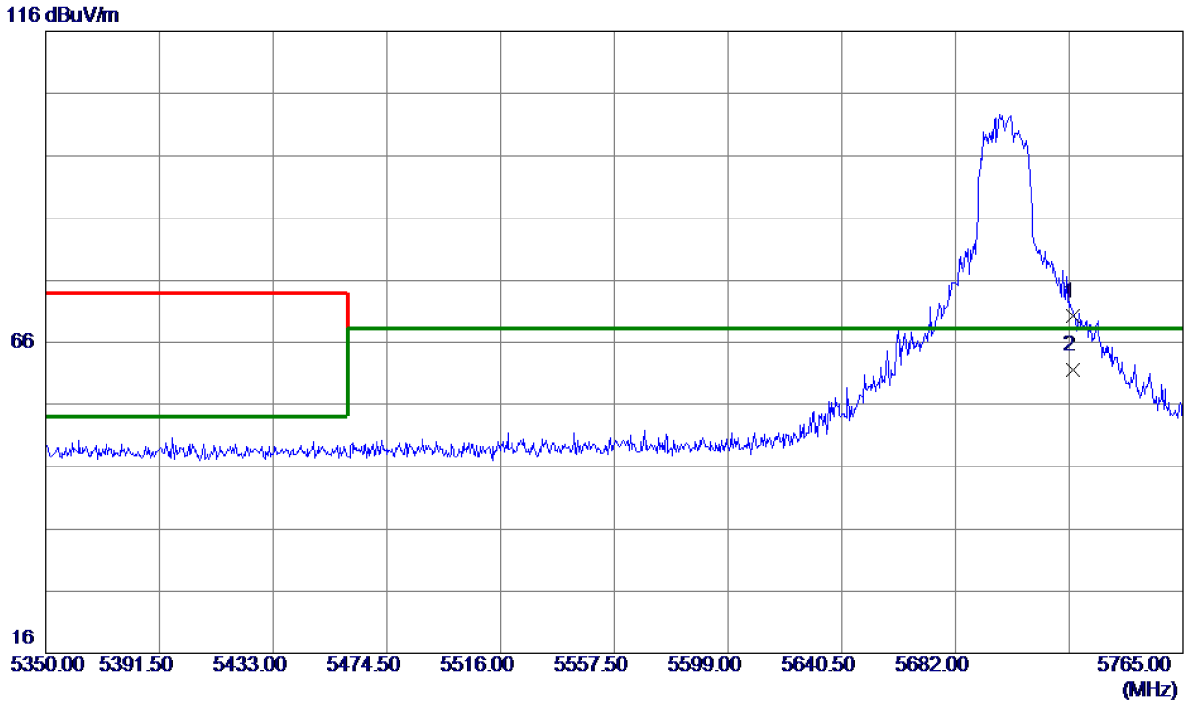

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	71.17	-1.06	70.11	68.20	1.91	Peak	
2	5725.0000	62.60	-1.06	61.54	68.20	-6.66	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5700 MHz	Polarization	Vertical

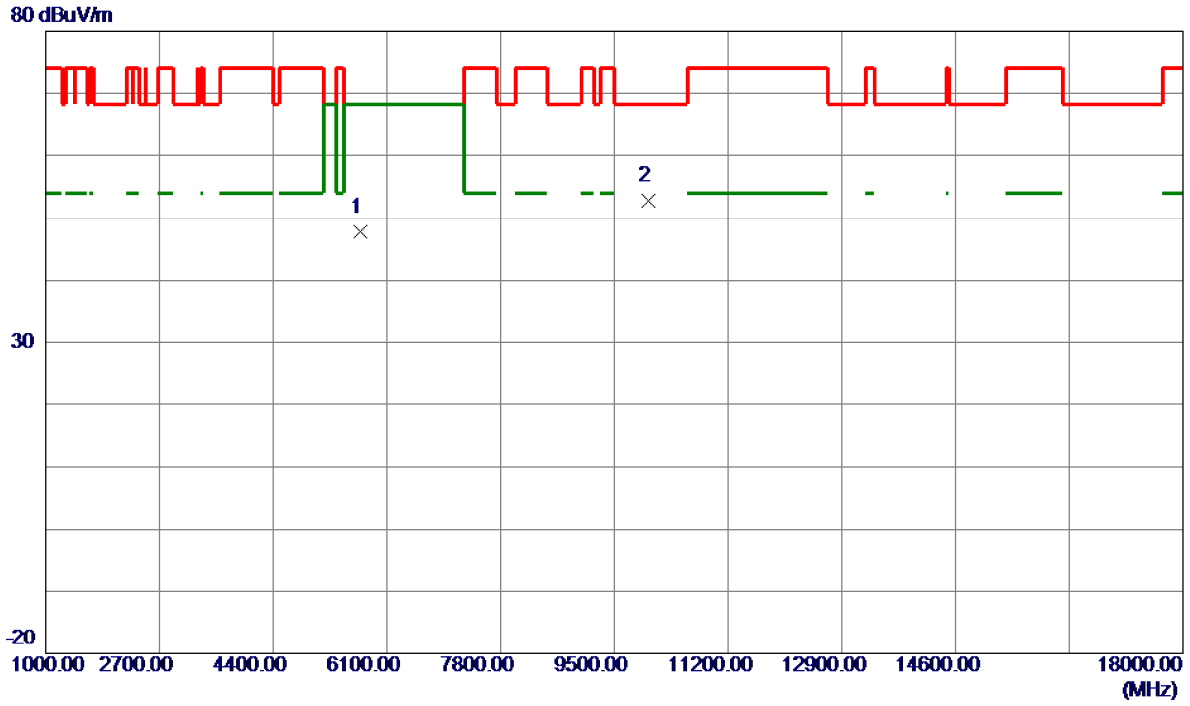

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5702.2000	48.57	-0.70	47.87	68.20	-20.33	Peak	
2 *	10001.5000	48.09	4.68	52.77	68.20	-15.43	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5700 MHz	Polarization	Horizontal

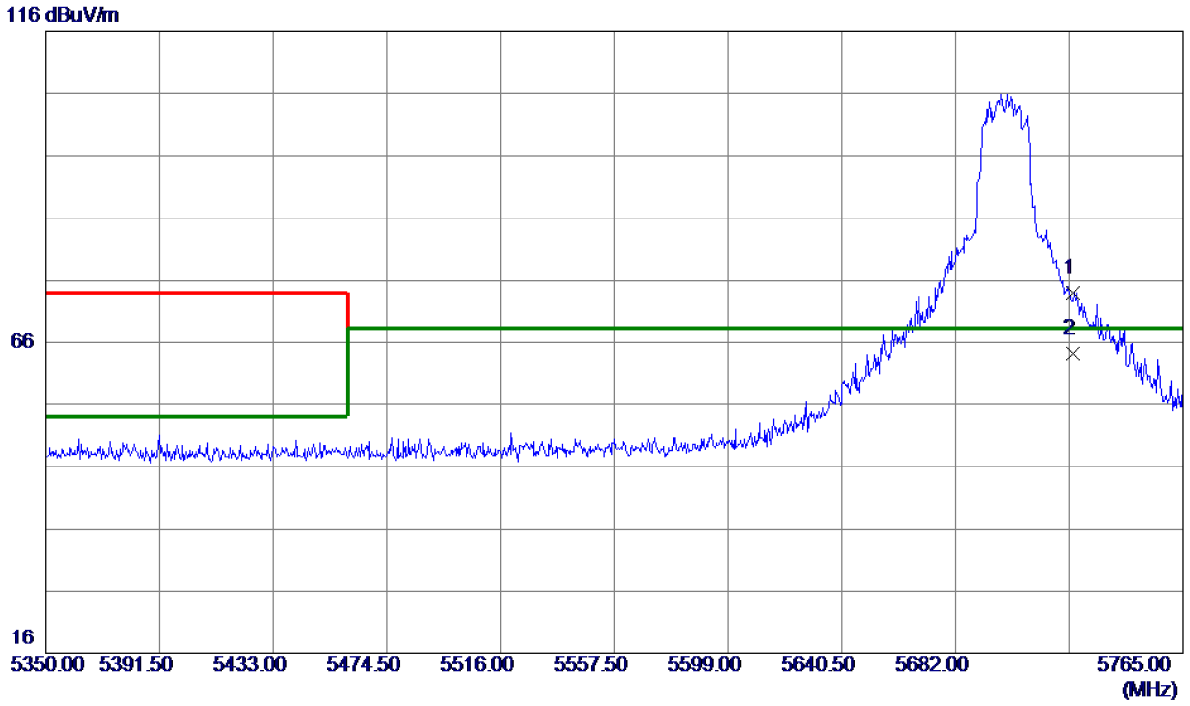

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	74.98	-1.06	73.92	68.20	5.72	Peak	
2	5725.0000	65.21	-1.06	64.15	68.20	-4.05	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT20) Mode 5700 MHz	Polarization	Horizontal

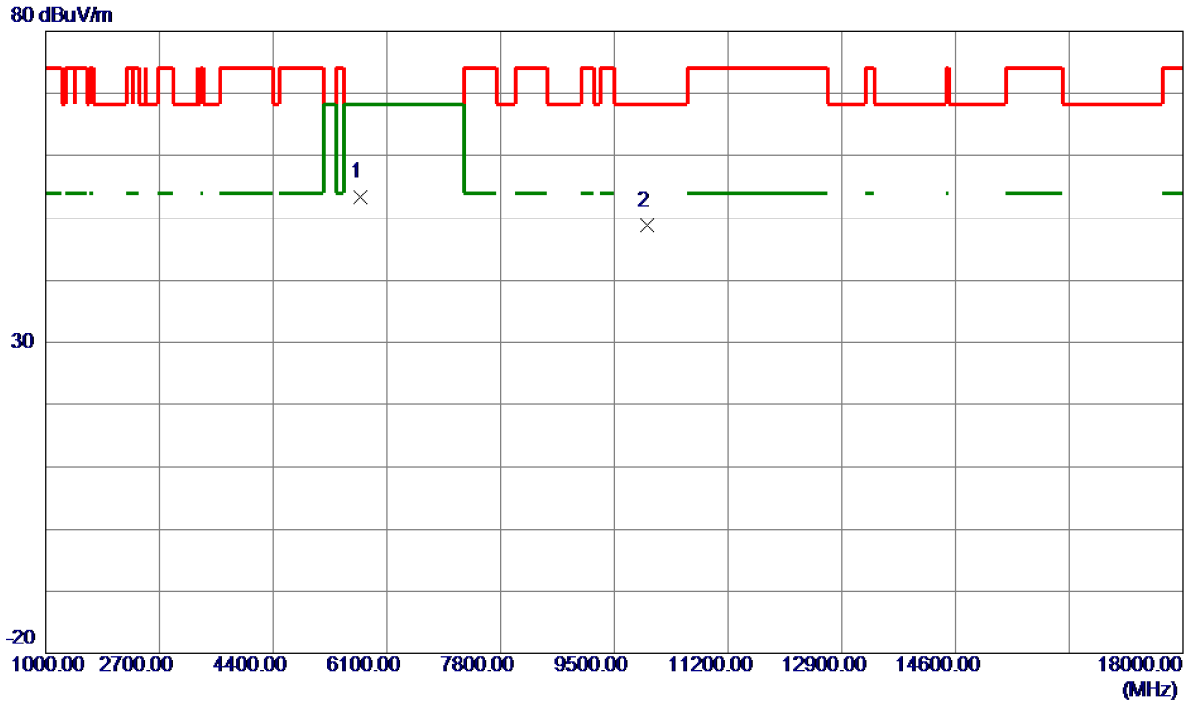

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5703.9000	54.18	-0.70	53.48	68.20	-14.72	Peak	
2	9998.9500	44.19	4.68	48.87	68.20	-19.33	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5510 MHz	Polarization	Vertical

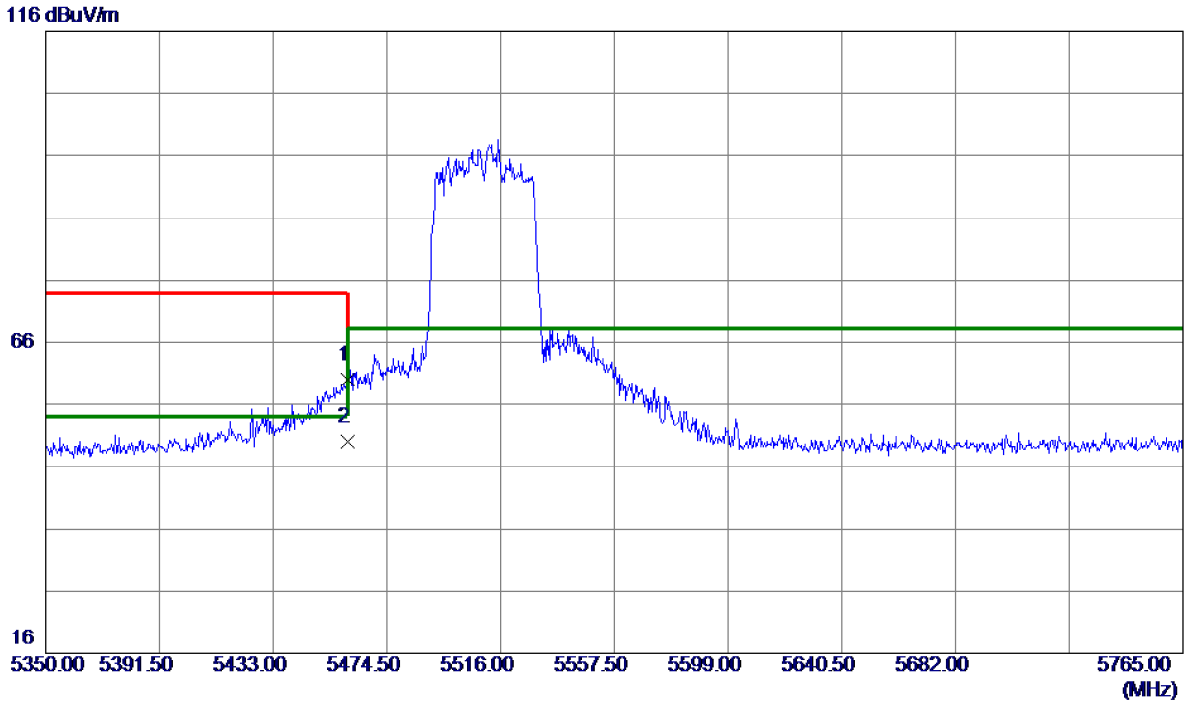

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	61.26	-1.31	59.95	74.00	-14.05	Peak	
2 *	5460.0000	51.35	-1.31	50.04	54.00	-3.96	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5510 MHz	Polarization	Vertical

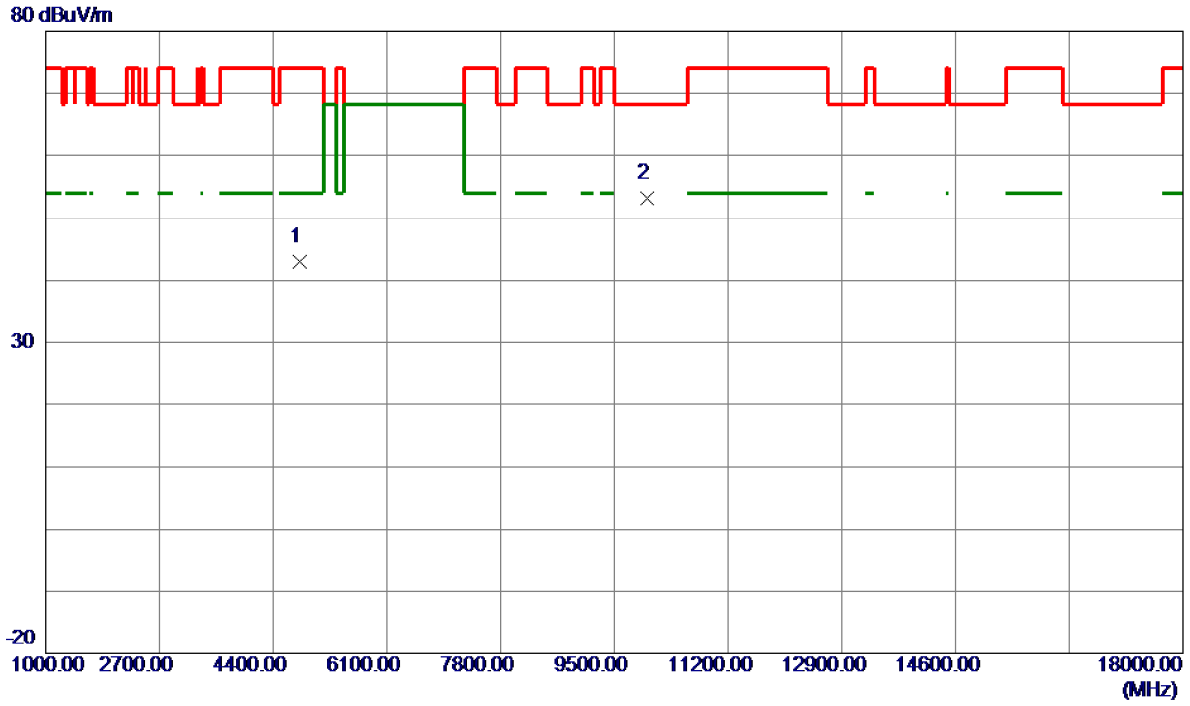

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4798.6500	44.71	-1.74	42.97	74.00	-31.03	Peak	
2 *	9999.8000	48.46	4.68	53.14	68.20	-15.06	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5510 MHz	Polarization	Horizontal

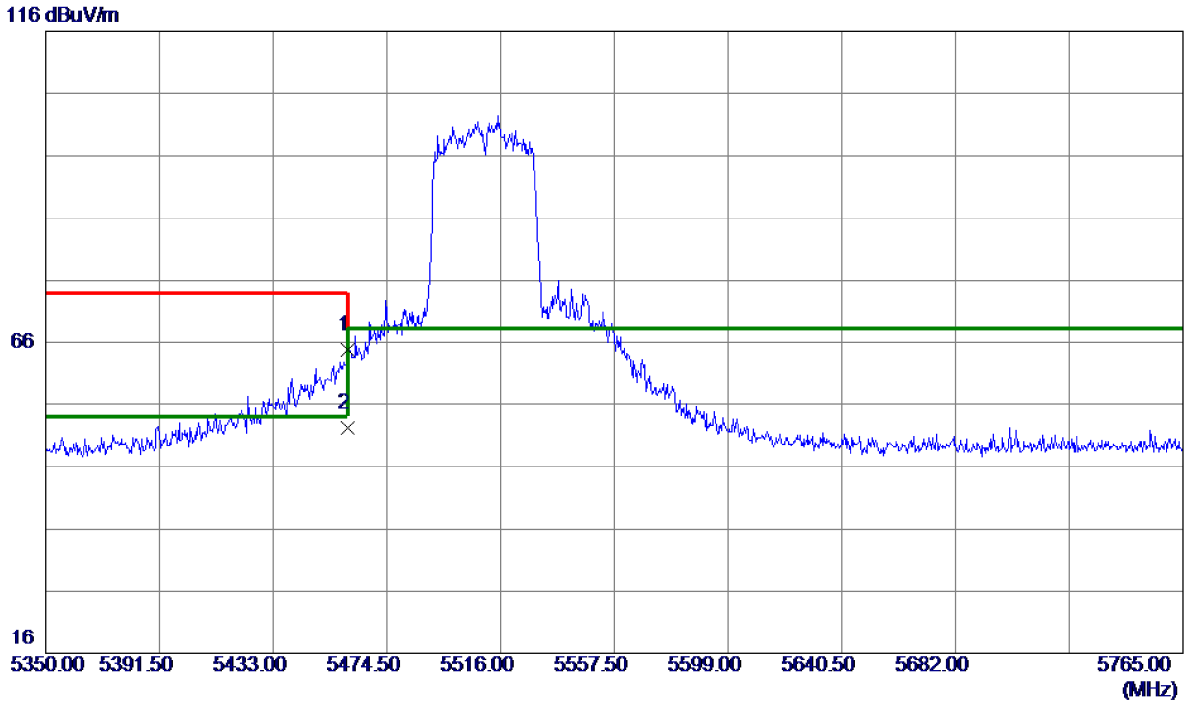

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	66.05	-1.31	64.74	74.00	-9.26	Peak	
2 *	5460.0000	53.46	-1.31	52.15	54.00	-1.85	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5510 MHz	Polarization	Horizontal

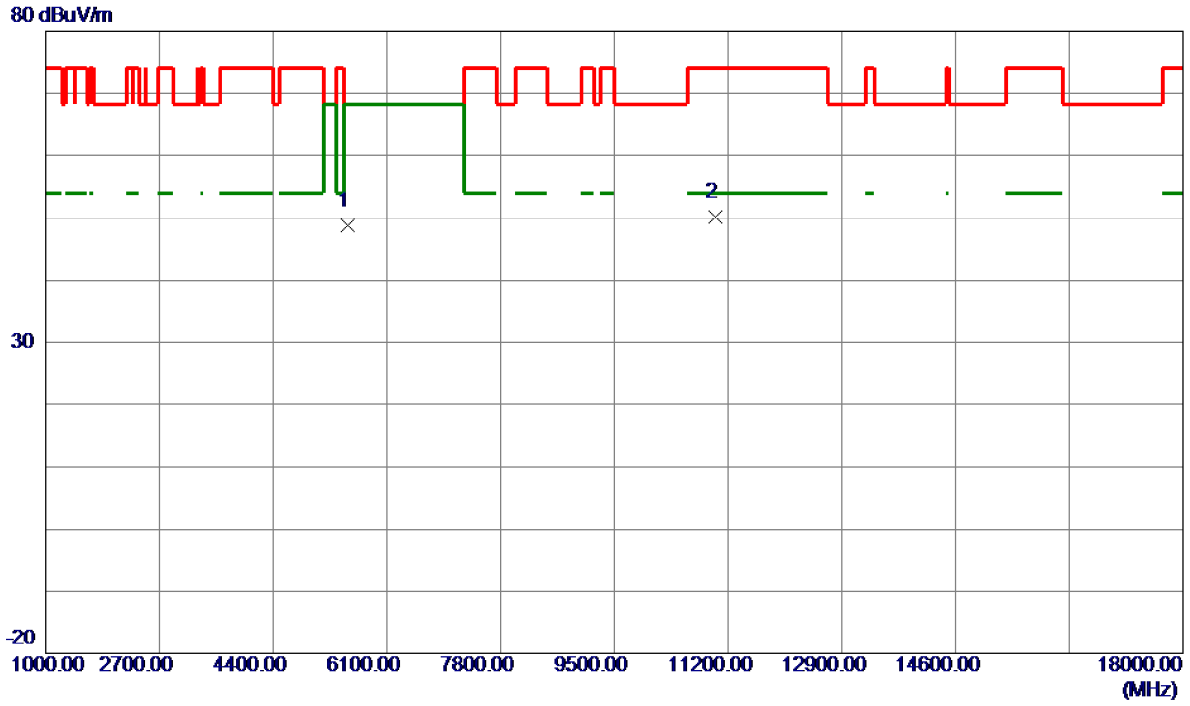

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5505.8500	49.90	-1.02	48.88	68.20	-19.32	Peak	
2	11007.0500	44.08	6.11	50.19	74.00	-23.81	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5550 MHz	Polarization	Vertical

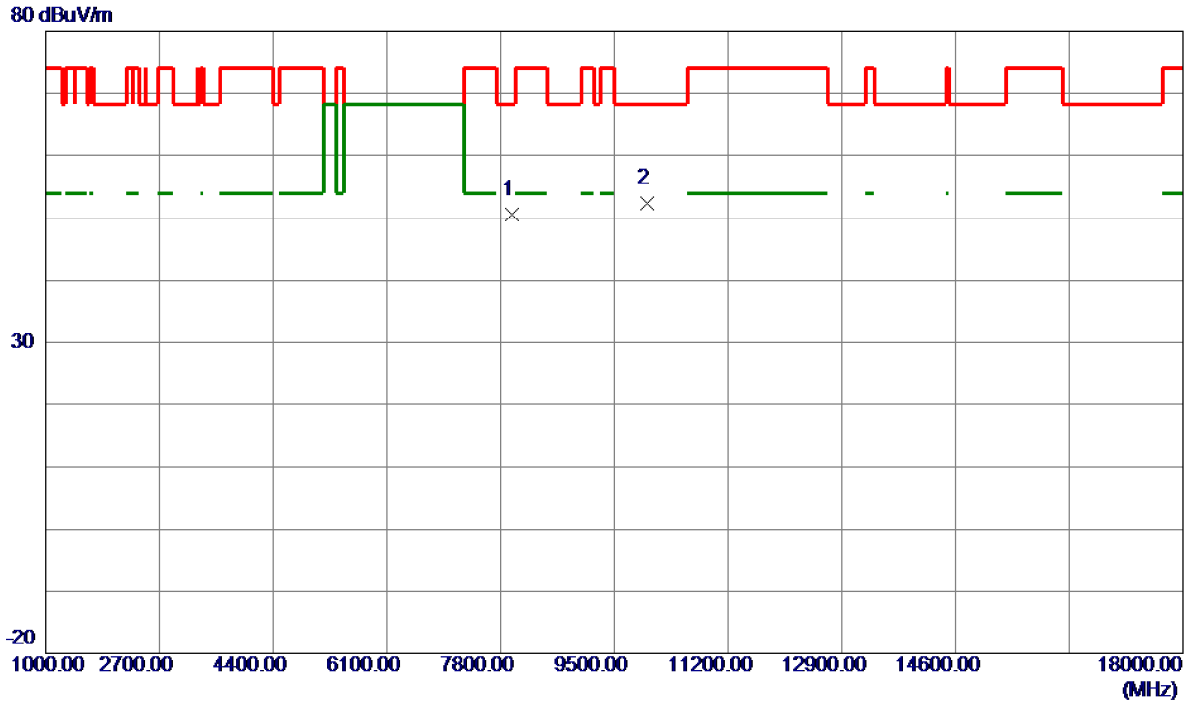

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7974.2500	45.99	4.69	50.68	68.20	-17.52	Peak	
2 *	9999.8000	47.68	4.68	52.36	68.20	-15.84	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5550 MHz	Polarization	Horizontal

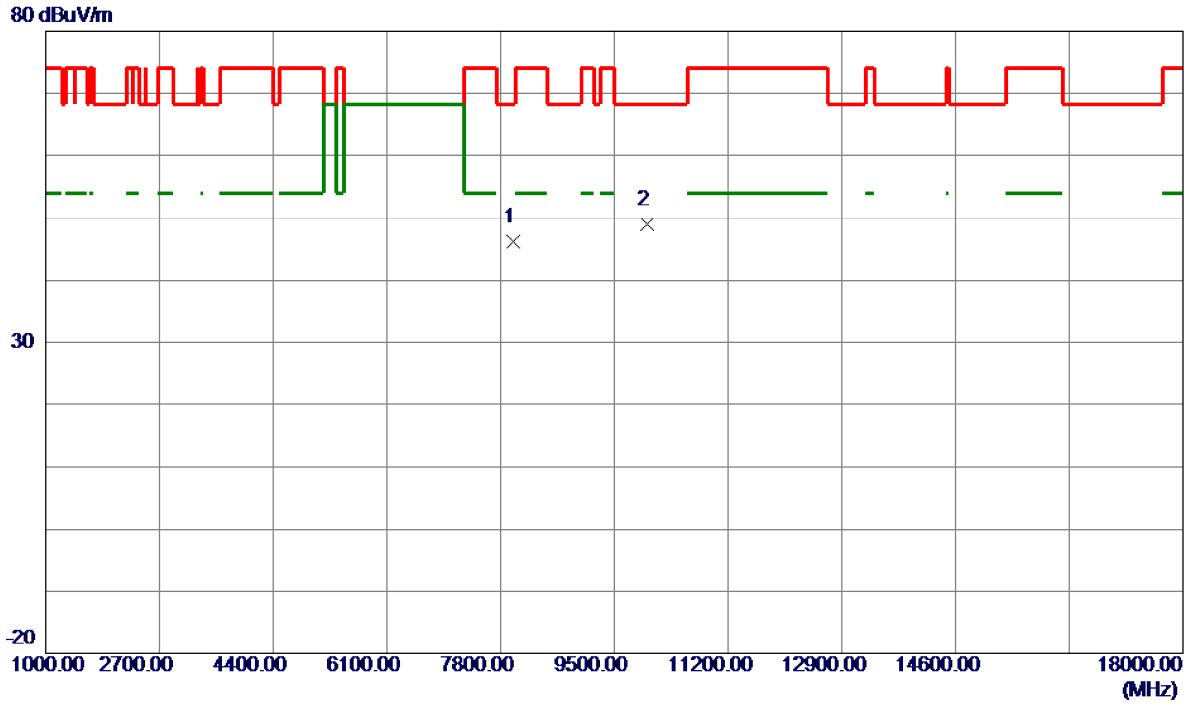

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7997.2000	41.51	4.73	46.24	68.20	-21.96	Peak	
2 *	9998.9500	44.29	4.68	48.97	68.20	-19.23	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5670 MHz	Polarization	Vertical

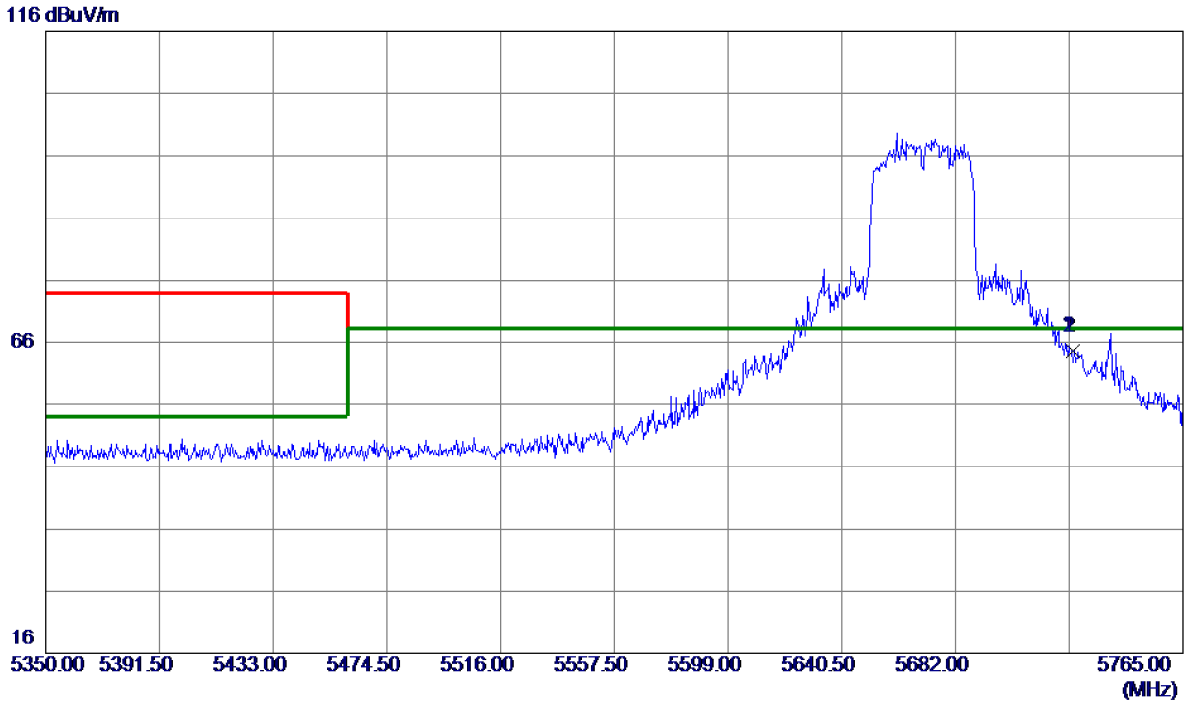

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	65.67	-1.06	64.61	68.20	-3.59	Peak	
2	5725.0000	65.67	-1.06	64.61	68.20	-3.59	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5670 MHz	Polarization	Vertical

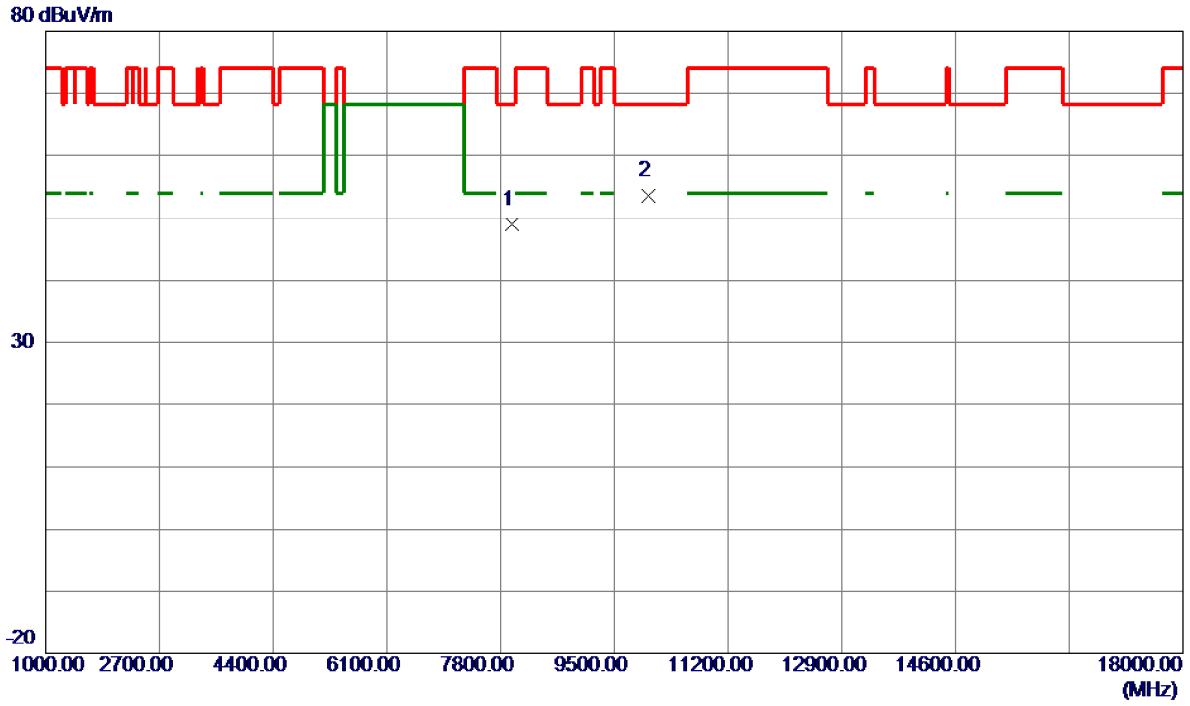

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7974.2500	44.32	4.69	49.01	68.20	-19.19	Peak	
2 *	10000.6500	48.86	4.68	53.54	68.20	-14.66	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5670 MHz	Polarization	Horizontal

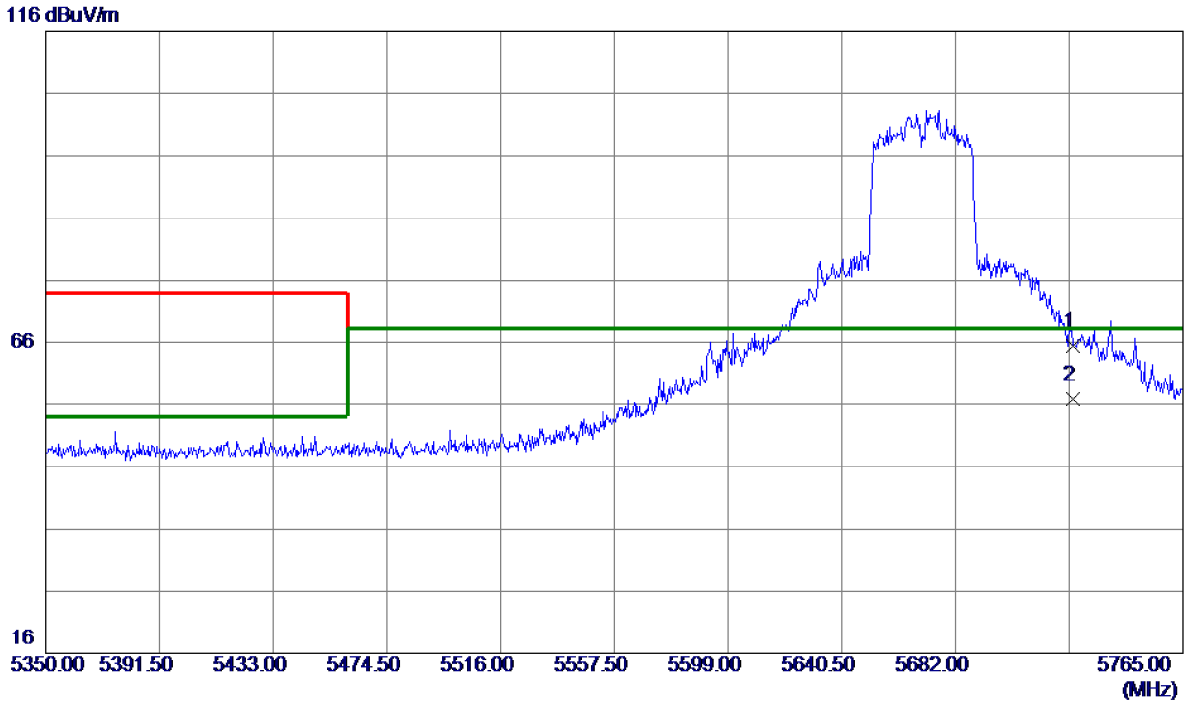

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	66.46	-1.06	65.40	68.20	-2.80	Peak	
2	5725.0000	57.80	-1.06	56.74	68.20	-11.46	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT40) Mode 5670 MHz	Polarization	Horizontal

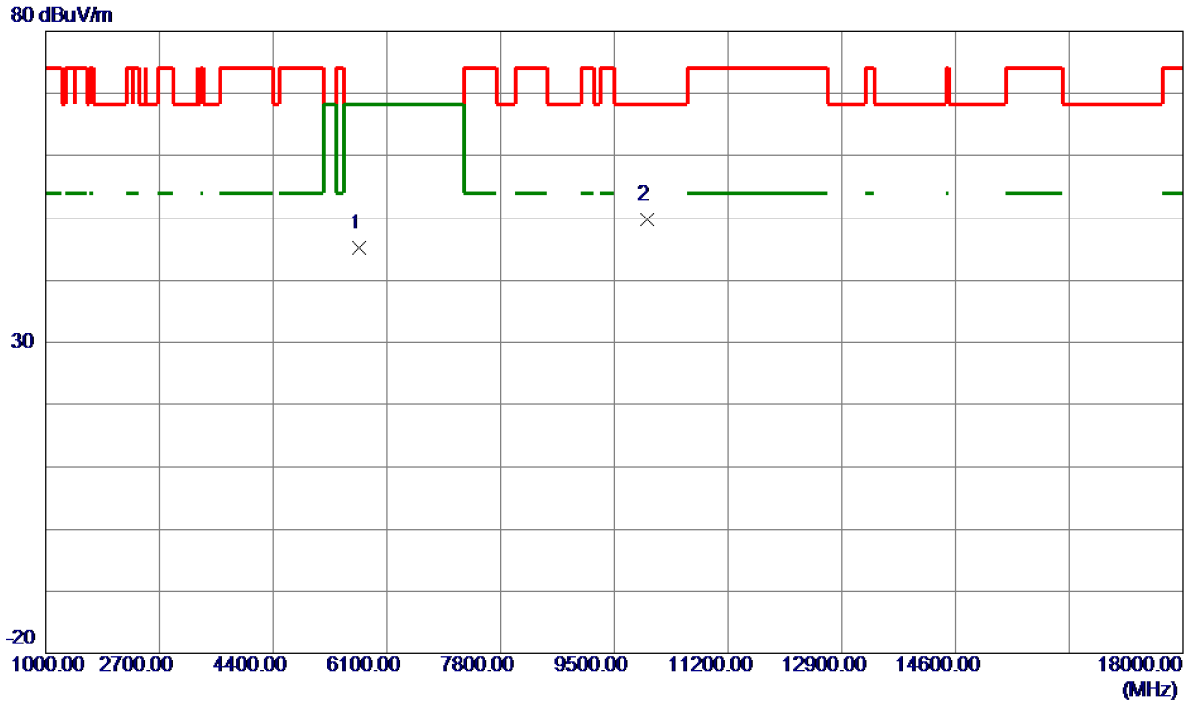

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5685.2000	45.86	-0.73	45.13	68.20	-23.07	Peak	
2 *	9998.9500	45.19	4.68	49.87	68.20	-18.33	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5530 MHz	Polarization	Vertical

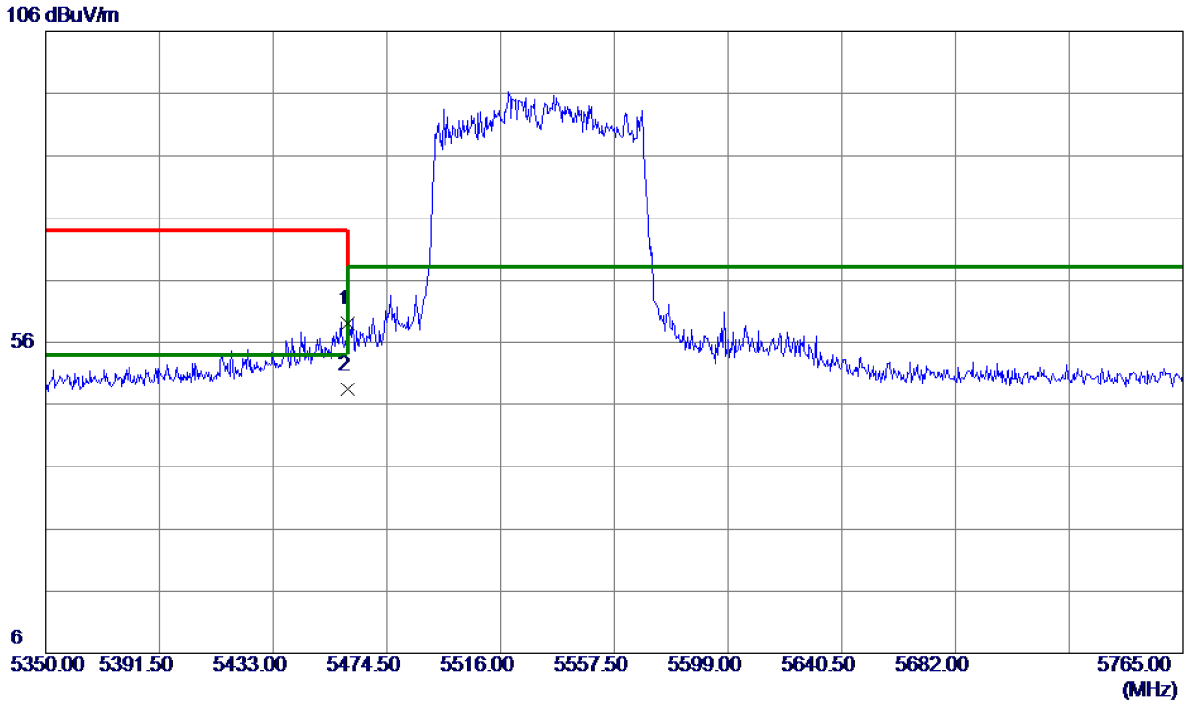

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	50.06	8.95	59.01	74.00	-14.99	Peak	
2 *	5460.0000	39.42	8.95	48.37	54.00	-5.63	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5530 MHz	Polarization	Vertical

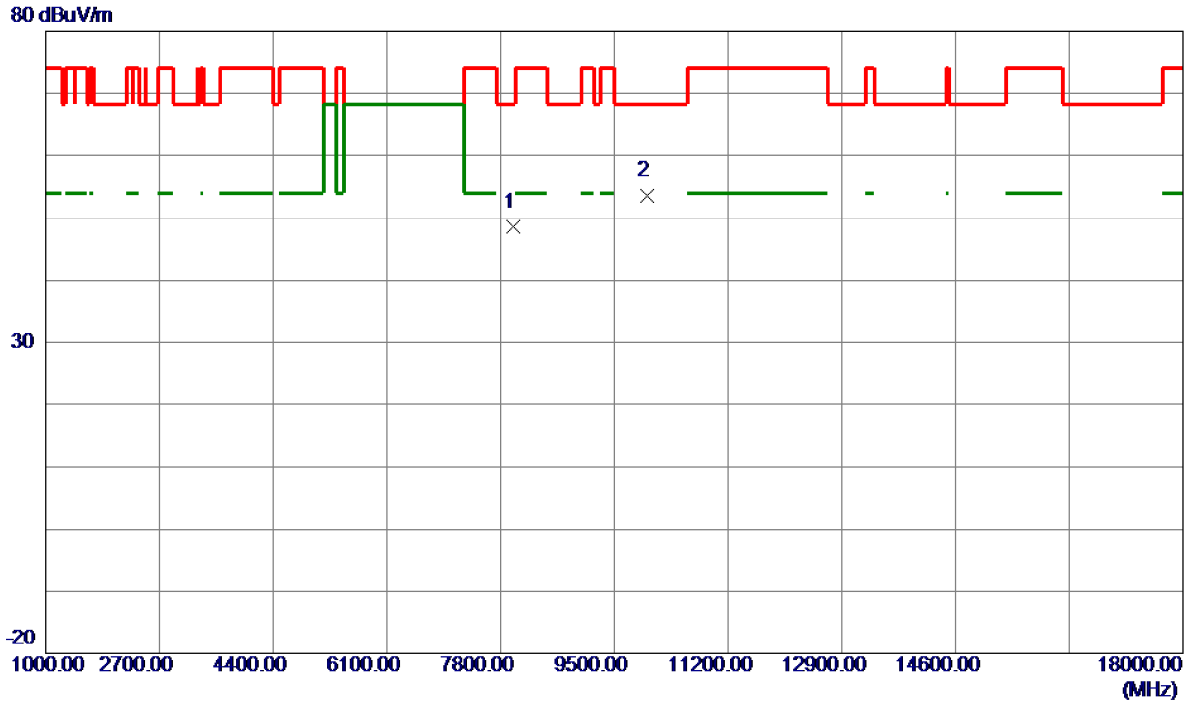

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7980.2000	43.89	4.70	48.59	68.20	-19.61	Peak	
2 *	9998.9500	48.98	4.68	53.66	68.20	-14.54	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5530 MHz	Polarization	Horizontal

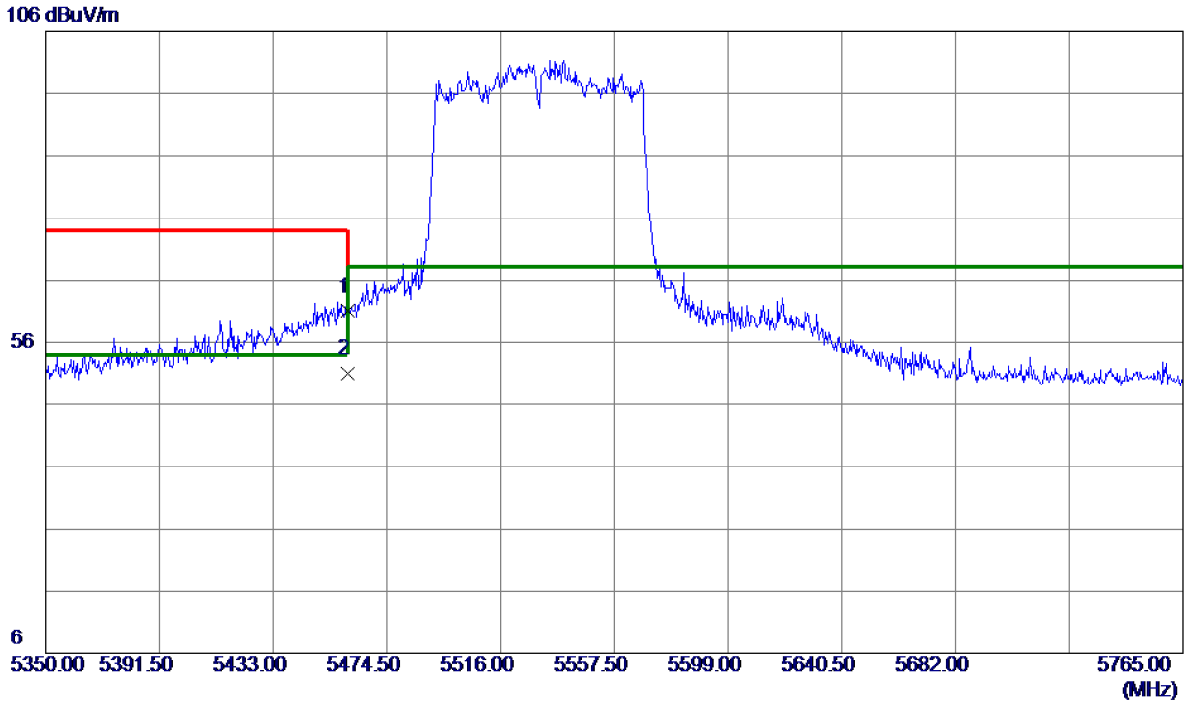

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	52.14	8.95	61.09	74.00	-12.91	Peak	
2 *	5460.0000	42.04	8.95	50.99	54.00	-3.01	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5530 MHz	Polarization	Horizontal

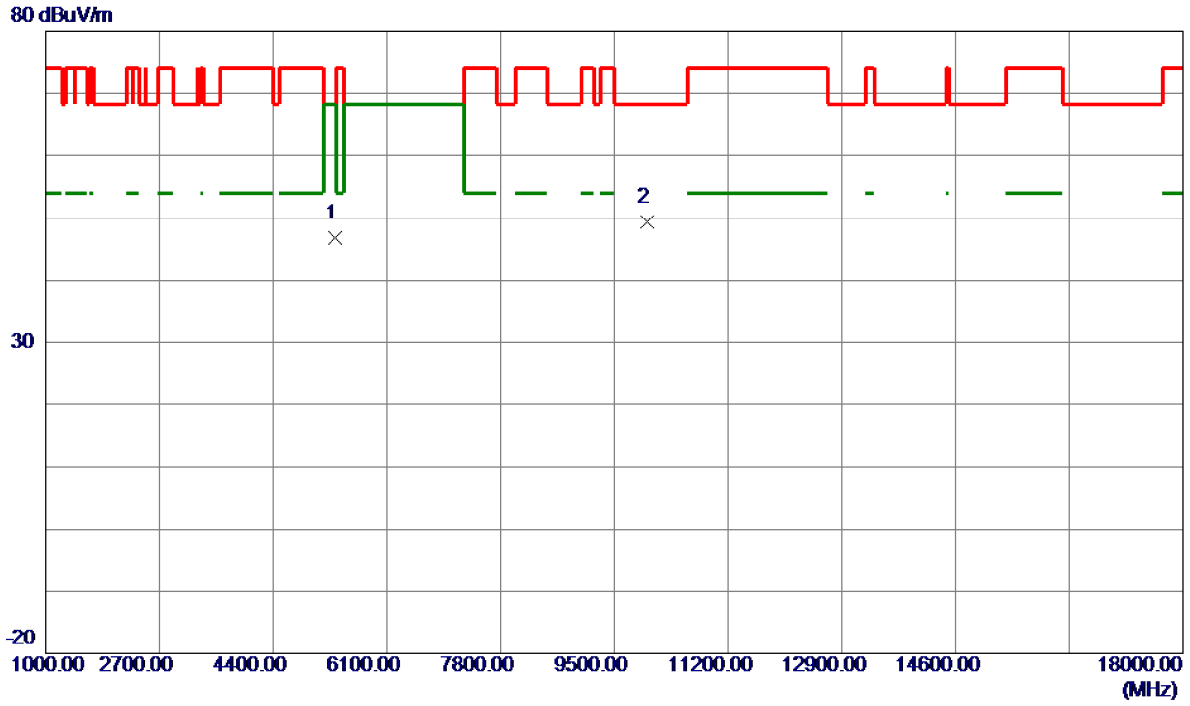

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5320.5500	47.86	-1.13	46.73	68.20	-21.47	Peak	
2 *	9999.8000	44.65	4.68	49.33	68.20	-18.87	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5610 MHz	Polarization	Vertical

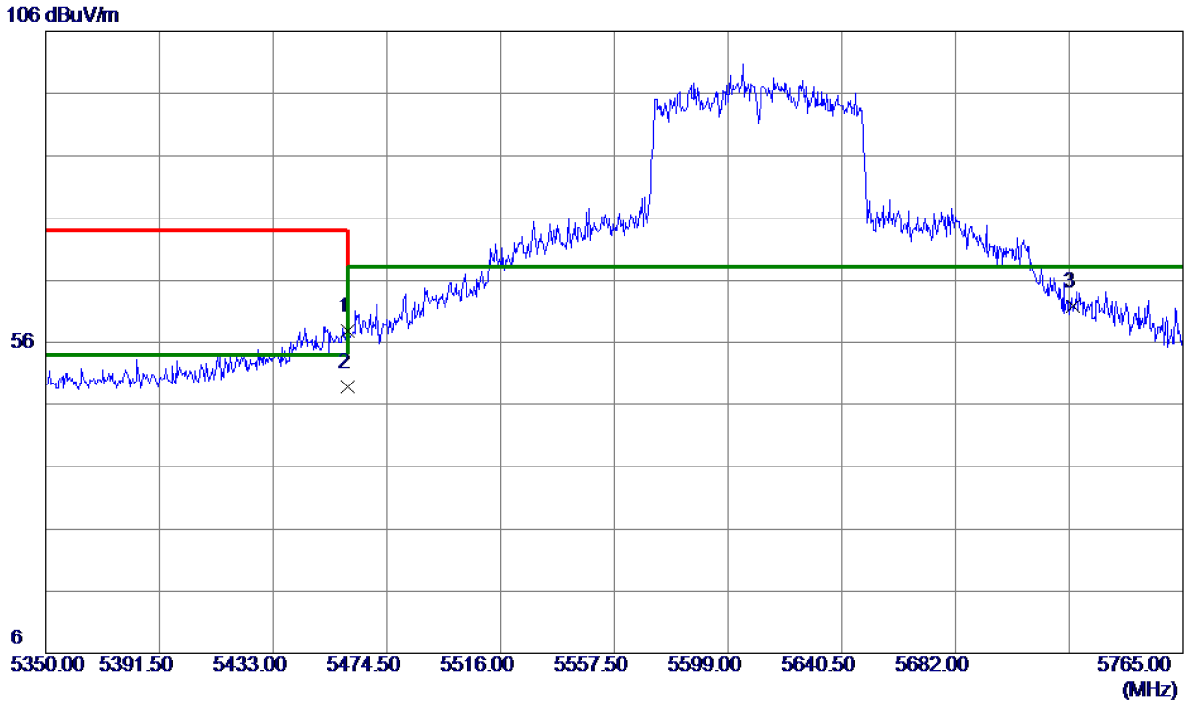

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	48.90	8.95	57.85	74.00	-16.15	Peak	
2 *	5460.0000	39.93	8.95	48.88	54.00	-5.12	AVG	
3	5725.0000	52.48	9.34	61.82	68.20	-6.38	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5610 MHz	Polarization	Vertical

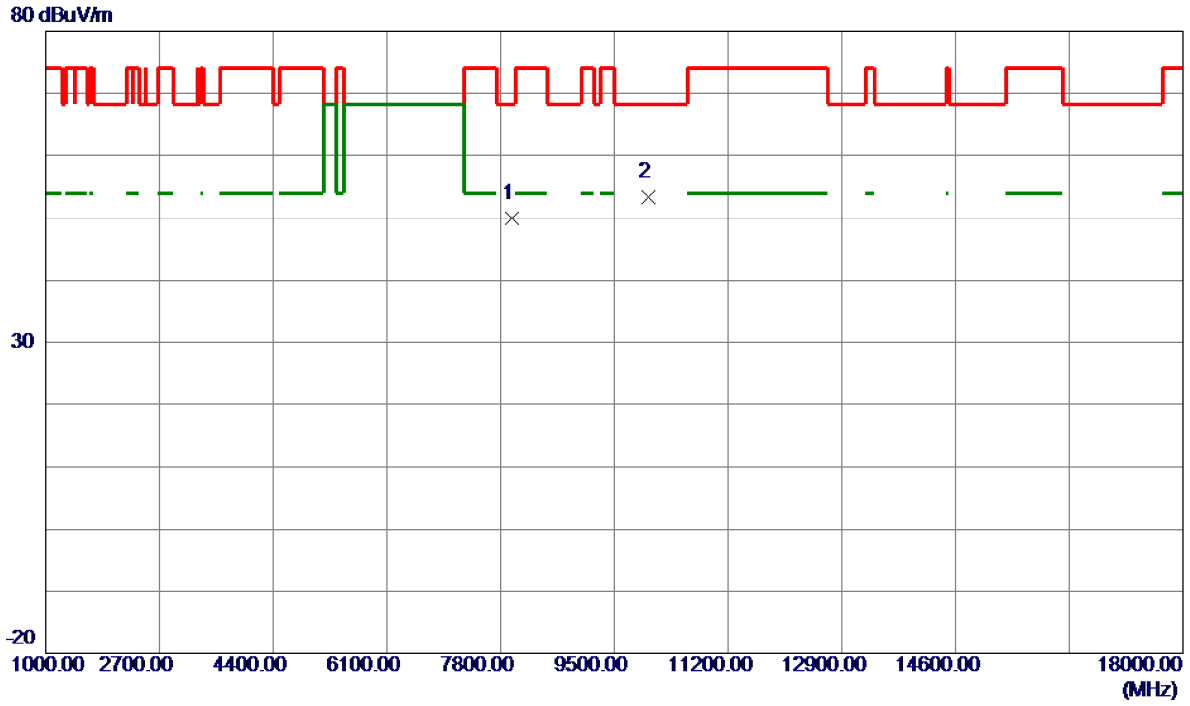

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7979.3500	45.27	4.70	49.97	68.20	-18.23	Peak	
2 *	10000.6500	48.64	4.68	53.32	68.20	-14.88	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5610 MHz	Polarization	Horizontal

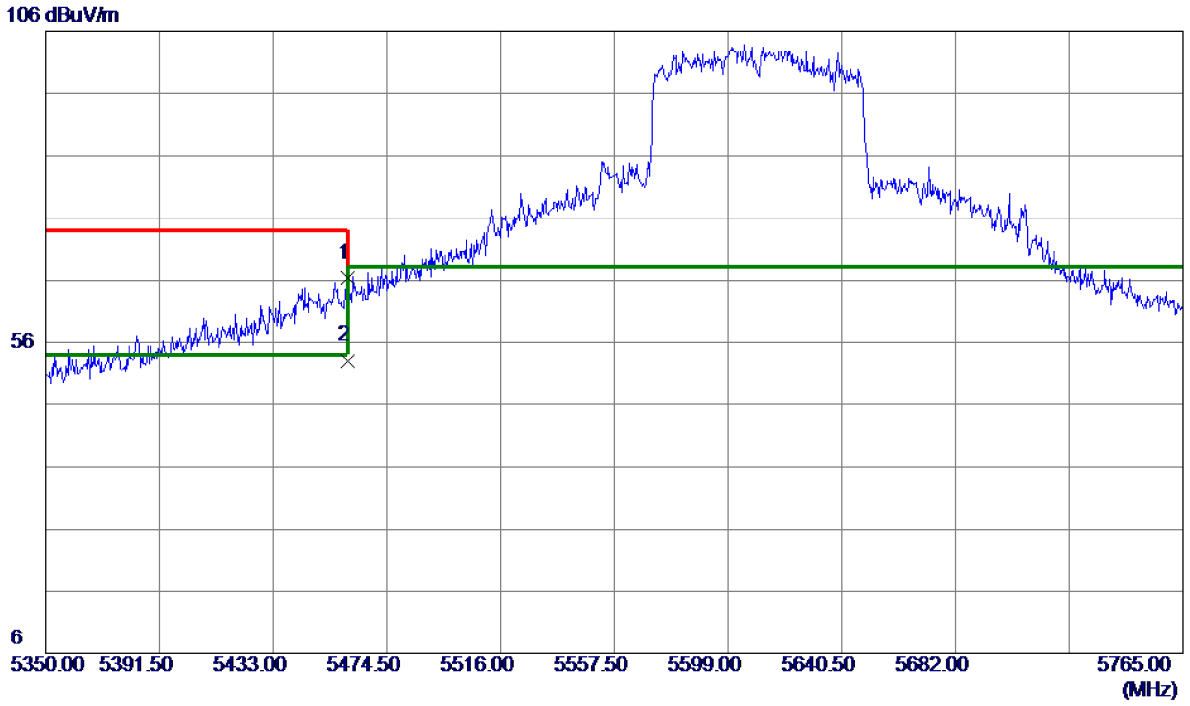

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	57.41	8.95	66.36	74.00	-7.64	Peak	
2 *	5460.0000	44.15	8.95	53.10	54.00	-0.90	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AC(VHT80) Mode 5610 MHz	Polarization	Horizontal

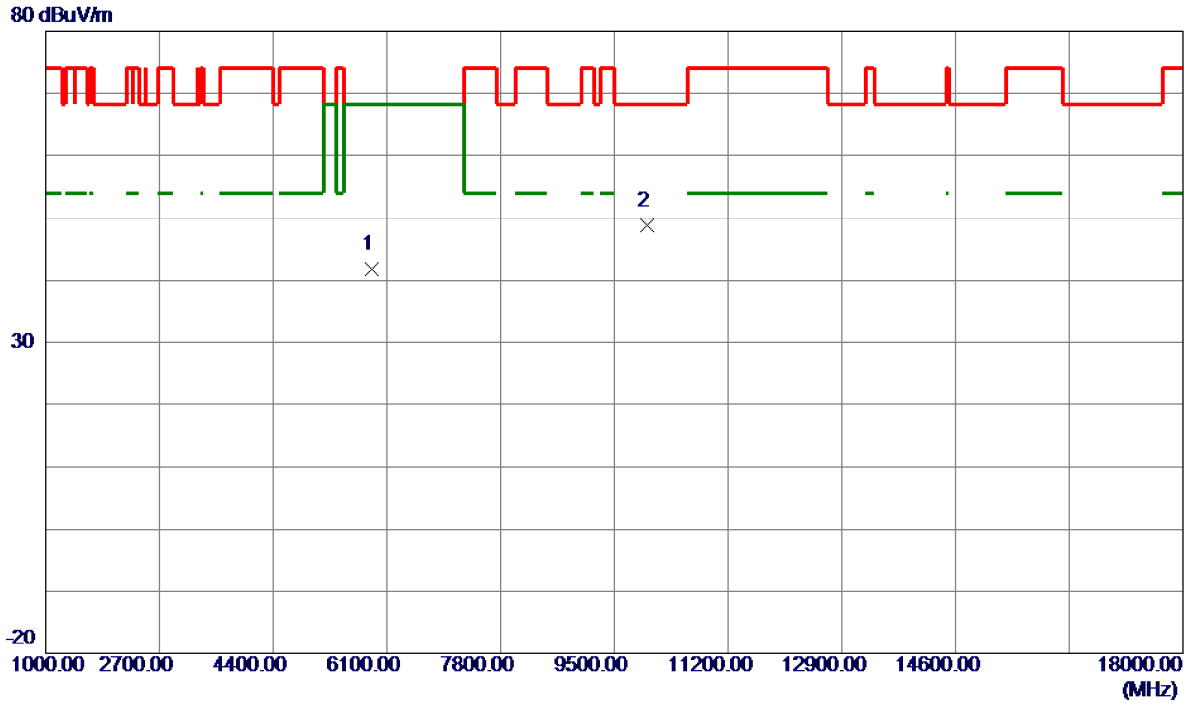

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5871.3500	42.22	-0.42	41.80	68.20	-26.40	Peak	
2 *	9998.1000	44.03	4.68	48.71	68.20	-19.49	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5500 MHz	Polarization	Vertical

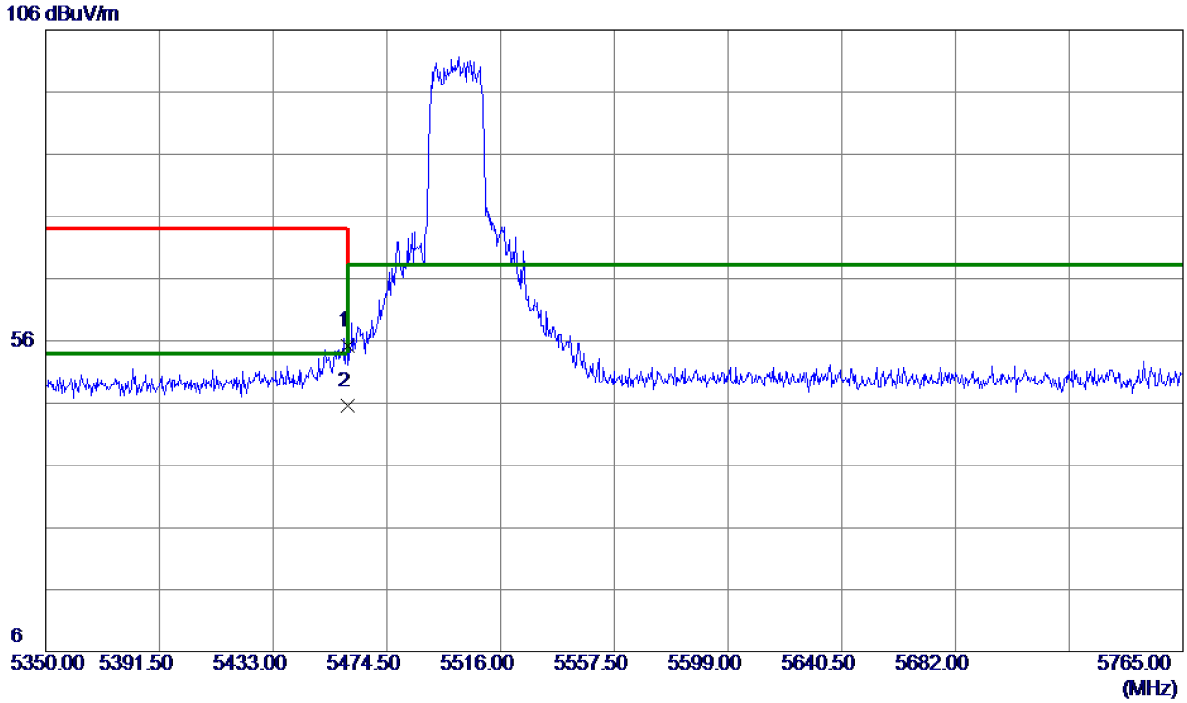

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	46.29	8.95	55.24	74.00	-18.76	Peak	
2 *	5460.0000	36.58	8.95	45.53	54.00	-8.47	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5500 MHz	Polarization	Vertical

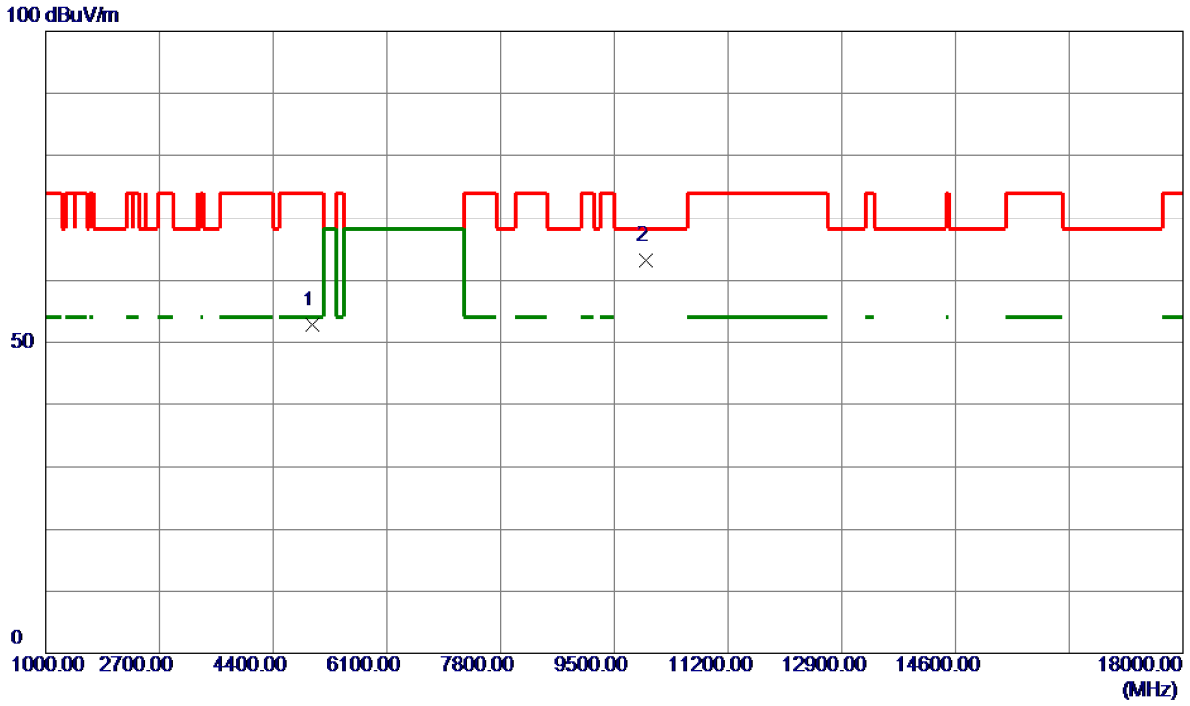

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4986.5000	54.21	-1.35	52.86	74.00	-21.14	Peak	
2 *	9980.2500	58.52	4.68	63.20	68.20	-5.00	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5500 MHz	Polarization	Horizontal

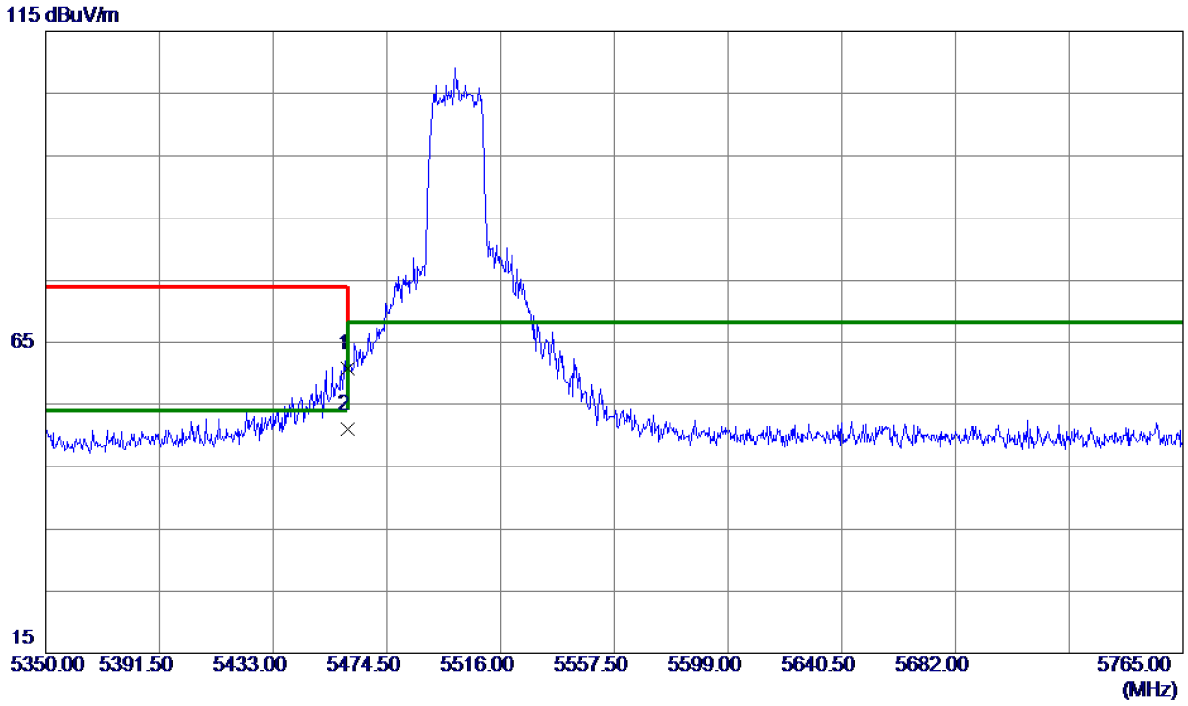

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	51.76	8.95	60.71	74.00	-13.29	Peak	
2 *	5460.0000	42.11	8.95	51.06	54.00	-2.94	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5500 MHz	Polarization	Horizontal

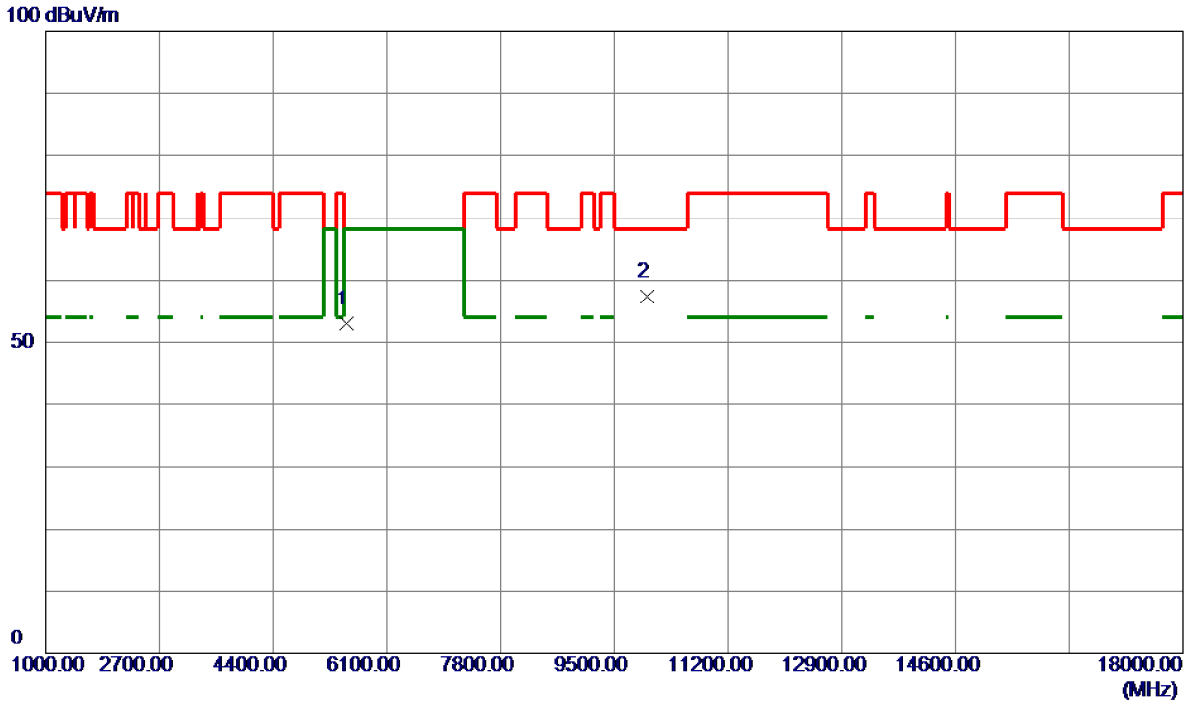

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5502.4500	54.10	-1.03	53.07	68.20	-15.13	Peak	
2 *	9987.0500	52.72	4.68	57.40	68.20	-10.80	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5580 MHz	Polarization	Vertical

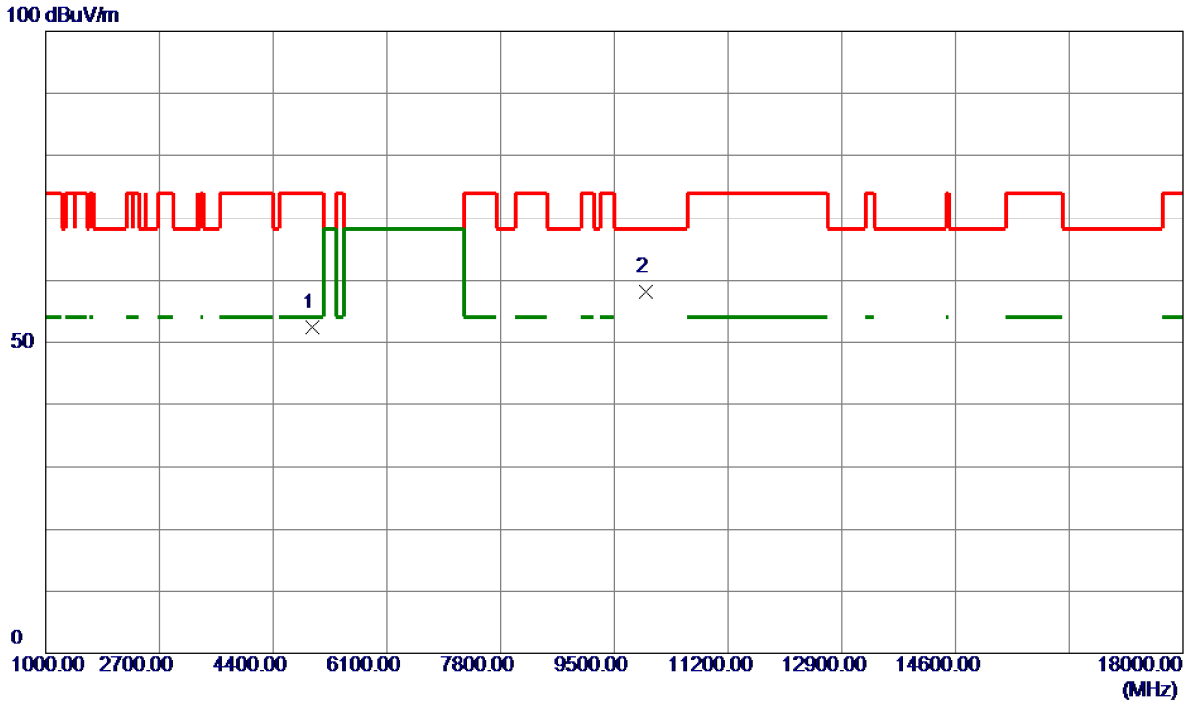

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4994.1500	53.66	-1.33	52.33	74.00	-21.67	Peak	
2 *	9963.2500	53.61	4.68	58.29	68.20	-9.91	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5580 MHz	Polarization	Horizontal

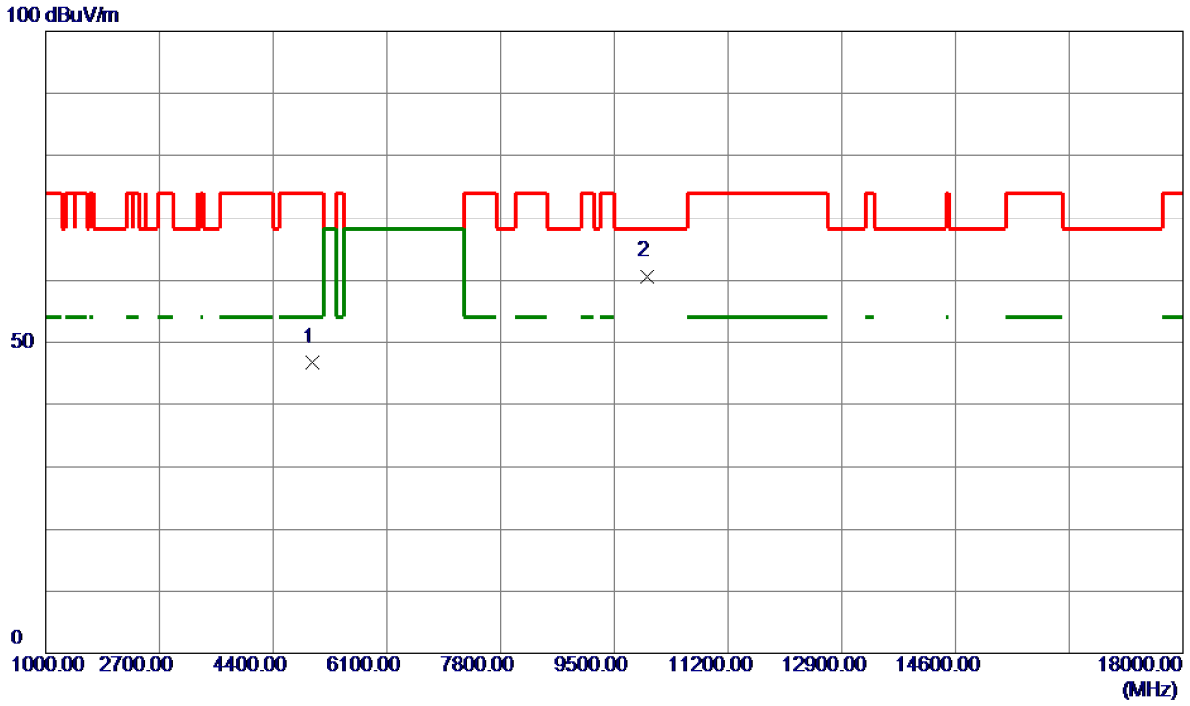

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4987.3500	48.21	-1.35	46.86	74.00	-27.14	Peak	
2 *	9983.6500	56.02	4.68	60.70	68.20	-7.50	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5700 MHz	Polarization	Vertical

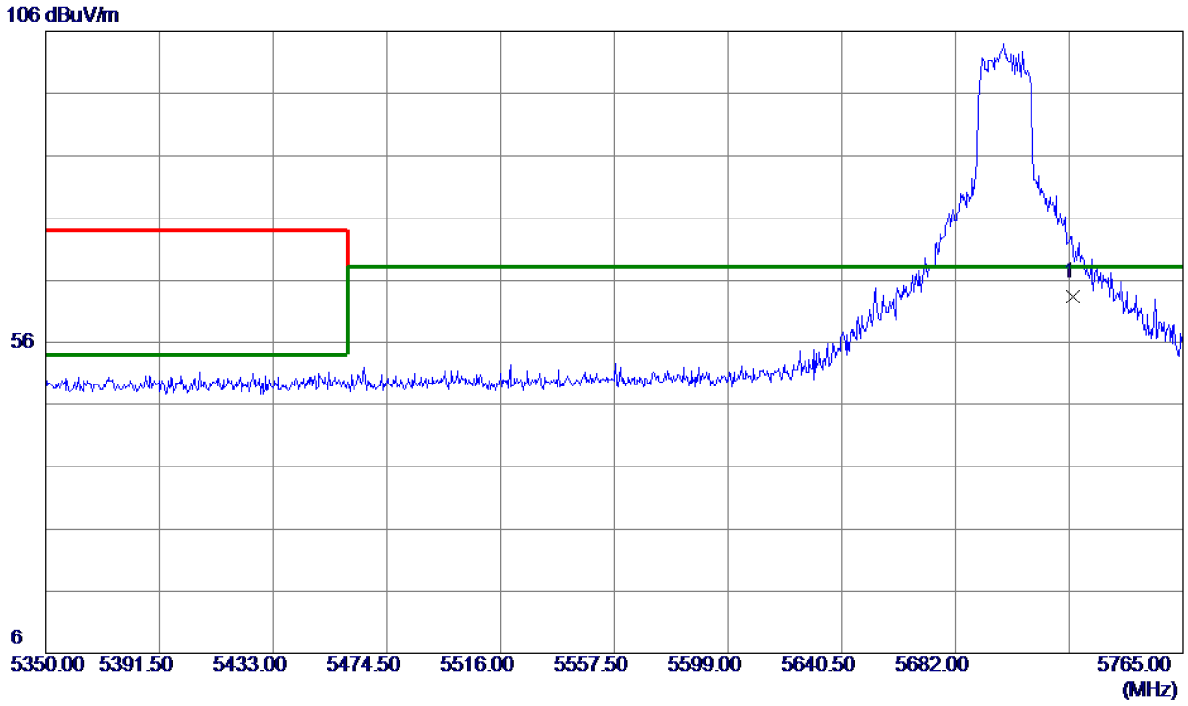

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	54.13	9.34	63.47	68.20	-4.73	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5700 MHz	Polarization	Vertical

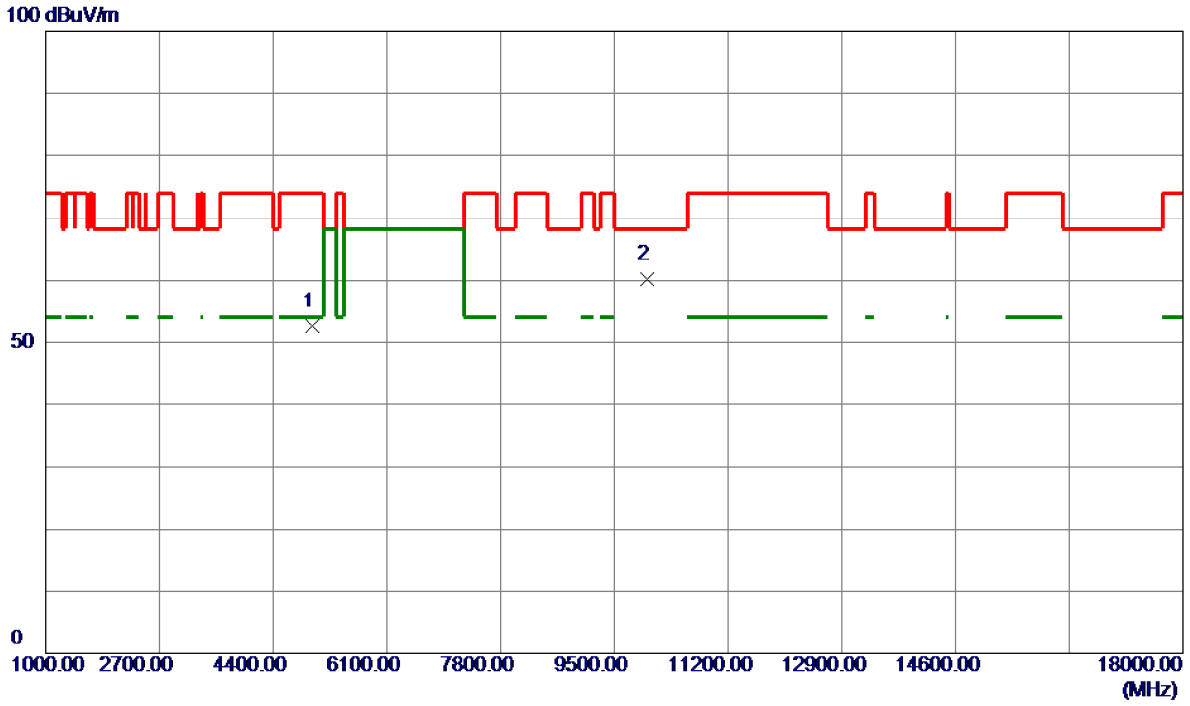

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4988.2000	53.87	-1.34	52.53	74.00	-21.47	Peak	
2 *	9987.0500	55.54	4.68	60.22	68.20	-7.98	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5700 MHz	Polarization	Horizontal

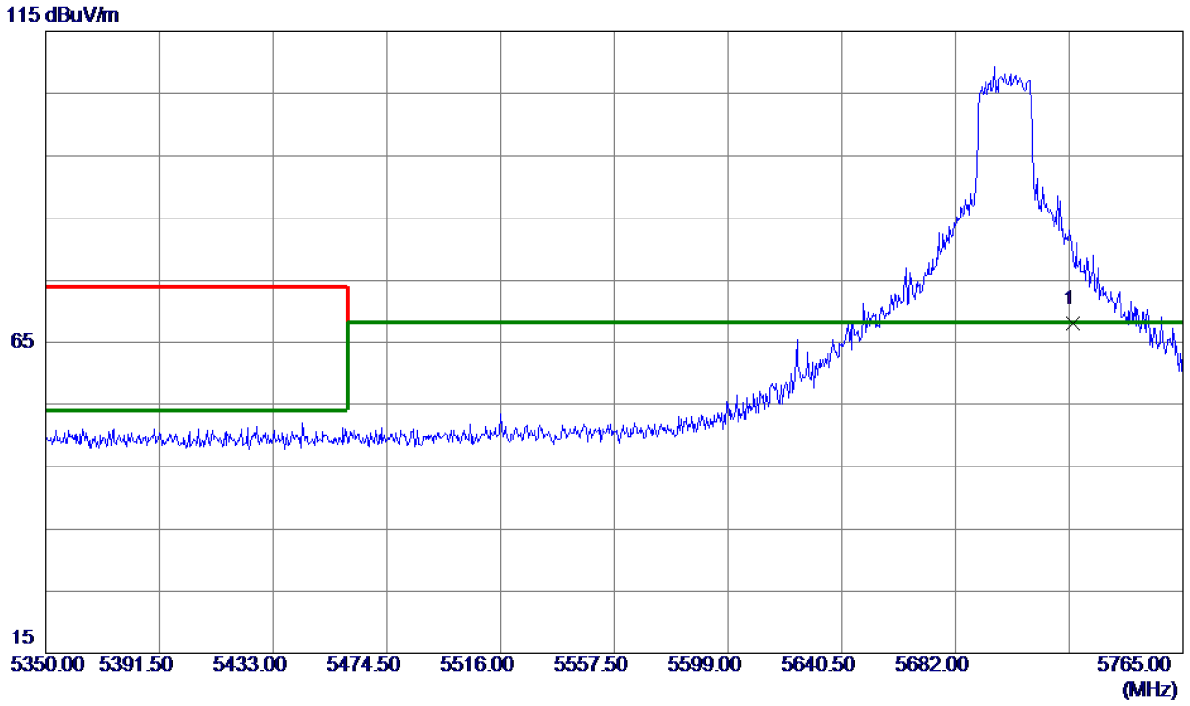

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	58.63	9.34	67.97	68.20	-0.23	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE20) Mode 5700 MHz	Polarization	Horizontal

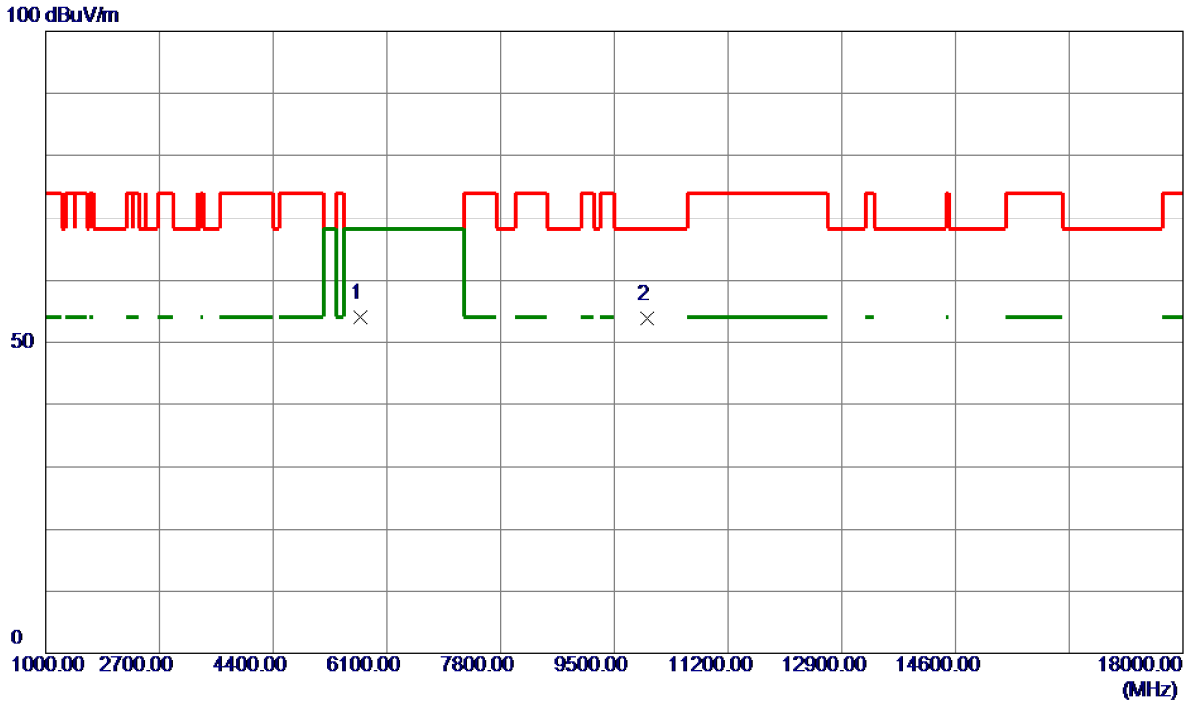

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5706.4500	54.67	-0.69	53.98	68.20	-14.22	Peak	
2	9981.9500	49.18	4.68	53.86	68.20	-14.34	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5510 MHz	Polarization	Vertical

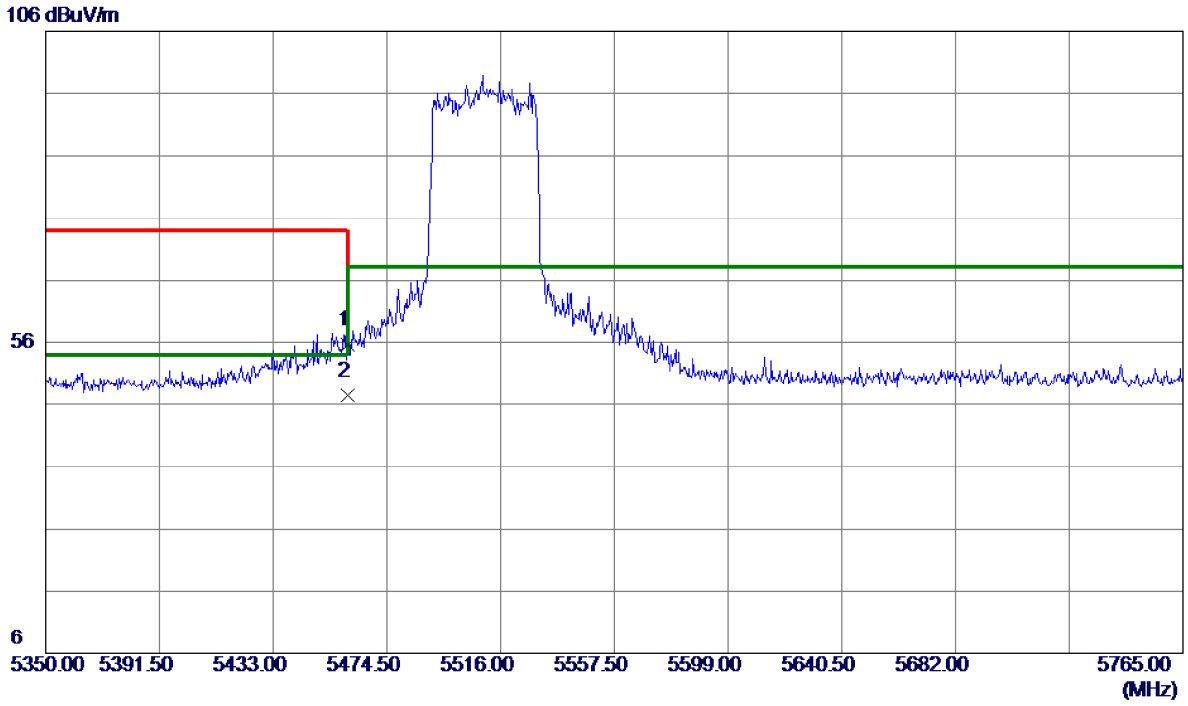

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	46.69	8.95	55.64	74.00	-18.36	Peak	
2 *	5460.0000	38.46	8.95	47.41	54.00	-6.59	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5510 MHz	Polarization	Vertical

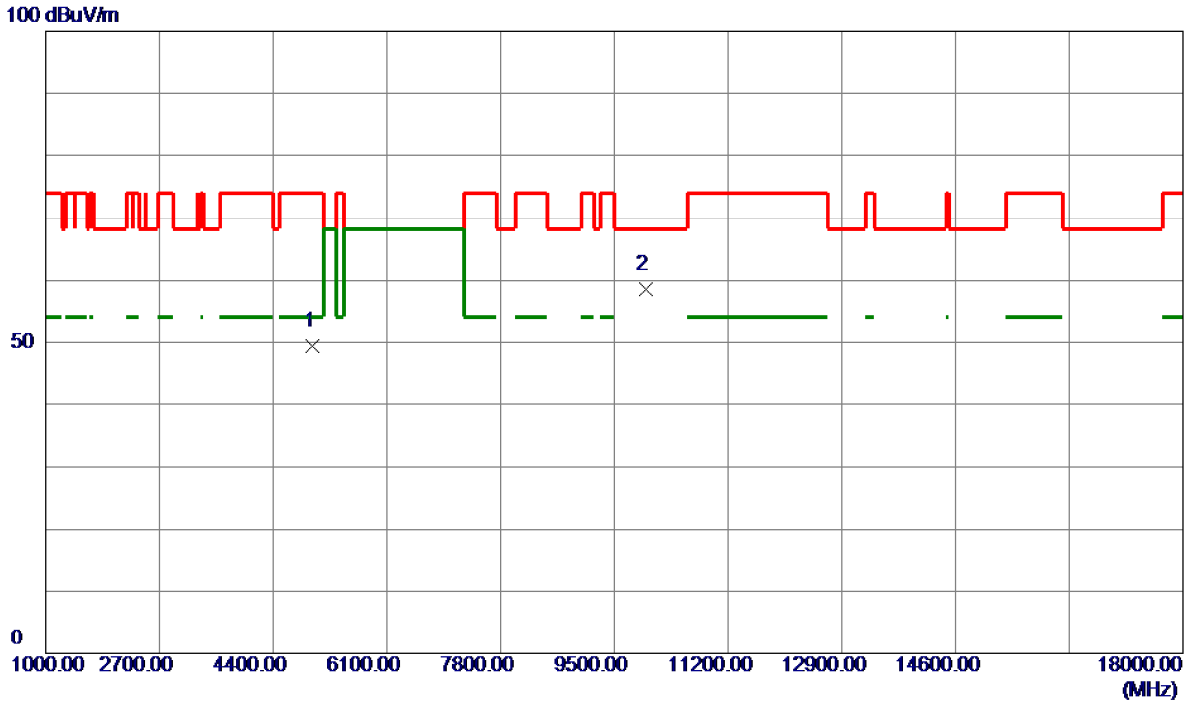

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4995.0000	50.65	-1.33	49.32	74.00	-24.68	Peak	
2 *	9976.0000	54.01	4.68	58.69	68.20	-9.51	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5510 MHz	Polarization	Horizontal

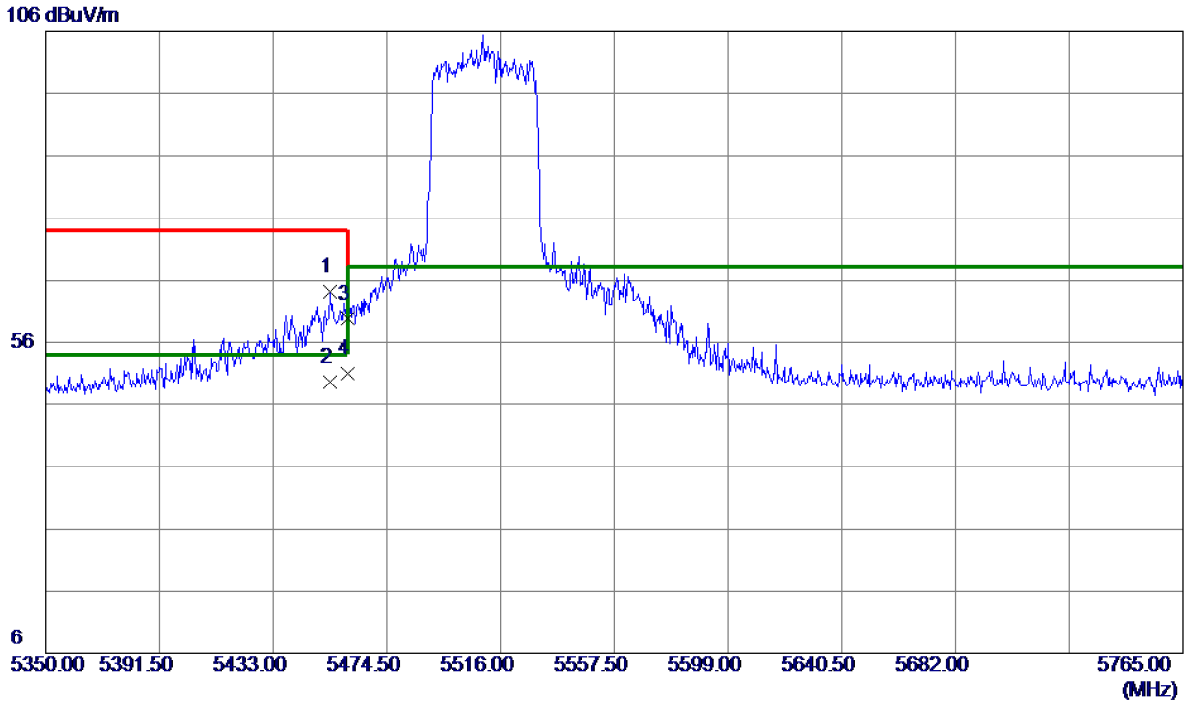

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5453.5419	55.22	8.94	64.16	74.00	-9.84	Peak	
2	5453.5419	40.70	8.94	49.64	54.00	-4.36	AVG	
3	5460.0000	50.76	8.95	59.71	74.00	-14.29	Peak	
4 *	5460.0000	42.07	8.95	51.02	54.00	-2.98	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5510 MHz	Polarization	Horizontal

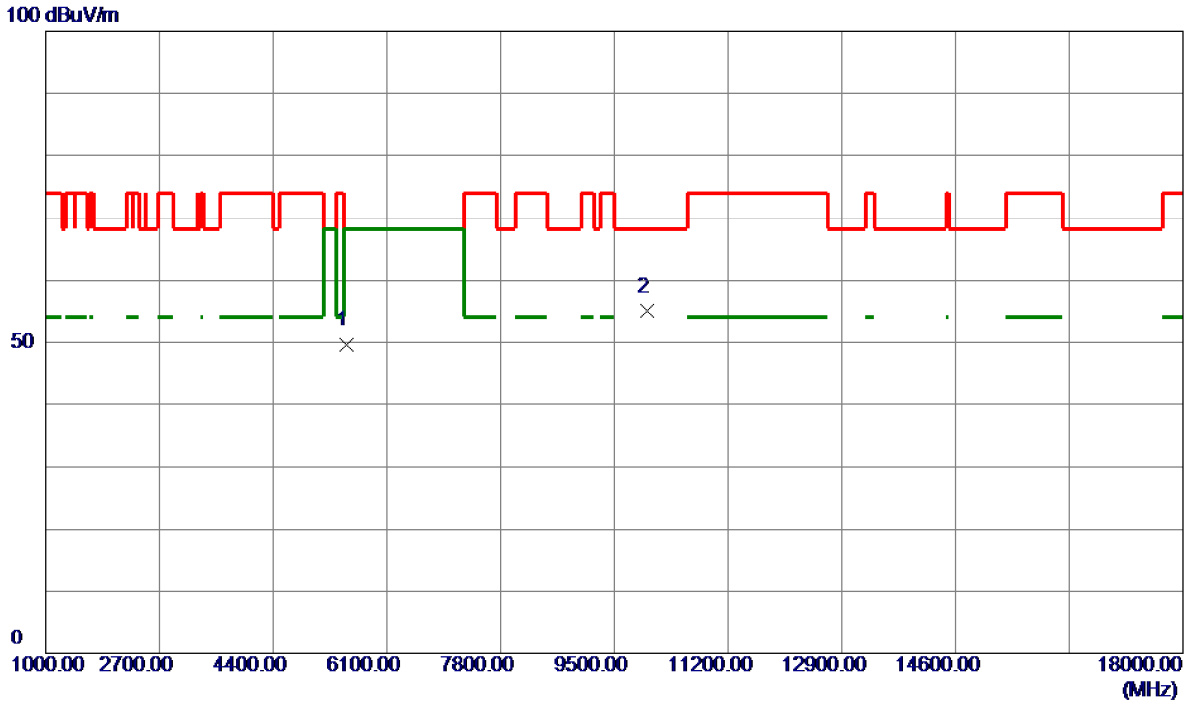

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5502.4500	50.58	-1.03	49.55	68.20	-18.65	Peak	
2 *	9998.1000	50.27	4.68	54.95	68.20	-13.25	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5550 MHz	Polarization	Vertical

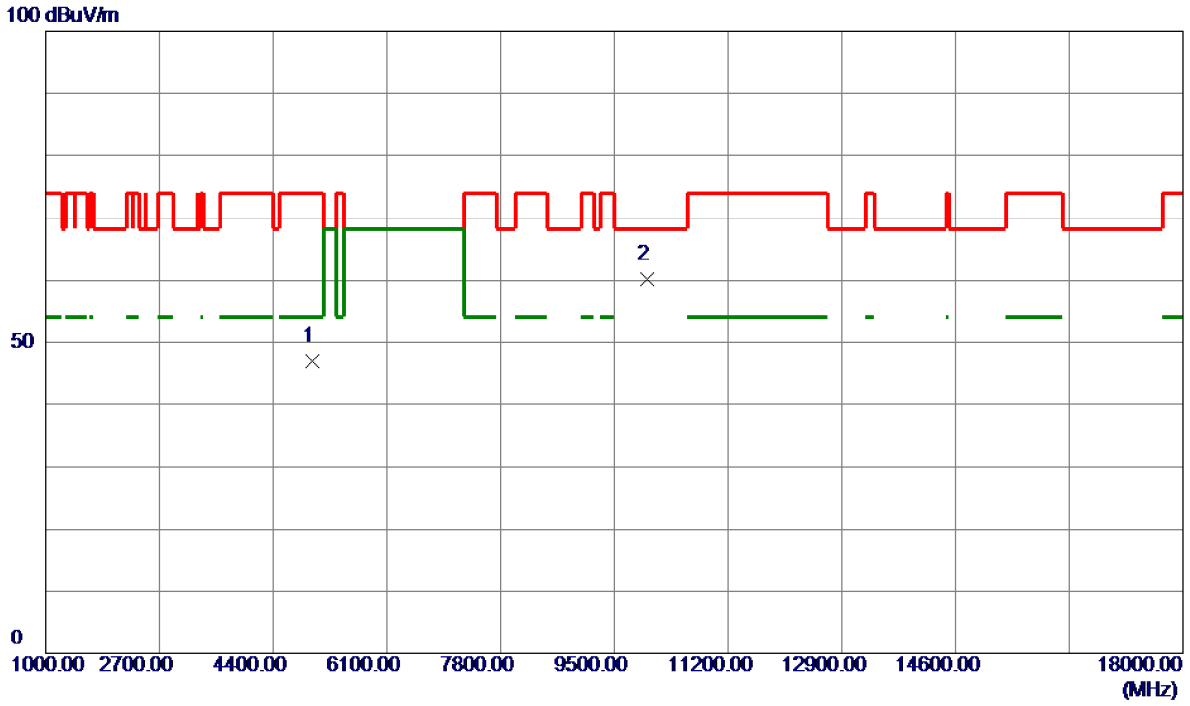

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4989.9000	48.41	-1.34	47.07	74.00	-26.93	Peak	
2 *	9990.4500	55.44	4.68	60.12	68.20	-8.08	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5550 MHz	Polarization	Horizontal

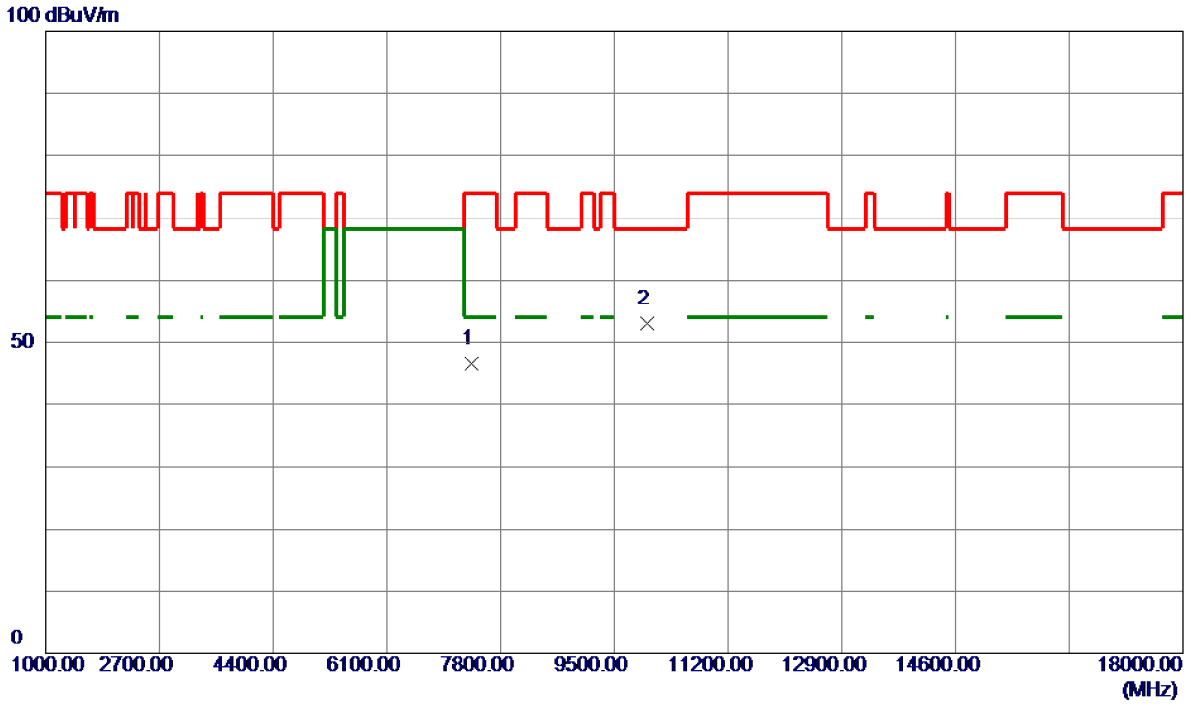

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7357.1500	43.26	3.32	46.58	74.00	-27.42	Peak	
2 *	9999.8000	48.33	4.68	53.01	68.20	-15.19	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5670 MHz	Polarization	Vertical

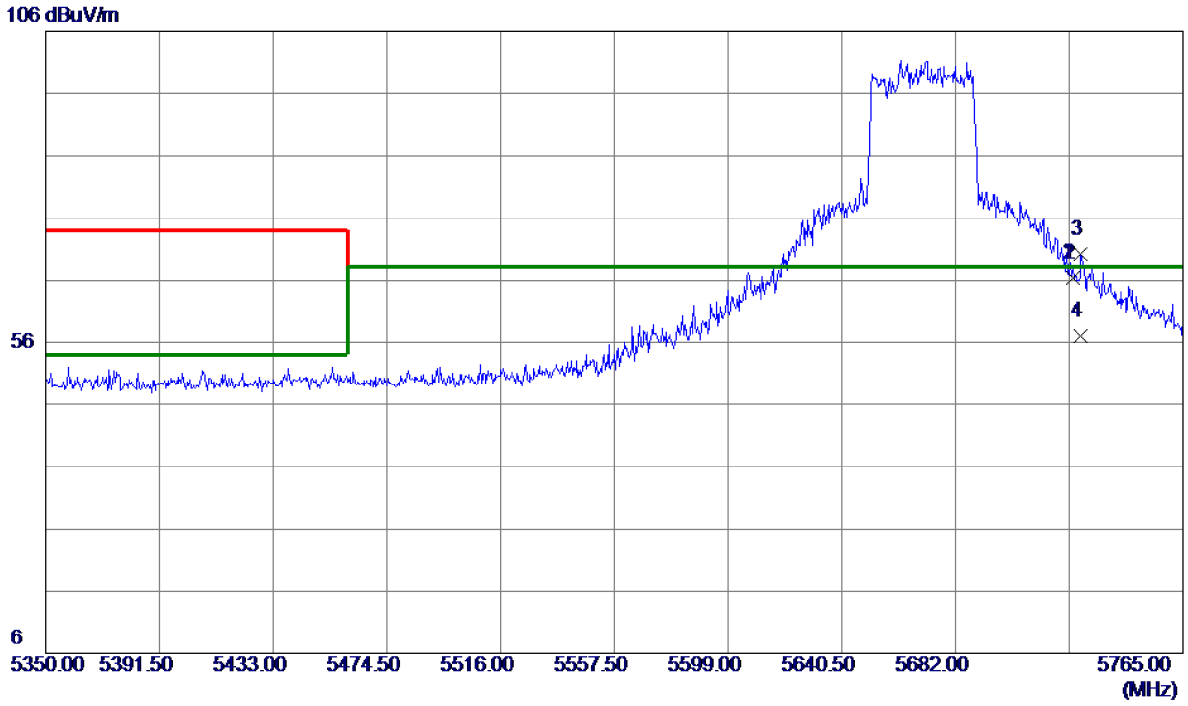

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5725.0000	56.98	9.34	66.32	68.20	-1.88	Peak	
2	5725.0000	56.98	9.34	66.32	68.20	-1.88	Peak	
3 *	5727.8580	60.83	9.34	70.17	68.20	1.97	Peak	
4	5727.8580	47.66	9.34	57.00	68.20	-11.20	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5670 MHz	Polarization	Vertical

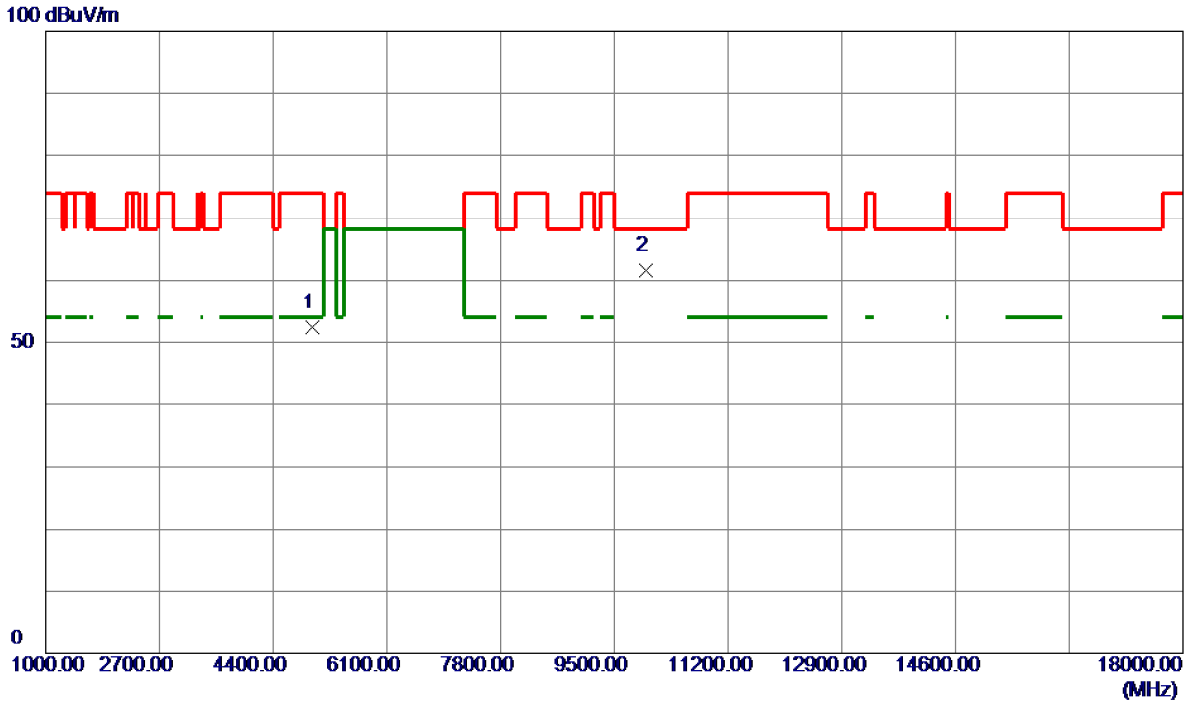

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4984.8000	53.66	-1.35	52.31	74.00	-21.69	Peak	
2 *	9964.1000	57.01	4.68	61.69	68.20	-6.51	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5670 MHz	Polarization	Horizontal

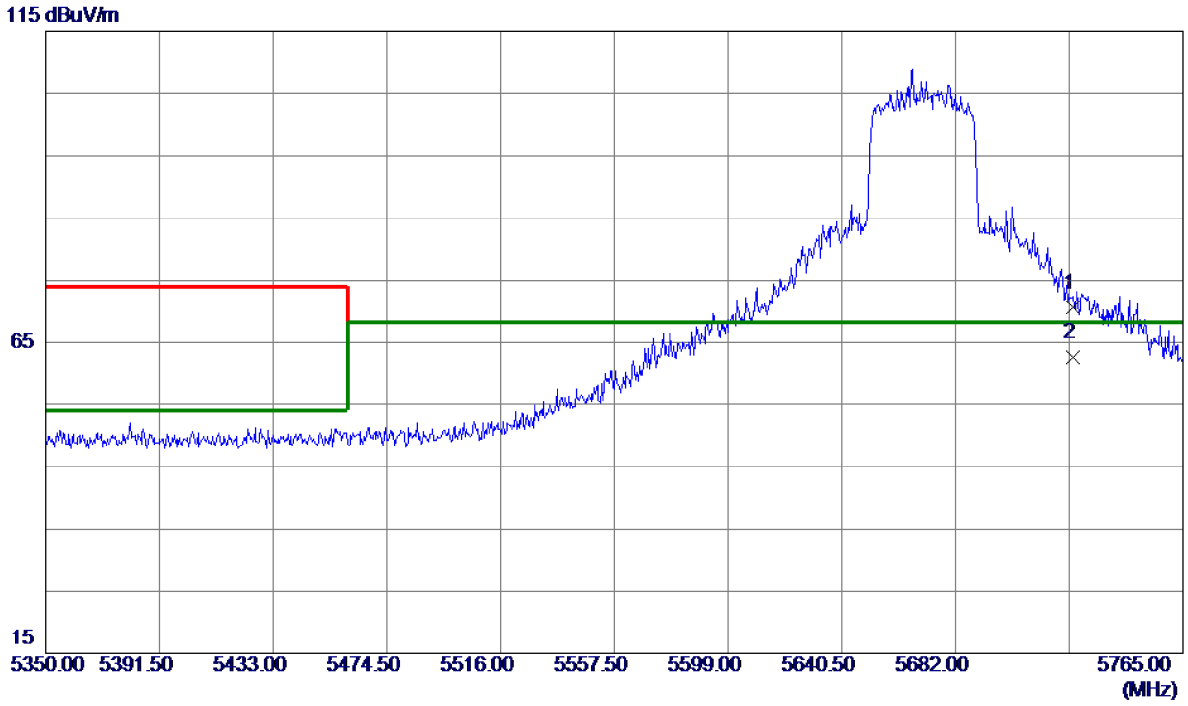

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5725.0000	61.32	9.34	70.66	68.20	2.46	Peak	
2	5725.0000	53.21	9.34	62.55	68.20	-5.65	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE40) Mode 5670 MHz	Polarization	Horizontal

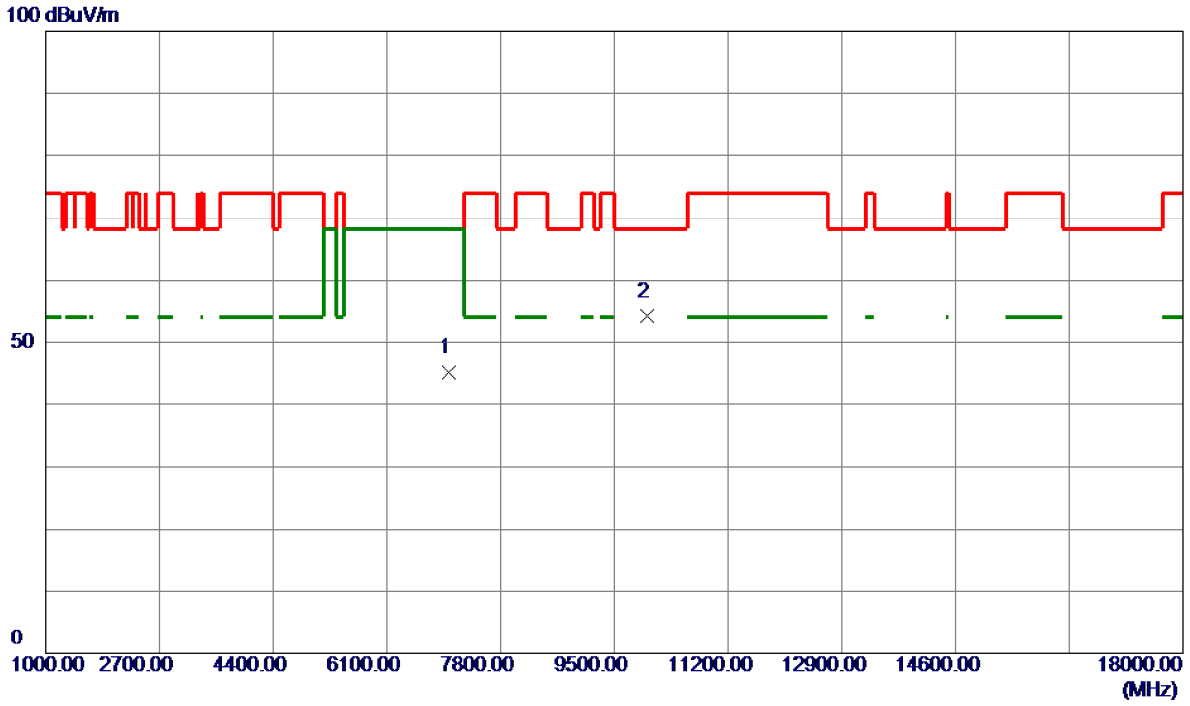

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7025.6500	42.88	2.40	45.28	68.20	-22.92	Peak	
2 *	9999.8000	49.44	4.68	54.12	68.20	-14.08	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5530 MHz	Polarization	Vertical

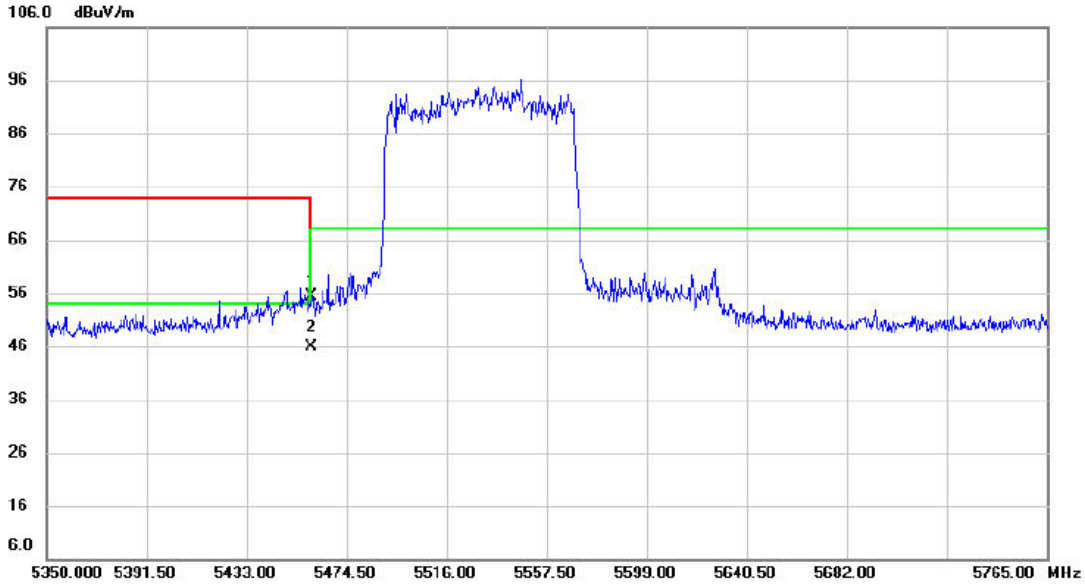

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Over		
		MHz	dBuV		dBuV/m	dBuV/m	dB	Detector	Comment
1		5460.000	46.45	8.95	55.40	74.00	-18.60	peak	
2	*	5460.000	36.83	8.95	45.78	54.00	-8.22	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5530 MHz	Polarization	Vertical

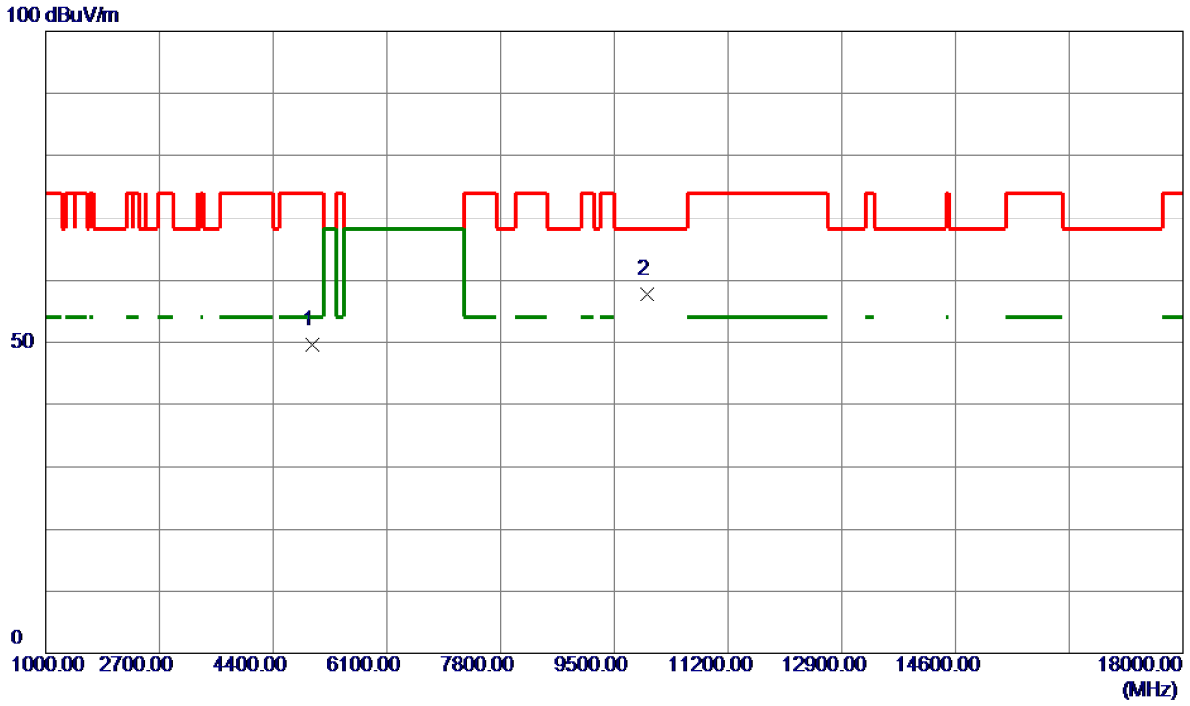

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4981.4000	51.05	-1.36	49.69	74.00	-24.31	Peak	
2 *	9999.8000	53.10	4.68	57.78	68.20	-10.42	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5530 MHz	Polarization	Horizontal

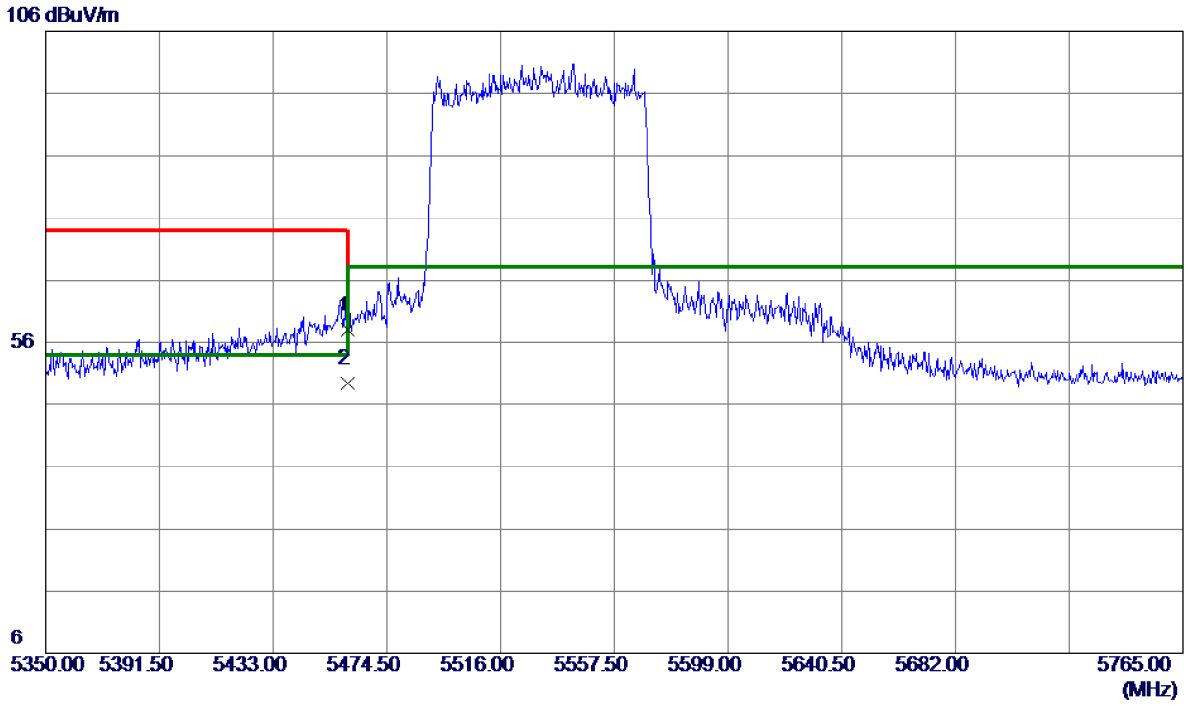

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	48.98	8.95	57.93	74.00	-16.07	Peak	
2 *	5460.0000	40.46	8.95	49.41	54.00	-4.59	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5530 MHz	Polarization	Horizontal

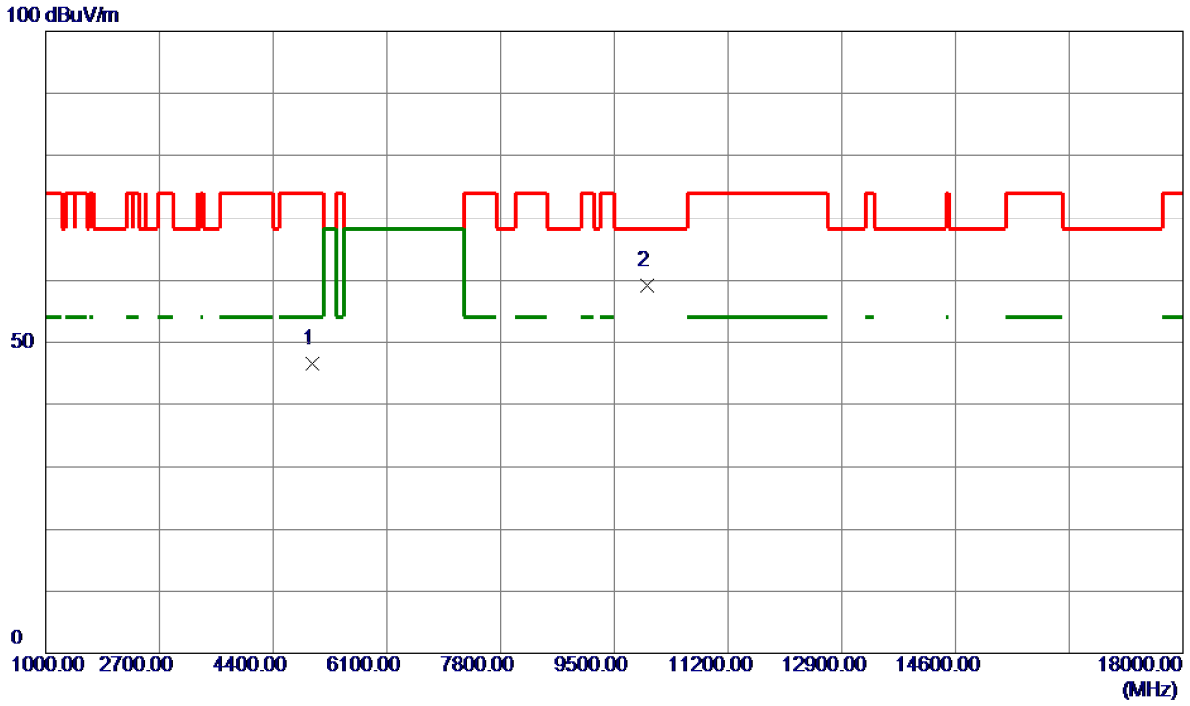

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4988.2000	47.97	-1.34	46.63	74.00	-27.37	Peak	
2 *	9994.7000	54.43	4.68	59.11	68.20	-9.09	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5610 MHz	Polarization	Vertical

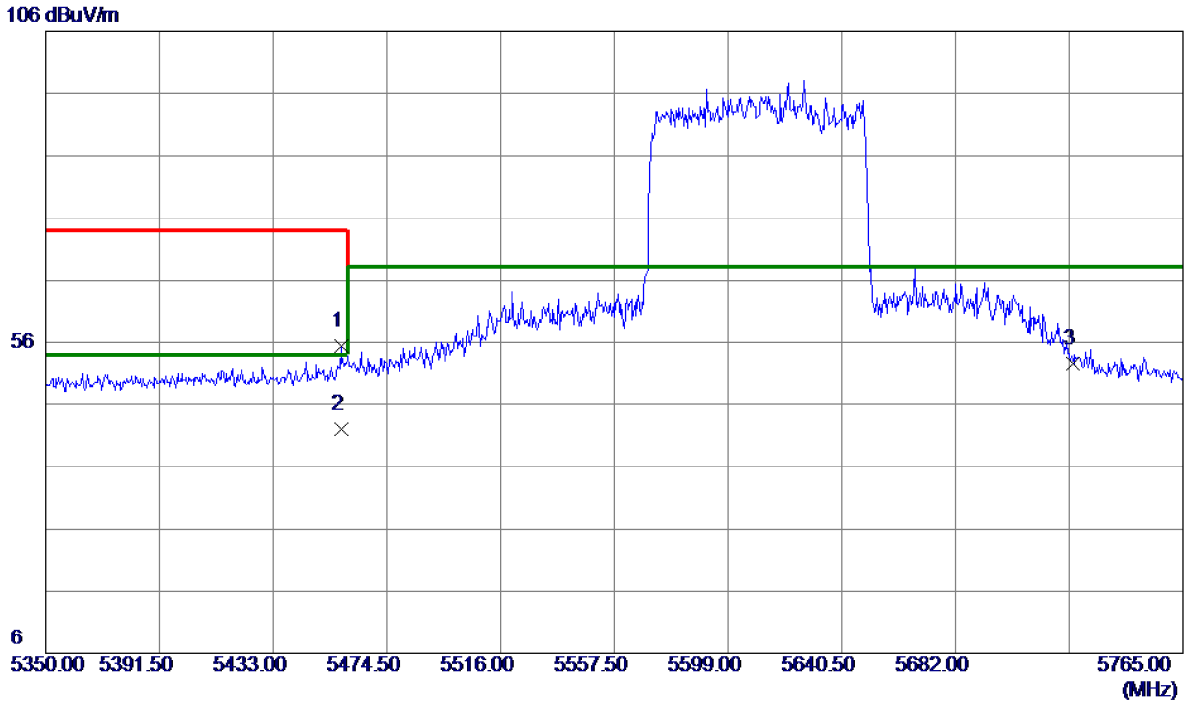

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5457.6930	46.48	8.95	55.43	74.00	-18.57	Peak	
2 *	5457.6930	32.98	8.95	41.93	54.00	-12.07	AVG	
3	5725.0000	43.35	9.34	52.69	68.20	-15.51	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5610 MHz	Polarization	Vertical

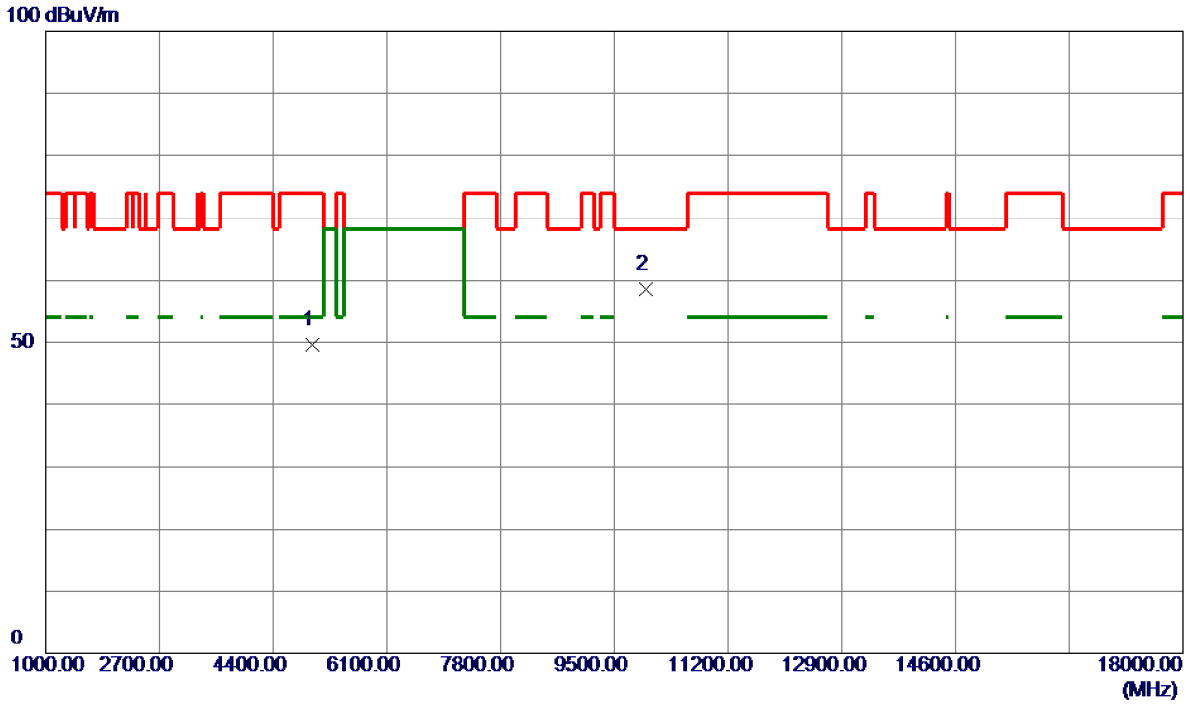

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4988.2000	50.89	-1.34	49.55	74.00	-24.45	Peak	
2 *	9976.0000	53.89	4.68	58.57	68.20	-9.63	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5610 MHz	Polarization	Horizontal

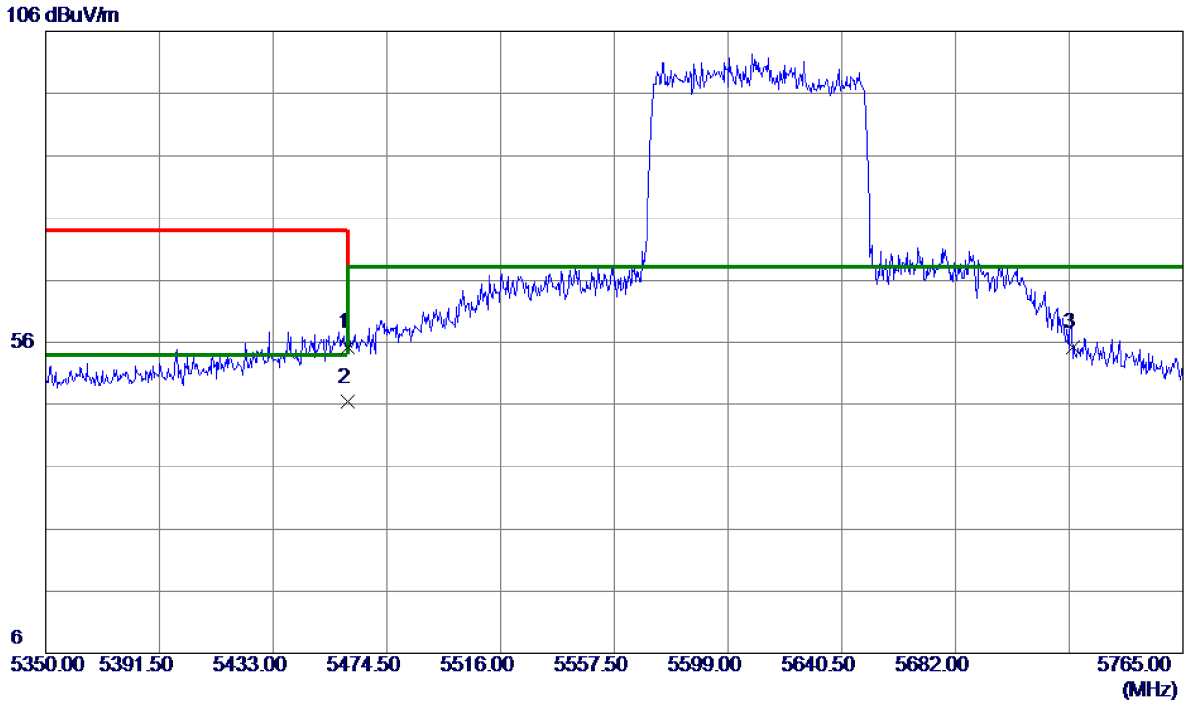

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5460.0000	46.33	8.95	55.28	74.00	-18.72	Peak	
2 *	5460.0000	37.45	8.95	46.40	54.00	-7.60	AVG	
3	5725.0000	45.92	9.34	55.26	68.20	-12.94	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-2C_TX AX(HE80) Mode 5610 MHz	Polarization	Horizontal

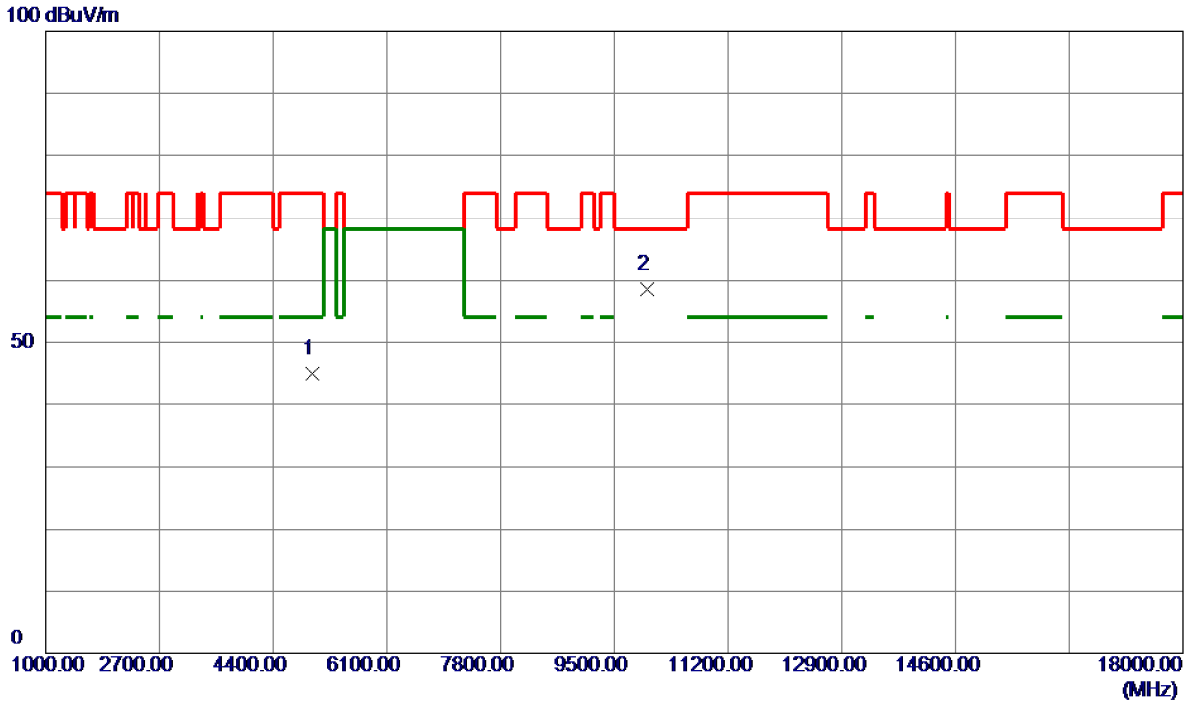

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	4989.0500	46.42	-1.34	45.08	74.00	-28.92	Peak	
2 *	9988.7500	53.86	4.68	58.54	68.20	-9.66	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5745 MHz	Polarization	Vertical

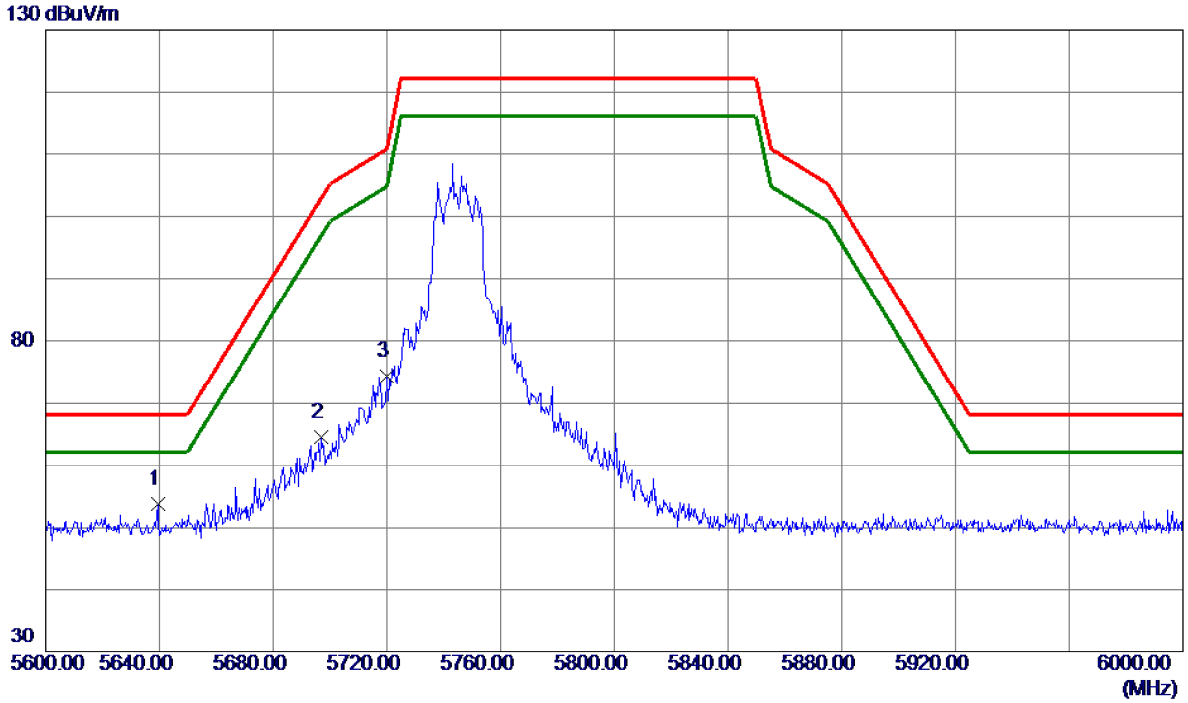

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5639.4000	44.51	9.20	53.71	68.20	-14.49	Peak	
2	5697.0000	55.33	9.29	64.62	102.98	-38.36	Peak	
3	5720.0000	65.01	9.33	74.34	110.80	-36.46	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5745 MHz	Polarization	Vertical

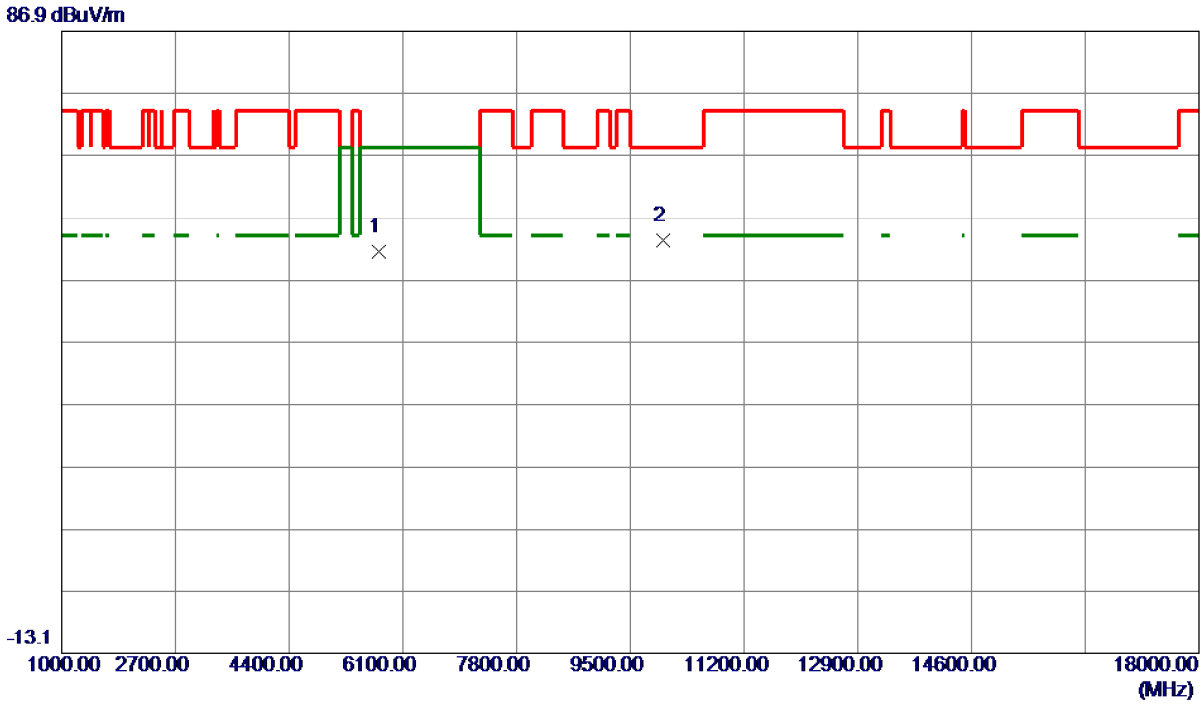

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5744.7000	52.22	-0.63	51.59	68.20	-16.61	Peak	
2 *	9998.9500	48.66	4.68	53.34	68.20	-14.86	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5745 MHz	Polarization	Horizontal

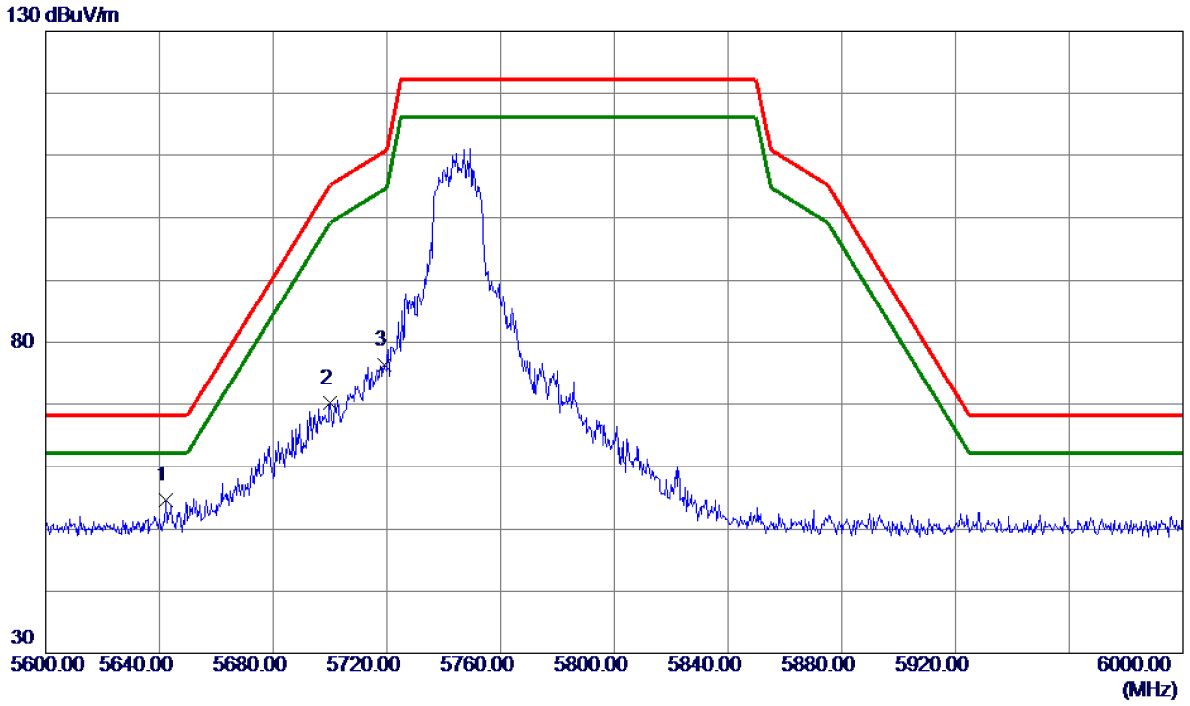

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5642.4000	45.46	9.20	54.66	68.20	-13.54	Peak	
2	5700.2000	60.97	9.30	70.27	105.26	-34.99	Peak	
3	5719.0000	67.08	9.33	76.41	110.52	-34.11	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5745 MHz	Polarization	Horizontal

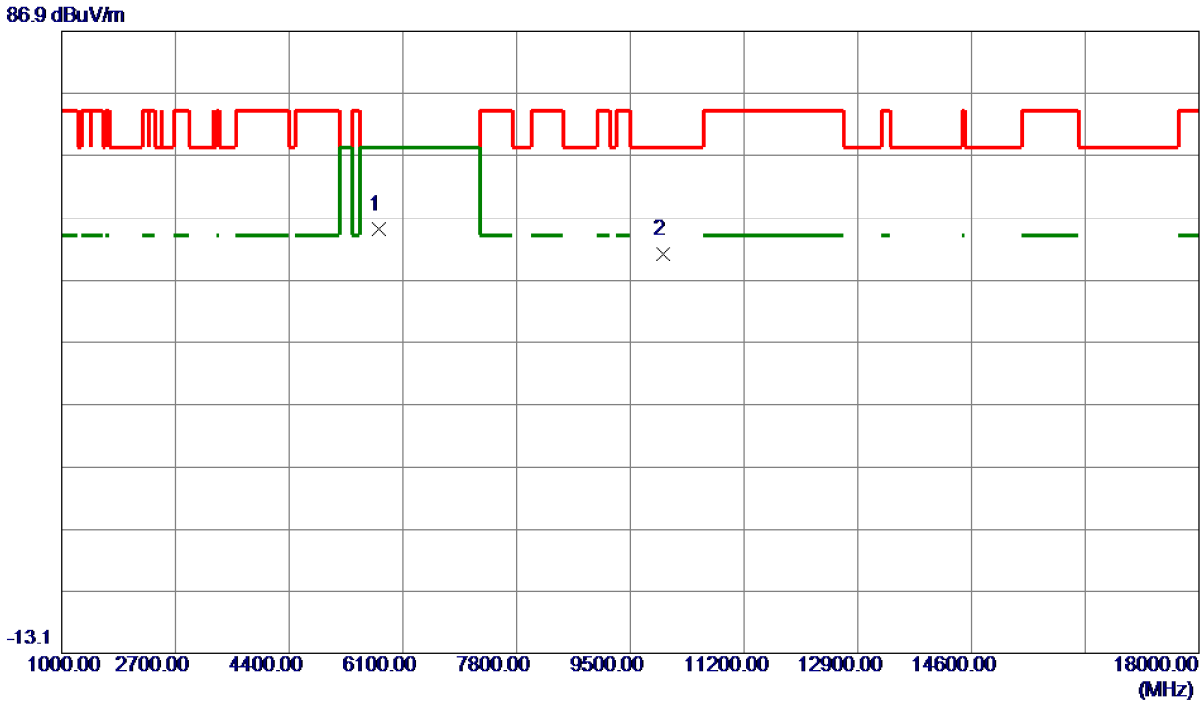

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5743.0000	55.73	-0.63	55.10	68.20	-13.10	Peak	
2	9998.9500	46.34	4.68	51.02	68.20	-17.18	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5785 MHz	Polarization	Vertical

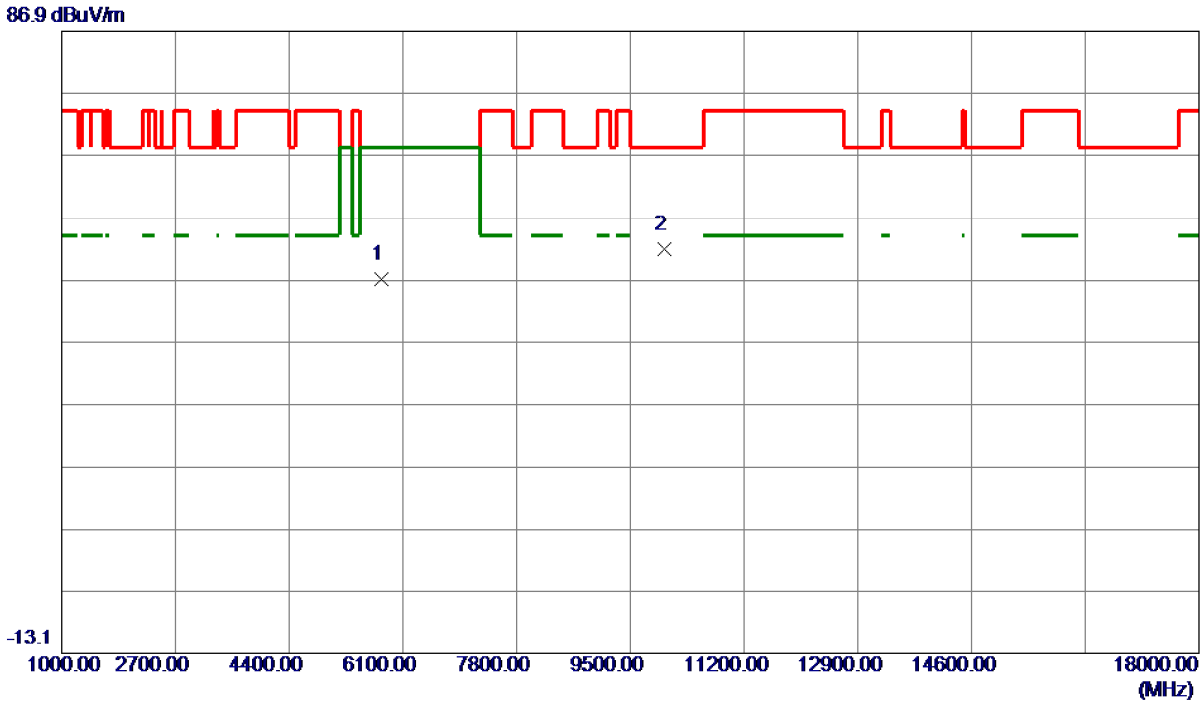

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5782.1000	47.73	-0.57	47.16	68.20	-21.04	Peak	
2 *	10001.5000	47.23	4.68	51.91	68.20	-16.29	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5785 MHz	Polarization	Horizontal

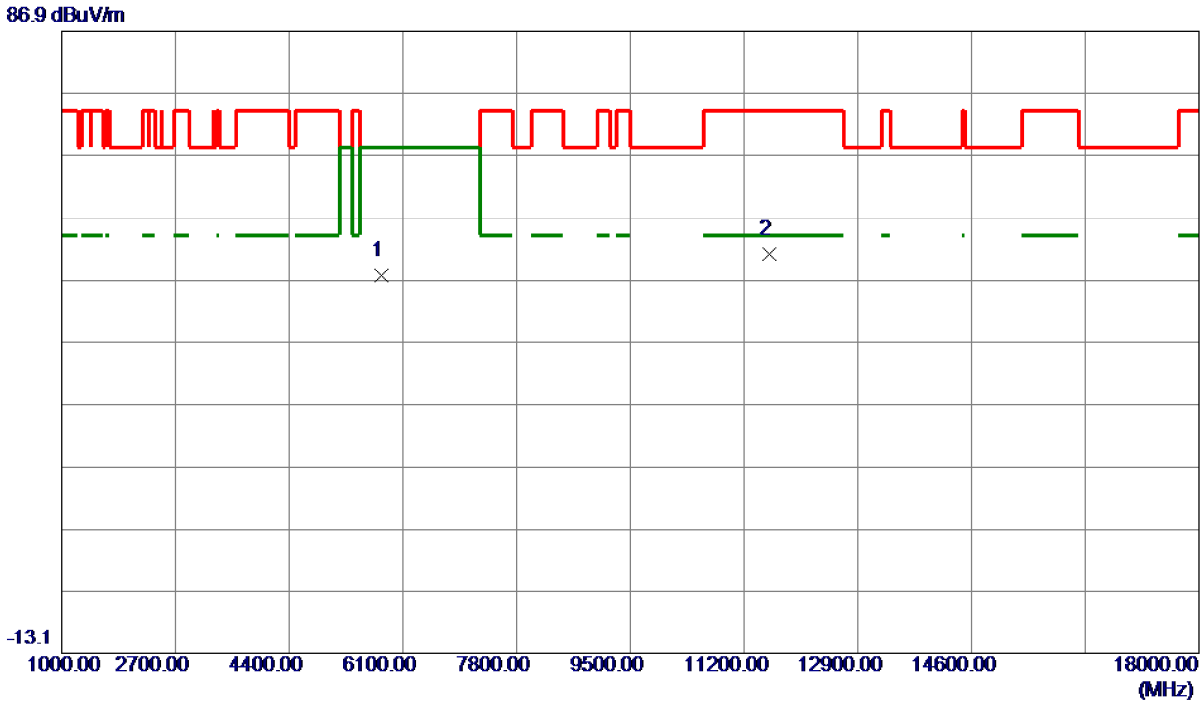

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	5786.3500	48.27	-0.56	47.71	68.20	-20.49	Peak	
2	11571.4500	45.29	5.77	51.06	74.00	-22.94	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5825 MHz	Polarization	Vertical

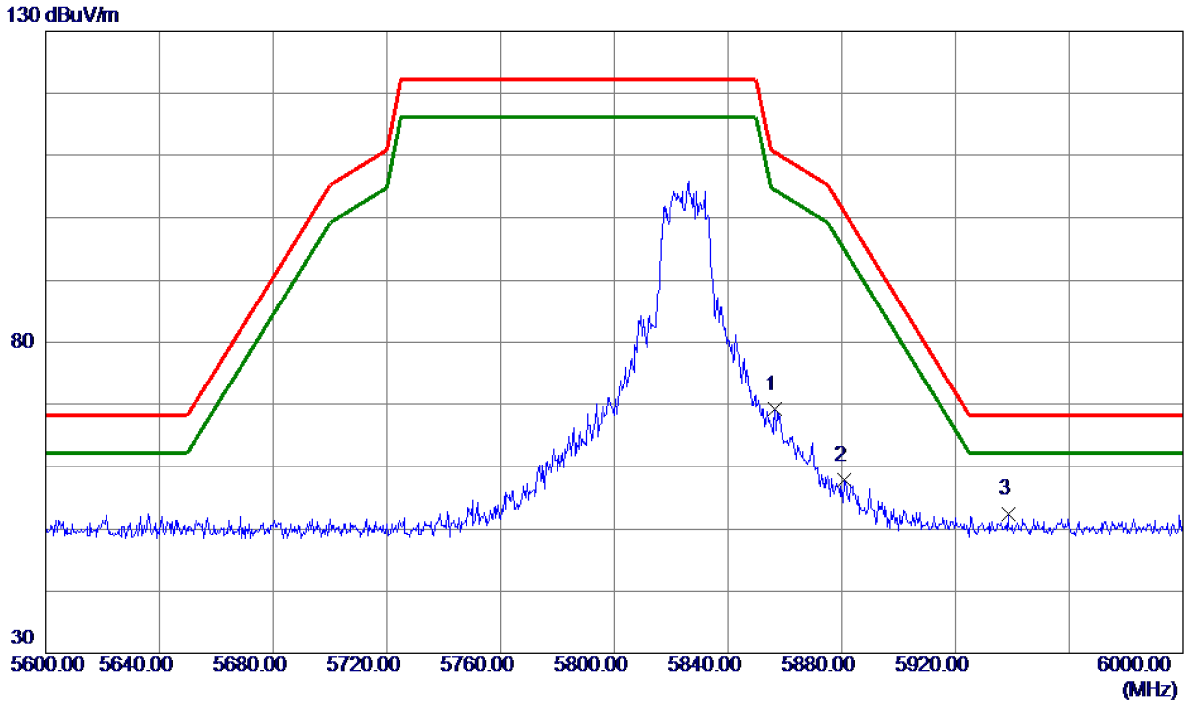

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5856.4000	59.73	9.55	69.28	110.41	-41.13	Peak	
2	5881.0000	48.25	9.59	57.84	100.76	-42.92	Peak	
3 *	5938.6000	42.78	9.69	52.47	68.20	-15.73	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5825 MHz	Polarization	Vertical

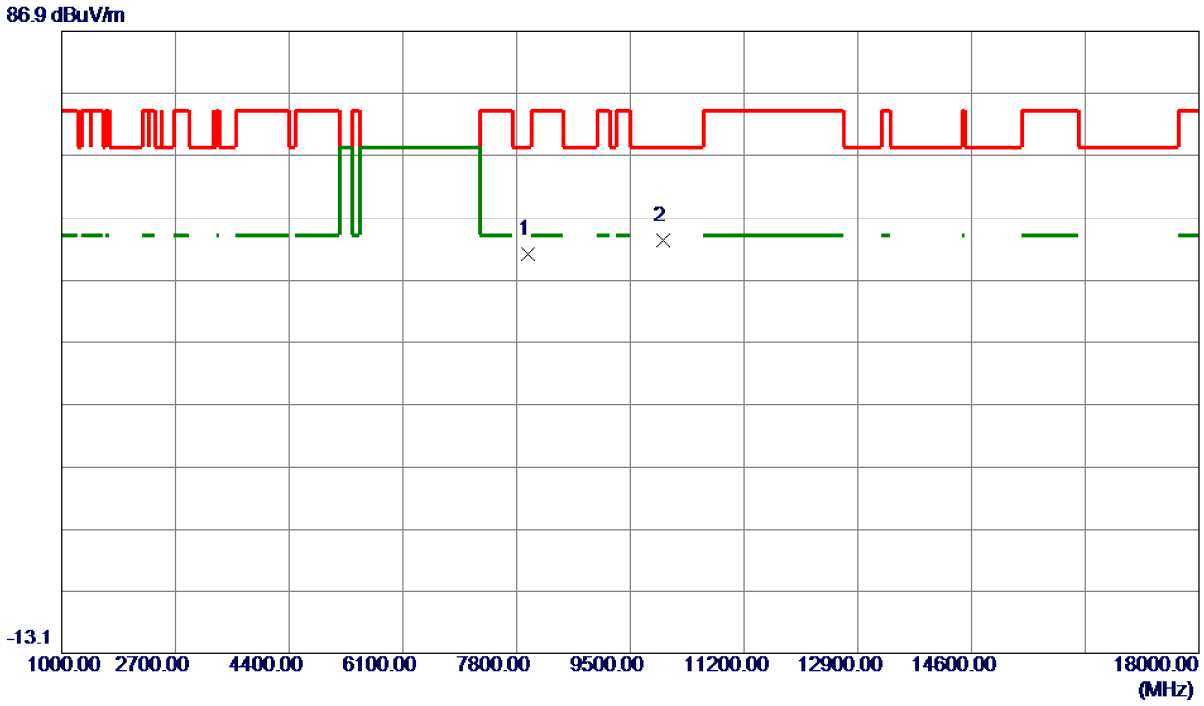

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	7970.8500	46.35	4.68	51.03	68.20	-17.17	Peak	
2 *	9998.9500	48.70	4.68	53.38	68.20	-14.82	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.


Test Mode	UNII-3_TX A Mode 5825 MHz	Polarization	Horizontal

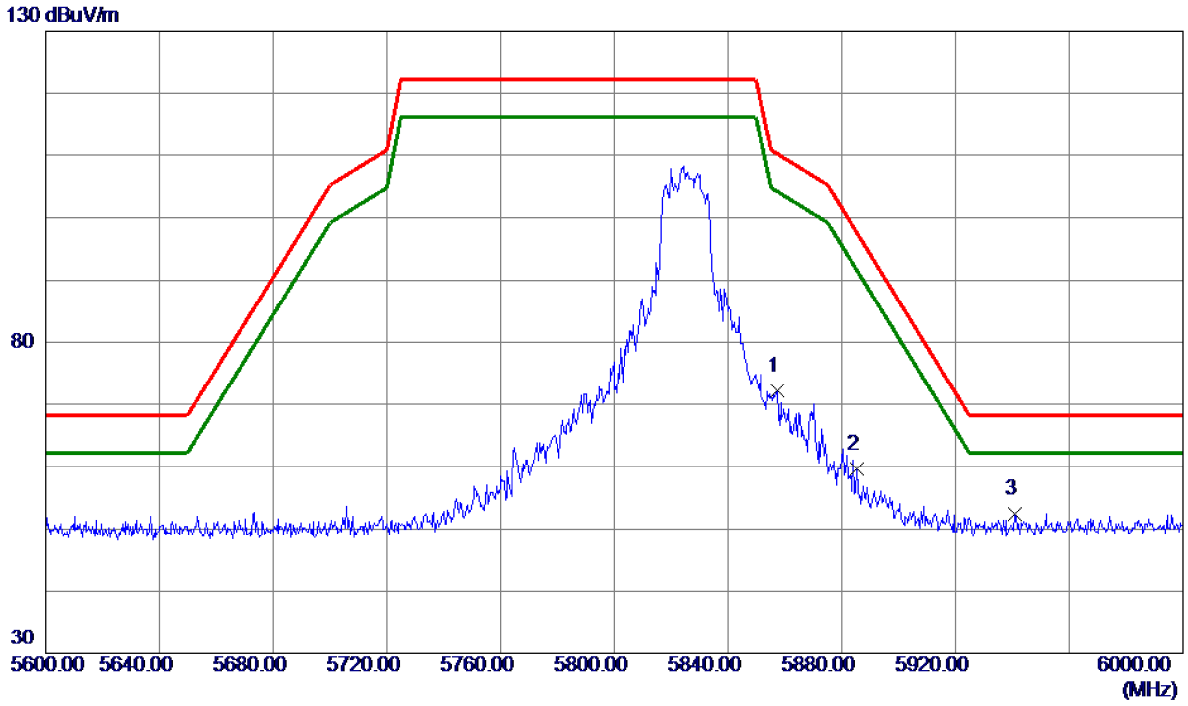

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5857.2000	62.61	9.56	72.17	110.18	-38.01	Peak	
2	5885.2000	49.97	9.60	59.57	97.65	-38.08	Peak	
3 *	5941.0000	42.70	9.69	52.39	68.20	-15.81	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-3_TX A Mode 5825 MHz	Polarization	Horizontal

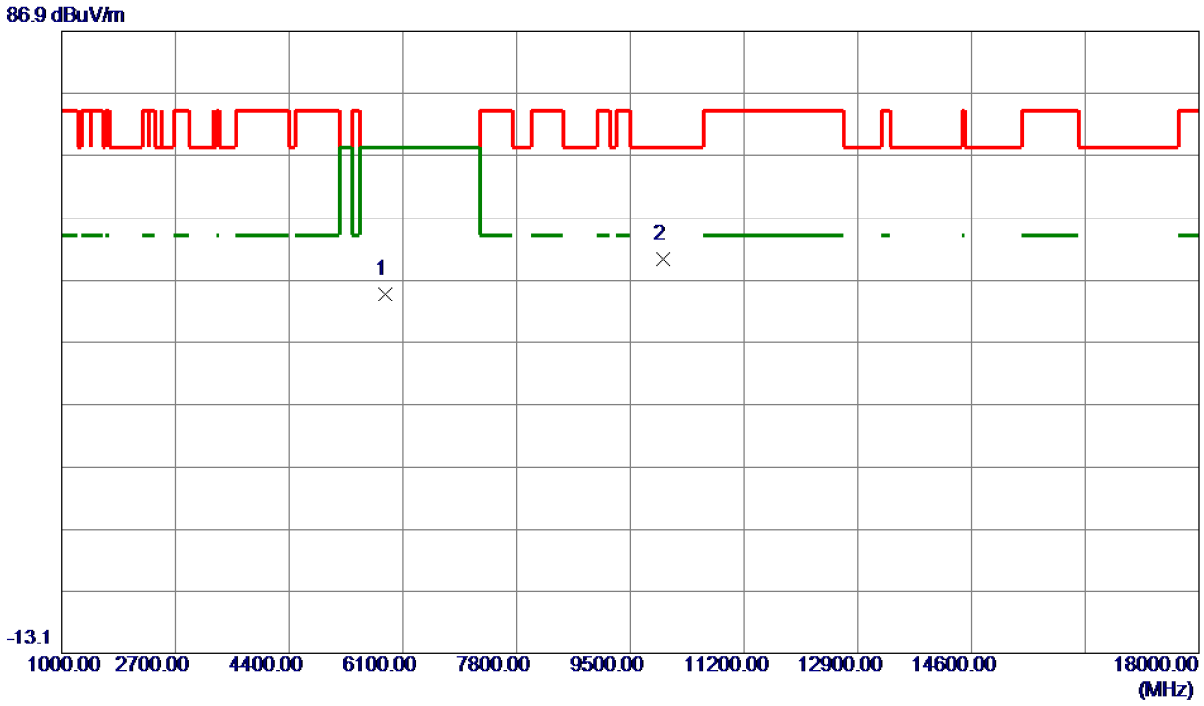

No.	Freq.	Reading Level	Correct Factor	Measure ment	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	5828.0000	45.19	-0.49	44.70	68.20	-23.50	Peak	
2 *	9999.8000	45.60	4.68	50.28	68.20	-17.92	Peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.