






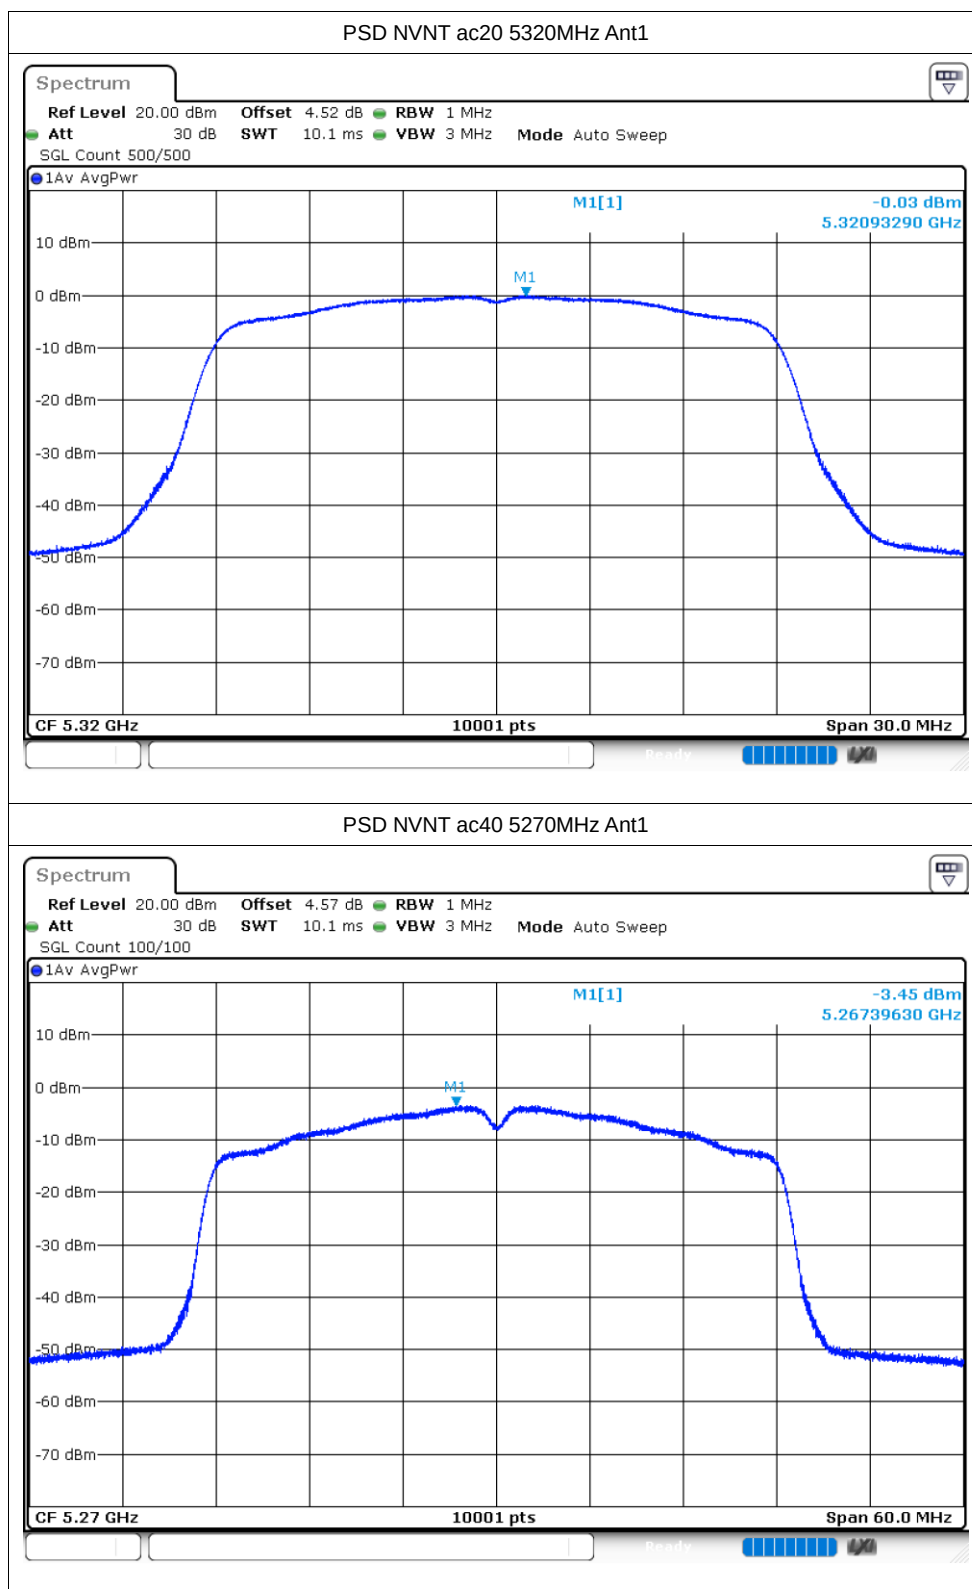

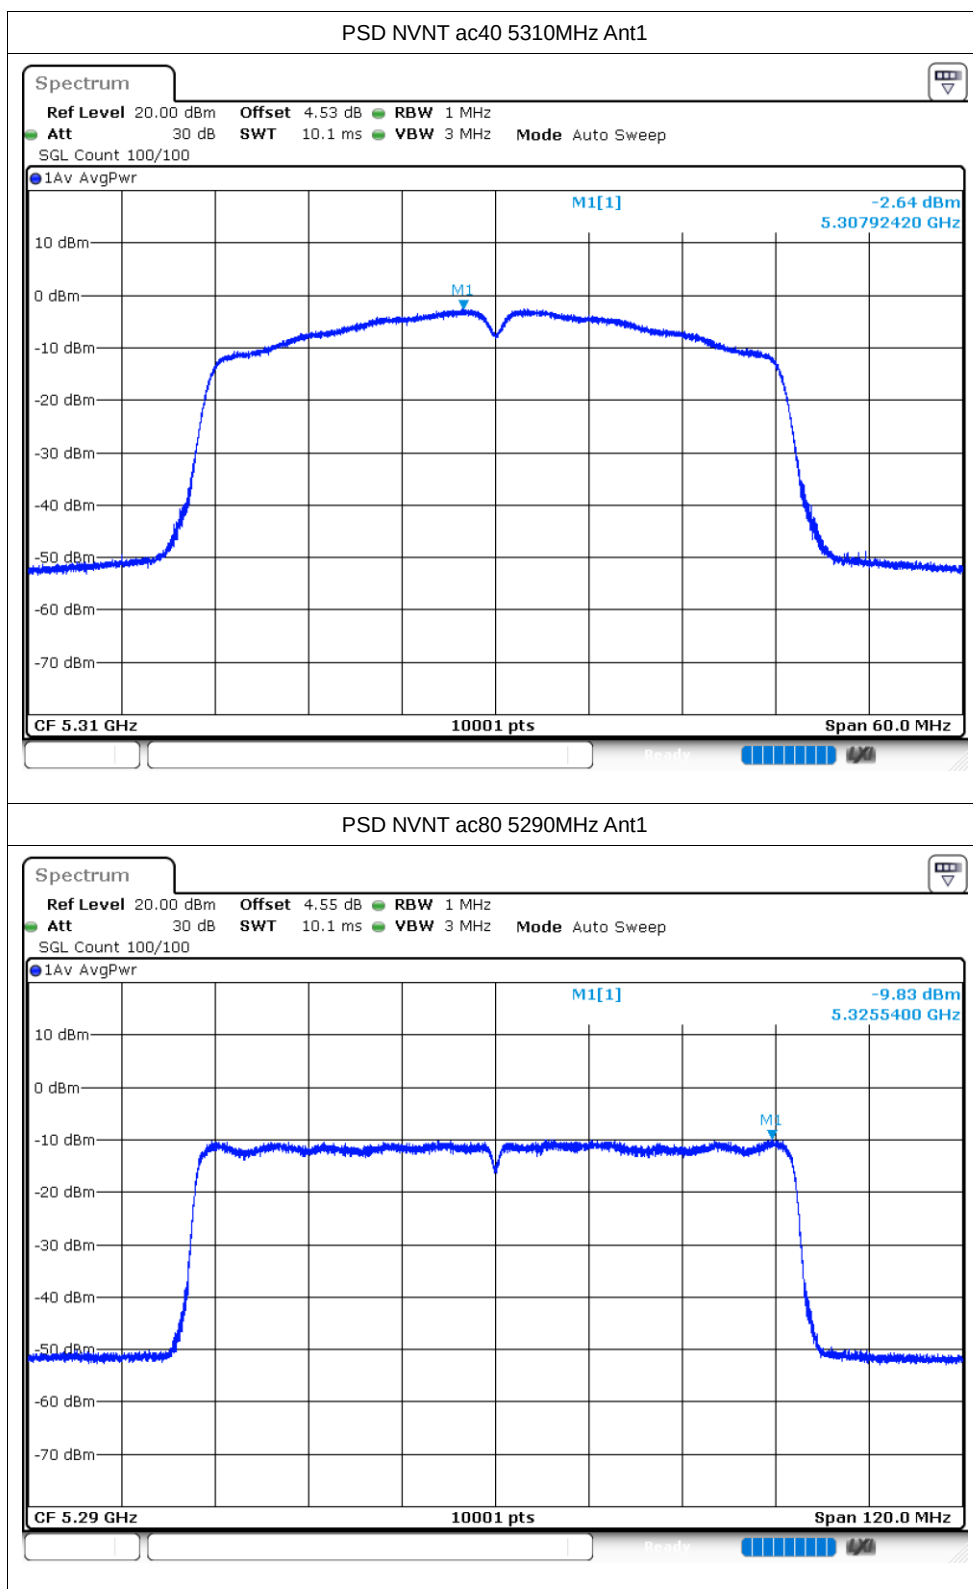

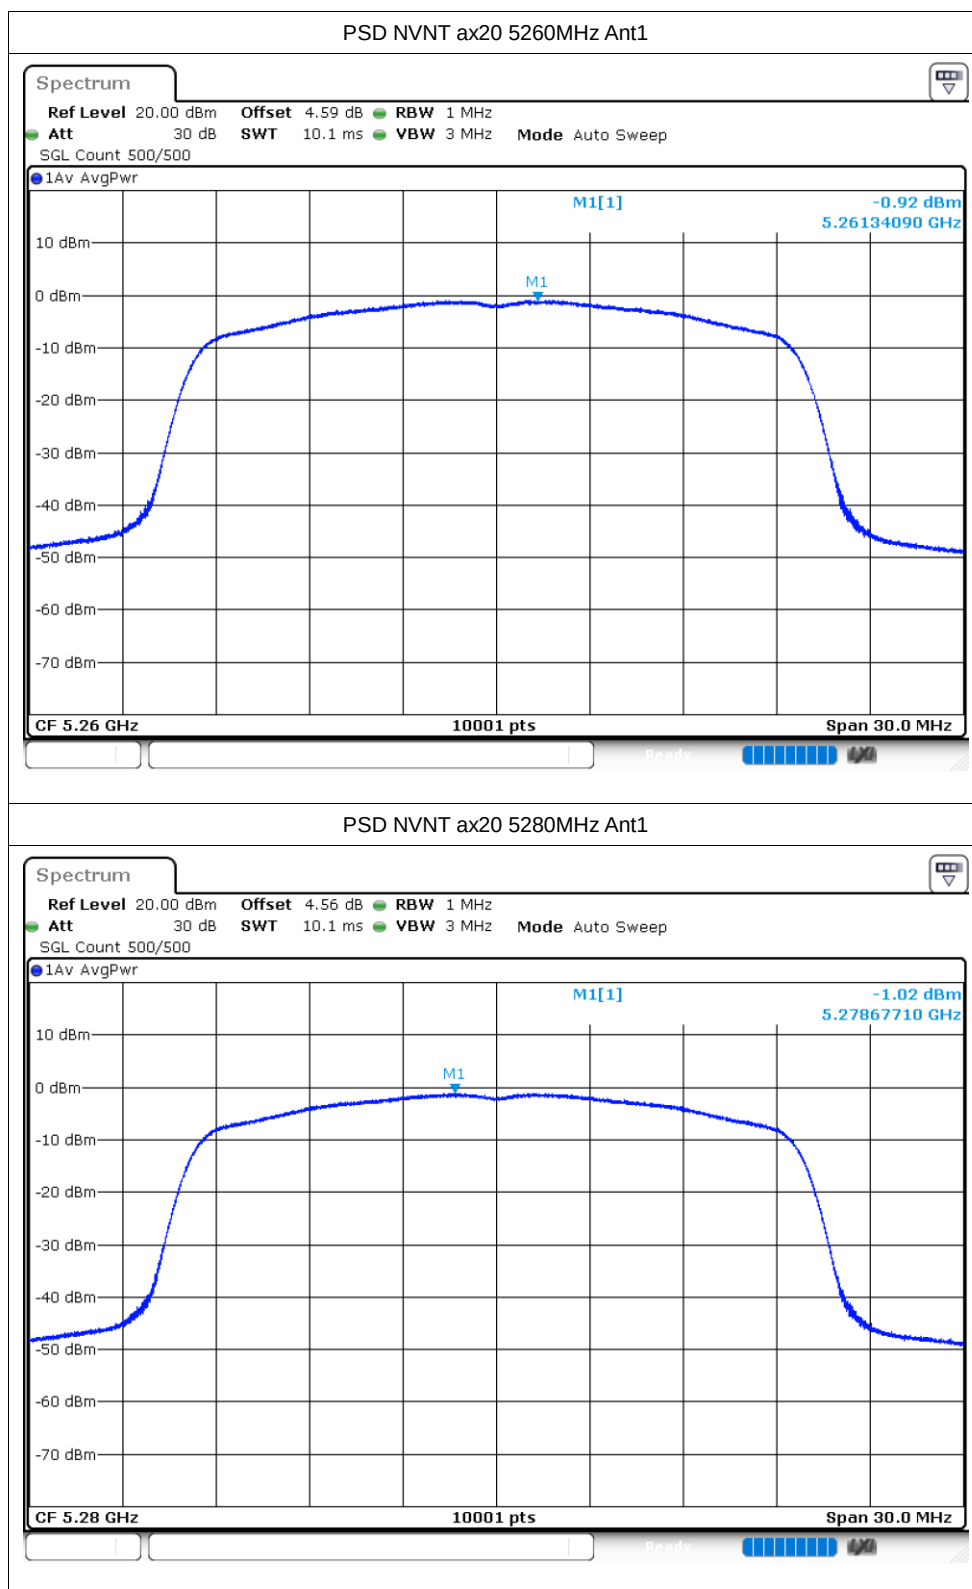

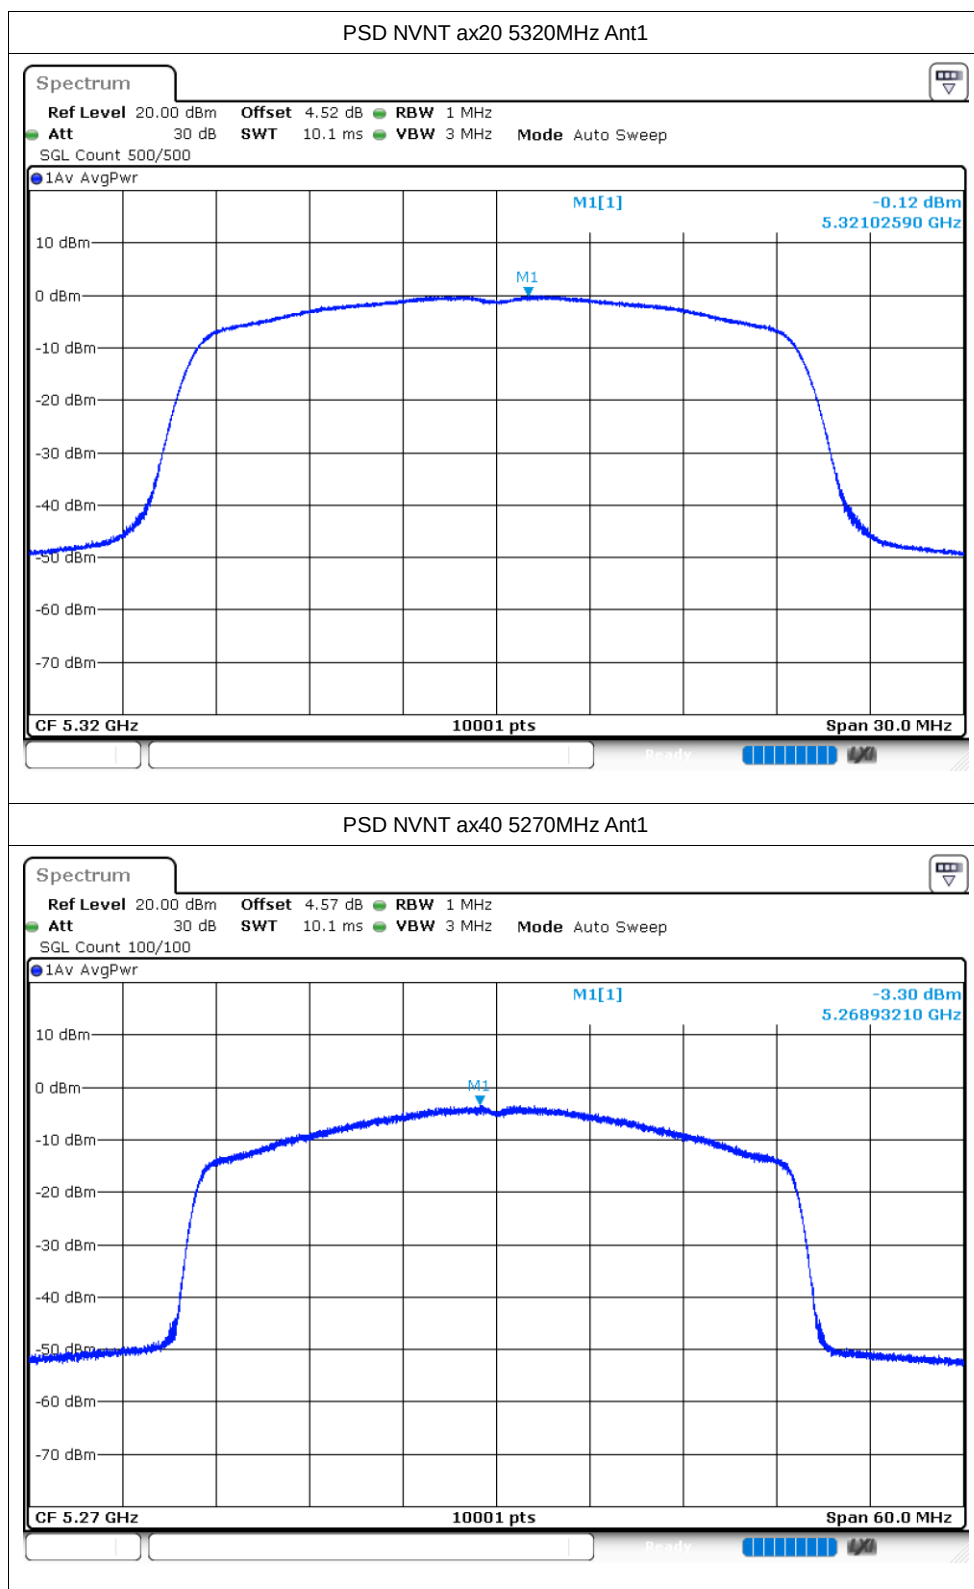

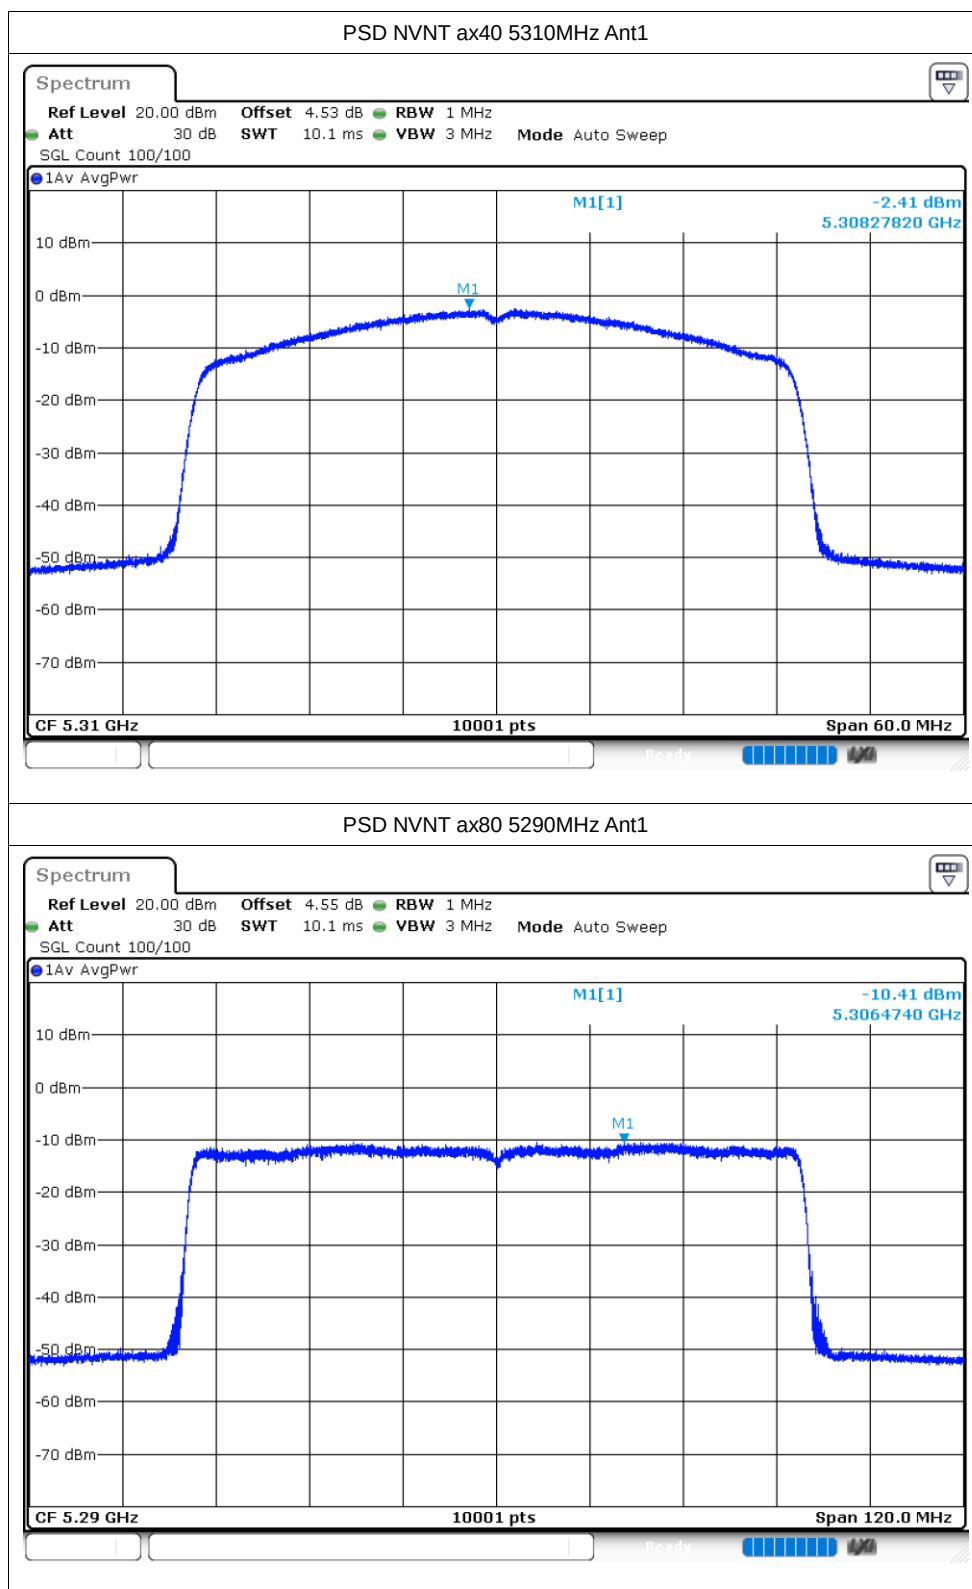


Band Edge


Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5260	Ant1	-41.65	-27	Pass
NVNT	a	5320	Ant1	-39.8	-27	Pass
NVNT	n20	5260	Ant1	-42.08	-27	Pass
NVNT	n20	5320	Ant1	-37.54	-27	Pass
NVNT	n40	5270	Ant1	-40.83	-27	Pass
NVNT	n40	5310	Ant1	-40.66	-27	Pass
NVNT	ac20	5260	Ant1	-41.55	-27	Pass
NVNT	ac20	5320	Ant1	-39.47	-27	Pass
NVNT	ac40	5270	Ant1	-42.02	-27	Pass
NVNT	ac40	5310	Ant1	-40.78	-27	Pass
NVNT	ac80	5290	Ant1	-38.28	-27	Pass
NVNT	ac80	5290	Ant1	-40.93	-27	Pass
NVNT	ax20	5260	Ant1	-40.74	-27	Pass
NVNT	ax20	5320	Ant1	-39.78	-27	Pass
NVNT	ax40	5270	Ant1	-41.44	-27	Pass
NVNT	ax40	5310	Ant1	-41.17	-27	Pass
NVNT	ax80	5290	Ant1	-38.84	-27	Pass
NVNT	ax80	5290	Ant1	-41.14	-27	Pass


Test Graphs


Band Edge NVNT a 5260MHz Low Ant1

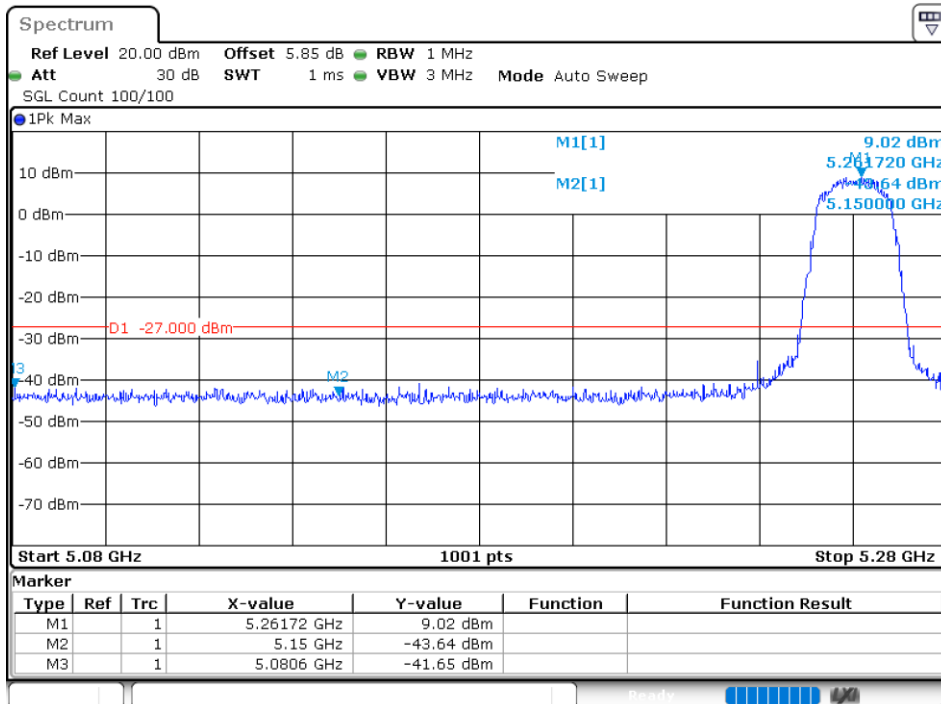



Band Edge NVNT a 5320MHz High Ant1

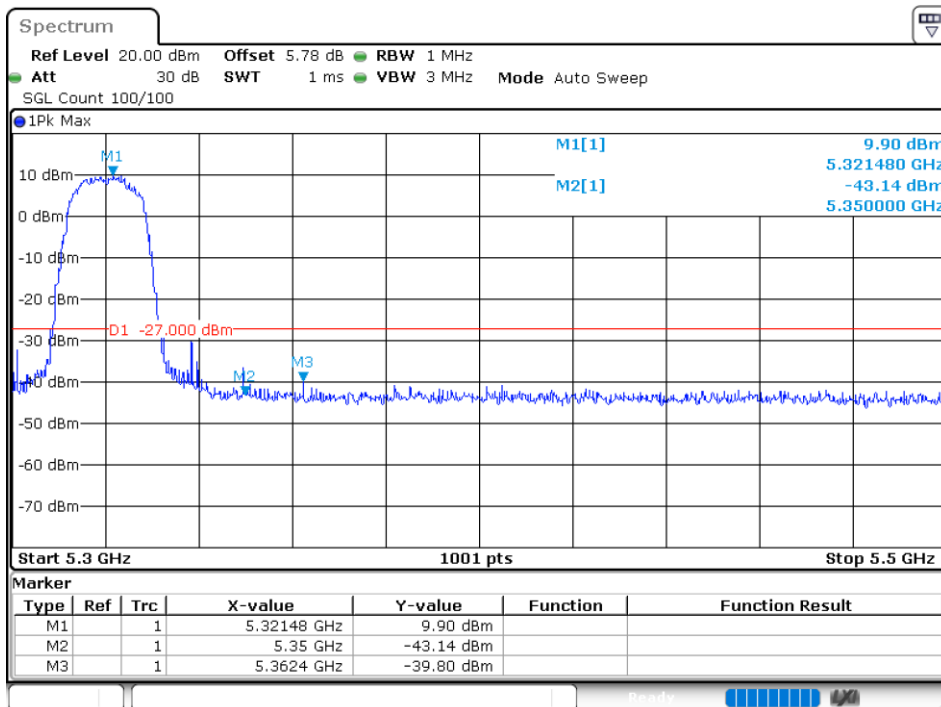


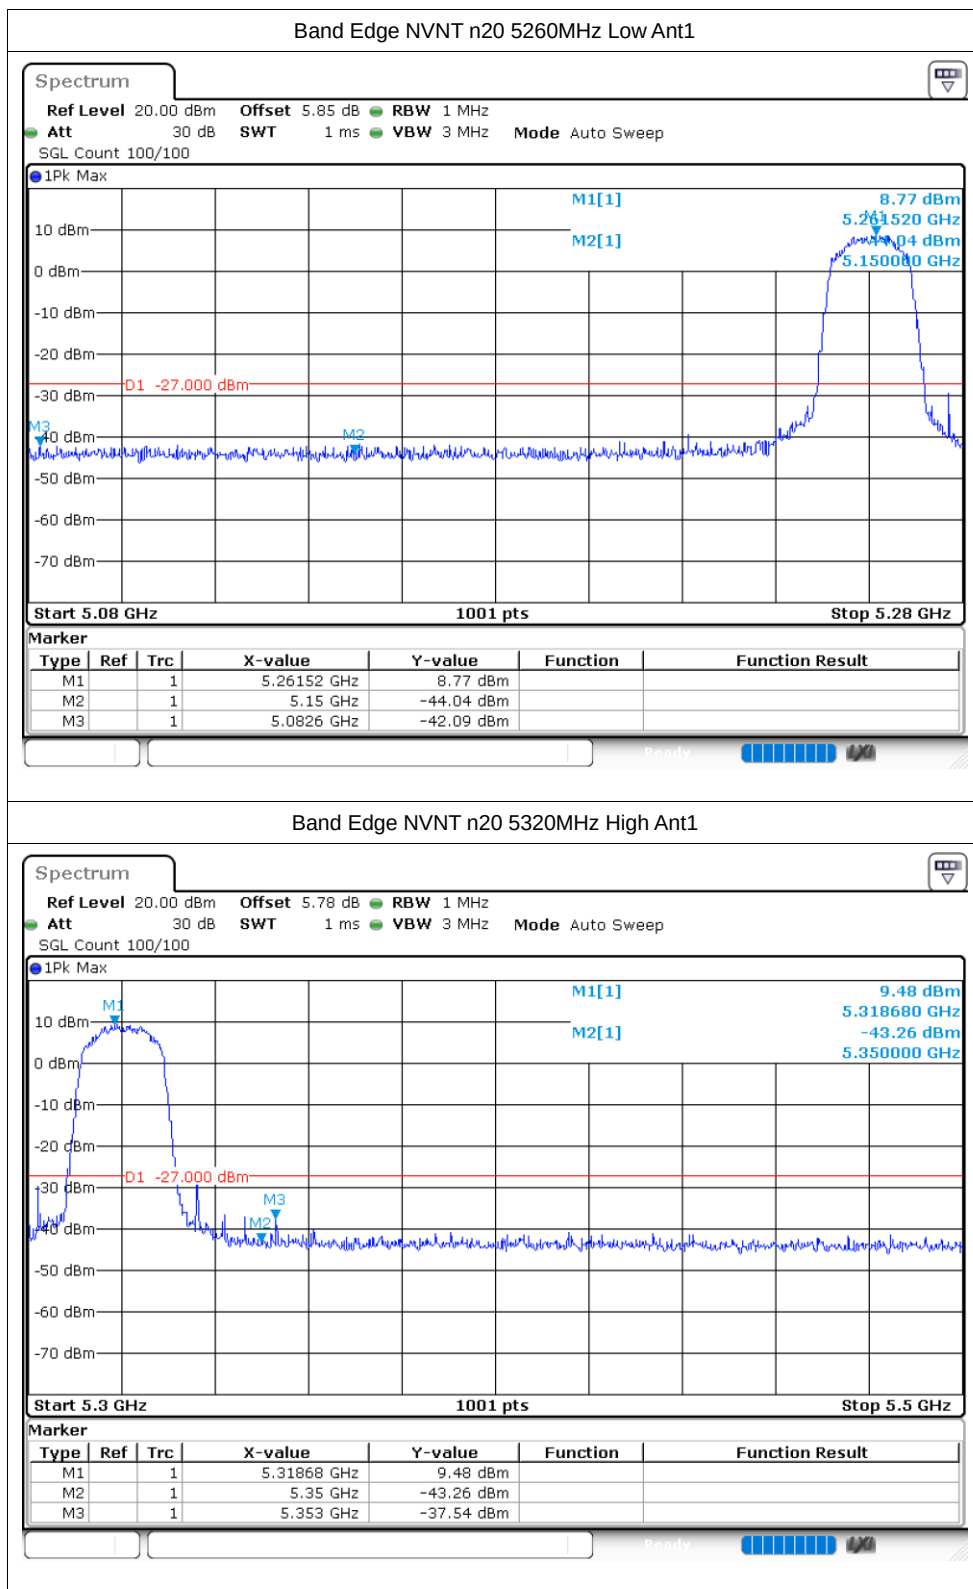


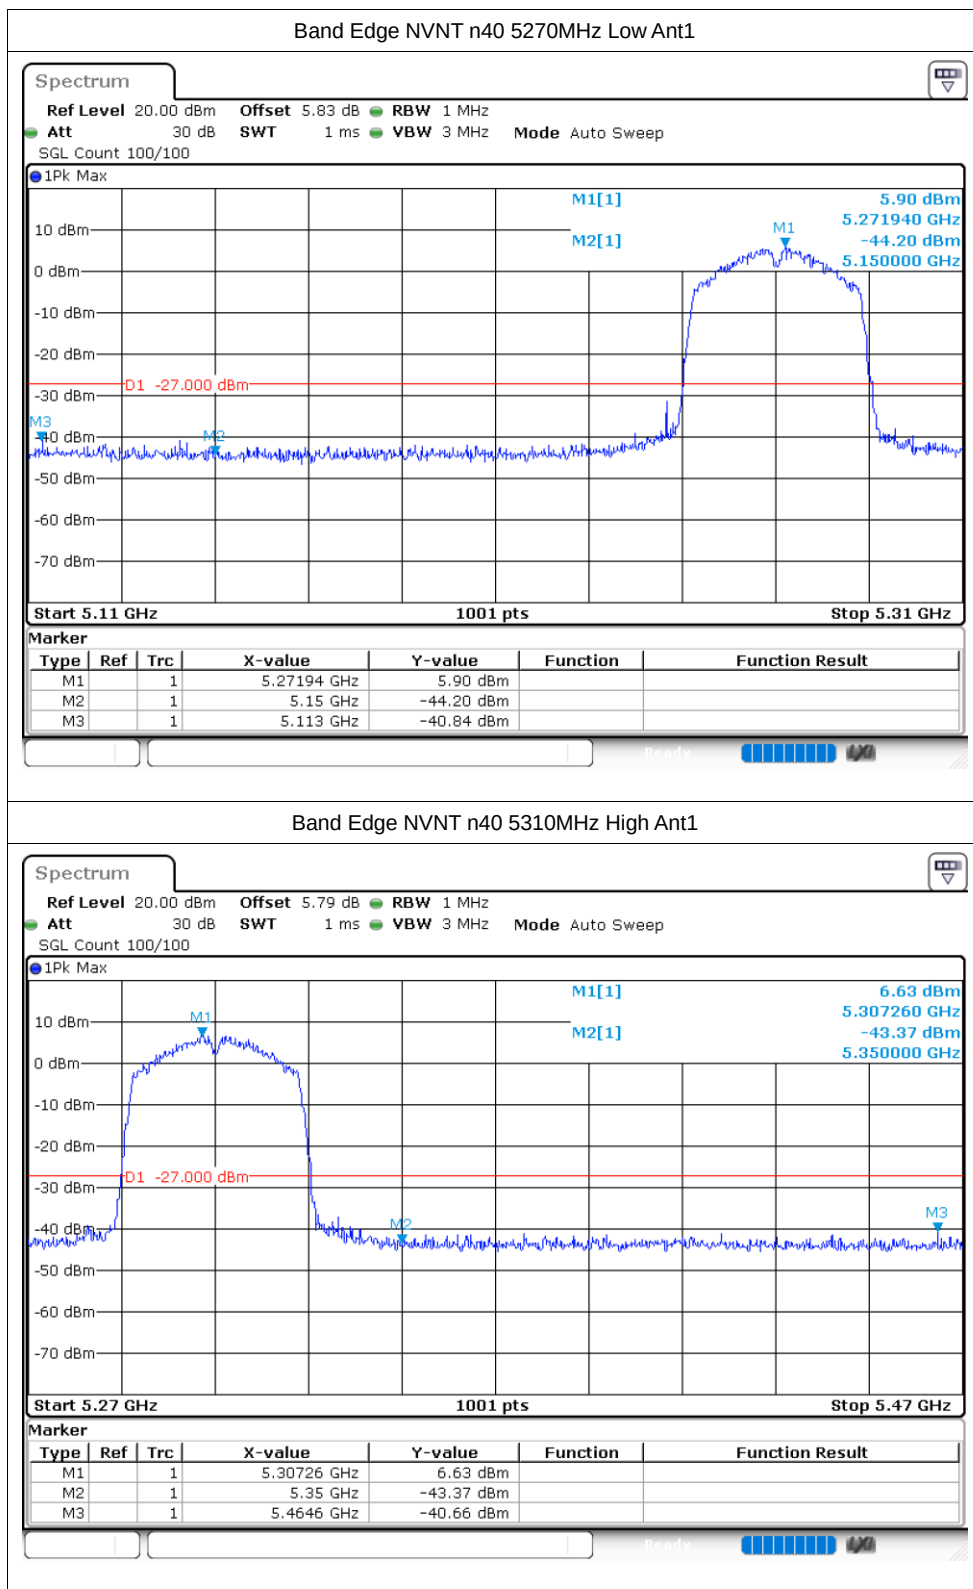


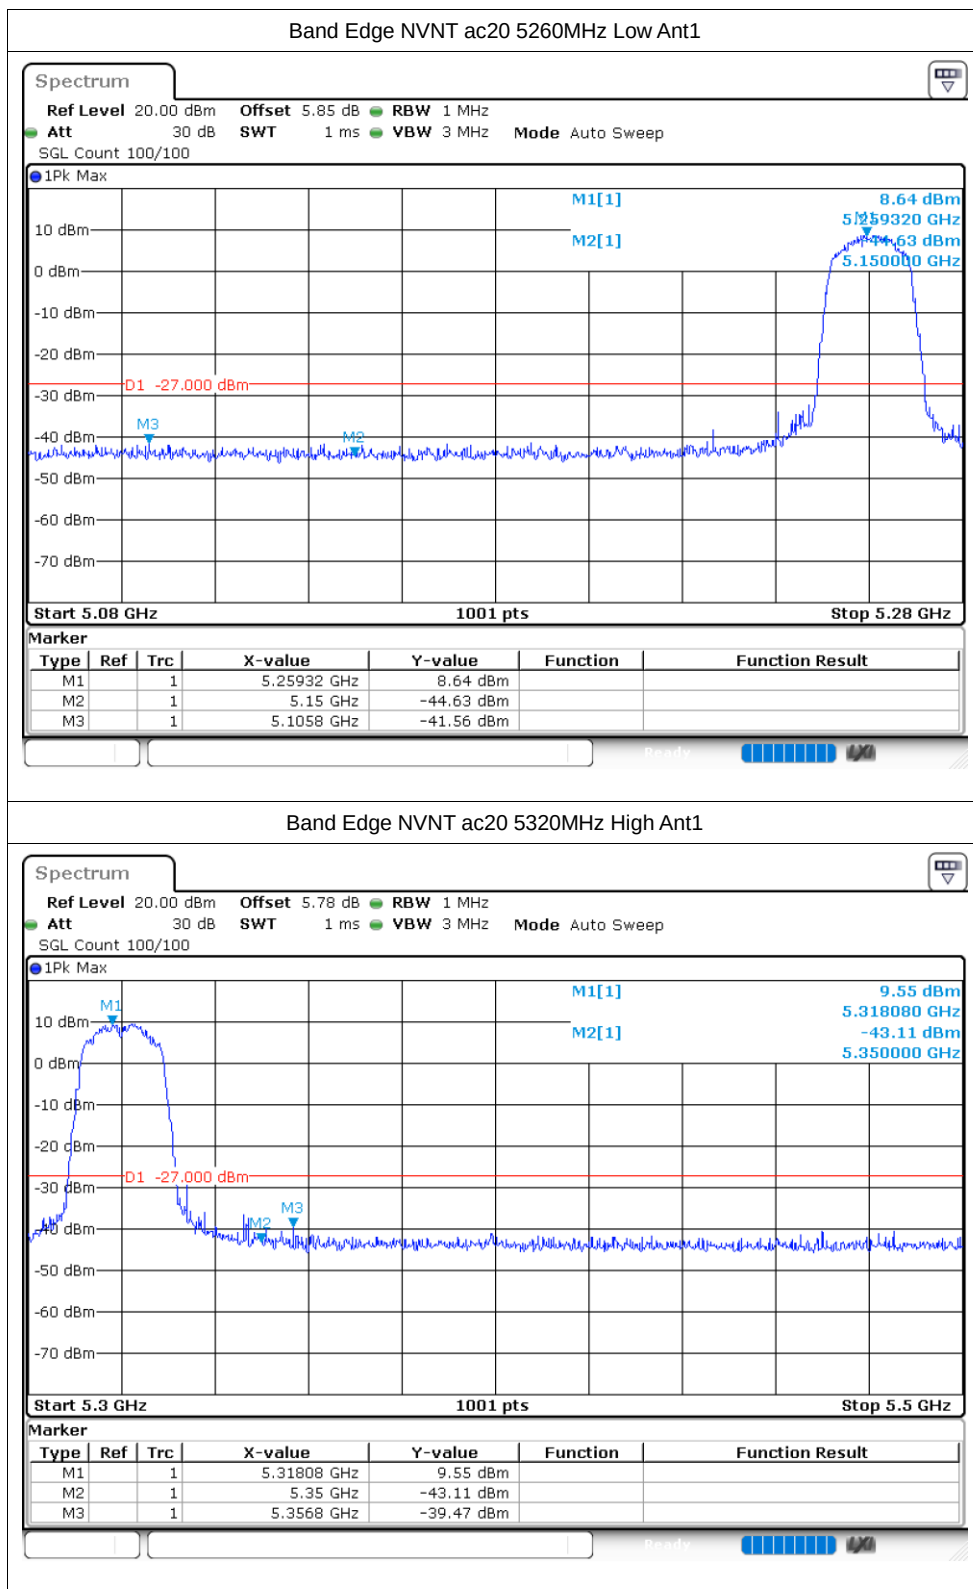


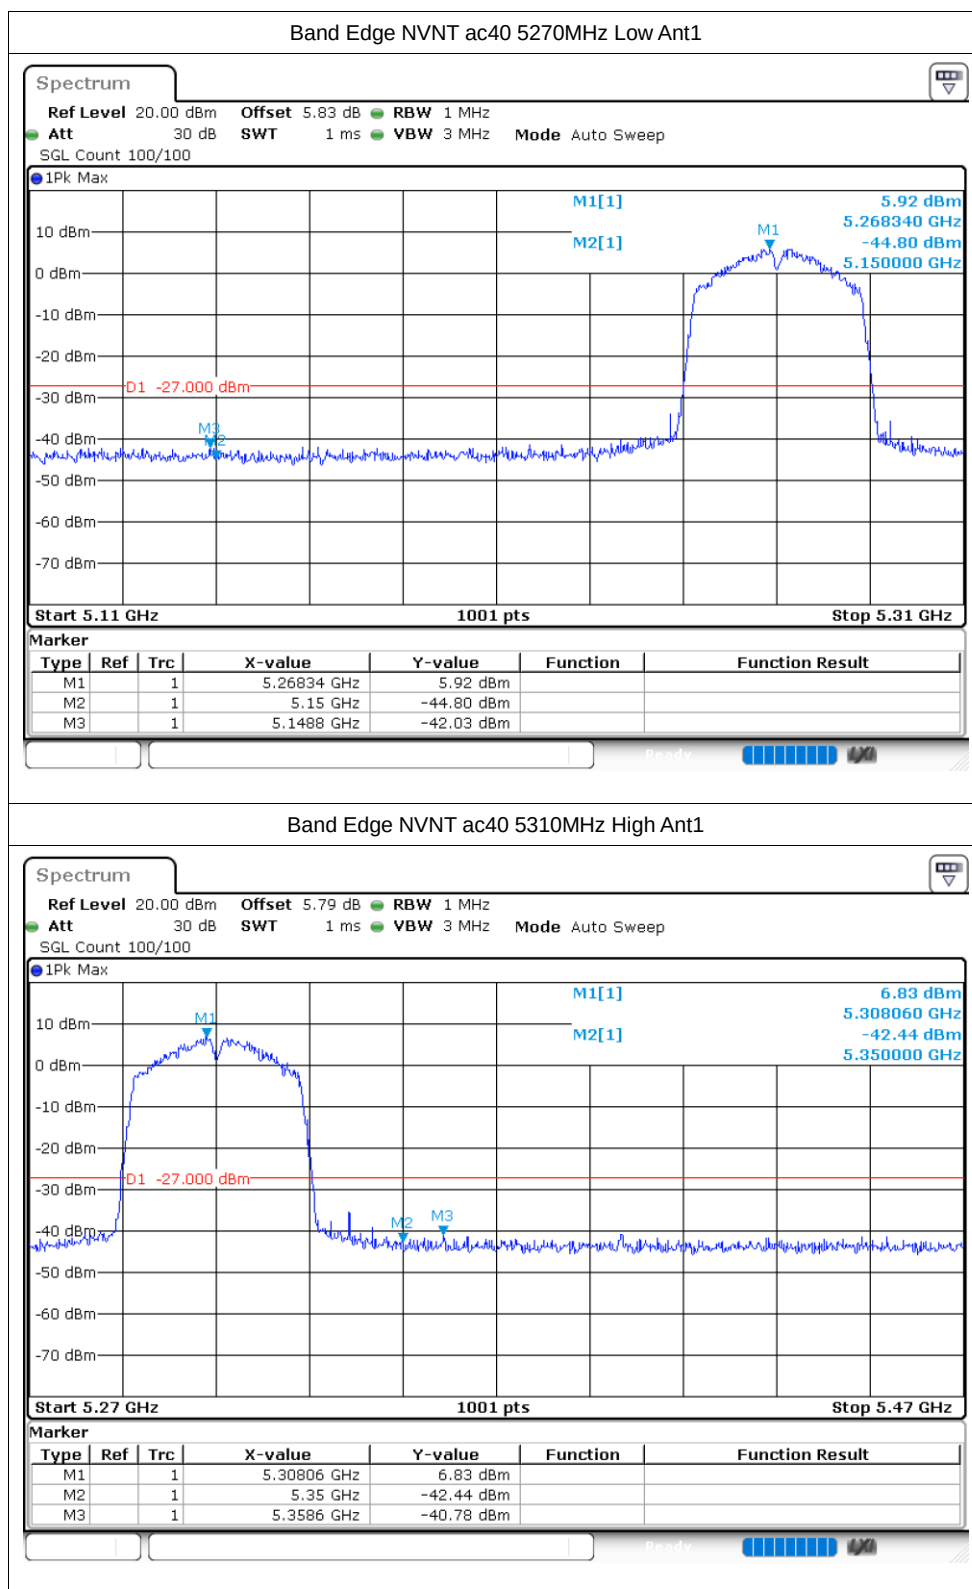

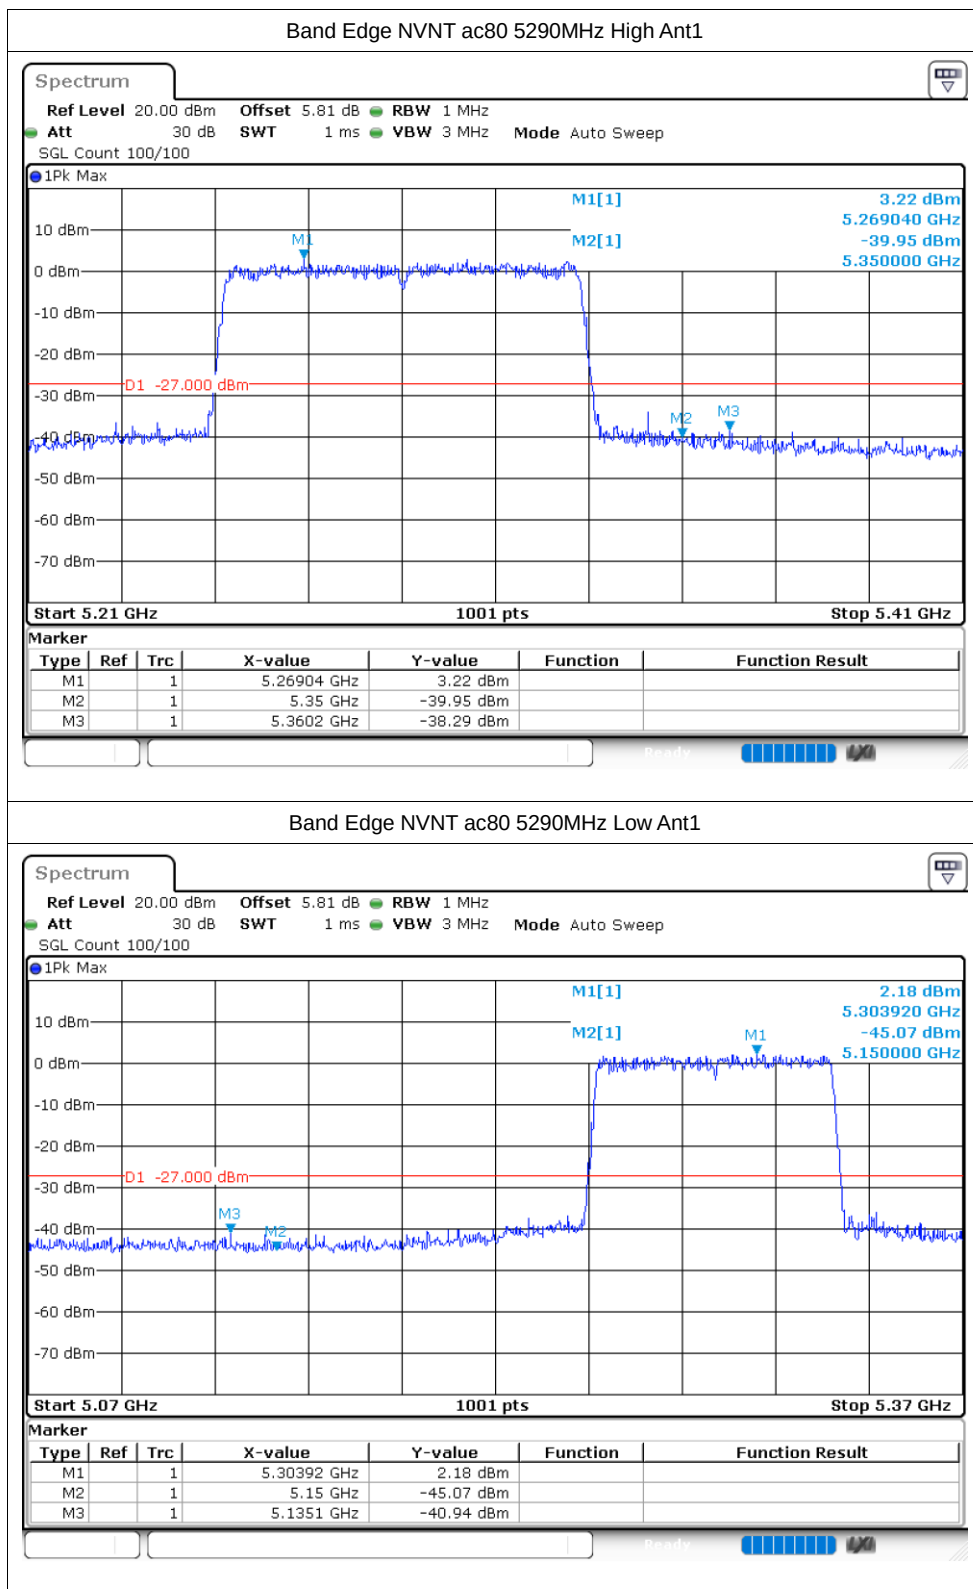

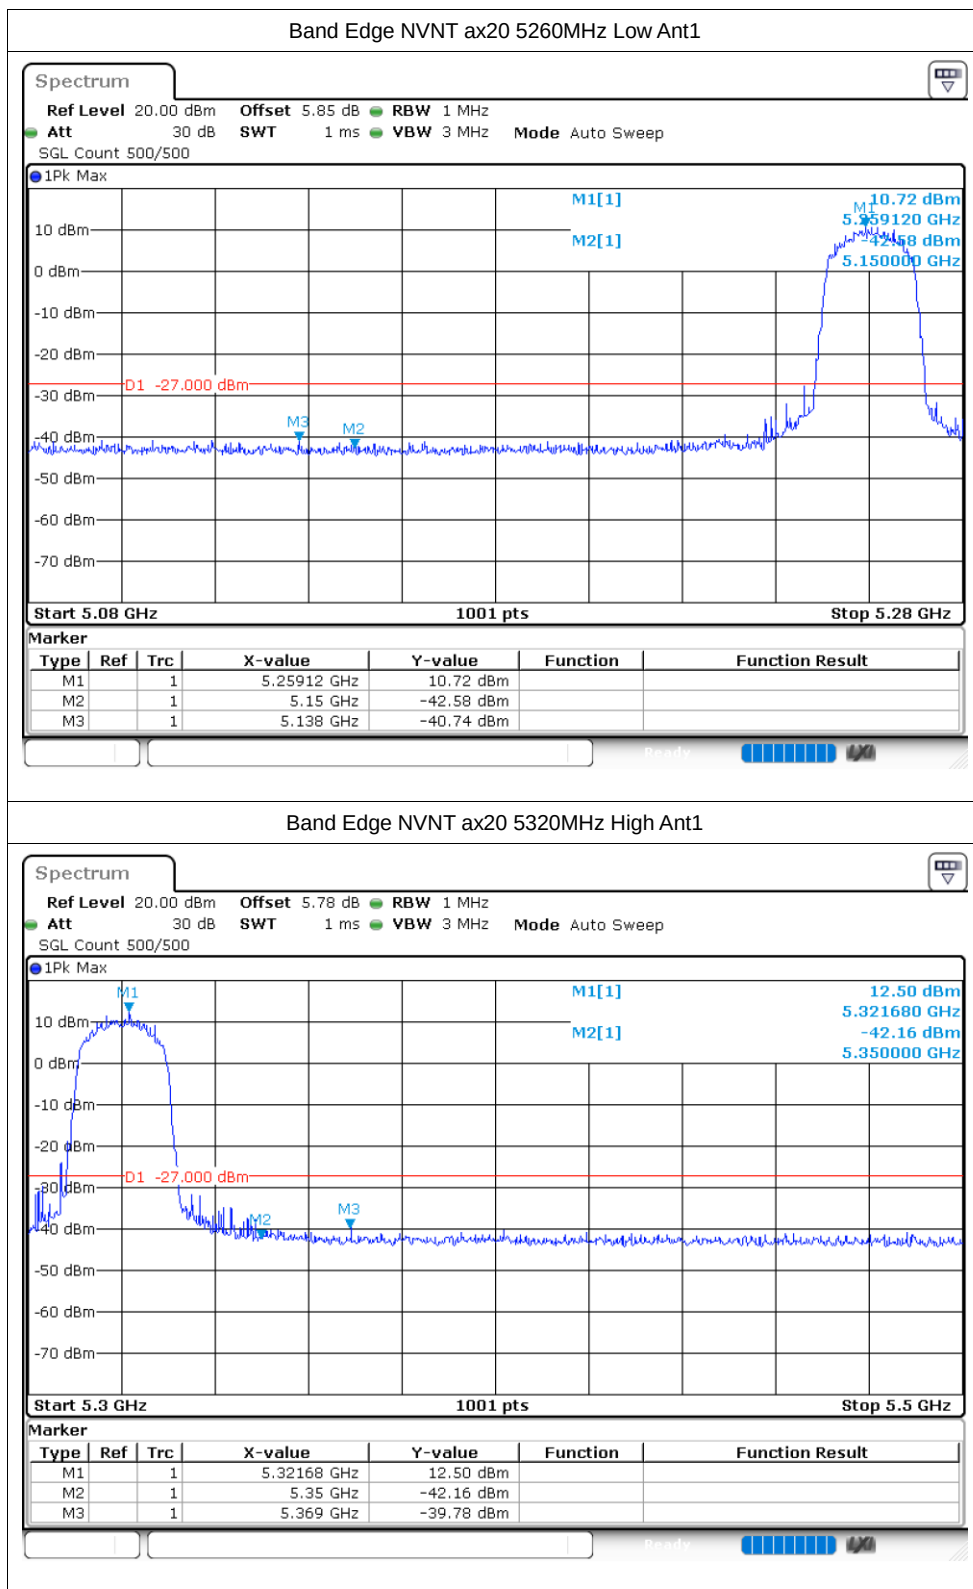


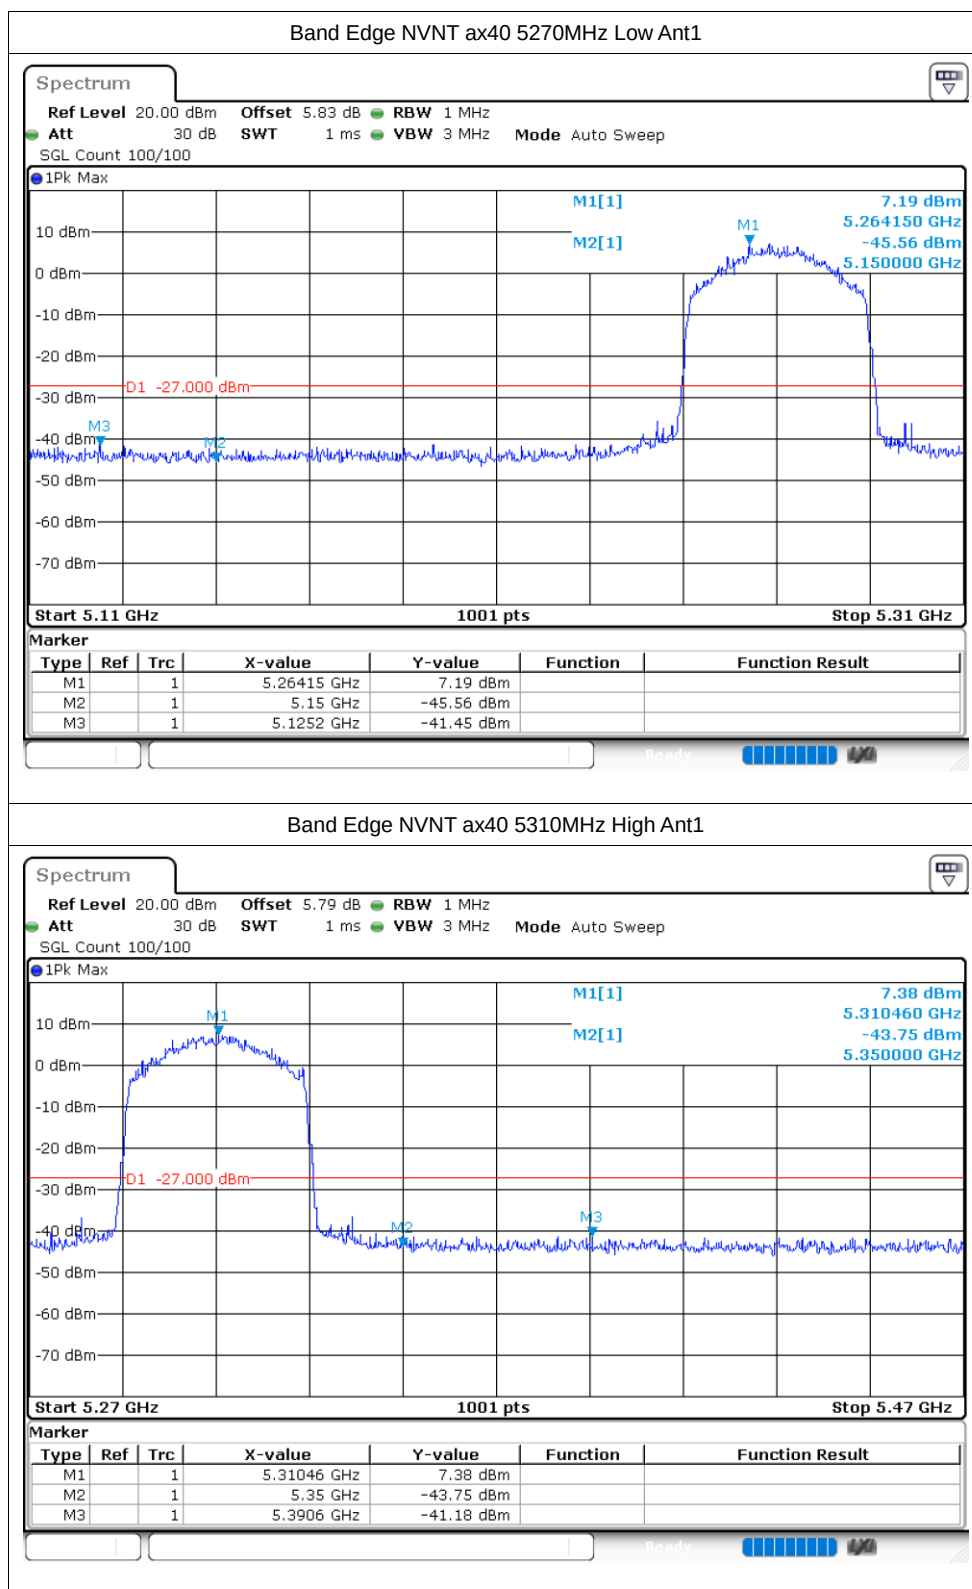


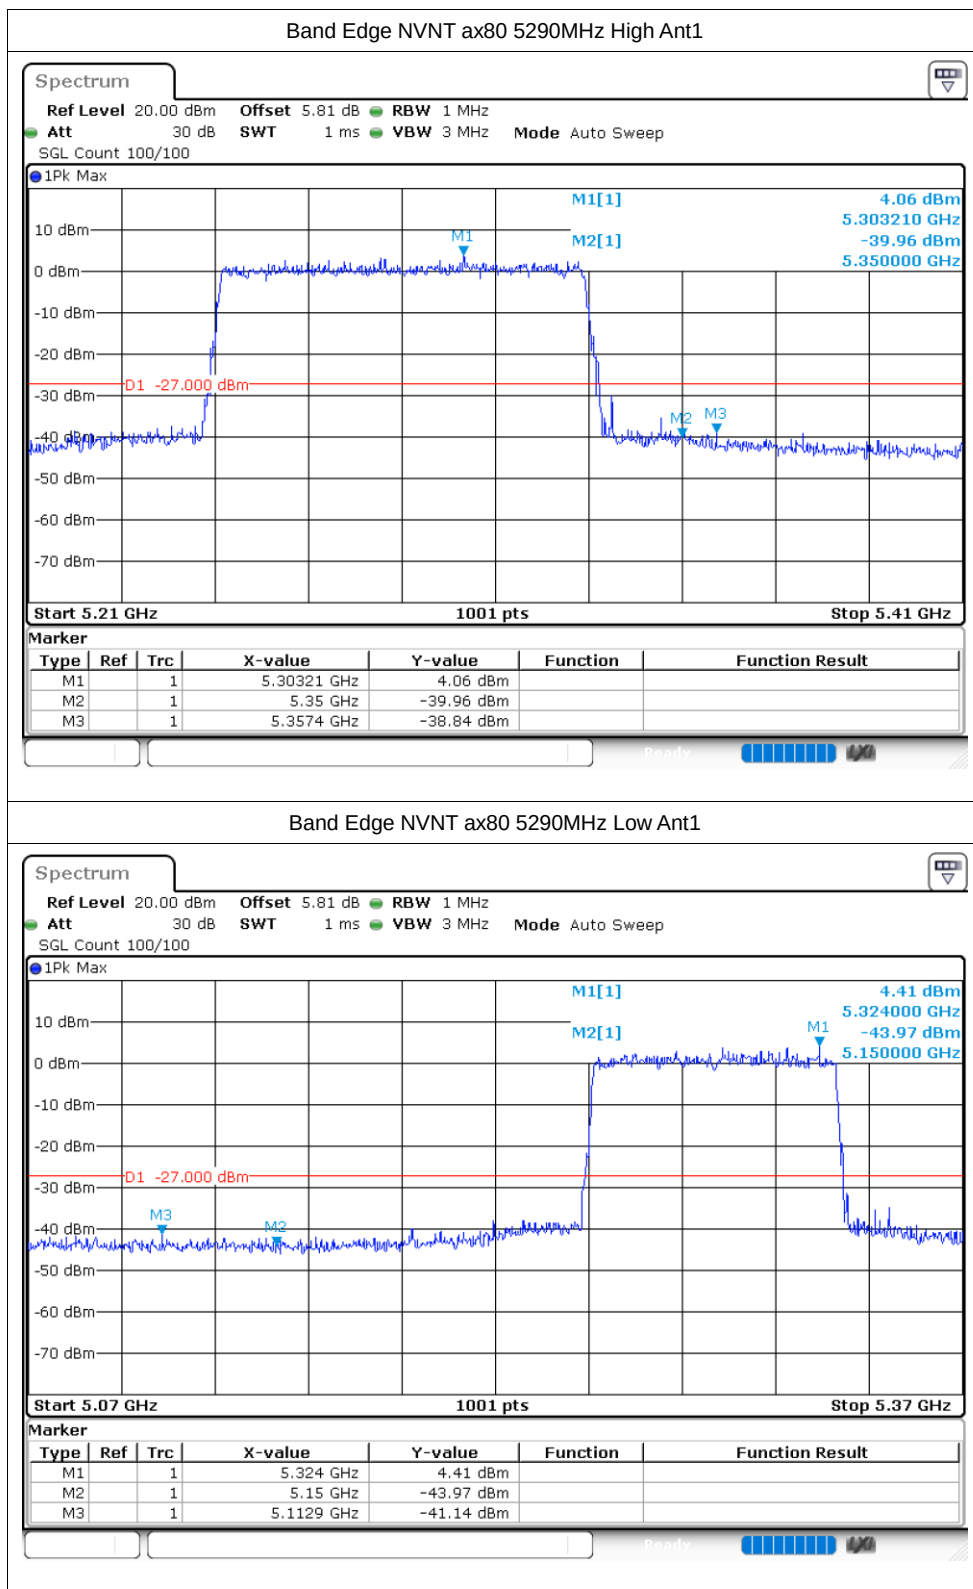



Conducted RF Spurious Emission



Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5260	Ant1	-33.91	-27	Pass
NVNT	a	5280	Ant1	-34.73	-27	Pass
NVNT	a	5320	Ant1	-35.19	-27	Pass
NVNT	n20	5260	Ant1	-35.05	-27	Pass
NVNT	n20	5280	Ant1	-34.81	-27	Pass
NVNT	n20	5320	Ant1	-34.72	-27	Pass
NVNT	n40	5270	Ant1	-34.94	-27	Pass
NVNT	n40	5310	Ant1	-34.53	-27	Pass
NVNT	ac20	5260	Ant1	-33.83	-27	Pass
NVNT	ac20	5280	Ant1	-34.86	-27	Pass
NVNT	ac20	5320	Ant1	-35.42	-27	Pass
NVNT	ac40	5270	Ant1	-35.36	-27	Pass
NVNT	ac40	5310	Ant1	-34.04	-27	Pass
NVNT	ac80	5290	Ant1	-35.45	-27	Pass
NVNT	ax20	5260	Ant1	-34.17	-27	Pass
NVNT	ax20	5280	Ant1	-34.59	-27	Pass
NVNT	ax20	5320	Ant1	-34.51	-27	Pass
NVNT	ax40	5270	Ant1	-34.95	-27	Pass
NVNT	ax40	5310	Ant1	-34.55	-27	Pass
NVNT	ax80	5290	Ant1	-34.97	-27	Pass


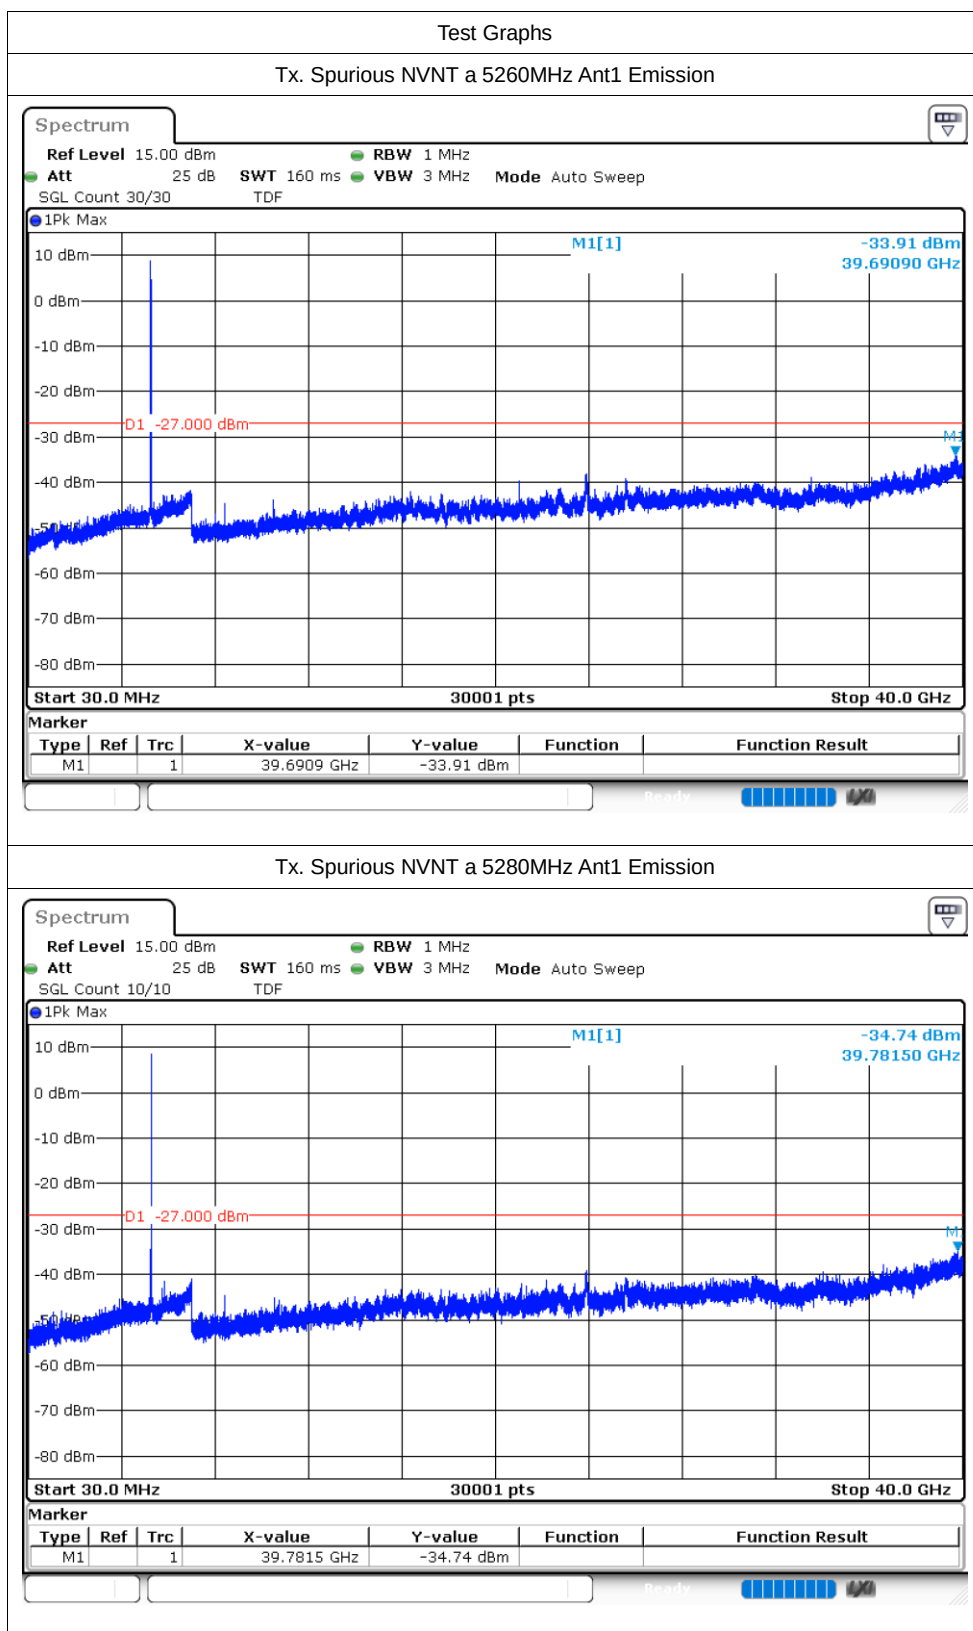



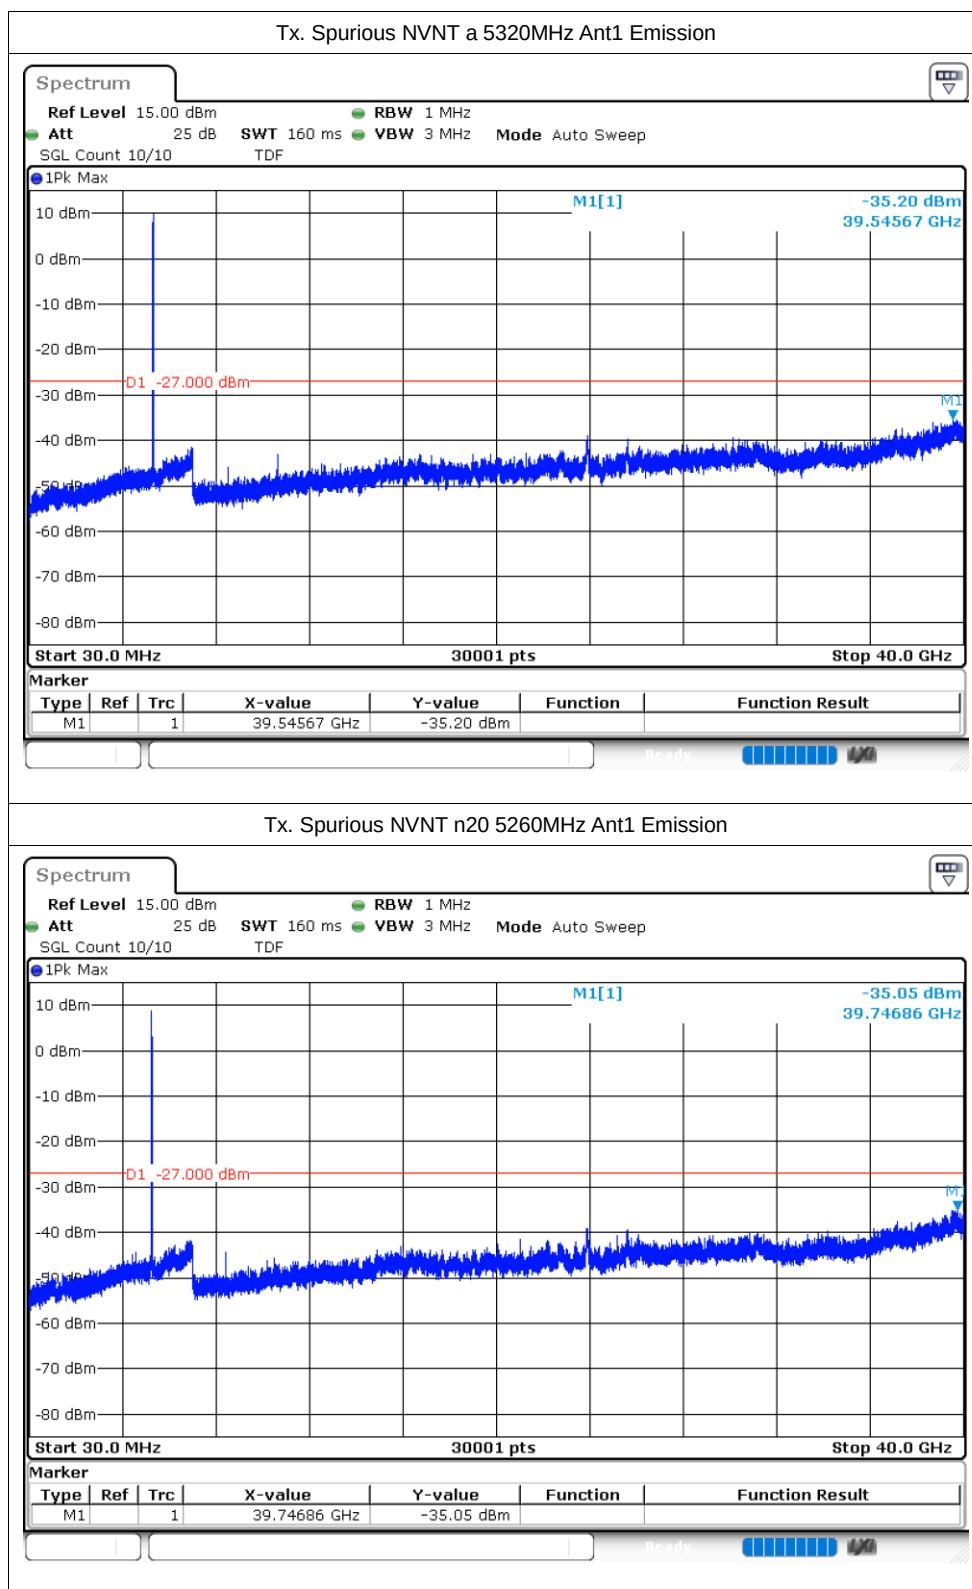


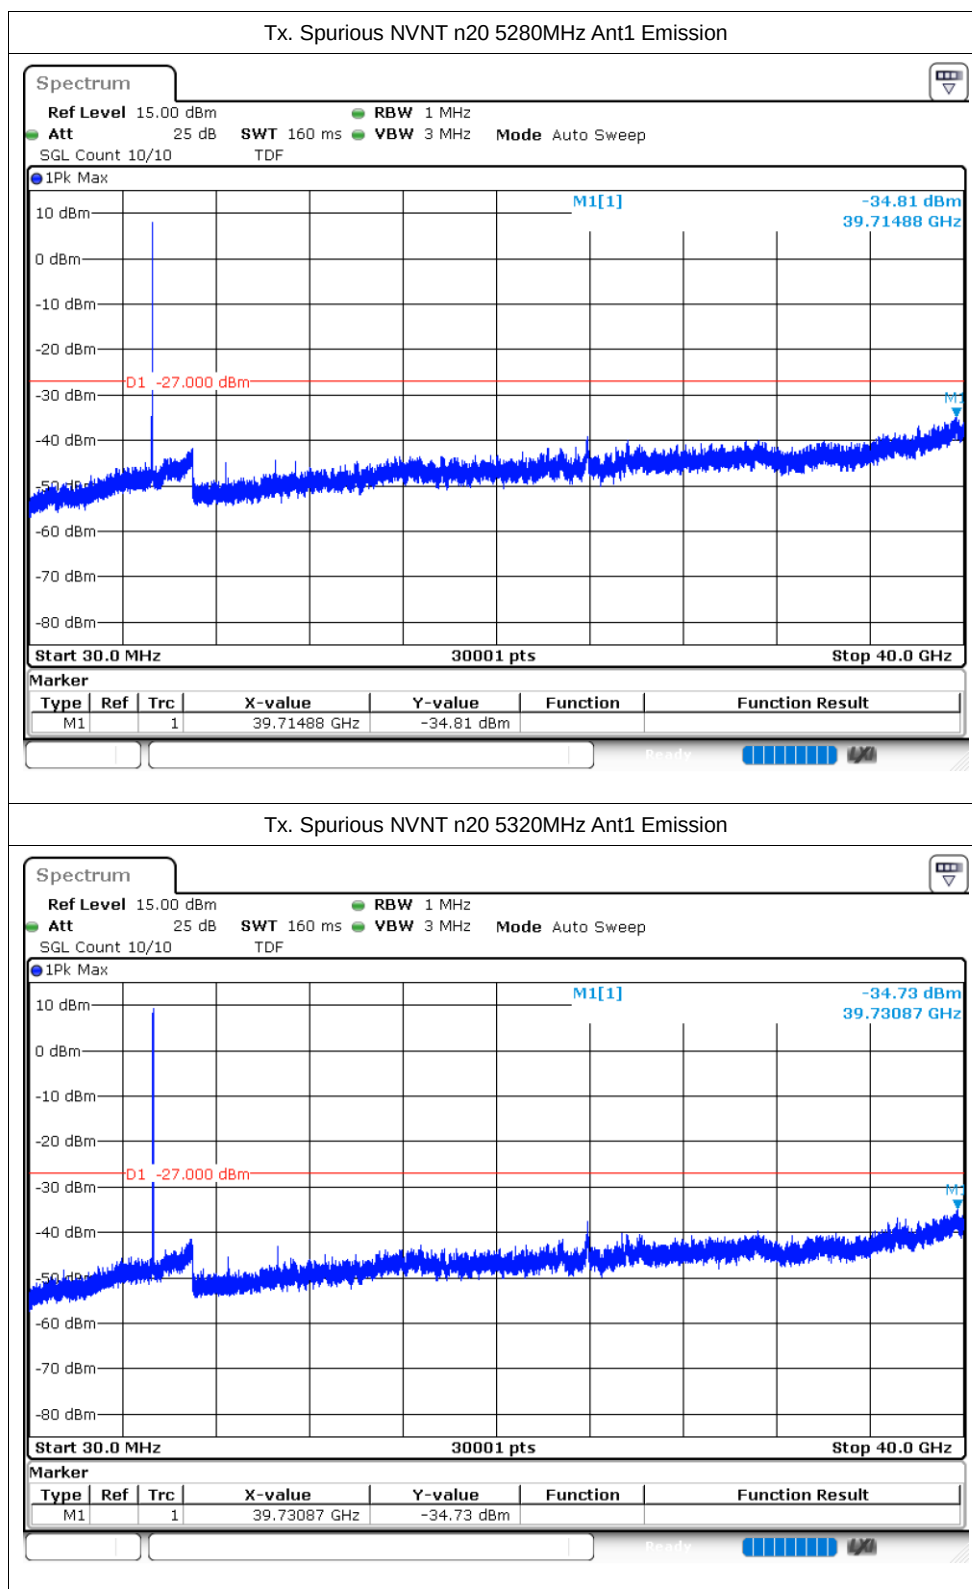


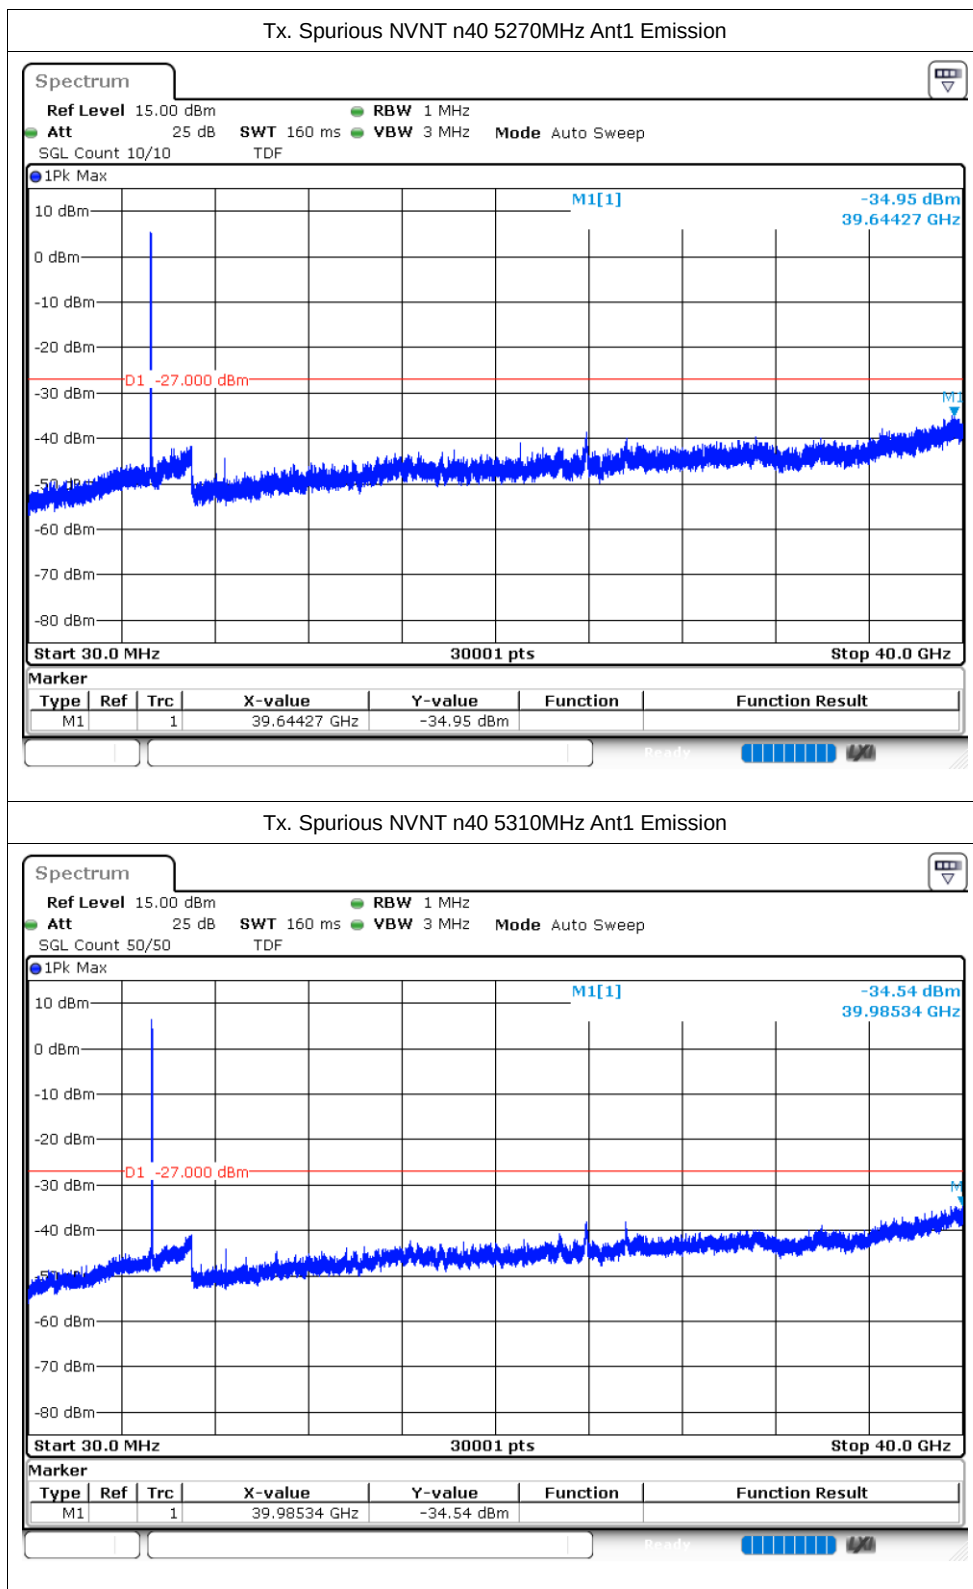


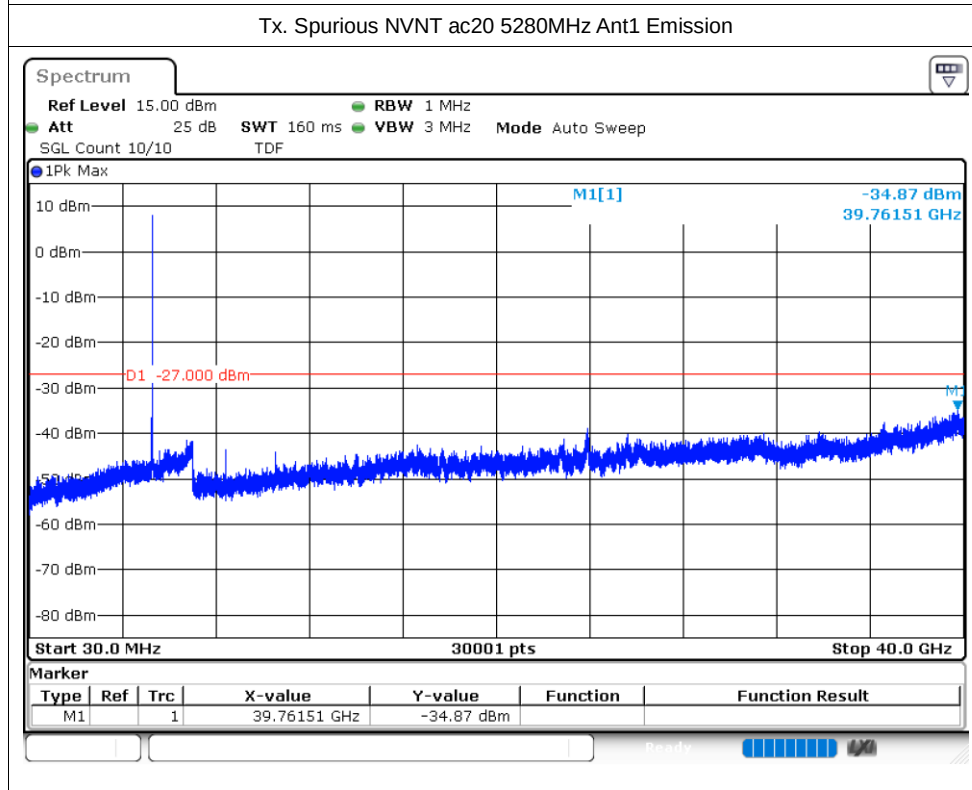
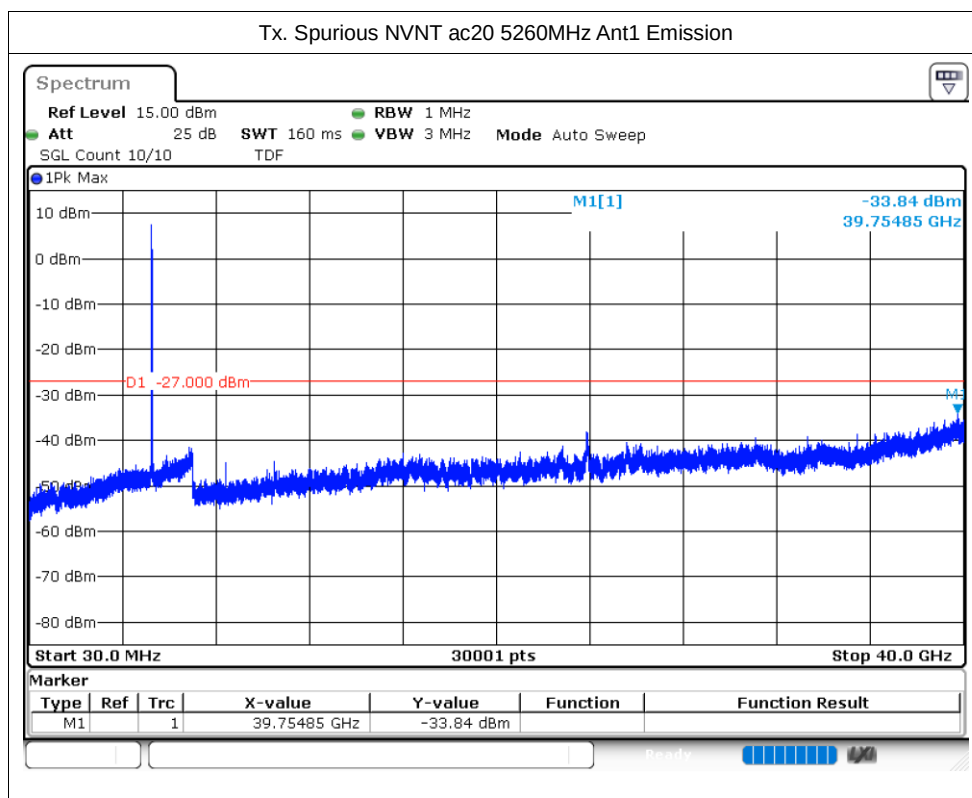


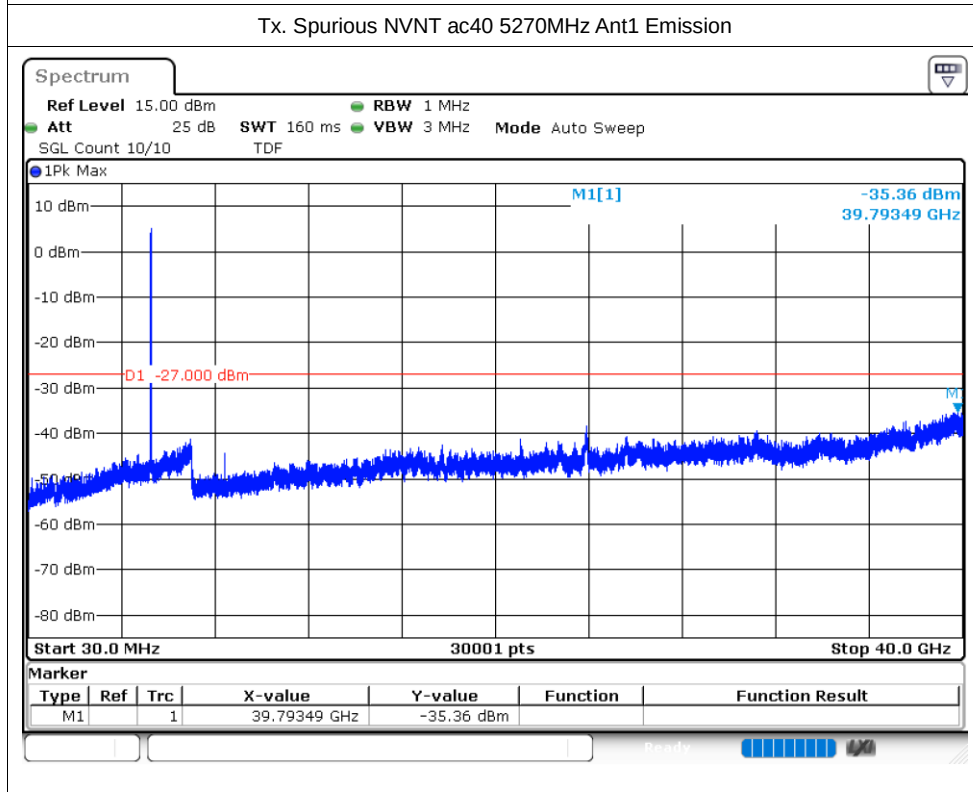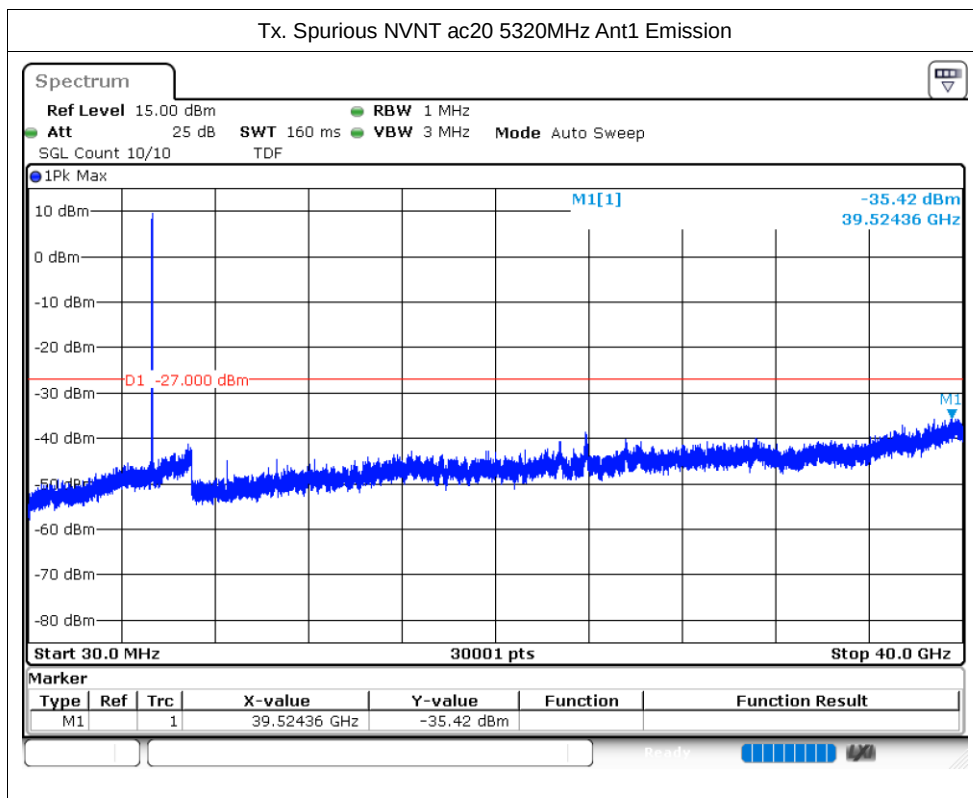

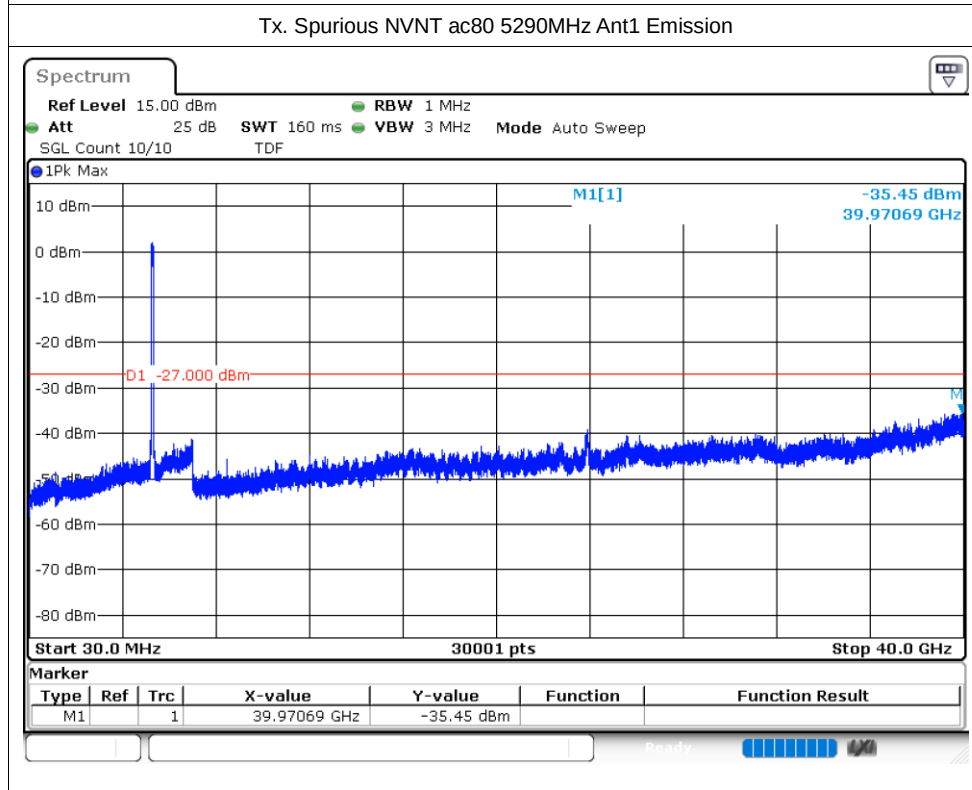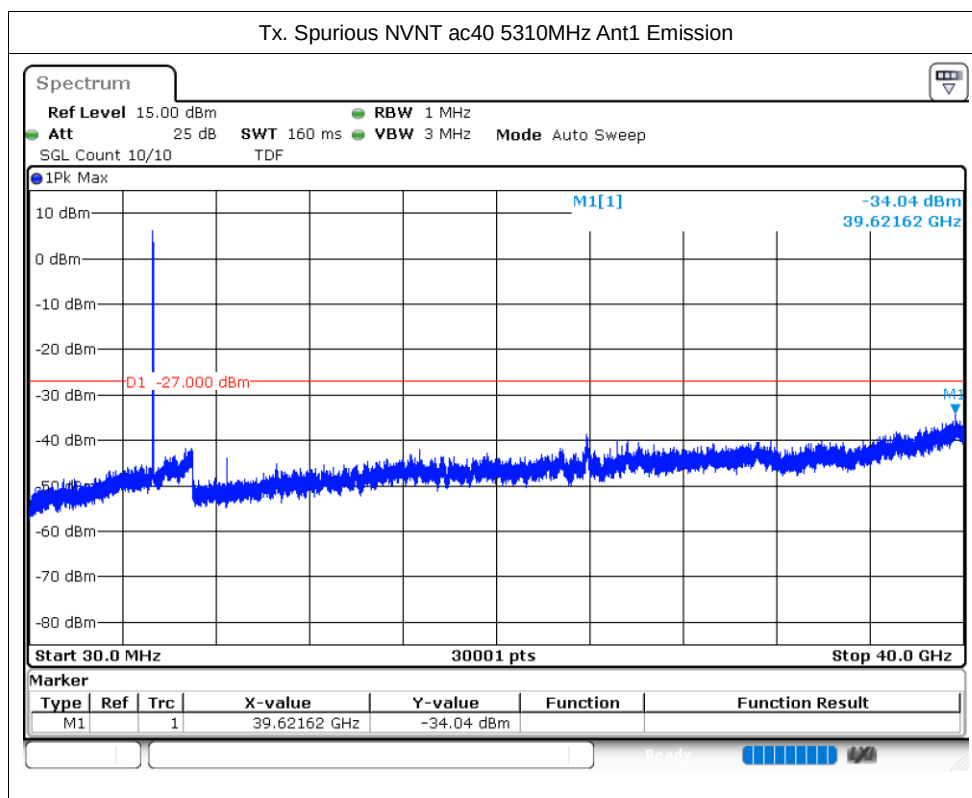

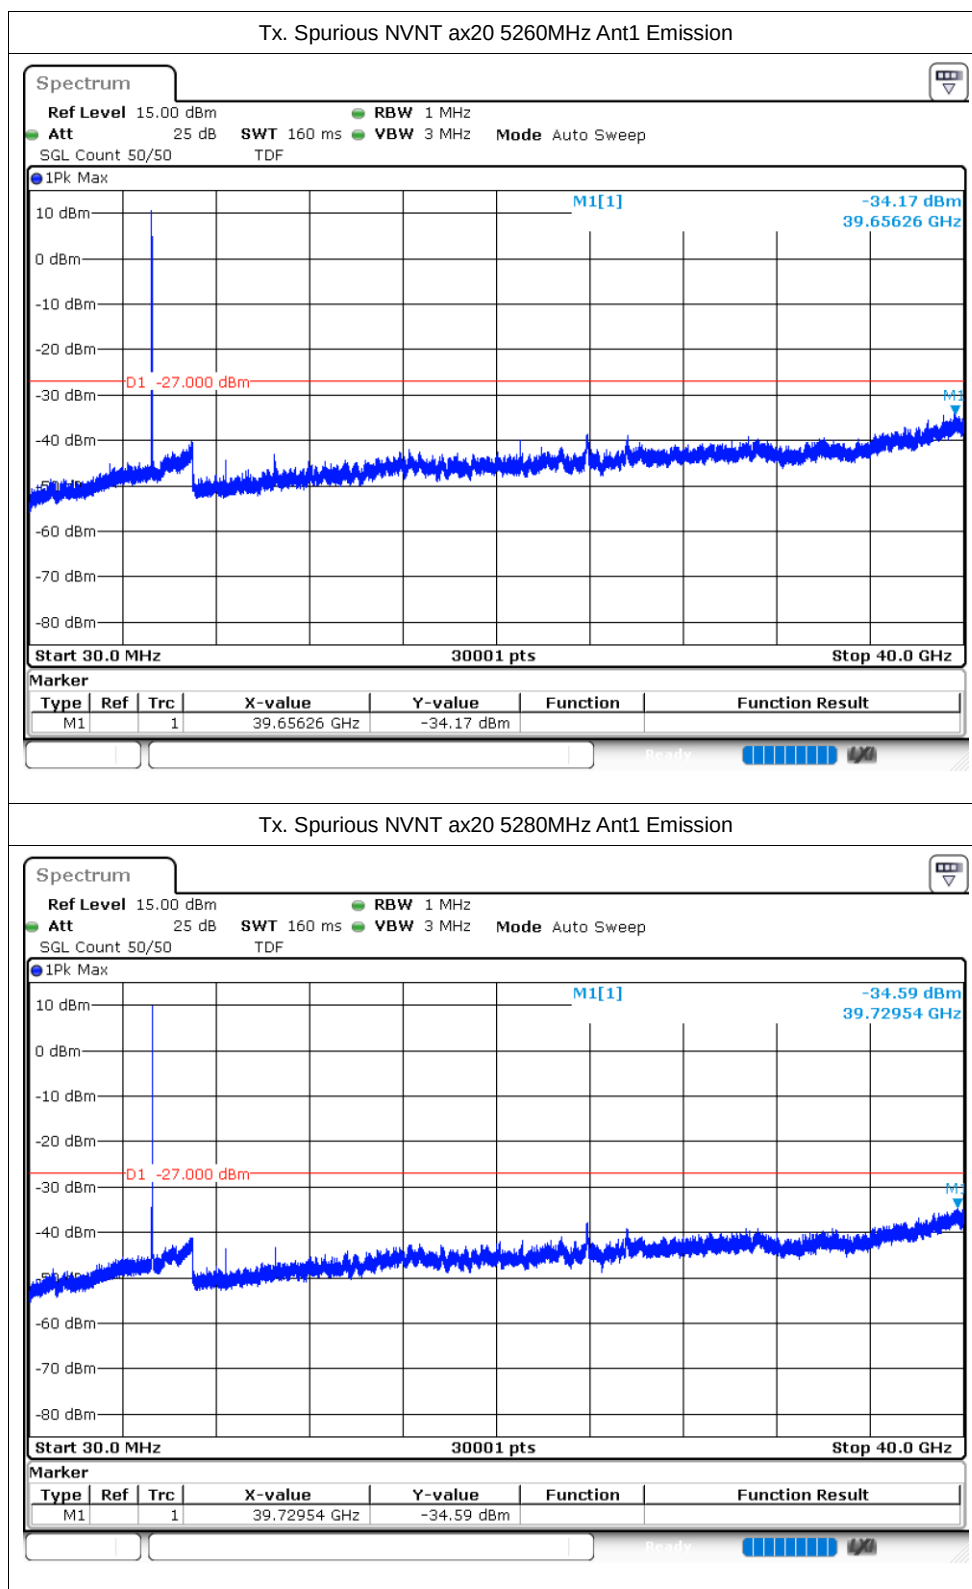

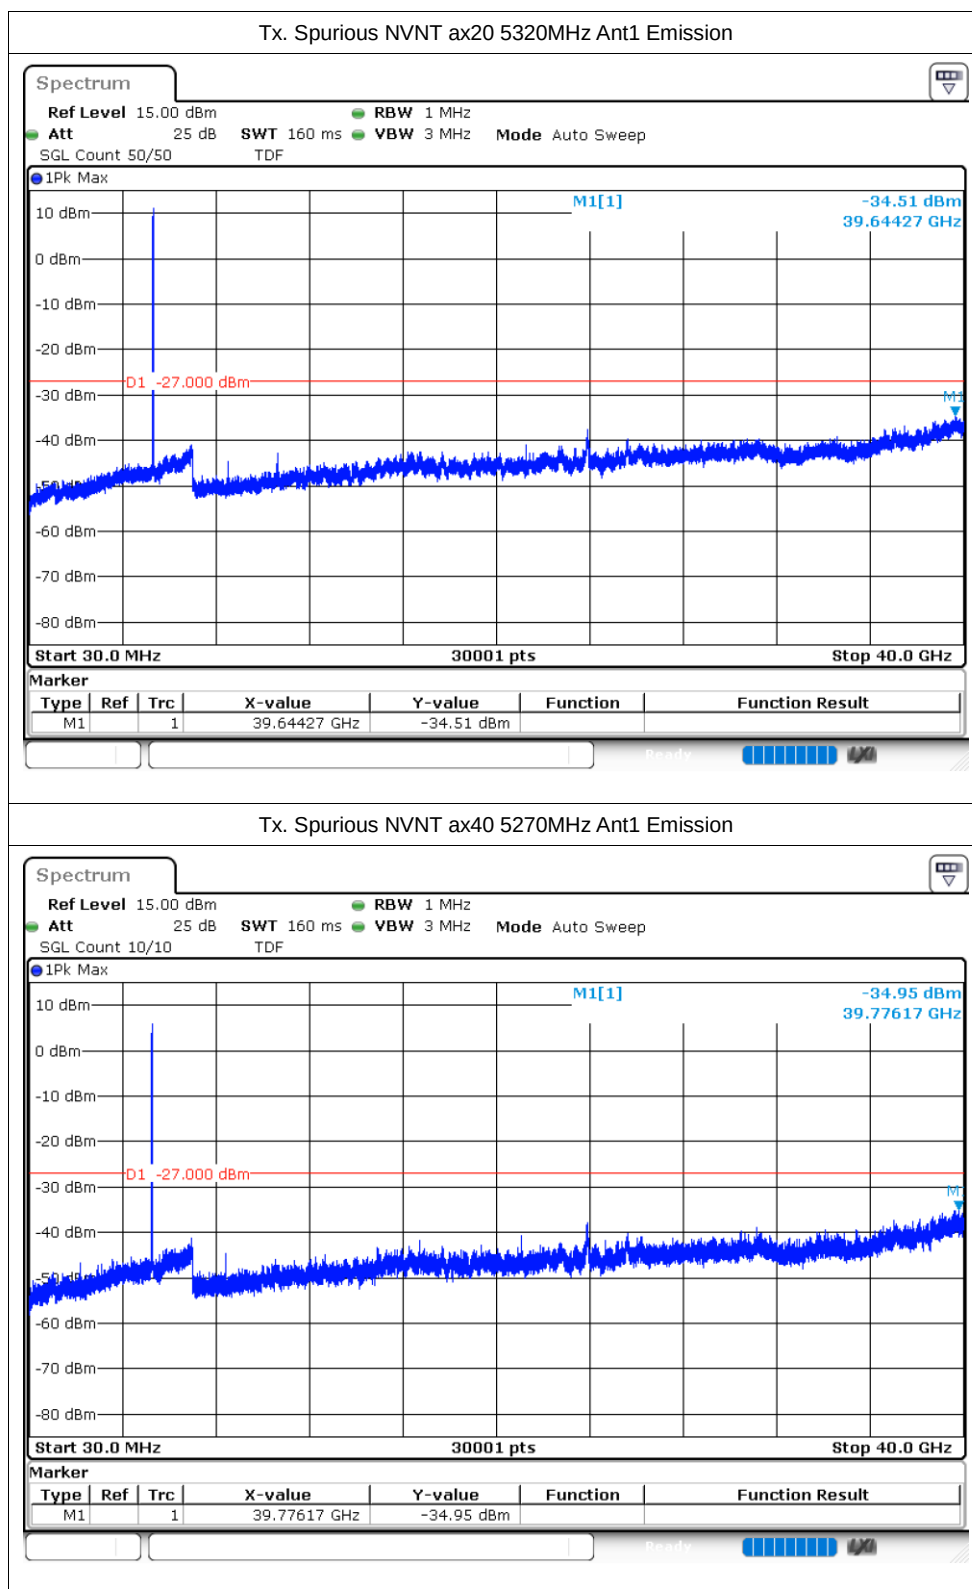

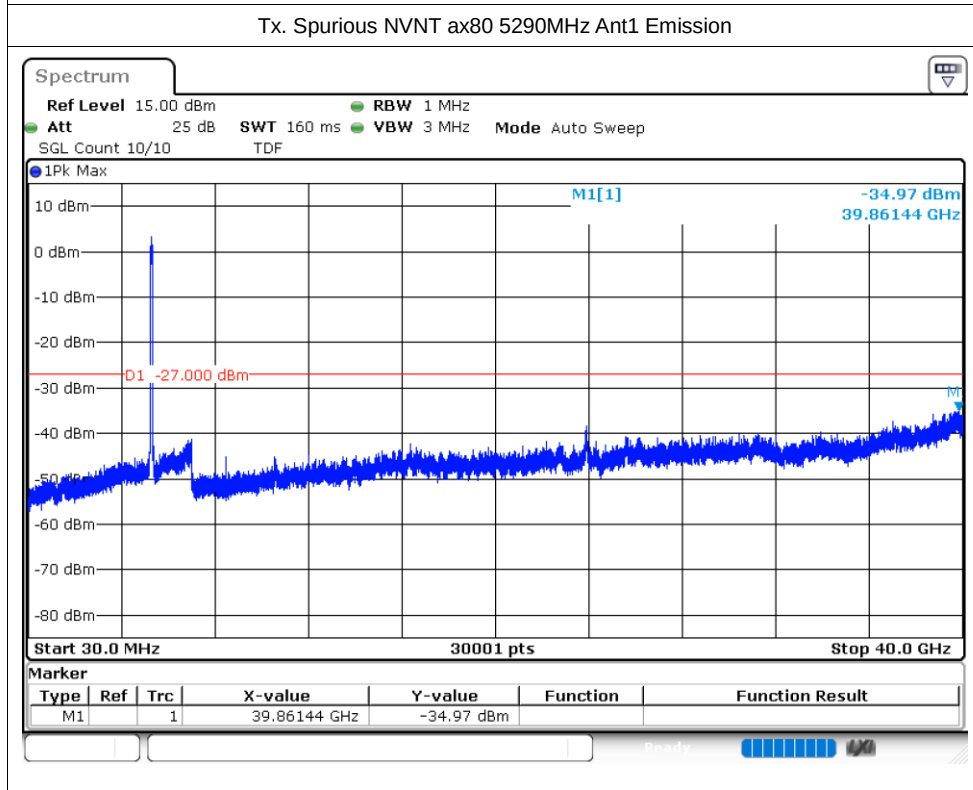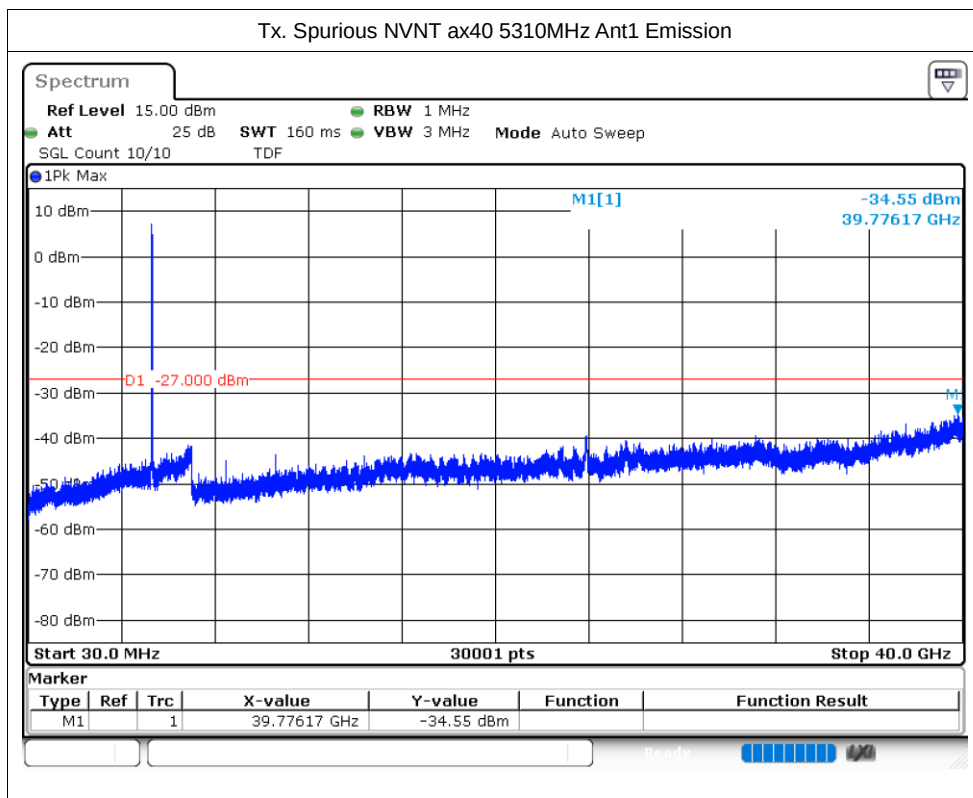

Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
20C 3.42V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
20C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
20C 4.18V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
-20C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
-10C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
0C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
10C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
30C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
40C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
50C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
60C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
70C 3.8V	user	5260	Ant1	5260.001	1000	0.19	20	Pass
20C 3.42V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
20C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
20C 4.18V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
-20C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
-10C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
0C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
10C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
30C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
40C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
50C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
60C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
70C 3.8V	user	5280	Ant1	5280.001	1000	0.19	20	Pass
20C 3.42V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
20C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
20C 4.18V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
-20C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
-10C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
0C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
10C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
30C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
40C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
50C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
60C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass
70C 3.8V	user	5320	Ant1	5320.001	1000	0.19	20	Pass

