

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 1 of 9	

Test instruction of CB2522A V2.0

Design change history


date	Version number	Release notes	Author	Approver	
				Signature	Jbos
2024-6-17	V1.0	First draft	Gary		
2026-3-11	V2.0	Modify the descriptions of 2.1 and 2.17	Gary		

制作 Made by:

检查 Checked by:

确认 Confirmed by:

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 2 of 9	

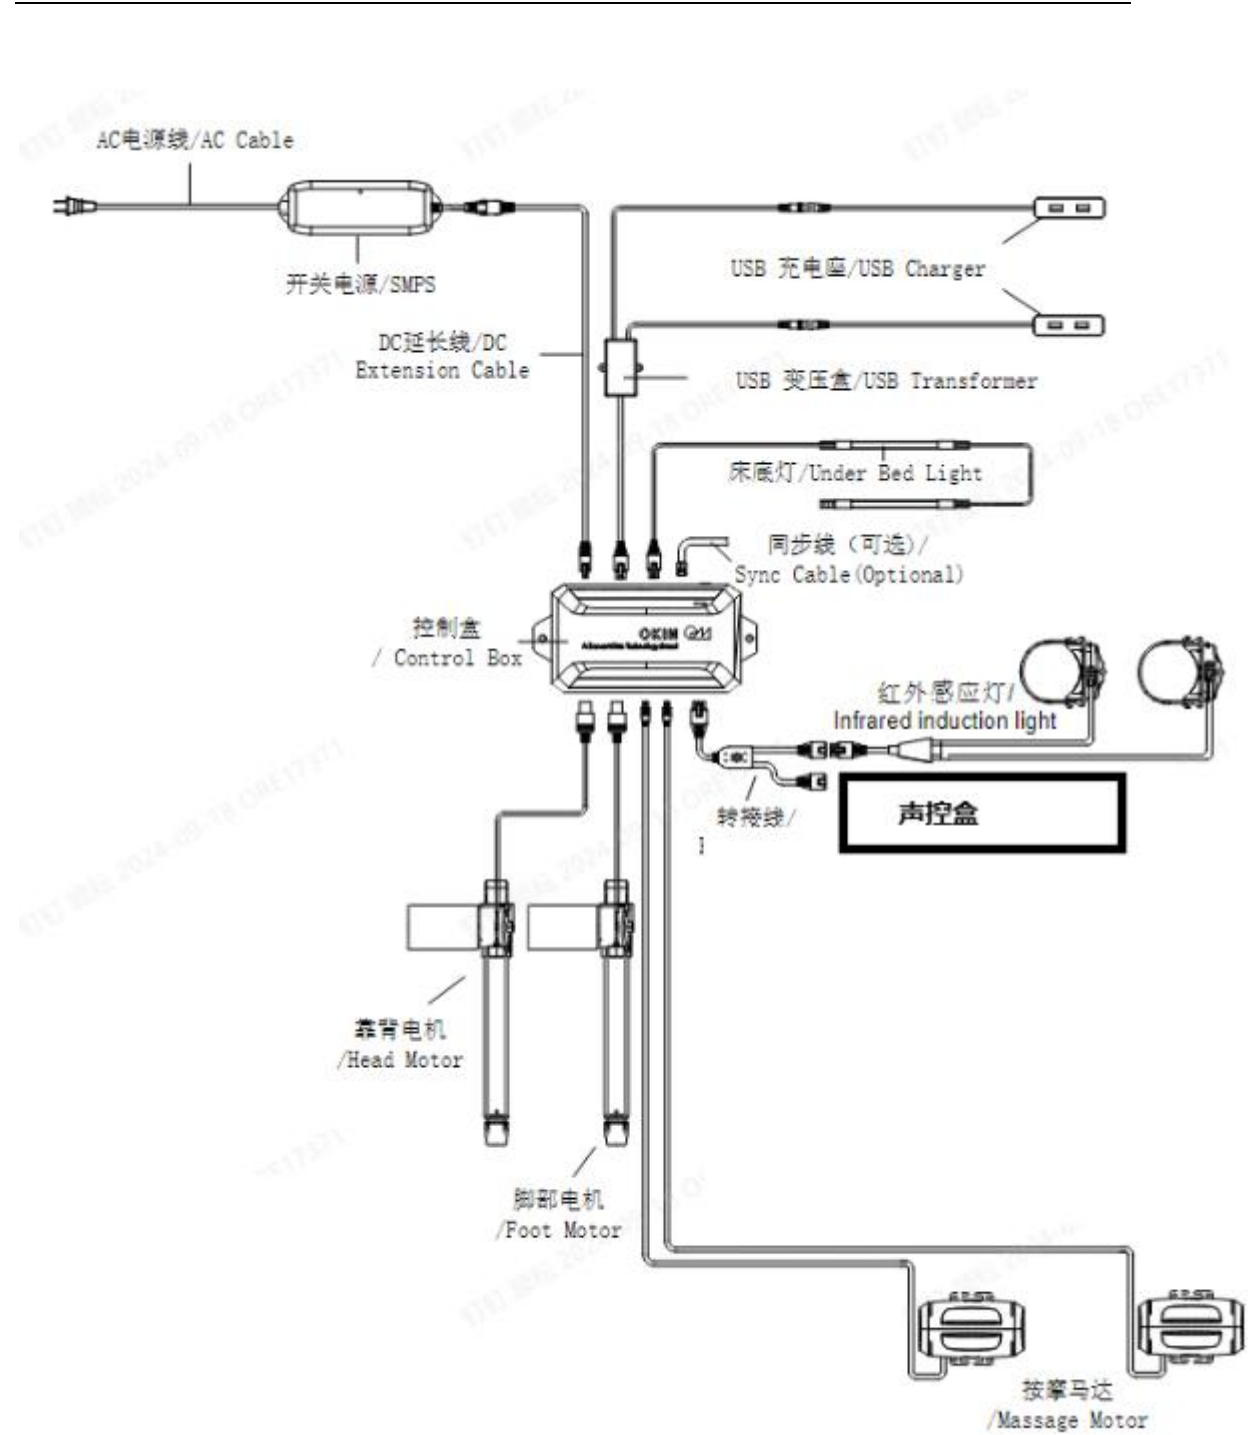

制作 Made by:

检查 Checked by:

确认 Confirmed by:

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 3 of 9	



图 2 Remote control buttons

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 4 of 9	

Test requirements

The remote control: RF.27.19.XX

Control box: CB2522A

	名称	编号	数量
1	AC line	R5.504.01.250	1
2	Power adapter	JLDP.10.023.000	1
3	The power supply line Y	R5.216.01.015C	1
4	USB control box	JLDP.05.032.000	1
5	Dual USB charging socket	JLDP.14.027.000	2
6	DC power supply cord	R5.217.01.016	1
7	LED lights bring	R5.113.00.073	1
8	Control box	CB2522	2
9	The remote control	RF.27.19.XX	2
10	Head driver	JLDQ19.315.120K01	1
11	Foot driver	JLDQ19.315.95K01	1
12	Massage motor	JLDQ.9.001.130C	2

1. Item

2.1 The test code

1. Power on the control box or double click the code matching button of the control box, the code matching indicator light (blue), while the external light flashing, the control box enters the code matching mode;
2. Long pair according to the remote control button (figure 2 no. 2 buttons), until the control box to code lights turn green, at the same time, external light belt stop flashing and long on 1 s, the success of code (to code the timeout, control box to code indicator light will turn green, so to verify this code ends need to manipulate the remote control, if the code is not successful, repeat step 1 to 2);

制作 Made by:

检查 Checked by:

确认 Confirmed by:

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 5 of 9	

2.2 ZG The key test (Figure 2 Button 5)

Click the ZG button, the driver will run to the ZG position, click any button during the operation, stop the operation;

Long press the flat+ZG button for 5s, the backlight indicator of the remote control blinks, and the current position of the control box is set to the ZG position;

2.3 M key test (Figure 2 key 3)

Click the M key, the drive will run to the M position, click any key during the operation, stop the operation;

Long press the flat+M button for 5s, the backlight indicator of the remote control blinks, and the current position of the control box is set to the M position;

2.4 AntiSnore button Test (Figure 2 Button 11)

Click the Button of AntiSnore, then the drive will run to the position of AntiSnore. During the operation, click any button to stop the operation;

2.5 Tv/PC button test (Button 7, FIG. 2)

Click the Tv/PC button, the drive will run to the Tv/PC position, click any button during the operation, stop the operation;

Long press the flat+Tv/PC button for 5s, the backlight indicator of the remote control blinks, and the current position of the control box is set to THE Tv/PC position;

2.6 LOUNGE button test (Button 13 in FIG. 2)

Click the LOUNGE button, then the drive moves to the LOUNGE position. During the operation, click any button to stop the operation;

Press the flat+ LOUNGE button for 5s, the backlight indicator of the remote control blinks, and

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 6 of 9	

the current position of the control box is set to the LOUNGE position;

2.7 Test of restoring all memory locations to factory Settings (Figure 2 keys 5 and 9)

Long press the ZG+FLAT (Button 5 and 9 in Figure 2) button for 5s, the backlight indicator of the remote control blinks, and the control box restores all memory positions to factory Settings;

2.8 Head Up test (Button 6 in Figure 2)

Long press the Head up button of the remote control, the Head drive will rise and stop after release;

2.9 Head Down test (Figure 2 Button 12)

Long press the Head down button of the remote control, then the Head drive will drop and stop after release;

2.10 Foot Up Test (Button 8 in FIG. 2)

Long press the "Foot Up" button of the remote control, then the foot drive will rise and stop after release;

2.11 Foot Down Test (Fig.2 Button 10)

Long press the "Foot Down" button of the remote control, then the foot drive will drop and stop after release;

2.12 Flat Test (Button 9 in FIG. 2)

Click the FLAT button, the head and foot drive shrinks to the minimum, press any button during the movement immediately stop;

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 7 of 9	

2.13 Message back test (Button 14 in FIG. 2)

Click the Message back button, and the head massage motor switches the massage intensity, which cycles between 0-1-2-3;

2.14 Message Timer test (Button 15 in FIG. 2)

If the massage motor does not vibrate, the button is invalid. If the massage motor vibrates, click the button to switch the massage time. When the massage time is switched to 0, the massage is closed.

2.15 Message Foot test (Button 16 in FIG.2)

Click the Message Foot button, and the foot massage motor switches the massage intensity, which cycles between 0-1-2-3;

2.16 Message ON/OFF test (Button 17 in FIG.2)

Click the Message ON/OFF button. If the Massage motor is on, close the Massage motor and record the vibration intensity and vibration mode of the current head and foot Massage motor. If the massage motor is off, start the massage motor and return to the previously recorded vibration intensity and vibration mode

2.17 Underbed lamp test (Button 18, FIG.2)

Click the bed light switch button, the bed light switch on and off state; If the light belt is not turned off manually after being turned on, it will automatically turn off after 5 minutes.

2.18 Massage TYPE test (Button 19 in FIG.2)

Click the Massage Type button to switch the massage motor massage mode, which circulates between type0→type1→type2→type3→type0; This button can only switch massage mode, can not open the massage motor;

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 8 of 9	

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment, this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

	发行部门: BEDDING 事业部	创建时间:	2024-617
	系统测试指导	创建人:	Gary
Test instruction of CB2522A		版本:	1.0
		Page 9 of 9	

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscrétions.

The equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment, this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED Canada établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.