




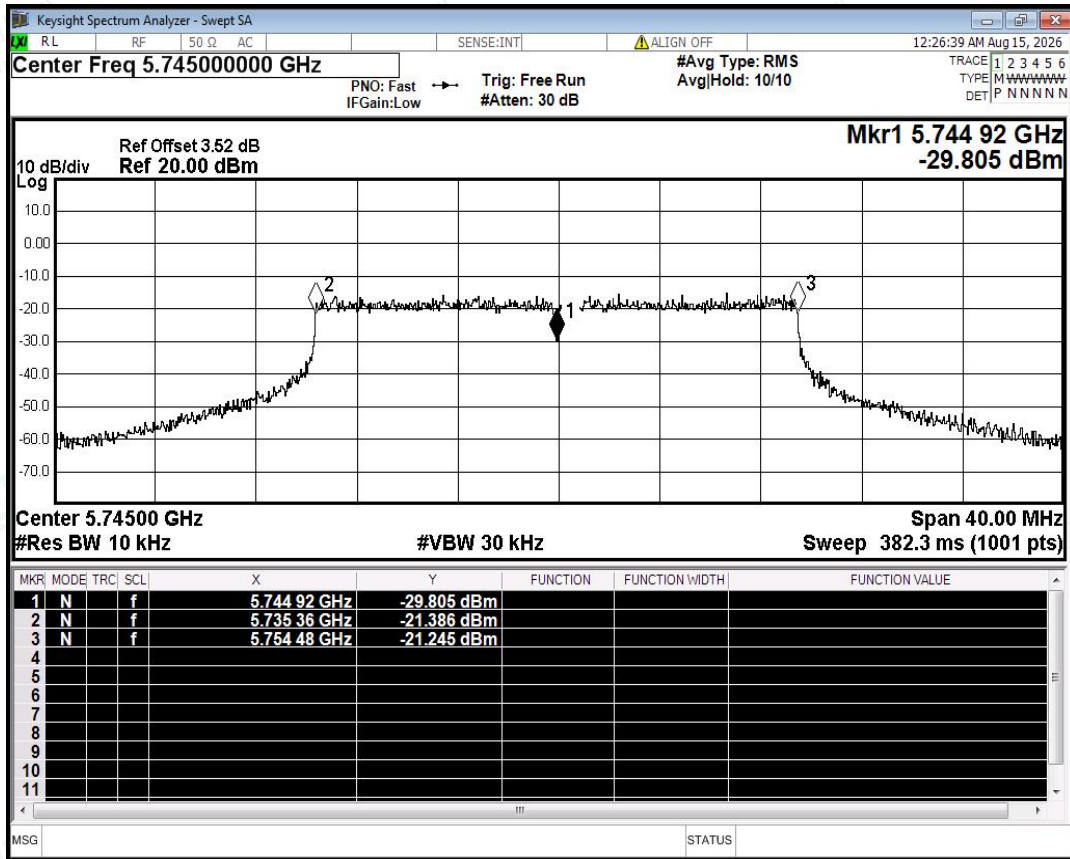


Freq. Stability NVNT ax20 5745MHz Ant1

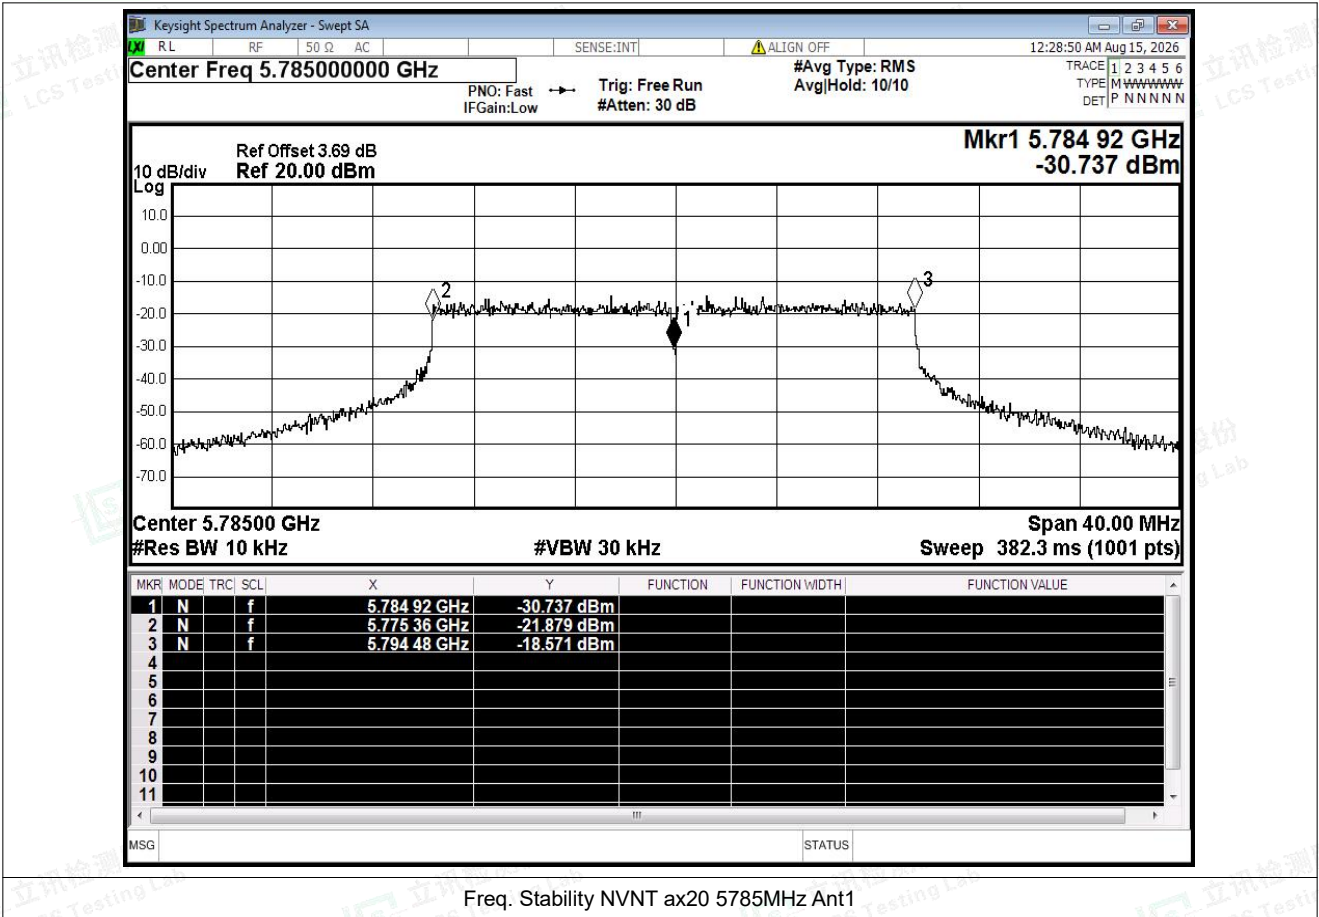


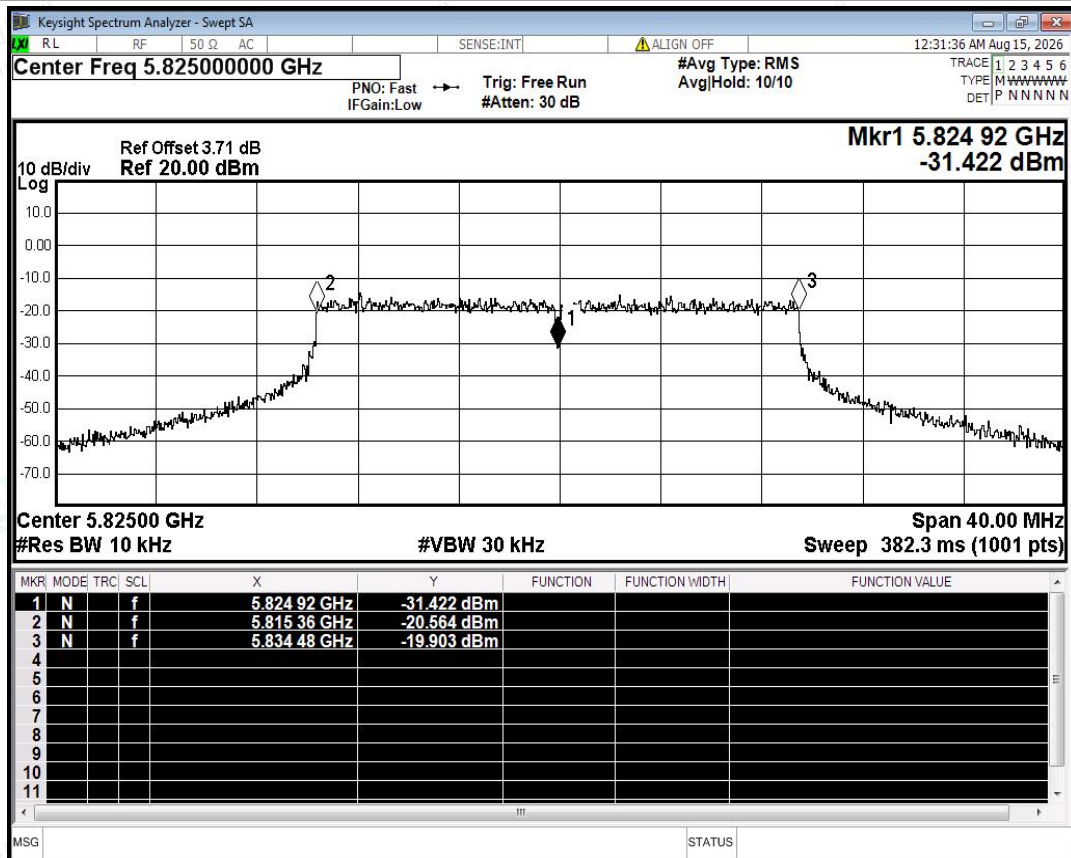

Freq. Stability NVNT ax20 5825MHz Ant1

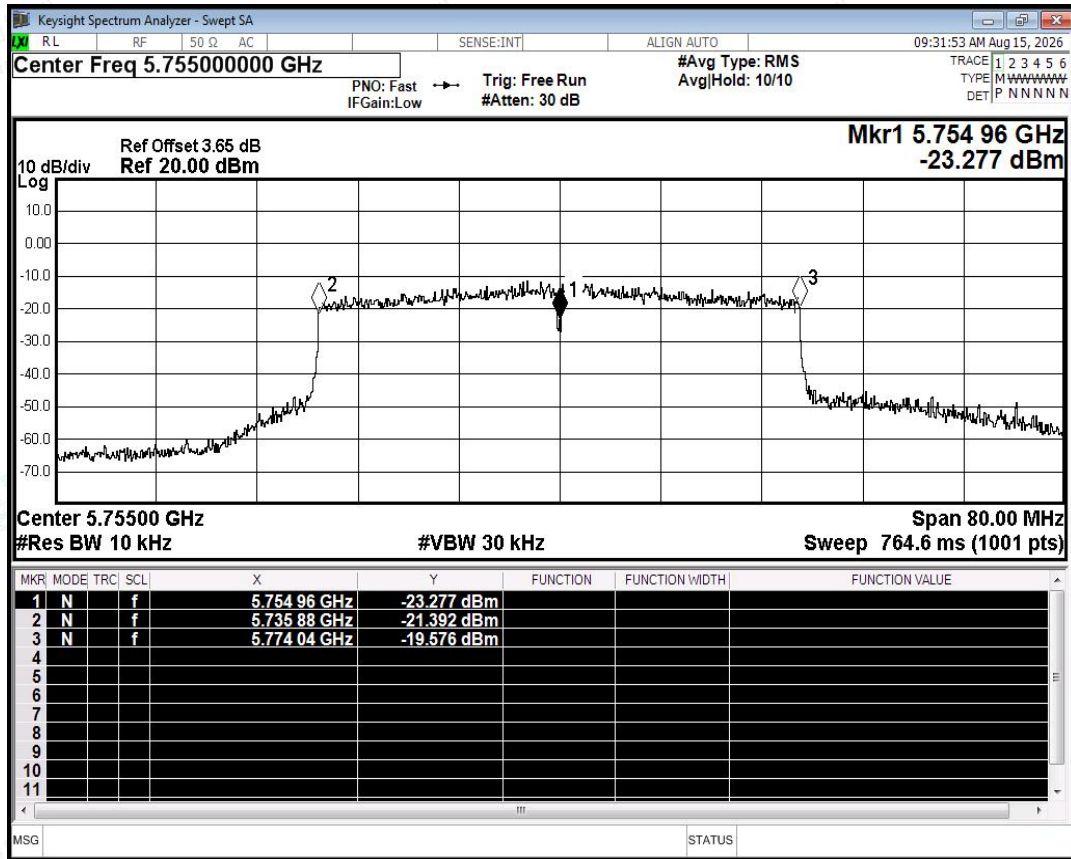


Freq. Stability NVNT ax40 5755MHz Ant1

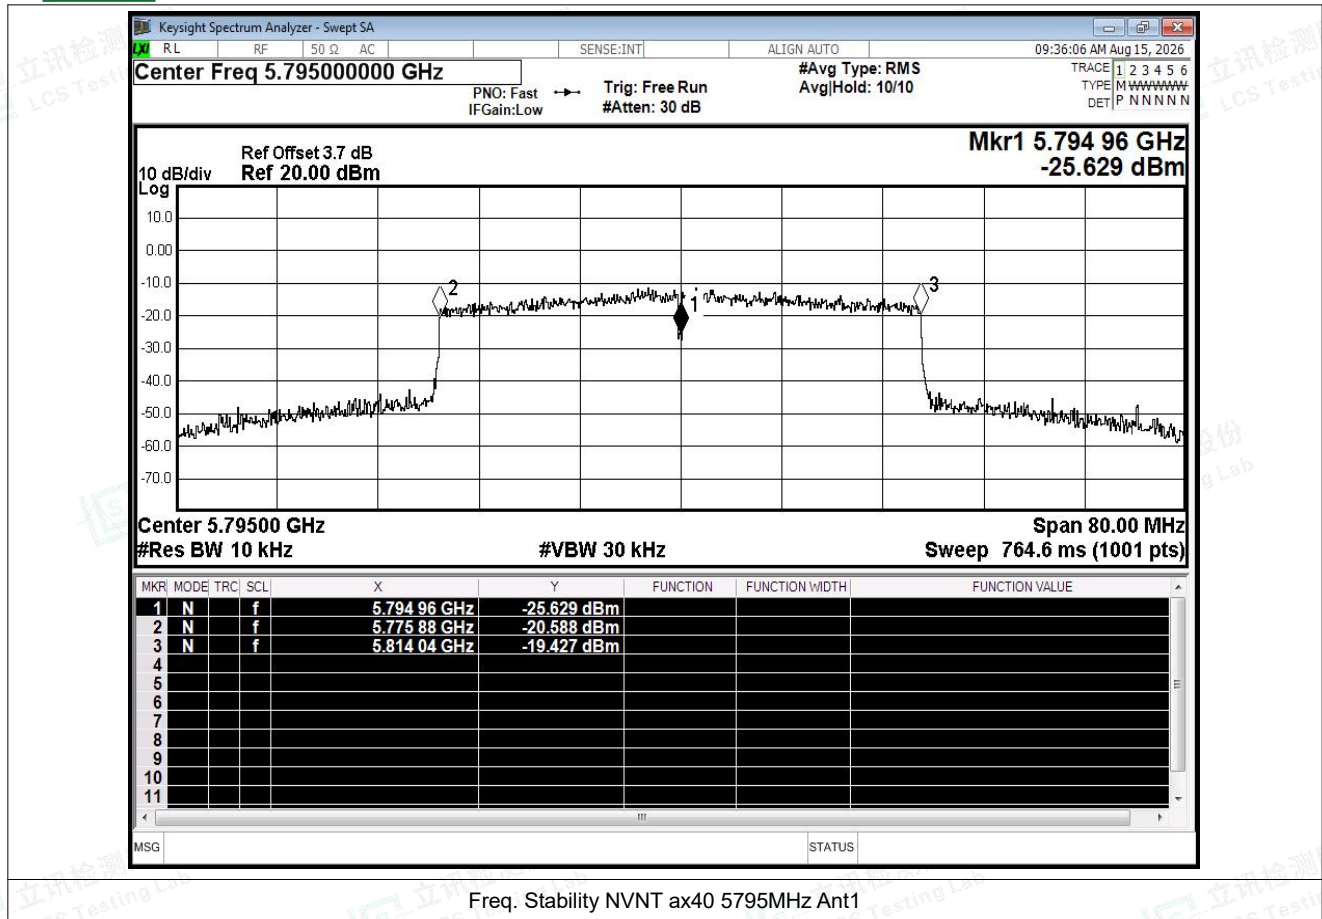




E.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	91.44	0.39	0.49
NVNT	a	5785	Ant1	92.69	0.33	0.49
NVNT	a	5825	Ant1	91.07	0.41	0.49
NVNT	n20	5745	Ant1	91.75	0.37	0.53
NVNT	n20	5785	Ant1	94.5	0.25	0.53
NVNT	n20	5825	Ant1	94.5	0.25	0.53
NVNT	n40	5755	Ant1	93.07	0.31	1.06
NVNT	n40	5795	Ant1	67.88	1.68	1.08
NVNT	ac20	5745	Ant1	89.2	0.5	0.53
NVNT	ac20	5785	Ant1	92.23	0.35	0.53
NVNT	ac20	5825	Ant1	83.7	0.77	0.53
NVNT	ac40	5755	Ant1	80.87	0.92	1.08
NVNT	ac40	5795	Ant1	89.52	0.48	1.06
NVNT	ax20	5745	Ant1	87.95	0.56	0.68
NVNT	ax20	5785	Ant1	85.88	0.66	0.68
NVNT	ax20	5825	Ant1	89.57	0.48	0.68
NVNT	ax40	5755	Ant1	87.5	0.58	2.86
NVNT	ax40	5795	Ant1	87.5	0.58	2.86

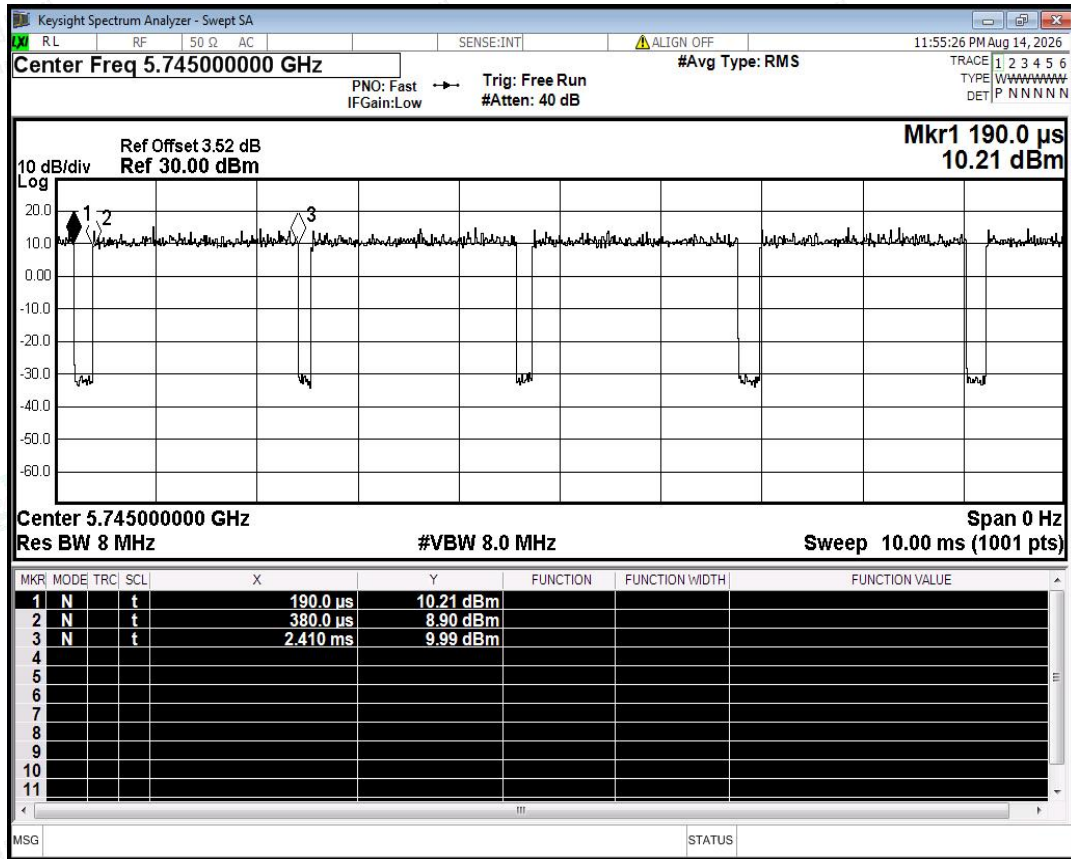


Duty Cycle NVNT a 5745MHz Ant1

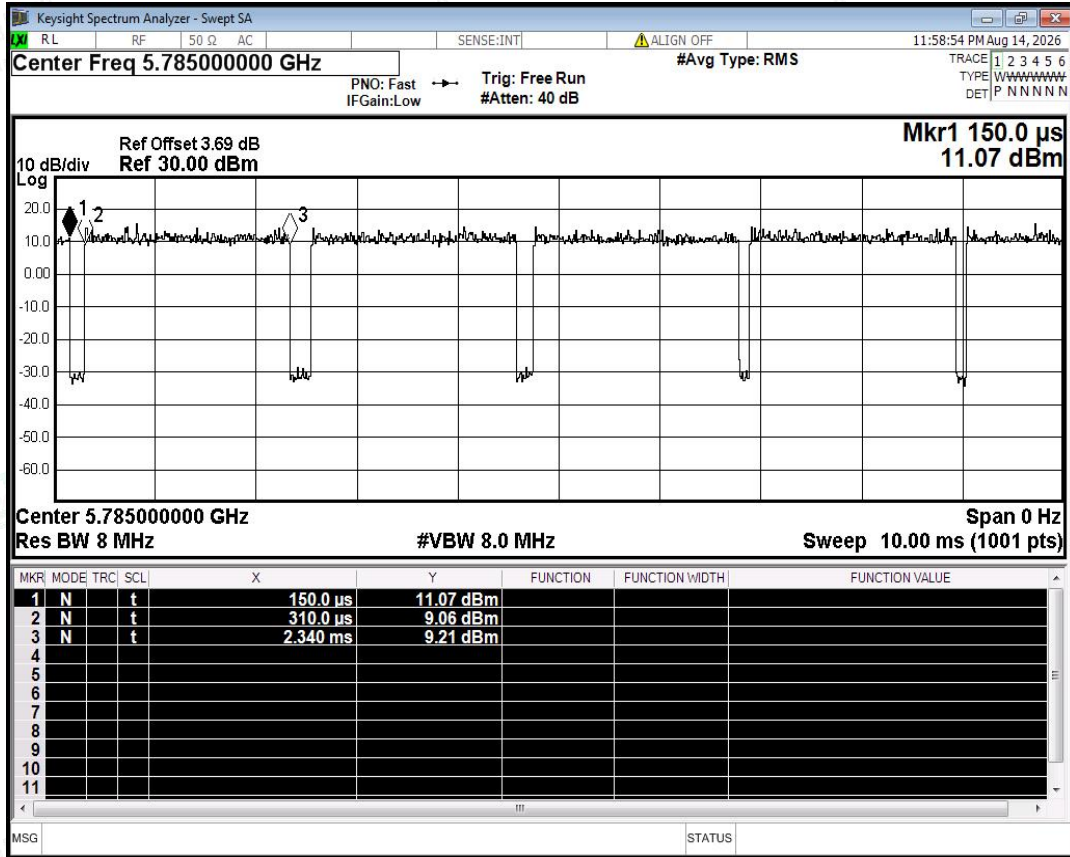



Duty Cycle NVNT a 5785MHz Ant1

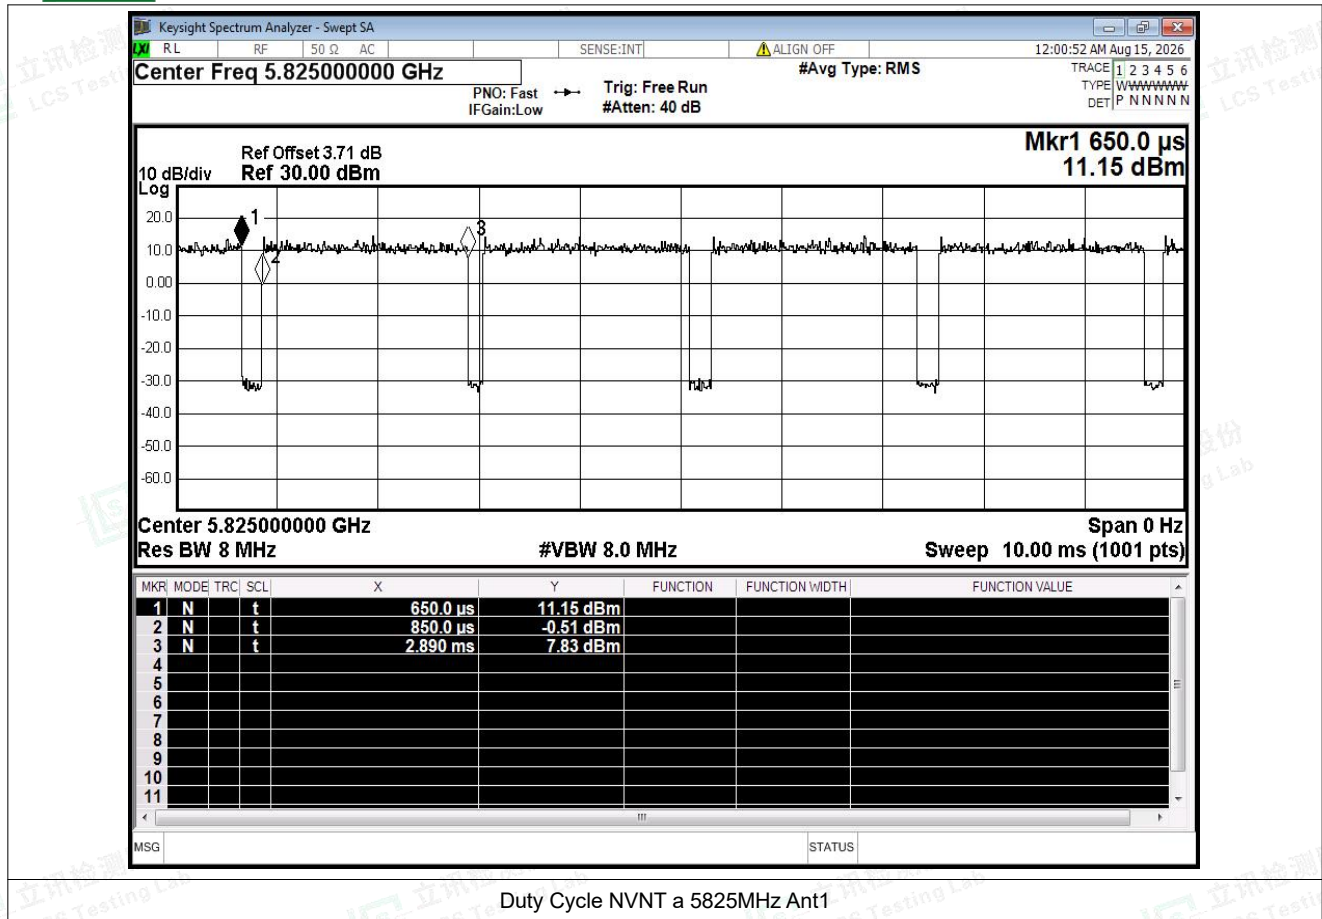


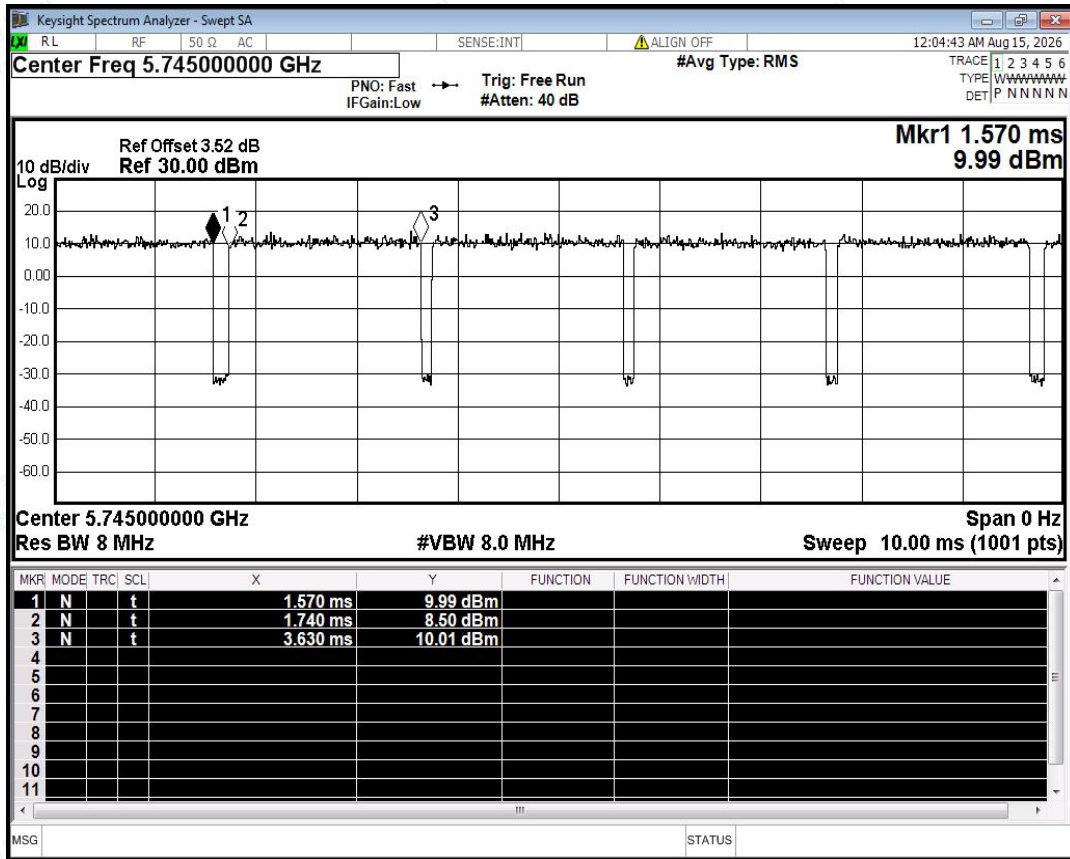


Duty Cycle NVNT n20 5745MHz Ant1

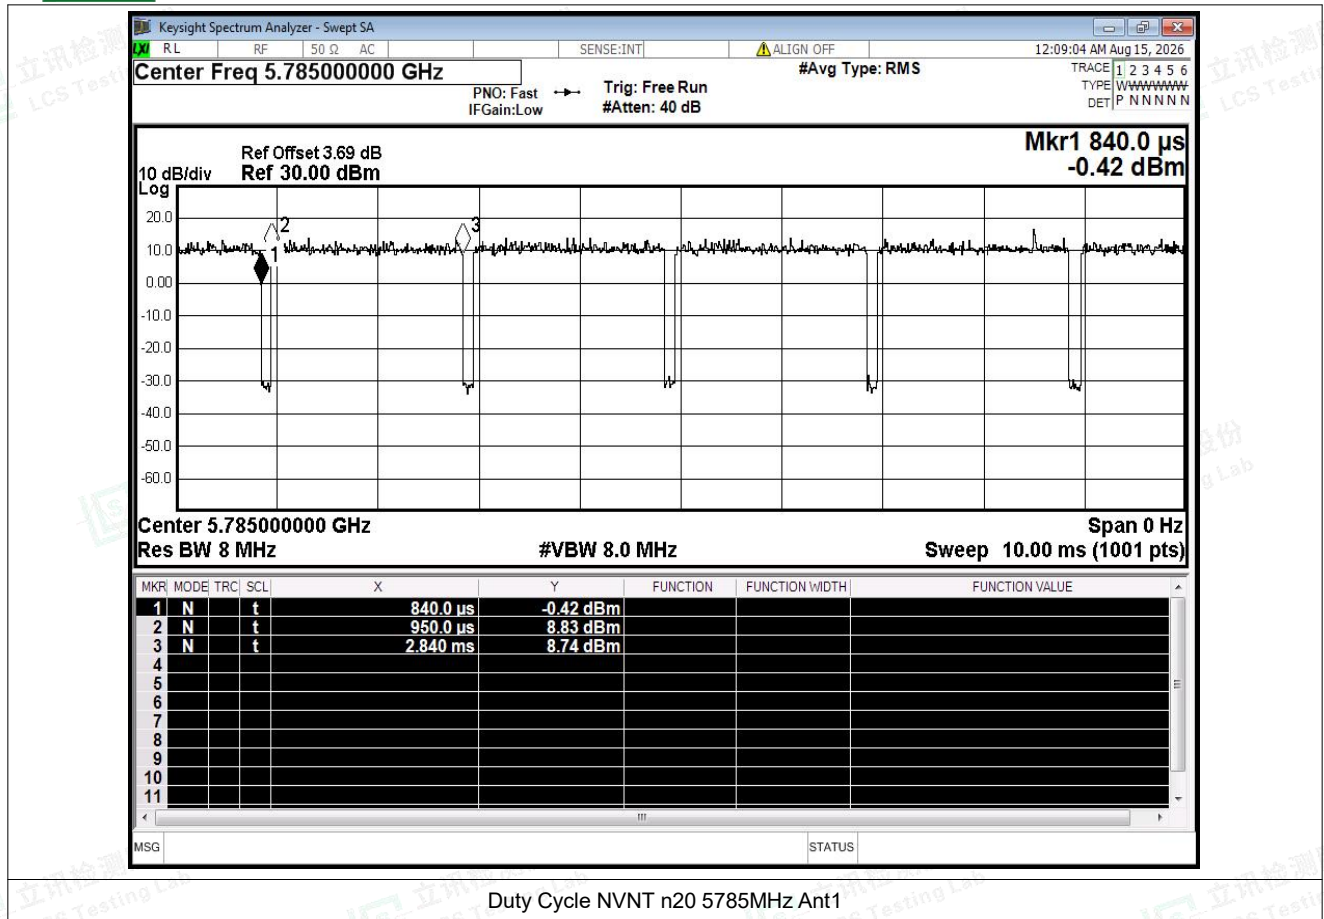

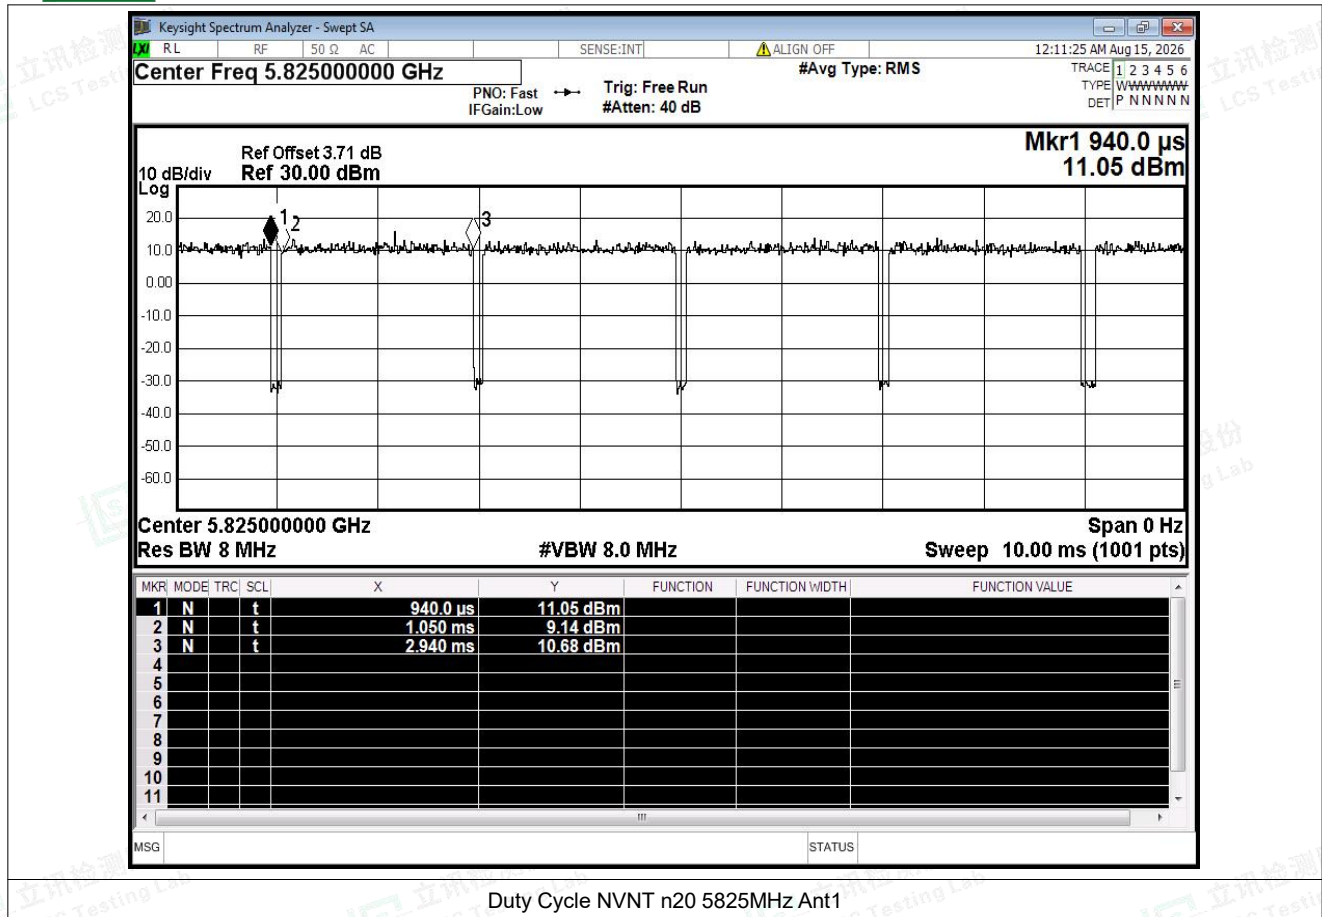


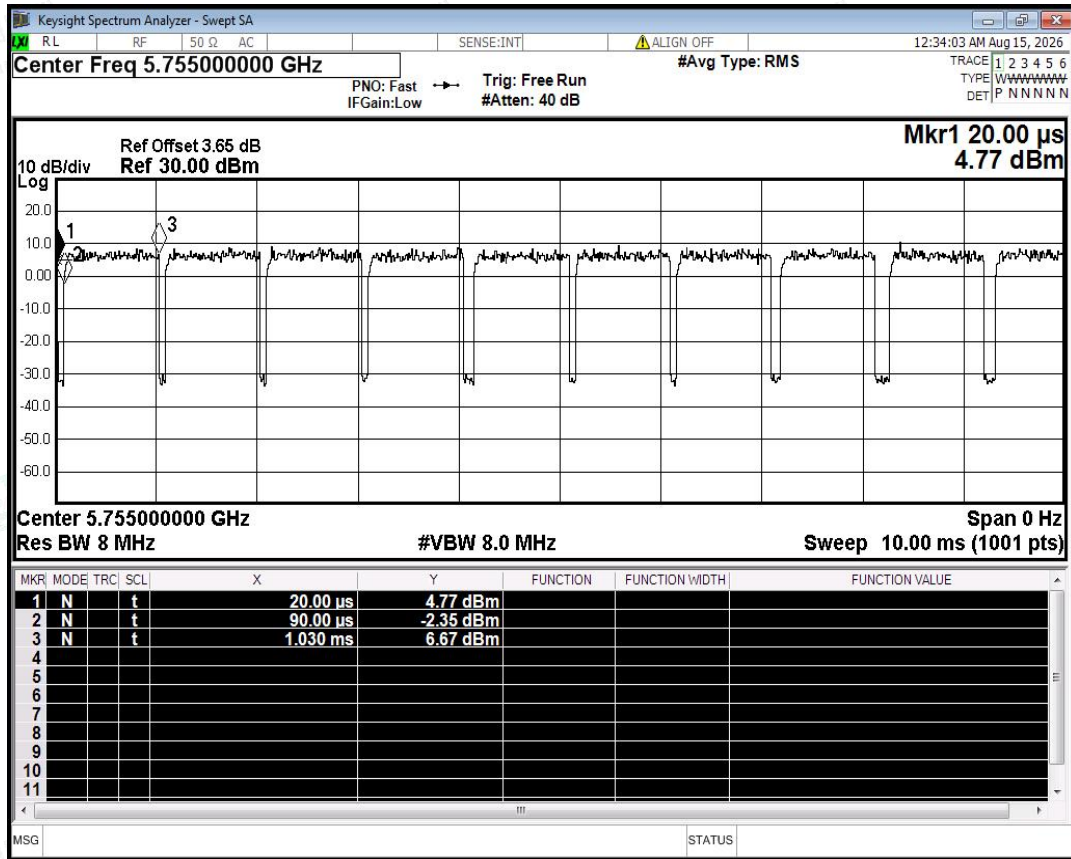


Duty Cycle NVNT n40 5755MHz Ant1

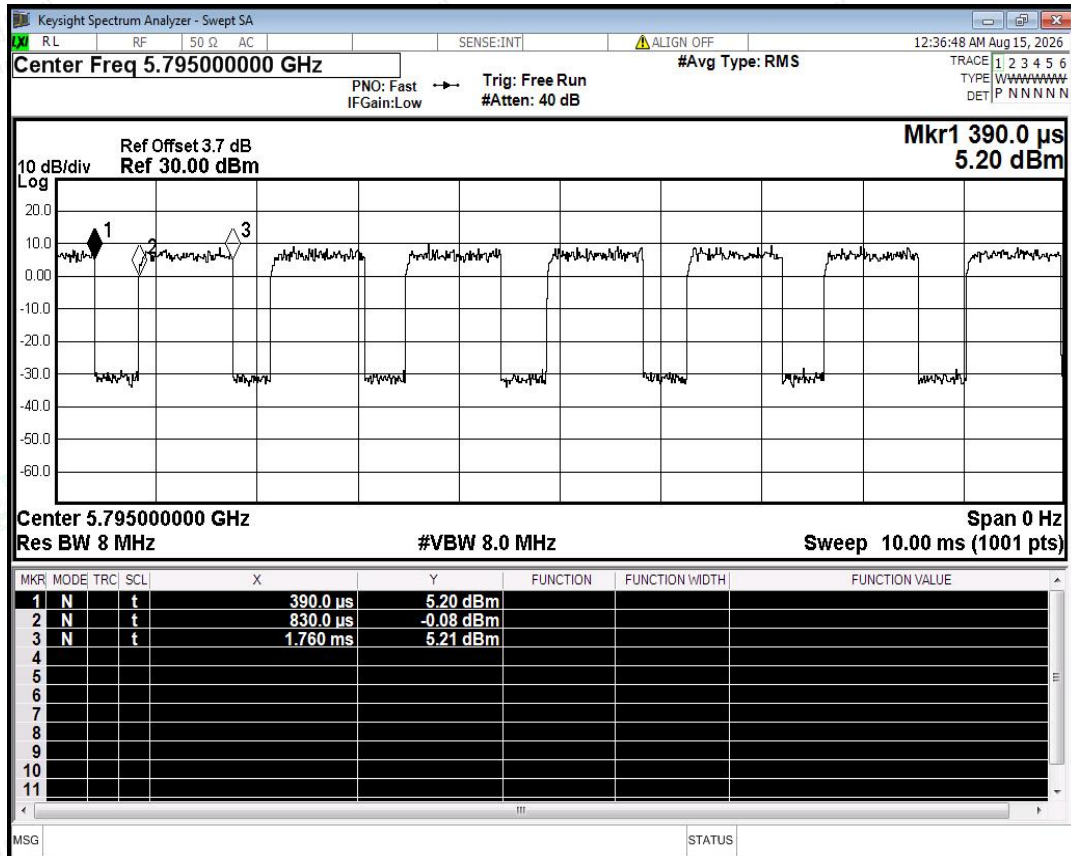


Duty Cycle NVNT n40 5795MHz Ant1

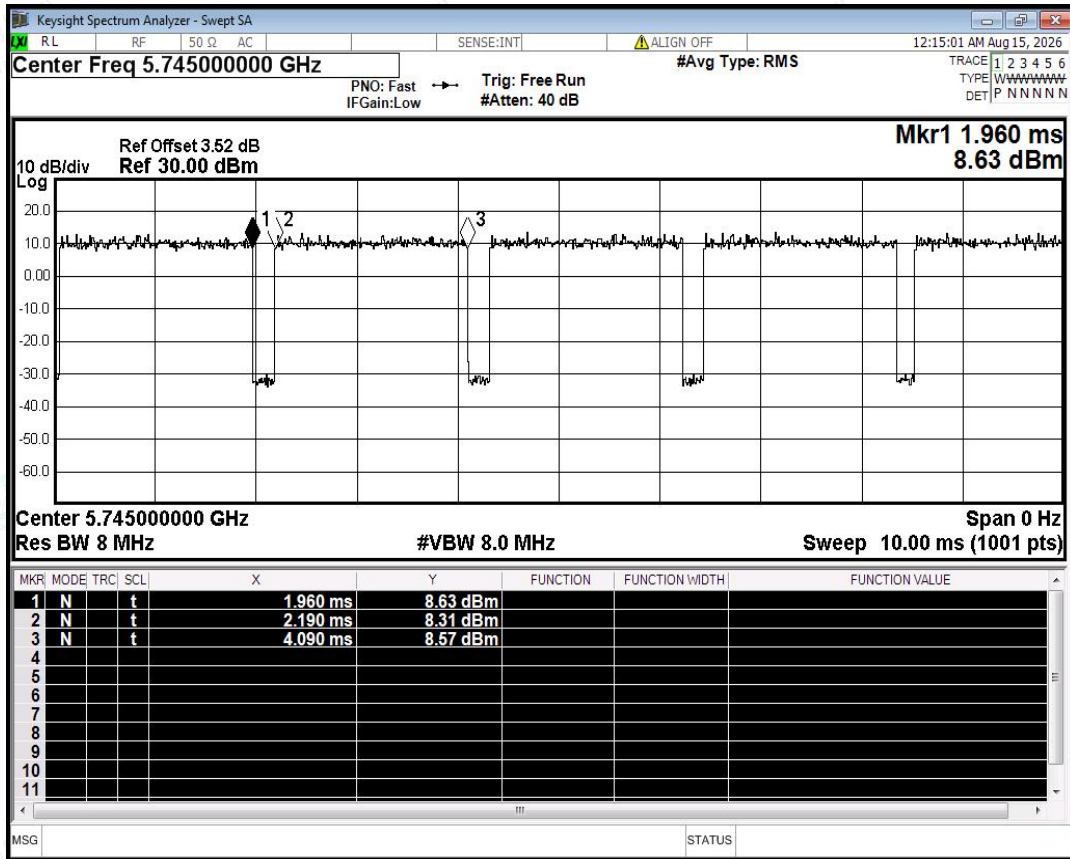


Duty Cycle NVNT ac20 5745MHz Ant1

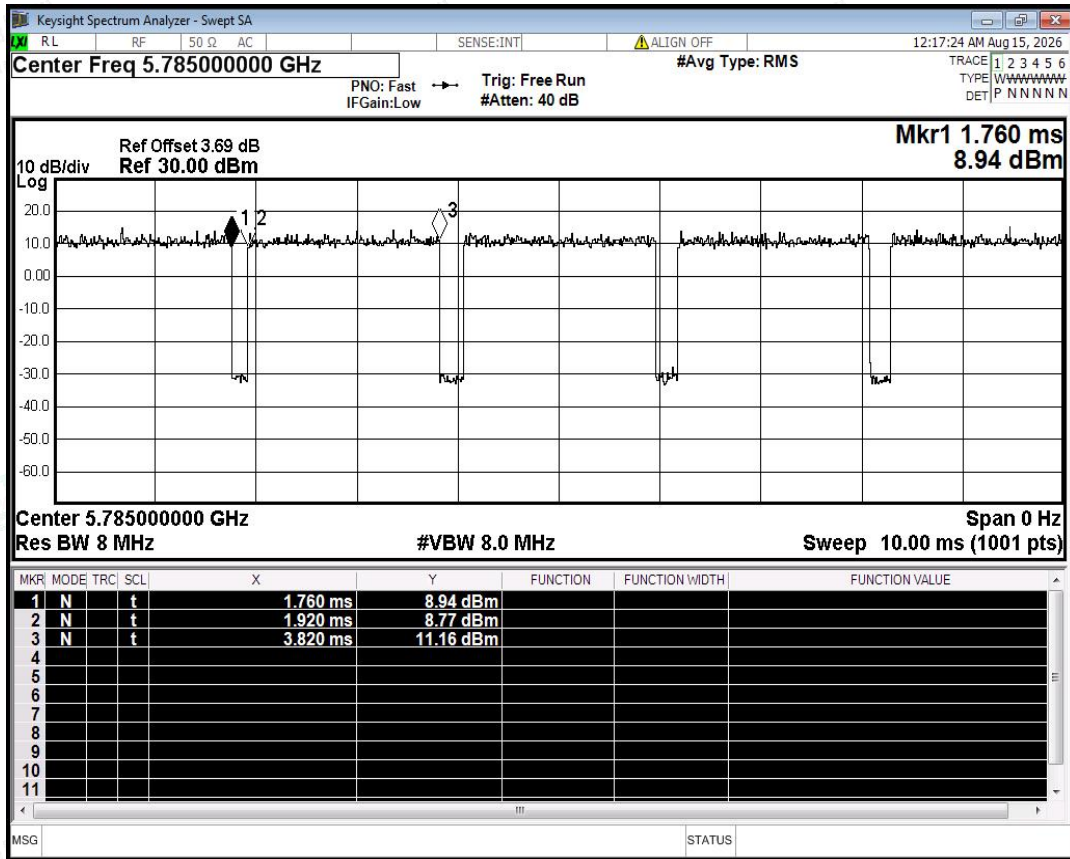


Duty Cycle NVNT ac20 5785MHz Ant1

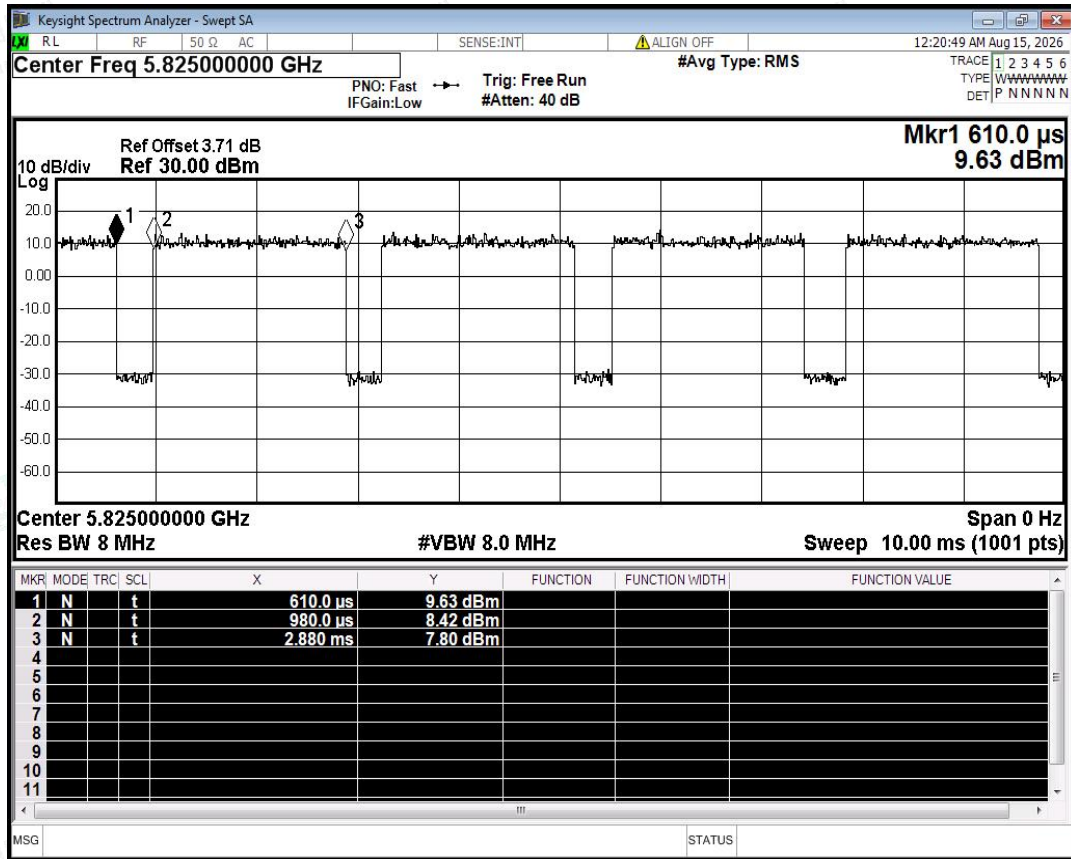


Duty Cycle NVNT ac20 5825MHz Ant1

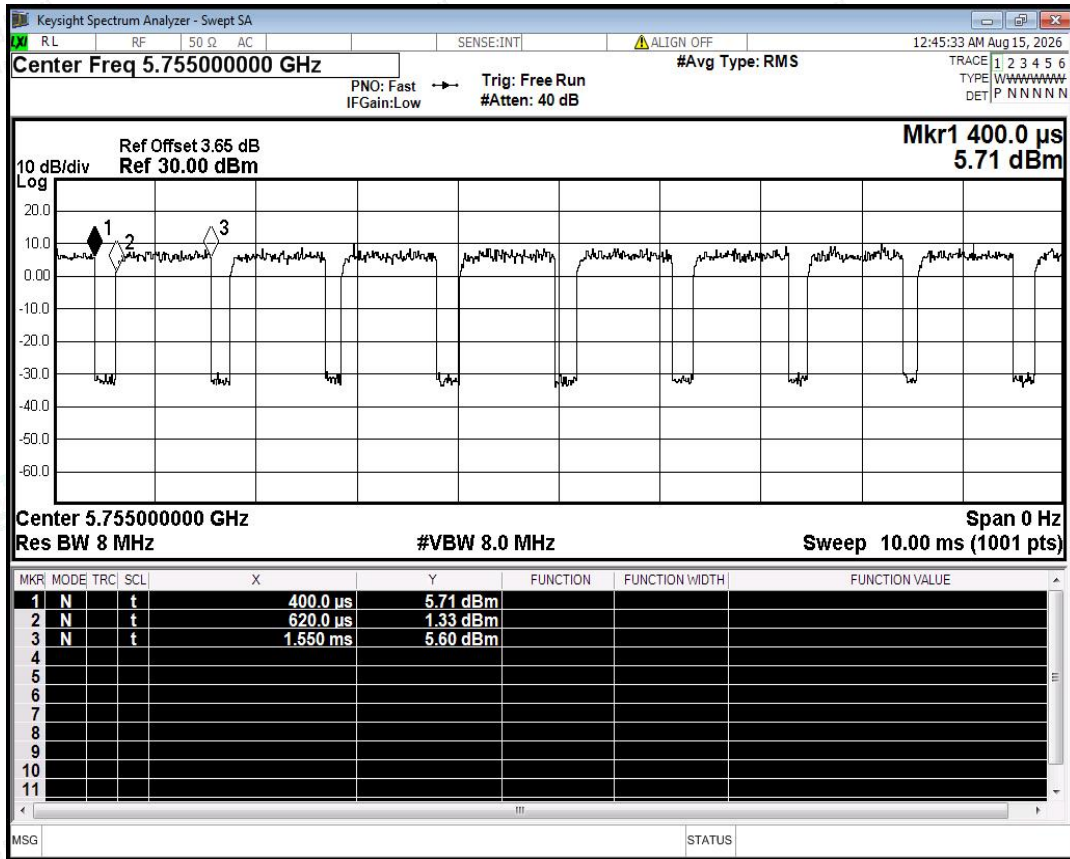


Duty Cycle NVNT ac40 5755MHz Ant1

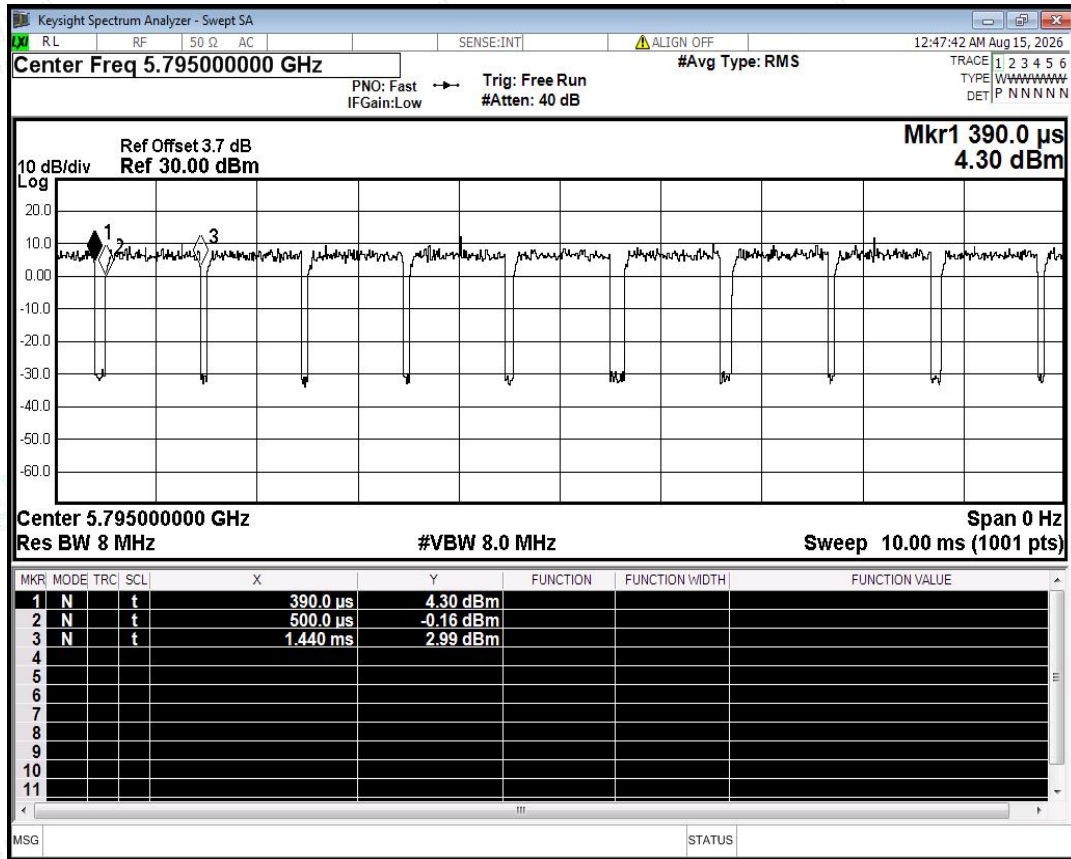



Duty Cycle NVNT ac40 5795MHz Ant1

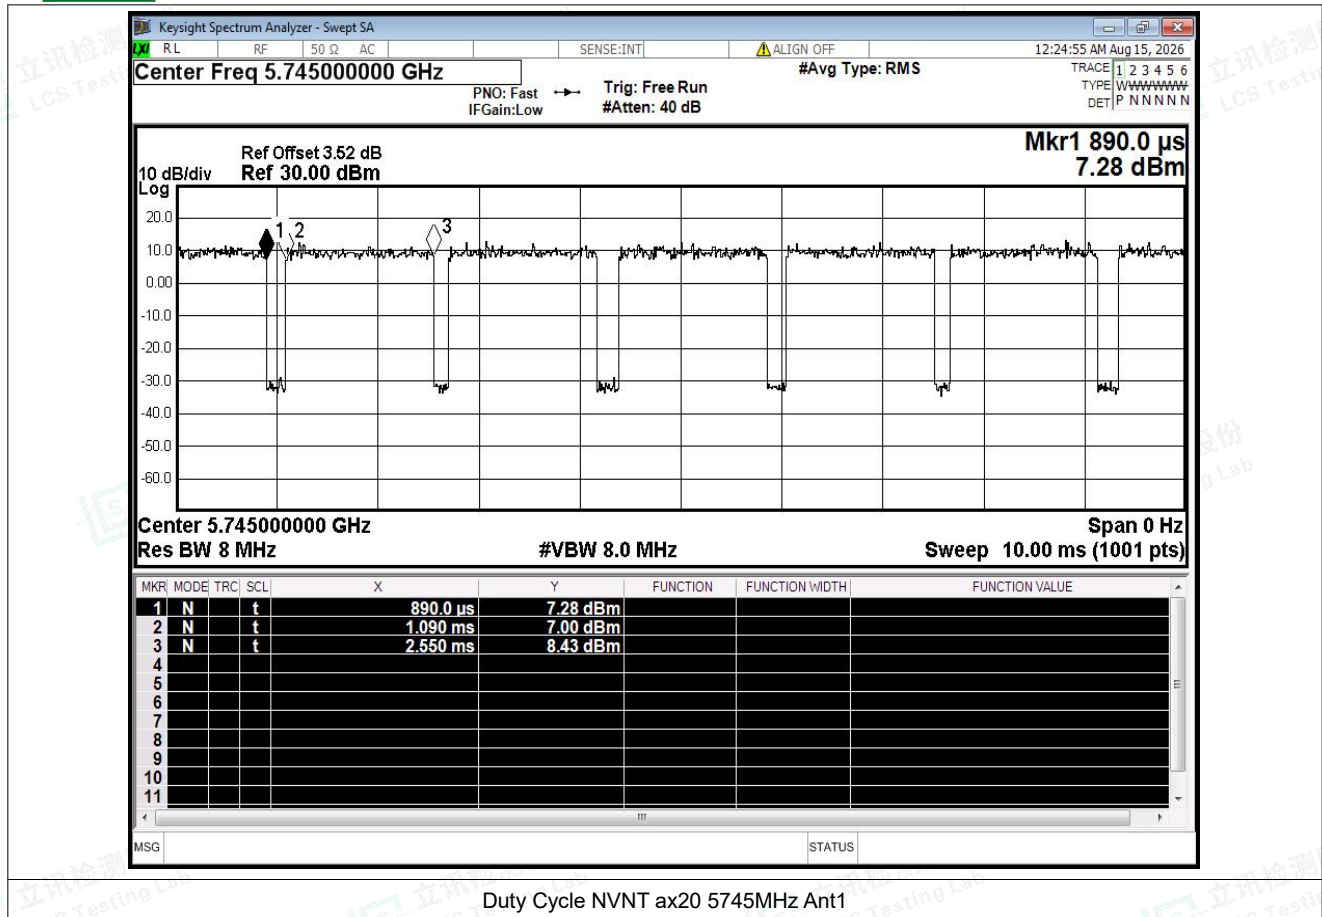

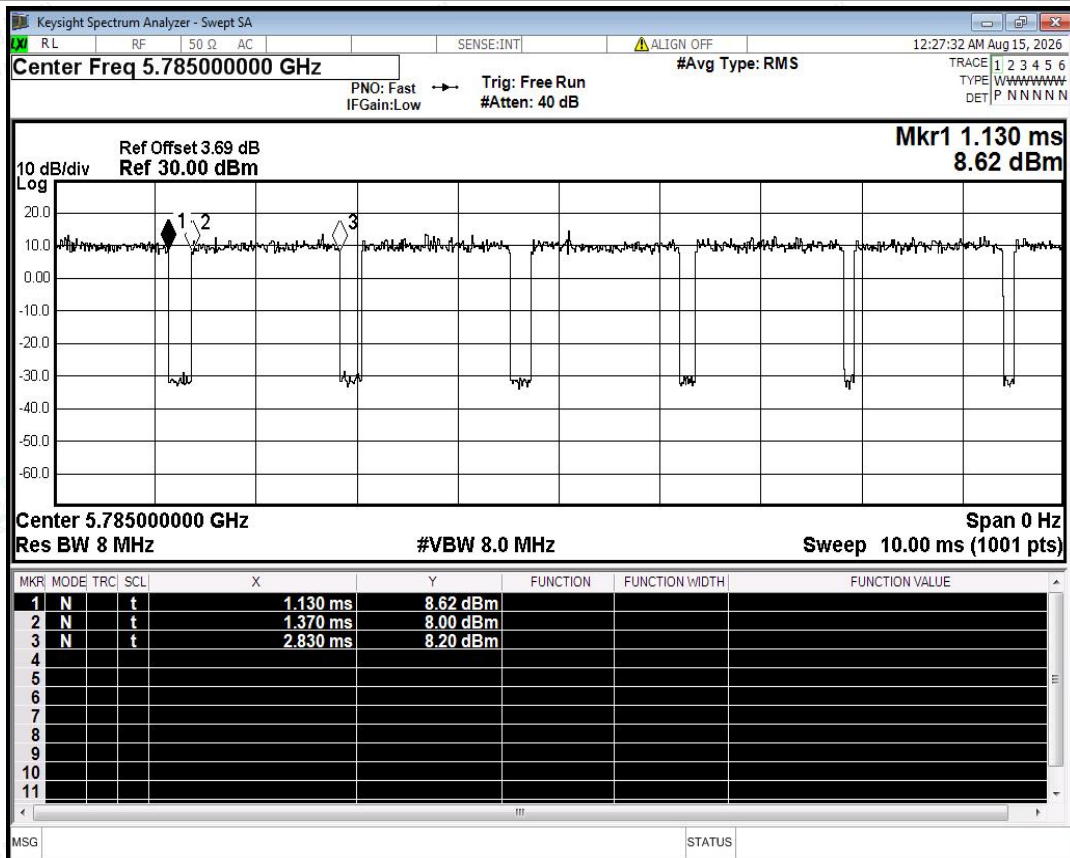

Duty Cycle NVNT ax20 5785MHz Ant1

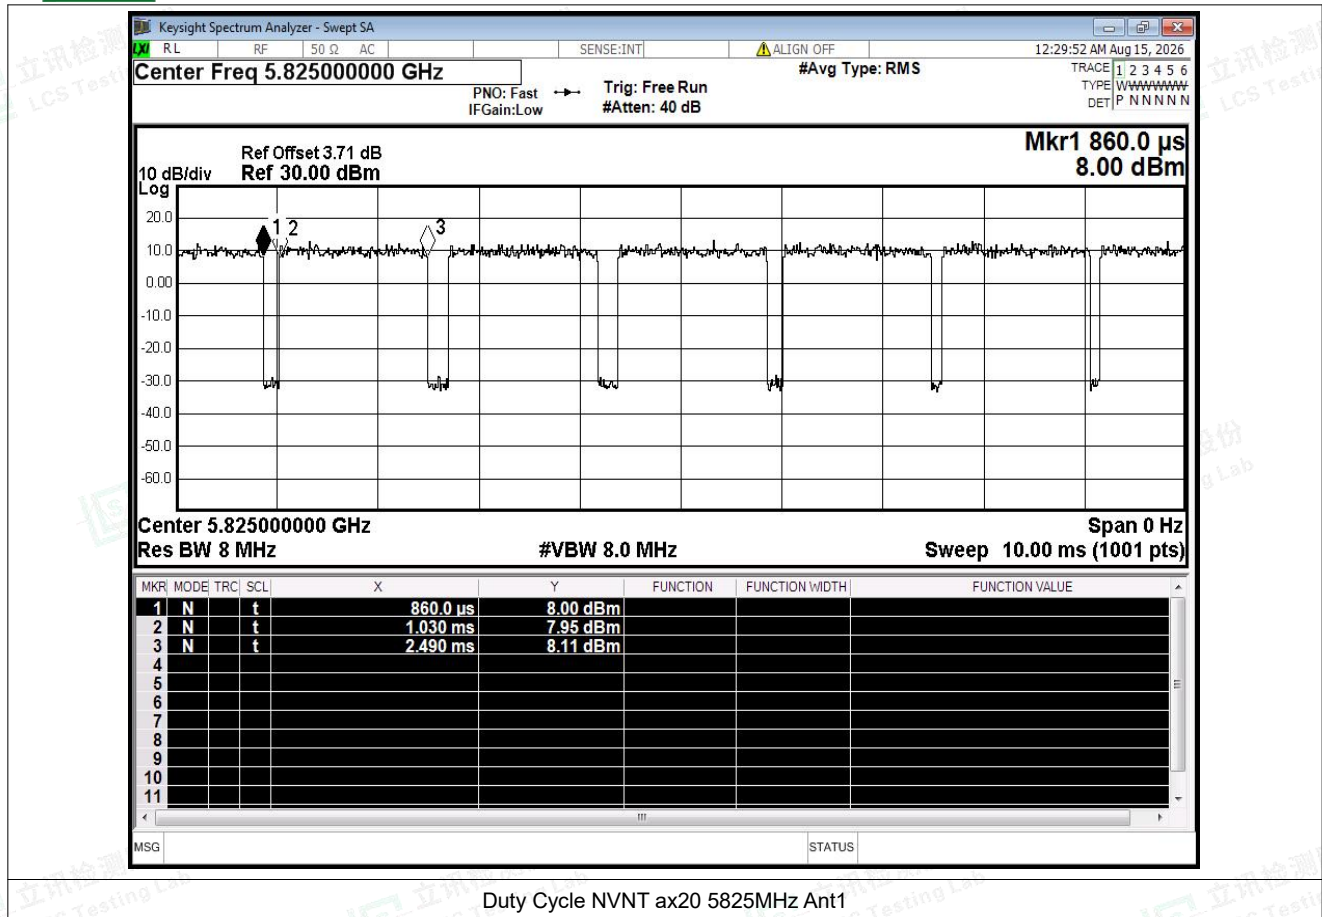

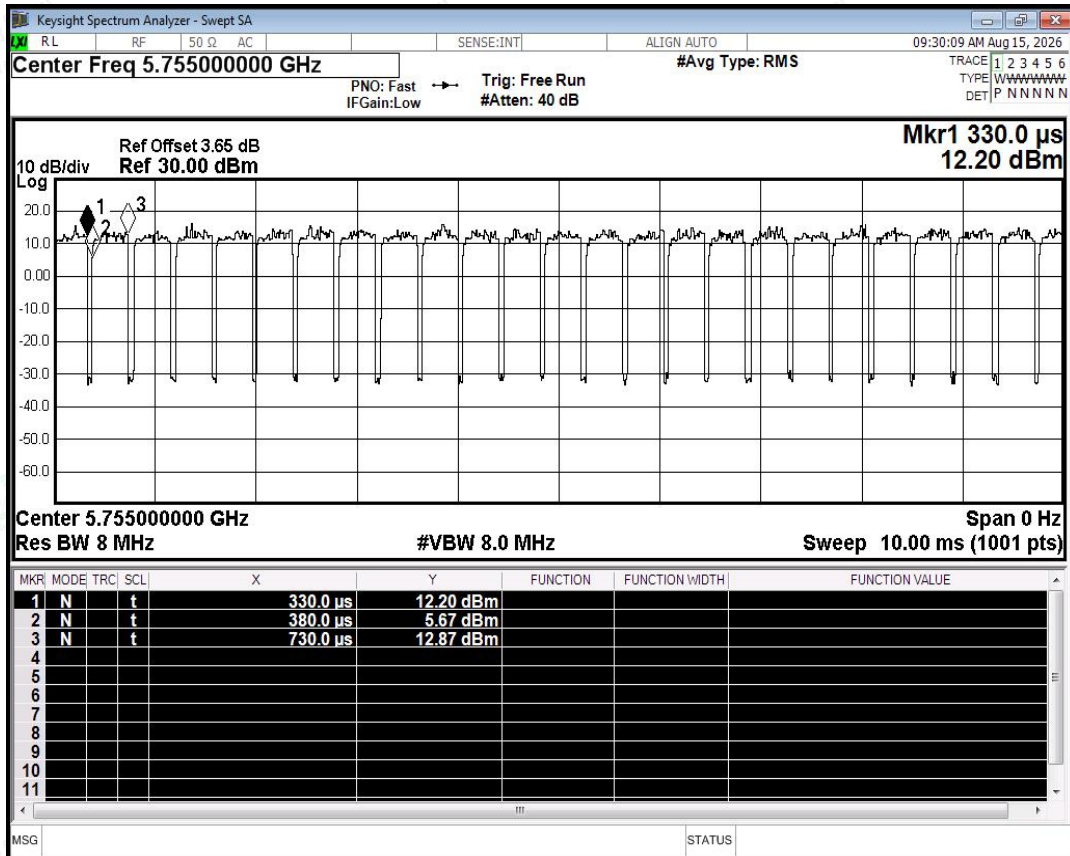

Duty Cycle NVNT ax40 5755MHz Ant1

