


Set Up Your Camera

1. Position your camera's adjustable stand for setup.

Note: Peel off film from the camera before use.

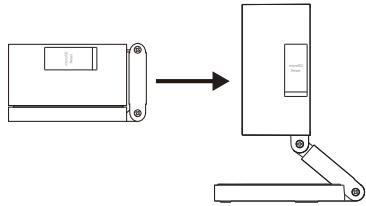

2. Download the **Tapo** app from the App Store or Google Play.




3. Power up the camera. Tap the **+** button in the app and select your model. Follow app instructions to complete setup.

Install Your Camera


Option 1: Set on a table or shelf

1. Place the camera on your desired table or shelf.
2. Adjust the stand angle to the notch position in the base for more stability.

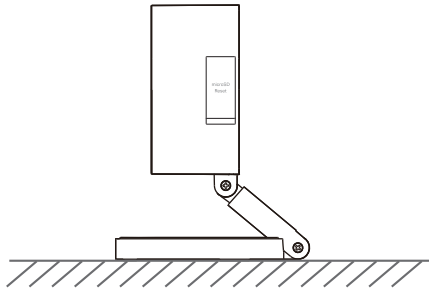

Option 2: Mount to metallic surfaces


The camera includes a magnet in its base. It allows magnetically attaching to metallic surfaces.

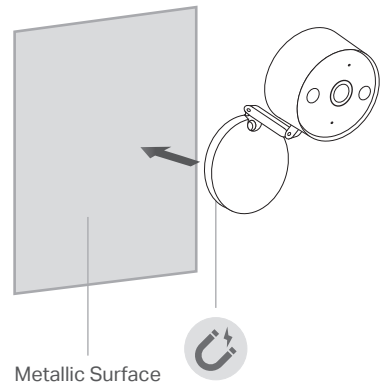

This equipment shall be installed at a height of fewer than 2 meters.


Option 3: Stick to a clean wall

1. Attach the included adhesive to the back of the mental plate.

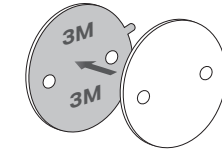

2. Stick the mental plate with adhesive to a clean wall. Then attach the camera to the plate.


Note: This is applicable with tile, glass, marble, metal, stainless steel, and hard wall surfaces.

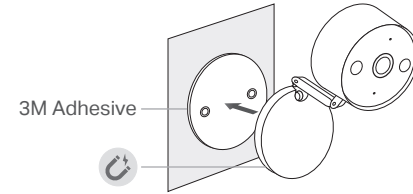


This equipment shall be installed at a height of fewer than 2 meters.

Option 4. Mount to the wall (with or without the mental plate)

1. Stick the mounting template to the desired mounting place. Drill **two** holes according to the template.

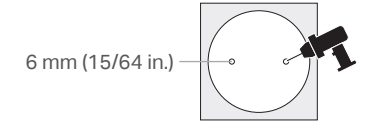


2. Insert two anchors into the holes and use the screws to affix the **mental plate** over the anchors. Then attach the camera to the plate.

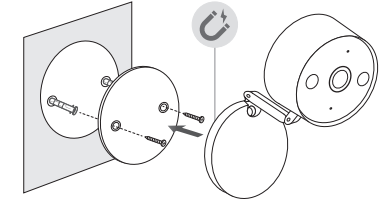


This equipment shall be installed at a height of fewer than 2 meters.

1. Drill **one** hole in the desired mounting place.

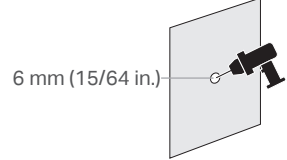


2. Insert one anchor into the hole and use one screw to affix the **camera** over the anchor.

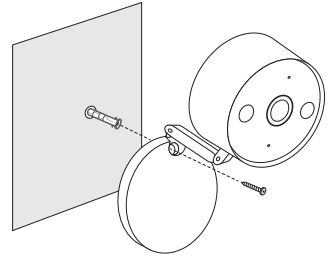


Appearance

Front

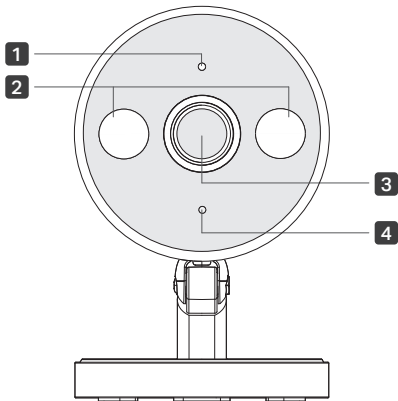


- 1 System LED
- 2 White Light LEDs
- 3 Lens
- 4 Microphone

Back

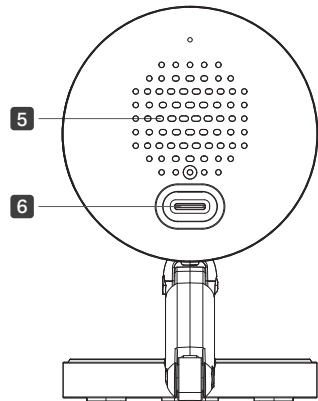

- 5 Speaker
- 6 USB Type-C Charging Port

Side

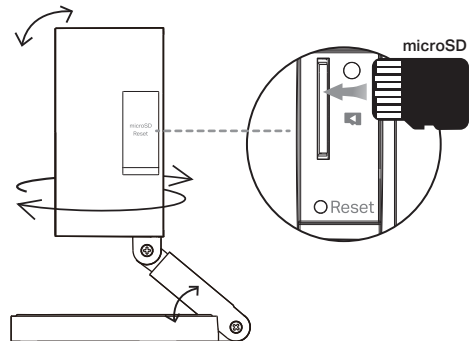

Adjust View
Tilt and rotate the camera and stand for your desired viewing angle.

microSD Card Slot
Open the cover. Insert a microSD card (not included) and initialize it on the Tapo app for local recording.

Reset
Open the cover. Use a pin to press and hold for at least 5 seconds to reset the camera to factory default settings.

System LED Indications

Solid red	Starting up
Blinking red and green	Ready for setup
Blinking red slowly	Connecting to Wi-Fi
Solid amber	Connected to Wi-Fi
Solid green	Connected to the cloud
Blinking red quickly	Camera resetting
Blinking green quickly	Camera updating

For technical support, user guides, FAQs, warranty and more, please visit www.tapo.com/support/

CE UK EAC

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863. The original EU declaration of conformity may be found at <https://www.tapo.com/support/ce>

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017. The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>

- Do not use damaged charger or USB cable to charge the device.
 - Do not use any other chargers than those recommended.
 - Do not use the device where wireless devices are not allowed.
 - Adapter shall be easily accessible.
 - Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
 - Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
 - Do not disassemble, repair or modify the product.
 - Do not use the product if the casing has been broken. Danger of electric shock.
 - Never touch the product with wet hands.
 - Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
 - Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
 - Do not use liquid to clean the product. Only use a dry cloth.
 - Never put metal objects inside the product. If a metal object enters the product turn off the circuit breaker and contact an authorised electrician.
 - This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequality shielded from external RF (radio frequency) energy.
 - Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.
 - Do not place heavy objects on top of the product.
 - When you leave the product unused for a long time unplug the product from the power outlet.
 - This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
 - Adapter should be used indoors where the ambient temperature is lower than or equal to 40 °C.
 - Operating Temperature: -25 °C ~ 45 °C (-13 °F ~ 113 °F)
- Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.



Quick Start Guide

Indoor/Outdoor
Home Security Wi-Fi Camera
Tapo C120

設備名稱：		型號（型式）：					
室內型/戶外型家庭防護 Wi-Fi 攝影機		Tapo C120					
Equipment name		Type designation (Type)					
單元	限用物質及其化學符號						
(Unit)	Restricted substances and its chemical symbols						
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)	
PCB	○	○	○	○	○	○	○
外殼	○	○	○	○	○	○	○
電源 供應 器	-	○	○	○	○	○	○
天線	-	○	○	○	○	○	○
塑膠 組件	○	○	○	○	○	○	○

備考 1. “○” 係指該項限用物質之百分比含量未超過百分比含量基準值。

Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考 2. “○” 係指該項限用物質之百分比含量未超過百分比含量基準值。

Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考 3. “-” 係指該項限用物質為排除項目。

Note 3: The “-” indicates that the restricted substance corresponds to the exemption.