


尺寸: 105x145mm 157g 双铜+内页 80g书纸+哑胶

Remote Dog Training Collar

User Manual

TZ-926

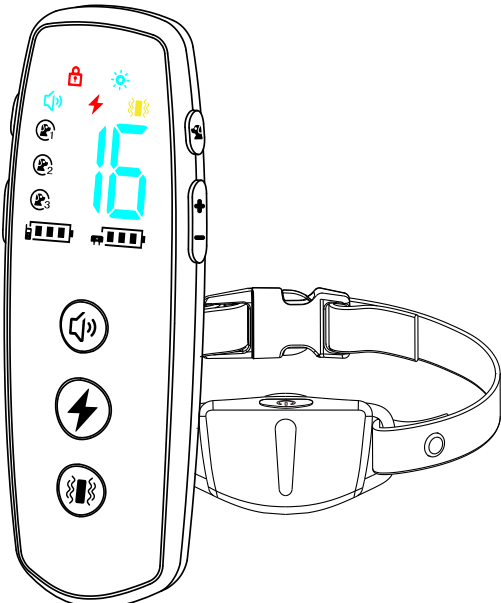

Please Read This Manual Carefully Before Use

Contents

Packaging List

Product Specifications

Main Features

How Does the Training Collar Work

Important Statement

Transmitter Introduction

Receiver Introduction

Charging Instructions

Operation Instructions

Receiver Fitting Instructions

Pairing Instructions

Frequently Asked Questions

Troubleshooting

Training Tips


Common Weights for Different Size Dogs

Common Sizes for Different Breeds of Dogs


Packaging List




① Remote Transmitter

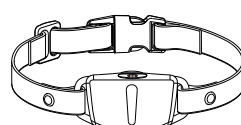


② Receiving Collar



③ Type-C Charging Cable



④ Adapter



⑤ Test Light Tool



⑦ Contact Points



⑧ Mini Spanner



⑨ Silicone Caps



⑩ User Manual

-1-

Product Specifications

Product Name: Remote Dog Training Collar

Product Model: TZ-926

Material: ABS+PC

Control Range: 800M(2600FT)

Charging Method: Type-C

Transmitter/ Receiver Charging Time: 2.5 Hours

Transmitter/ Receiver Standby Time: 180 Days

Transmitter Waterproof Rating: Not Waterproof

Receiver Waterproof Rating: IPX7 Waterproof

Working temperature: -30°C- +70°C

Storage temperature: -30°C- +85°C

Relative Humidity: 20% – 90%

-2-

Main Features

1. The transmitter adopts a large LCD color screen display.

2. Receiver is designed with safe LED light for locating your dog at night.

3. Remote control range up to 800M(2600FT).

4. 4 Working modes: beep, vibration, shock, LED light

5. 1-9 Levels beep loudness adjustable

6. 1-16 Levels vibration or shock intensity adjustable

7. 7 LED Light modes adjustable: (light off→red light steady on→red light flashing→green light steady on→green light flashing→blue light steady on→blue light flashing)

8. One Transmitter can control up to 3 receiving collars.

9. The Receiver is IPX7 waterproof, and transmitter is not waterproof.

10. Dual battery power display, screen can display transmitter and receiver battery level.

11. Power saving mode design with automatic standby function.

• Without any activity, the Transmitter will switch to Standby Mode (⏻) will turn off within 30s, the LCD screen will turn off within 3 minutes). Press any button to re-activate it from Standby mode.

• The Receiving Collar will go into Standby Mode if it is idle for more than 5mins. Any movements will activate the Receiver. If the Receiver does not be activated when you press the (🔑) (🔒) (🔊) on Transmitter, and the Green LED on receiving collar is not on, then gently shake the Receiving Collar, it will be activated.

12. The Transmitter has lock button, no more false triggering.


• Push up the lock switch, the (🔒) will be flashing for 6 times then it switches into key lock mode, and it won't be activated anymore. The (🔒) will start flashing for 6 times again if any button be pressed, to activate the Transmitter again, please push down the lock switch.

-3-

How Does the Training Collar Work

The Remote Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 2600 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.

Important: The Remote Training Collar has an effective range up to 2600 feet. Hold the Remote Transmitter horizontally away from your body to achieve the optimum range. Terrain features, weather, vegetation, transmission from other radio devices and other factors may affect the range of the Remote Transmitter.

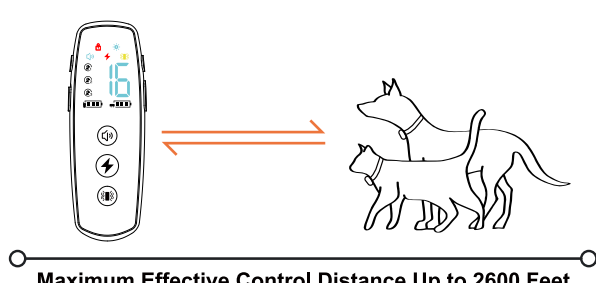

Maximum Effective Control Distance Up to 2600 Feet

-4-

Important Statement

⚠ WARNING!

• DO NOT use this product for aggressive dogs or vicious animals.

• When the receiving collar is turned on, the human body should not directly touch the Shock contact points of the collar.

Risk of skin damage. It's important to fit the collar properly. A collar that is fitted too tightly or worn for too long may harm your dog's skin. This condition, which ranges from redness to pressure ulcers, is commonly known as bed sores.

⚠ CAUTIONS

• Do not let your dog wear the collar for more than 12 hours per 24-hour period.

• If possible, gently reposition the collar on your dog's neck every 1 or 2 hours.

• Never attach a leash to the Receiver Collar, as this would cause excessive pressure on the contact points.

• When using a separate collar to connect a leash, please ensure that it does not put excessive pressure on the electronic collar.

• Examine your dog's neck daily for signs of chafing or soreness.

• If a rash or sore is found, stop using the collar till the injured skin has been healed.


• If the condition persists for more than 48 hours, consult your veterinarian.

• If possible, please use the Beep Mode or Vibration Mode at first, then can try Static shock function.


To extend the battery life of this product if you do not intend to use it for a long period of time please charge them per month.

-5-

Transmitter Introduction

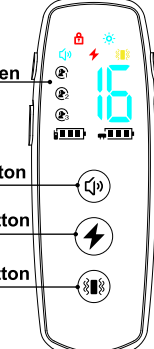

Color Screen




Beep Button



Shock Button




Vibration Button



LED Light Button



Key Lock Switch




Channel Button



Level+ Button



Level- Button



Transmitter Battery



Receiver Battery



Lock Key



LED Light Mode



Beep Mode



Shock Mode




Vibration Mode



Digital Display for training intensity level

-6-

Receiver Introduction

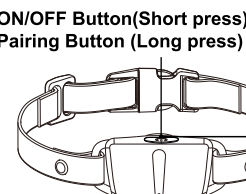

ON/OFF Button(Short press)
Pairing Button(Long press)




Indicator Light

LED Mode Indicator Light (The status of the mode indicator light is as follows in the corresponding mode.)

Mode	LED Mode Indicator Light Status
Beep Mode	Mode Indicator will light up Green
Vibration Mode	Mode Indicator will light up Blue
Shock Mode	Mode Indicator will light up Red
LED Light Mode	light off→red light steady on→red light flashing→green light steady on→green light flashing→blue light steady on→blue light flashing



Contact Points
Deliver vibration/safe static correction




Charging port
Charge the receiving collar

-7-

Charging Instructions

Please charge the product before use or when the transmitter and receiver battery icons flash on the screen! It takes 2.5 hours to fully charge the transmitter and receiving collar.

1. When the transmitter is charging, three bars of the battery icon (🔋) is running circularly. The battery icon (🔋) remains on when the battery is fully charged.
2. When the receiver is charging, the red LED indicator light is on. When the battery is fully charged, the green LED indicator light is on.

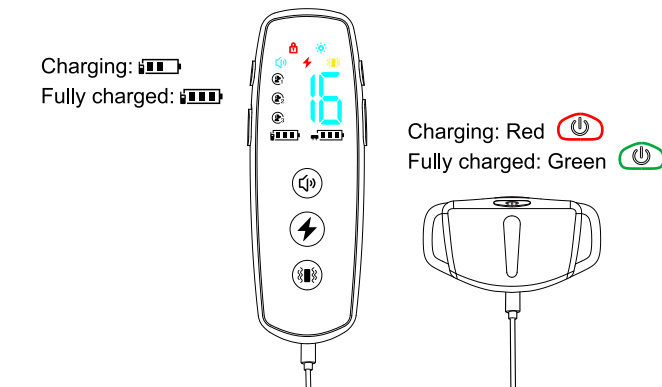

Charging: 🔋
Fully charged: 🔋

Charging: 🔋
Fully charged: 🔋

Low Battery Indicator:


- Transmitter: the transmitter battery icon (🔋) is flashing for 30s, then transmitter will be turned off automatically.
- Receiver: the receiver battery icon (🔋) will disappear after the receiver battery icon flashes for 30s, and the indicator red light flashes for 30s, then receiver will be turned off automatically.

-8-


Operation Instructions

1. Turn on/off the transmitter and receiver

- Turn on the transmitter: push down the key lock switch, the screen will light up, indicating that transmitter is in the working state.
- Lock the transmitter: push up the key lock switch, the lock key icon flashes, which means entering key lock mode.

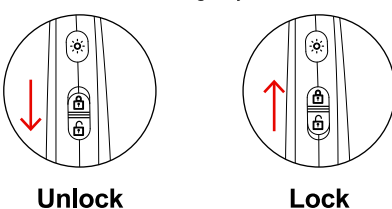


Unlock

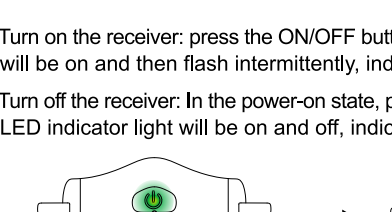


Lock

- Turn on the receiver: press the ON/OFF button, the green LED indicator light will be on and then flash intermittently, indicating it is turned on.
- Turn off the receiver: In the power-on state, press the ON/OFF button, the red LED indicator light will be on and off, indicating it is off.




turn on: Green light on → flash intermittently



turn off: Red light on → off

2. Operate beep function


- Short Press the (🔊) button to launch beep signal, the (🔊) is displayed on the screen, the Mode Indicator will light up Green once and the receiving collar will beep once after receiving the signal. Long press the (🔊) button, the Green light will remain on and the receiving collar will continuously beep.
- Press the button for more than 8s, the number icon and beep icon will flash, the receiver will automatically stop working to protect your dog and resume to work after 30 s.
- Adjust beep loudness: press the (+ -) button to adjust beep loudness from 1-9 levels.

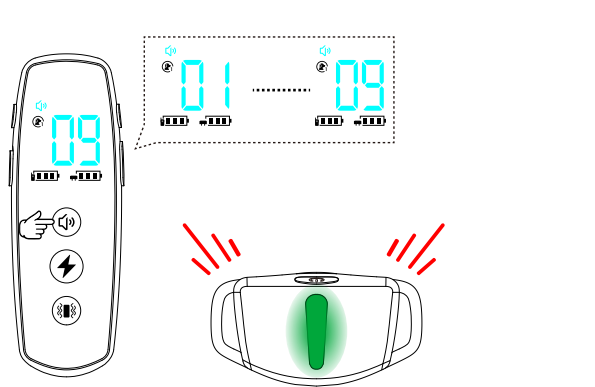

-9-

3. Operate Vibration Function


- Short press the (🔊) button to launch vibration signal, the (🔊) is displayed on the screen, the Mode Indicator will light up Blue once and the receiving collar vibrates once after receiving the signal. Long press the (🔊) button, the Blue light will remain on and the receiving collar continuously vibrates.
- Press the button for more than 8s, the number icon and vibration icon will flash, the receiver will automatically stop working to protect your dog and resume to work after 30s.
- Adjust vibration intensity: press the (+ -) button to adjust vibration intensity from 1-16 levels.

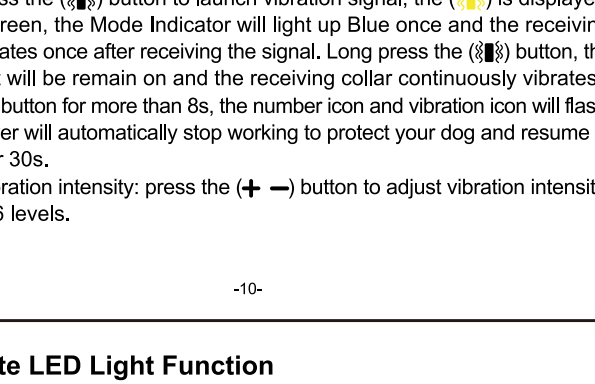

-10-

4. Operate Shock Function


- Short press the (🔊) button to launch shock signal, the (🔊) is displayed on the screen, the Mode Indicator will light up Red once and the receiving collar will generate static impulse once after receiving the signal. Long press the (🔊) button, the Red light will remain on and the receiving collar will continuously generate static impulse.
- Press the button for more than 8s, the number icon and shock icon will flash, the receiver will automatically stop working to protect your dog and resume to work after 30s.
- Adjust shock intensity: press the (+ -) button to adjust vibration intensity from 1-16 levels.

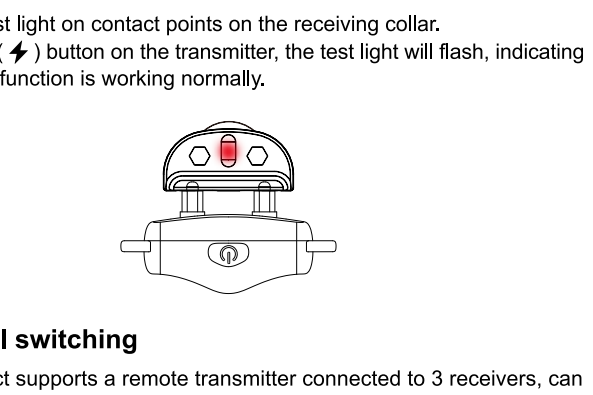

-11-

5. Operate LED Light Function

- Short Press the (🔊) button to turn on LED light mode for locating your dog at night, and the (🔊) is displayed on the screen.
- After the LED light mode is turned on, short press the (🔊) button, LED Mode Indicator will cycle through the following light modes:
1st press: Mode 0, light off
2nd press: Mode 1, red light steady on
3rd press: Mode 2, red light flashing
4th press: Mode 3, green light steady on
5th press: Mode 4, green light flashing
6th press: Mode 5, blue light steady on
7th press: Mode 6, blue light flashing

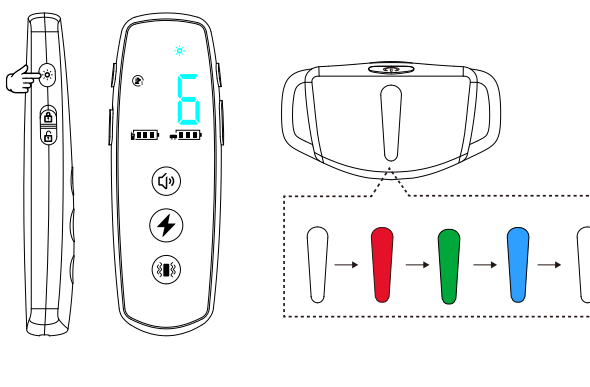


-12-

6. Use test light tool

The static impulse generated by the Receiving Collar cannot be seen by naked eyes. To test whether the Static Shock Function works, we need to use the test light tool.

- Put the test light on contact points on the receiving collar.
- Press the (🔊) button on the transmitter, the test light will flash, indicating the shock function is working normally.

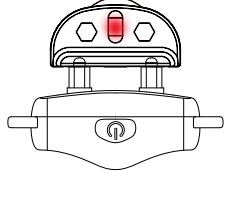


-13-

Receiver Fitting Instructions

Please ensure that the receiving collar is fitted correctly.

1. Center the Contact Points under your dog's neck(A).

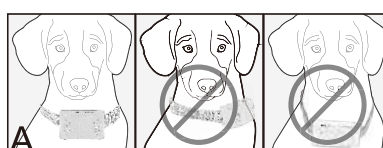


A

2. Please adjust the sliders to have the receiving collar positioned snugly around your dog's neck. Make sure that you can leave one liner between the strap and your dog's neck(B).



B

3. Choose the correct Contact Points to suit the length of your dog's hair. If your dog has long hair, use the longer Contact Points. Use Mini Spanner to screw/uncrew Contact Points. Remember installing the matching silicone caps to protect your dog's skin.

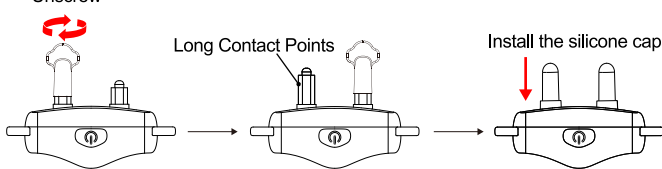

Unscrew
Long Contact Points
Install the silicone caps

-14-

Pairing Instructions


In the 1-receiving collar package, the receiver and transmitter are already factory-paired on CH1 by default. If you need to connect CH2/CH3 receiver, pls follow the steps below to pair with the transmitter. If not, you can skip this step.

1. Press the (🔑) button to choose CH2 or CH3.

2. In the power-on state, hold the ON/OFF button till Red and Green LED light flash alternately, which means it goes into pairing mode.

3. Press the (🔑) (🔒) button, If green LED light will flash intermittently, indicating that the pairing is successful.

4. If you enter the pairing mode and do not press the buttons within 10mins, the Red and Green LED light will change from flashing to off and then the Green LED light flash intermittently, it will exit pairing mode, and you need to follow step 3 to re-pair.

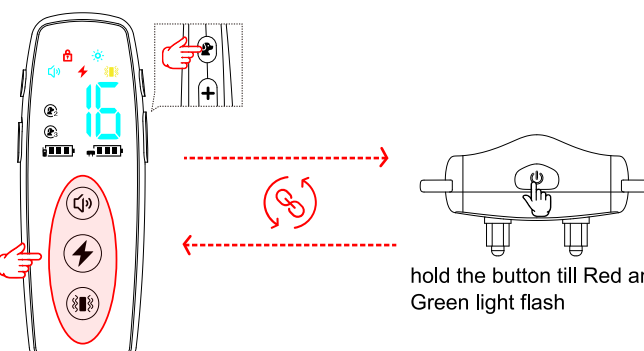

hold the button till Red and Green light flash

-15-

Frequently Asked Questions

Q1: Why don't the receiver and transmitter work?
A: One reason maybe the transmitter and receiver are not turned on, please refer to the manual for the power-on operation, the other reason maybe that the transmitter and receiver batteries are exhausted, please fully charge them.

Q2: Once my dog is trained and has learned to obey my commands, will he have to continue wearing the Receiving Collar?
A: Probably not, although you may need to reinforce the training with the Receiving Collar from time to time.

Q3: Is the Receiving Collar waterproof?
A: Yes, In fact, your dog can swim while wearing the Receiving Collar. Must seal well the charging port tightly, and keep it dry after getting wet.

Q4: What is the lifespan of the lithium batteries?
A: The Lithium battery in the Remote Transmitter and the Receiving Collar can be charged for 400 times.

Q5: How long should the training session for my dog be?
A: The training sessions should be kept short for maximum effectiveness. It's advised not to train your dog for more than 10-15mins at a time.

Q6: Can I charge this product with any type of charger?
A: No, we recommend using a matching charging adapter or charging adapter rated at 5V/500-1000mA because a charging adapter rated at 9V or 12V may damage to your device.

-16-

Troubleshooting

I have fitted the Rechargeable and Waterproof Training Collar correctly, but my dog is not responding.

- Ensure that the batteries are fully charged. You need to charge both the Remote Transmitter and the Receiving Collar for about 2.5 hours before they can be used for the first time.
- Check the receiving collar is turned on. Restart the Receiving collar by pressing the On/Off button.
- Check the Remote Transmitter can adjust the intensity level of the vibration or static shock to higher level more than level 1.
- Test the 3 functions (Beep, Vibration and Static Shock) before using the Receiving Collar for the first time. Please refer to page 9 for instructions on how to do this.
- The Receiving collar will go into Standby Mode if it is idle for more than 5 minutes. Any movements will re-activate it.
- Make sure that the Contact Points are touching your dog's skin.
- Trim your dog's fur where the Contact Points touch the neck. Ensure that you are using the correct set of Contact Points suitable for the length of your dog's fur.
- Verify the receiving collar has been paired.
- If none of the above works, Pair the Remote Transmitter and the Receiving Collar again. Refer to pairing instructions to repair.

The Remote Transmitter does not work

- You must charge the Remote Transmitter before you use it for the first time. Charging time is typically 2.5 hours.
- Ensure that the Remote Transmitter has adequate power.
- Check the Remote Transmitter is turned on.
- Remote Transmitter will automatically go into Standby Mode if it is idle for 3mins. No LED light will be illuminated at this time. Press any button to re-activate the Transmitter.

I am trying to test the Receiving Collar manually, but it does not work.

- If you want to test the Receiving Collar manually on your hand or leg, please touch the 2 Contact Points simultaneously. Touching only one of the Contact Points will not work.

The Receiving Collar is broken. It has not worked since I dropped it.

- The Receiving Collar is not designed to be drop-proof. Please do not drop the Receiving Collar, as this will damage the interior circuits.

-17-

Training Tips

Here are some general tips for training your dog:

- Eliminate one behavioral problem or teach one command at a time. If you move too fast with the training, your dog may become confused. Be consistent. Give your dog a single Beep, Vibration, or Static Shock for each misbehavior.
- Do not over-correct your dog. Use a few stimulation as possible during training.
- Unless you can supervise him/her, it is recommended that you restrain your dog from environments in which he/she has a history of misbehaving. However, setting up a training session in this case can dramatically improve your chances of success.
- If your dog reacts to the training by hiding or acting fearfully, redirect his/her attention to a simple and appropriate behavior, such as the "Sit" command.

-18-

Common Weights for Different Size Dogs

Large Dogs(Body height over 61cm, weight over 88lbs)

Medium Dogs(Height 40.7-61cm, Weight 24-88lbs)

Small Dogs(Height 25.5-40.7cm, Weight 8-22lbs)

Mini Dogs(Height under 25cm, Weight under 8lbs)

-19-

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

-20-