


RF Test Data


Duty Cycle	2
Maximum Peak Conducted Output Power	8
-20dB Bandwidth	14
Occupied Channel Bandwidth	20
Carrier Frequencies Separation	26
Number of Hopping Channel	32
Band Edge	38
Band Edge(Hopping)	45
Conducted RF Spurious Emission	52
Dwell Time	62

Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	1-DH1	2402	Ant1	30.12	5.21	2.66
NVNT	1-DH1	2441	Ant1	30.08	5.22	2.66
NVNT	1-DH1	2480	Ant1	30.08	5.22	2.66
NVNT	2-DH1	2402	Ant1	30.88	5.1	2.59
NVNT	2-DH1	2441	Ant1	30.92	5.1	2.59
NVNT	2-DH1	2480	Ant1	30.88	5.1	2.59
NVNT	3-DH1	2402	Ant1	30.96	5.09	2.58
NVNT	3-DH1	2441	Ant1	30.96	5.09	2.58
NVNT	3-DH1	2480	Ant1	13.35	8.74	7.52

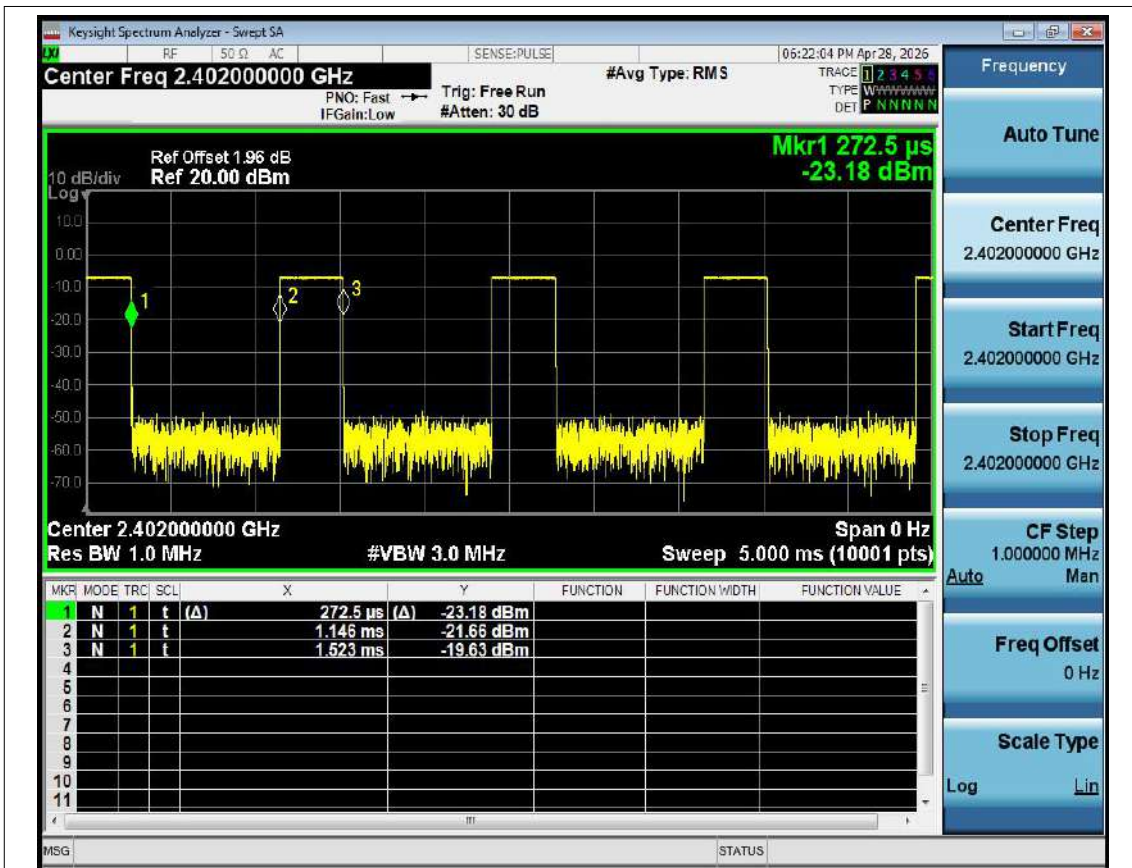


Duty Cycle NVNT 1-DH1 2402MHz Ant1

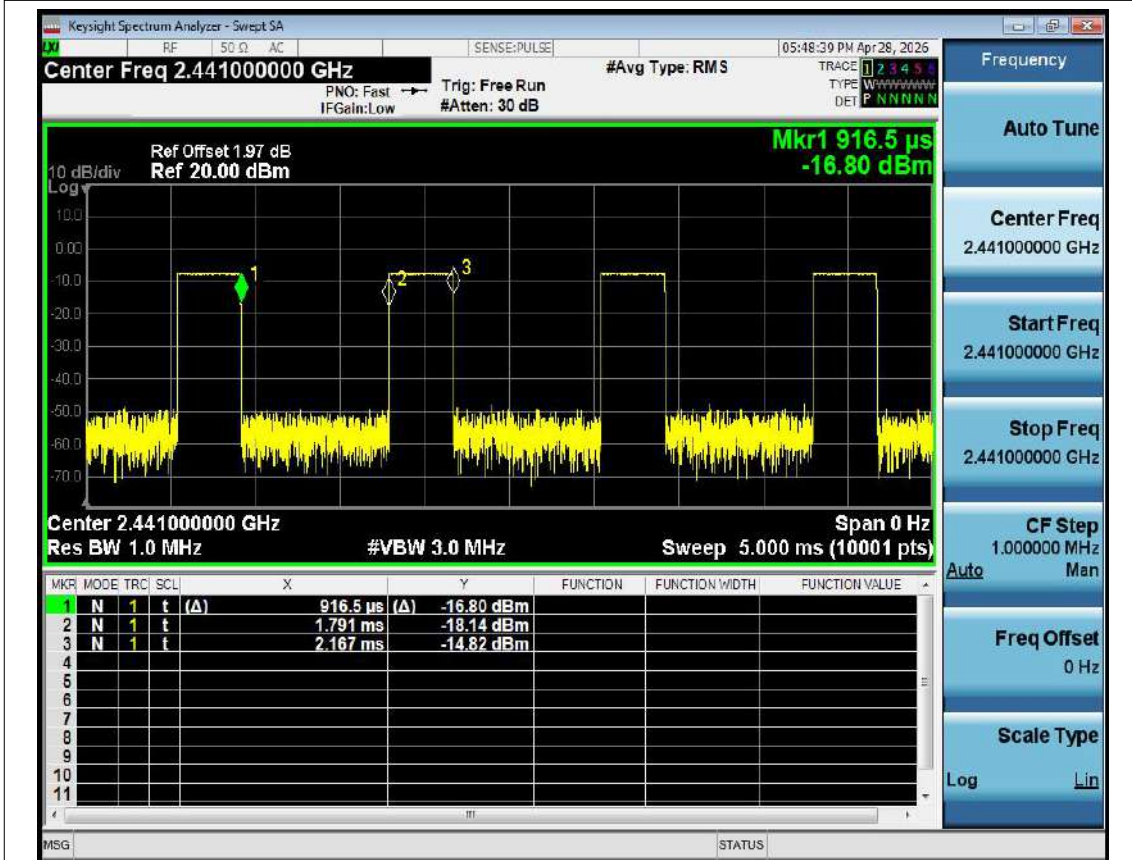


Duty Cycle NVNT 1-DH1 2441MHz Ant1

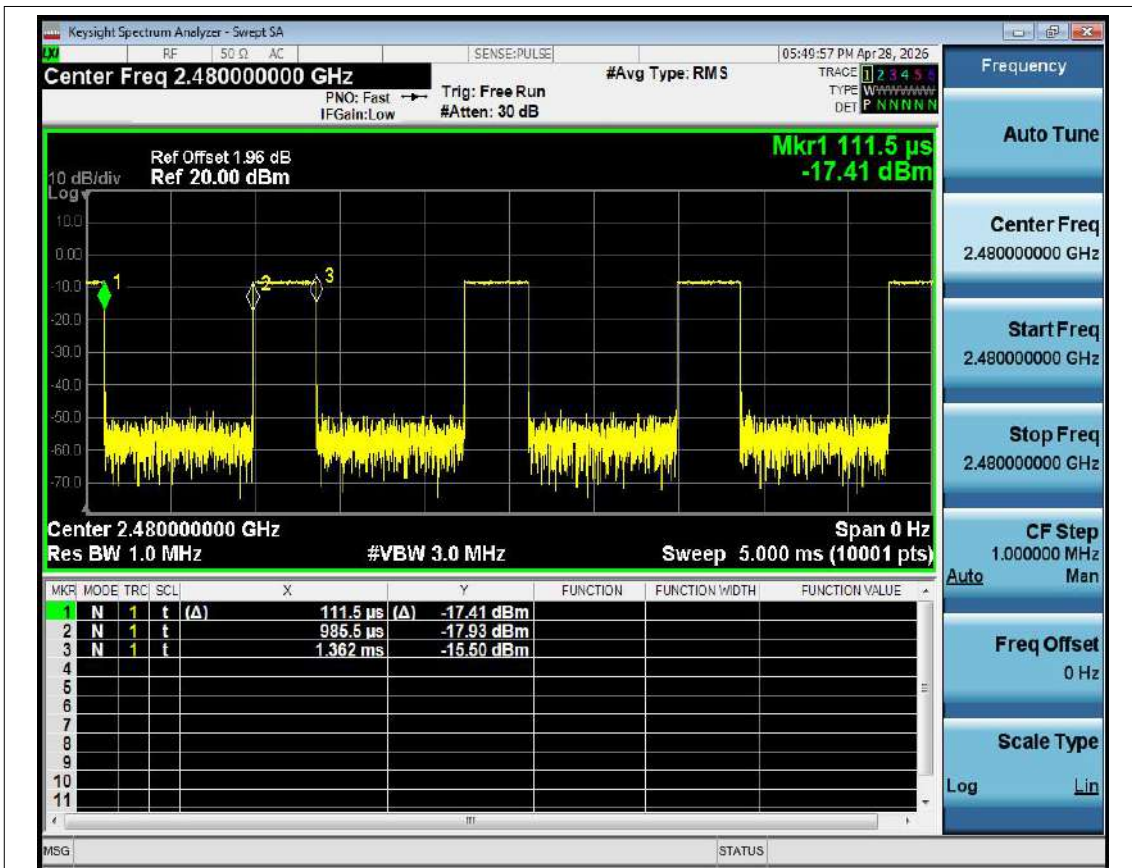


Duty Cycle NVNT 1-DH1 2480MHz Ant1

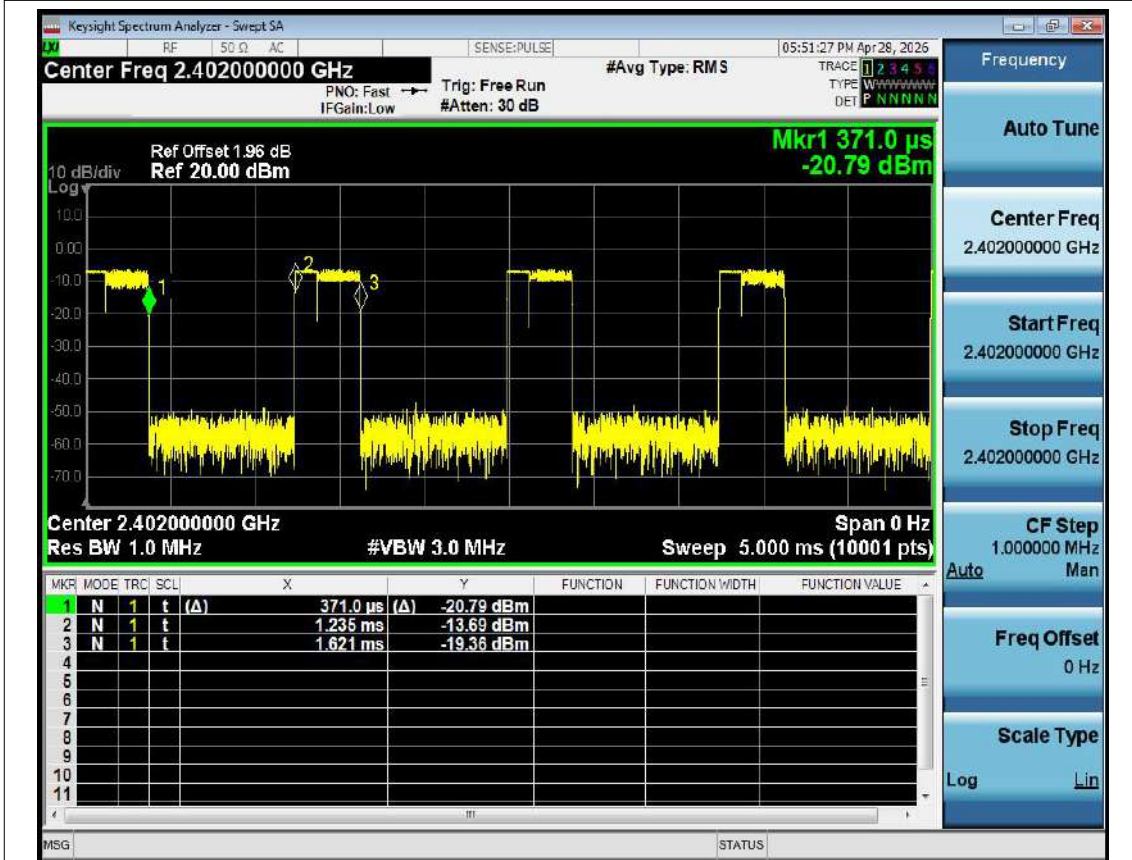


Duty Cycle NVNT 2-DH1 2402MHz Ant1

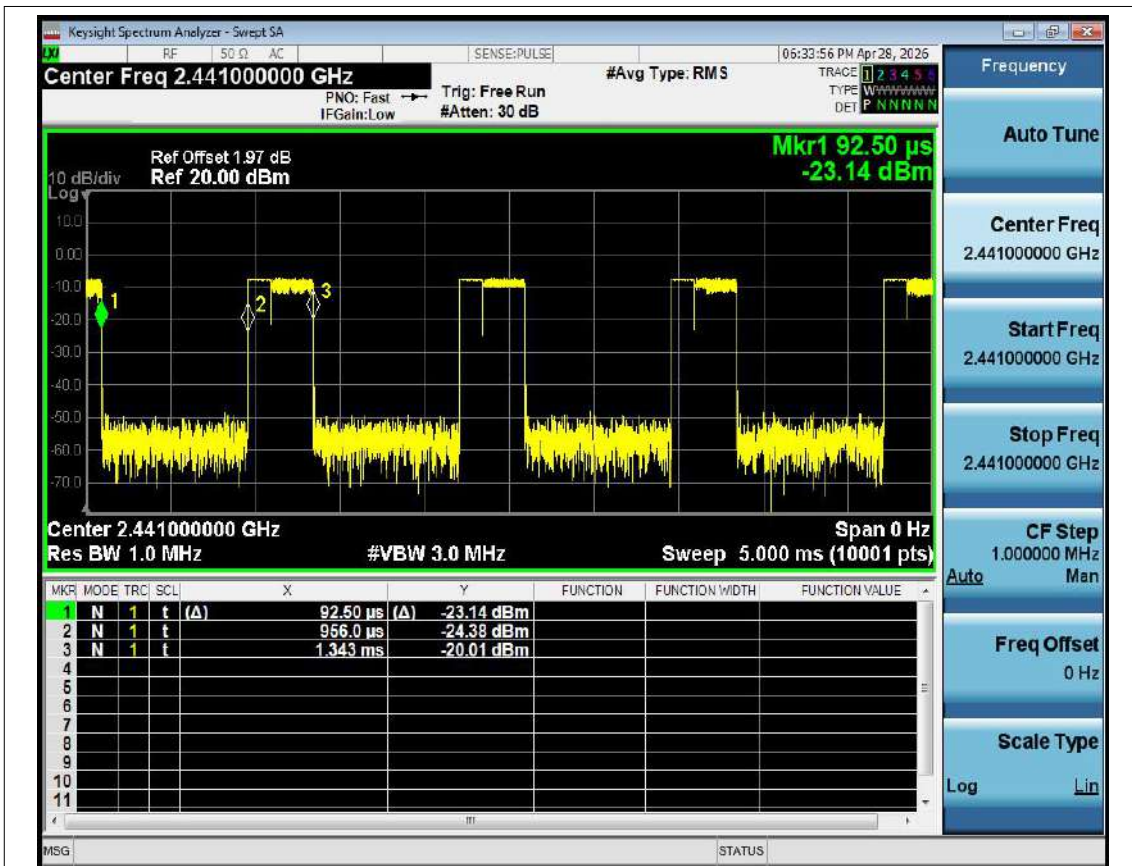


Duty Cycle NVNT 2-DH1 2441MHz Ant1

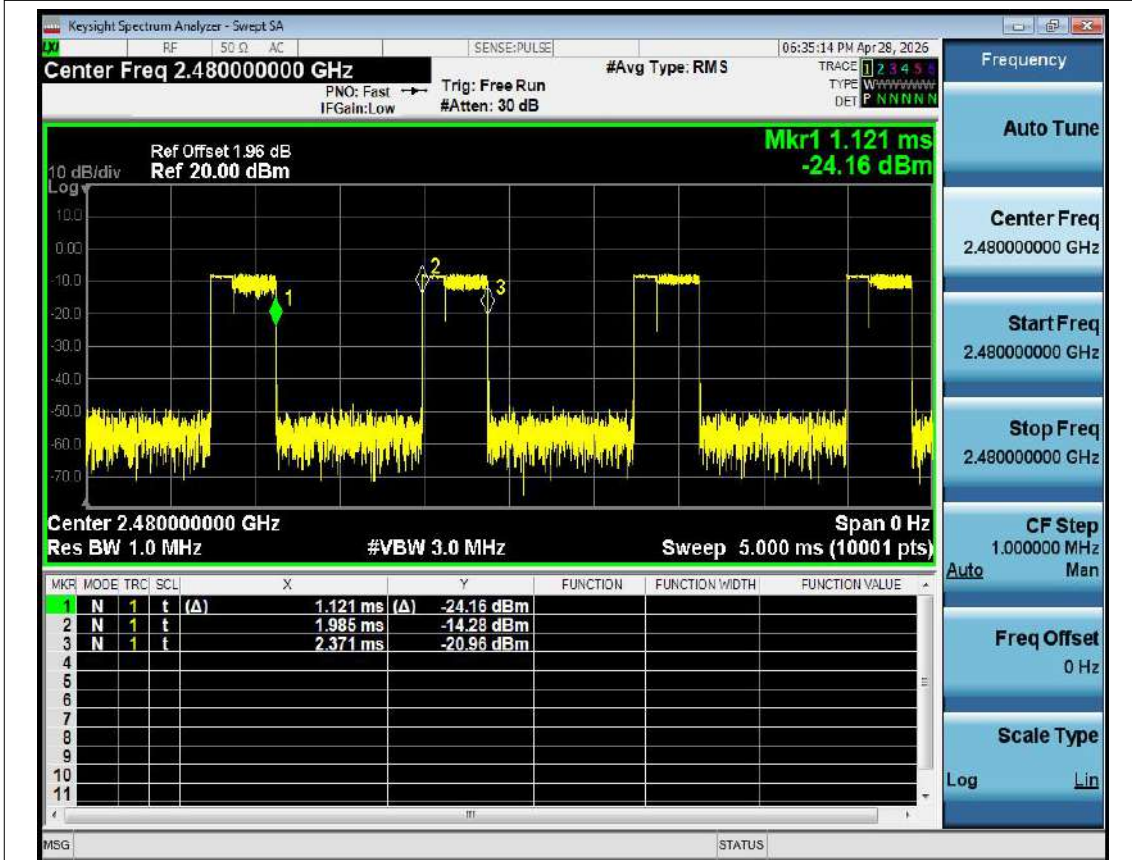


Duty Cycle NVNT 2-DH1 2480MHz Ant1

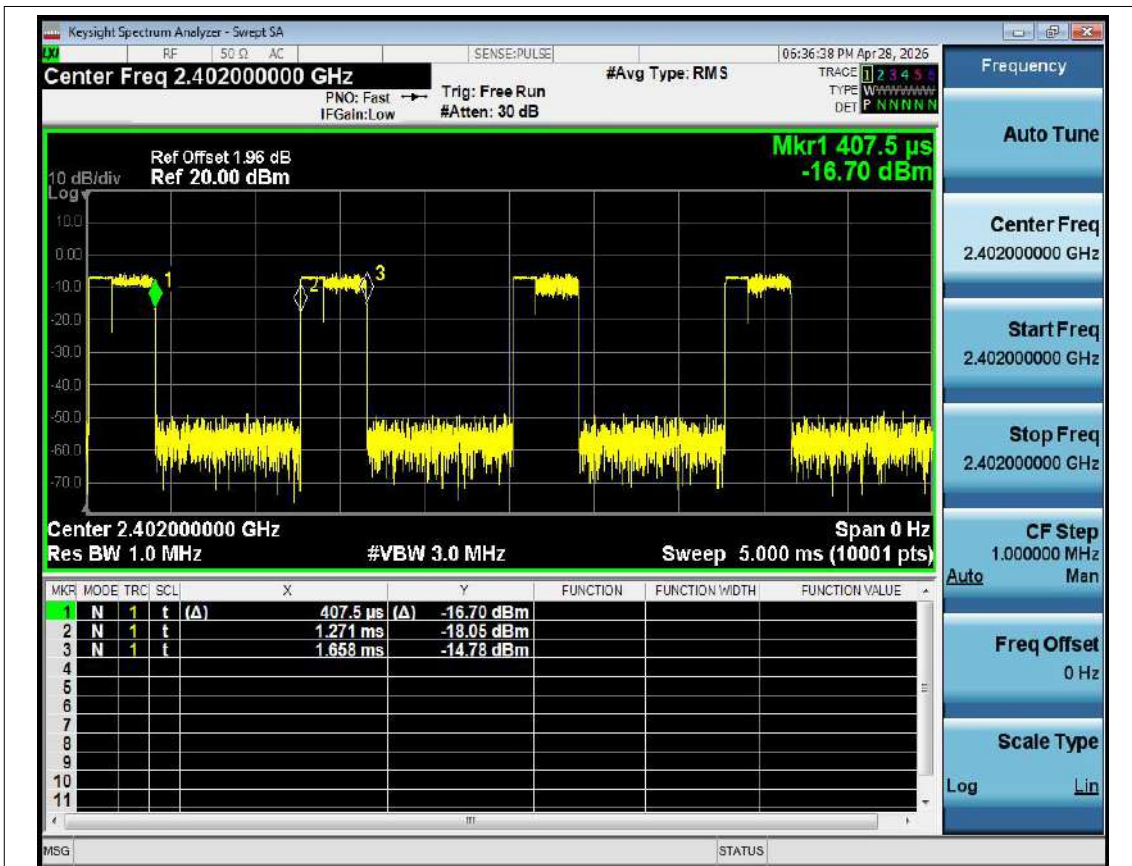

Duty Cycle NVNT 3-DH1 2402MHz Ant1

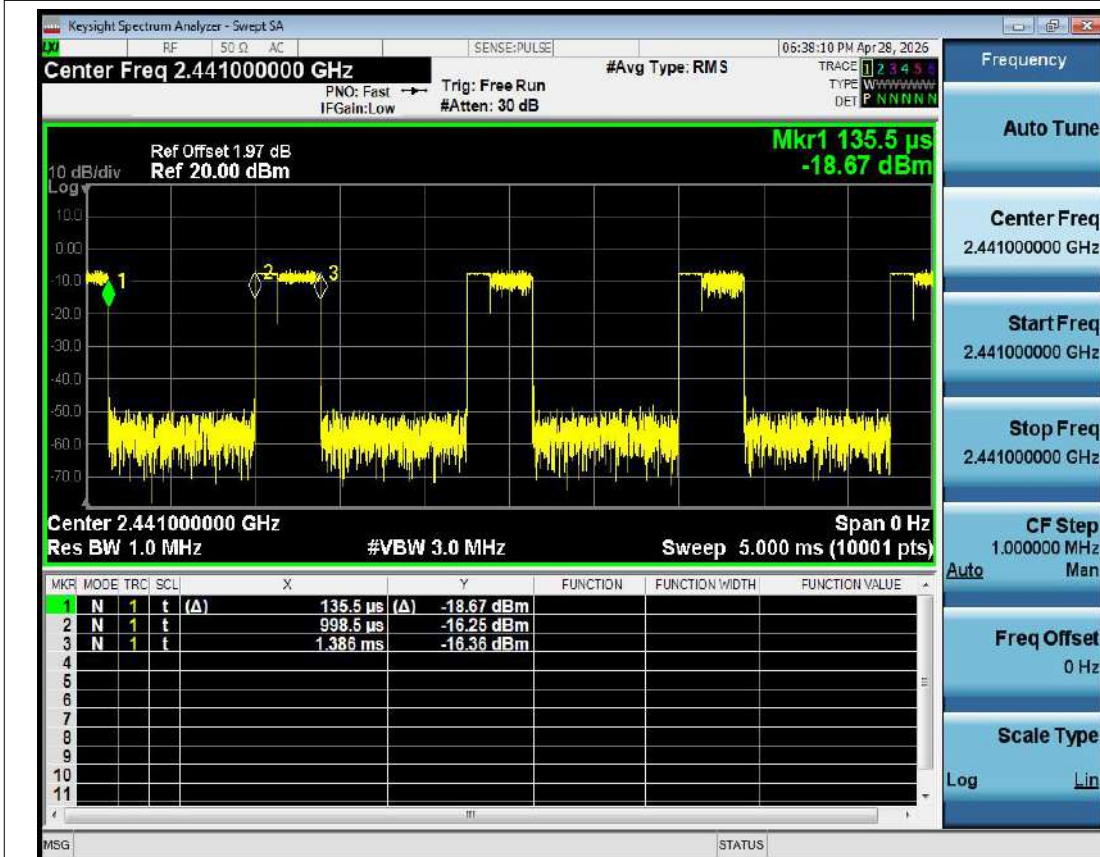

Duty Cycle NVNT 3-DH1 2441MHz Ant1

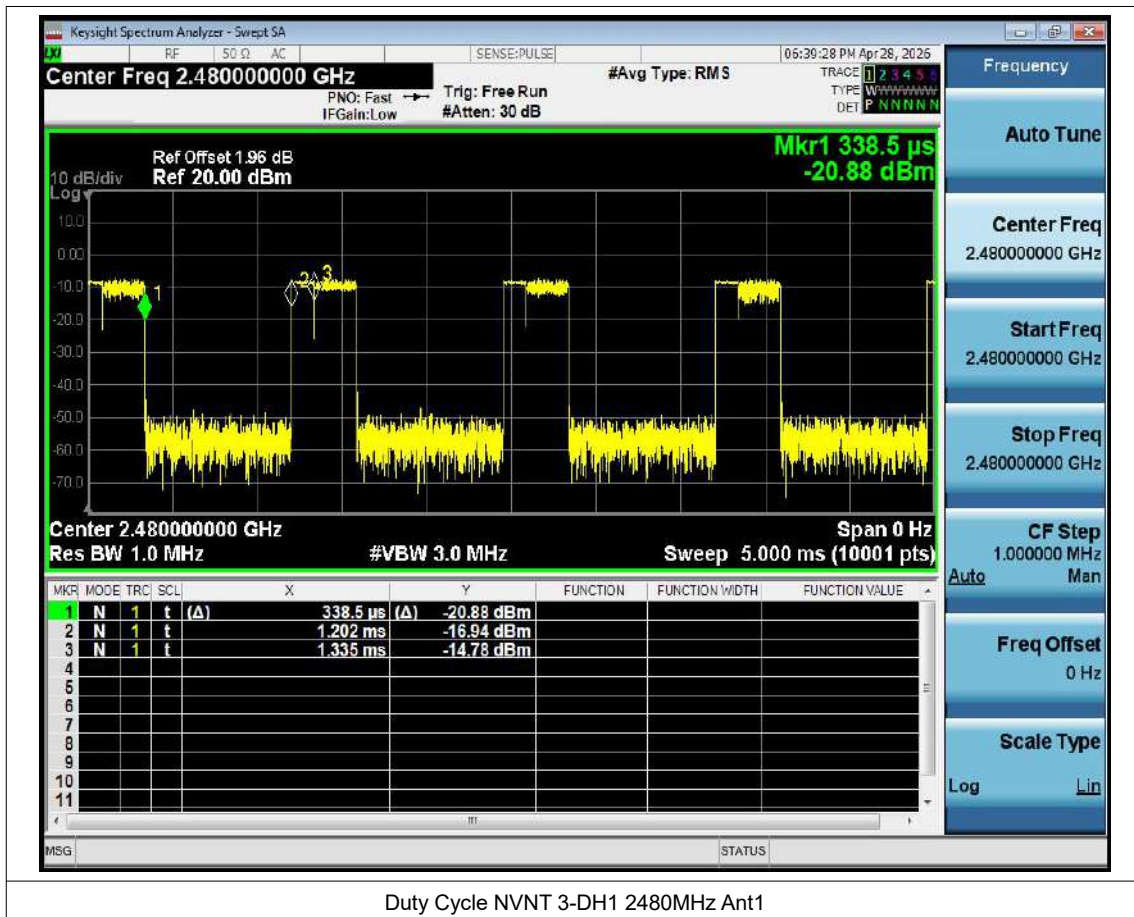

Maximum Peak Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Total Conducted Power (W)	Limit Conducted(dBm)	Verdict
NVNT	1-DH1	2402	Ant1	-2.1	0.00062	21	Pass
NVNT	1-DH1	2441	Ant1	-2.71	0.00054	21	Pass
NVNT	1-DH1	2480	Ant1	-3.42	0.00045	21	Pass
NVNT	2-DH1	2402	Ant1	-1.31	0.00074	21	Pass
NVNT	2-DH1	2441	Ant1	-1.9	0.00065	21	Pass
NVNT	2-DH1	2480	Ant1	-2.62	0.00055	21	Pass
NVNT	3-DH1	2402	Ant1	-0.81	0.00083	21	Pass
NVNT	3-DH1	2441	Ant1	-1.28	0.00074	21	Pass
NVNT	3-DH1	2480	Ant1	-1.99	0.00063	21	Pass




Peak Power NVNT 1-DH1 2402MHz Ant1




Peak Power NVNT 1-DH1 2441MHz Ant1




Peak Power NVNT 1-DH1 2480MHz Ant1

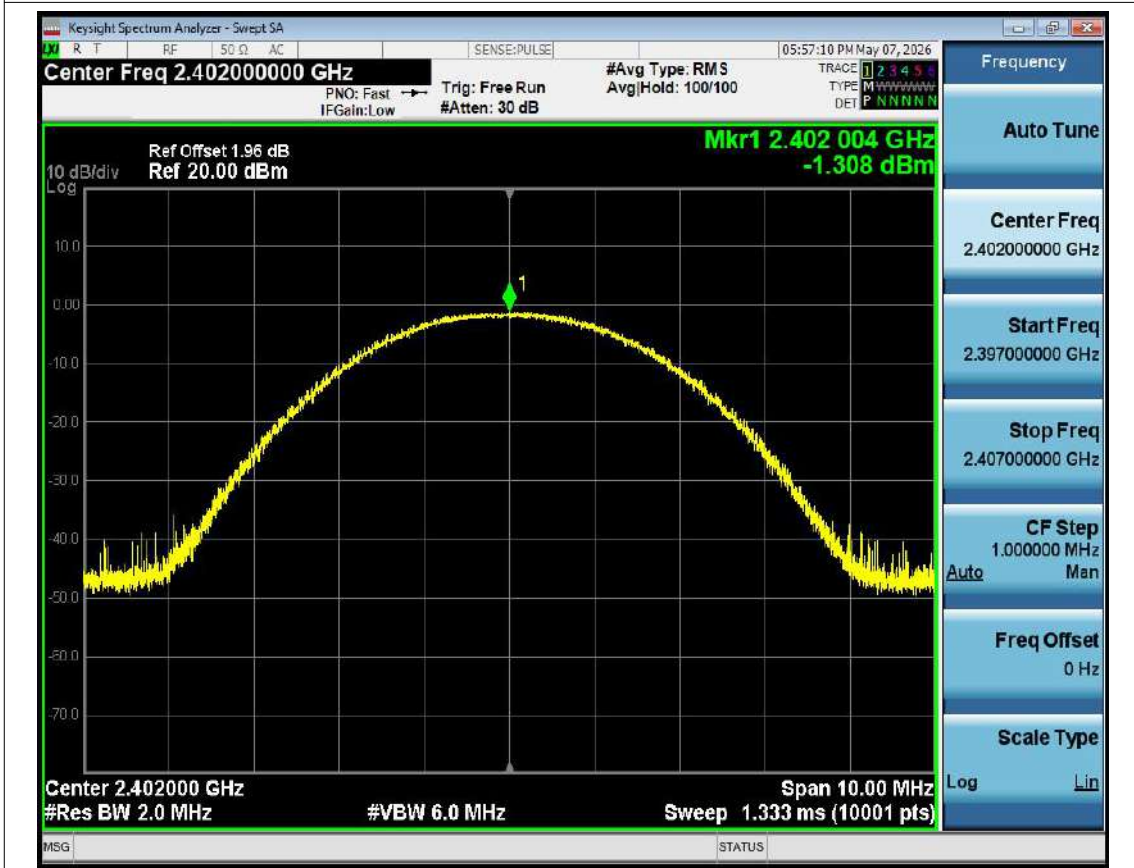

Peak Power NVNT 2-DH1 2402MHz Ant1

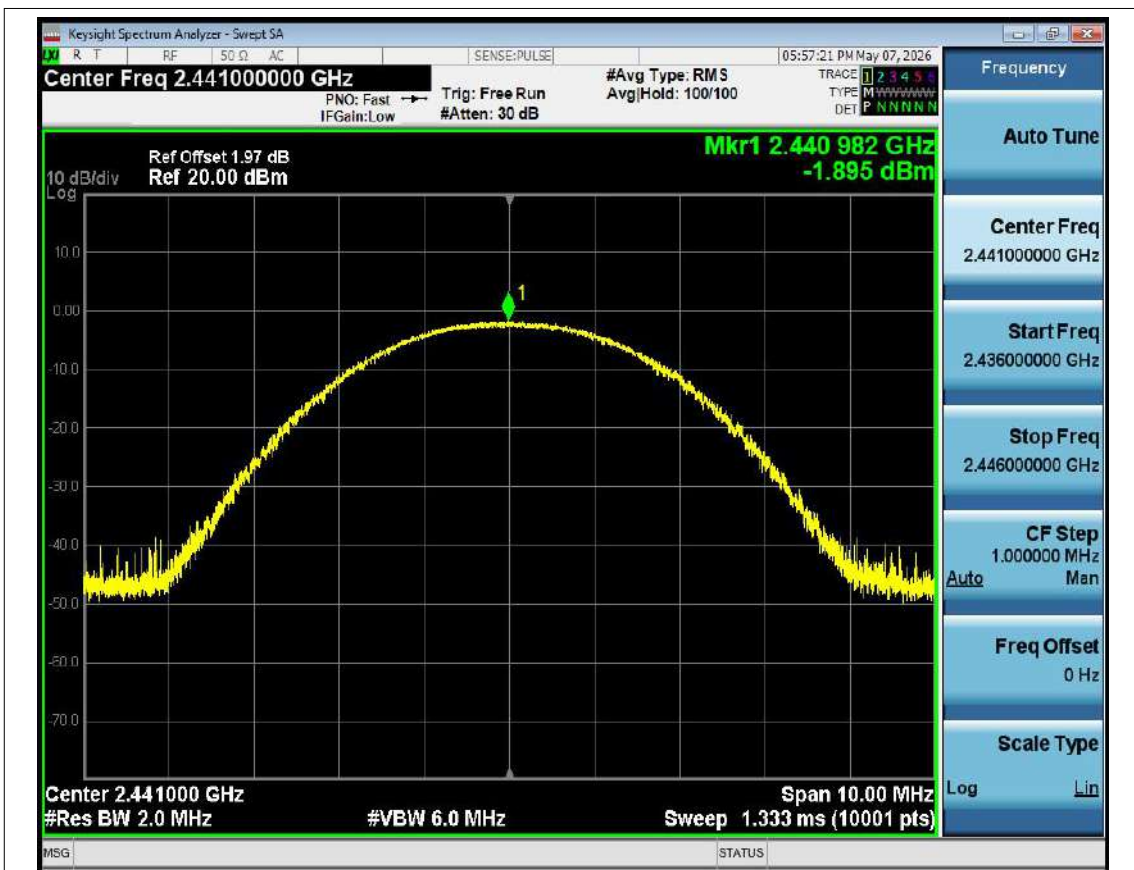

Peak Power NVNT 2-DH1 2441MHz Ant1

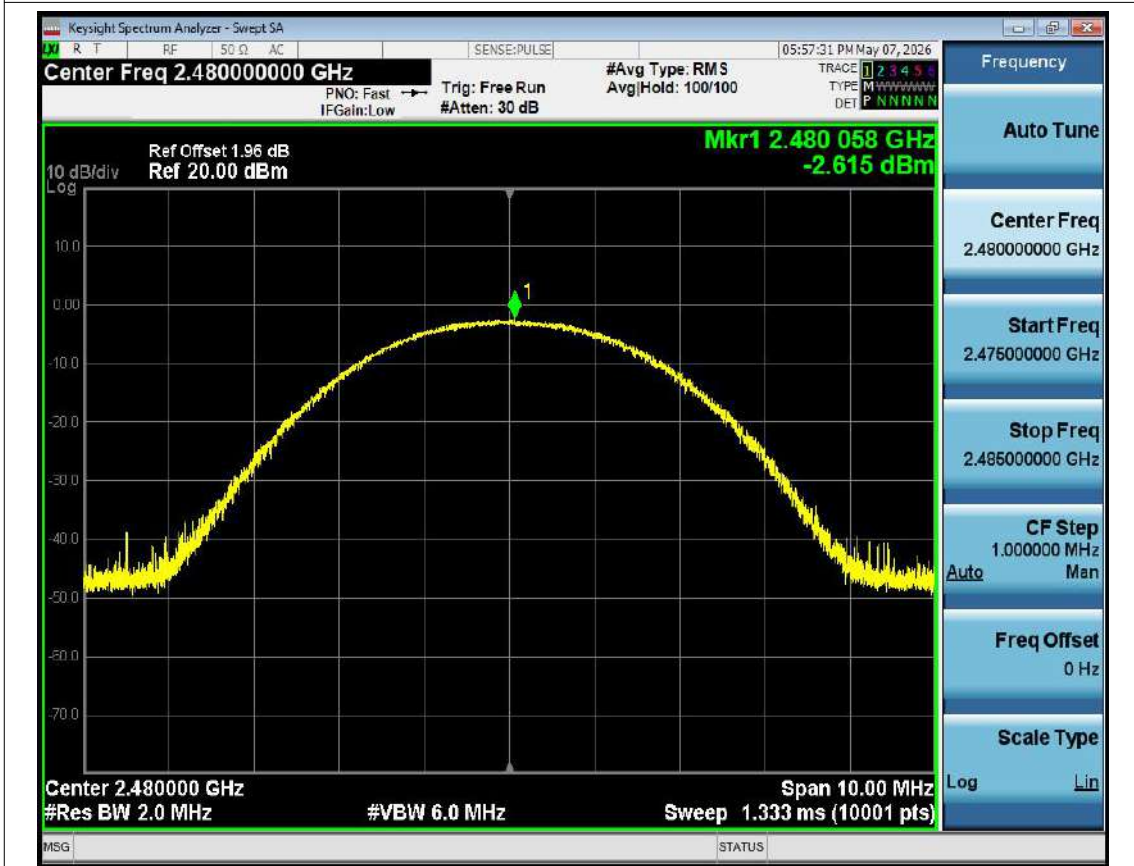


Peak Power NVNT 2-DH1 2480MHz Ant1



Peak Power NVNT 3-DH1 2402MHz Ant1



Peak Power NVNT 3-DH1 2441MHz Ant1

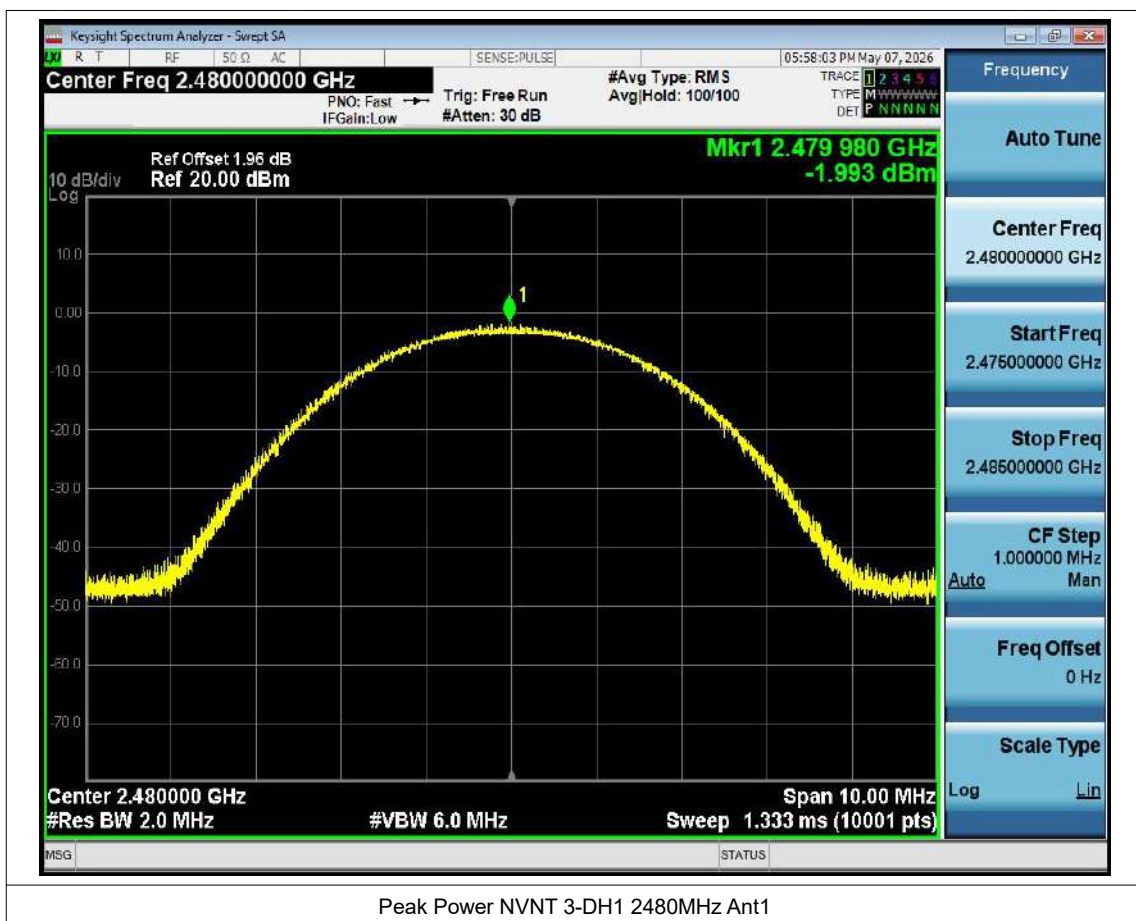

-20dB Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	-20 dB Bandwidth (MHz)	Limit -20 dB Bandwidth (MHz)	Verdict
NVNT	1-DH1	2402	Ant1	0.9319	0	Pass
NVNT	1-DH1	2441	Ant1	0.9349	0	Pass
NVNT	1-DH1	2480	Ant1	0.9899	0	Pass
NVNT	2-DH1	2402	Ant1	1.273	0	Pass
NVNT	2-DH1	2441	Ant1	1.278	0	Pass
NVNT	2-DH1	2480	Ant1	1.265	0	Pass
NVNT	3-DH1	2402	Ant1	1.216	0	Pass
NVNT	3-DH1	2441	Ant1	1.252	0	Pass
NVNT	3-DH1	2480	Ant1	1.234	0	Pass



-20dB Bandwidth NVNT 1-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 1-DH1 2441MHz Ant1



-20dB Bandwidth NVNT 1-DH1 2480MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2441MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2480MHz Ant1



-20dB Bandwidth NVNT 3-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 3-DH1 2441MHz Ant1



Occupied Channel Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	1-DH1	2402	Ant1	0.84723
NVNT	1-DH1	2441	Ant1	0.82913
NVNT	1-DH1	2480	Ant1	0.85319
NVNT	2-DH1	2402	Ant1	1.176
NVNT	2-DH1	2441	Ant1	1.1788
NVNT	2-DH1	2480	Ant1	1.1529
NVNT	3-DH1	2402	Ant1	1.1745
NVNT	3-DH1	2441	Ant1	1.1675
NVNT	3-DH1	2480	Ant1	1.1533



OBW NVNT 1-DH1 2402MHz Ant1



OBW NVNT 1-DH1 2441MHz Ant1



OBW NVNT 1-DH1 2480MHz Ant1



OBW NVNT 2-DH1 2402MHz Ant1



OBW NVNT 2-DH1 2441MHz Ant1



OBW NVNT 2-DH1 2480MHz Ant1



OBW NVNT 3-DH1 2402MHz Ant1



OBW NVNT 3-DH1 2441MHz Ant1



Carrier Frequencies Separation

Condition	Mode	Antenna	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH1	Ant1	2401.922	2402.992	1.07	0.621	Pass
NVNT	1-DH1	Ant1	2441.068	2442.004	0.936	0.623	Pass
NVNT	1-DH1	Ant1	2479.016	2479.992	0.976	0.66	Pass
NVNT	2-DH1	Ant1	2401.986	2403.006	1.02	0.849	Pass
NVNT	2-DH1	Ant1	2440.99	2441.998	1.008	0.852	Pass
NVNT	2-DH1	Ant1	2478.998	2479.992	0.994	0.843	Pass
NVNT	3-DH1	Ant1	2402.006	2403	0.994	0.811	Pass
NVNT	3-DH1	Ant1	2441.004	2441.992	0.988	0.835	Pass
NVNT	3-DH1	Ant1	2478.982	2479.994	1.012	0.823	Pass



CFS NVNT 1-DH1 2402MHz Ant1



CFS NVNT 1-DH1 2441MHz Ant1



CFS NVNT 1-DH1 2480MHz Ant1



CFS NVNT 2-DH1 2402MHz Ant1



CFS NVNT 2-DH1 2441MHz Ant1




CFS NVNT 2-DH1 2480MHz Ant1



CFS NVNT 3-DH1 2402MHz Ant1




CFS NVNT 3-DH1 2441MHz Ant1

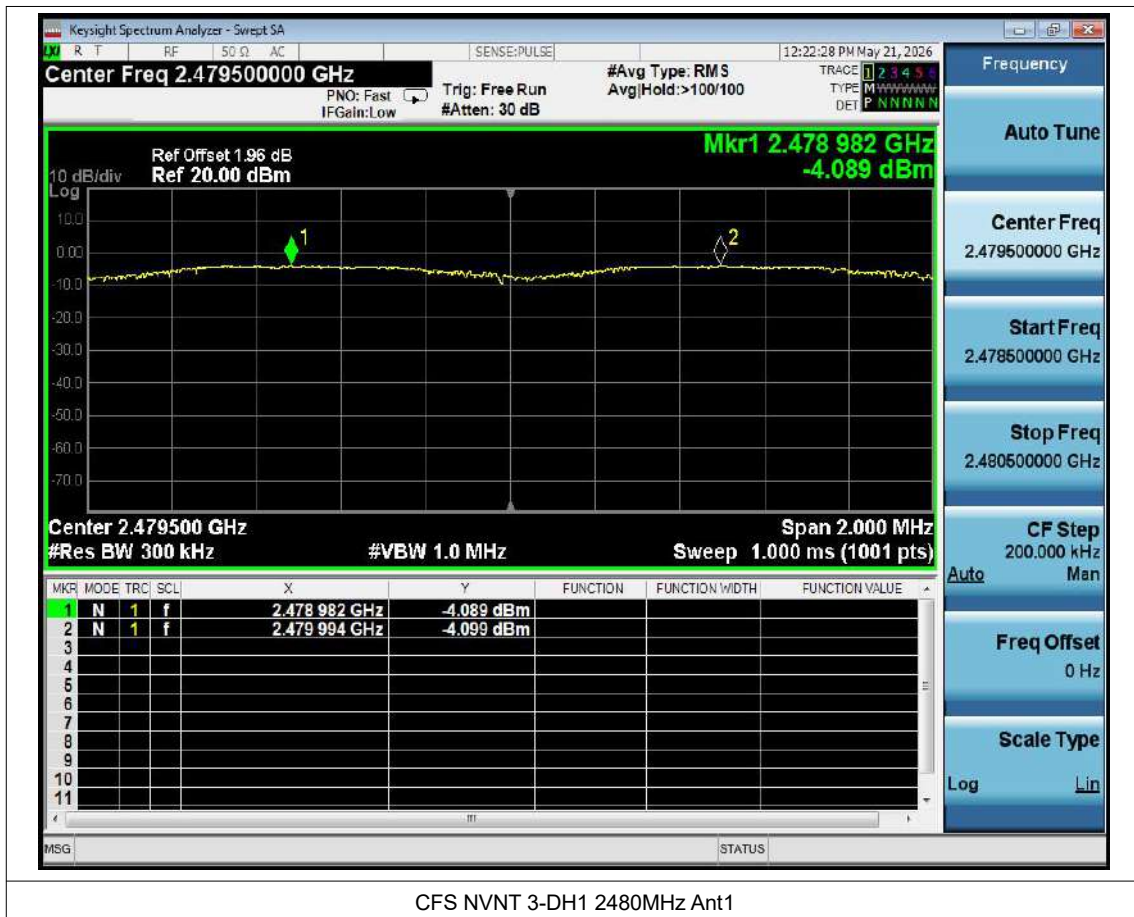


Number of Hopping Channel


Condition	Mode	Antenna	Hopping Number	Limit	Verdict
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass

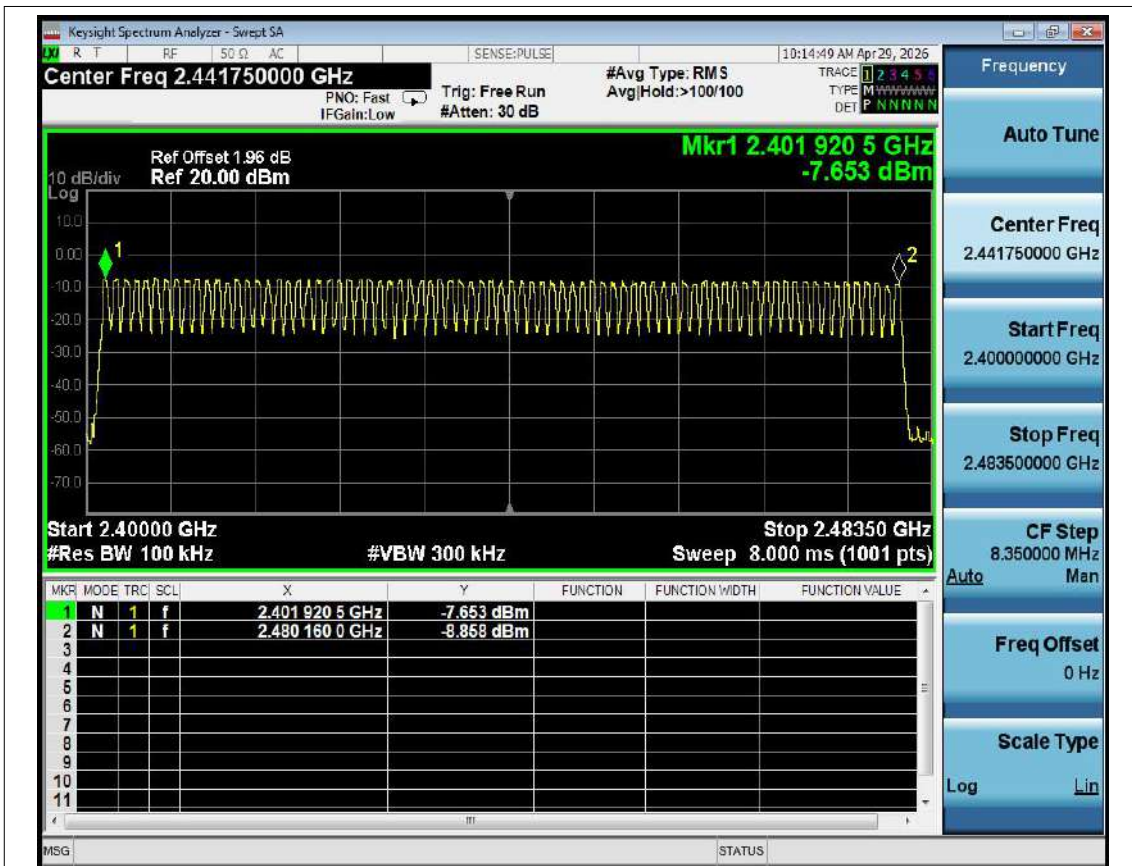


Hopping No. NVNT 1-DH1 2402MHz Ant1

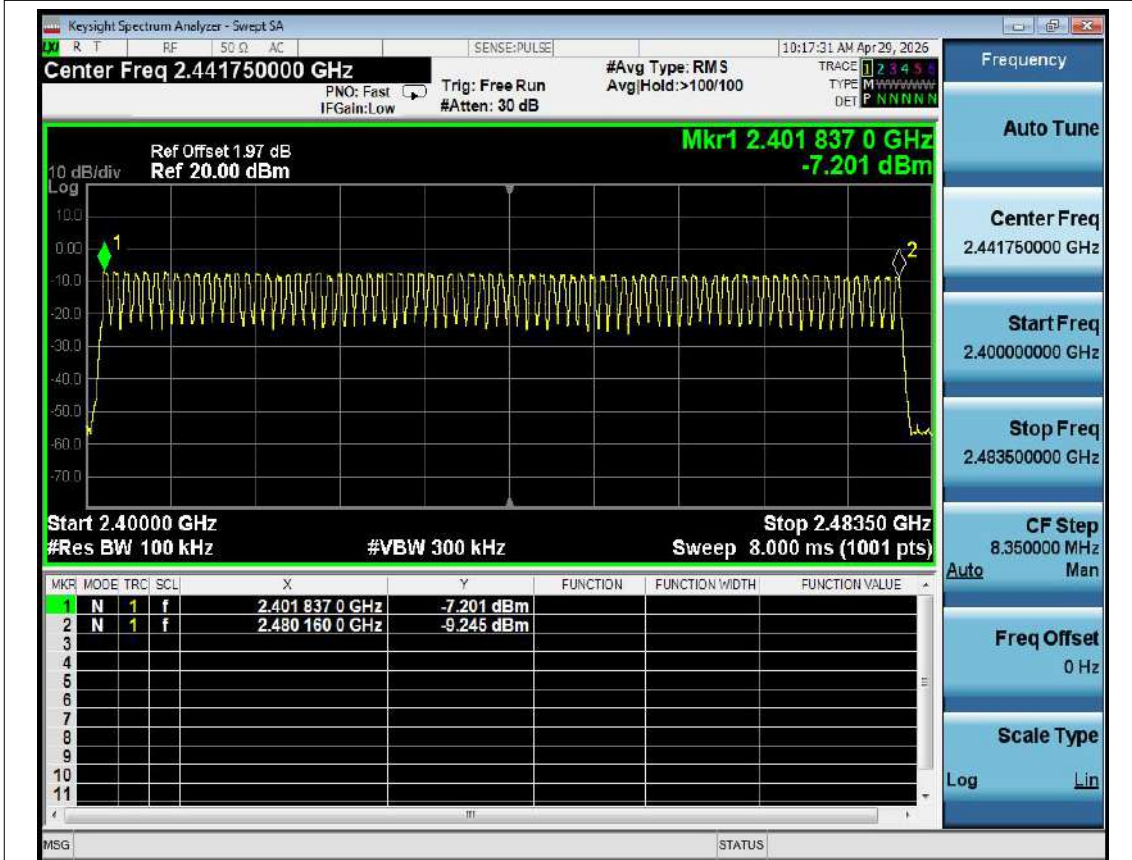


Hopping No. NVNT 1-DH1 2441MHz Ant1

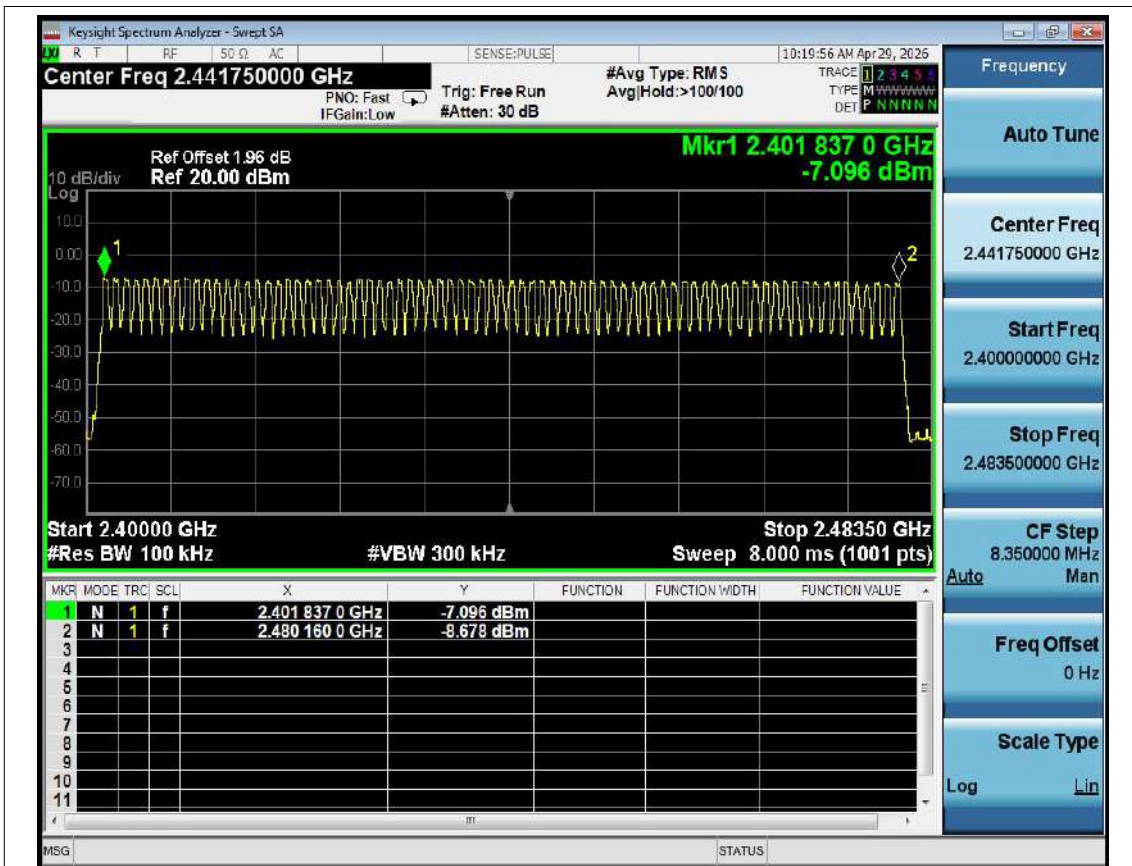


Hopping No. NVNT 1-DH1 2480MHz Ant1

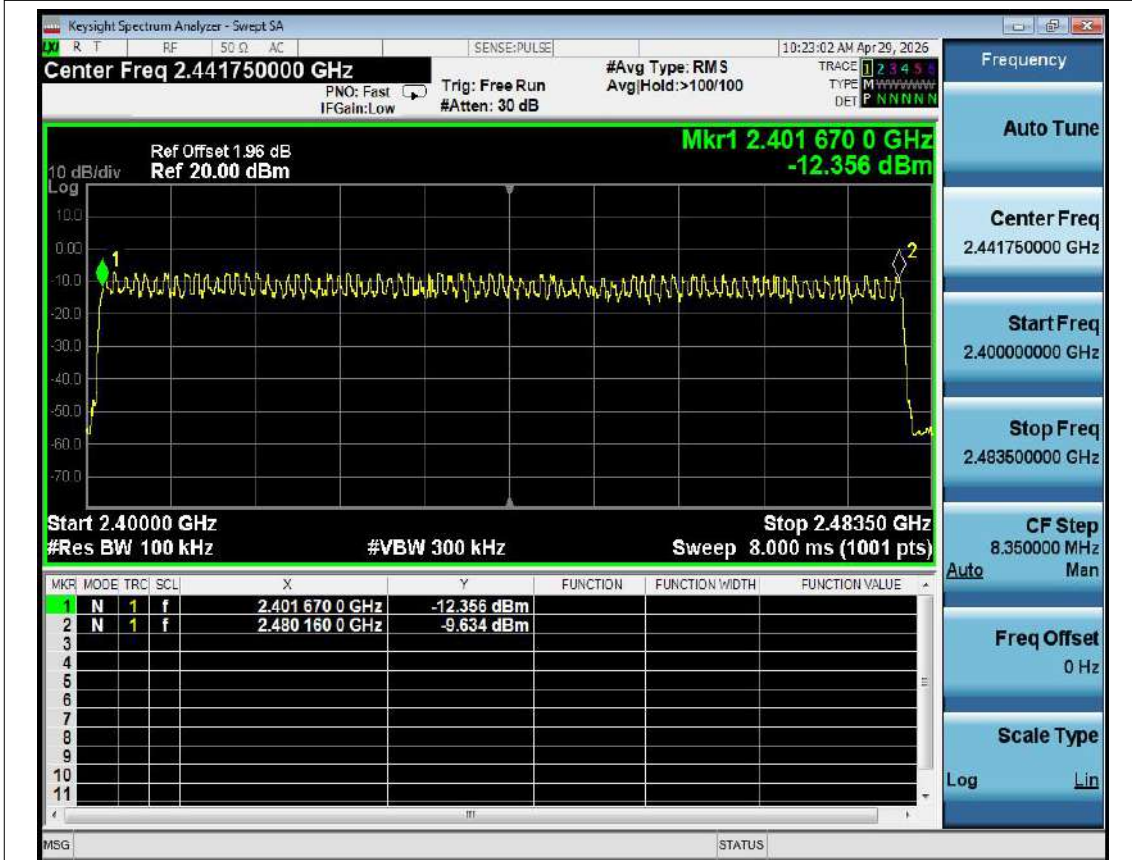


Hopping No. NVNT 2-DH1 2402MHz Ant1

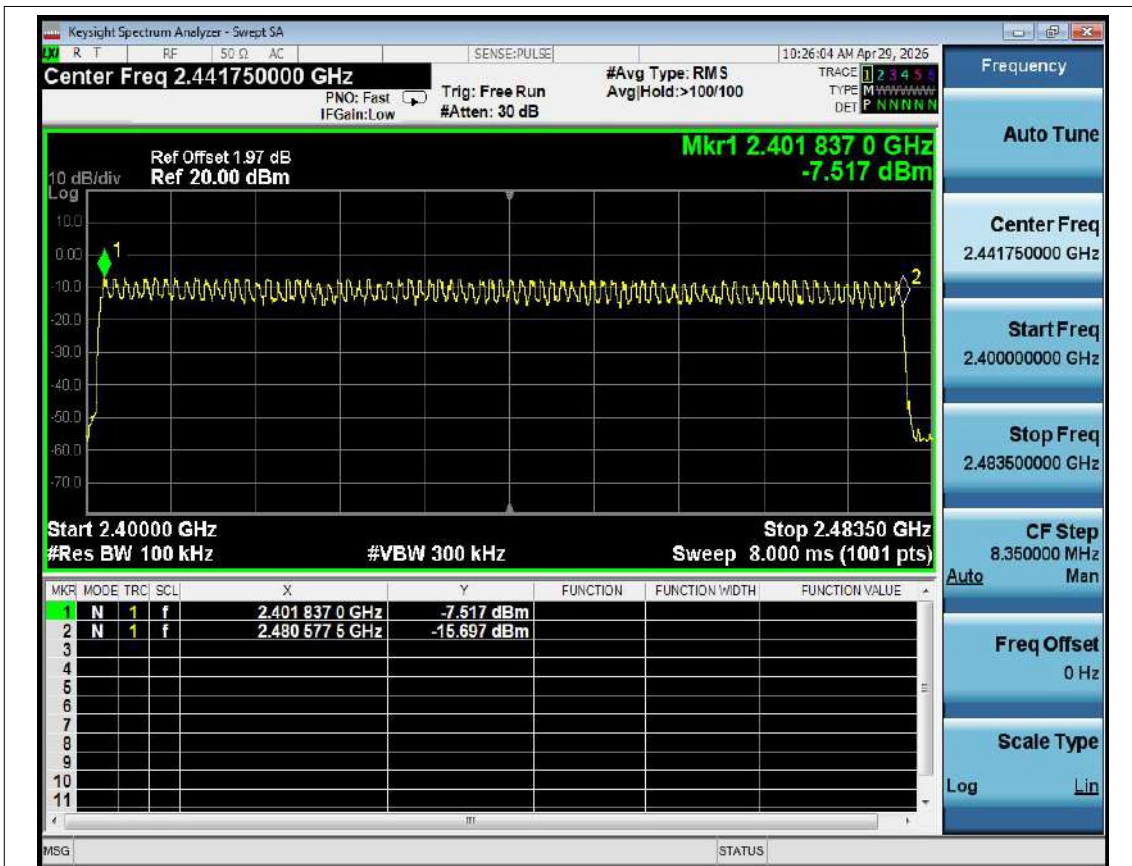


Hopping No. NVNT 2-DH1 2441MHz Ant1

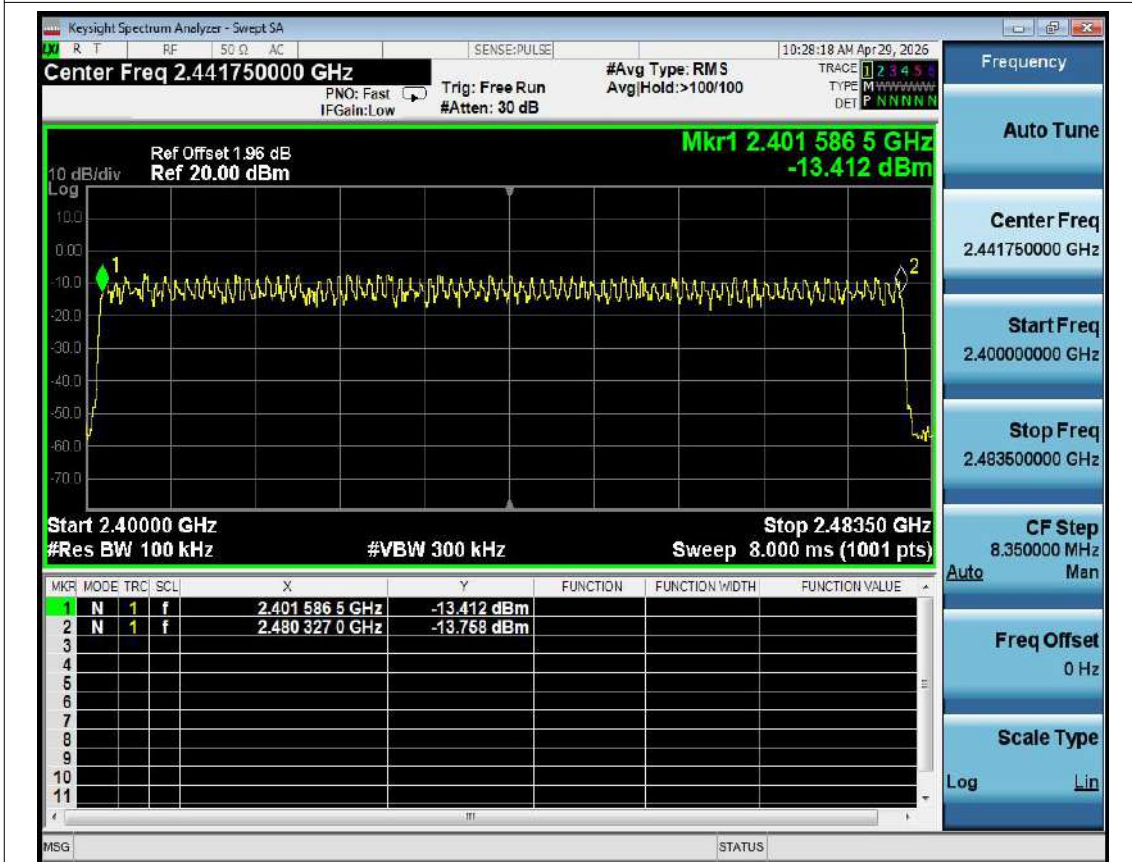

Hopping No. NVNT 2-DH1 2480MHz Ant1

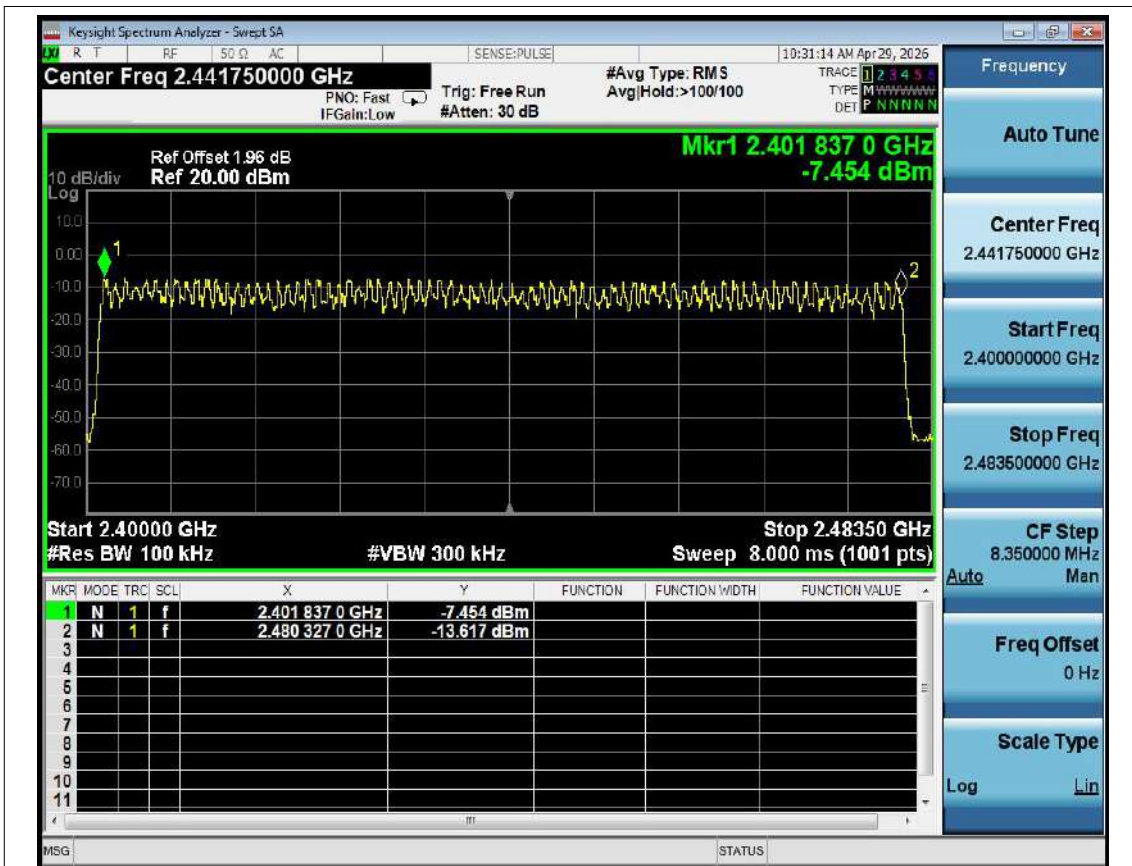

Hopping No. NVNT 3-DH1 2402MHz Ant1

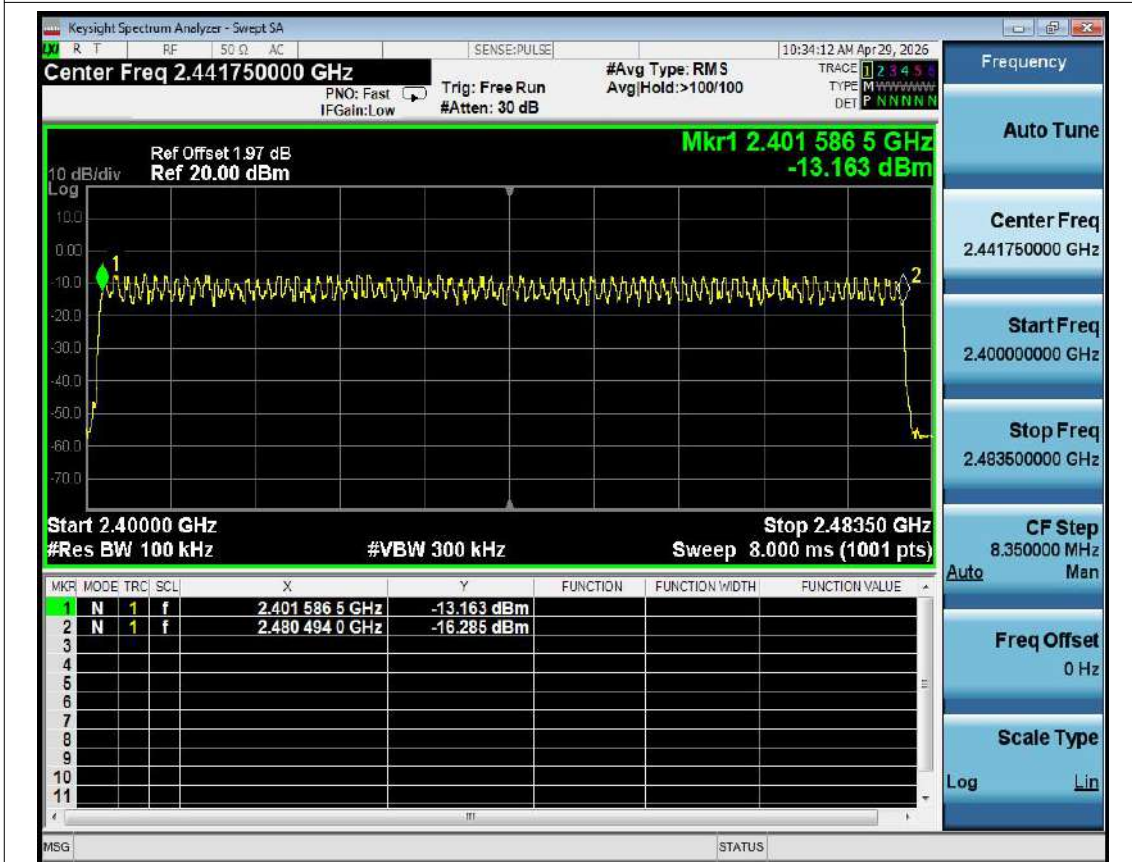

Hopping No. NVNT 3-DH1 2441MHz Ant1