




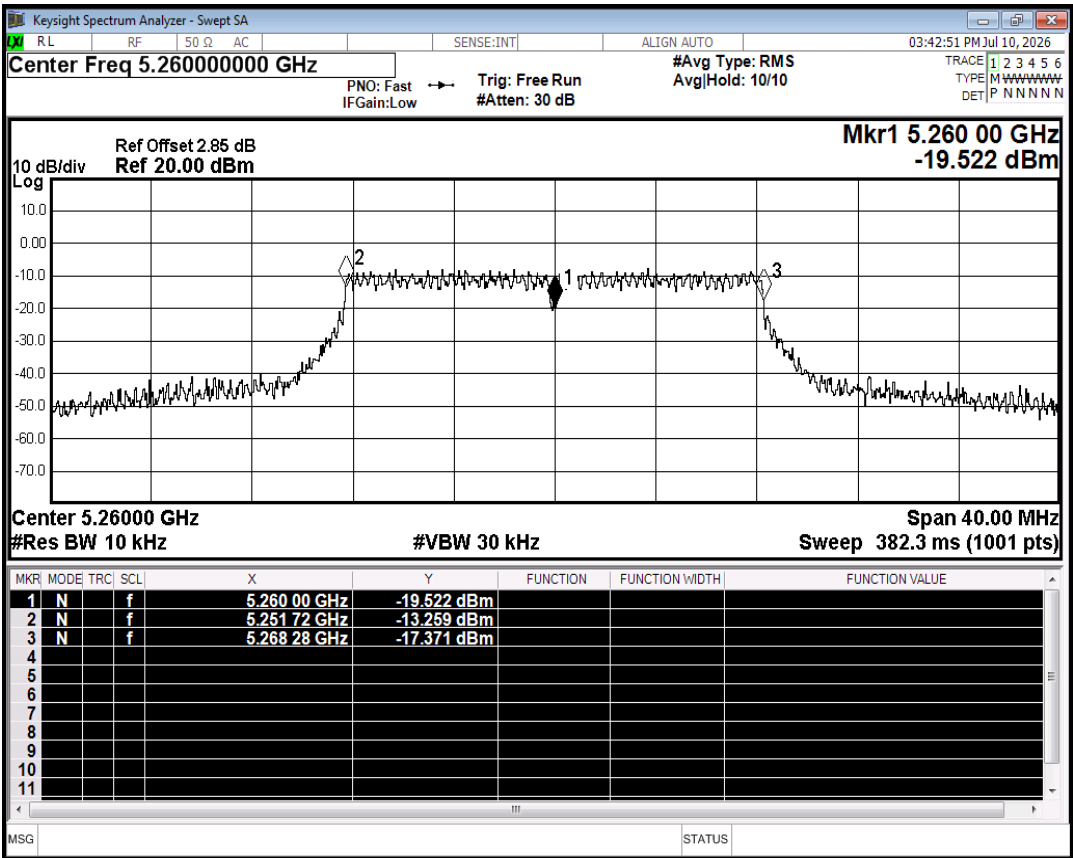


Freq. Stability NVNT a 5260MHz Ant2

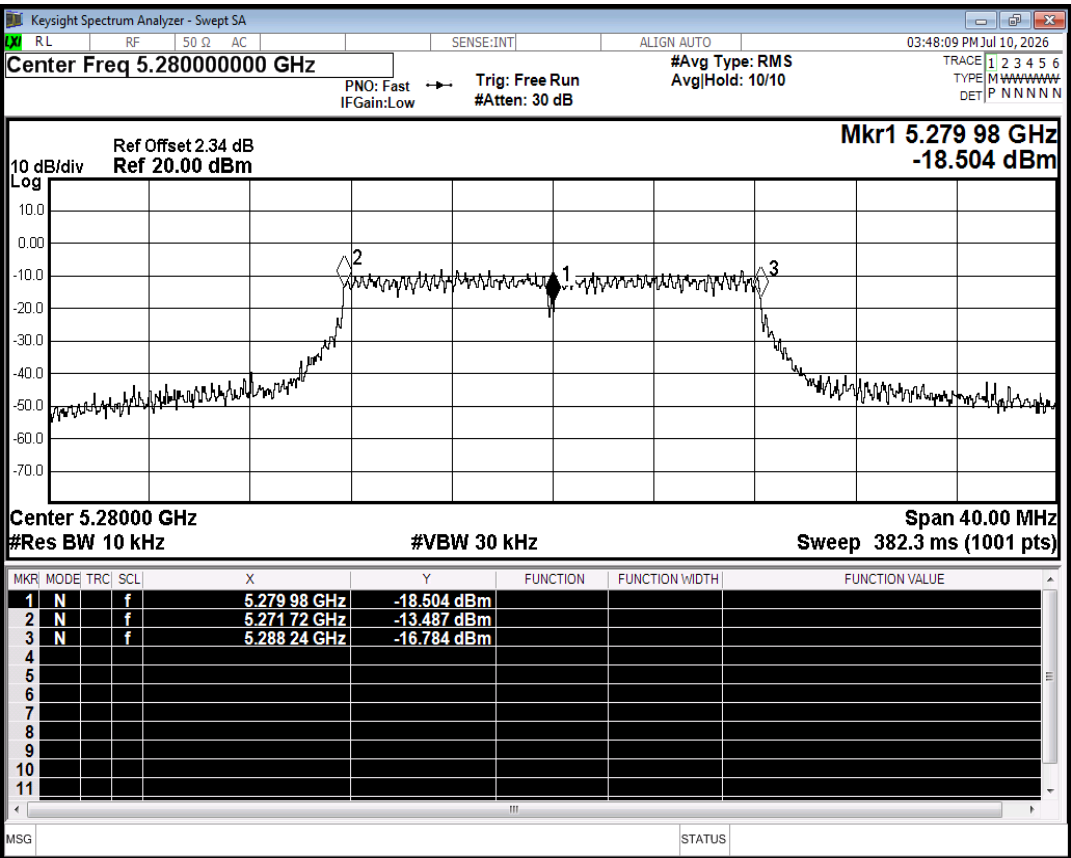


Freq. Stability NVNT a 5280MHz Ant2

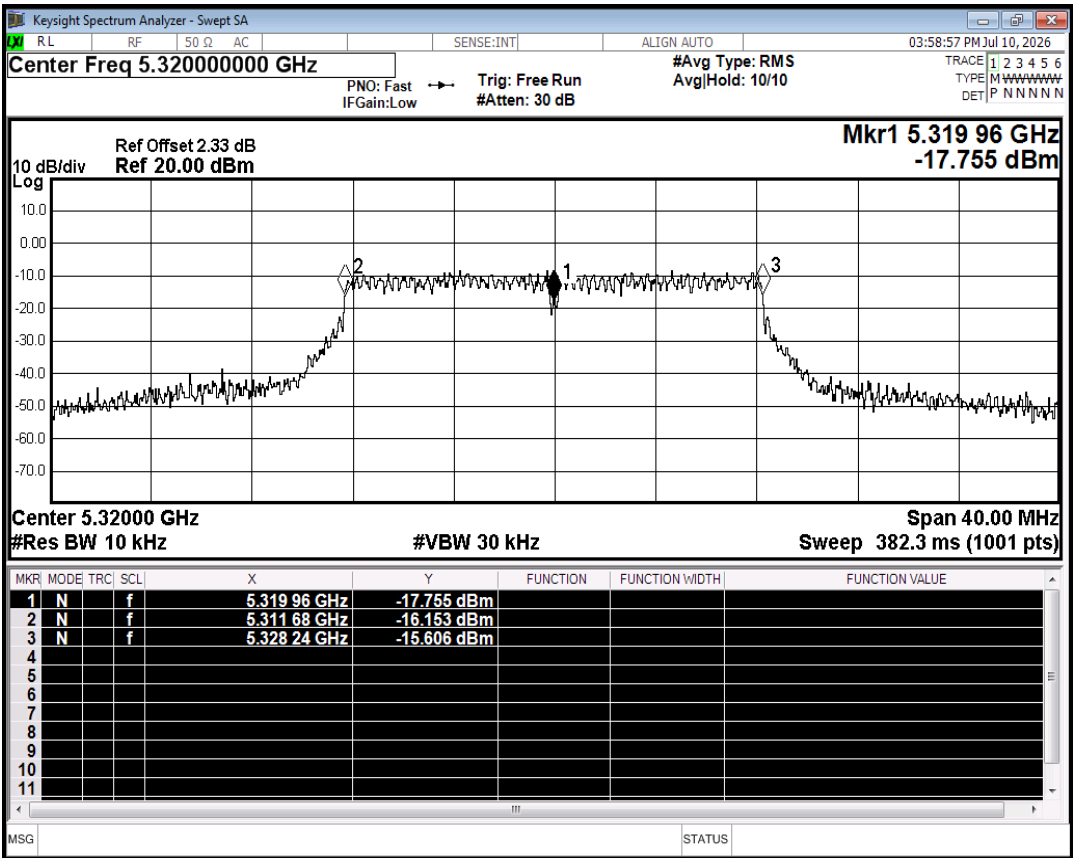


Freq. Stability NVNT a 5320MHz Ant2

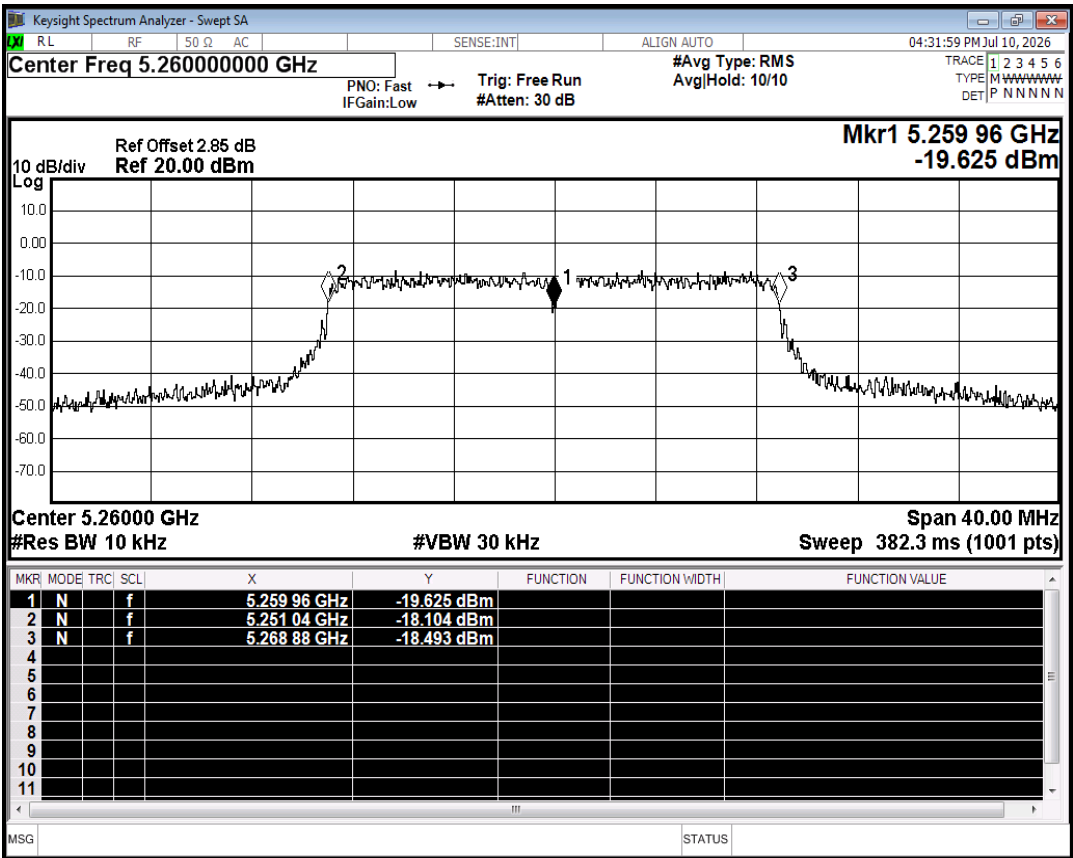


Freq. Stability NVNT n20 5260MHz Ant2

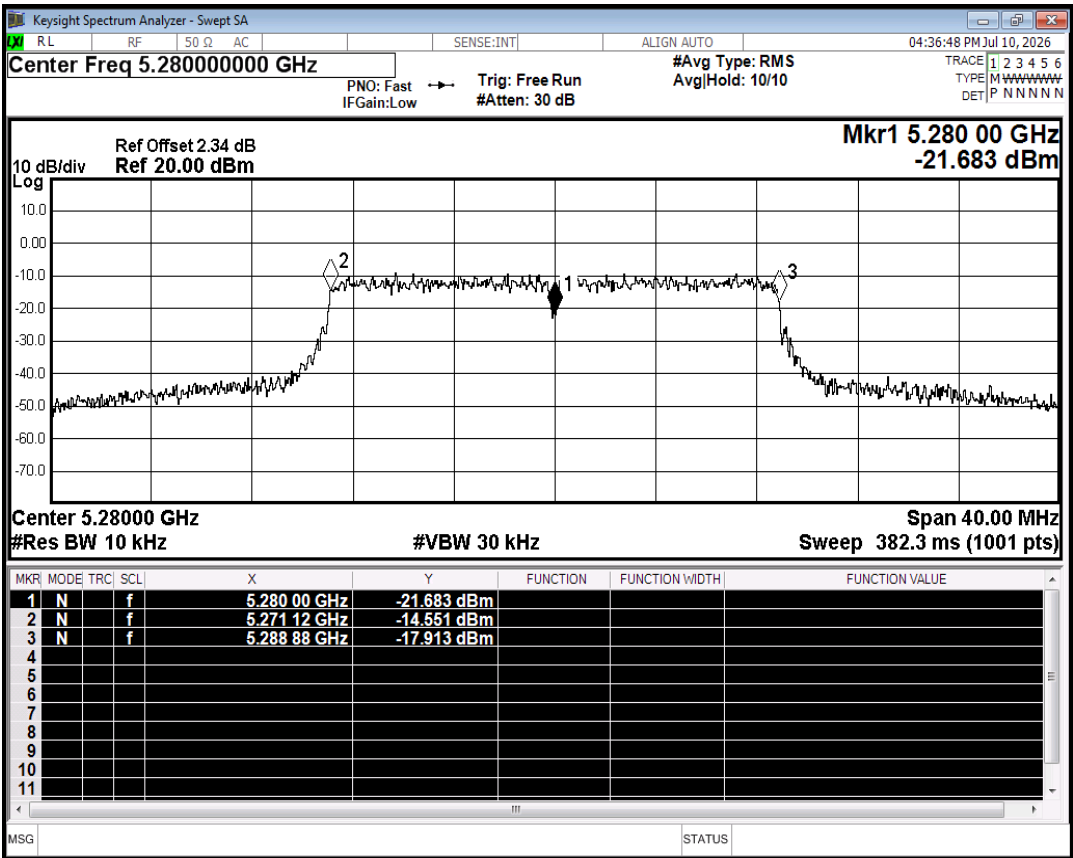


Freq. Stability NVNT n20 5280MHz Ant2

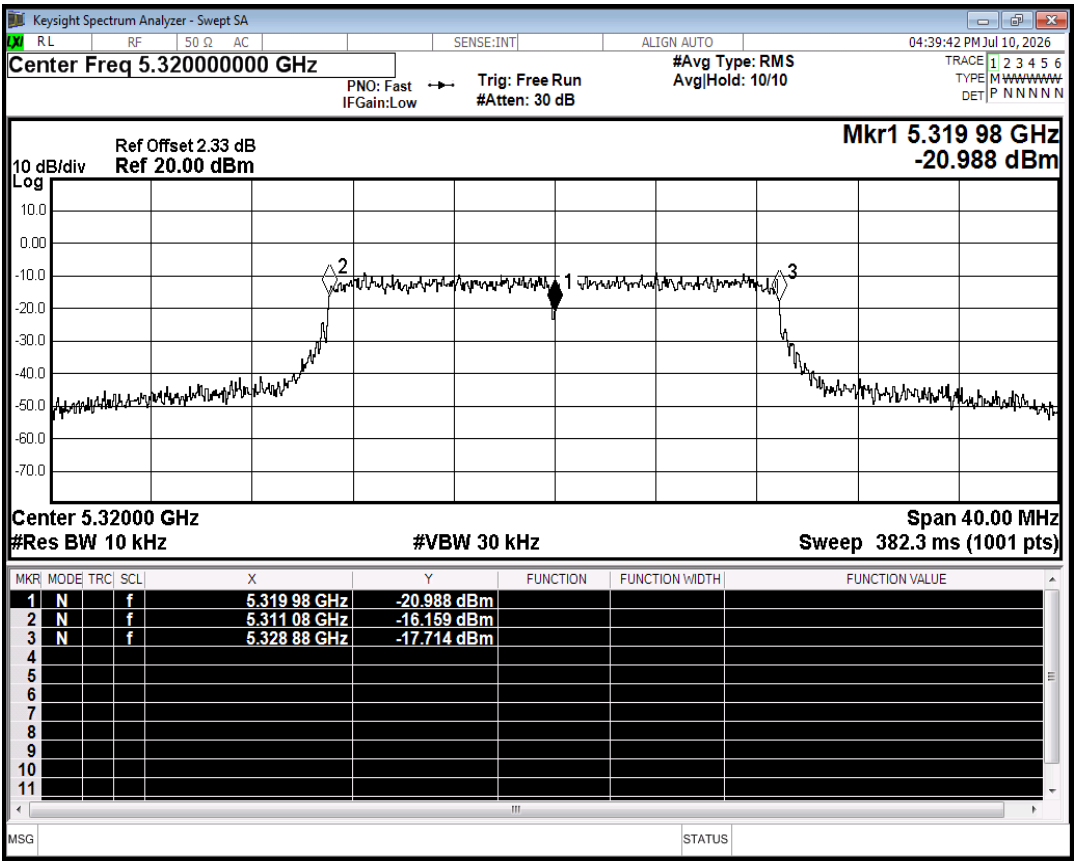


Freq. Stability NVNT n20 5320MHz Ant2

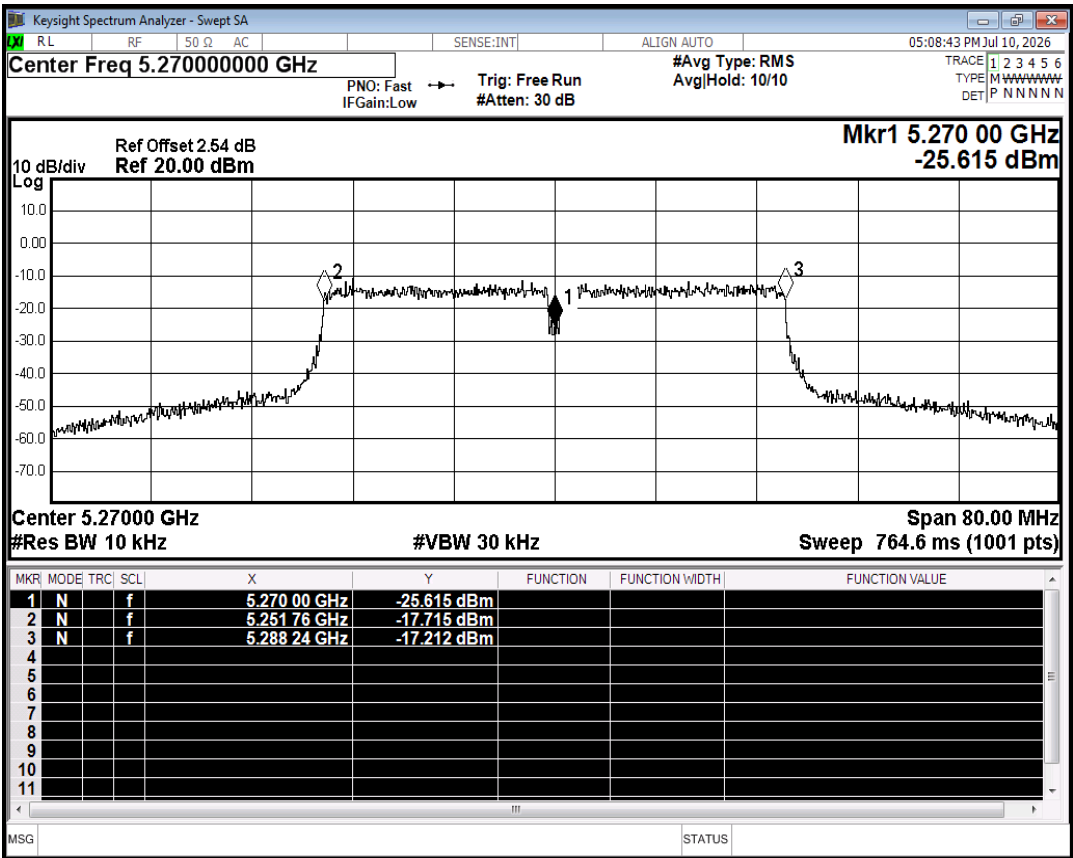


Freq. Stability NVNT n40 5270MHz Ant2

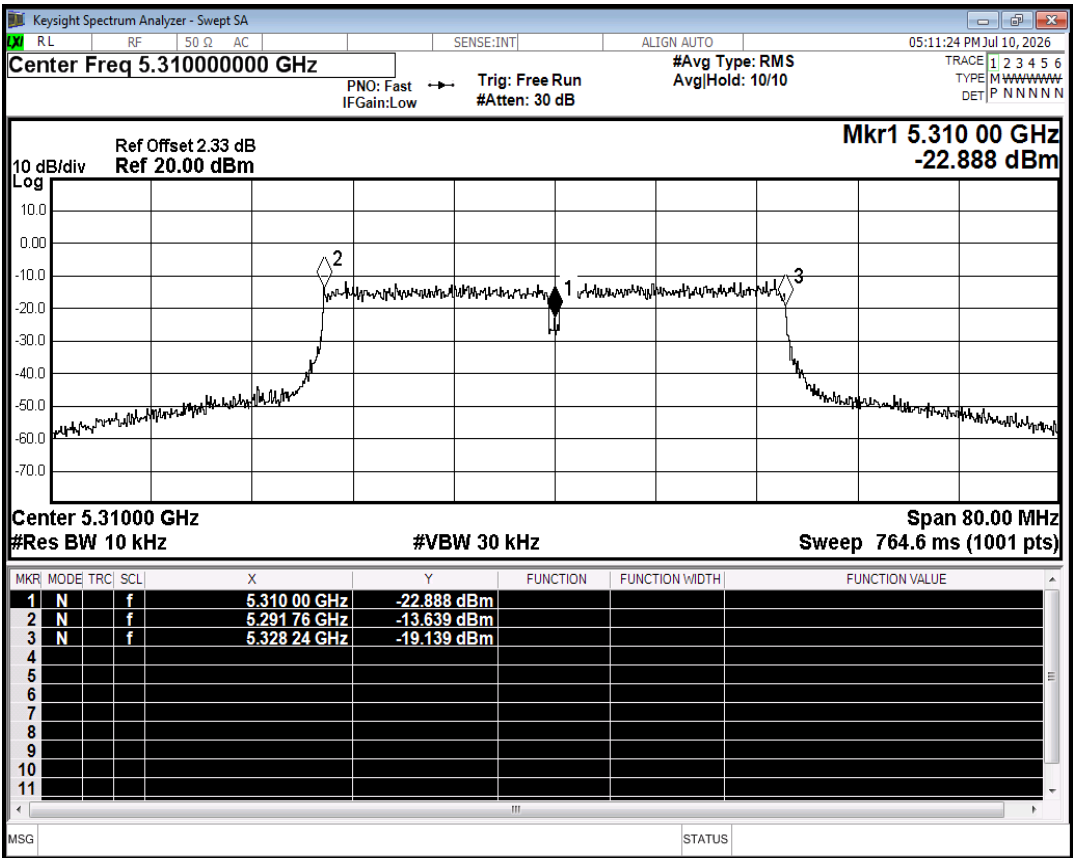


Freq. Stability NVNT n40 5310MHz Ant2

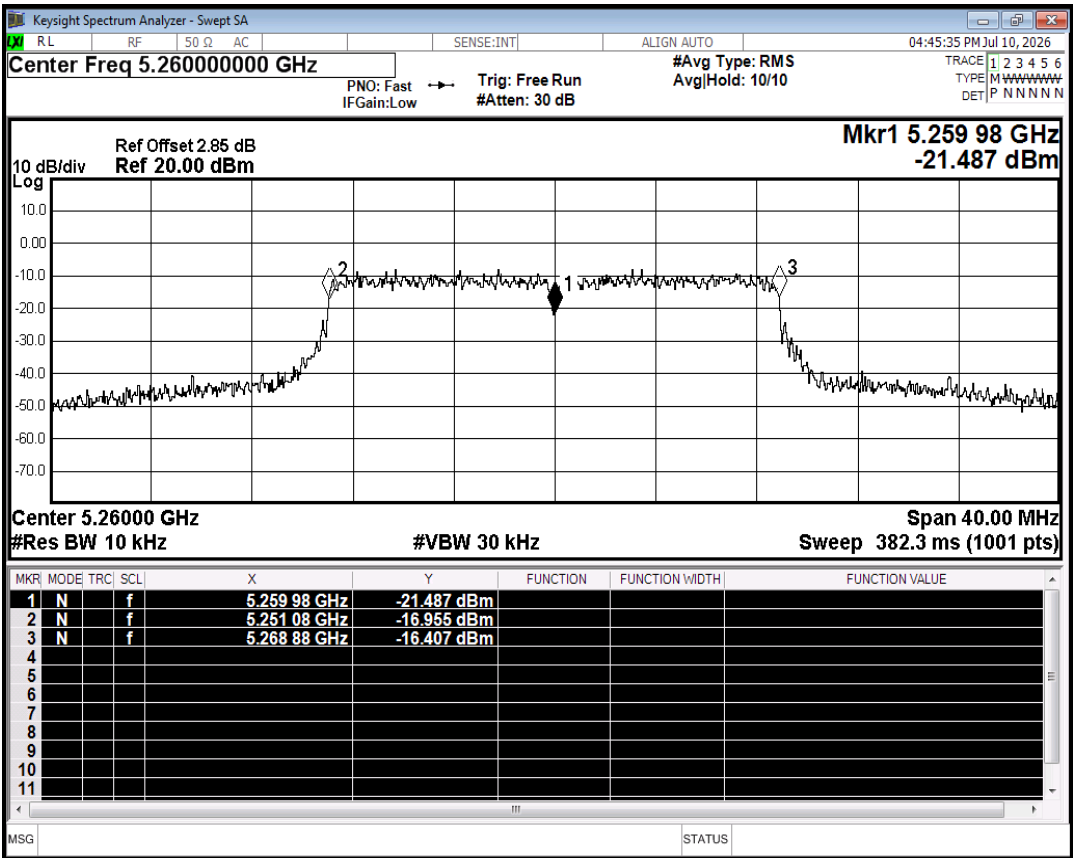


Freq. Stability NVNT ac20 5260MHz Ant2

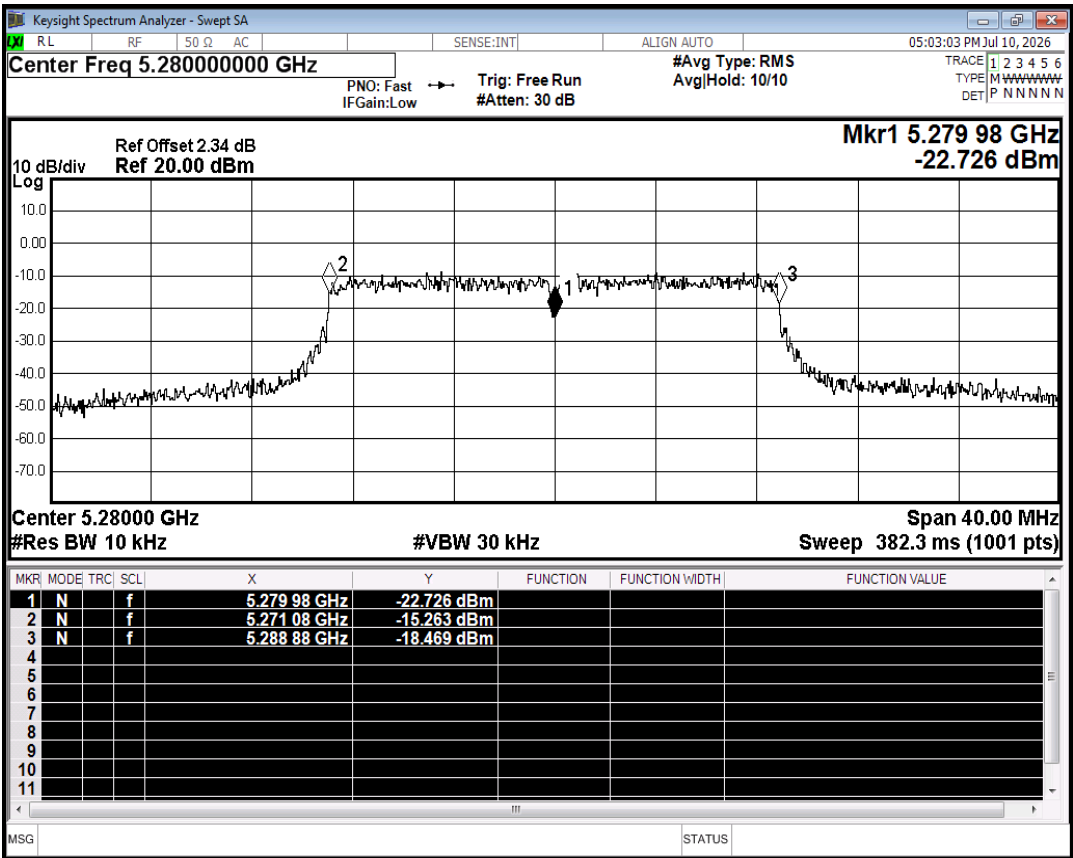


Freq. Stability NVNT ac20 5280MHz Ant2

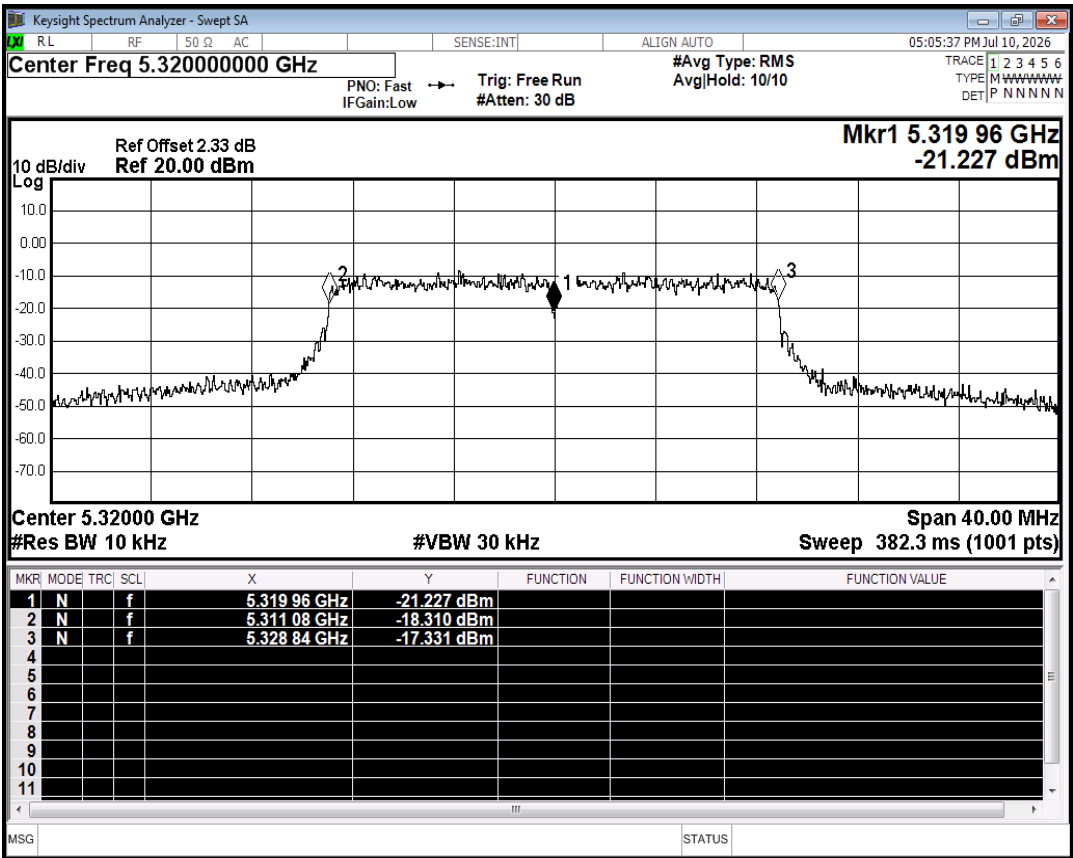


Freq. Stability NVNT ac20 5320MHz Ant2

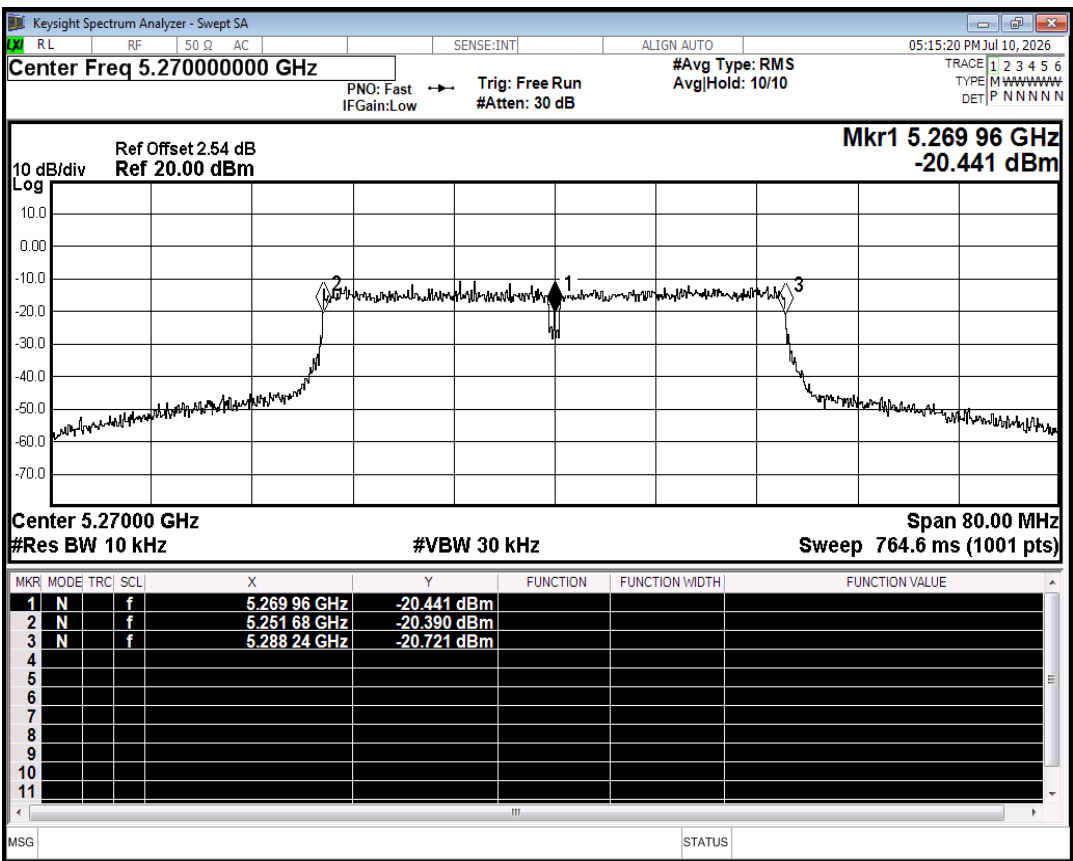

Freq. Stability NVNT ac40 5270MHz Ant2

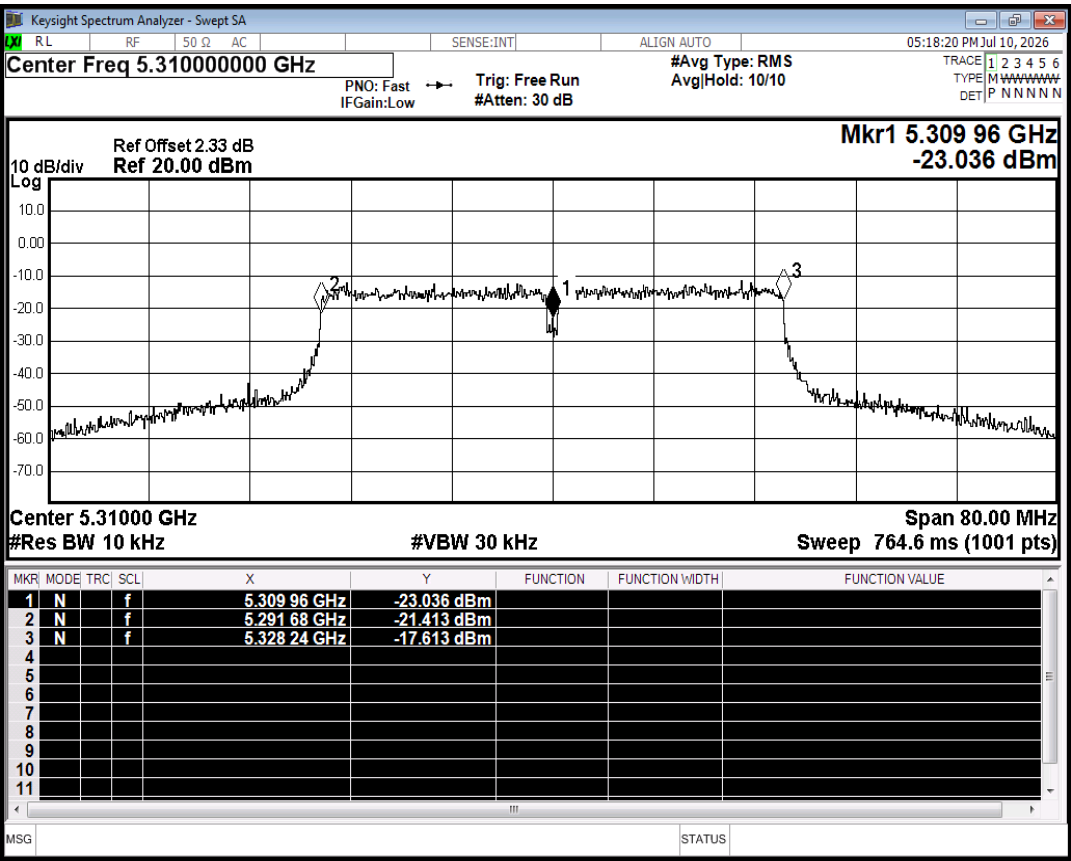


Freq. Stability NVNT ac40 5310MHz Ant2

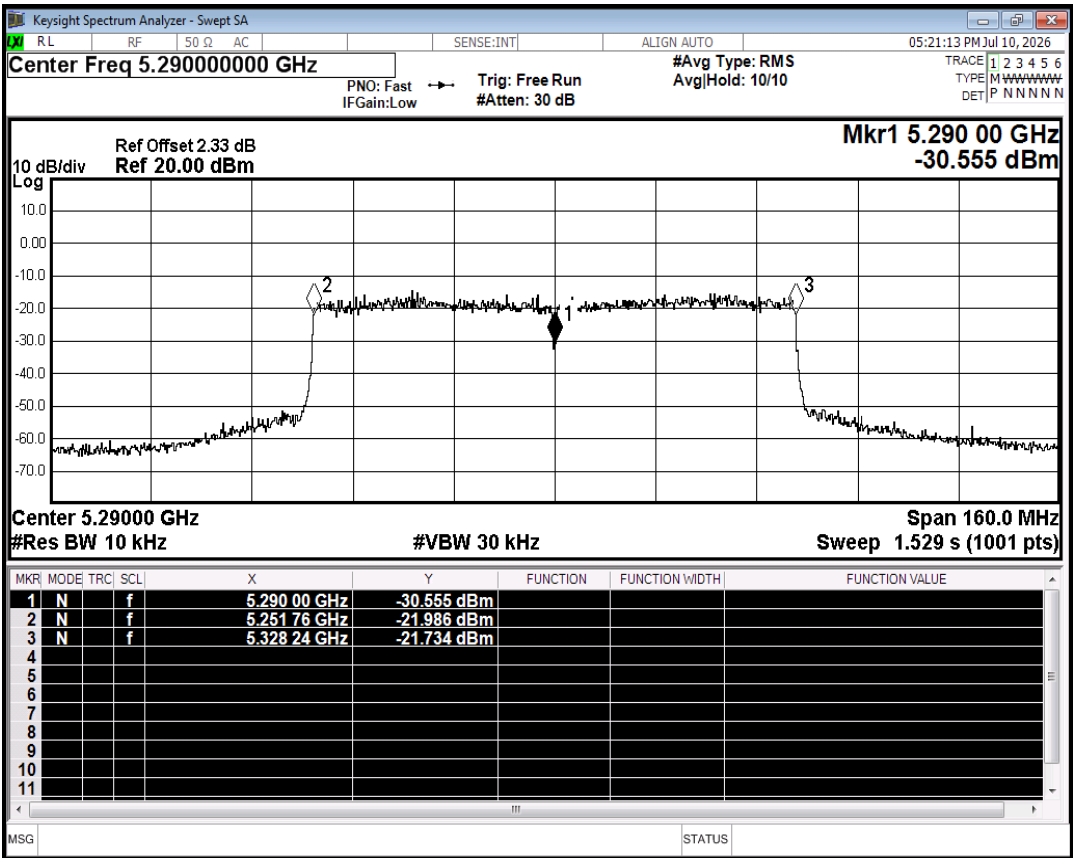


Freq. Stability NVNT ac80 5290MHz Ant2

E.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	97.46	0.11	0.37
NVNT	a	5280	Ant1	97.83	0.1	0.37
NVNT	a	5320	Ant1	97.82	0.1	0.37
NVNT	n20	5260	Ant1	97	0.13	0.44
NVNT	n20	5280	Ant1	97.42	0.11	0.44
NVNT	n20	5320	Ant1	97	0.13	0.44
NVNT	n40	5270	Ant1	94.02	0.27	0.91
NVNT	n40	5310	Ant1	94.87	0.23	0.9
NVNT	ac20	5260	Ant1	97.01	0.13	0.44
NVNT	ac20	5280	Ant1	97.42	0.11	0.44
NVNT	ac20	5320	Ant1	97.01	0.13	0.44
NVNT	ac40	5270	Ant1	94.87	0.23	0.9
NVNT	ac40	5310	Ant1	94.92	0.23	0.89
NVNT	ac80	5290	Ant1	90	0.46	1.85

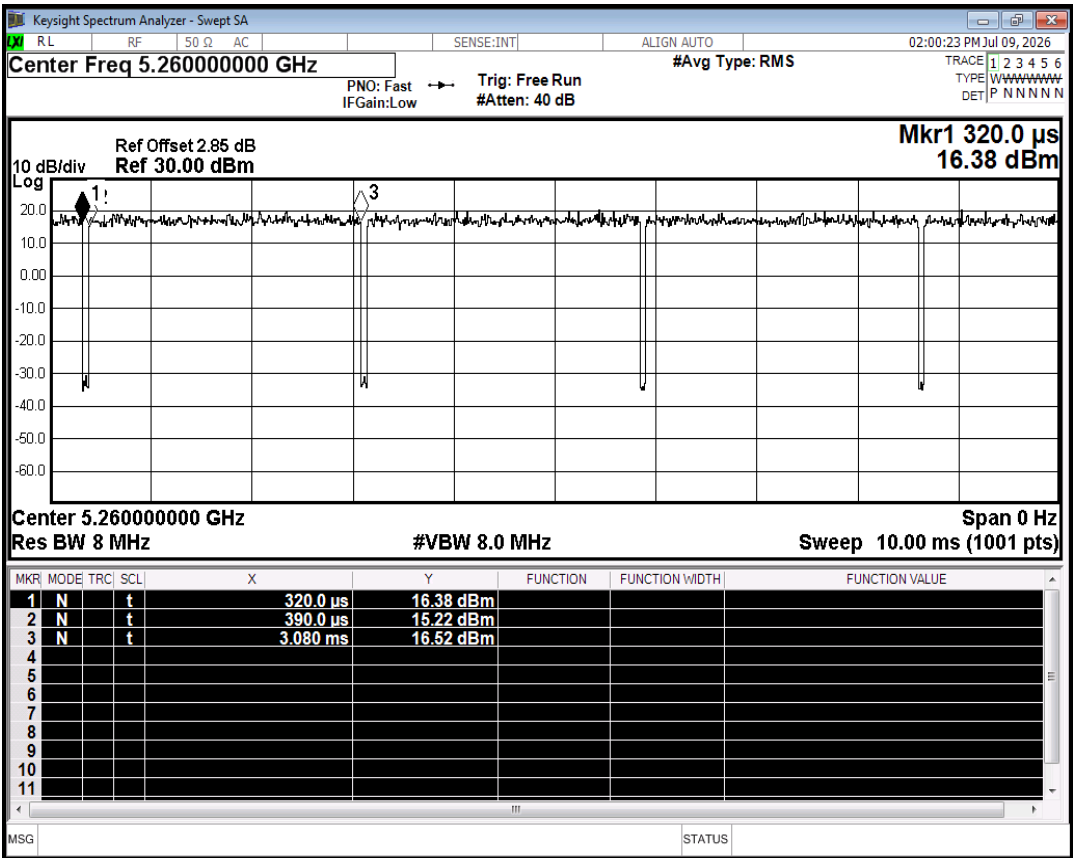


Duty Cycle NVNT a 5260MHz Ant1

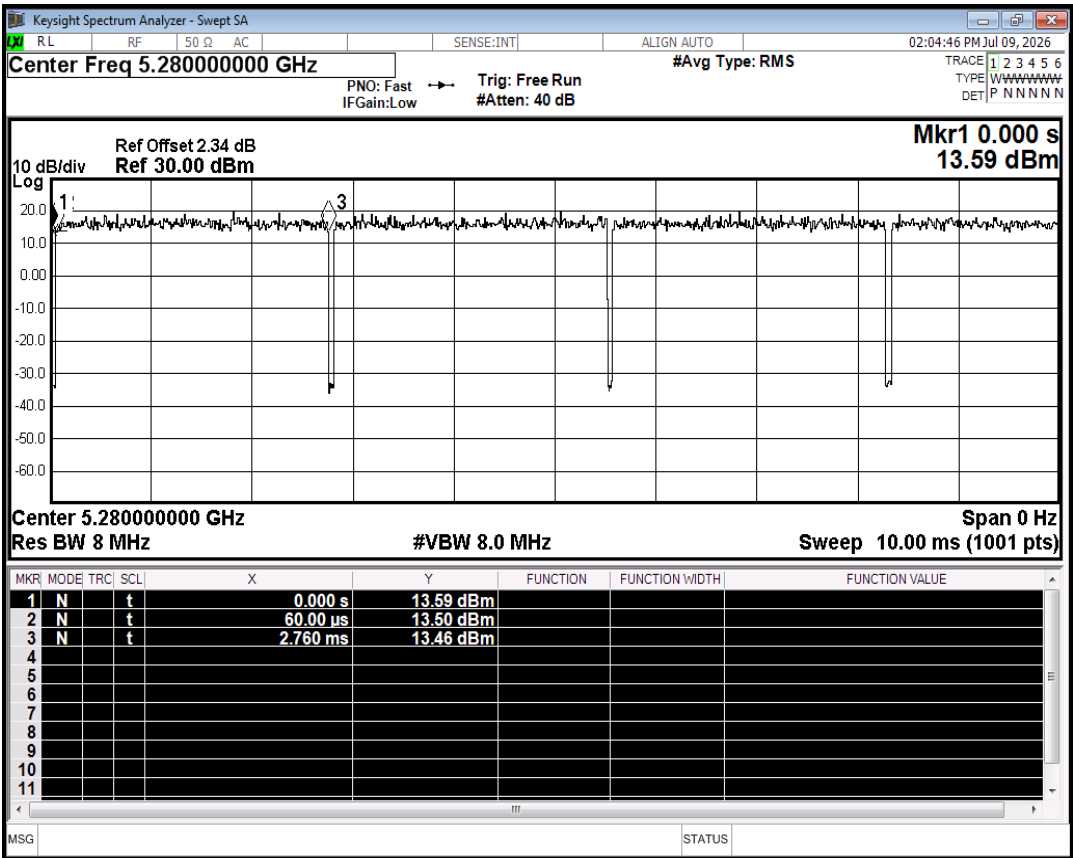


Duty Cycle NVNT a 5280MHz Ant1

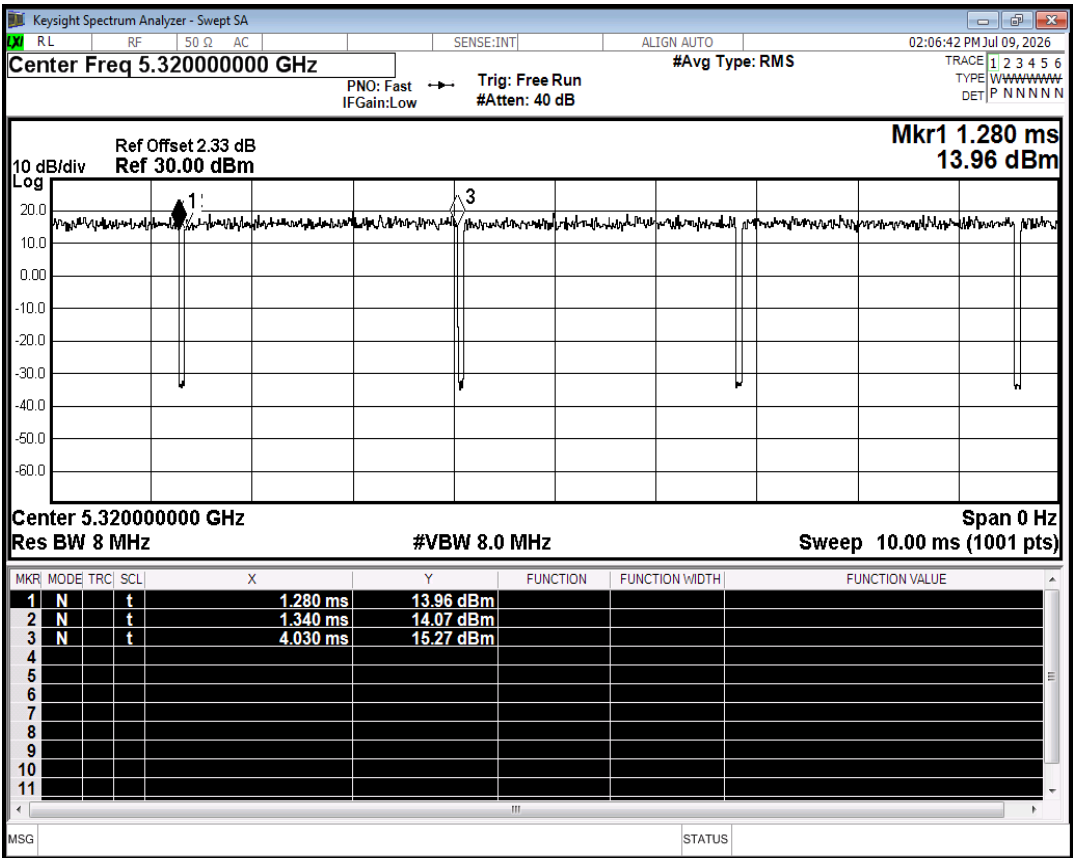


Duty Cycle NVNT a 5320MHz Ant1

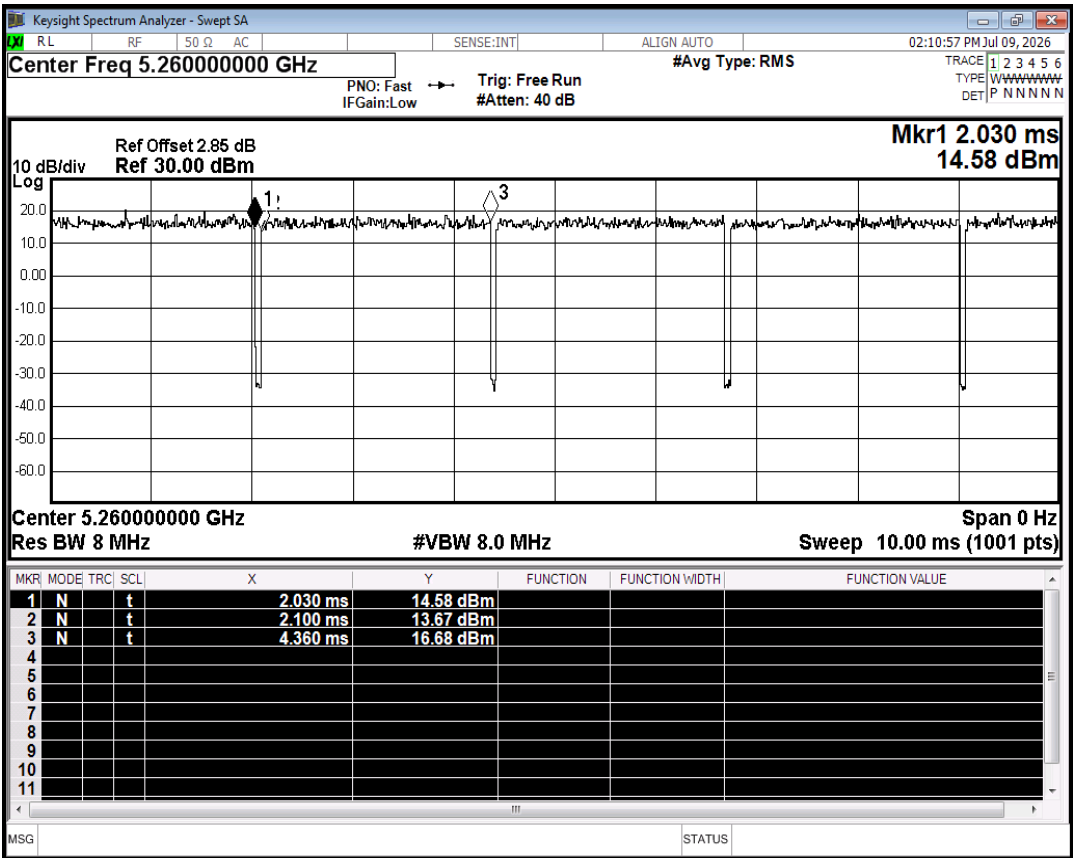


Duty Cycle NVNT n20 5260MHz Ant1

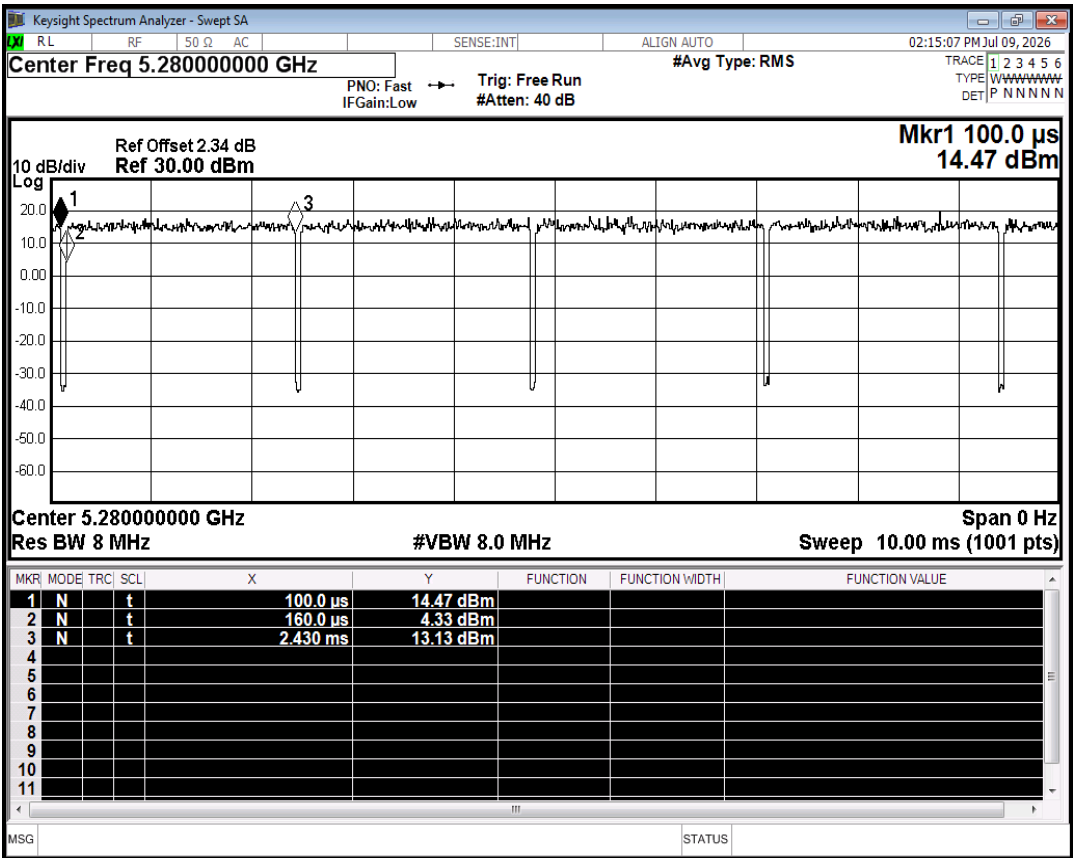


Duty Cycle NVNT n20 5280MHz Ant1

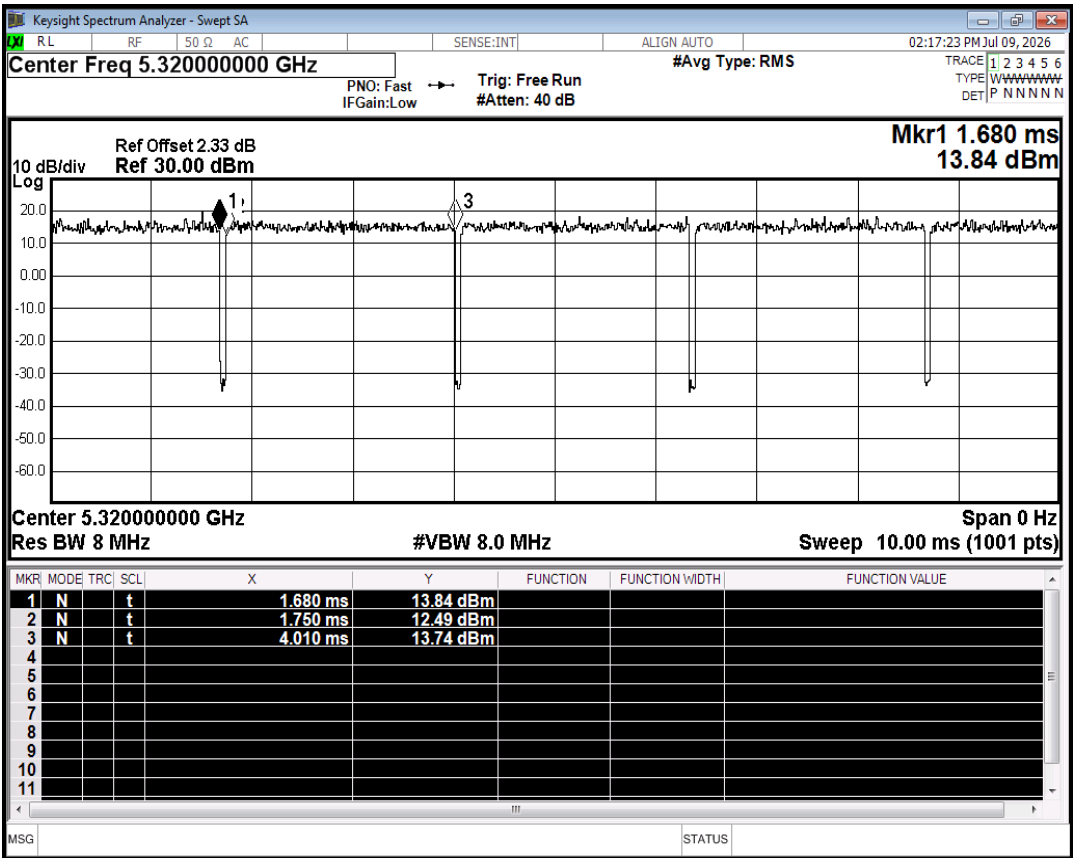


Duty Cycle NVNT n20 5320MHz Ant1

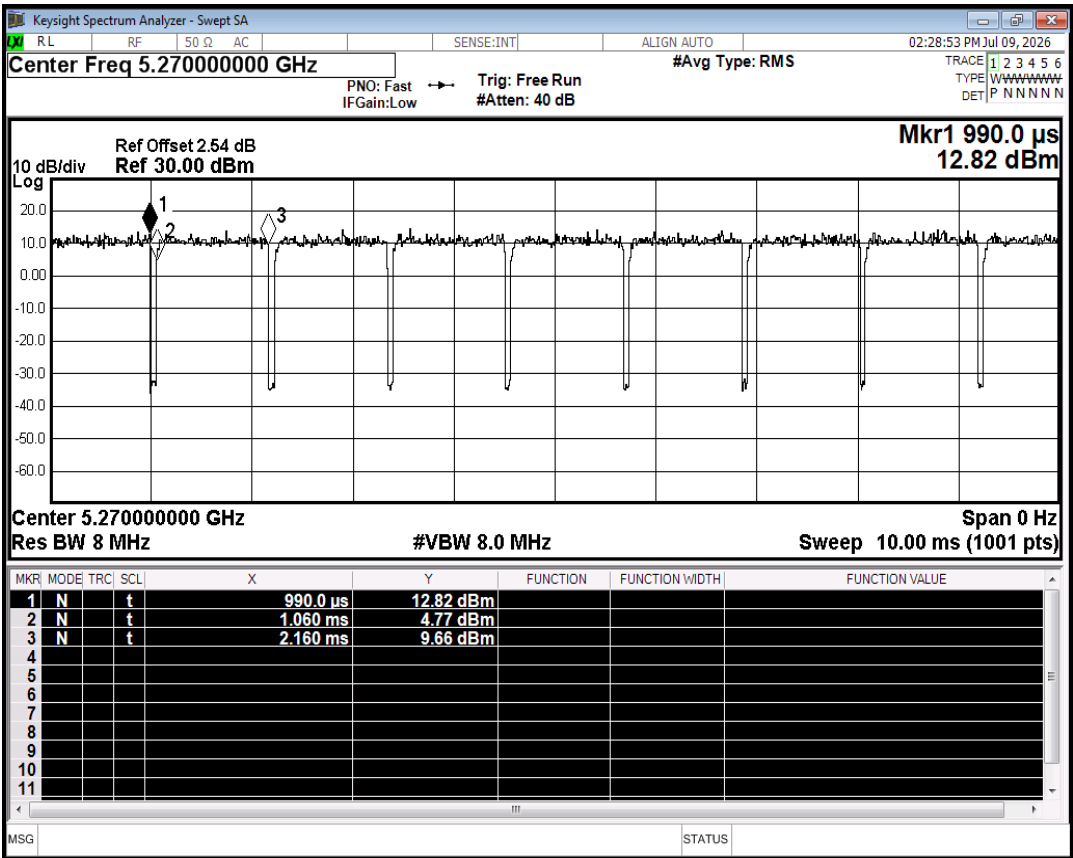


Duty Cycle NVNT n40 5270MHz Ant1

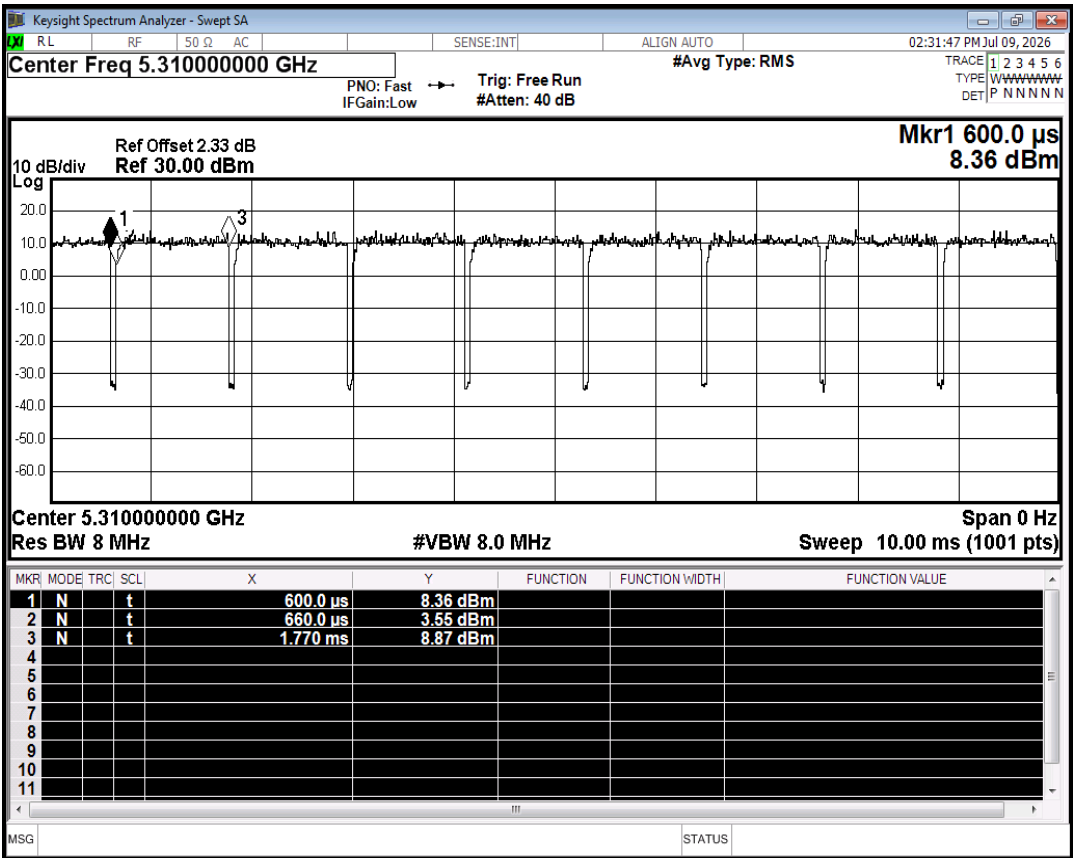


Duty Cycle NVNT n40 5310MHz Ant1

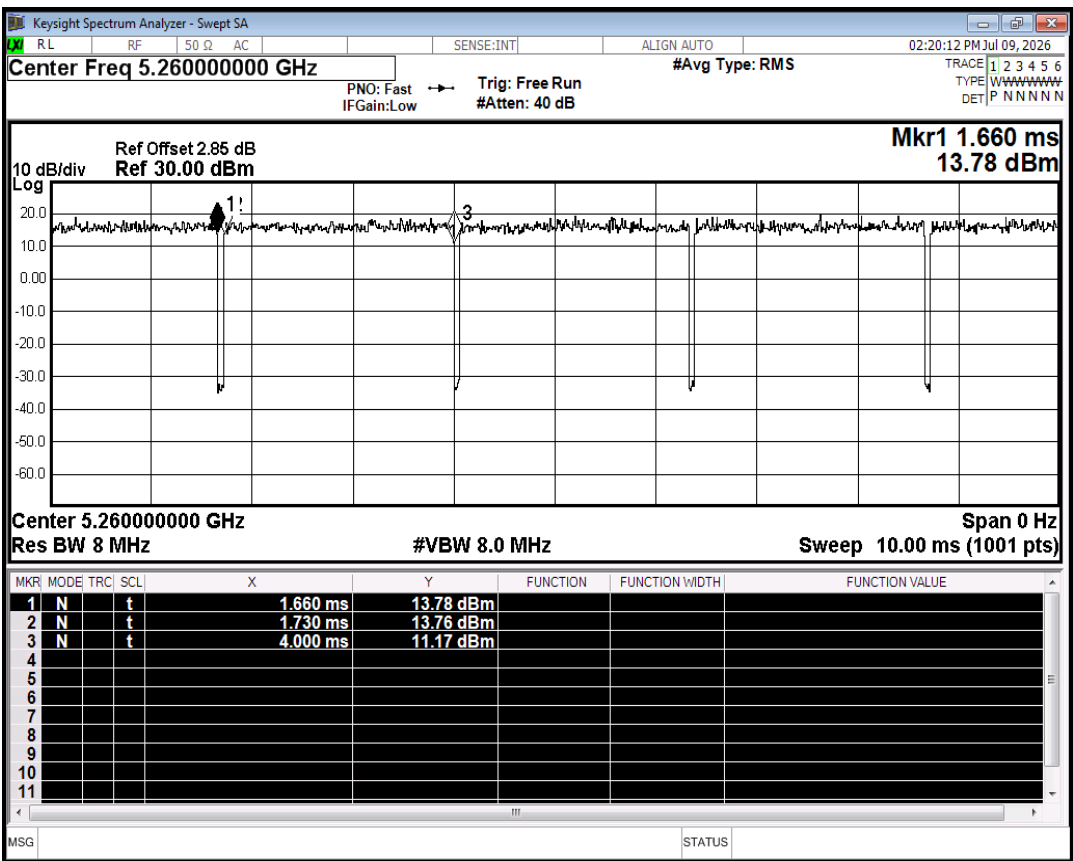


Duty Cycle NVNT ac20 5260MHz Ant1

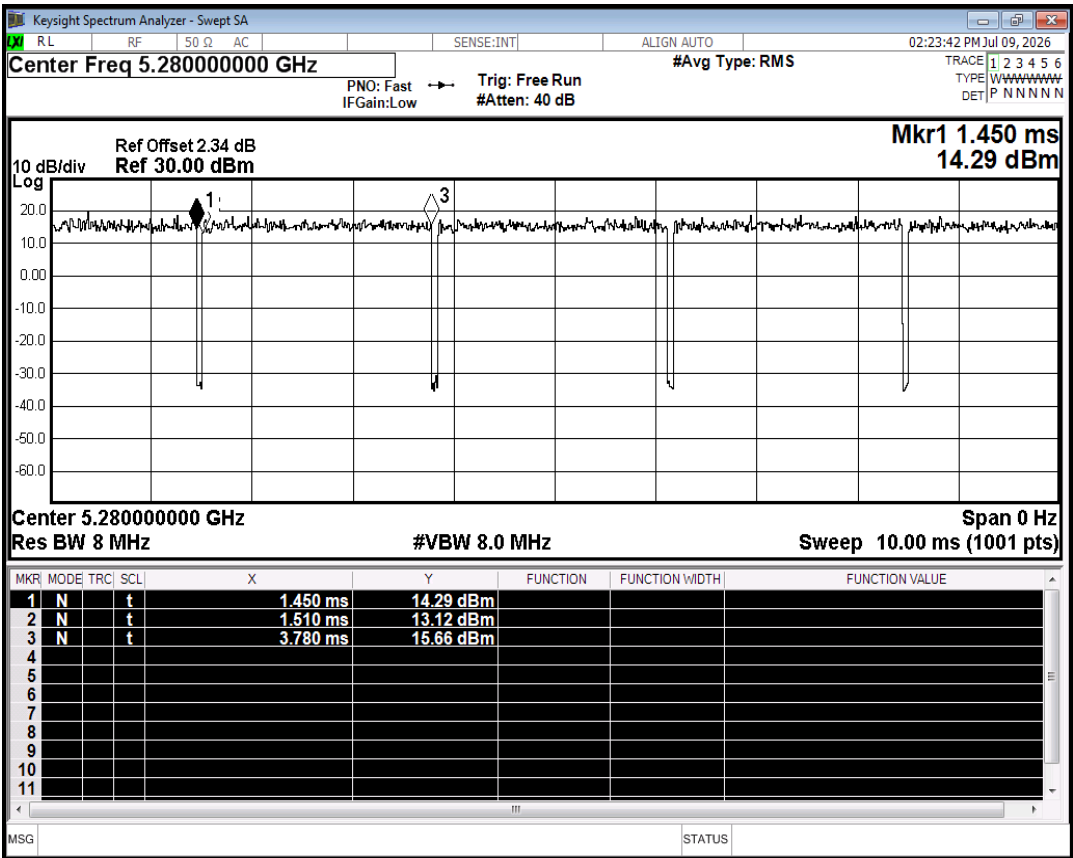


Duty Cycle NVNT ac20 5280MHz Ant1

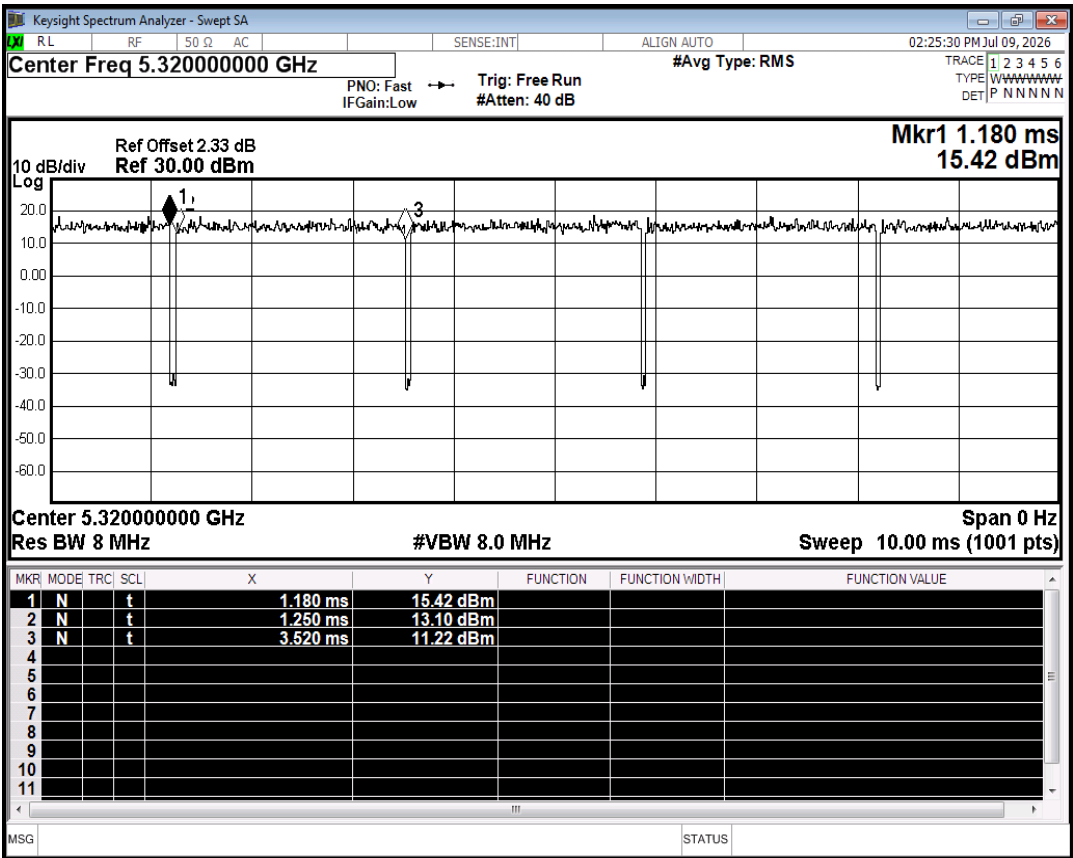


Duty Cycle NVNT ac20 5320MHz Ant1

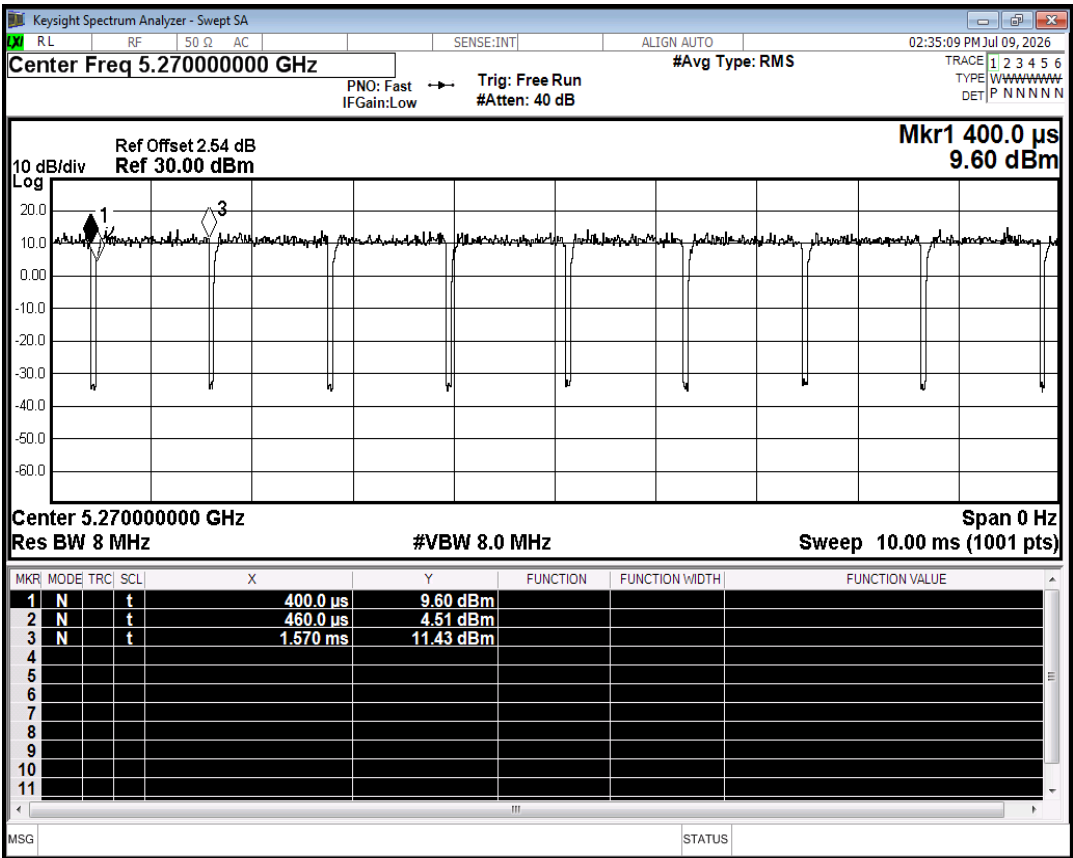

Duty Cycle NVNT ac40 5270MHz Ant1

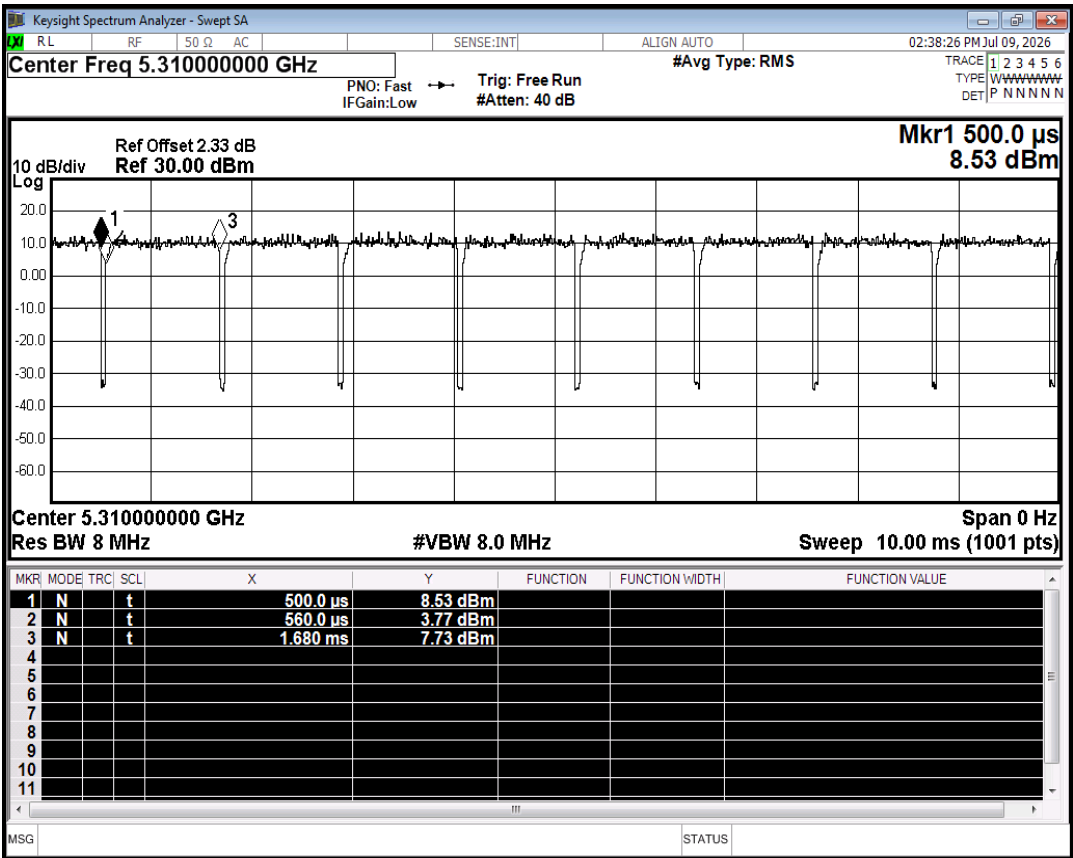


Duty Cycle NVNT ac40 5310MHz Ant1

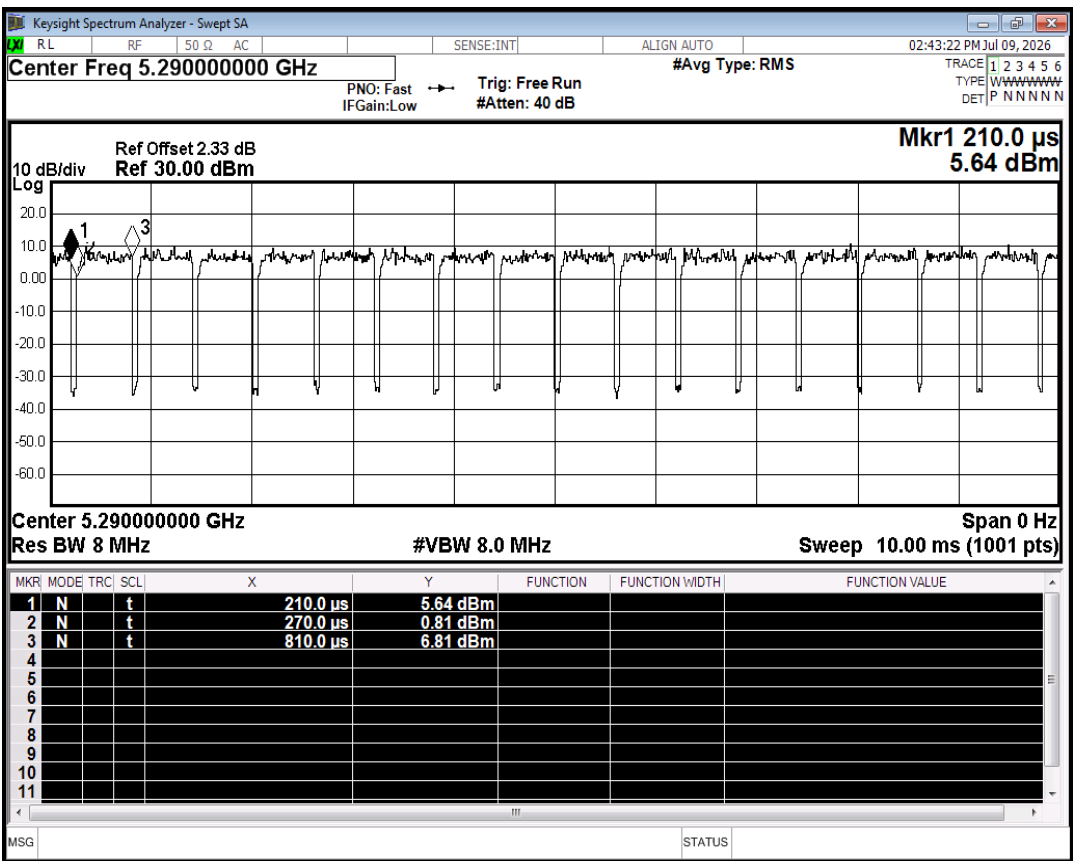


Duty Cycle NVNT ac80 5290MHz Ant1


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant2	97.83	0.1	0.37
NVNT	a	5280	Ant2	97.83	0.1	0.37
NVNT	a	5320	Ant2	97.82	0.1	0.37
NVNT	n20	5260	Ant2	97	0.13	0.44
NVNT	n20	5280	Ant2	97.41	0.11	0.44
NVNT	n20	5320	Ant2	97.41	0.11	0.44
NVNT	n40	5270	Ant2	94.87	0.23	0.9
NVNT	n40	5310	Ant2	94.02	0.27	0.91
NVNT	ac20	5260	Ant2	97	0.13	0.44
NVNT	ac20	5280	Ant2	97.42	0.11	0.44
NVNT	ac20	5320	Ant2	97	0.13	0.44
NVNT	ac40	5270	Ant2	94.92	0.23	0.89
NVNT	ac40	5310	Ant2	94.92	0.23	0.89
NVNT	ac80	5290	Ant2	88.33	0.54	1.89

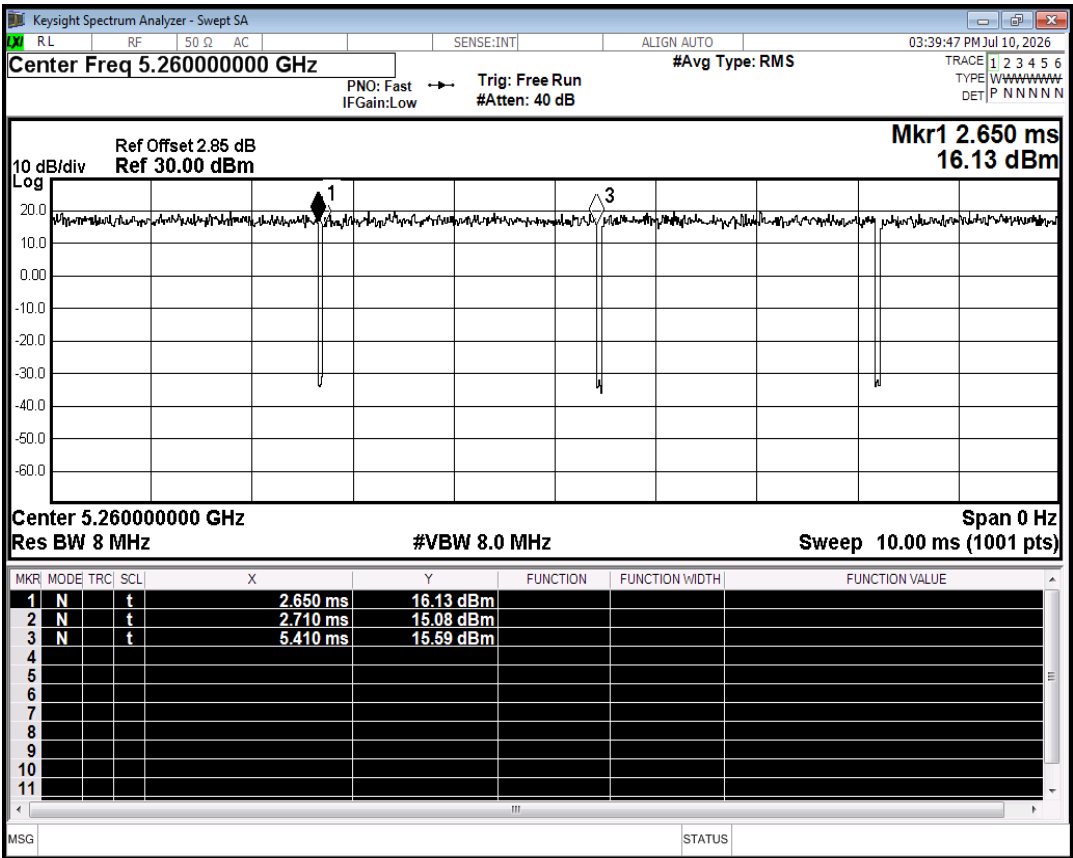


Duty Cycle NVNT a 5260MHz Ant2

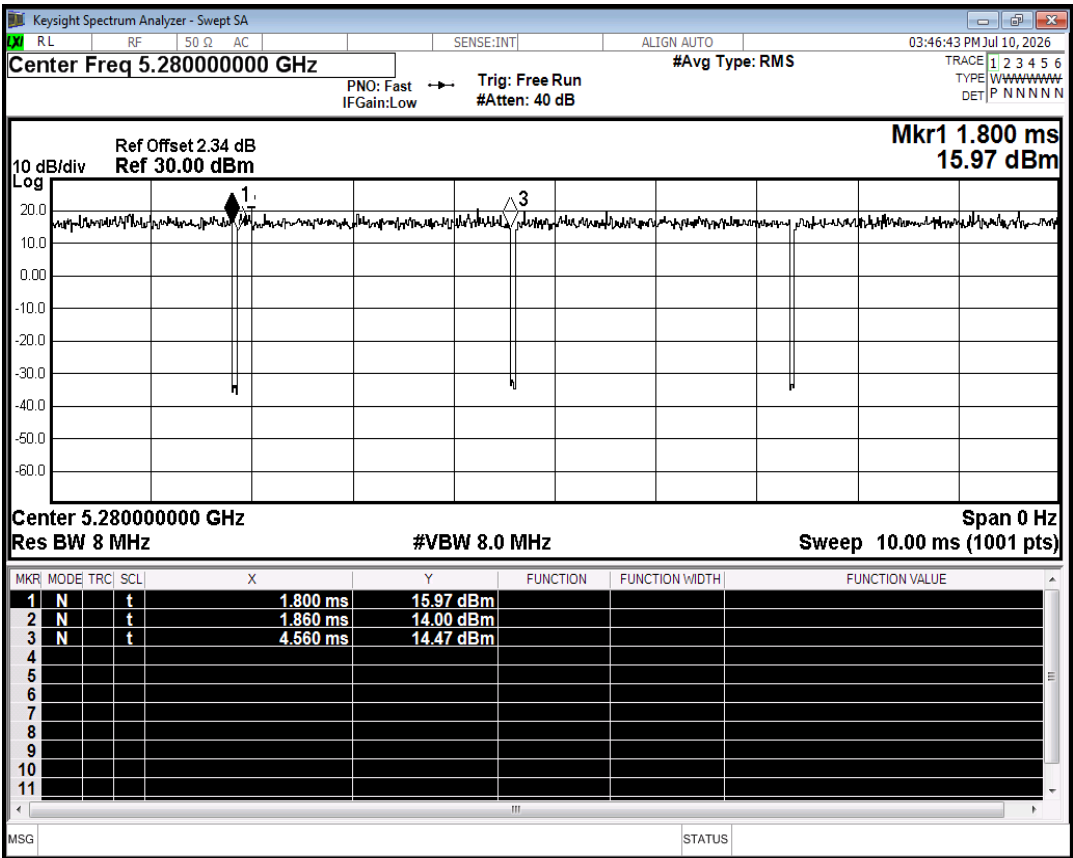


Duty Cycle NVNT a 5280MHz Ant2

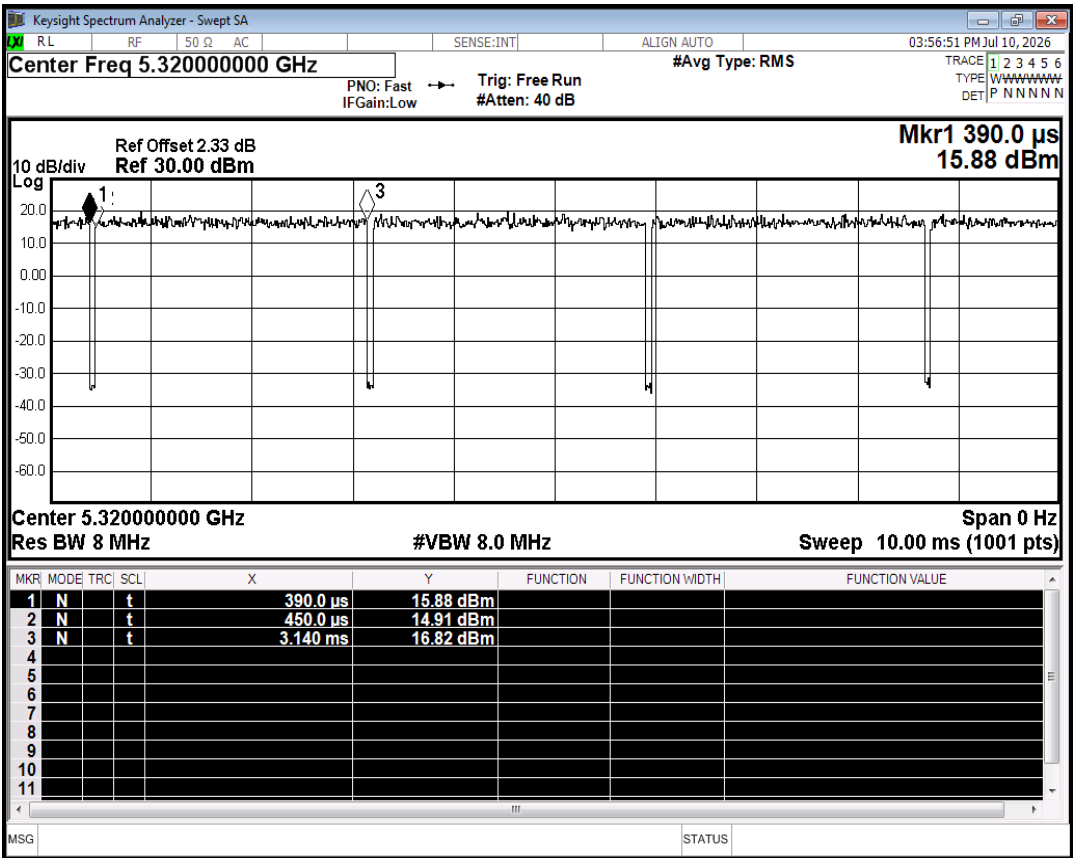


Duty Cycle NVNT a 5320MHz Ant2

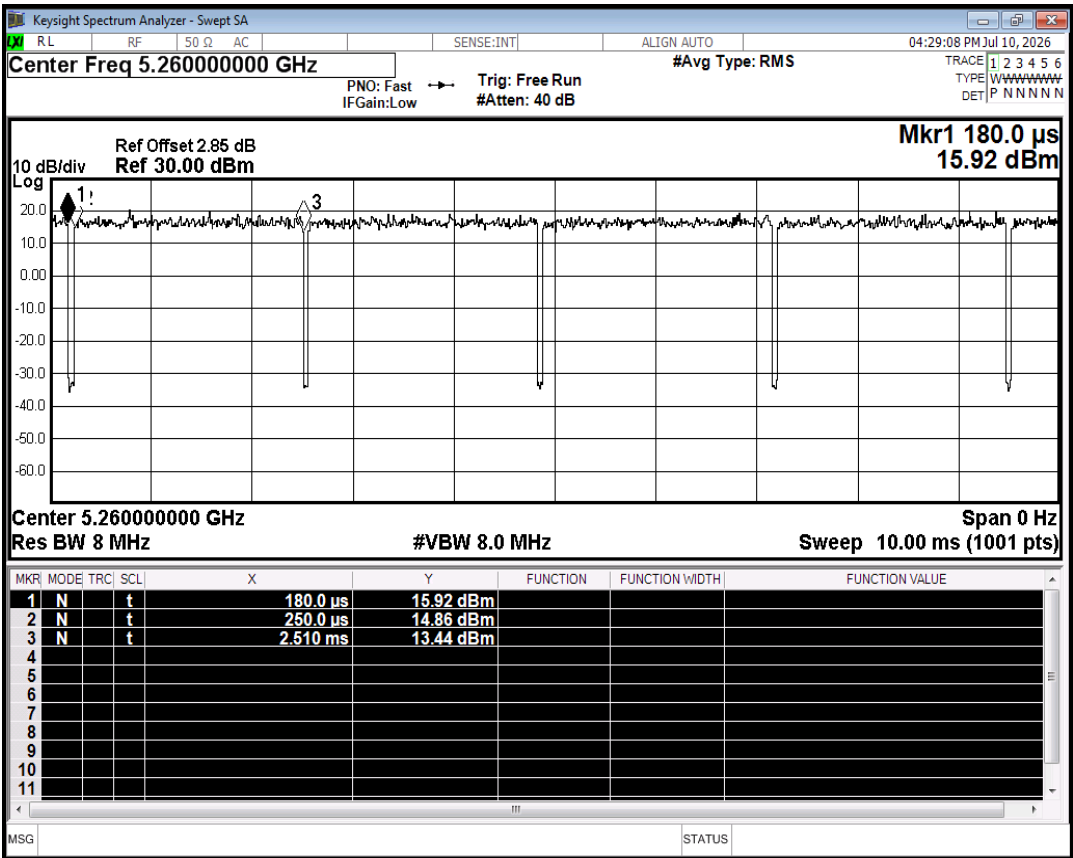


Duty Cycle NVNT n20 5260MHz Ant2

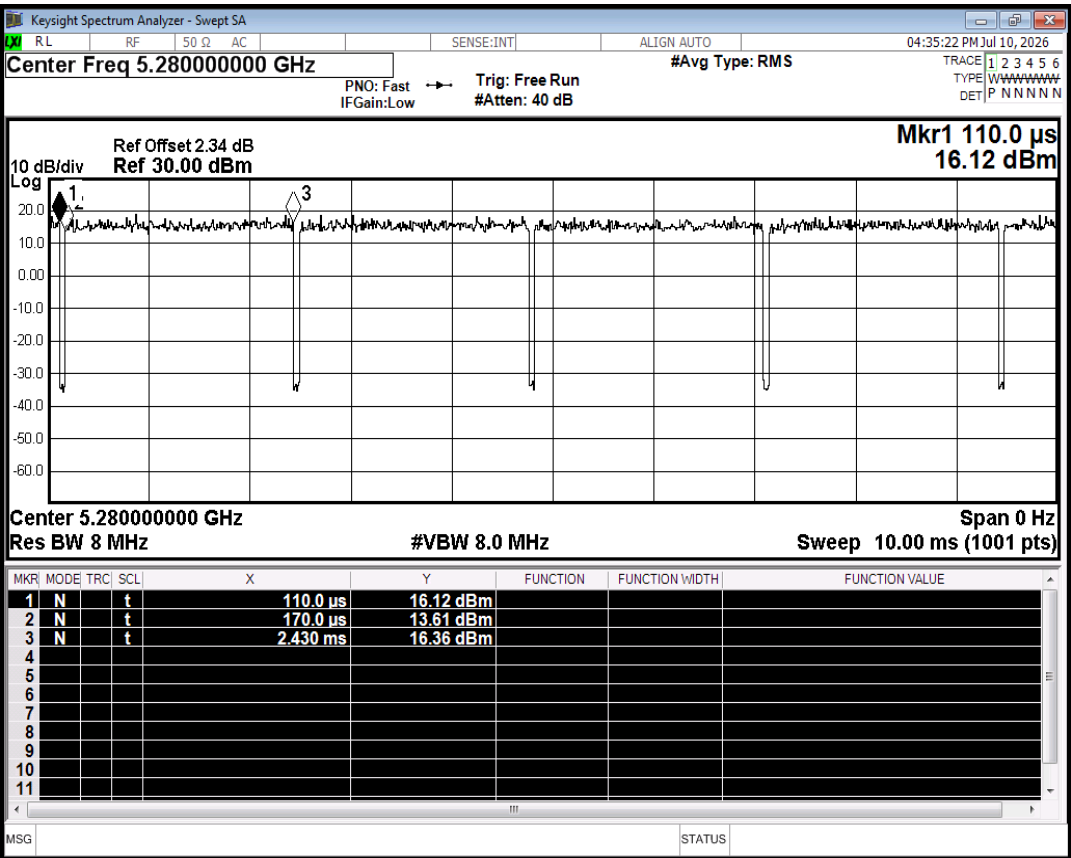


Duty Cycle NVNT n20 5280MHz Ant2

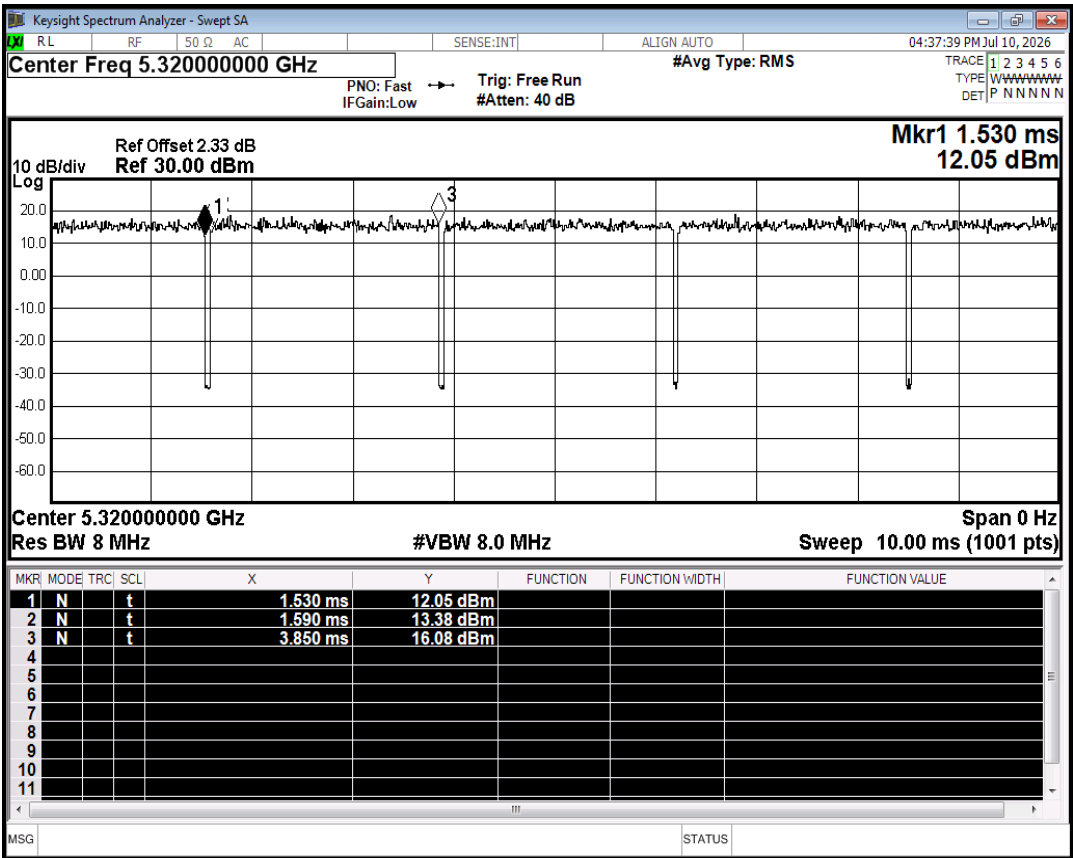


Duty Cycle NVNT n20 5320MHz Ant2

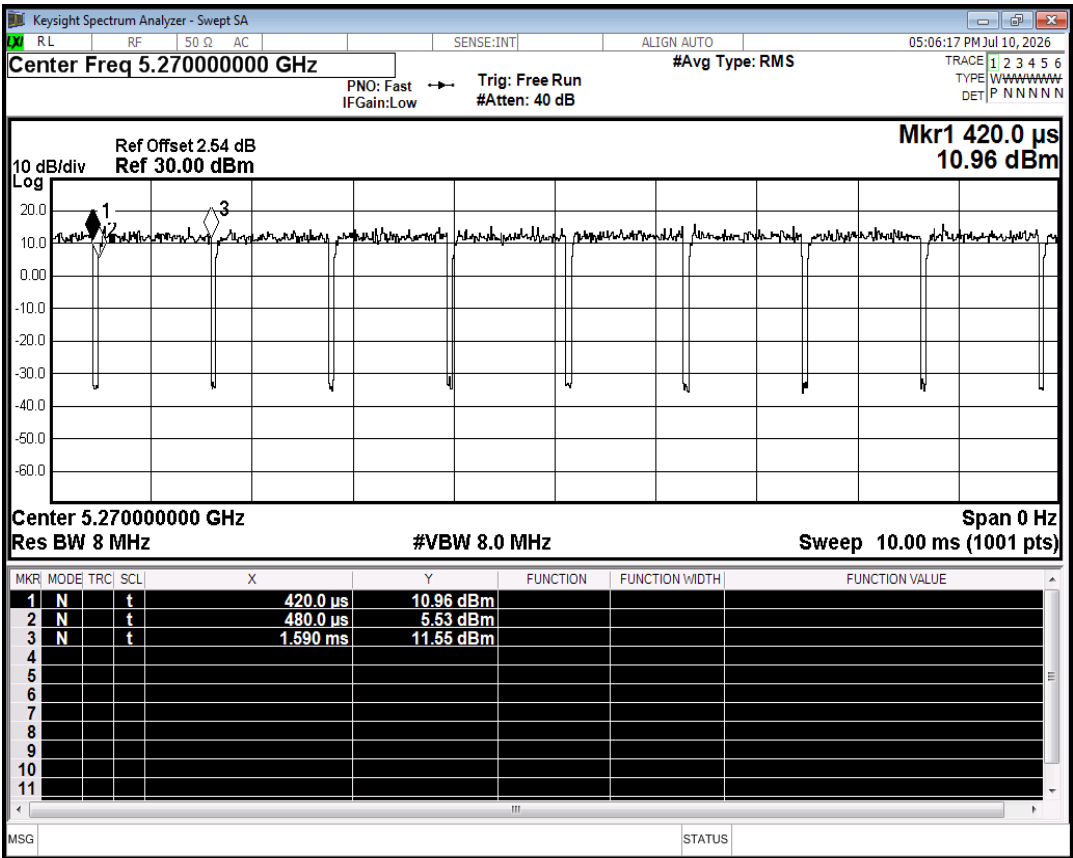


Duty Cycle NVNT n40 5270MHz Ant2

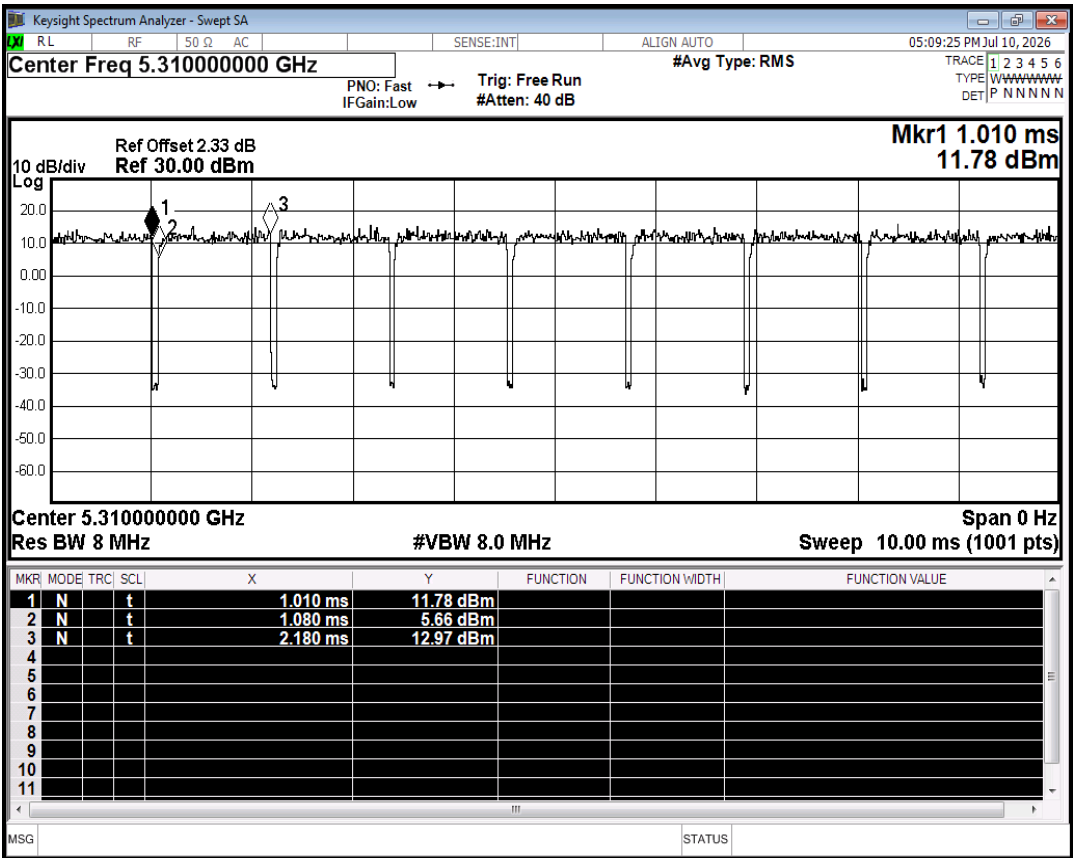


Duty Cycle NVNT n40 5310MHz Ant2

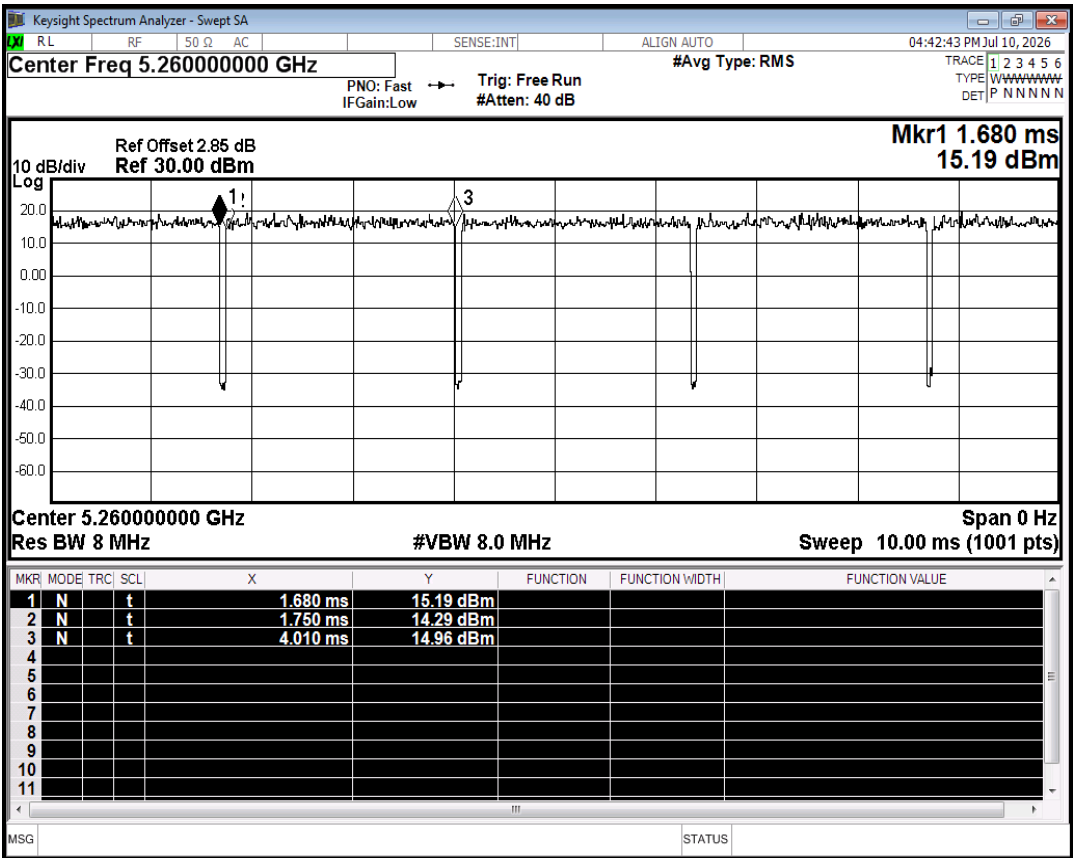


Duty Cycle NVNT ac20 5260MHz Ant2

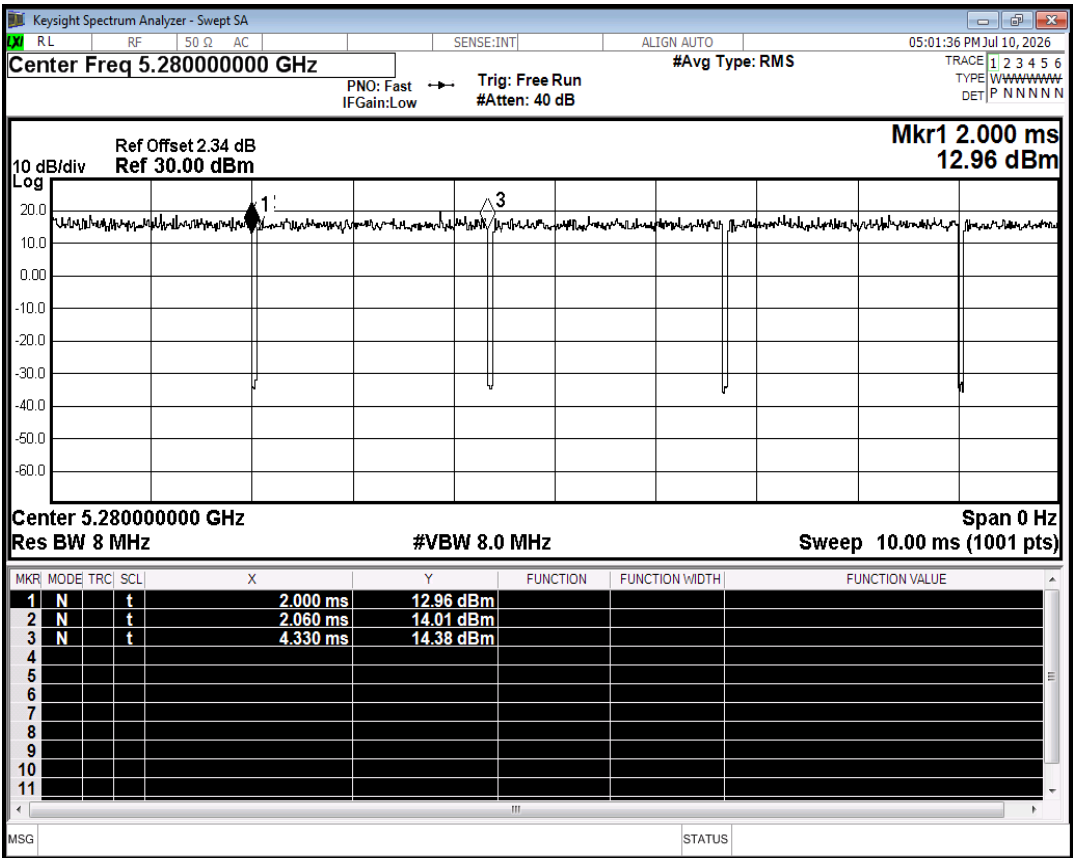


Duty Cycle NVNT ac20 5280MHz Ant2

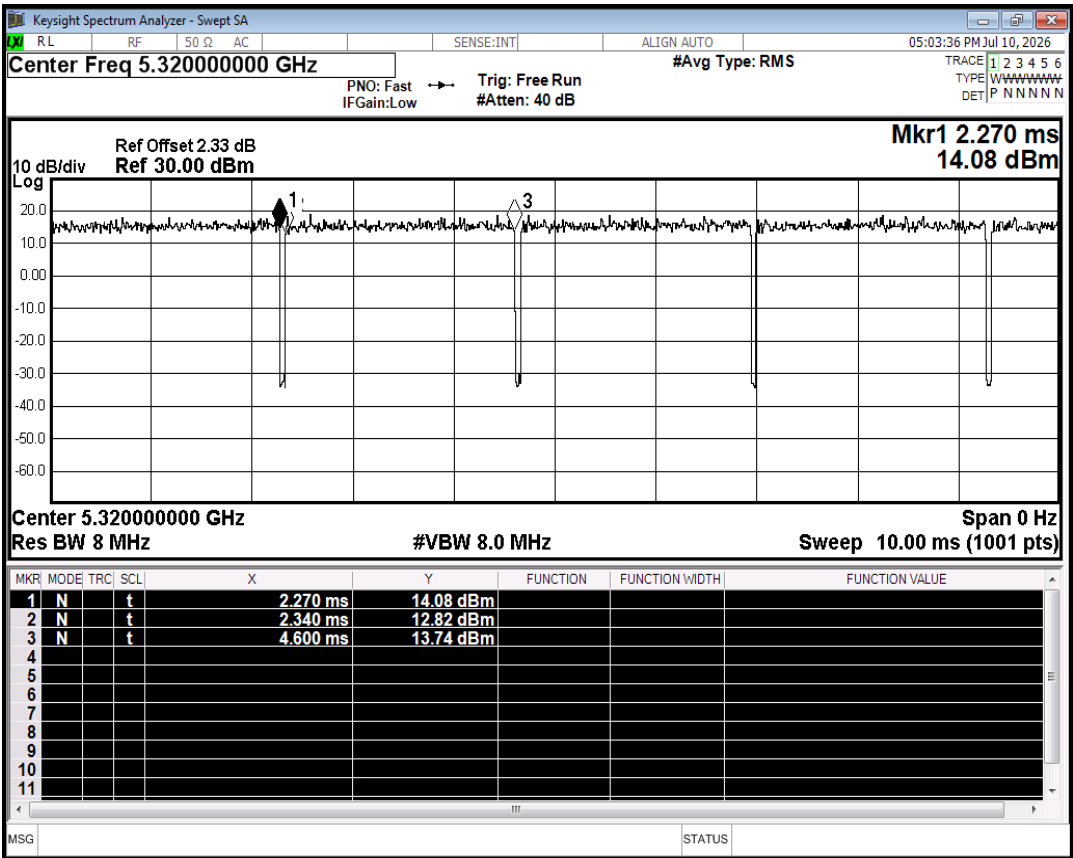


Duty Cycle NVNT ac20 5320MHz Ant2

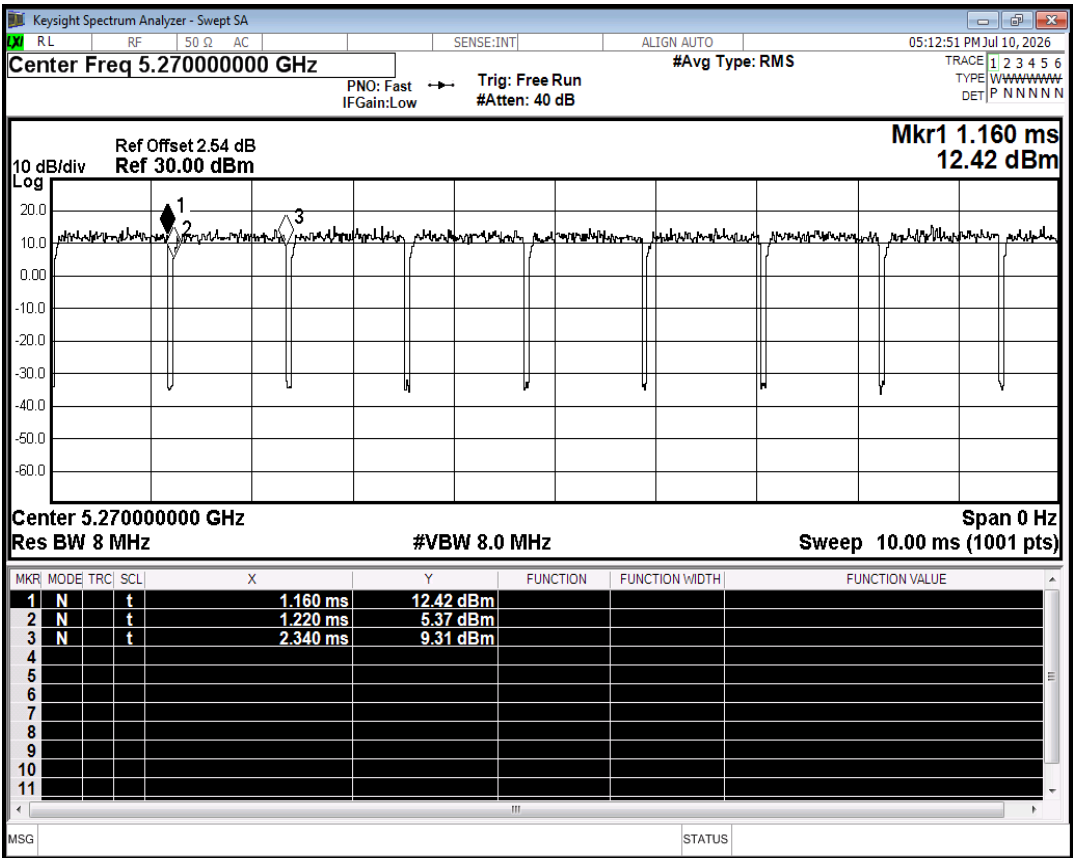

Duty Cycle NVNT ac40 5270MHz Ant2

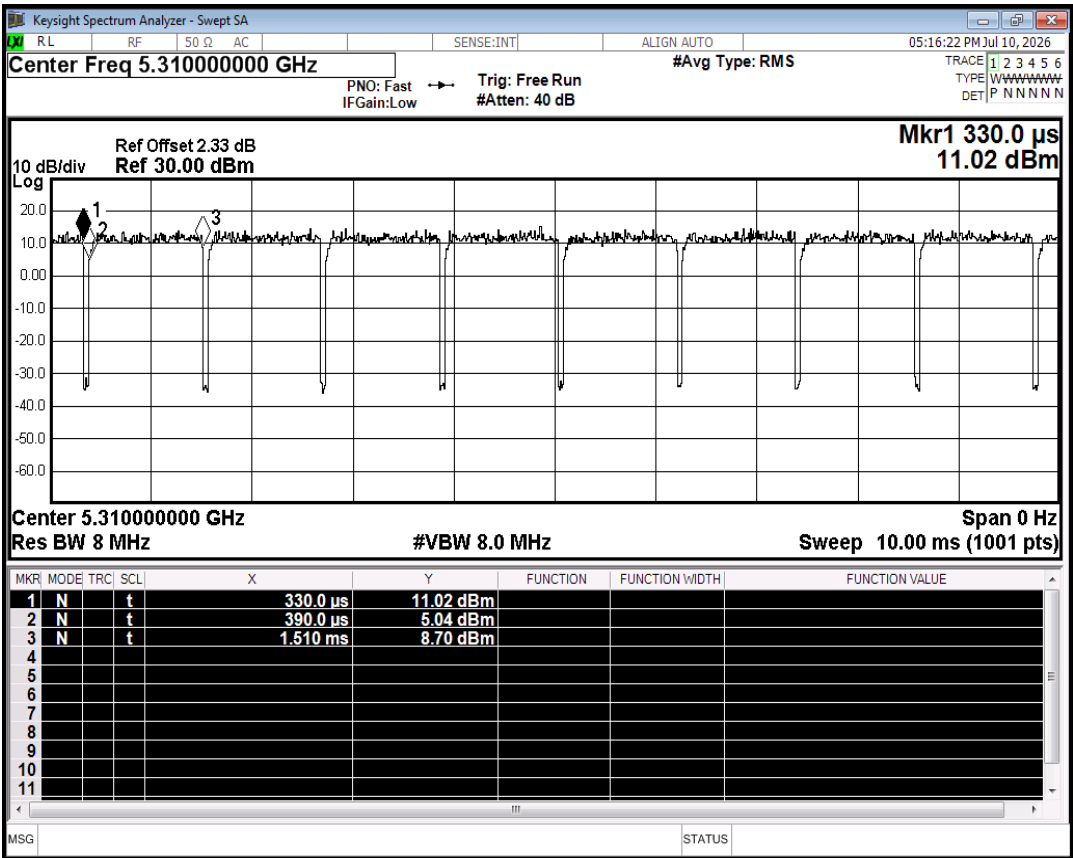

Duty Cycle NVNT ac40 5310MHz Ant2

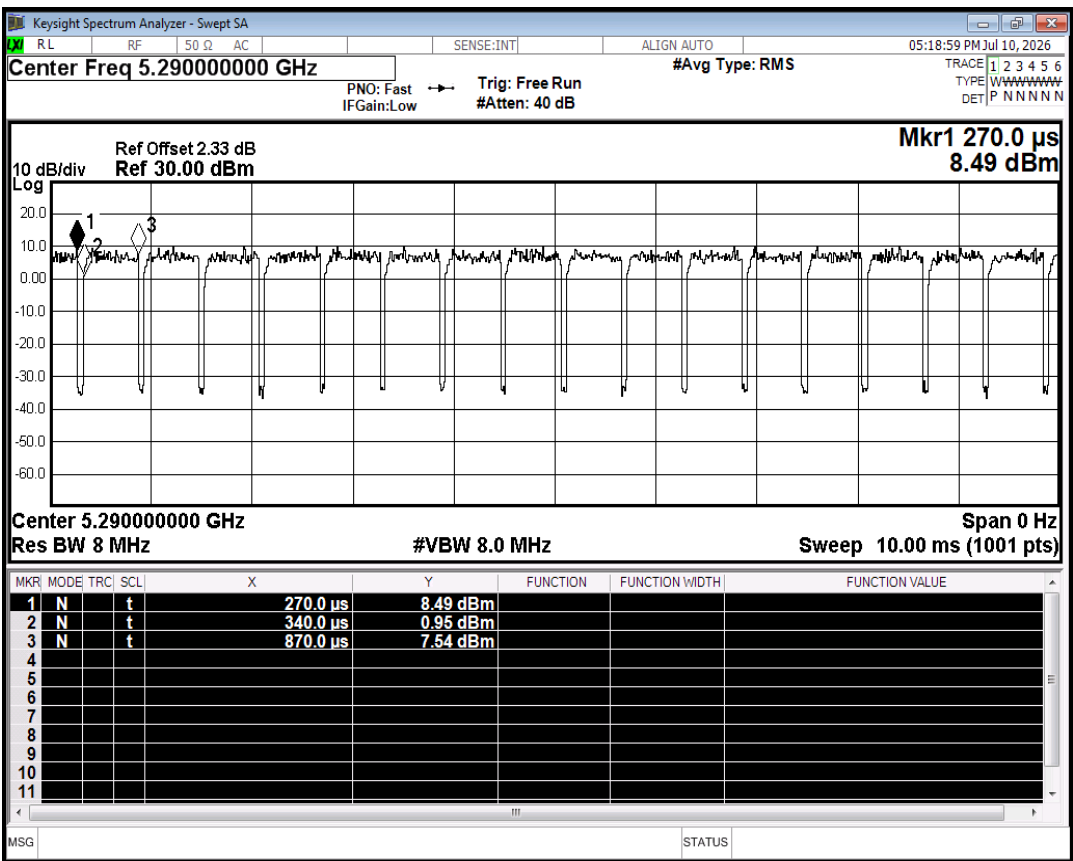

Duty Cycle NVNT ac80 5290MHz Ant2