








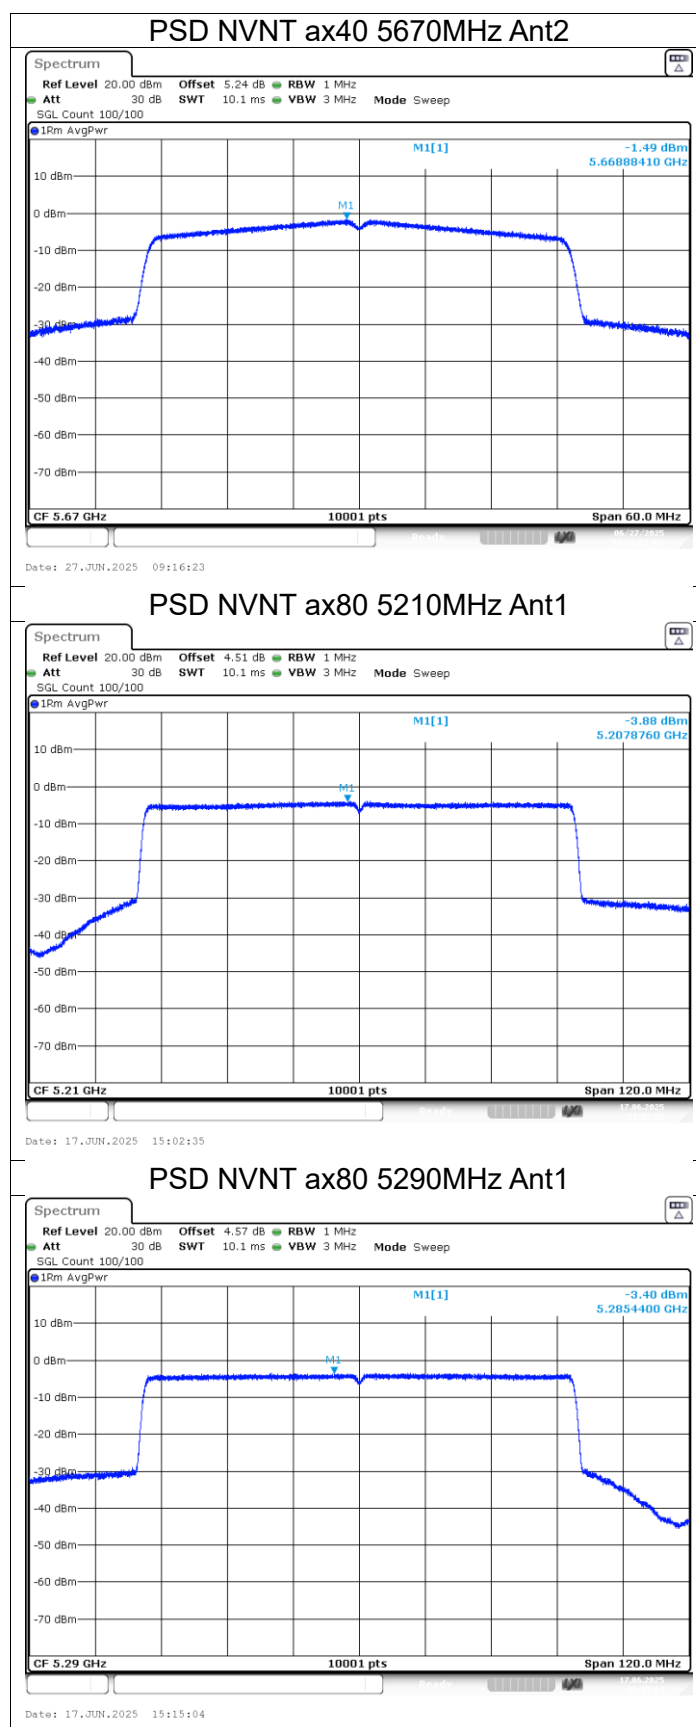


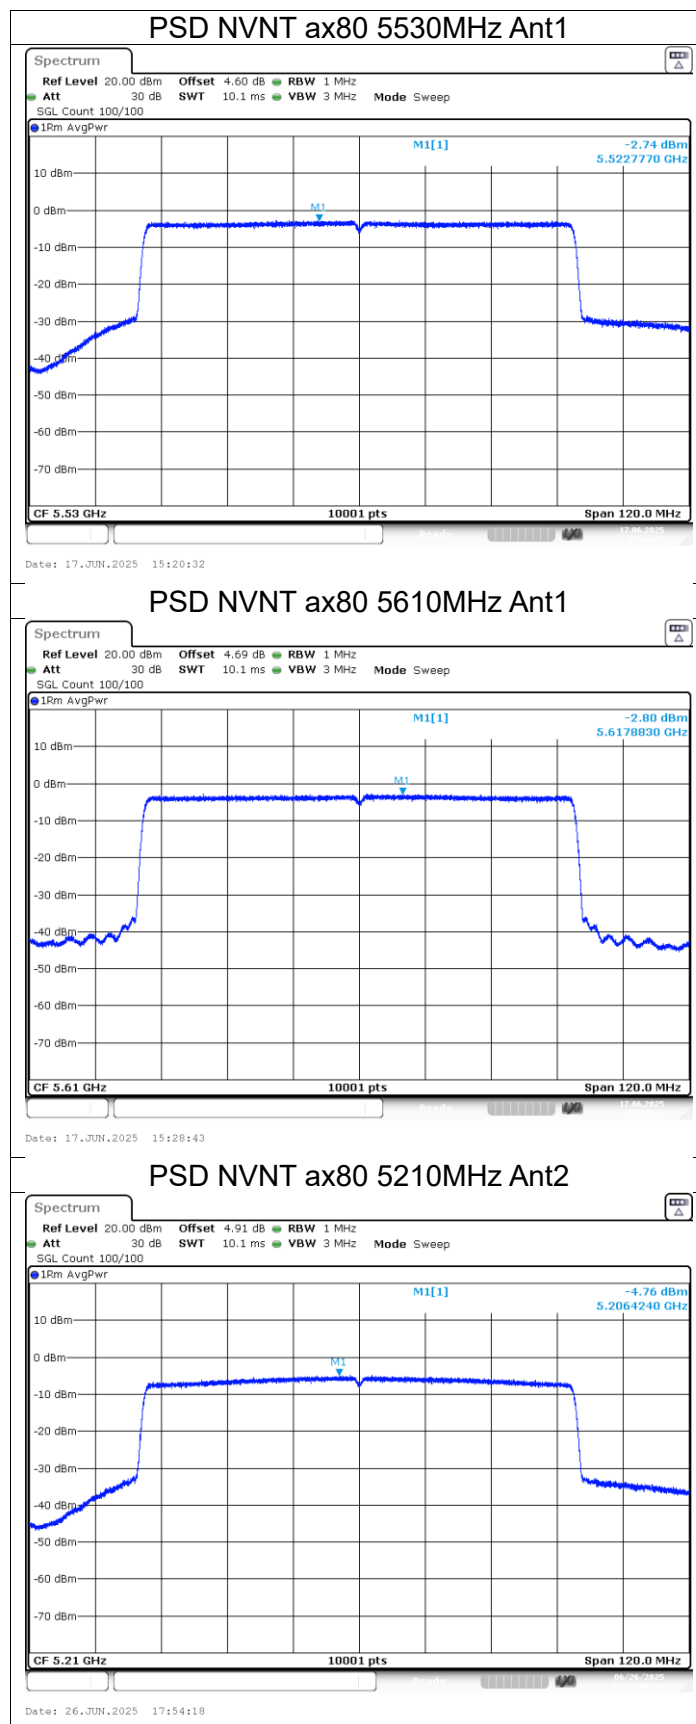


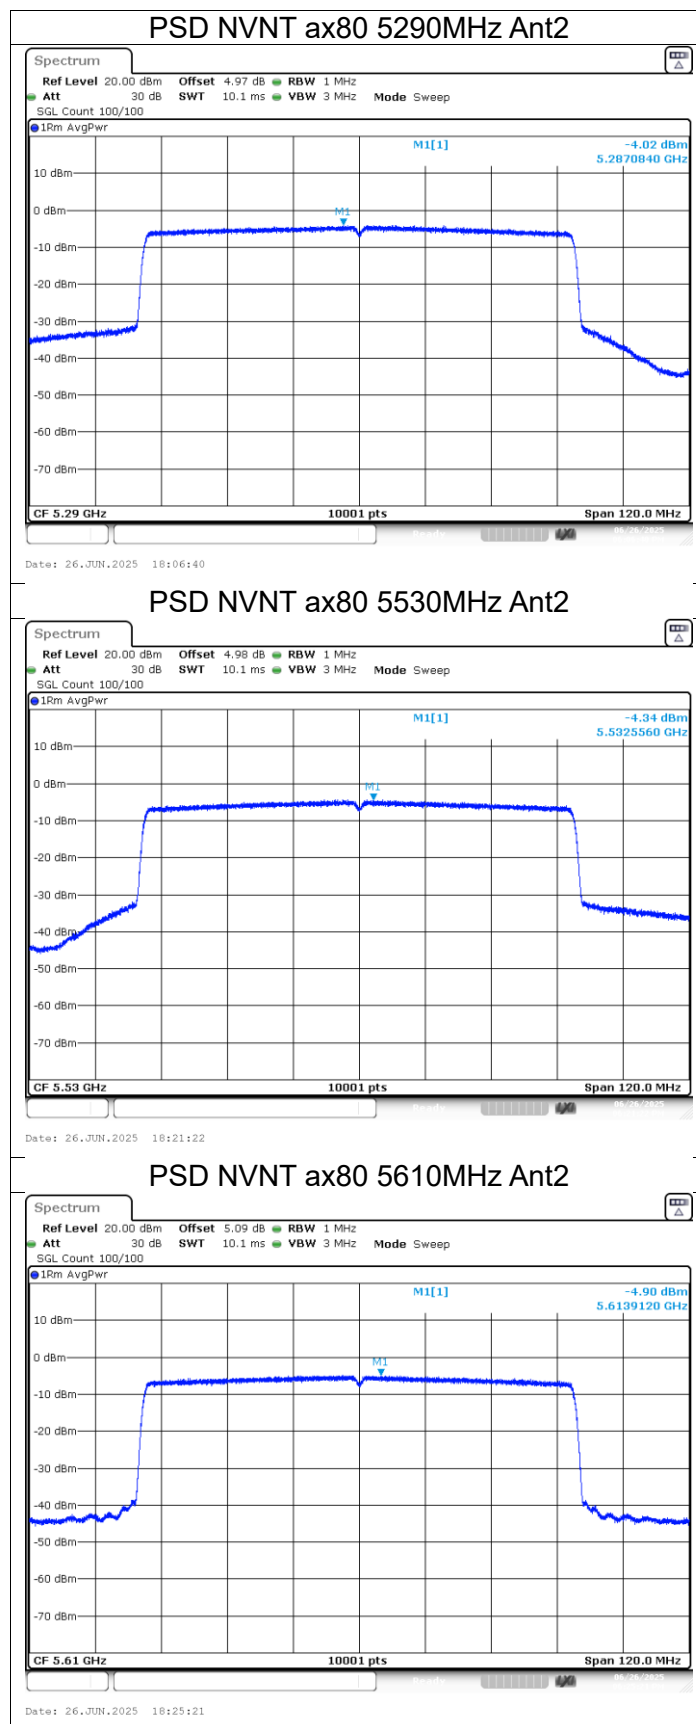


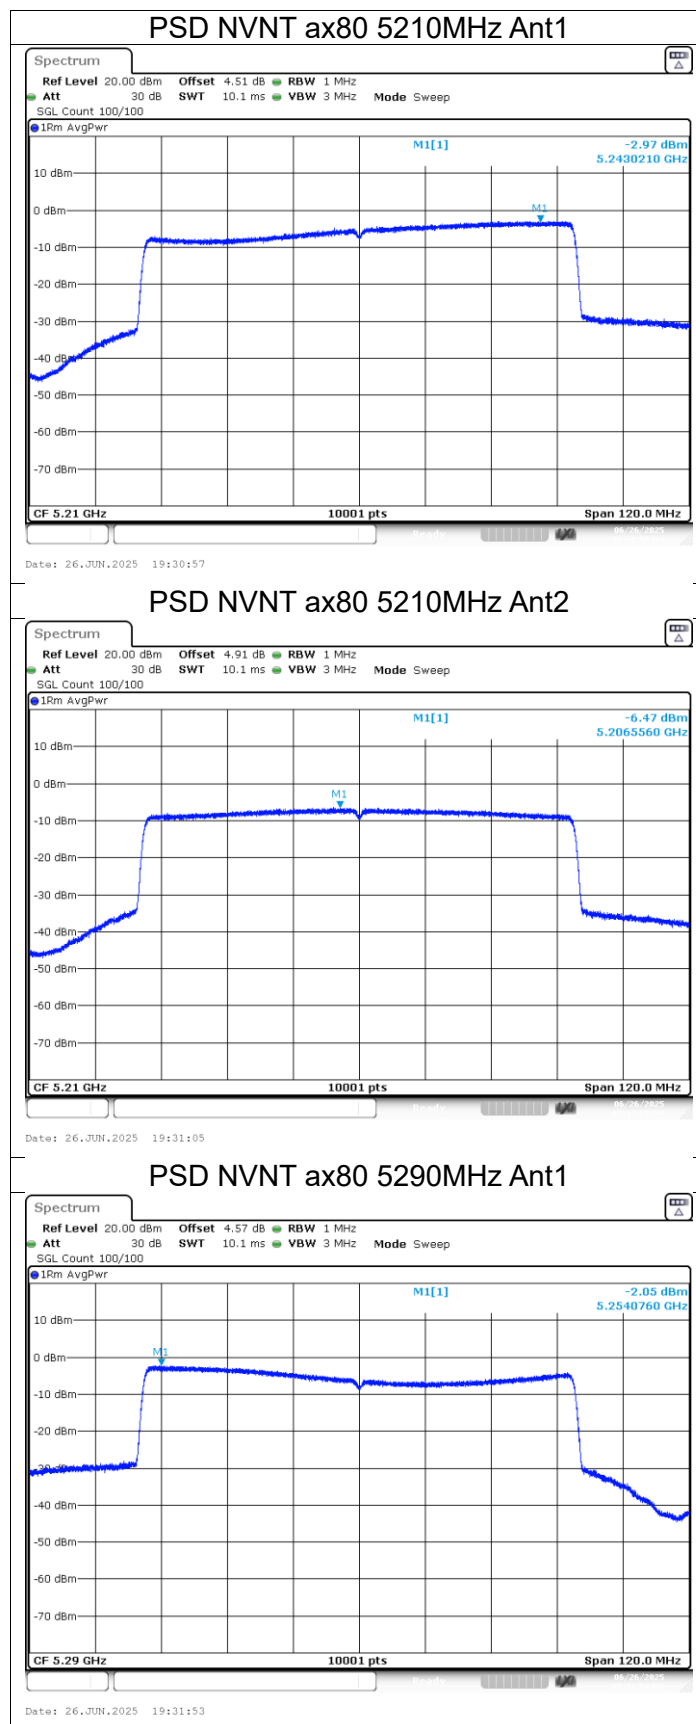


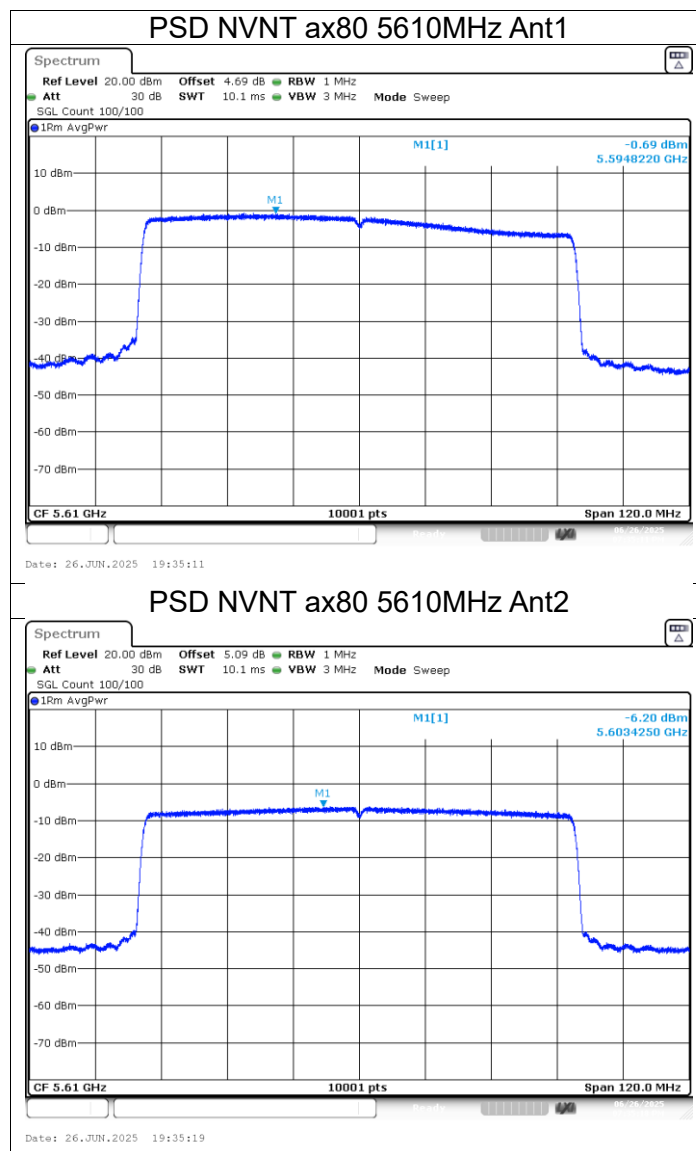


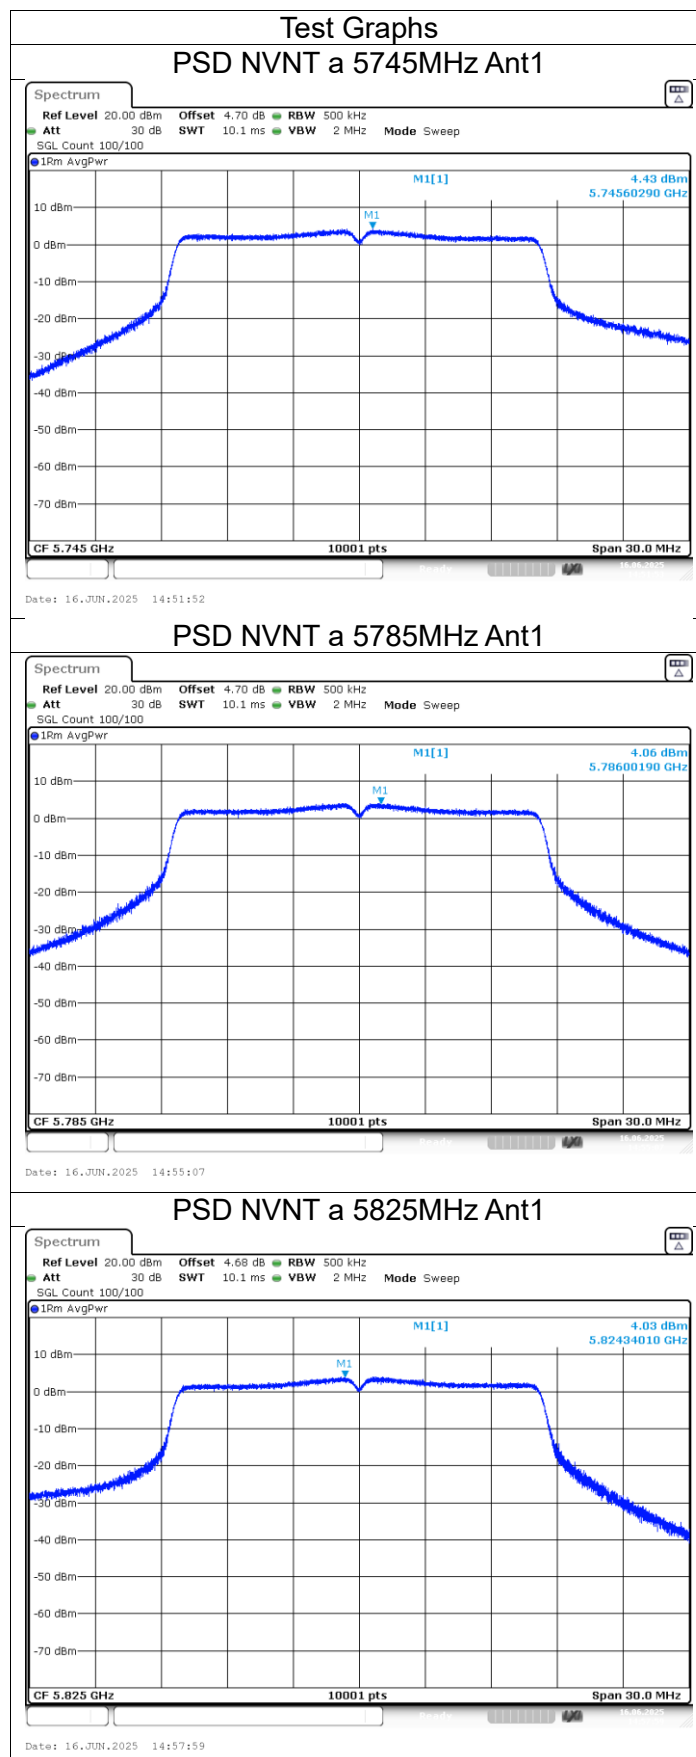


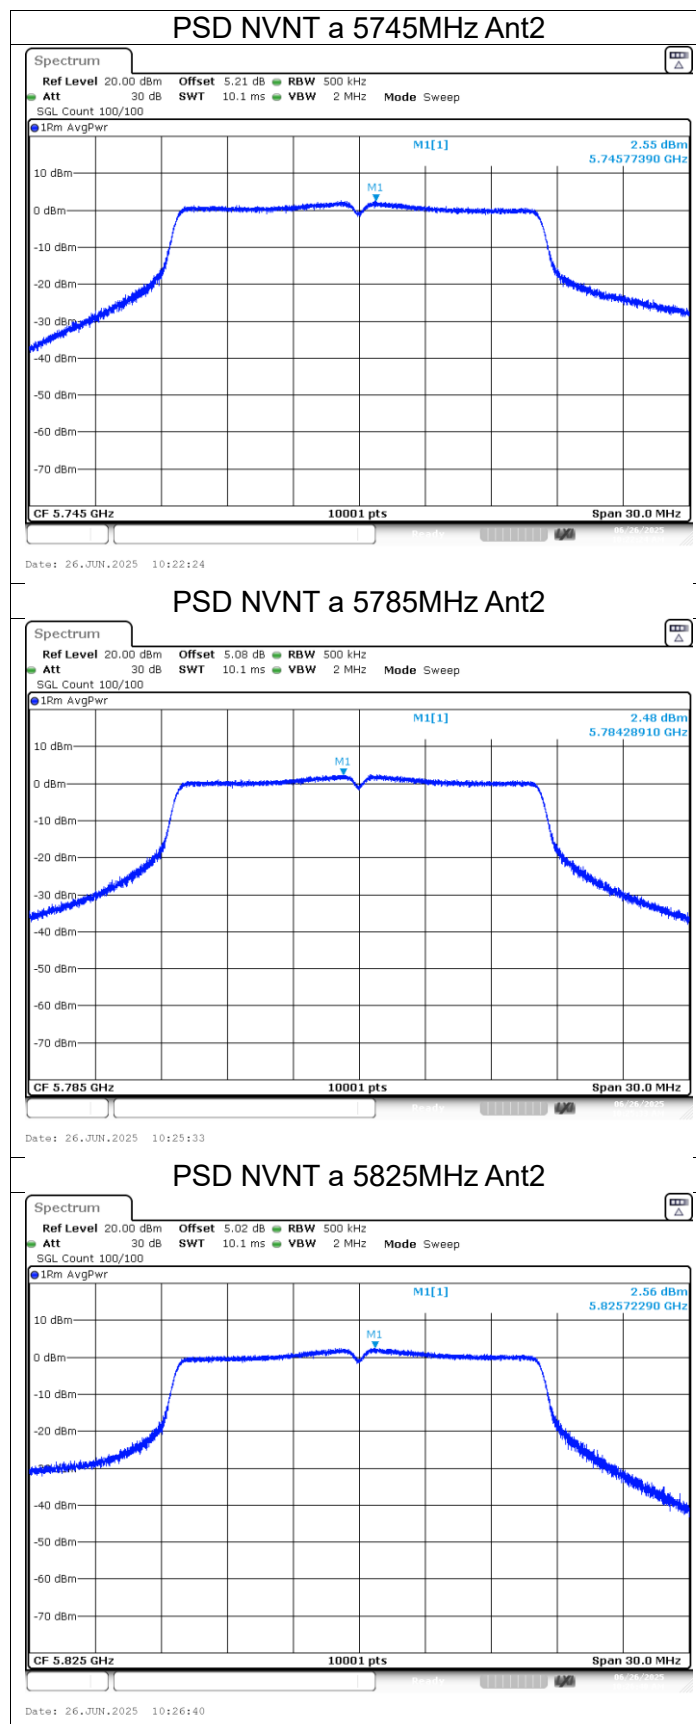


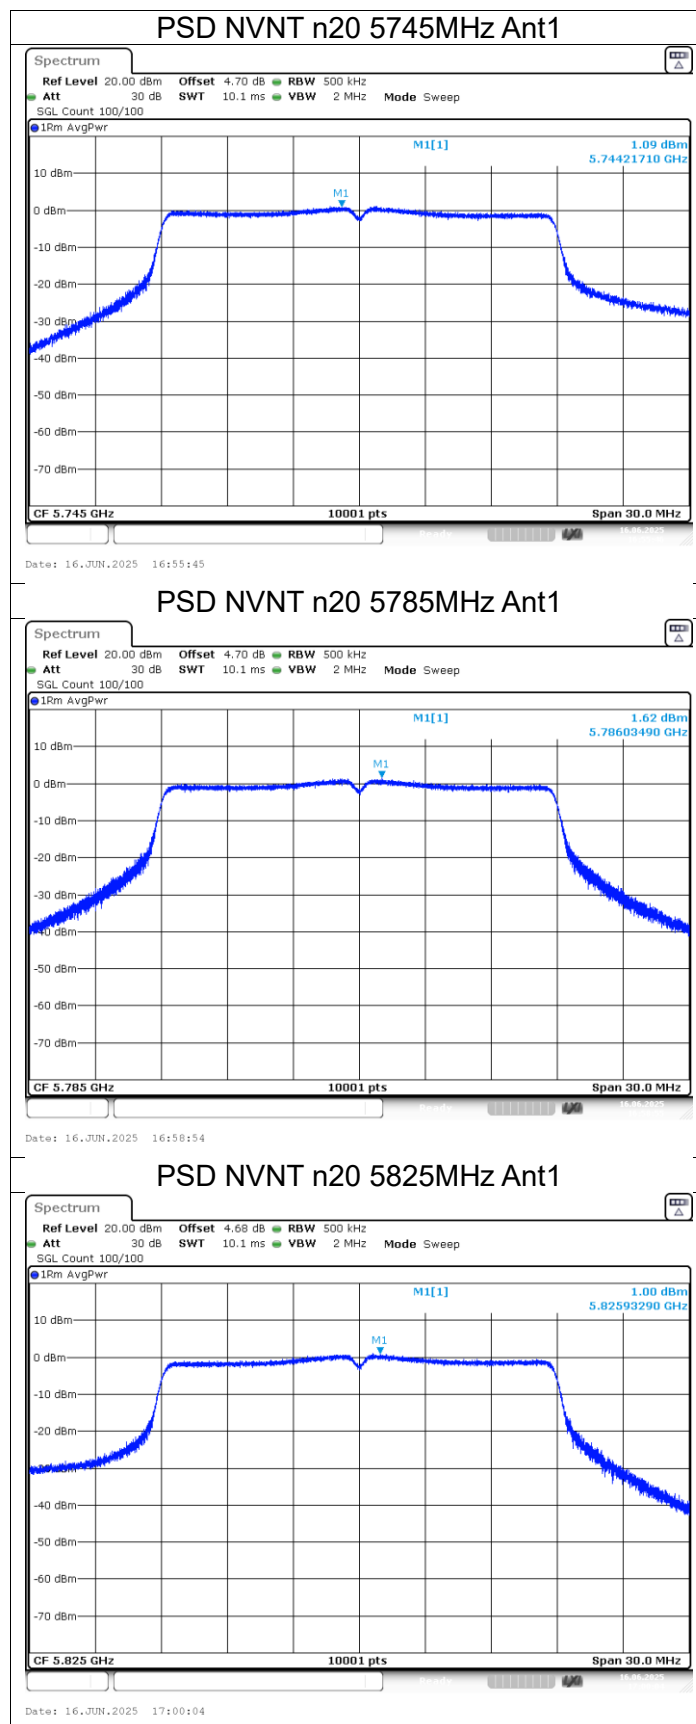


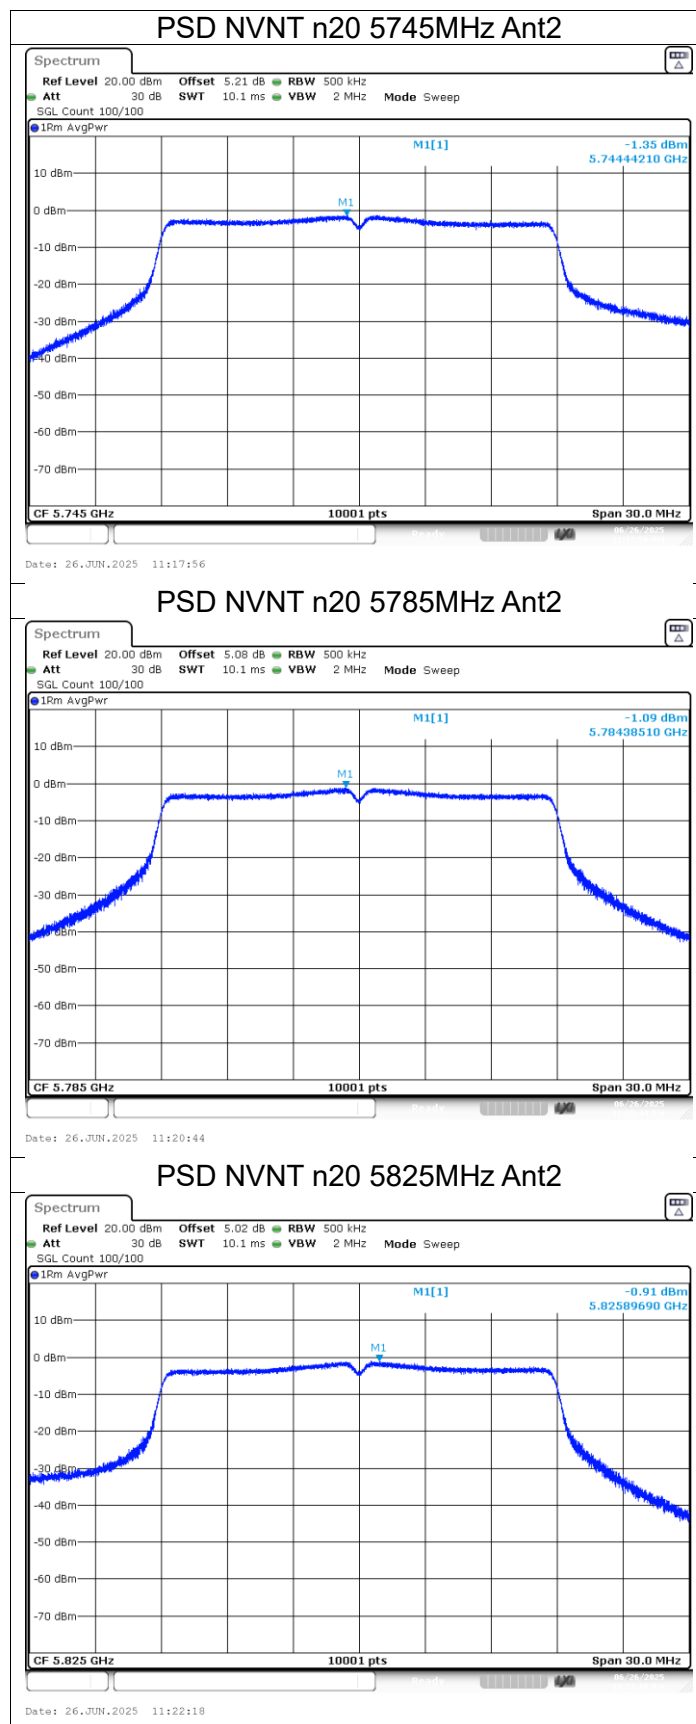


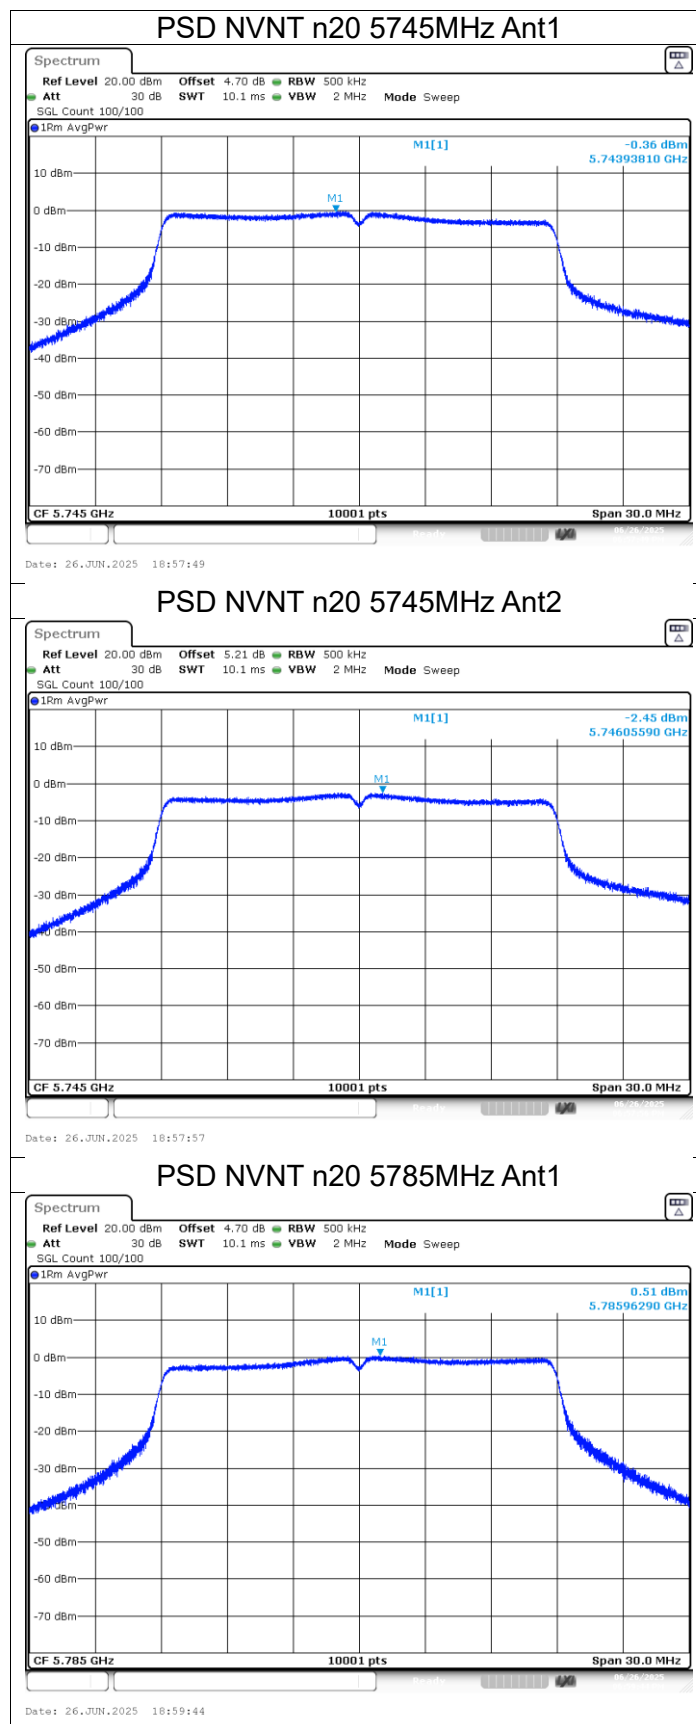


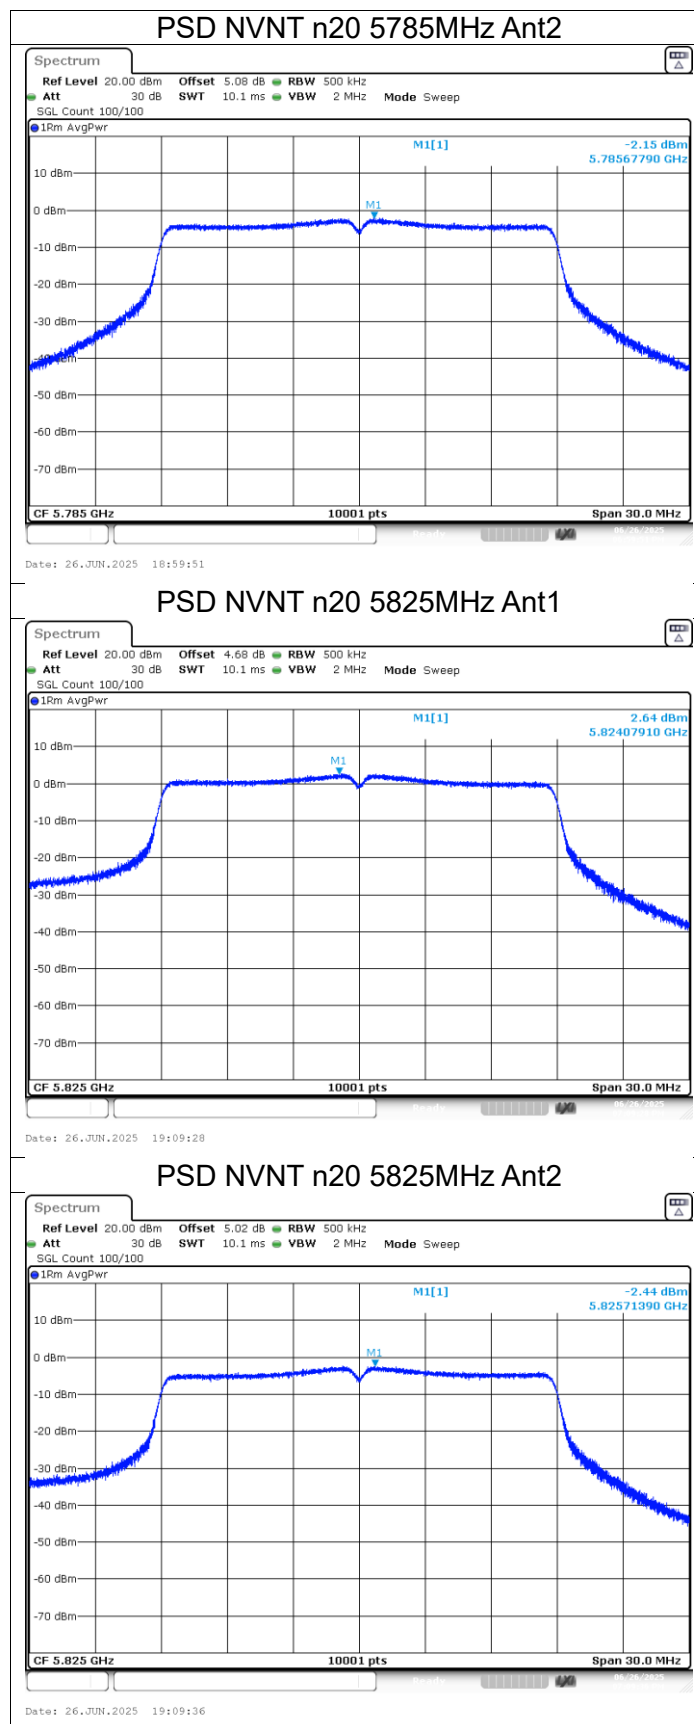


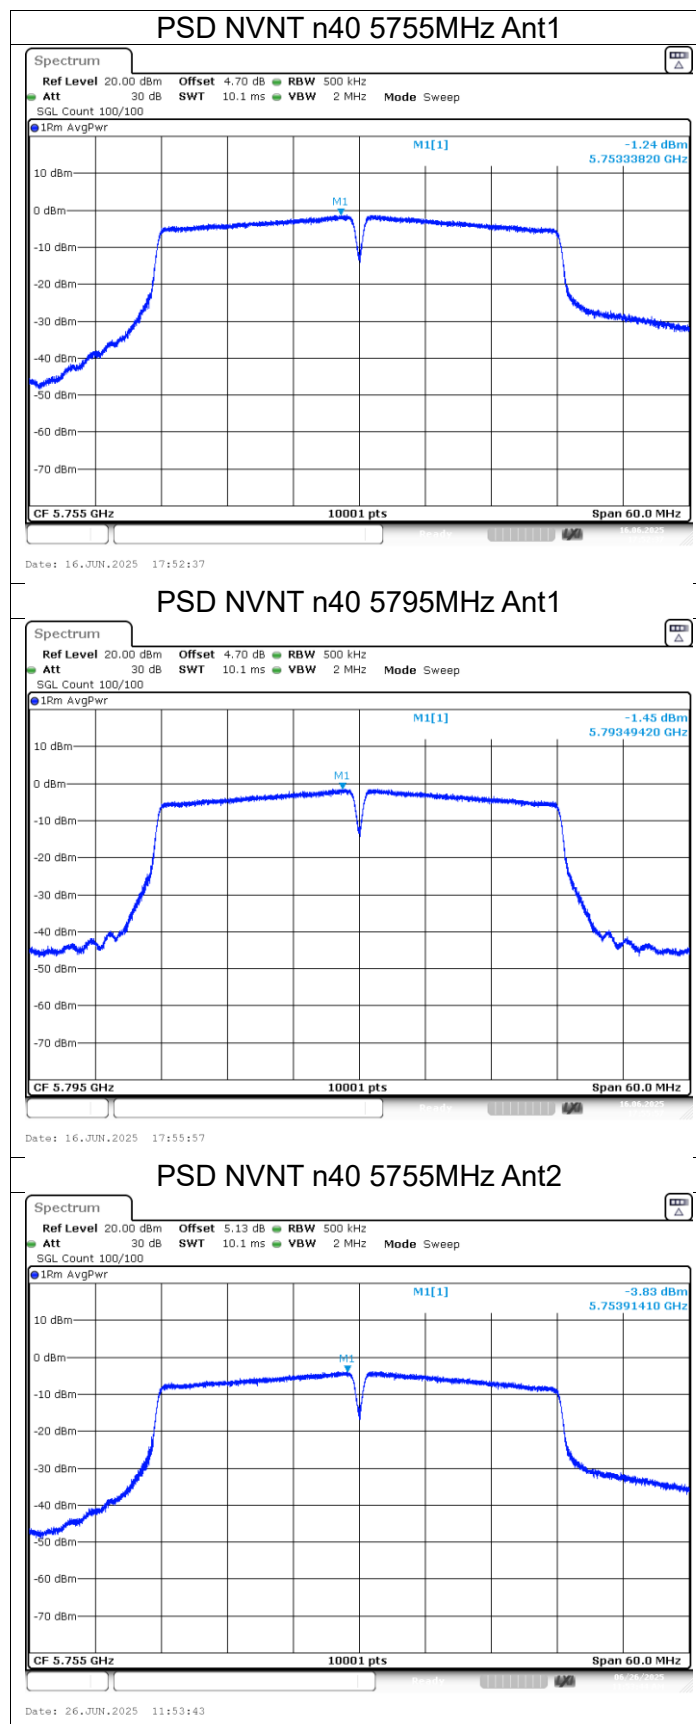


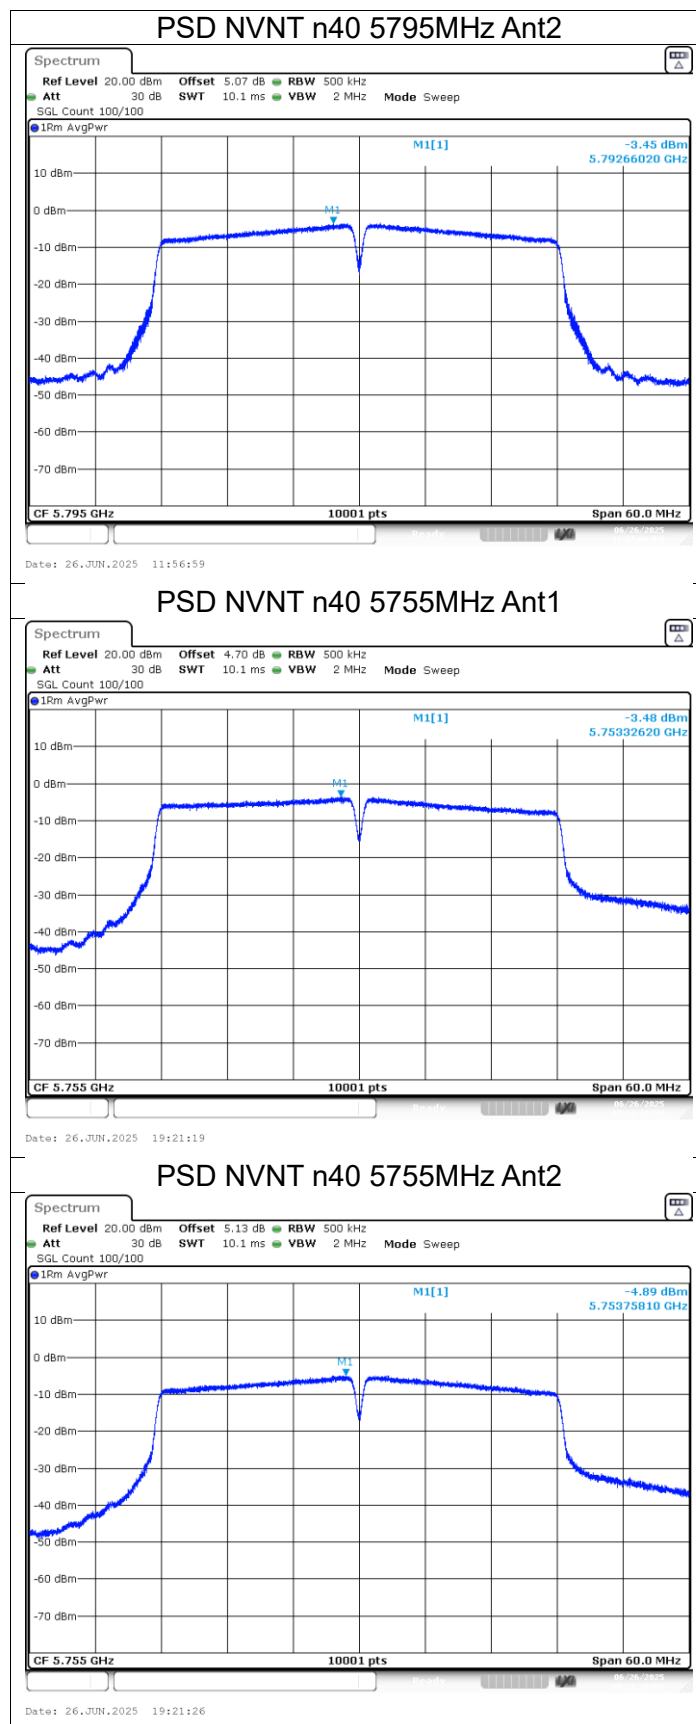


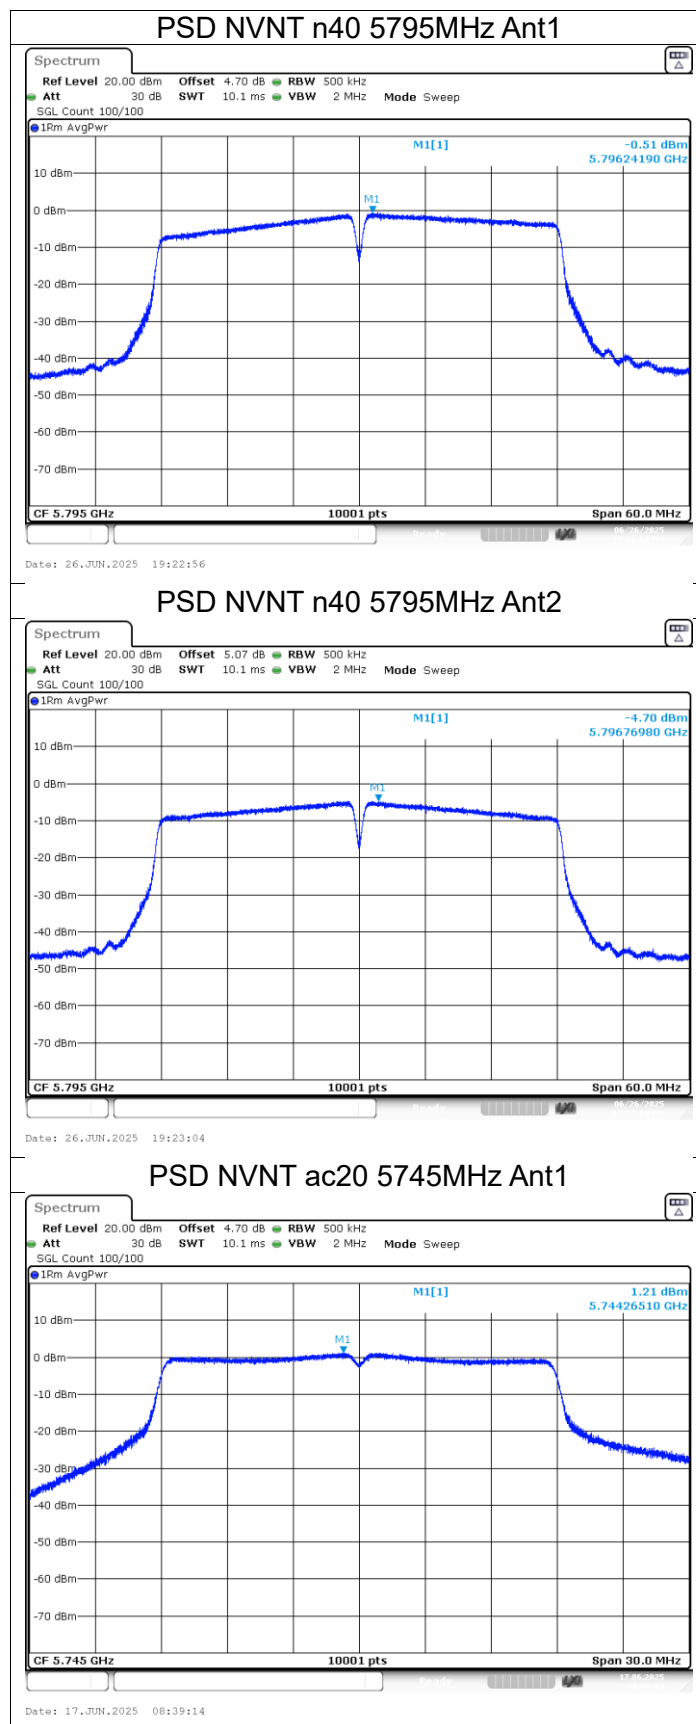


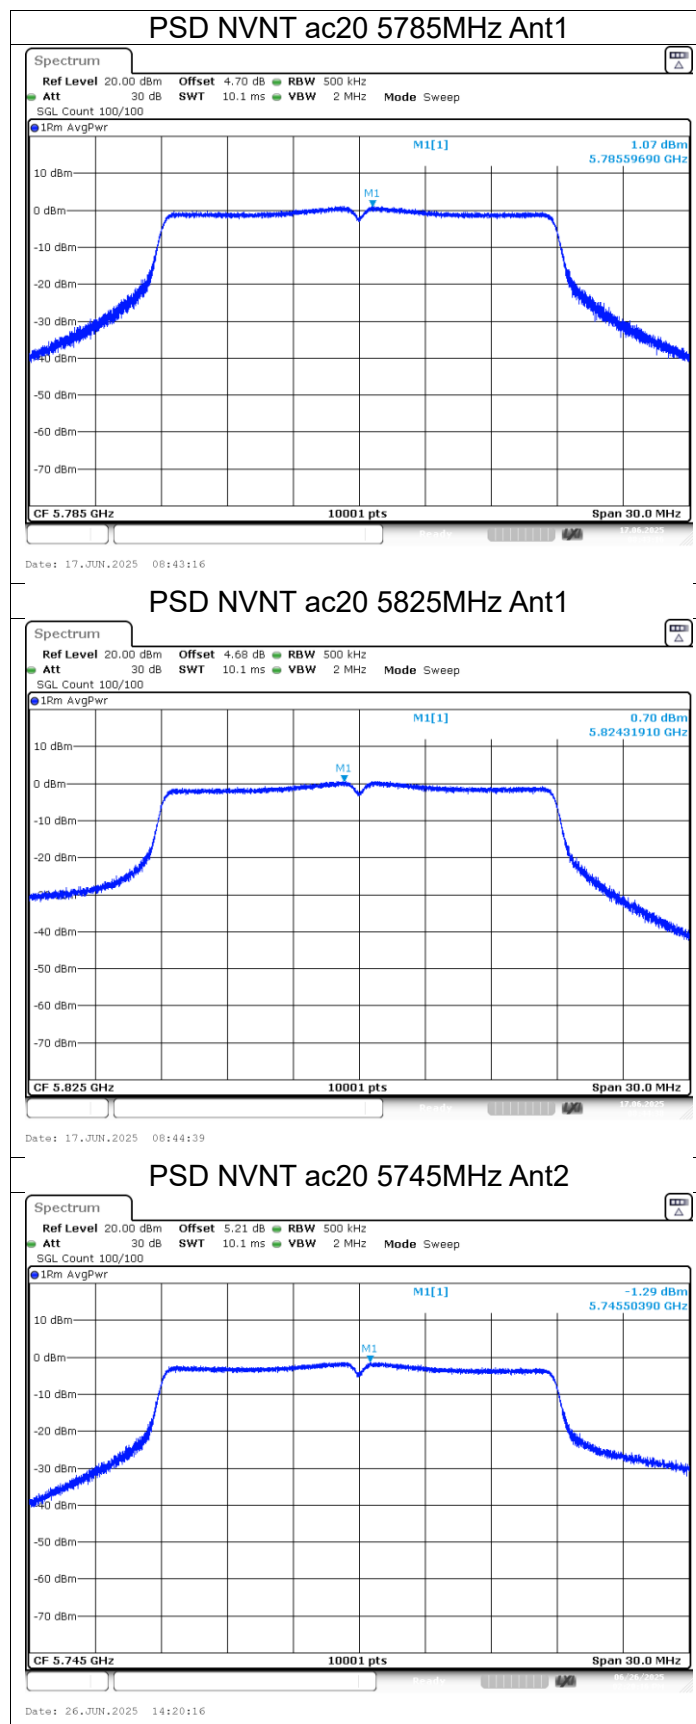


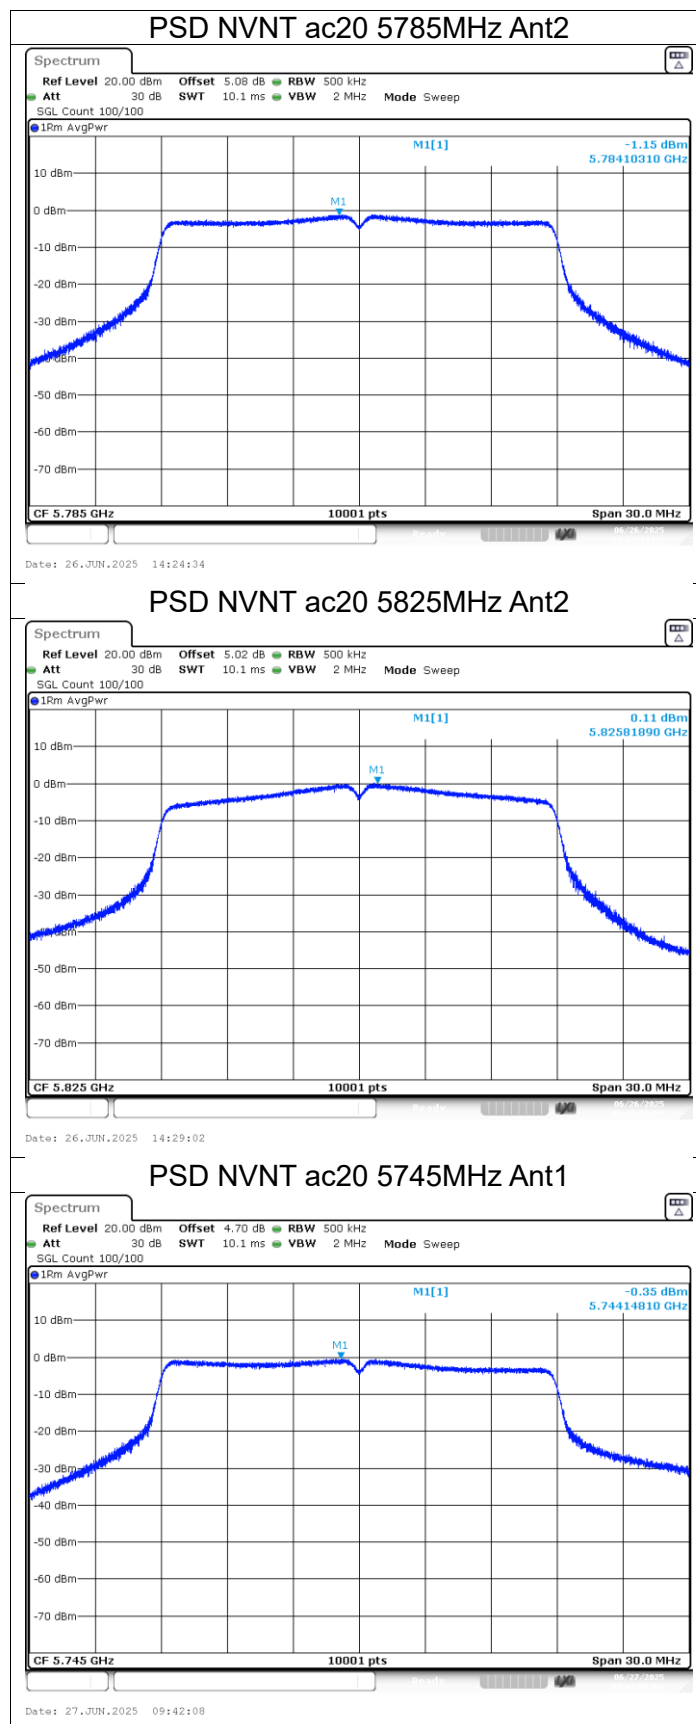


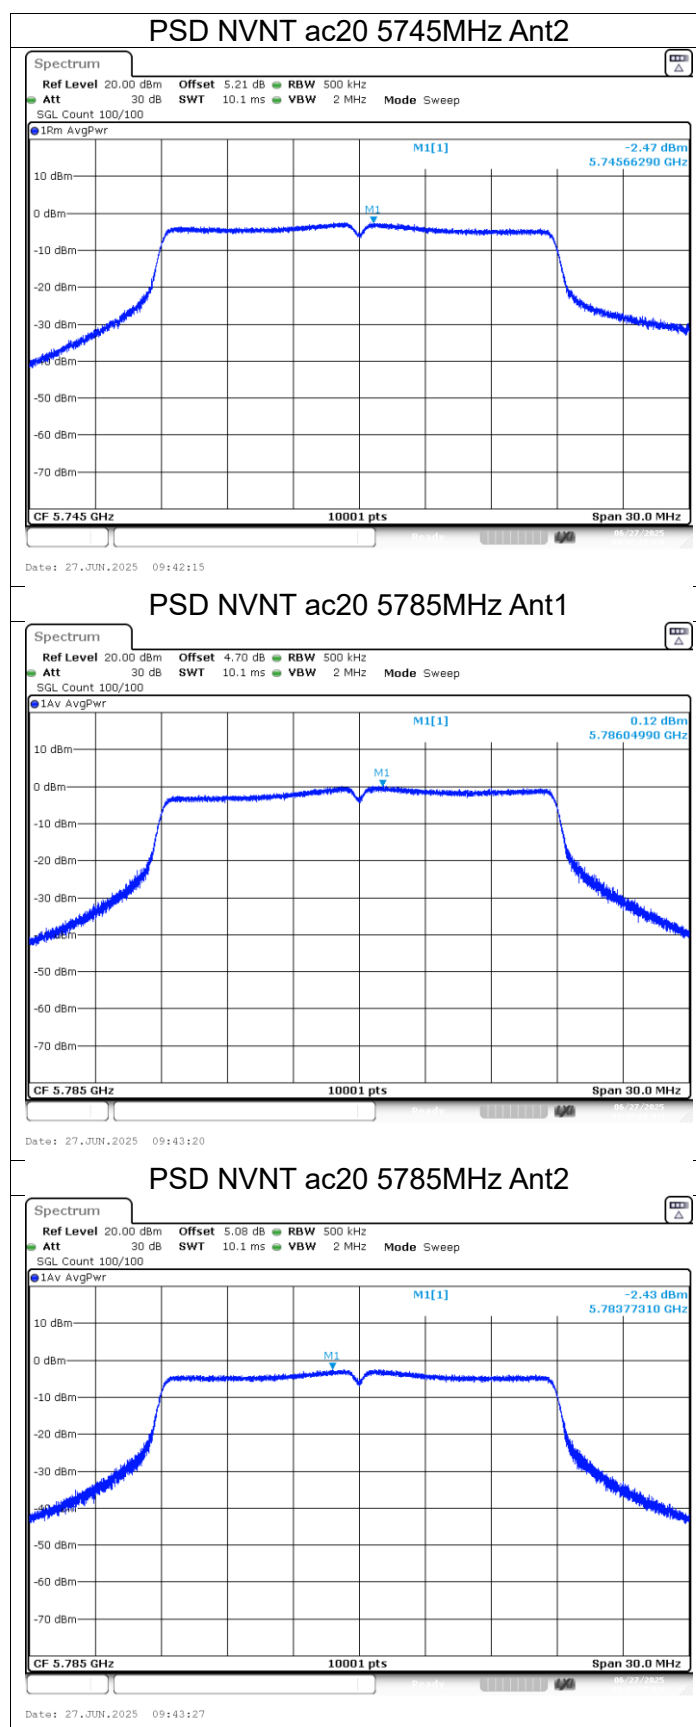


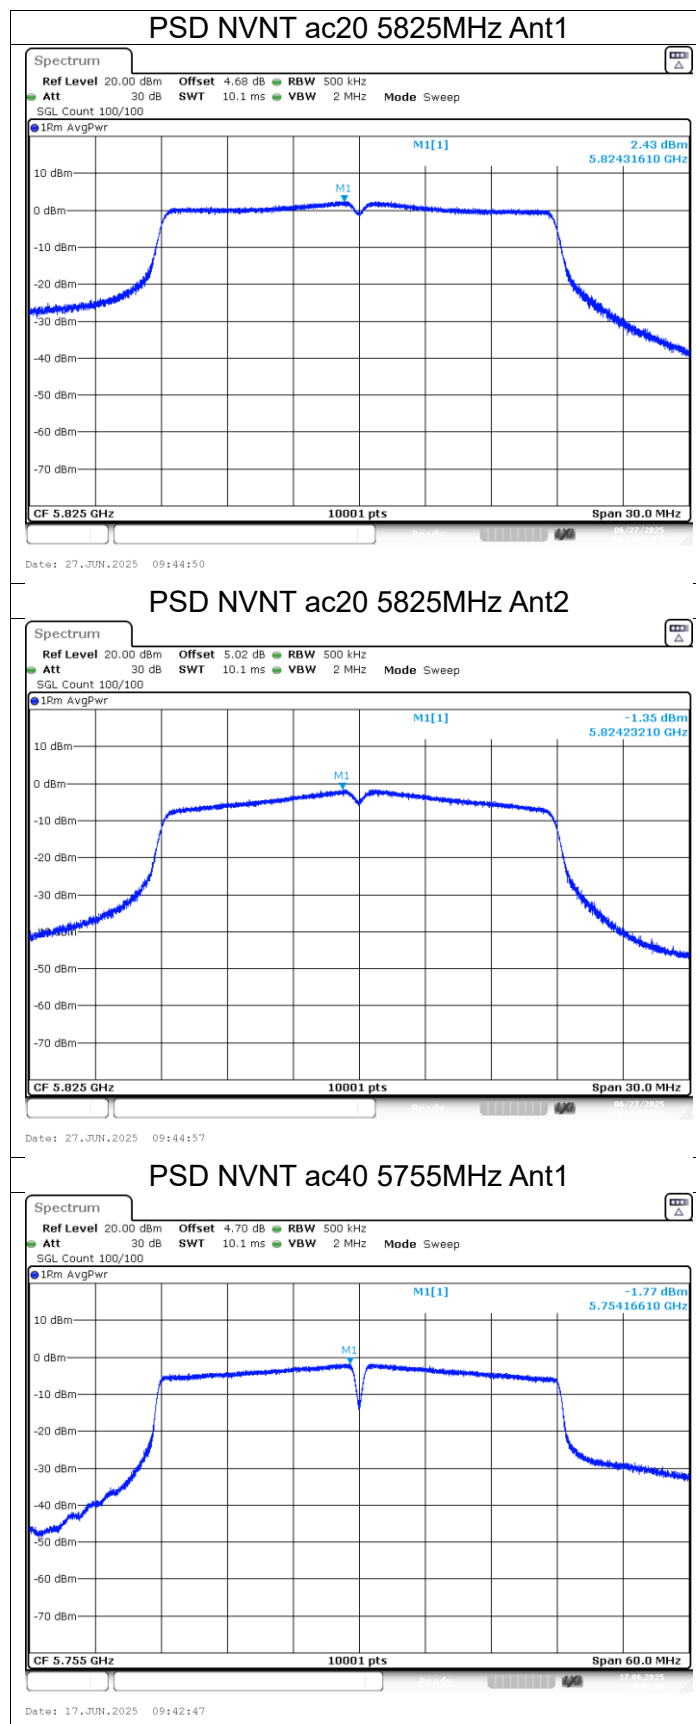


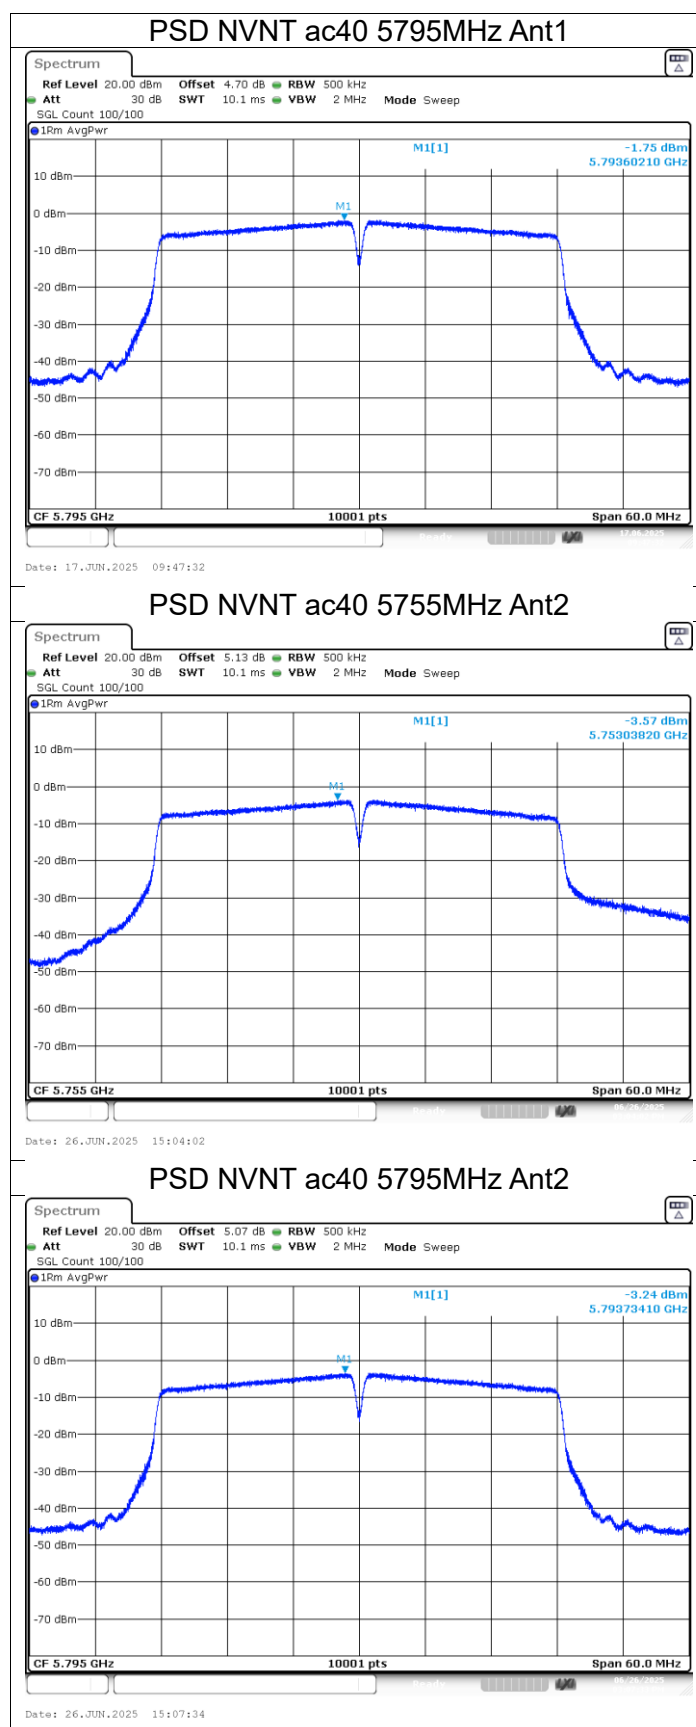


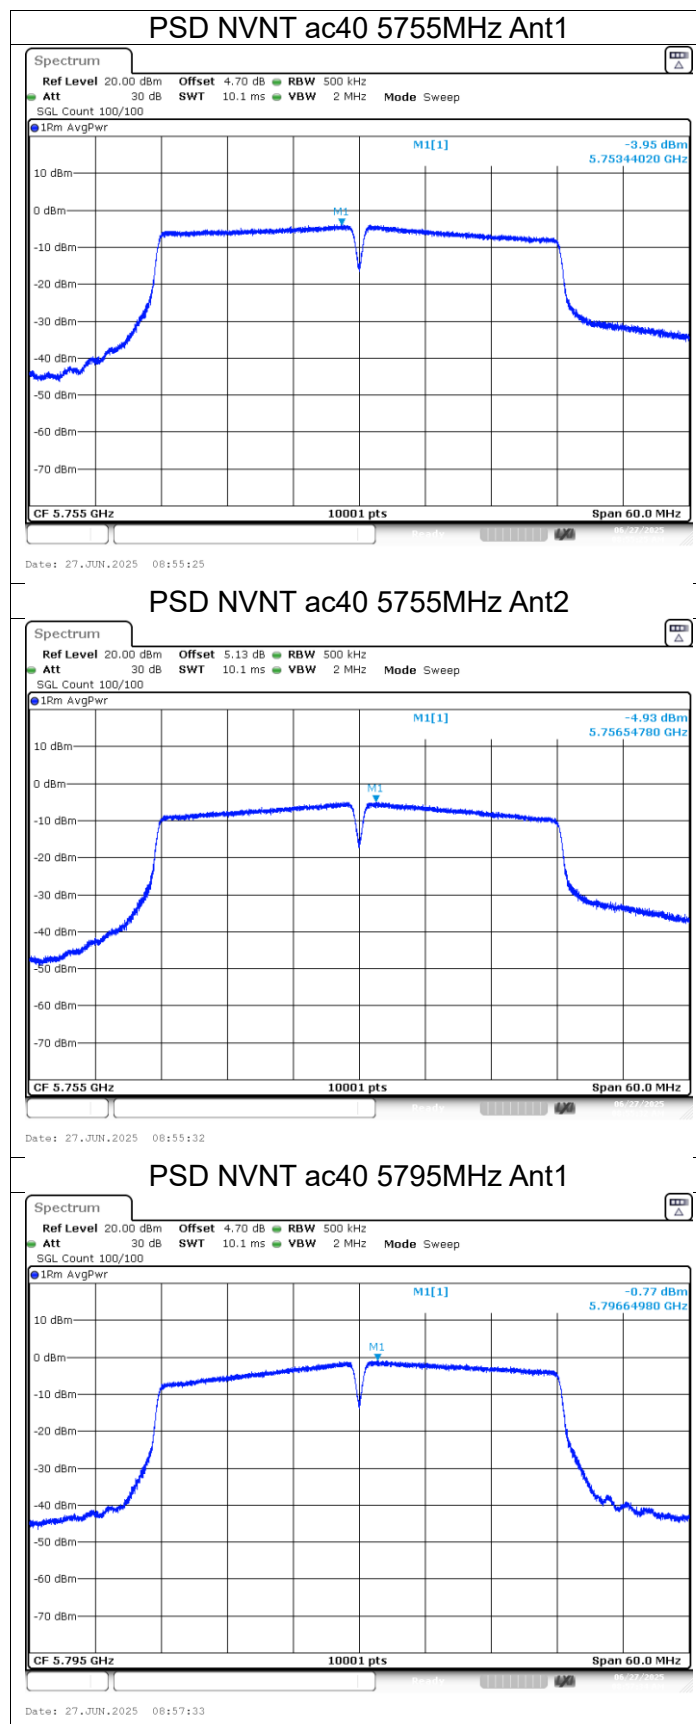


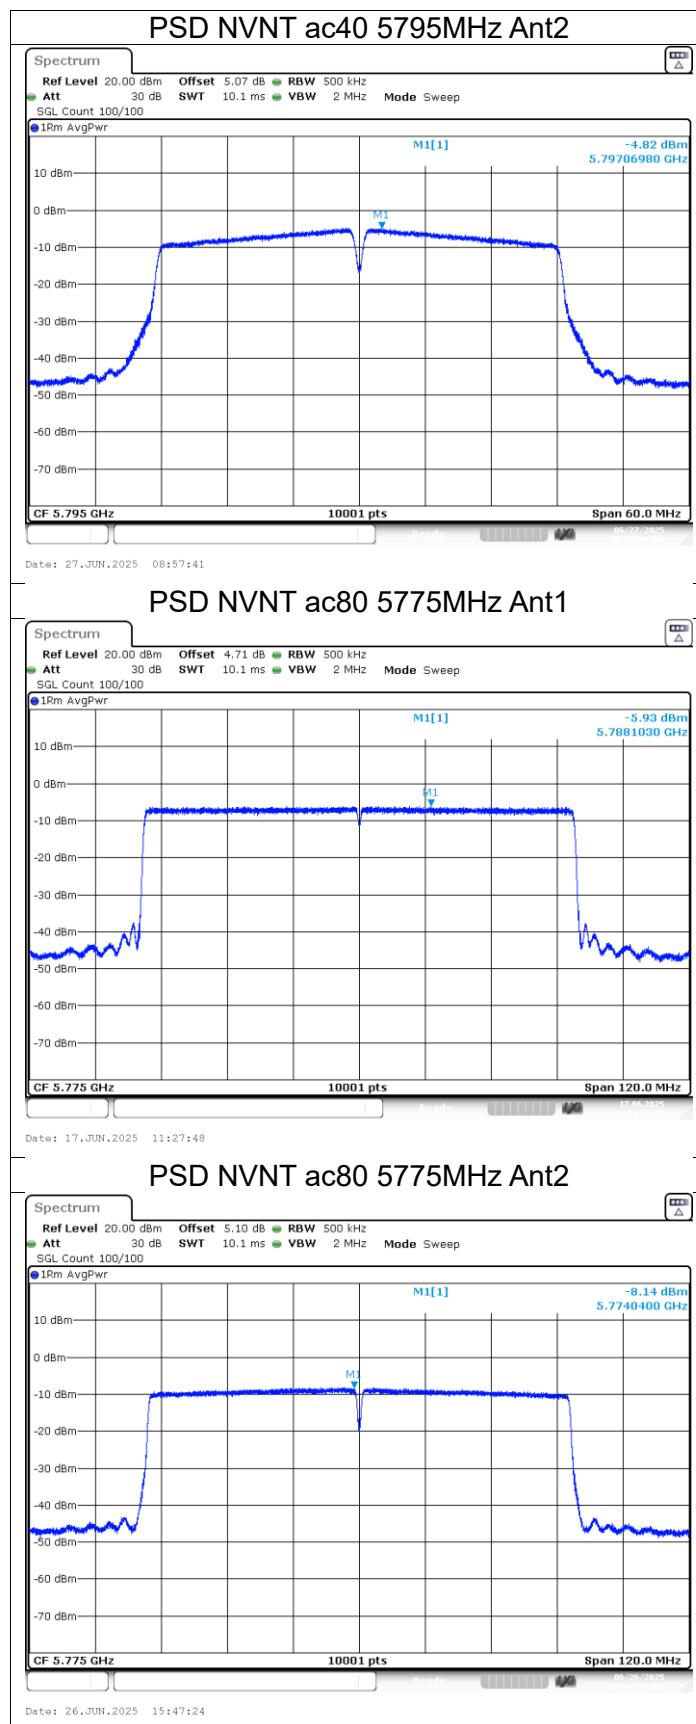


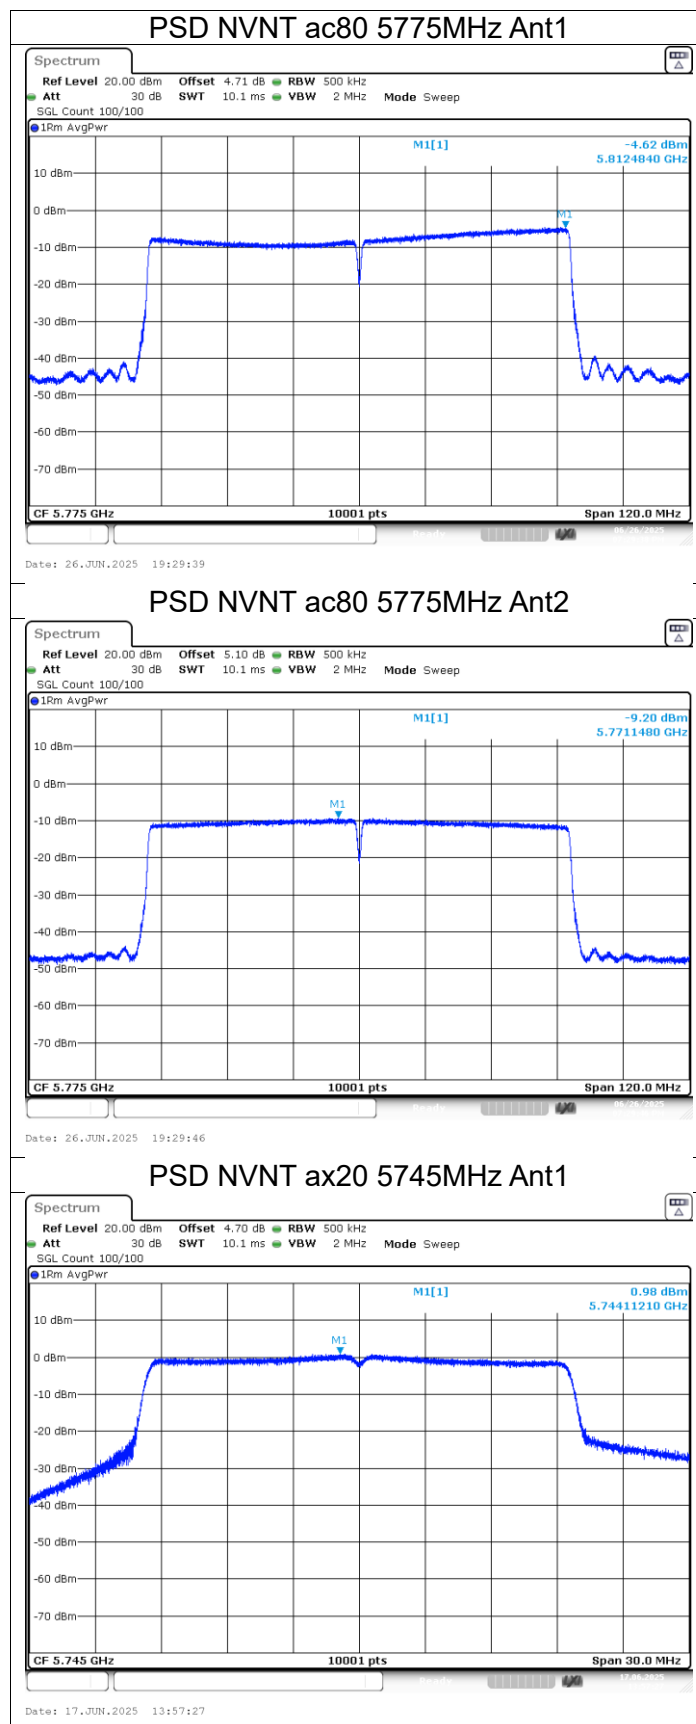


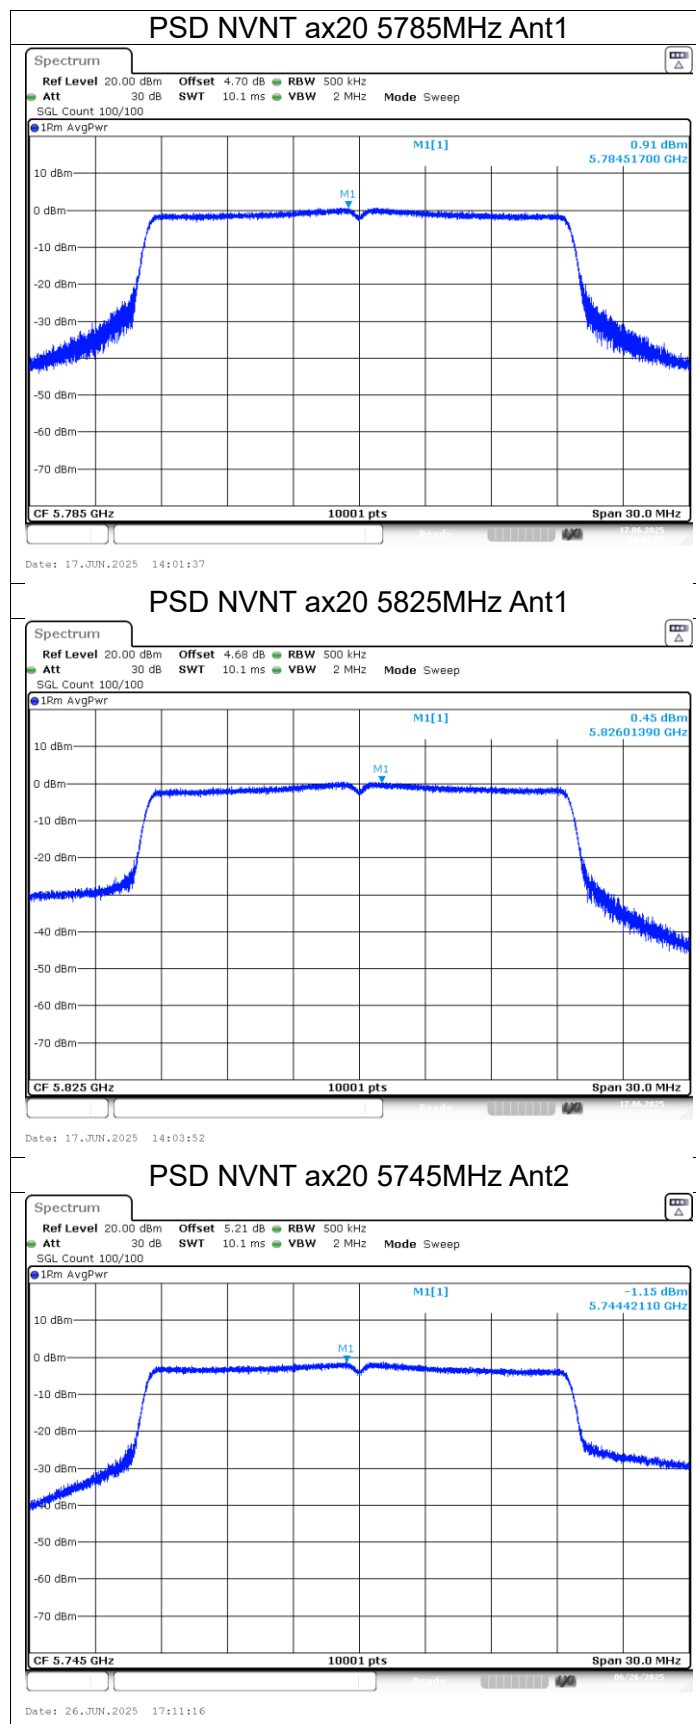


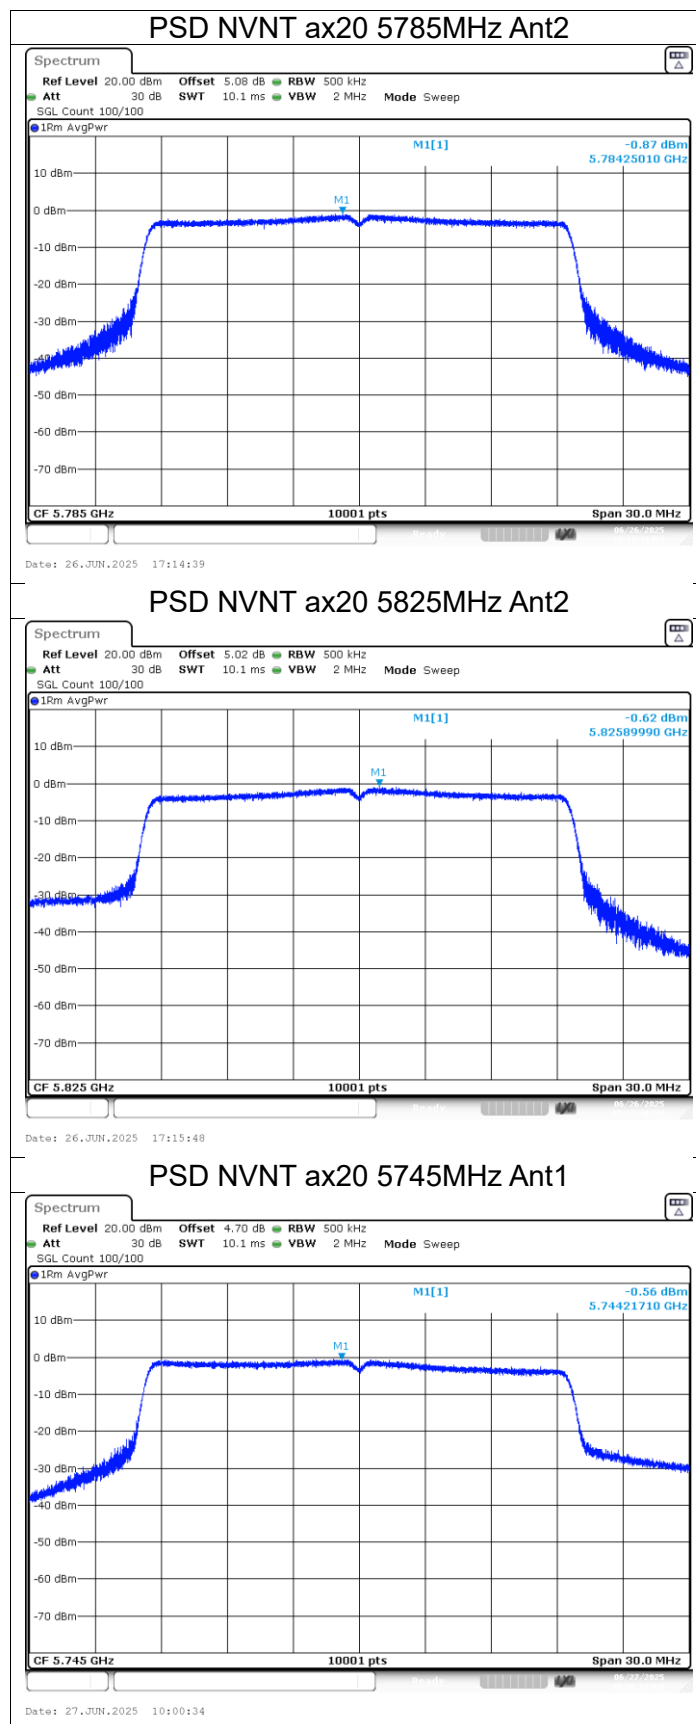


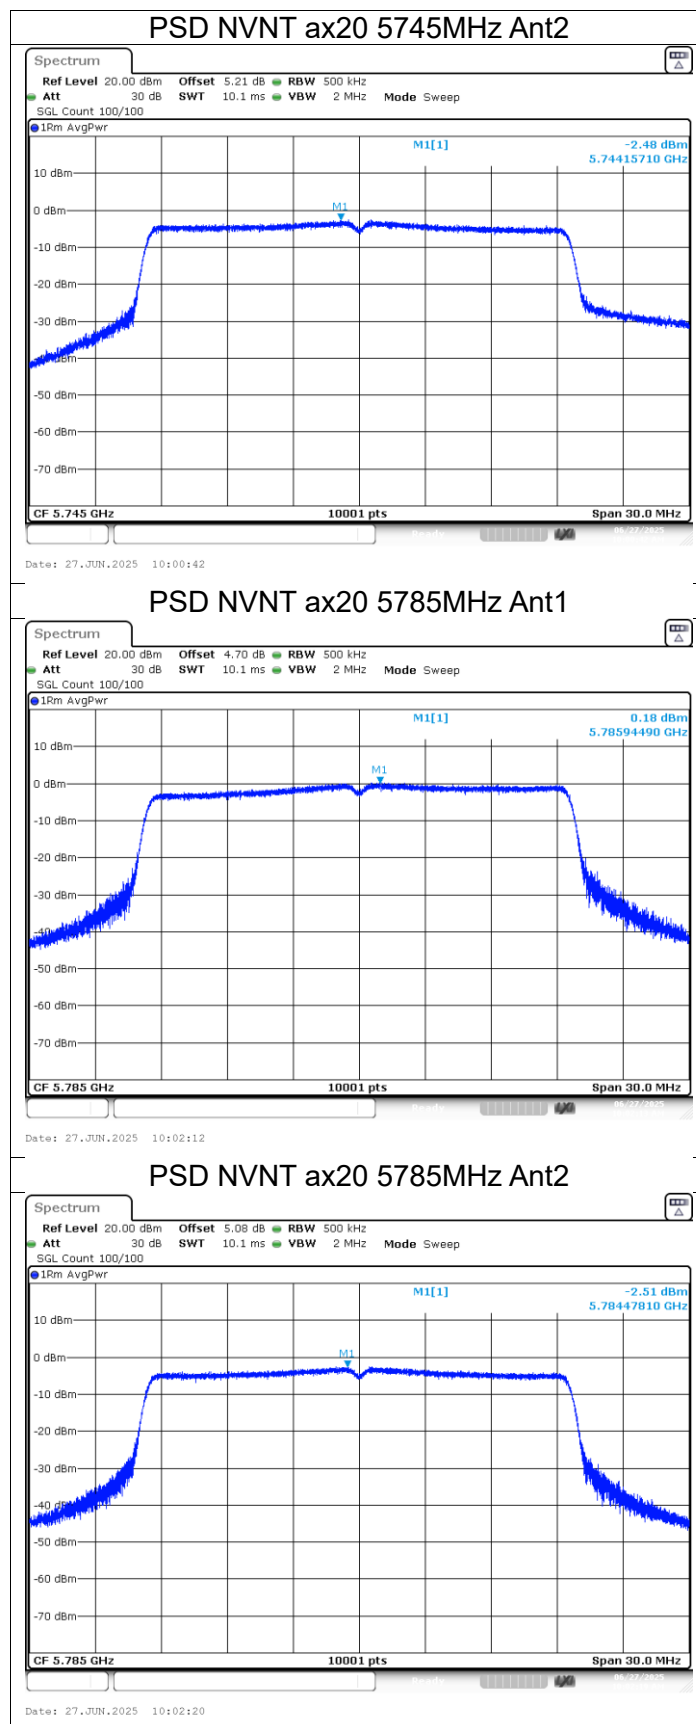


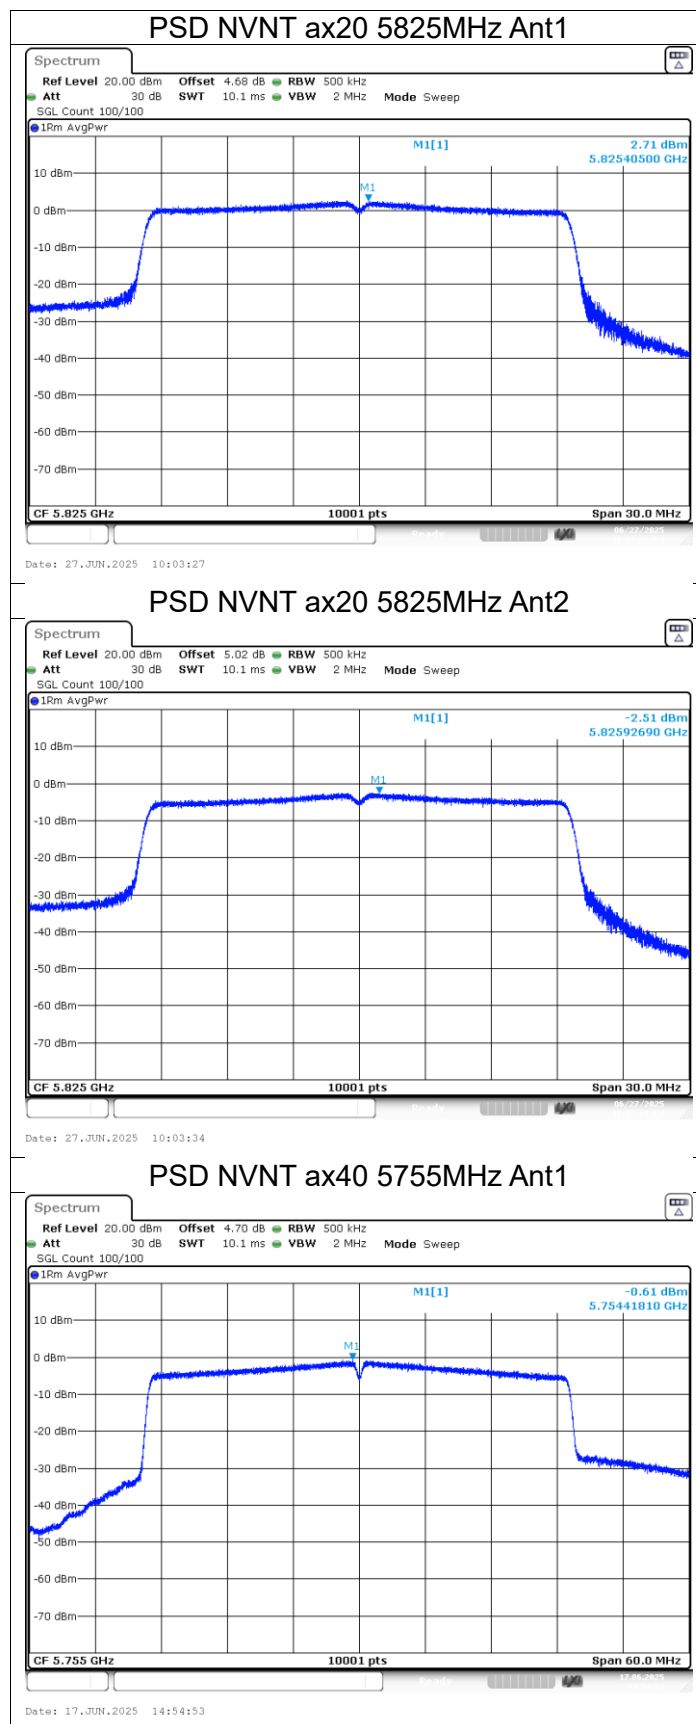

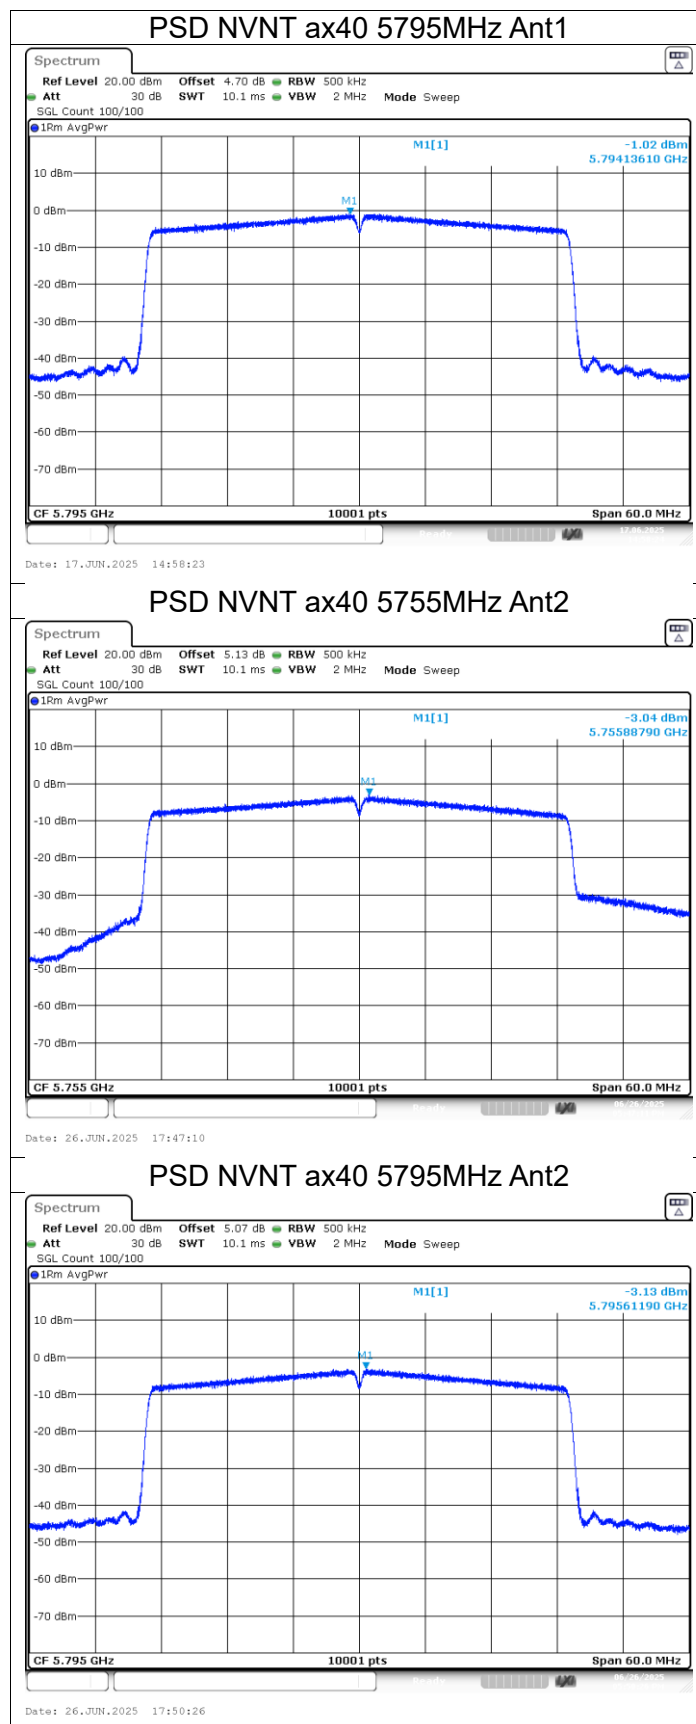

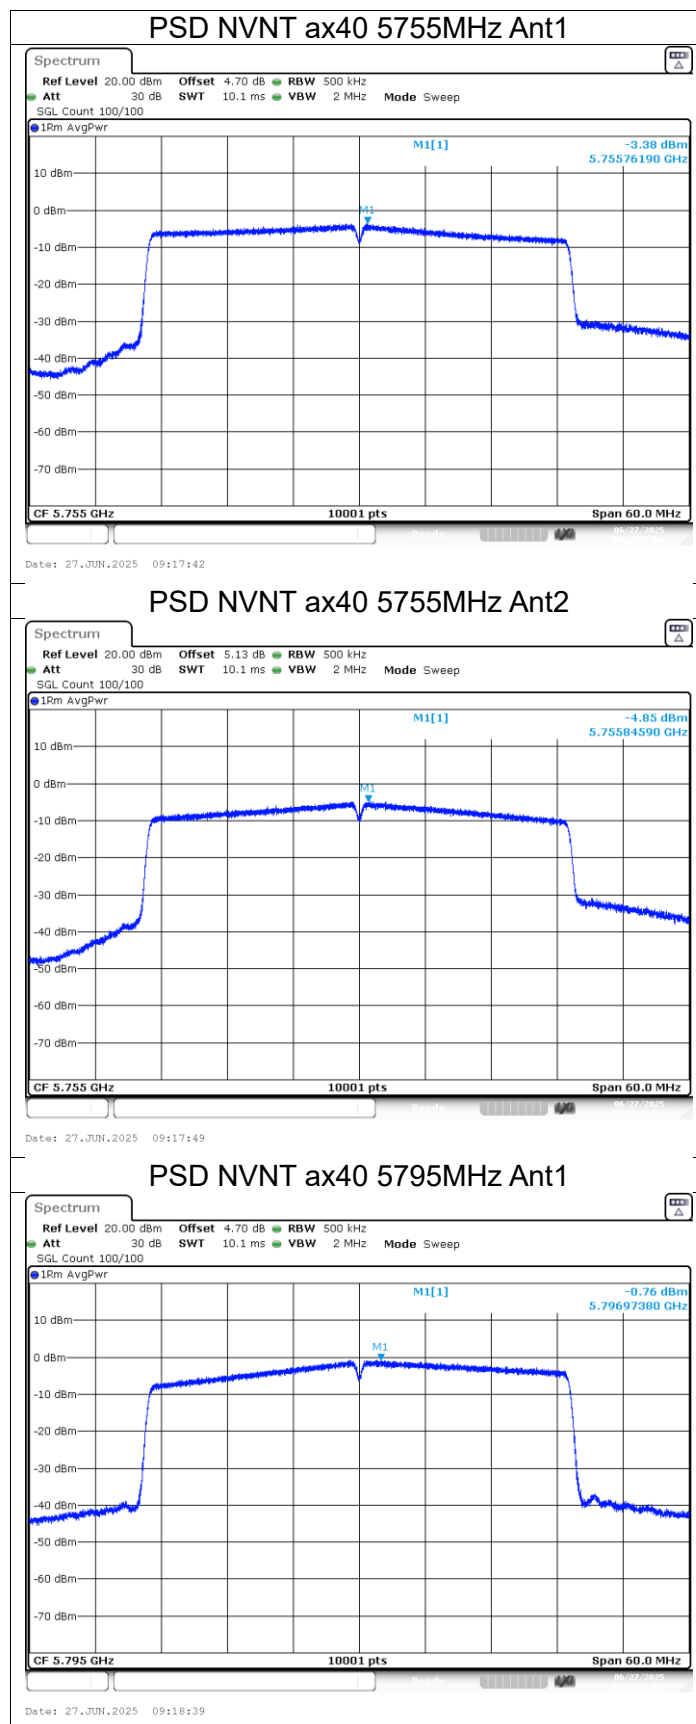

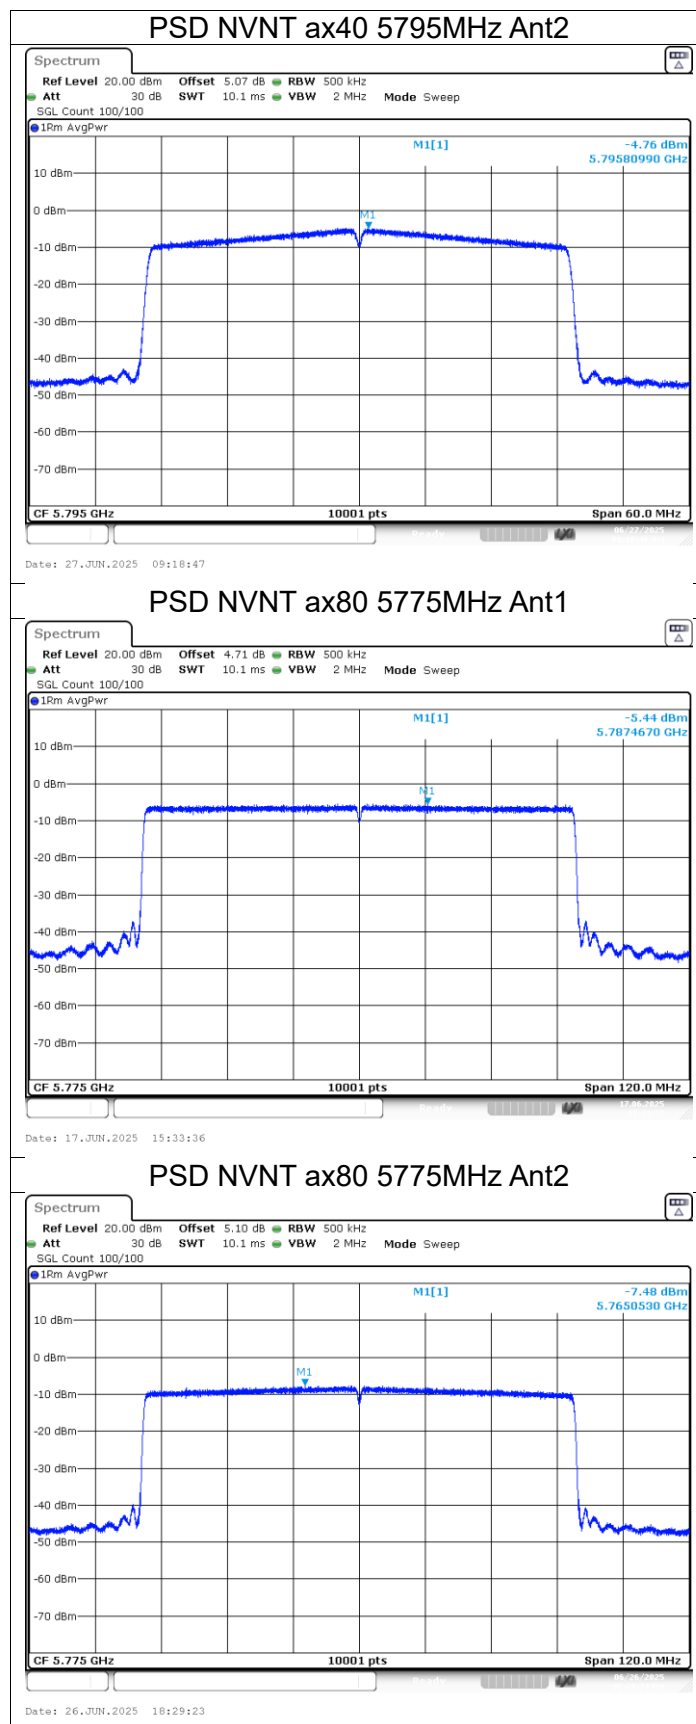

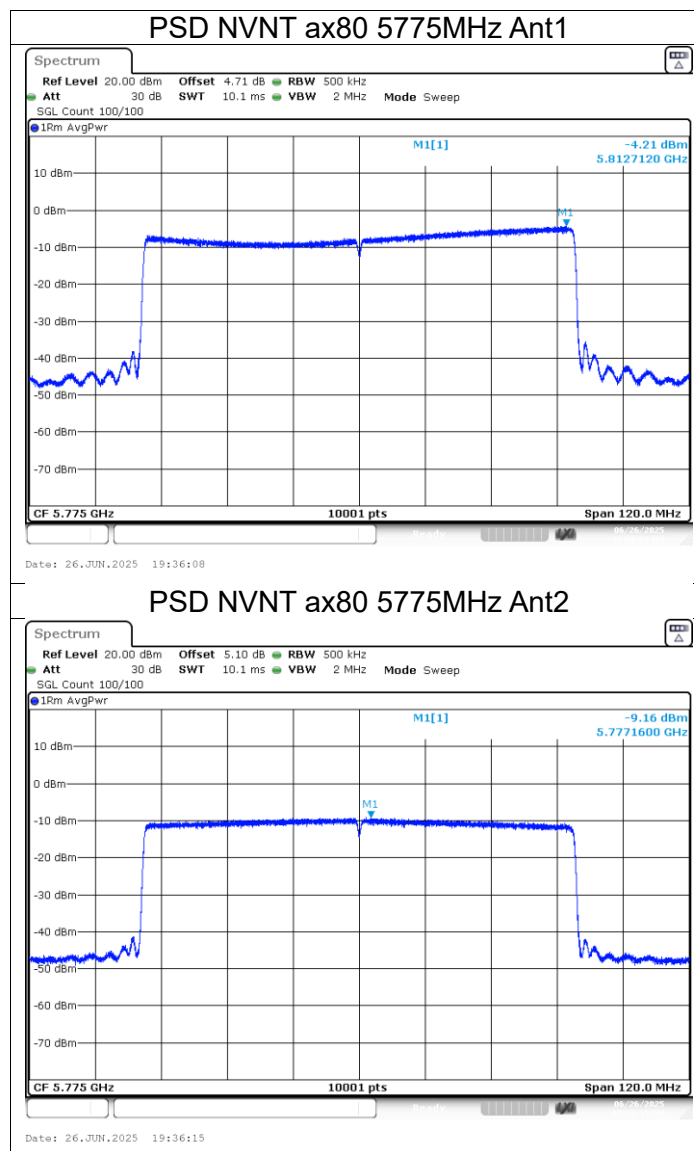



Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5180	Ant1	-33.52	-27	Pass
NVNT	a	5240	Ant1	-32.52	-27	Pass
NVNT	a	5260	Ant1	-33.86	-27	Pass
NVNT	a	5320	Ant1	-31.37	-27	Pass
NVNT	a	5500	Ant1	-31.53	-27	Pass
NVNT	a	5700	Ant1	-30.95	-27	Pass
NVNT	a	5180	Ant2	-33.62	-27	Pass
NVNT	a	5240	Ant2	-31.5	-27	Pass
NVNT	a	5260	Ant2	-34.08	-27	Pass
NVNT	a	5320	Ant2	-32.17	-27	Pass
NVNT	a	5500	Ant2	-32.11	-27	Pass
NVNT	a	5700	Ant2	-32.38	-27	Pass
NVNT	n20	5180	Ant1	-34.26	-27	Pass
NVNT	n20	5240	Ant1	-32.49	-27	Pass
NVNT	n20	5260	Ant1	-34.09	-27	Pass
NVNT	n20	5320	Ant1	-32.45	-27	Pass
NVNT	n20	5500	Ant1	-31.39	-27	Pass
NVNT	n20	5700	Ant1	-31.41	-27	Pass
NVNT	n20	5180	Ant2	-33.83	-27	Pass
NVNT	n20	5240	Ant2	-32.45	-27	Pass
NVNT	n20	5260	Ant2	-34.17	-27	Pass
NVNT	n20	5320	Ant2	-31.38	-27	Pass
NVNT	n20	5500	Ant2	-31.37	-27	Pass
NVNT	n20	5700	Ant2	-32.35	-27	Pass
NVNT	n40	5190	Ant1	-34.08	-27	Pass
NVNT	n40	5230	Ant1	-32.63	-27	Pass
NVNT	n40	5270	Ant1	-34.42	-27	Pass
NVNT	n40	5310	Ant1	-31.71	-27	Pass
NVNT	n40	5510	Ant1	-32.41	-27	Pass
NVNT	n40	5550	Ant1	-33.24	-27	Pass
NVNT	n40	5670	Ant1	-32.72	-27	Pass
NVNT	n40	5190	Ant2	-33.55	-27	Pass
NVNT	n40	5230	Ant2	-32.55	-27	Pass
NVNT	n40	5270	Ant2	-34.22	-27	Pass
NVNT	n40	5310	Ant2	-32.01	-27	Pass
NVNT	n40	5510	Ant2	-31.73	-27	Pass
NVNT	n40	5670	Ant2	-31.44	-27	Pass
NVNT	ac20	5180	Ant1	-33.93	-27	Pass
NVNT	ac20	5240	Ant1	-32.92	-27	Pass
NVNT	ac20	5260	Ant1	-34.79	-27	Pass
NVNT	ac20	5320	Ant1	-31.94	-27	Pass
NVNT	ac20	5500	Ant1	-32.15	-27	Pass
NVNT	ac20	5700	Ant1	-32.73	-27	Pass
NVNT	ac20	5180	Ant2	-33.5	-27	Pass
NVNT	ac20	5240	Ant2	-32.65	-27	Pass
NVNT	ac20	5260	Ant2	-33.93	-27	Pass
NVNT	ac20	5320	Ant2	-32.21	-27	Pass
NVNT	ac20	5500	Ant2	-31.74	-27	Pass
NVNT	ac20	5700	Ant2	-32.39	-27	Pass
NVNT	ac40	5190	Ant1	-34.16	-27	Pass
NVNT	ac40	5230	Ant1	-32.81	-27	Pass
NVNT	ac40	5270	Ant1	-34.6	-27	Pass
NVNT	ac40	5310	Ant1	-31.79	-27	Pass




NVNT	ac40	5510	Ant1	-32.51	-27	Pass
NVNT	ac40	5550	Ant1	-32.92	-27	Pass
NVNT	ac40	5670	Ant1	-32.89	-27	Pass
NVNT	ac40	5190	Ant2	-34.16	-27	Pass
NVNT	ac40	5230	Ant2	-32.41	-27	Pass
NVNT	ac40	5270	Ant2	-34.08	-27	Pass
NVNT	ac40	5310	Ant2	-32.35	-27	Pass
NVNT	ac40	5510	Ant2	-31.08	-27	Pass
NVNT	ac40	5670	Ant2	-32.19	-27	Pass
NVNT	ac80	5210	Ant1	-33.22	-27	Pass
NVNT	ac80	5290	Ant1	-32.19	-27	Pass
NVNT	ac80	5530	Ant1	-31.18	-27	Pass
NVNT	ac80	5610	Ant1	-34	-27	Pass
NVNT	ac80	5210	Ant2	-33.79	-27	Pass
NVNT	ac80	5290	Ant2	-32.33	-27	Pass
NVNT	ac80	5530	Ant2	-32.38	-27	Pass
NVNT	ac80	5610	Ant2	-33.49	-27	Pass
NVNT	ax20	5180	Ant1	-34.09	-27	Pass
NVNT	ax20	5240	Ant1	-33.09	-27	Pass
NVNT	ax20	5260	Ant1	-34.79	-27	Pass
NVNT	ax20	5320	Ant1	-32.57	-27	Pass
NVNT	ax20	5500	Ant1	-32.36	-27	Pass
NVNT	ax20	5700	Ant1	-32.05	-27	Pass
NVNT	ax20	5180	Ant2	-33.77	-27	Pass
NVNT	ax20	5240	Ant2	-32.49	-27	Pass
NVNT	ax20	5260	Ant2	-33.84	-27	Pass
NVNT	ax20	5320	Ant2	-31.64	-27	Pass
NVNT	ax20	5500	Ant2	-31.77	-27	Pass
NVNT	ax20	5700	Ant2	-32.63	-27	Pass
NVNT	ax40	5190	Ant1	-34.16	-27	Pass
NVNT	ax40	5230	Ant1	-31.75	-27	Pass
NVNT	ax40	5270	Ant1	-34.09	-27	Pass
NVNT	ax40	5310	Ant1	-32.38	-27	Pass
NVNT	ax40	5510	Ant1	-32.28	-27	Pass
NVNT	ax40	5550	Ant1	-32.42	-27	Pass
NVNT	ax40	5670	Ant1	-33.15	-27	Pass
NVNT	ax40	5190	Ant2	-34.31	-27	Pass
NVNT	ax40	5230	Ant2	-32.87	-27	Pass
NVNT	ax40	5270	Ant2	-34.39	-27	Pass
NVNT	ax40	5310	Ant2	-31.6	-27	Pass
NVNT	ax40	5510	Ant2	-32.66	-27	Pass
NVNT	ax40	5670	Ant2	-32.25	-27	Pass
NVNT	ax80	5210	Ant1	-32.42	-27	Pass
NVNT	ax80	5290	Ant1	-31.72	-27	Pass
NVNT	ax80	5530	Ant1	-31.48	-27	Pass
NVNT	ax80	5610	Ant1	-34.55	-27	Pass
NVNT	ax80	5210	Ant2	-33.52	-27	Pass
NVNT	ax80	5290	Ant2	-32.37	-27	Pass
NVNT	ax80	5530	Ant2	-32.38	-27	Pass
NVNT	ax80	5610	Ant2	-34.42	-27	Pass

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-28.71	15.6	Pass
NVNT	a	5825	Ant1	-29.03	15.6	Pass
NVNT	n20	5745	Ant1	-32.79	15.6	Pass
NVNT	n20	5825	Ant1	-32.84	15.6	Pass




NVNT	n40	5755	Ant1	-32.04	15.6	Pass
NVNT	n40	5795	Ant1	-33.24	15.6	Pass
NVNT	n40	5755	Ant2	-32.73	15.6	Pass
NVNT	n40	5795	Ant2	-33.17	15.6	Pass
NVNT	ac20	5745	Ant1	-32.63	15.6	Pass
NVNT	ac20	5825	Ant1	-32.84	15.6	Pass
NVNT	ac40	5755	Ant1	-32.82	15.6	Pass
NVNT	ac40	5795	Ant1	-33.34	15.6	Pass
NVNT	ac40	5755	Ant2	-32.65	15.6	Pass
NVNT	ac40	5795	Ant2	-32.32	15.6	Pass
NVNT	ac80	5775	Ant1	-30.57	15.6	Pass
NVNT	ac80	5775	Ant2	-29.68	15.6	Pass
NVNT	ax20	5745	Ant1	-33.27	15.6	Pass
NVNT	ax20	5825	Ant1	-32.65	15.6	Pass
NVNT	ax40	5755	Ant1	-32.21	15.6	Pass
NVNT	ax40	5795	Ant1	-32.96	15.6	Pass
NVNT	ax40	5755	Ant2	-32.38	15.6	Pass
NVNT	ax40	5795	Ant2	-32.7	15.6	Pass
NVNT	ax80	5775	Ant1	-28.72	15.6	Pass
NVNT	ax80	5775	Ant2	-30.26	15.6	Pass

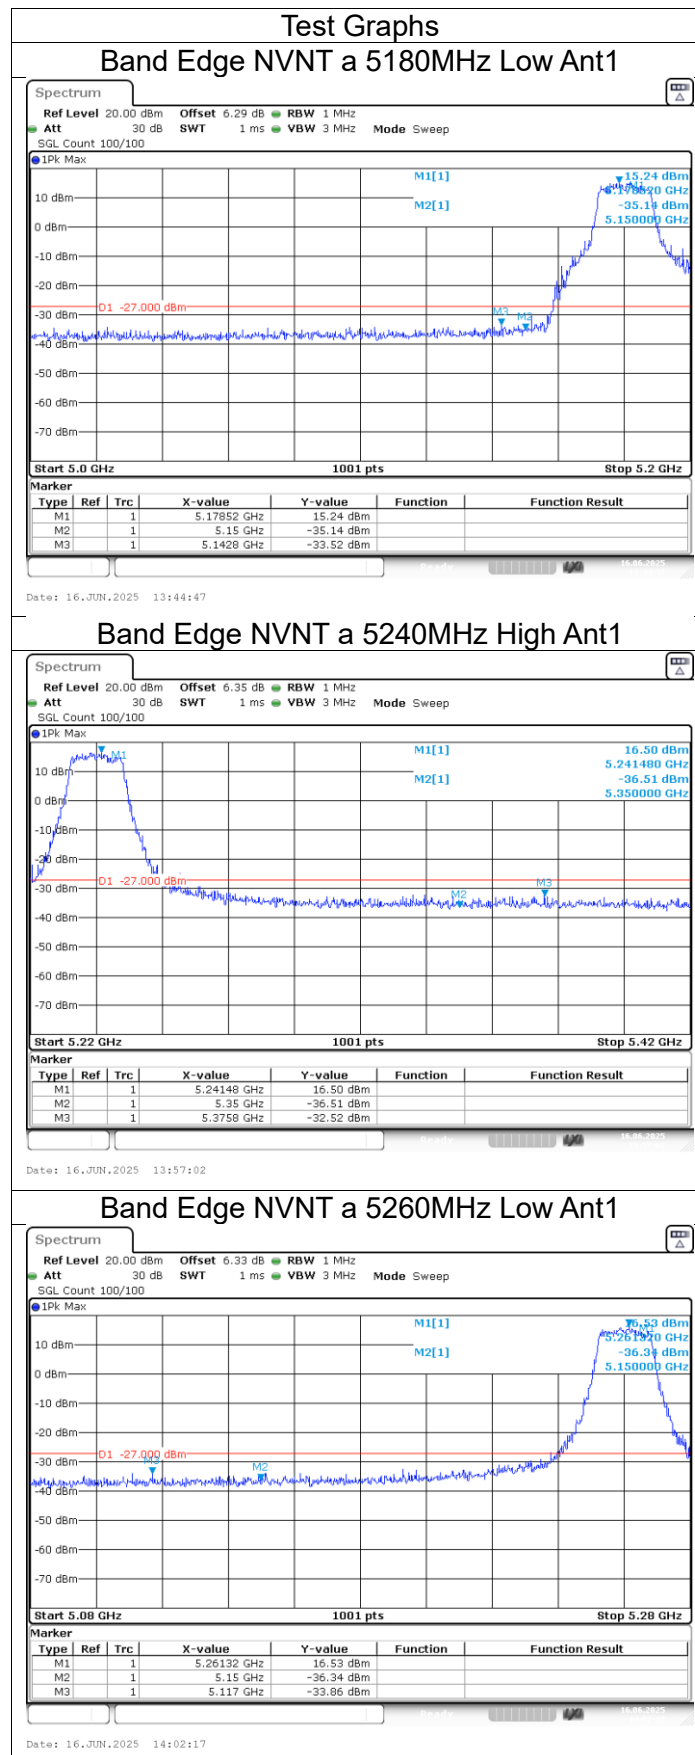




Band Edge NVNT a 5320MHz High Ant1

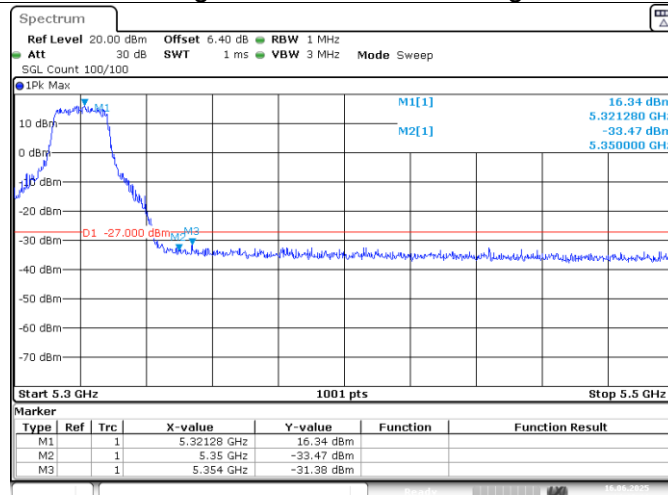

Band Edge NVNT a 5500MHz Low Ant1

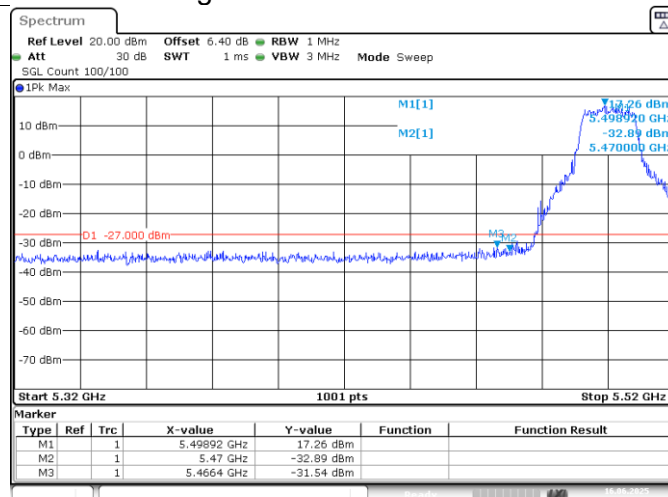

Band Edge NVNT a 5700MHz High Ant1

