









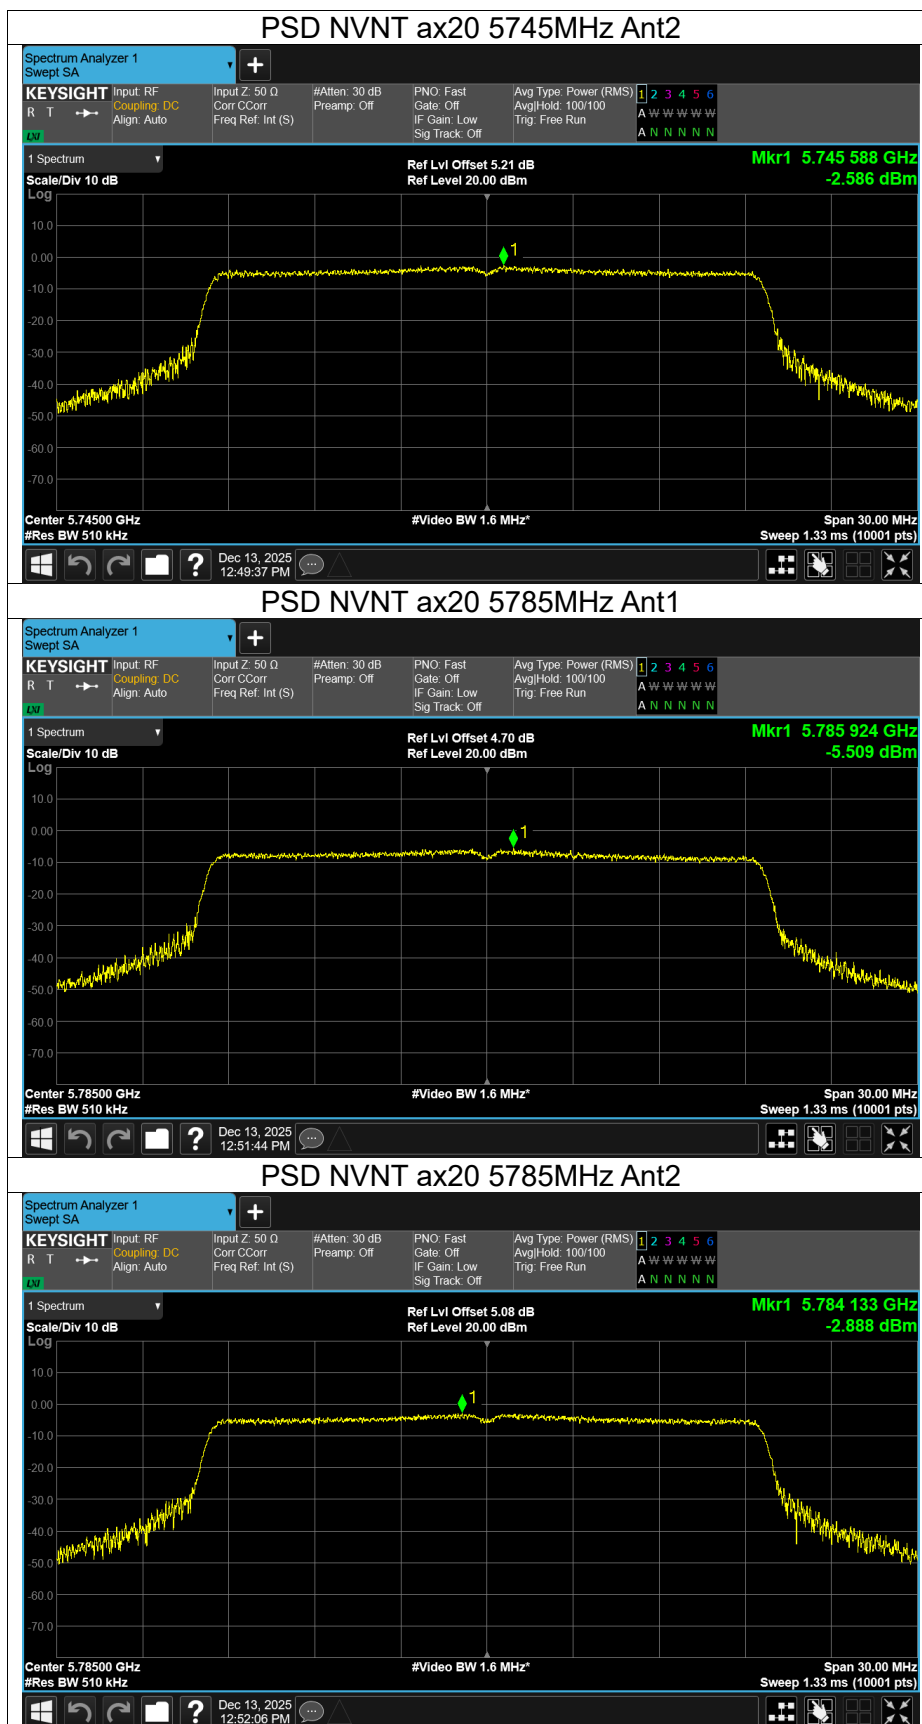

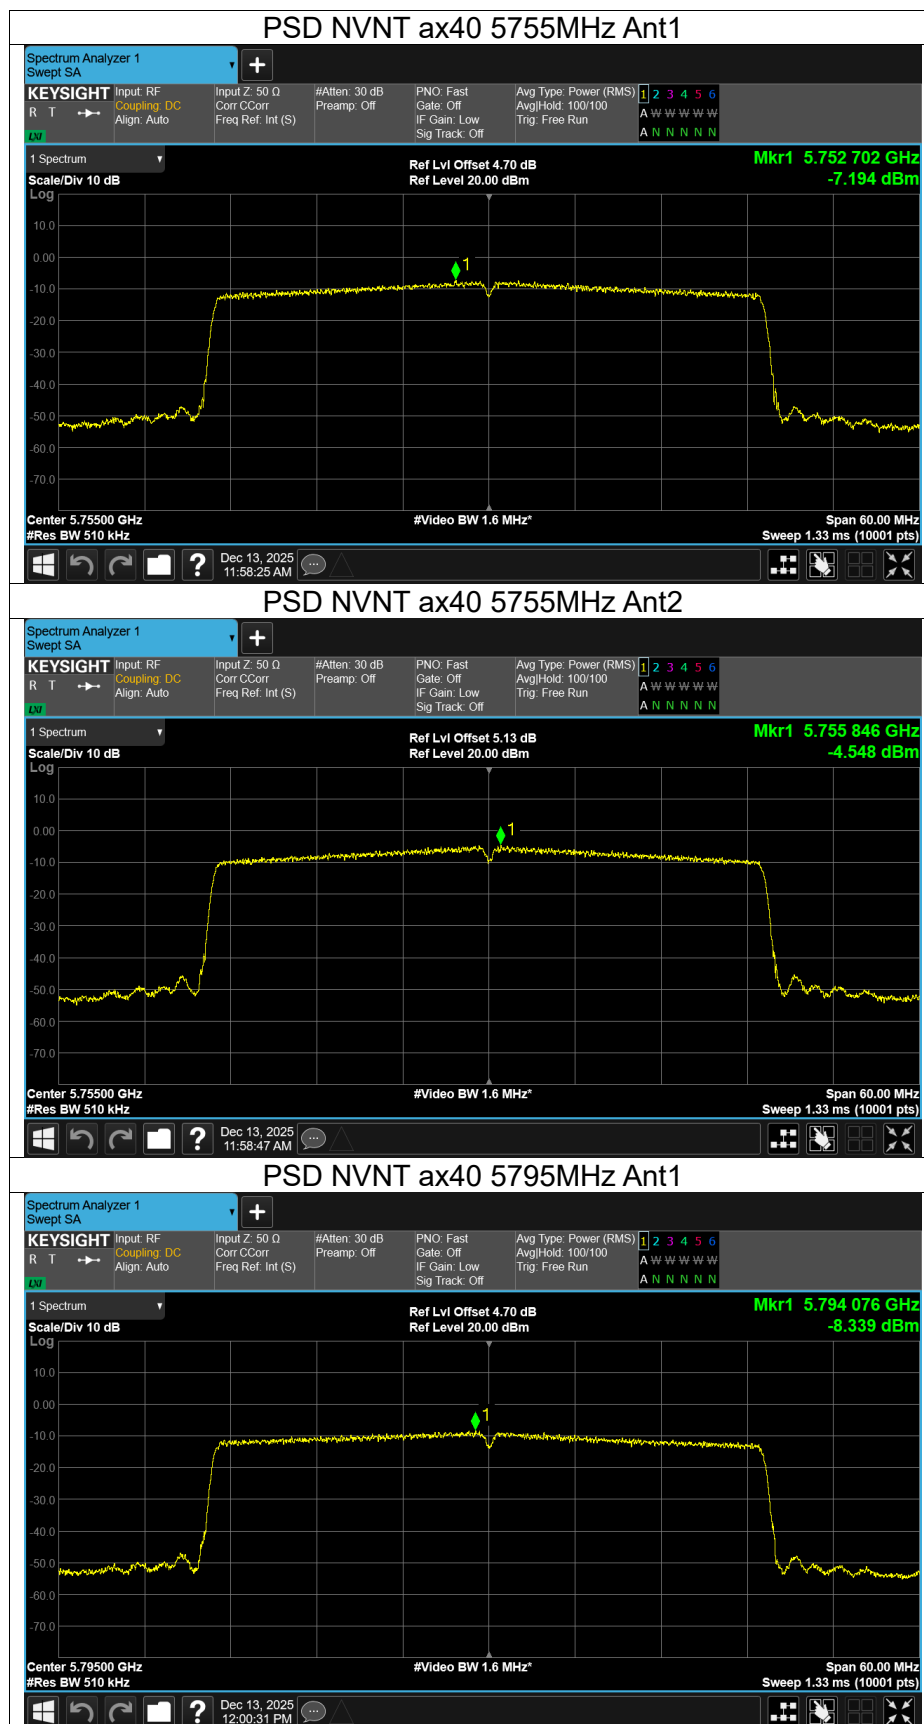

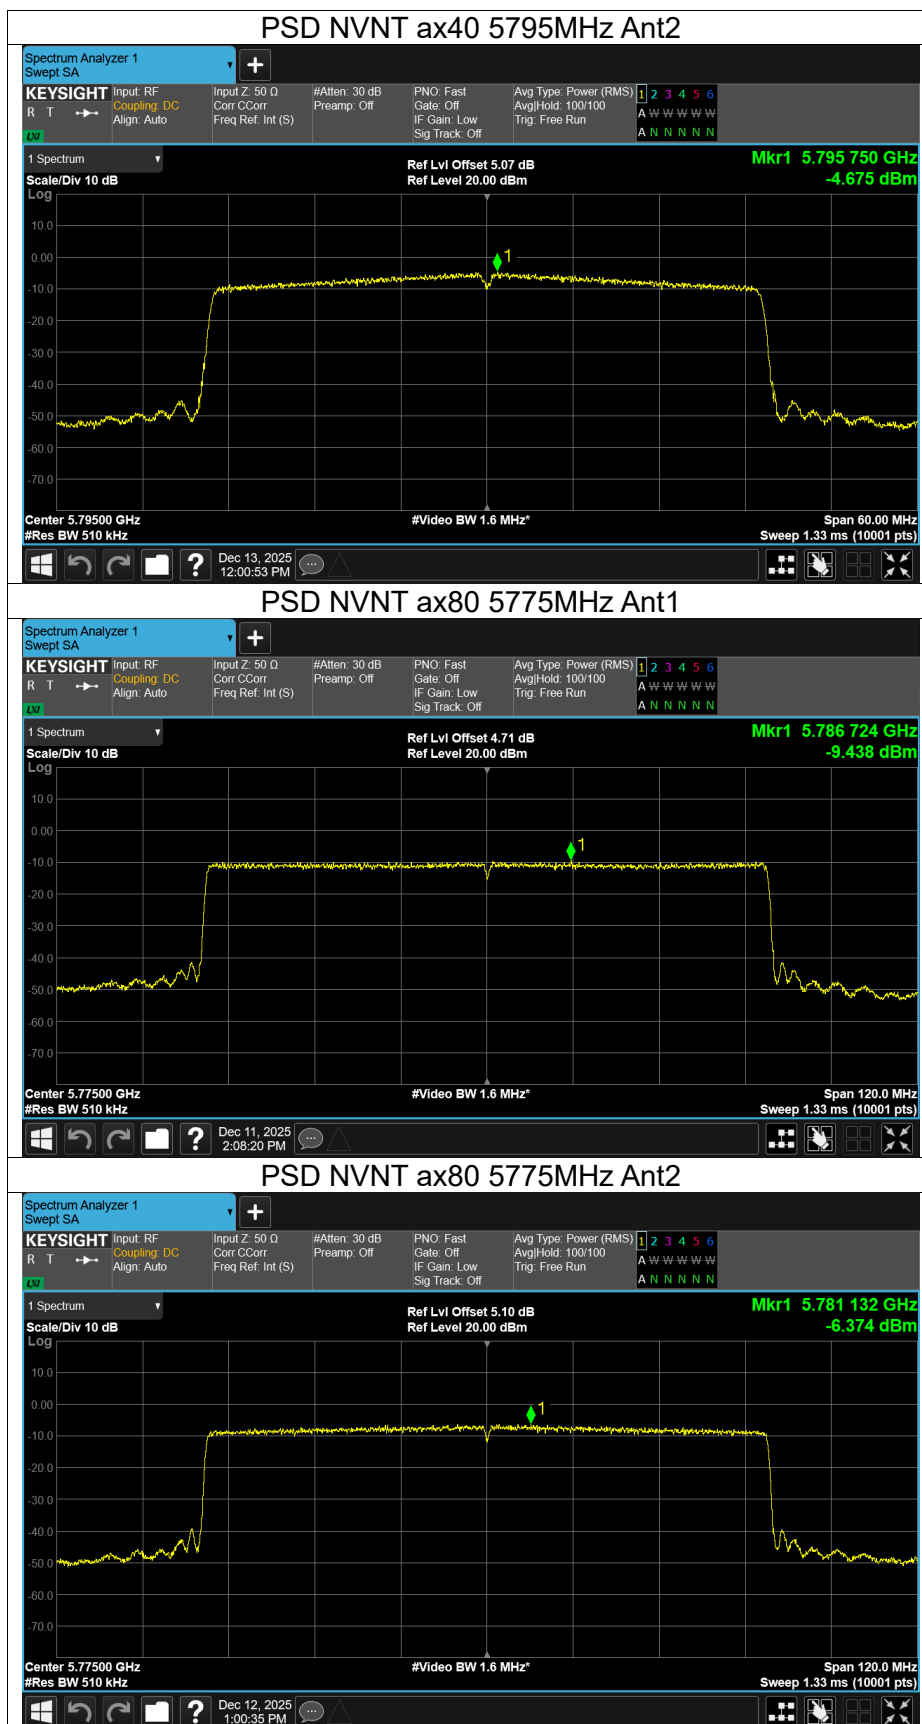

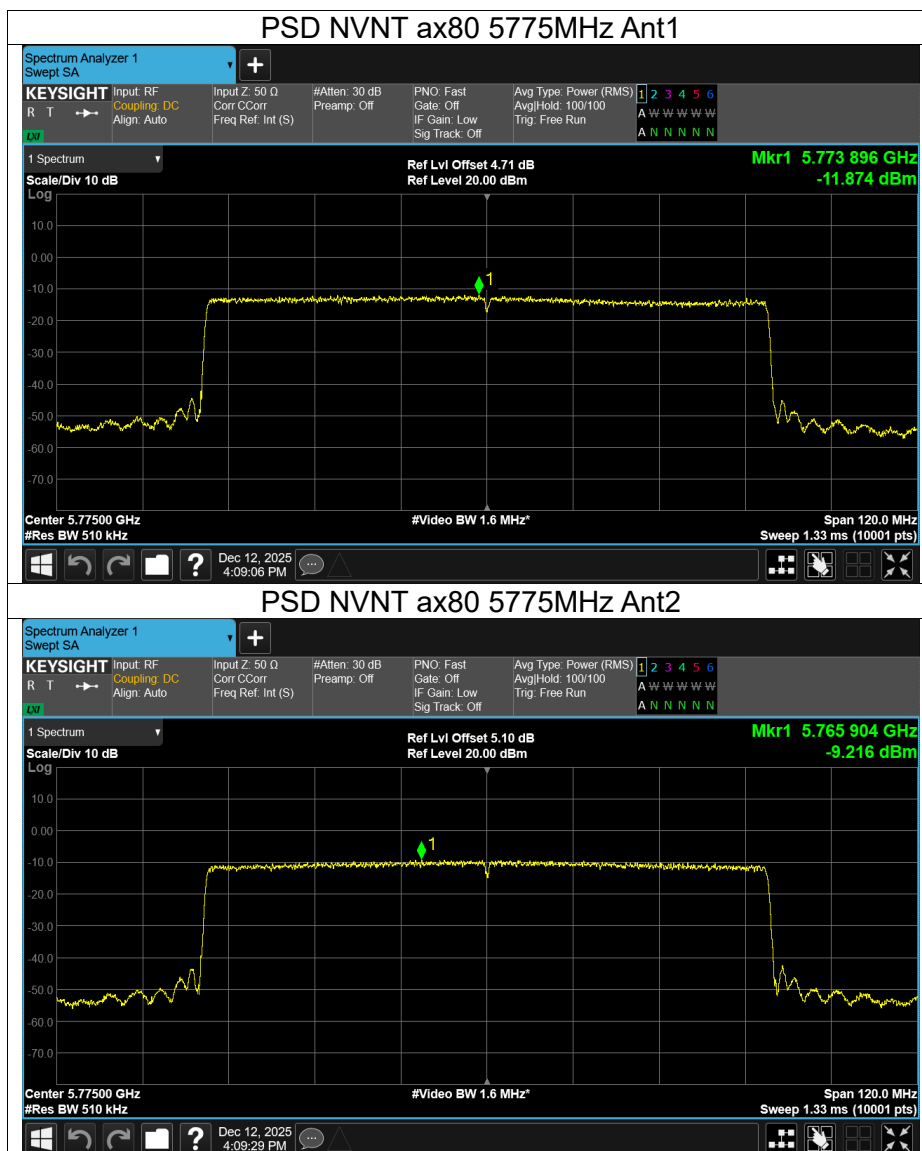



Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	-34.58	-27	Pass
NVNT	a	5240	Ant1	-42.32	-27	Pass
NVNT	a	5260	Ant1	-40.5	-27	Pass
NVNT	a	5320	Ant1	-37.44	-27	Pass
NVNT	a	5500	Ant1	-36.57	-27	Pass
NVNT	a	5700	Ant1	-37.44	-27	Pass
NVNT	a	5180	Ant2	-34.97	-27	Pass
NVNT	a	5240	Ant2	-42.34	-27	Pass
NVNT	a	5260	Ant2	-40.3	-27	Pass
NVNT	a	5320	Ant2	-34.1	-27	Pass
NVNT	a	5500	Ant2	-32.16	-27	Pass
NVNT	a	5700	Ant2	-34.43	-27	Pass
NVNT	n20	5180	Ant1	-37.92	-27	Pass
NVNT	n20	5240	Ant1	-44.67	-27	Pass
NVNT	n20	5260	Ant1	-42.24	-27	Pass
NVNT	n20	5320	Ant1	-39.02	-27	Pass
NVNT	n20	5500	Ant1	-38.39	-27	Pass
NVNT	n20	5700	Ant1	-38.85	-27	Pass
NVNT	n20	5180	Ant2	-35.14	-27	Pass
NVNT	n20	5240	Ant2	-42.98	-27	Pass
NVNT	n20	5260	Ant2	-40.21	-27	Pass
NVNT	n20	5320	Ant2	-36	-27	Pass
NVNT	n20	5500	Ant2	-34.98	-27	Pass
NVNT	n20	5700	Ant2	-34.07	-27	Pass
NVNT	n40	5190	Ant1	-37.61	-27	Pass
NVNT	n40	5230	Ant1	-43.49	-27	Pass
NVNT	n40	5270	Ant1	-41.89	-27	Pass
NVNT	n40	5310	Ant1	-39.14	-27	Pass
NVNT	n40	5510	Ant1	-38.86	-27	Pass
NVNT	n40	5670	Ant1	-42.53	-27	Pass
NVNT	n40	5190	Ant2	-36.4	-27	Pass
NVNT	n40	5230	Ant2	-41.83	-27	Pass
NVNT	n40	5270	Ant2	-39.74	-27	Pass
NVNT	n40	5310	Ant2	-37.19	-27	Pass
NVNT	n40	5510	Ant2	-35.06	-27	Pass
NVNT	n40	5670	Ant2	-39.1	-27	Pass
NVNT	ac20	5180	Ant1	-37.86	-27	Pass
NVNT	ac20	5240	Ant1	-43.22	-27	Pass
NVNT	ac20	5260	Ant1	-41.79	-27	Pass
NVNT	ac20	5320	Ant1	-38.06	-27	Pass
NVNT	ac20	5500	Ant1	-39.36	-27	Pass
NVNT	ac20	5700	Ant1	-38.46	-27	Pass
NVNT	ac20	5180	Ant2	-36.54	-27	Pass
NVNT	ac20	5240	Ant2	-42.58	-27	Pass
NVNT	ac20	5260	Ant2	-40	-27	Pass
NVNT	ac20	5320	Ant2	-36.11	-27	Pass
NVNT	ac20	5500	Ant2	-36.32	-27	Pass
NVNT	ac20	5700	Ant2	-32.43	-27	Pass
NVNT	ac40	5190	Ant1	-38.1	-27	Pass
NVNT	ac40	5230	Ant1	-44.34	-27	Pass
NVNT	ac40	5270	Ant1	-42.66	-27	Pass
NVNT	ac40	5310	Ant1	-38.92	-27	Pass
NVNT	ac40	5510	Ant1	-37.46	-27	Pass



NVNT	ac40	5670	Ant1	-42.25	-27	Pass
NVNT	ac40	5190	Ant2	-36.49	-27	Pass
NVNT	ac40	5230	Ant2	-42.51	-27	Pass
NVNT	ac40	5270	Ant2	-40.89	-27	Pass
NVNT	ac40	5310	Ant2	-35.75	-27	Pass
NVNT	ac40	5510	Ant2	-36.01	-27	Pass
NVNT	ac40	5670	Ant2	-39.67	-27	Pass
NVNT	ac80	5210	Ant1	-35.66	-27	Pass
NVNT	ac80	5290	Ant1	-37.87	-27	Pass
NVNT	ac80	5530	Ant1	-35.24	-27	Pass
NVNT	ac80	5610	Ant1	-43.88	-27	Pass
NVNT	ac80	5210	Ant2	-35.72	-27	Pass
NVNT	ac80	5290	Ant2	-36.41	-27	Pass
NVNT	ac80	5530	Ant2	-33.46	-27	Pass
NVNT	ac80	5610	Ant2	-39.23	-27	Pass
NVNT	ax20	5180	Ant1	-38.94	-27	Pass
NVNT	ax20	5240	Ant1	-44.41	-27	Pass
NVNT	ax20	5260	Ant1	-42.44	-27	Pass
NVNT	ax20	5320	Ant1	-39.21	-27	Pass
NVNT	ax20	5500	Ant1	-40.09	-27	Pass
NVNT	ax20	5700	Ant1	-37.31	-27	Pass
NVNT	ax20	5180	Ant2	-37.46	-27	Pass
NVNT	ax20	5240	Ant2	-42.13	-27	Pass
NVNT	ax20	5260	Ant2	-40.46	-27	Pass
NVNT	ax20	5320	Ant2	-36.79	-27	Pass
NVNT	ax20	5500	Ant2	-37.05	-27	Pass
NVNT	ax20	5700	Ant2	-33.94	-27	Pass
NVNT	ax40	5190	Ant1	-38.1	-27	Pass
NVNT	ax40	5230	Ant1	-44.5	-27	Pass
NVNT	ax40	5270	Ant1	-41.91	-27	Pass
NVNT	ax40	5310	Ant1	-40.78	-27	Pass
NVNT	ax40	5510	Ant1	-37.9	-27	Pass
NVNT	ax40	5670	Ant1	-42.63	-27	Pass
NVNT	ax40	5190	Ant2	-37.45	-27	Pass
NVNT	ax40	5230	Ant2	-42.23	-27	Pass
NVNT	ax40	5270	Ant2	-40.84	-27	Pass
NVNT	ax40	5310	Ant2	-35.43	-27	Pass
NVNT	ax40	5510	Ant2	-34.5	-27	Pass
NVNT	ax40	5670	Ant2	-39.32	-27	Pass
NVNT	ax80	5210	Ant1	-36.72	-27	Pass
NVNT	ax80	5290	Ant1	-34.24	-27	Pass
NVNT	ax80	5530	Ant1	-36.11	-27	Pass
NVNT	ax80	5610	Ant1	-42.9	-27	Pass
NVNT	ax80	5210	Ant2	-36.94	-27	Pass
NVNT	ax80	5290	Ant2	-35.51	-27	Pass
NVNT	ax80	5530	Ant2	-35.51	-27	Pass
NVNT	ax80	5610	Ant2	-42.31	-27	Pass

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-31.6	15.6	Pass
NVNT	a	5825	Ant1	-36.08	15.6	Pass
NVNT	a	5745	Ant2	-27.95	15.6	Pass
NVNT	a	5825	Ant2	-35.74	15.6	Pass
NVNT	n20	5745	Ant1	-35.39	15.6	Pass
NVNT	n20	5825	Ant1	-38.4	15.6	Pass
NVNT	n20	5745	Ant2	-30.86	15.6	Pass



NVNT	n20	5825	Ant2	-34.45	15.6	Pass
NVNT	n40	5755	Ant1	-32.04	15.6	Pass
NVNT	n40	5795	Ant1	-41.8	15.6	Pass
NVNT	n40	5755	Ant2	-31.66	15.6	Pass
NVNT	n40	5795	Ant2	-40.22	15.6	Pass
NVNT	ac20	5745	Ant1	-36.12	15.6	Pass
NVNT	ac20	5825	Ant1	-39.35	15.6	Pass
NVNT	ac20	5745	Ant2	-32.85	15.6	Pass
NVNT	ac20	5825	Ant2	-36.32	15.6	Pass
NVNT	ac40	5755	Ant1	-34.2	15.6	Pass
NVNT	ac40	5795	Ant1	-42.24	15.6	Pass
NVNT	ac40	5755	Ant2	-31.65	15.6	Pass
NVNT	ac40	5795	Ant2	-39.67	15.6	Pass
NVNT	ac80	5775	Ant1	-35.08	15.6	Pass
NVNT	ac80	5775	Ant2	-33.47	15.6	Pass
NVNT	ax20	5745	Ant1	-35.36	15.6	Pass
NVNT	ax20	5825	Ant1	-39.11	15.6	Pass
NVNT	ax20	5745	Ant2	-25.06	15.6	Pass
NVNT	ax20	5825	Ant2	-35.78	15.6	Pass
NVNT	ax40	5755	Ant1	-33.49	15.6	Pass
NVNT	ax40	5795	Ant1	-41.09	15.6	Pass
NVNT	ax40	5755	Ant2	-31.53	15.6	Pass
NVNT	ax40	5795	Ant2	-40.22	15.6	Pass
NVNT	ax80	5775	Ant1	-33.52	15.6	Pass
NVNT	ax80	5775	Ant2	-33.61	15.6	Pass

