



E-BIKE

USER MANUAL

Before using the product, please read this manual. Read carefully and keep for future reference.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

TABLE OF CONTENTS

EN

PACKAGE CONTENTS	02
PRODUCT OVERVIEW	03
ASSEMBLY	05
DISPLAY	13
BASIC OPERATIONS	14
SETTINGS	16
CHARGING INSTRUCTIONS	18
RIDING SAFETY	21
MAINTENANCE	22
SPECIFICATIONS & ERROR CODES	23

TABLE DES MATIÈRES

FR

CONTENU DE L'EMBALLAGE	25
PRÉSENTATION DU PRODUIT	26
ASSEMBLAGE	28
ÉCRAN	36
OPÉRATIONS DE BASE	37
PARAMÈTRES	39
INSTRUCTIONS DE CHARGE	41
SÉCURITÉ DE CONDUITE	44
ENTRETIEN	45
SPÉCIFICATIONS ET CODES D'ERREUR	46

CONTENIDO DEL PAQUETE	48
DESCRIPCIÓN GENERAL DEL PRODUCTO	49
MONTAJE	51
PANTALLA	59
OPERACIONES BÁSICAS	60
CONFIGURACIÓN	62
INSTRUCCIONES DE CARGA	64
SEGURIDAD AL CONDUCIR	67
MANTENIMIENTO	68
ESPECIFICACIONES Y CÓDIGOS DE ERROR	69

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR ELECTRIC SHOCK



IMPORTANT SAFETY INSTRUCTIONS


WARNING:

When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c) Do not put fingers or hands into the product.
- d) Do not use this product if the flexible power cord or output cable is frayed, has broken insulation, or any other signs of damage.
- e) This equipment is not intended to be used at ambient temperatures less than -4°F (-20°C) or above ambient temperatures of 104°F (40°C).
- f) The battery is intended to be charged when the ambient temperature is between 32°F (0°C) and 104°F (40°C). Never charge the battery when ambient temperatures are outside this range.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RIDER HEIGHT GUIDE

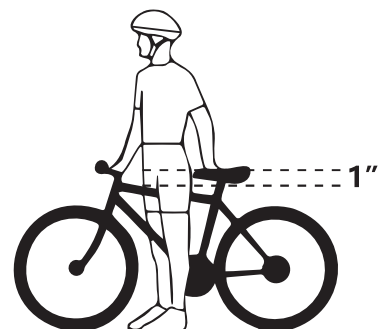

**Not less than
one inch
clearance**

THERE MUST BE AT LEAST 1 INCH OF CLEARANCE BETWEEN THE TOP TUBE AND THE CROTCH OF THE INTENDED RIDER WHILE STANDING WITH ONE LEG ON EACH SIDE OF THE BICYCLE. IF THERE IS LESS THAN 1 INCH OF CLEARANCE, THE BICYCLE IS TOO LARGE FOR THE RIDER AND SHOULD NOT BE USED.

PACKAGE CONTENTS

If any parts are missing or damaged, please contact us.



E-bike x1
(Partially Assembled)



Front Wheel x1




Front Fender x1



Headlight x1



Handlebar Reflector x1




NFC Key Card x2




Left Pedal x1
Right Pedal x1




Rear Axle Nut
Cover x2

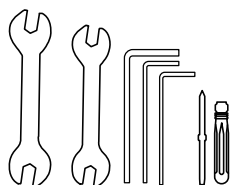


Toolkit x1



Pump x1

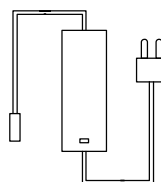

Charger x1

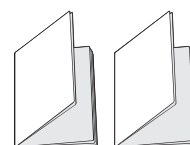

User Manual x1
Safety Instructions x1

PRODUCT OVERVIEW



1 Reflector

2 Brake Levers

3 Control Buttons

4 Display

5 Bell

6 Throttle

7 Gear Shifter

8 Suspension Lockout



- | | | |
|-------------------|--------------------|------------------------------|
| 1 Charging Port | 5 Disc Brake Rotor | 9 Turn Signal (on two sides) |
| 2 Headlight | 6 Saddle | 10 Kickstand |
| 3 Front Fender | 7 Rear Rack | 11 Pedals |
| 4 Suspension Fork | 8 Taillight | |

ASSEMBLY

Assembly requires two people for safety and ease.

NOTICE:

The e-bike is equipped with a steering lock for security. If the front fork is turned to the far left during assembly, the lock may engage accidentally.

To disengage:

1. Charge the battery for 1-2 minutes to wake the battery. (The battery is in the inactive state when you receive the e-bike.)
2. Power on the e-bike. (see “**BASIC OPERATIONS**”)
3. Turn the front fork to the left to the end to disengage. And the handlebar can be freely in both directions.

STEP 1: Install the Handlebar

1. Place the e-bike on a stable surface with the fork arch facing forward.



2. Remove the long bolt from the steerer tube.



3. Position the handlebar onto the steerer tube and adjust the handlebar so that it is parallel to the fork crown.



4. Tighten the long bolt until there is no gap between the bottom of the handlebar, the spacer, and the top of the head tube.



5. Tighten the two bolts on the front.



6. Tighten the two bolts at the back.



STEP 2: Install the Display

1. Remove the three bolts from the back of the display.



2. Position the display into the slot snugly, and tighten the bolts into the holes on the back of the display to secure it in place.



STEP 3: Install the Handlebar Reflector

1. Remove the screw from the clamp of the reflector.





2. Clamp the reflector on the handlebar and retighten the screw.



NOTE: Ensure the reflector faces straight forward and the bell is installed without touching the control button clamp.


3. Adjust the bell, the brake levers, and the gear shifter to your desired angles and then tighten their bolts.

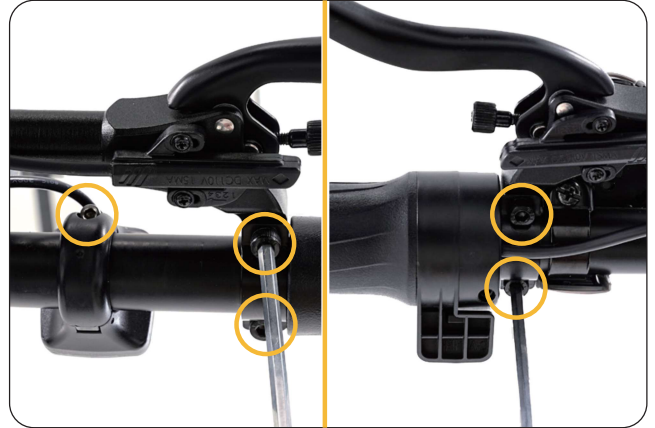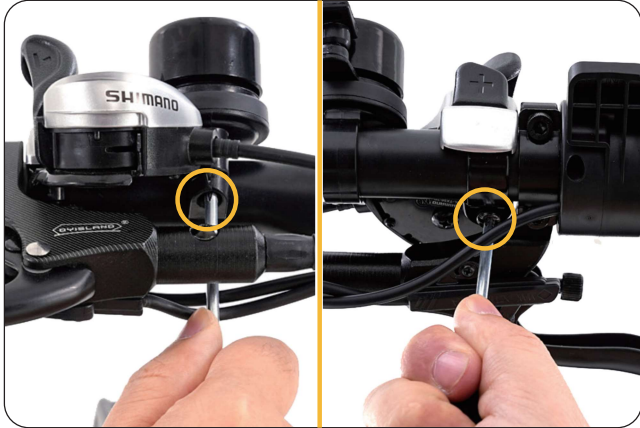

STEP 4: Install the Headlight & Front Reflector

1. Remove the nut from the mounting bolt on the fork arch.

2. Position the headlight on the back of the fork arch with the bolt passing through its bracket hole.

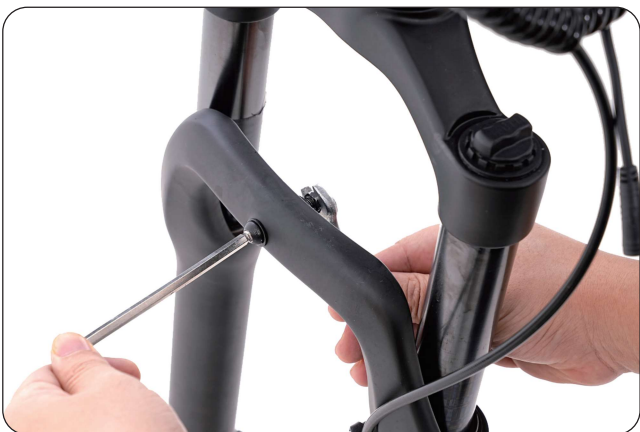

3. Position the front fender between the fork legs with the bolt passing through its bracket hole, then tighten the nut.




NOTE: Ensure the top part of the fender is installed against the fork arch.

4. Connect the headlight cable.



WARNING: Align the arrows on the connectors to avoid bending or breaking pins.

5. Remove the pre-installed fender stay mounting bolts.

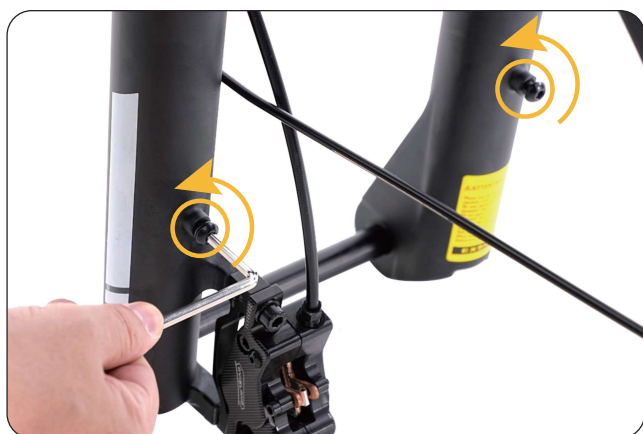


6. Pass the bolts through the eyelets of the fender stay, then tighten the bolts onto the fork legs.




STEP 5: Install the Front Wheel

1. Remove the thru-axle from the fork by turning the axle counterclockwise.

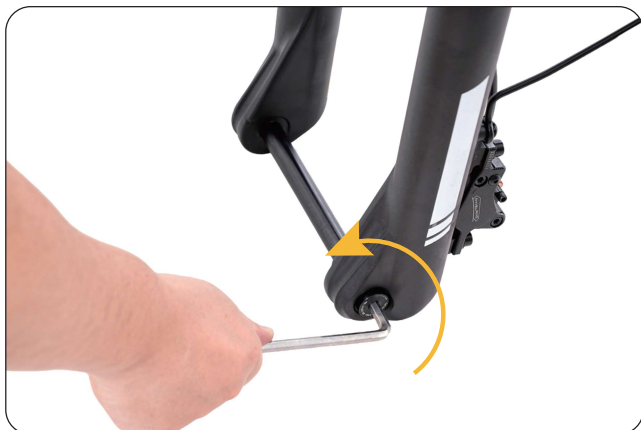

2. Remove the brake pad spacer from the front brake caliper.

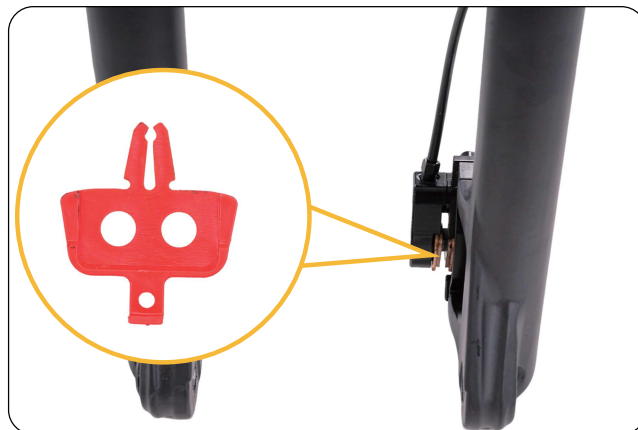

WARNING: After removing the brake pad spacer, **NEVER** squeeze the brake levers until the front wheel is installed.

3. Lift the front of the e-bike, then lower the fork while guiding the brake rotor into the brake pads until the wheel hub is aligned with the fork dropouts.



4. Pass the thru axle through the fork dropouts and the wheel hub from the brake rotor side.

