

USER MANUAL	3
WELCOME	4
IMPORTANT TIPS	6
MANAGE FILES	8
QUICK GUIDE	10
HOME	12
General Operations	14
Input Methods	15
NOTES	16
Notes Tools	23
Voice Recorder	27
Convert to Text	31
Share & Export	32
Cloud Sync	33
Backup & Restore	35
GLOBAL ANNOTATION	36
BOOKSHELF	38
READ E-BOOKS	40
PDF Reading	51
Splitview	53
View Images	54
SPEECH TRANSCRIPTION	55
CLOUD DRIVES	58
MORE APPS	65
SYSTEM APPS	67
WiFi Transfer	67
Browser	70

Email	71
Calendar	73
Notepad	75
Player	76
Calculator	77
SETTINGS	78
SPECIFICATIONS	83

User Manual

Welcome

Dear User,

Thank you for choosing Penstar!

We are dedicated to continuously improving our product quality and ensuring the accuracy and completeness of the information in this manual. However, errors and omissions may occur, and we sincerely welcome your feedback and suggestions. We do not assume legal responsibility for any errors or omissions in this manual. If there are discrepancies between this manual and the actual product, please refer to the actual product. We reserve the right to change the specifications of the hardware and software described in this user manual without prior notice.

We are not responsible for data loss or damage caused by software or hardware operation errors, product maintenance, or other unforeseen circumstances, nor for any indirect losses resulting from such events. We cannot control the user's interpretation of this manual and will not be responsible for any incidental losses that may arise during its use. We are also not liable for third-party claims arising from the use of this product.

This manual is for reference only. Please read it carefully in conjunction with the actual product. The manual is protected by copyright law and other relevant regulations. Without the written consent of Penstar, no part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storage in a retrieval system, nor translated into any language.

Thank you for your understanding and cooperation.

Tips:

1. Please refer to this manual before using the device.
2. If cannot turn on the device for the first time, please charge it first!
3. Please protect the device screen during use to avoid breakage!
4. Do not remove the battery while the device is charging.
5. The product warranty will be void if the device casing is opened or modified without authorization.

Important Tips

Magnetic Cover:

The magnetic cover supports auto sleep and auto wake functions. It automatically wakes the device up when you open the cover, and put it back to sleep when you close it.


Refresh Interface:

Press and hold the “BACK” physical shortcut button until the screen flashes to complete the forced refresh process.

Eraser:

Built-in eraser at stylus top end, press lightly to erase handwritten notes. The pen body button can also be set to eraser function.

Return to Home

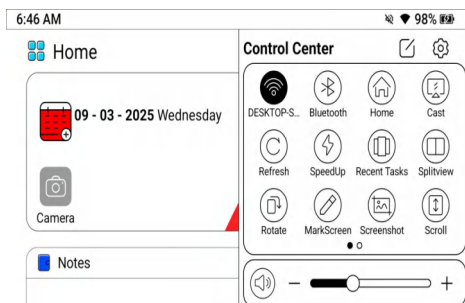1, Generally, click “A screenshot of a tablet's home screen and the pulled-down Control Center. The top status bar shows the time as 6:46 AM and battery at 98%. The home screen on the left has a 'Home' label, a date widget for '09 - 03 - 2025 Wednesday', a 'Camera' app icon, and a 'Notes' app icon. The Control Center on the right is titled 'Control Center' and contains icons for 'DESKTOP-S...', 'Bluetooth', 'Home' (with a house icon), 'Cast', 'Refresh', 'SpeedUp', 'Recent Tasks', 'Splitview', 'Rotate', 'MarkScreen', 'Screenshot', and 'Scroll'. At the bottom of the Control Center is a volume slider.

2, When reading a document, you can click on the center of the screen, and choose to return to the previous level of the interface in the function bar that pops up at the top of the screen or directly exit to return to the home page.

The Project Gutenberg eBook of Aesop's Fables; a new translation

This ebook is for the use of anyone anywhere in the United States and most other parts of the world at no cost and with almost no restrictions whatsoever. You may copy it, give it away or re-use it under the terms of the Project Gutenberg License included with this ebook or online at www.gutenberg.org. If you are not located in the United States, you will have to check the laws of the country where you are located before using this eBook.

Title: Aesop's Fables; a new translation

Author: Aesop

Commentator: G. K. Chesterton

Illustrator: Arthur Rackham

Translator: V. S. Vernon Jones

Manage Files


Connect to Computer

Power on the device and connect it to the computer using the USB cable. The device will be automatically recognized as a USB drive in the computer.

For macOS devices, you need to install the MTP application first to transfer files between this Android device and your MacBook or Mac. For a better experience, we recommend you use our WiFi Transfer application service to transfer files between your Penstar device and your Mac/MacBook.

Manage Files

When the device is correctly connected to the computer and automatically recognized as a USB Drive, you can move, copy, or delete files or folders through the computer.

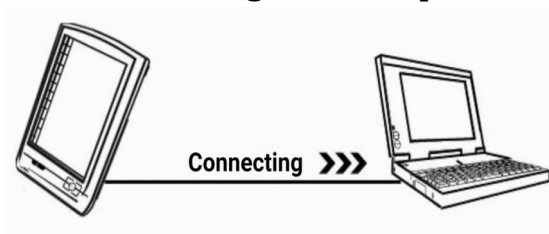

To avoid data damage, click "Eject Device" first on the computer then unplug the USB cable.

WiFi Transfer

WiFi Transfer is an advanced wireless file transfer service based on WiFi technology. To use this service, you must ensure your Penstar device and your laptop/PC are connected to the same WiFi network.




WiFi Transfer

Click the “WiFi Transfer” service in System Apps, and follow the instructions to transfer the files between your device and your laptop/PC.


Quick Guide

Get started

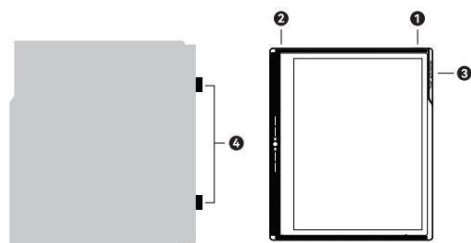

- ❶ **Power button** (Long press to shut down/restart)
- ❷ **USB-C** (Charge/OTG/Headphone)
- ❸ **Stylus position**
- ❹ **Magnetic cover attachment point**

Digital Stylus B6

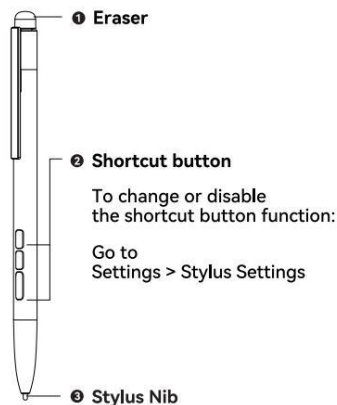

❷ **Shortcut button**

To change or disable the shortcut button function:


Go to
Settings > Stylus Settings

❸ **Stylus Nib**

Tips:


1. Long press the power button to shut down or restart the device, and short press the power button to wake up the screen.
2. USB-C port for charging, file transfer, or used as the headphone jack.

Button & Stylus Control

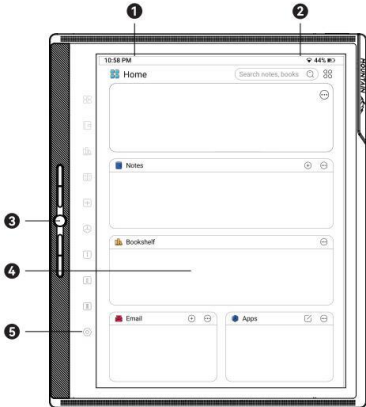

- 1 Click the top left corner to view notifications
- 2 Click the top right corner to view the dropdown menu
- 3 Back / Refresh (Long Press)
- 4 Use the stylus to control the screen (Finger touch is available)
- 5 Settings

Home

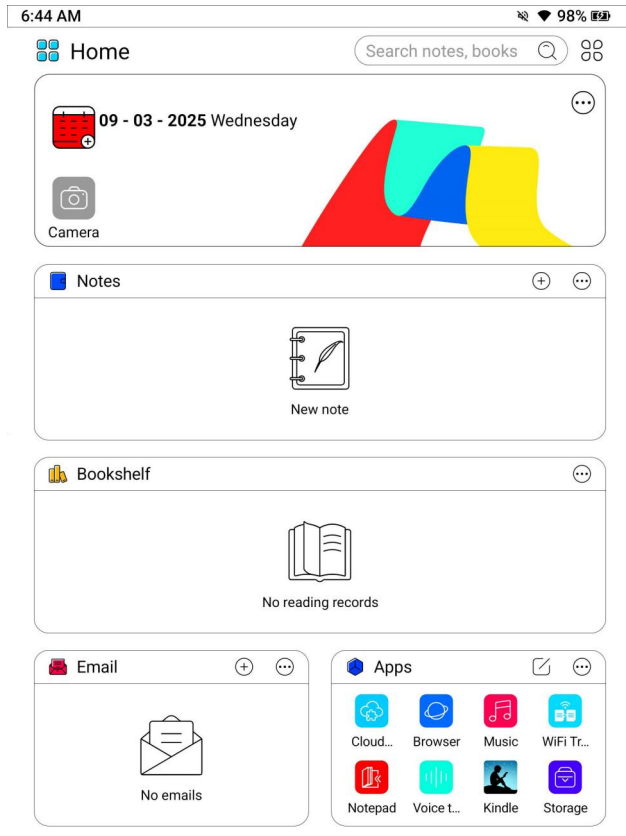


Calendar & Wallpaper: Display the current date, click “ ” to change the wallpaper. Click the calendar icon to enter the Calendar app.

Notes: The Notes widget shows recent notes.

Bookshelf: The Bookshelf widget shows recent reading books.

Email: The Email widget shows the email list.

Apps: The Apps widget shows the customized frequently used apps.

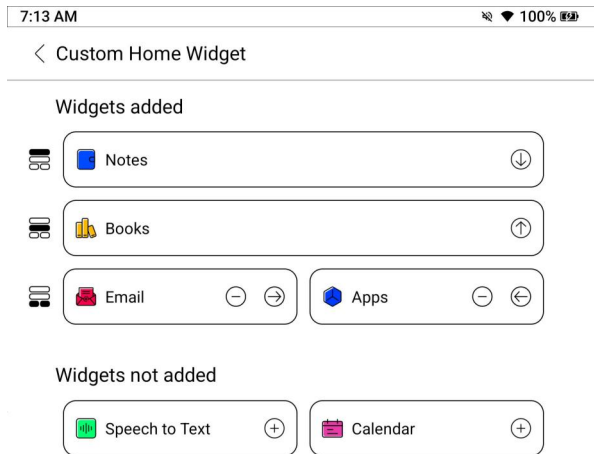

Customize Home Page:

Tap the “Customize” button in the top-right corner of the home page to access the customization settings.

Notes and Bookshelf can only be rearranged vertically.


The bottom section allows you to display any two of the following: Email, Apps, Speech Transcription, or Schedule.

Email and Apps are displayed by default.

The bottom widgets can be rearranged horizontally.

General Operations

1. Back to Home: Click “” at the upper left corner of the drop down menu.
2. Back: Click”  ” go back to the previous page.
3. Jump Page: When reading, click the center of the screen to pop up the menu, then click the page number in the bottom menu, then enter the page number to jump to. Click “Confirm” to jump to the specified page number.
4. Auto Sleep: Short press the power button.
5. Sort: Support sort by name, kind, size, date, and default of these five methods.
6. Search: Support file search and text search.
7. Drop-down Menu: Click the upper right corner or swipe down from the top to pop up the menu.

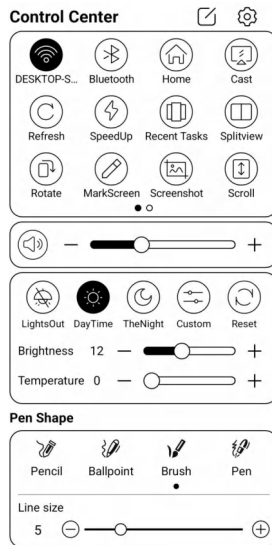

Tip:

The system drop-down menu cannot be used in the handwriting notes and reading annotation interface.

Input Methods

The built-in input method supports keyboard and handwriting input methods.

Keyboard input

Click the  to switch between 9-key/26-key keyboards and between simplified and traditional Chinese.

Click the  to switch between global/floating keyboards.



Handwriting input

The pen shape of the handwriting input method is the same as the system pen shape, simulating a writing experience close to that of a real pen and paper.

The system pen shape can be adjusted in the system drop-down menu.

Tip:

After downloading and installing other input methods, you can switch in System Settings - System - Input Method.

Notes

When you enter the handwriting notes, the view below is the homepage of the handwriting notes. You can easily access all folders and notes.

7:25 AM

📶 100% 🔋

 **Notes**



Favorites

Recents

Categories

Reading

Date

 Uncategorized

Notes: 1

Create

 project

Notes: 1
Cats.: 0

Create ...

Cats.: 2

<

1/1

>

Several quick functions are set in the toolbar above.

Create Note: Enter the note creation page. The newly created note can be found in the unclassified note folder.

Create Category: Creates a folder with a title that can optionally be displayed as text in a different font.

Search: You can search for the name of the note, and you can also search for the recognized results in the note.

More: Backup & Restore, Cloud Sync, Batch Delete, Trash, Customized Sorting There are many customized functions in “More Settings” , where users can upgrade online.

2:16 AM

 100% 

< Settings

Skip Cover Settings

☐

Auto Convert Handwriting to Text in the Background

☐

Notes Start Page:


☐ Categories

☒ Recents

Online Upgrade

Current version is: V6.48 >

Notes List

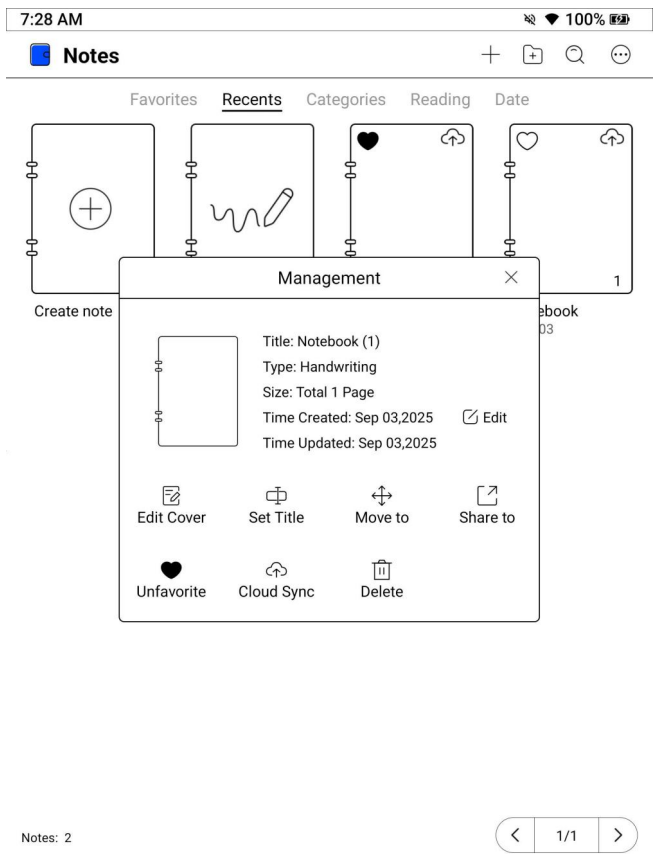

Favorites: Click the heart symbol on the cover of the note or long press the cover of the note, you can click Favorites in the popup box.

Latest Notes: All notes are displayed in descending order by modification time.

Categorized List: Displays the categories that have been created, and you can also create new categories to easily categorize your notes.

Reading Notes: notes recorded while reading, can be created by

split-screen notes while reading.

Date: you can view the notes created on a specific date, click on the note to enter the view and edit.

Tips:

1. You can set notes to be displayed in list/view mode in Toolbar-More.
2. When you long press the note cover/category folder, you can select more operations in the pop-up window.
3. Reading notes are created through split view notes.

1) The system comes with the reader split view location:




Home Back Search Bookmark Splitview Annotate More

The Project Gutenberg eBook of Aesop's Fables; a new translation


This ebook is for the use of anyone anywhere in the United States and most other parts of the world at no cost and with almost no restrictions whatsoever. You may copy it, give it away or re-use it under the terms of the Project Gutenberg License included with this ebook or online at www.gutenberg.org. If you are not located in the United States, you will have to check the laws of the country where you are located before using this eBook.

2) Third-party readers can enable split view function in the drop-down menu:

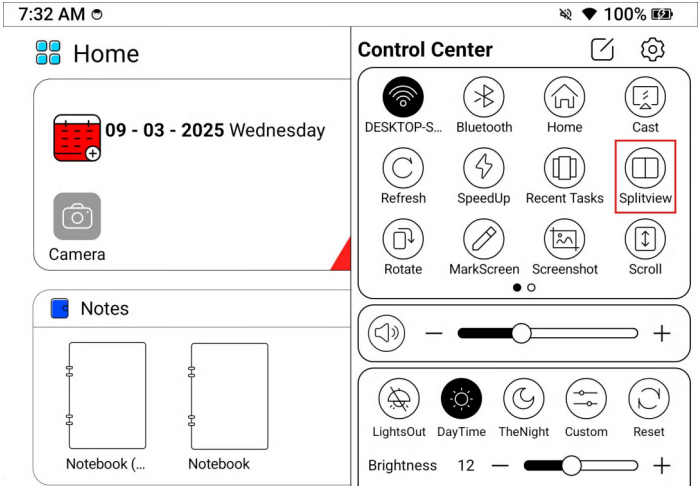

Notes Management

You can select Batch Management in “More” on the toolbar to move, export, delete notes and cloud sync in batches.

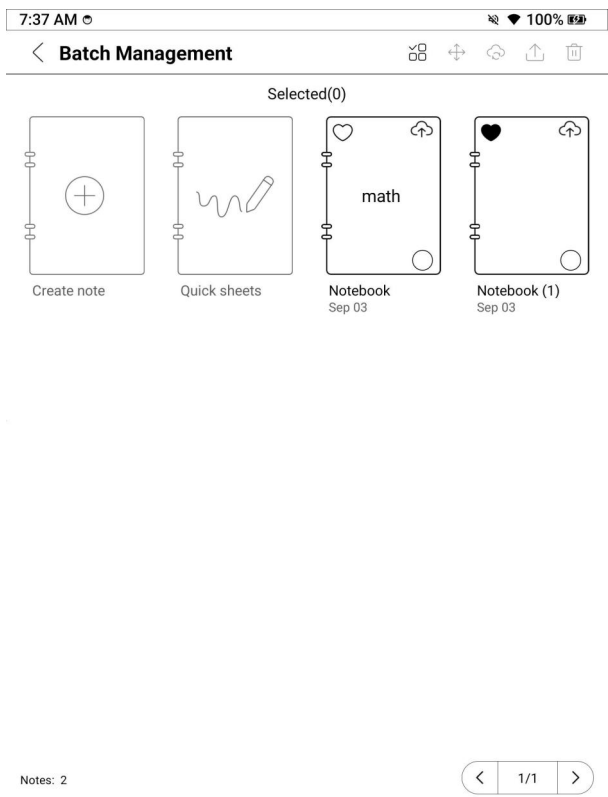

The exported files are saved in “My Documents - Export” , and the deleted notes are temporarily stored in the Trash.

Notes Editing

Notes Cover

Create a new note and enter the cover/title/template setting page, if you don't set the cover, the content of the first page of the note will be displayed by default. You can choose different handwriting/text when setting the cover.

3:03 AM

100%

<

Edit Title&Cover

Skip Cover Settings

☐

Title

Notebook (1)

▼

Written

▼

|

Brush 5

▼

|

Stroke

▼

|



Clear

Note Cover

Template

>


Blank

Create

Notes Tools

Stylus

Self-developed pressure-sensitive pen, which deeply restores the real pen and paper writing feeling of ballpoint pen, pencil, brush, Dip pen and other pen types to meet different users' habits.

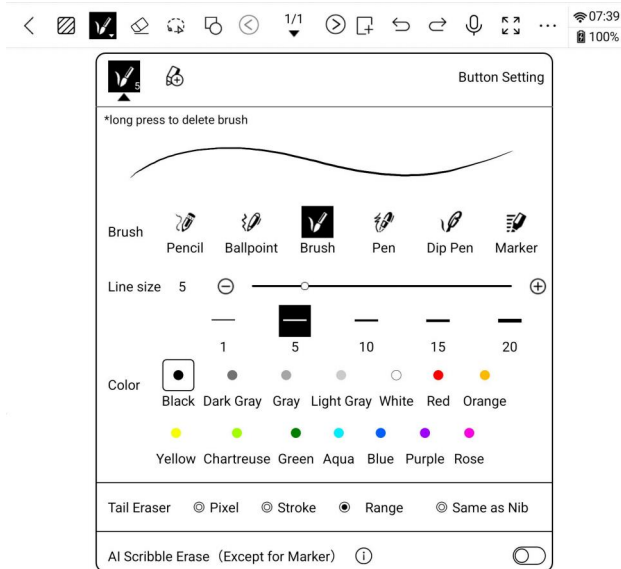

Template

Supports customized templates to meet different needs.

<

Favorites

Basic


Planning

Creative


Lifestyle

Custom


Template

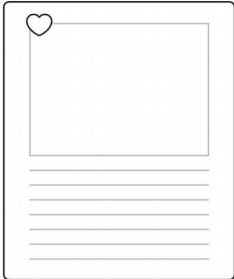

One Storyboard

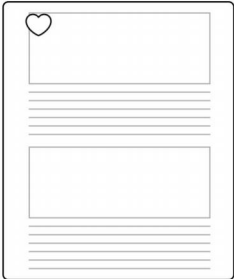


Two Storyboards

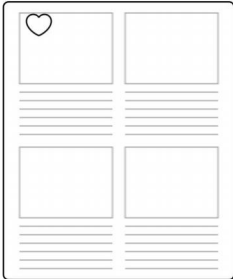


Four Storyboards




Todos

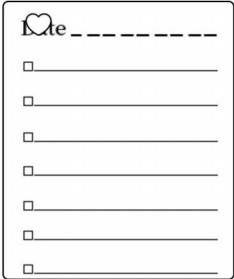

Checklist Single

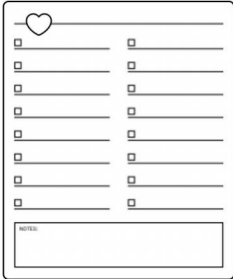


Checklist Two

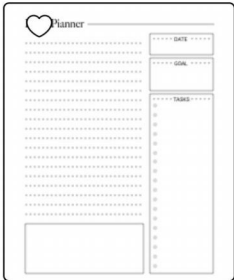

Daily Planner 1



Daily Planner 2

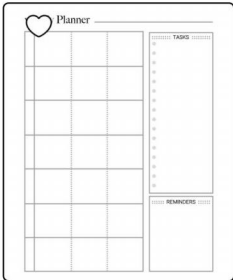


Weekly Planner 1

Lasso

You can use the stylus to circle a range on the screen and move, copy, delete, rotate, zoom and other operations on the contents of the circle.



Lasso is a smart box selection, according to the selected range, automatically extend all the strokes of the target object.

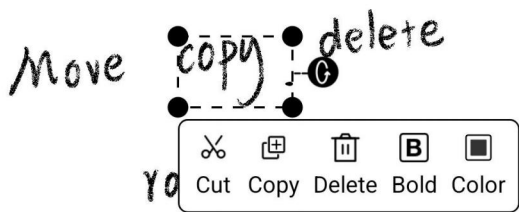

Tip:

When the lasso is circling the note text, only move operations can be performed at this time.

Add

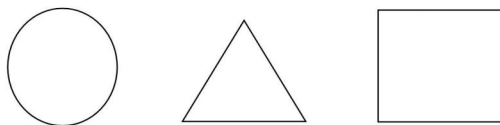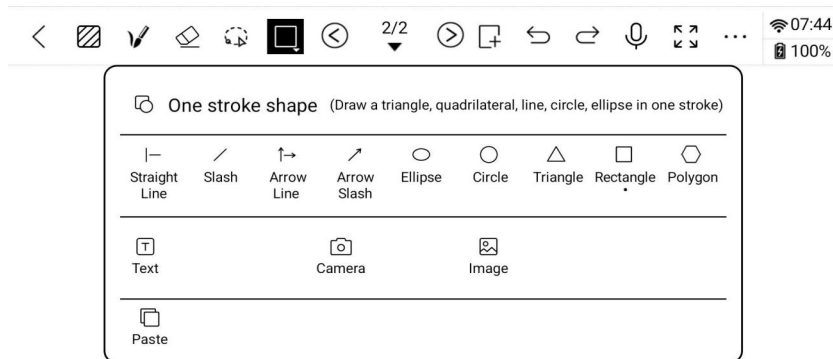

Provide a variety of recording methods. Click on the blank space to add:

One Stroke: Quickly draw to improve the efficiency of handwriting and drawing.



Camera: Capture and record information in real time.

Picture: Add local pictures, supplement text descriptions, and beautify notes.

Text: Add a text box with printed text.

Paste: Paste the contents of the clipboard into the note.


Voice Recorder

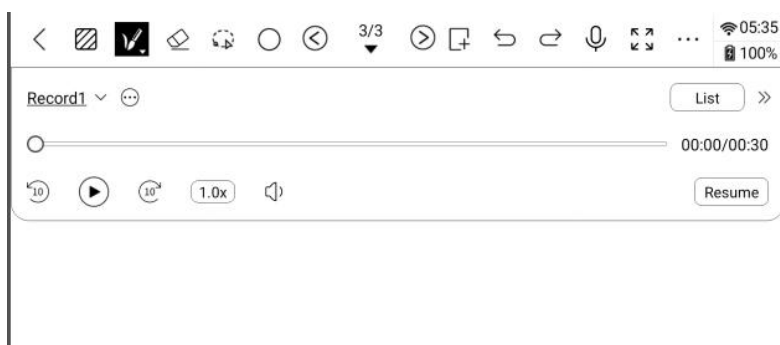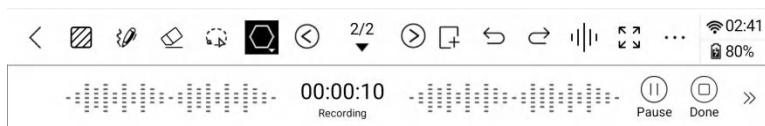


Voice Recorder and handwriting can be performed at the same time. Click the » icon to collapse the recording toolbar:



Manage Notes

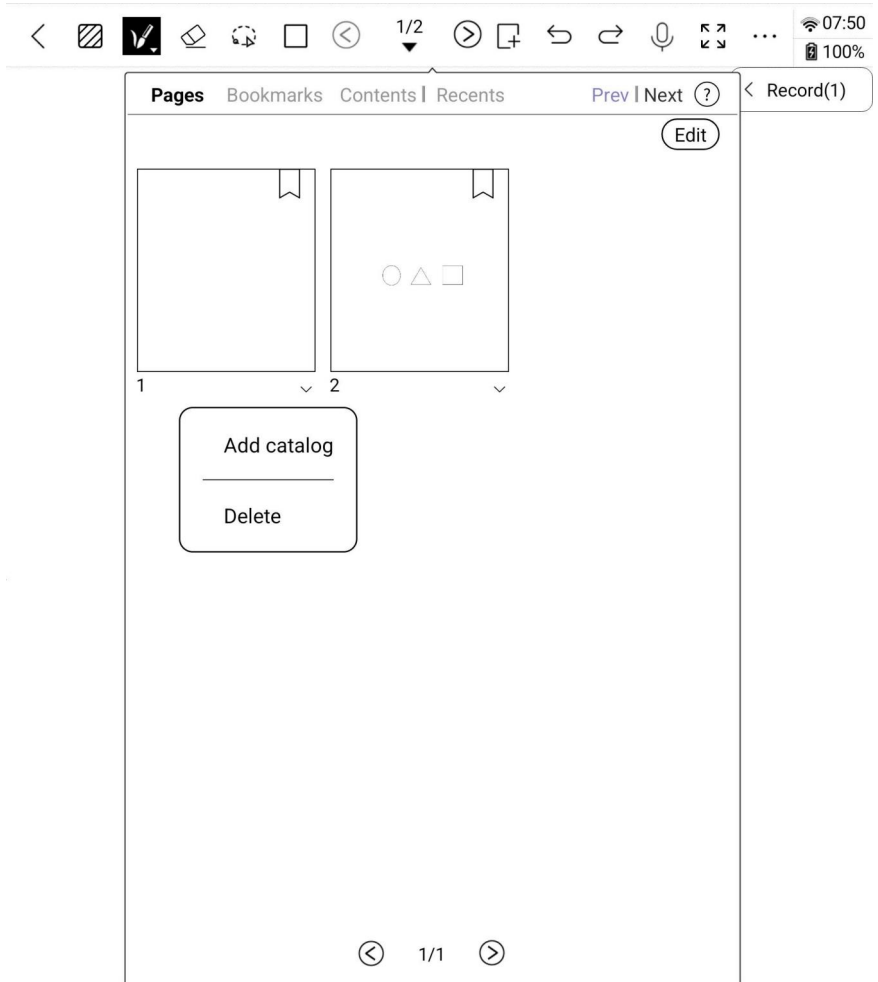


In the thumbnail pop-up box, click the upper right “Edit” button:

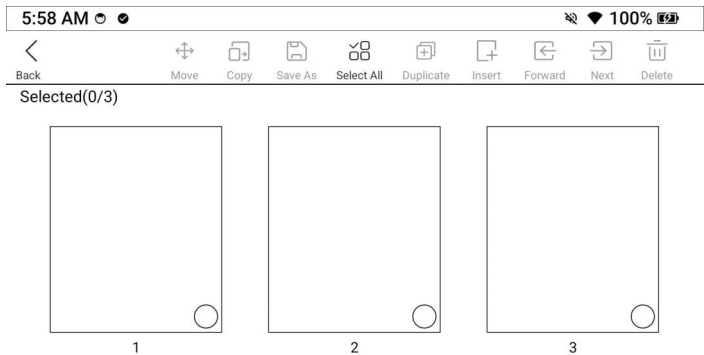

You can reorder the pages, copy them to other notebooks, save as a new note, etc. Click on the icon in the bottom left corner of the page to switch to a four-column view.

More


The "More" in the toolbar contains a variety of custom functions, and users can set their own notes template and screensaver.

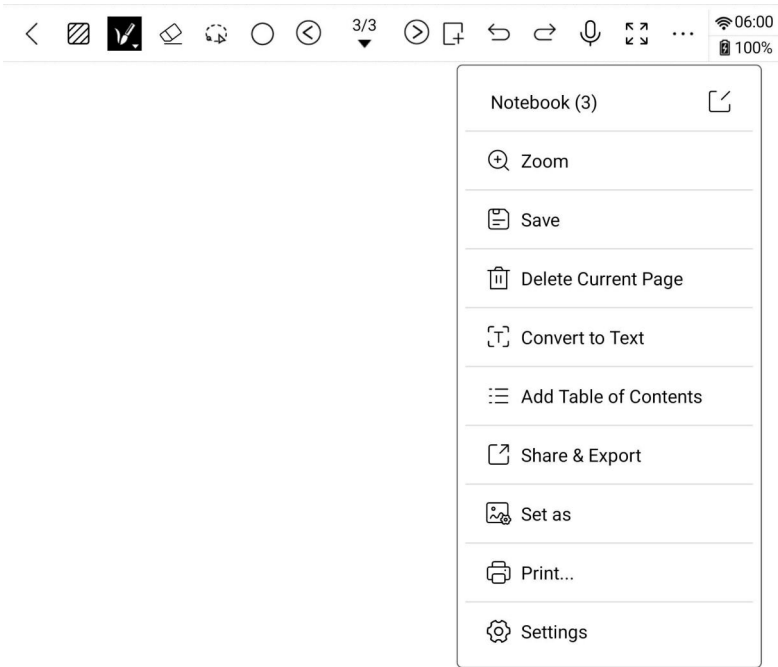

Convert to Text

Click “More > Convert to Text” , enter the text conversion interface. The left side displays a list of page thumbnails, where you can select individual pages or click “Select All” for batch recognition. The top right shows handwritten notes, while the bottom displays the recognized text. Click the “Settings” icon in the top right corner to choose the recognition language.

Tip: Converting to text requires an Internet connection.

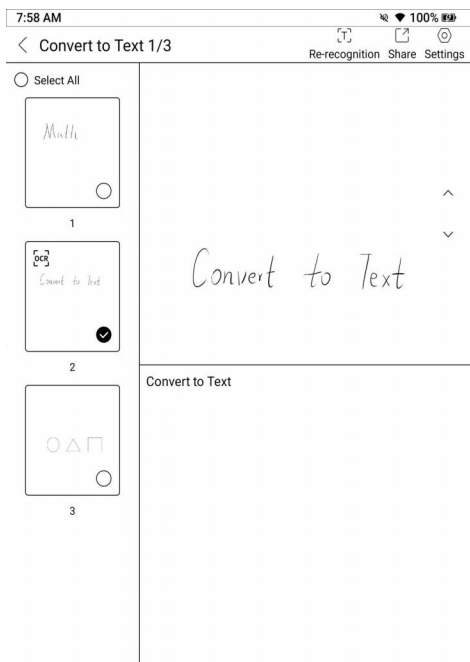


Share & Export



More

project

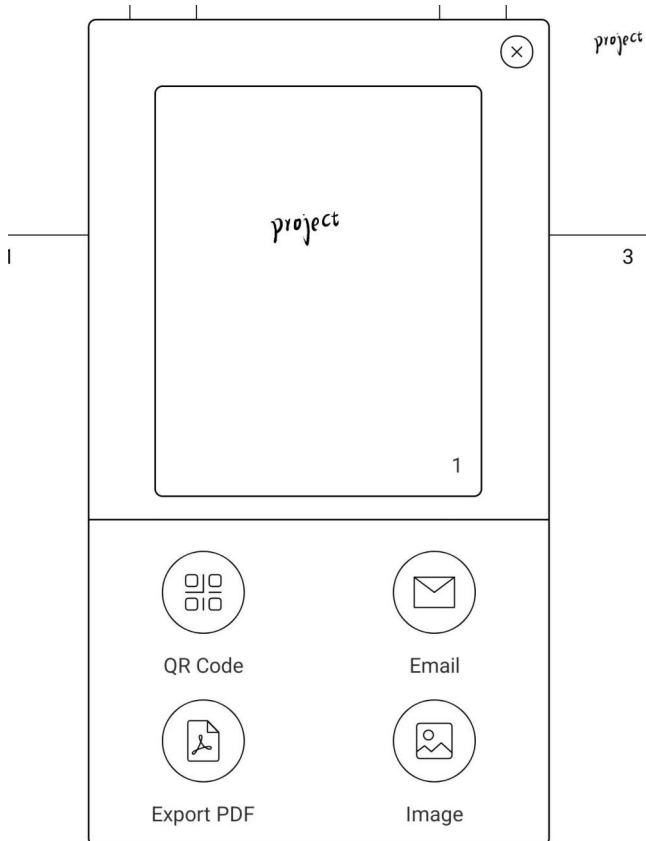

1


3

Please connect to WiFi first to share notes. Click **More** to pop up the drop-down menu, then click “Share&Export” to share notes by Email or QR code, or export to PDF or Image.

Cloud Sync

The cloud sync function requires an Internet connection and logging into my account.

Click “Cloud Sync” in the upper right corner setting, if you are not logged in, the following window will pop up:

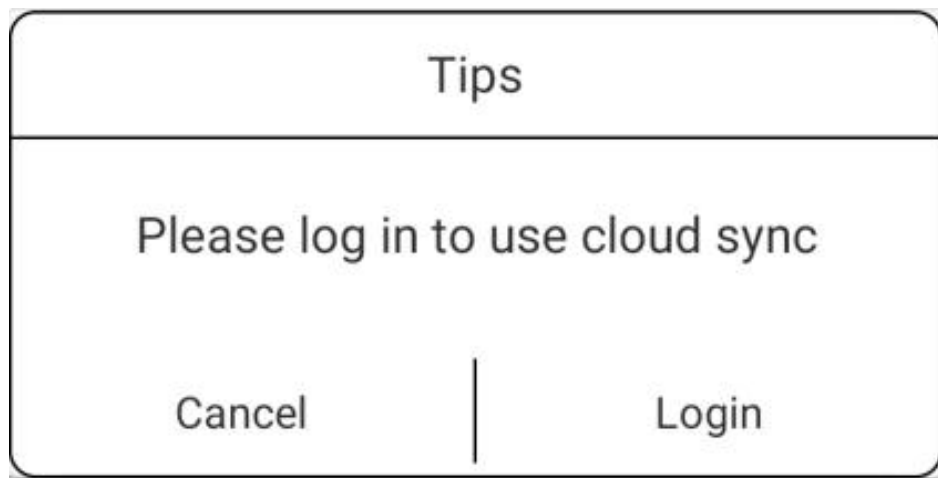

If you are logged in, the following interface will pop up:

2:51 AM

88%

< Cloud Sync

 jianwwpro

>

Note Automatic Sync to Cloud

Sync All Notes

Start Sync

Last sync time: 2025-06-11 08:08:54

Tips

1.Cloud Sync will sync all data from local to cloud and sync between multiple devices, it is different from local backup.

2.You can also select More -> Backup to backup all notes to the local device to avoid data loss.

3.After turning off automatic sync, the notes will only be saved locally; You can select Start Sync in the cloud sync settings, press the note to select sync, or select More ->Batch Management for sync.

Download Penstar App

Download the Penstar app for iPhone, iPad, Android, and PC devices. Effortlessly access your notes anytime, anywhere!

For Windows users, please download from <https://penstarcloud.com/download>



Use Mobile Camera/Browser to Scan QR Code to Download

Click “Start Sync” to sync your data to the cloud, you can also turn on the auto-sync and your data will be automatically synced to the cloud.

Backup & Restore


Click “More” - “Backup & Restore” at the top right of the homepage of Notes, enter the backup interface, and click “Backup to Local” to complete the backup.

The backup files of all current notes will be stored in the internal storage in the form of zip file. You need to connect to the internet first to use the cloud synchronization function.




Global Annotation


You can enable global annotation in most scenarios of the e-book and make handwritten annotations. Global annotations are not limited by pages or formats. You can add comments, mark key points or record inspirations on documents at any time.

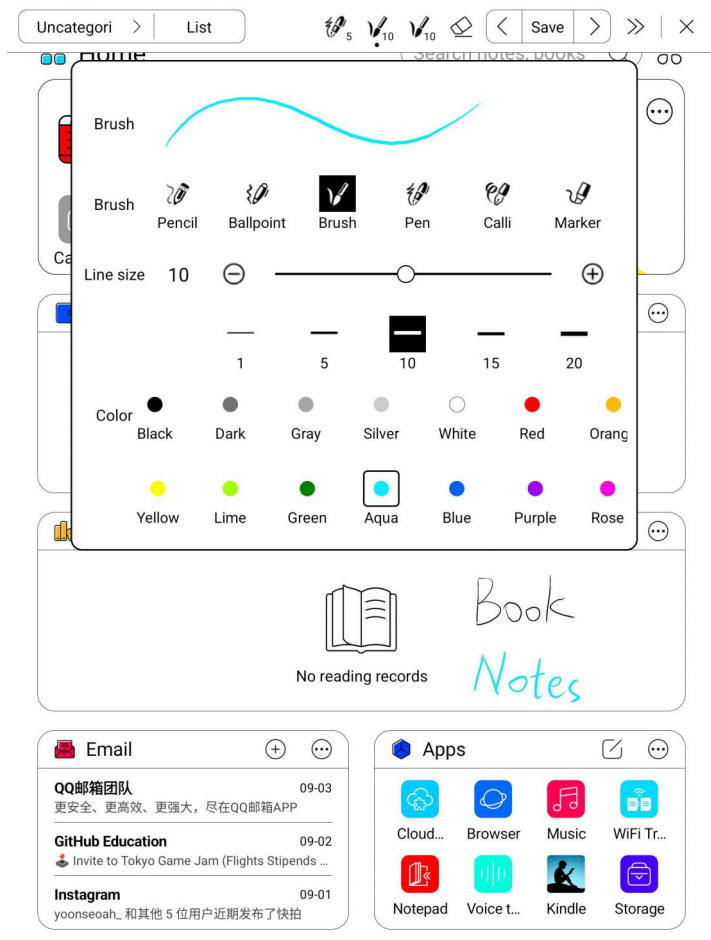

You can enter global annotations in the drop-down menu, or define the button function as global annotations.

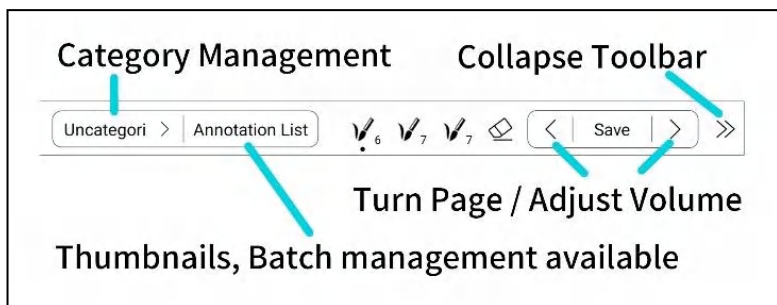

Bookshelf

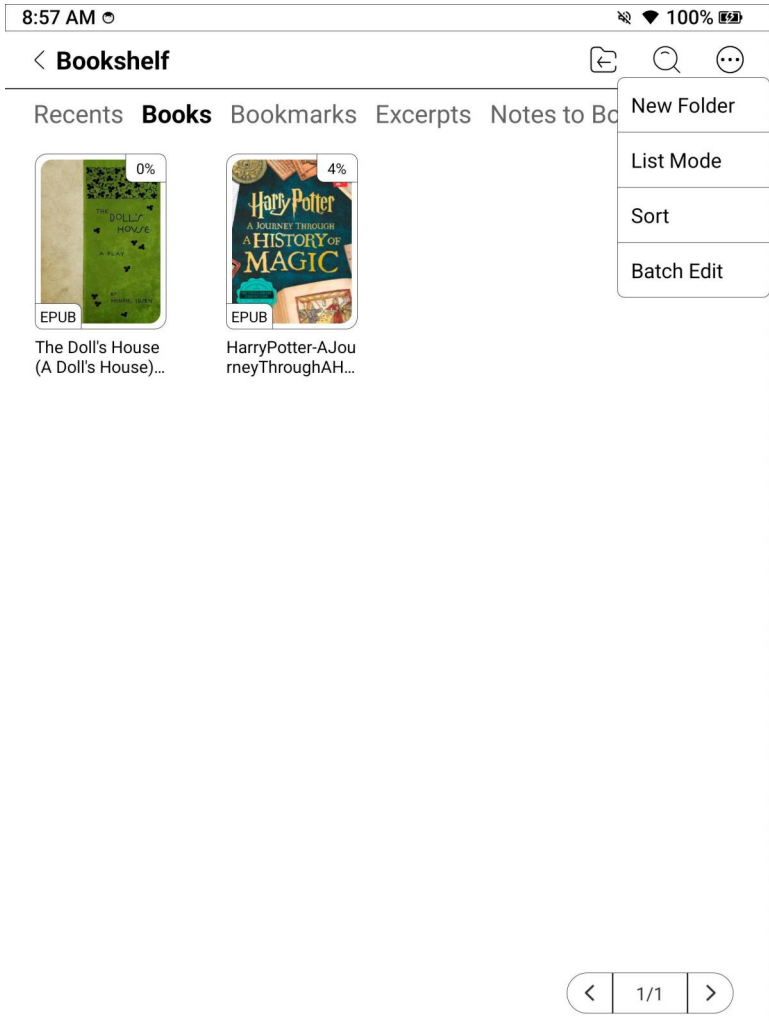


Recents: The recently-read ebooks are displayed here. Click to open the book and automatically go to your last-read page.

Book: Click “” to import ebooks, click “” to create a new folder, select view mode, sort, or batch edit.

Files downloaded via WIFI transfer will also be automatically

added to the corresponding folder of the bookshelf.

Bookmarks: All bookmarked books and the pages where the bookmarks are located are listed here. Click the corresponding book to open the corresponding page.

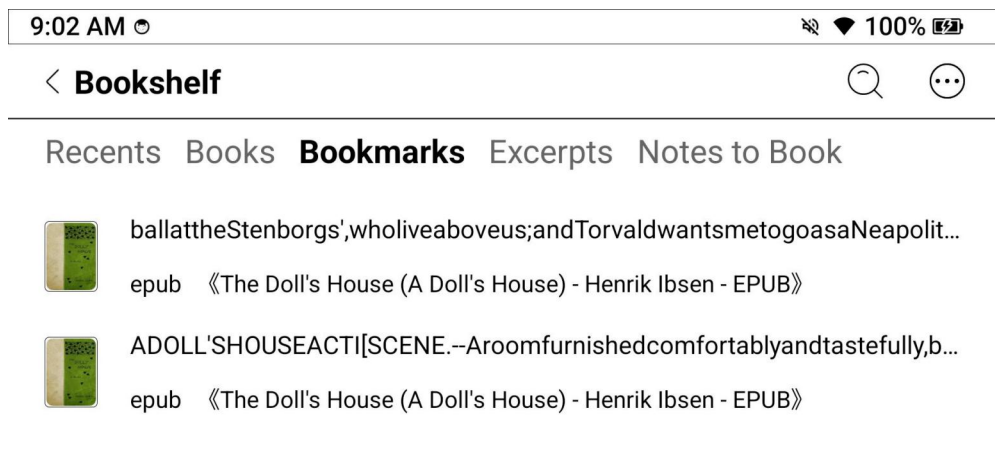

Excerpts: Here are all the books with excerpts and the pages where they are located. Click on the corresponding book to open and view the excerpt content.

Notes Summary: Organize all the underlining and notes in the book in one file, and you can click “Table of Contents - Underlining - Notes summary” to update the latest notes. This feature currently only supports some books that can be opened in hvXreader, such as epub and azw3 format books.

Tip:

Long press on the book cover to make it invisible on the home page, and returning to the home page will hide the book.

Read E-Books

Open E-Books

Supports reading books in AZW、AZW3、CHM、DOC、DOCX、DJVU、EPUB、TXT、HTXT、HTML、HEB、HVEB、FB2、MOBI、PDF、PPT、PPTX、XLS、XLSX、ET、DPS and other formats, and supports decompression of ZIP format files.

Find the books imported into the device in the built-in storage and click to start reading.

Turn Page

- 1) Click the left/right side of the screen to turn the page.
- 2) When reading TXT、HTXT、HTML、PDF、EPUB、HEB、FB2、MOBI、CHM、AZW3、AZW format e-books, the system supports the auto-turn page feature.
- 3) Auto Turn Page: Click the center of the screen to pop up the menu, then click “Display” > “More”, and set auto page turn on. Then click the center of the screen to pop up the menu to set auto page turn time.
- 4) Page Turn Method: Under the “Layout” > “More” menu, you can choose the page turn method from Left-Right or Top-Bottom.

Screen Rotation

When reading, click on the center of the screen to pop up the menu, and select "Rotate" to switch between vertical and

horizontal reading modes.

Refresh

- 1) Click the center of the screen to pop up the menu, then click “Refresh” to choose different refresh modes.
- 2) Auto Refresh: Under the “Refresh” menu, click</> (1 page each time) or << / >> (10 pages each time) to set up auto-refresh per few pages. You can also long-press the “Back” physical quick button to refresh the page once manually.

are not located in the United States, you will have to check the laws of the country where you are located before using this eBook.

Title: Aesop's Fables; a new translation

Author: Aesop

Commentator: G. K. Chesterton

Normal

Clear

Fast

Ultra

Minimal ghost, good display, response speed is slightly slow, suitable for flipping through images and text.

<<< < Refresh every 50 pages > >>>

Contents

Display

Progress

Refresh

Listen

Font & Spacing

When reading TXT, HTXT, HTML, and EPUB e-books, click the center of the screen to pop up the menu, then click “Display”, and choose your preferred font or spacing.

Display

When reading TXT, HTXT, and EPUB e-books, click the center of the screen to pop up the menu, then click “Display”, and choose the “landscape” or “portrait” method that you like. The page number will be recalculated.

Listen to E-Books

Select "Listen" in the toolbar below to set the reading time you need to listen, or listen to books on a timer.

Start:

Click "Start" and the system will start reading the book from the current page. After a page is finished, it will automatically turn to the next page to continue reading.

Stop:

Click the stop icon and the system stops reading. Exiting the current book will stop the reading. When a book is finished reading, the system automatically stops reading and enters sleep mode.

Settings:

You can select voice, change the volume and reading speed, and set reading time under the “Listen” menu.

ACT I



and handkerchiefs for the maids; old Anne ought really to have something better.

HELMER.

And what is in this parcel?

NORA.

[crying out]. No, no! you mustn't see that until this evening.

HELMER.

Very well. But now tell me, you extravagant little person, what would you like for yourself?

NORA.

For myself? Oh, I am sure I don't want anything.

HELMER.

Yes, but you must. Tell me something reasonable that you would particularly like to have.

NORA

Voice

Young boy



Timer

Volume 5



Speed 5



Start



Contents



Display



Progress



Refresh



Listen

Bookmark

01-A Doll's House - a play

Contents

Bookmarks

Annotations

Notes

Sort

Manage

A DOLL'S HOUSE	2025-06-12 P11	ld. Only just
and handkerchiefs for the maids; old Anne ought really to have so...		e days I will
A DOLL'S HOUSE	2025-06-12 P12	
HELMER. Well, out with it!NORA. [speaking quickly]. You might giv...		

<

1 / 1

>

Contents

Display

Progress

Refresh

Listen

Add Bookmark:

Click the center of the screen to pop up the menu, then click “🔖” on the top menu bar to add a bookmark, and click it again to remove the bookmark.

Bookmark Title:

The system will automatically use the first line content of the current page as the bookmark's title.

View Bookmarks:


Click the center of the screen to pop up the menu, then choose “Contents” to view bookmarks.

Sort Rules:


Bookmarks are sorted in reverse order according to the order in which they were added, with the newly added bookmarks displayed at the front.

Jump Page

Progress Jump: When reading, click the center of the screen to pop up the menu, drag the bar to jump reading progress, or click < > arrow to turn a single page each time, click << >> double arrows to turn 10 pages each time, click [icon] />| to jump to first/last page.

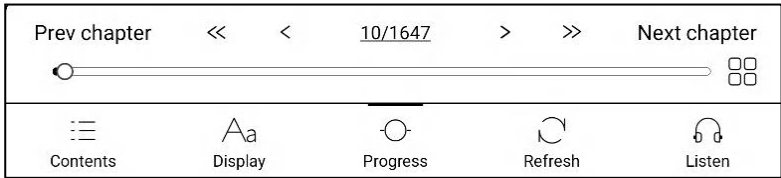


Page Jump: Click the page number under the “Progress” menu, enter the page number you want to jump, and click “OK” to jump.

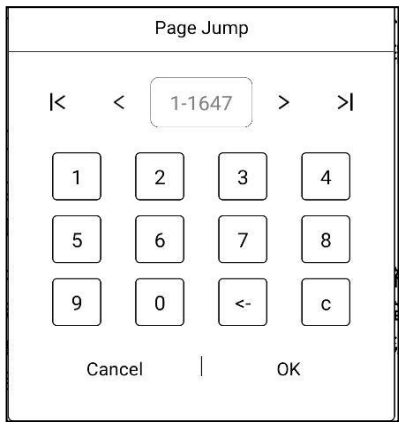

Tip:
If the entered page number exceeds the total number of pages, it will automatically jump to the last page.

Search

Search Text: Click the center of the screen to pop up the menu, then click the “Search” button, and enter the text you want to search.



Excerpt

When reading a document, long press to select the content to be excerpted, click “Excerpt” ; the same document excerpt results saved in a file by default.

So am I! And how the children will enjoy themselves, Torvald!

HELME Copy | Notes | Underline | Excerpts | Dictionary | Wikipedia | Listen

It is splendid to feel that one has a perfectly safe appointment, and a big enough income. It's delightful to think of, isn't it?

Tips:

If it is more than one line, please hold down the upper left corner and drag it to the lower right corner (or from the lower right corner to the upper left corner) to draw a diagonal line to select it. When the content of a PDF document is a picture, it will be converted into text through recognition and then edited or excerpted.

Notes

Long press to select the note area and choose “Notes” .
Tap the underlined “...” icon to view the content of the note.
Click the underline, you can also choose to delete the note in the pop-up box.
Tip: “Delete Notes” deletes the whole paragraph containing the selected area in one operation, and does not support segmented or partial deletion.

It is splendid to feel that one has a perfectly safe appointment, and a big enough income. It's delightful to think of, isn't it?
NORA.
It's wonderful!

It's delightful to think of, isn't it?

Export Notes:

Click “Catalog” , “Underline” , ‘Manage’ , select notes and click “Export” in the function bar. Provides various export methods.



OneNote



Email



Share by QR code



Save to local

Annotation


Add Annotation: Click the pen icon in the upper right corner of the reading interface to enter the annotation mode. Provide a variety of annotation tools, such as a variety of pen types, graphic tools, lasso tool.

View Annotations: Click “Catalog” and “Annotation” on the function bar below to view the annotation catalog, and click to quickly locate the annotation page.

Annotations Export: PDF annotations will be directly embedded into the document, you need to export directly to the original file copy copy to other devices can be; other formats can be in the directory page of the annotations in the annotated page will be exported.

Tip:

1. PDF document annotations can choose to annotate the scope of the full screen can be written (for the original document in the smaller size of the annotation)

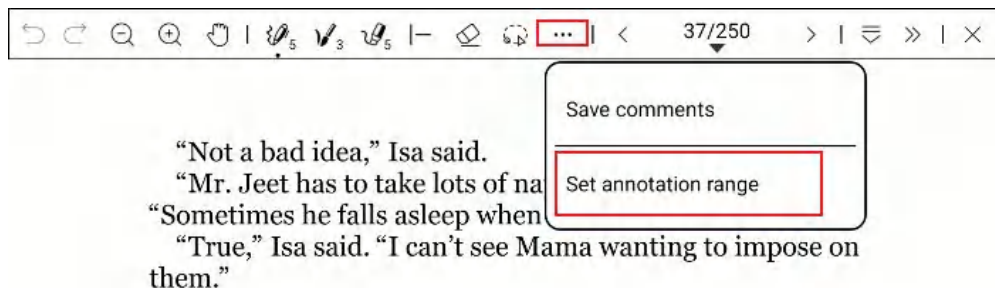

2. PDF annotation toolbar blocking the content, you can exit the annotation, in the lower function bar, in the layout - more settings in the check box “show chapter” .



Home



Back

Page turn settings

Left-Right

Right-Left

Top-Bottom

Normal

Auto turn-page



Show progress

Page

Percent

Hide

Show chapter



Show time and battery



Show annotation shortcut



Hide header and footer



Show document boundaries



Show page break lines



Remove watermark



Show excerpt tips



Goto next screen when page height is longer than screen height



Save Backup (bak file) of Original File When Annotating



PDF Reading

Contents: Open “Contents” to quickly jump to the specified chapter. You can also view the list of bookmarks and annotations and click to jump to the page quickly.

[SCENE.--A room furnished comfortably and tastefully, but not extravagantly. At the back, a door to the right leads to the entrance-hall, another to the left leads to Helmer's study. Between the doors stands a piano. In the middle of the left-hand wall is a door, and beyond it a

Zoom 100% —  +

Mode  Single  Scroll  Fit Screen Fit Width Paper

Page Auto trim  Trim margin — 3 + Comic Custom

Layout  Original  Reflow

Contrast Text Bold 0 | Contrast 0 | Darken 0 | More Smoothing II ▼

Rotate  Portrait Right-90° Left-90°

More >


Contents


Layout


Progress


Refresh


Listen


Excerpt

Display:

Under the “Display” menu, you can:

- 1) Set up layout and different display methods such as fit screen, fit width, and paper.
- 2) Set up a single page view or page scrolling view.
- 3) Set up page-turning, information bar, annotation, watermark, excerpt, and so on in the “More” setting.

Margin & Crop: Under the original layout, you can select auto crop margin or manual crop. Automatic crop means that the system automatically trims the white edges of the file. Manual means that the user manually adjusts the margins. If you choose manual crop, you will enter the manual margin adjustment interface. You can click or drag the top left and bottom right corners of the screen to position the trimming area. You can also perform pagination and trim odd and even pages. Once you have finished the adjustments, click "OK".


Contrast: Under the “Display > Contrast” menu, you can adjust font bold and contrast. The higher the contrast, the more obvious the text.

Excerpt: You can take screenshots, recognize the area, or recognize the entire page.

PDF Reordering: For text-based PDF, the reordering function can be used to re-layout the text. The font size can be adjusted, and you can choose to use the original font or a custom font. Using a custom font allows you to adjust the spacing.

Splitview

Click on the screen, select “Splitview” in the pop-up menu below, you can choose “Documents Dual-open”, “Splitview Notes”, and you can set the position of the new window and the direction of the horizontal screen.

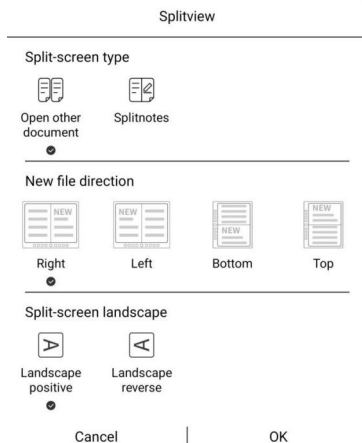

Dual-open Documents: The dual-open document function can open two books at the same time, and the two books can be operated independently at the same time.

Splitview Notes: Write notes while reading, effectively improve the efficiency of work and study.

Tips: In the splitview notes interface, the system drop-down menu and button settings are not available, and the physical buttons in the notes area only support page turning operations.

Exit: Click “Exit Splitview” in the menu bar of reading area, or click “Back” in the notes area to exit splitview notes.

View Images

Open the picture in My Documents, enter to view the picture, support up to 3 megapixel picture.

Supports image files in JPG, BMP, GIF, PNG, WEBP, PIC, PIC_MID, PIC_HD, etc., and supports comic files in ZIP, CBZ, CBR, etc.


View Images: Support normal/full screen/horizontal /vertical display modes.

Annotation: You can choose straight lines and curves or set the annotation range.

Page Turning Mode: Provide touch “right hand/left hand” “up/down/left/right” mode for selection. The system defaults to “right-handed” and “left-right” modes, i.e., when reading, the right hand clicks the left half of the screen to turn the page forward, and clicks the right half of the screen to turn the page backward.

Adjustment: In the menu “Adjustment” , you can adjust the blackness, sharpness and contrast.

Share: In the image viewing interface, select Share in the upper menu bar.

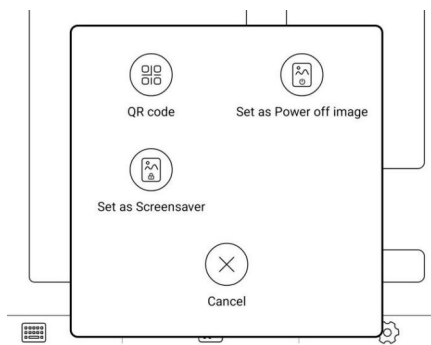

Speech Transcription

Speech transcription is a recording tool for meeting scenarios. When recording, you can transcribe voice into text, and you can add handwritten content at the same time.

Each device comes with 7hs of free transcription hours (Valid for 30 natural days from the date of issuance), other transcription hours need to be purchased. After the hours are used up, the transcription function can no longer be used.

Recording, listening back, synchronization, editing, sharing and exporting functions are still supported.

Tip:

Please connect to WIFI before using speech transcription or connect to WIFI through the prompts after opening the software to use the app.

Home Page

- Create:** add a new voice recording;
- Search:** enter the search page to retrieve voice recordings quickly;
- More-Cloud Sync:** After logging in to your account, you can enable automatic synchronization to synchronize voice recordings to the cloud drive.
- More — Transcription Duration:** You can view the remaining transcription time.

9:38 AM

100%

Voice to Text

+

New

🔍

Search

⋮

More

2025-08-08 02:54

Synced

人生啊，人生这东西，爸爸一口气喝，干了一大杯酒， ...

🕒 2025-08-08 02:54:15

🕒 00:17

2025-08-07 07:24

Synced

He came down in a chaise and four to see the place.Down on Monday in a chaise and four to see t...

🕒 2025-08-07 07:24:46

🕒 00:07

Details

- Multi-language Transcription:** Supports recognition of 138 languages including Chinese, English, Japanese, Korean, French, Russian, etc.
- Hide Transcription:** You can hide the transcription content during the transcription process to protect privacy.

Handwriting Area: Handwriting area can be handwritten input content, and you can choose the pen shape and line width at the top pen shape entrance.

“More-Delete Current Handwriting Page”: Quickly clear the handwriting on the current page.

Transcription Edit: Edit and modify the transcription content according to the audio content.

Share: Select the content you want to share, a combination of transcribed content and handwritten manuscripts, and generate a QR code after selection. Scan the code to view and share it through browser on or browser.

Cloud Drives

My Account

Register

Click “Register as a new user” to sign up:

8:12 AM

🌐 100% 🔋

< Register by Email

Chinese Mainland ▾

● This email will be your login account

Please enter your email

Password 8–16 letters, numbers or symbols

🔒

Please enter verification code

Get Code

+86 Phone number for reset password

☐ I have read and agree to the [Software License and Service Agreement](#)

AGREE AND REGISTER

Info collected on this page is only used for account registration

- Use your email address as your account ID
- Password limited to 8~16 alphanumeric
- Click the region selection box in the upper-right corner to switch your registration region.

Login

You can use Email Login or Password Login:

1). Email Login

Email login is the default login method.

Please enter username

Please enter verification code

Get Code

☐ I have read and agree to the [Software License and Service Agreement](#) and the [Account and Privacy Statement](#)

LOG IN

[Register as new user](#) [Password Login](#) [Forgot password](#)

2). Password Login

Please enter username

Please enter password

Please enter CAPTCHA code

9 - 6 = ?

☐ I have read and agree to the [Software License and Service Agreement](#) and the [Account and Privacy Statement](#)

LOG IN

[Register as new user](#) [Code Login](#) [Forgot password](#)

Forgot Password

Use your email to retrieve the password.

Password Reset

Enter Username (Email)

Verification Code

Get Code

NEXT

Enter the verification code received by email and click Next:

Reset Password

Password 8–16 letters, numbers or s

ⓧ

🔒

Confirm Password

ⓧ


🔒

DONE

Enter and confirm the new password to finish the password reset.

Account Center

After logging in, the following interface will be displayed:

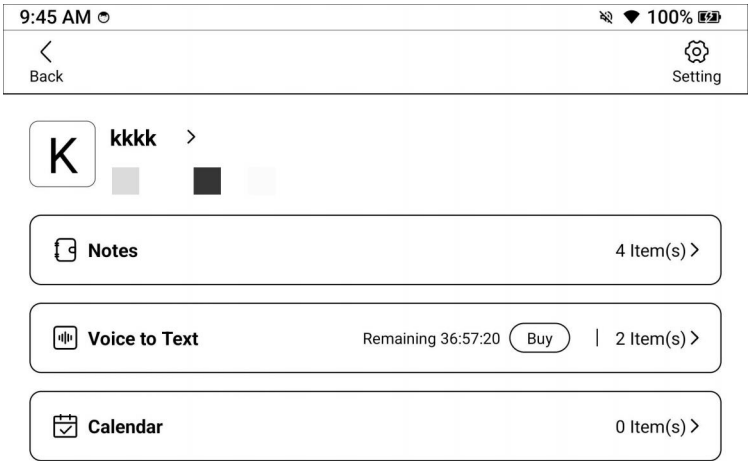

Click “Setting” to edit your profile or log out.

Dropbox, Google Drive

Integrate with main cloud drive services:

STEP 1: Login/Register in My Account  app.

STEP 2: Go to Penstarcloud.com and log in.

STEP 3: Choose ‘Integrations’ , then click  to activate your cloud storage service.

After integration, your activated cloud service will appear in the Cloud Drives application interface on the Penstar device:



- Click the upper left corner to switch cloud drives.
- Click  to create new folders, upload files, and sort (Note: Dropbox does not support sorting).
- Click the Download button to download files, or click the Download button in the “More ” button to download.


Tips:

For Microsoft OneDrive, please download the APK file and install it on your device to use the OneDrive service directly.

Camera


The camera offers both photo and video modes. All photos and videos are stored in the album.

When taking photos, the camera supports both auto-focus and manual focus. To manually focus on a subject, simply tap the object you wish to capture.

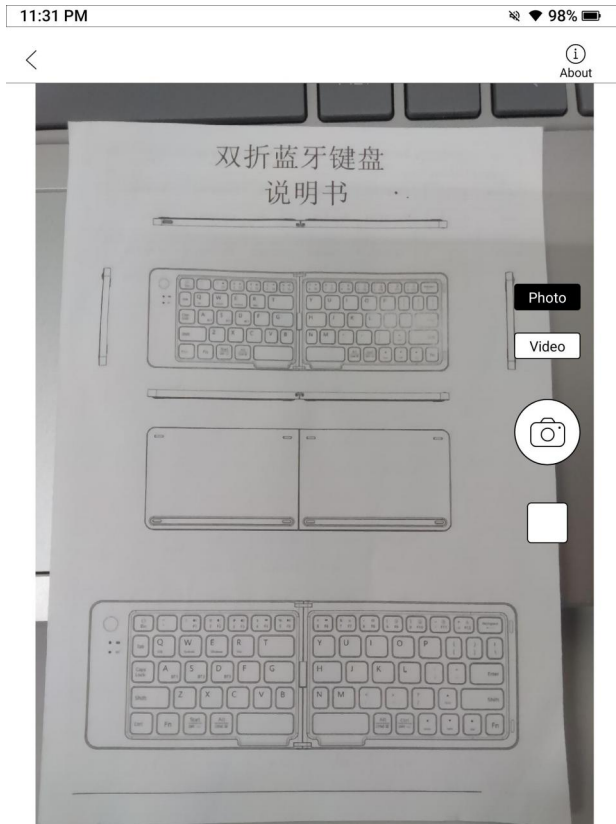

Gallery

Open image details to favorite, edit, share, or delete images. Access additional options via the “More” menu in the top-right corner.

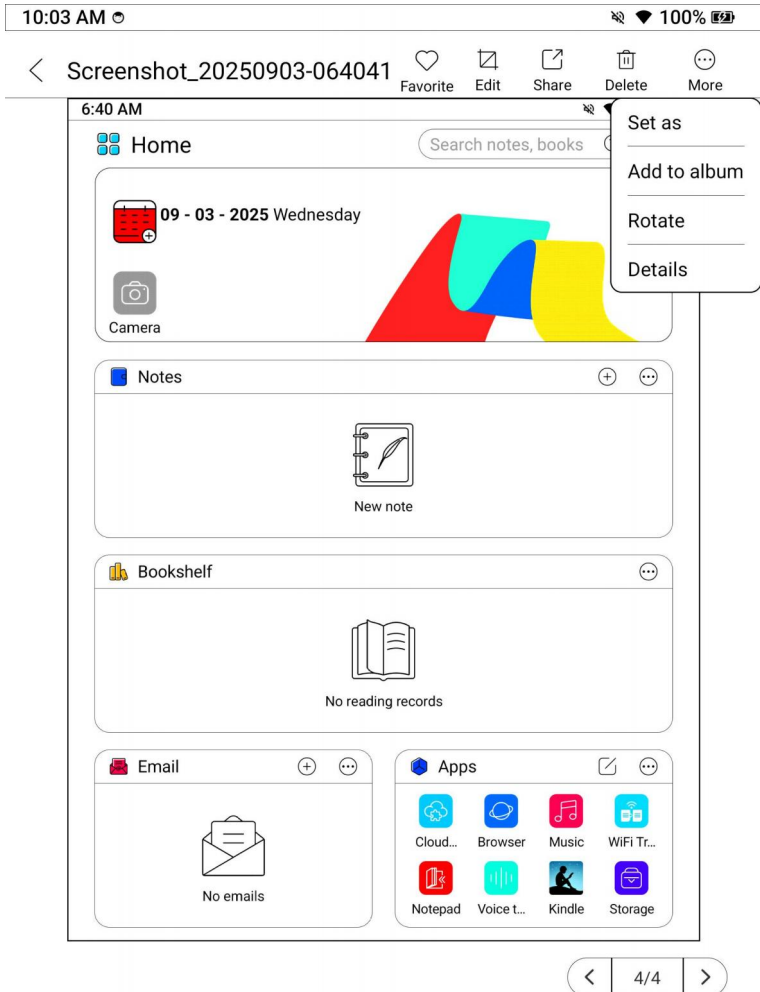

More Apps

Including apps downloaded and installed from the App Store, pre-installed third-party apps.

Frequently used: Click the “  ” in the upper right corner to manage the apps in the frequently used module on the home page of the device.

Order Adjustment: Click the Sort button on the upper right corner to enter the sorting interface. Drag and drop the apps to sort.


Install Pack: Click the “Install pack” to enter the following interface, where you can delete the installed or downloaded but not installed APK.

Install APK: You can click APK to install the APK stored in the root directory.

App Freeze: Freeze the APP that is not used frequently, the list will no longer display it, and the app will be disabled to save power.

Long press Function: you can clear data, force stop and uninstall the app.

Tips

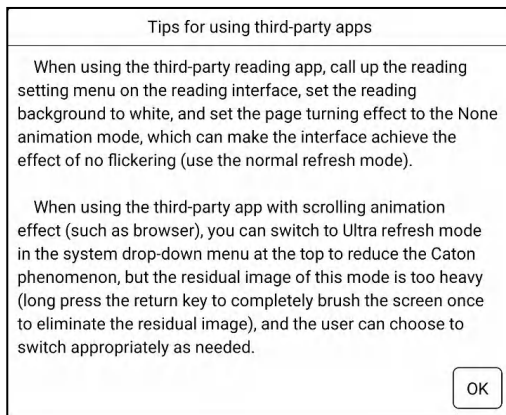

More Apps

Install: Click “Install” on the right side of the entry in the above picture, it will be installed automatically after downloading, and you can start using it after the installation is completed.

System Apps

WiFi Transfer

To use WiFi Transfer, the Penstar device and the computer/mobile should be in the same WiFi network.

Dual-way Transfer:

Files can be transferred from a computer or mobile device to a Penstar device, and files can also be downloaded from a Penstar device to a computer or mobile device.



Home

Stop Service

Show Introduction

🔍 Transfer History

WLAN Service Enabled

(Please make sure both devices are connected to the same Wi-Fi network)



Please enter the full address in the browser address bar on your computer or phone, or scan the QR code with your phone

<http://192.168.191.5:9310>



Stop Service

**Upload or Drop**


(Only supports LAN transfer. The sending device must be connected to the same Wi-Fi as receiving.)

Support DOC, DOCX, PPT, PPTX, XLS, XLSX, HTXT, HTML, HTM, HEB, EPUB, CHM, FB2, MOBI, TXT, PDF, JPG, JPEG, BMP, PNG, GIF, AZW, AZW3, APK, ZIP, RTF, DPS, ET, CBR, CBZ, and other file formats.

Uploaded Files List

Name	Size	Delete
Advanced Science - 2023 - Zhao - Decoding Macrophage Subtypes to Engineer Modulating Hydrogels for the Alleviation of.pdf	5.61 MB	
A prototype analysis of the Portuguese concept of.pdf	385 kB	
A face-contact connector for modularized floating structures.pdf	5.92 MB	
6page_mac_keynote.pdf	18.82 kB	
5page_mac_ppt.pdf	204 kB	
03 - Guided Reading Comprehension Passages & Questions_ Guided Reading Level D (RI).pdf	18.17 MB	

If WiFi is disabled, you can choose “Stop Service” or “Set Network” .

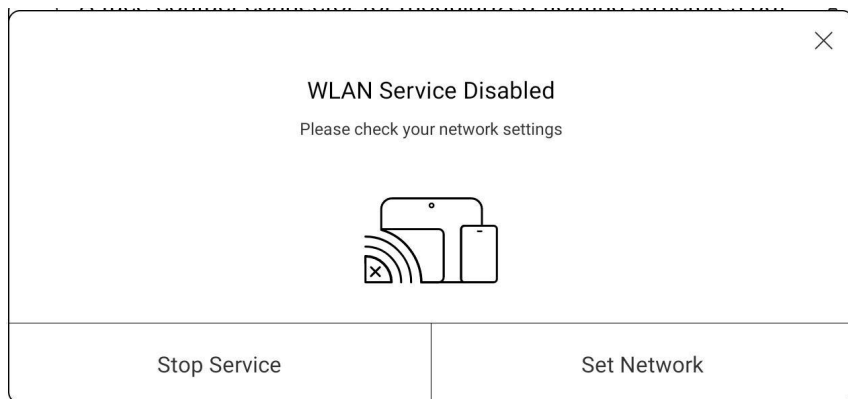**Tips:**

Each time you click "Stop Service", the WiFi Transfer connection is disconnected. Restarting the service is considered a new connection, and you need to reconnect on your computer or mobile phone (the web page displays a cached page at this time, and you cannot upload or download directly).

The main interface of WiFi Transfer allows direct opening of corresponding files. Clicking on the storage location path in the bottom right corner will navigate to the folder interface, where files can then be opened. Files can also be viewed in the "WiFi Transfer" folder under "MyDocuments". If a file is deleted in the storage location path, it will also be removed from the main interface. Similarly, deleting a file from the main interface will remove it from the storage location path.


Home

Stop Service

Show Introduction

 Transfer History

 cryptography-02-00018-v2.pdf
pdf 375 kB



 11232_2022020970_616271315.pdf
pdf 82.22 kB



 Thermodynamics-Stat-Physics.pdf
pdf 1.00 MB



<


1/1

>

Storage Path: /Documents/Trans/WiFi Transfer >

Browser

Enter what you want to search in the search bar, you can add bookmarks to a certain interface, view history and download lists, adjust font size, and set up Incognito browsing.

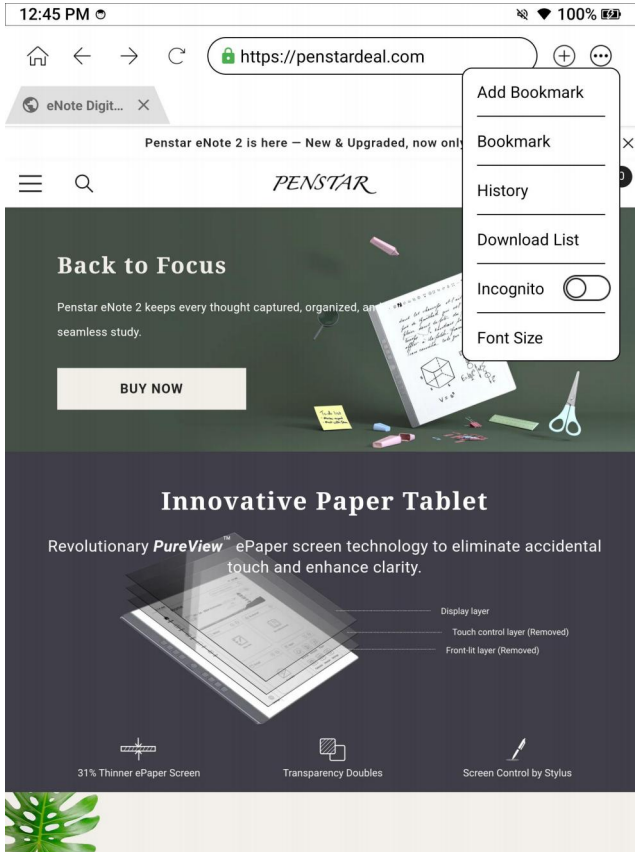

Email

Link your account to send and receive emails. Some email providers require enabling IMAP/POP3 services, setting up a mobile authorization code, and using the authorization code as the password to log in again or manually configure the protocol and server.

Email address

Manual Configuration

Privacy Policy

NEXT

Can't login to your email or enterprise email? Try to enable IMAP service first on webpage. Or set the [authorization code for mobile client](#) and log in again using the authorization code as password. [Click here to view the setting guide.](#)

<

POP/IMAP setting method

Gmail

Outlook

iCloud

QQ

163/126

1. In Gmail, in the top right, click Settings and then choose "See all settings".

Open settings

See all settings

2. At the top, click the Forwarding and POP/IMAP tab.

3. In the IMAP Access section, select Enable IMAP.

Settings

General

Labels

Inbox

Accounts and Import

Filters and Blocked addresses

Forwarding and POP/IMAP

Add one

Chat and Meet

Advanced

Office

Themes

Forwarding

Learn more

Add a forwarding address

Tip: You can also forward only some of your mail by creating a filter.

POP download

Learn more

1. Status: POP is disabled

☐ Disable POP for all mail

☐ Enable POP for mail that arrives from now on

2. When messages are accessed with POP

Keep (Gmail's copy in the inbox)

3. Configure your email client (e.g. Outlook, Outlook, Netscape Mail)

Configure your email client

IMAP access

Review (Hide from other clients using IMAP)

Learn more

Status: IMAP is disabled

☒ Enable IMAP

☐ Disable IMAP

When I reach a message in IMAP as deleted

☐ Auto-Expunge on - immediately update the server (default)

☒ Auto-Expunge off - don't let the client to update the server

When a message is marked as deleted and expunged from the local IMAP folder:

☒ Archive the message (default)

☐ Move the message to the Bin

☐ Immediately delete the message forever

4. At the bottom, click Save Changes.

After entering the password or authorization code, click "Next", then enter the account name and name, and click "Finish" to link your email and use more email functions.

< Email

Contacts

Account

Files

1021903477...

Inbox

58

Unread

36

Flagged

Sent

Deleted

6

Trash

Drafts

Total 58 emails

Compose email

● GitHub Education

Invite to Tokyo Game Jam (Flights Stipends Available 🥳)

September 2, 2025

○ Instagram

September 1, 2025

○ Dropbox

September 1, 2025

○ Penstar@penstarcloud.com

Your Penstar Verification Code

September 1, 2025

● Instagram

August 31, 2025

● Instagram

August 29, 2025

● Instagram

August 28, 2025

● Ir

● Cl

W

● Ir


<

1

>

Calendar

Click the calendar icon on the home page wallpaper, or in Apps. You can add events and add handwritten notes for each event. Schedule: After selecting a date in the upper left corner, you can set the schedule content and associated handwritten notes for that date (on the right side of the interface). When the set time arrives, the event content will be prompted in the system message. Click "Today" in the navigation bar to quickly locate today's date.

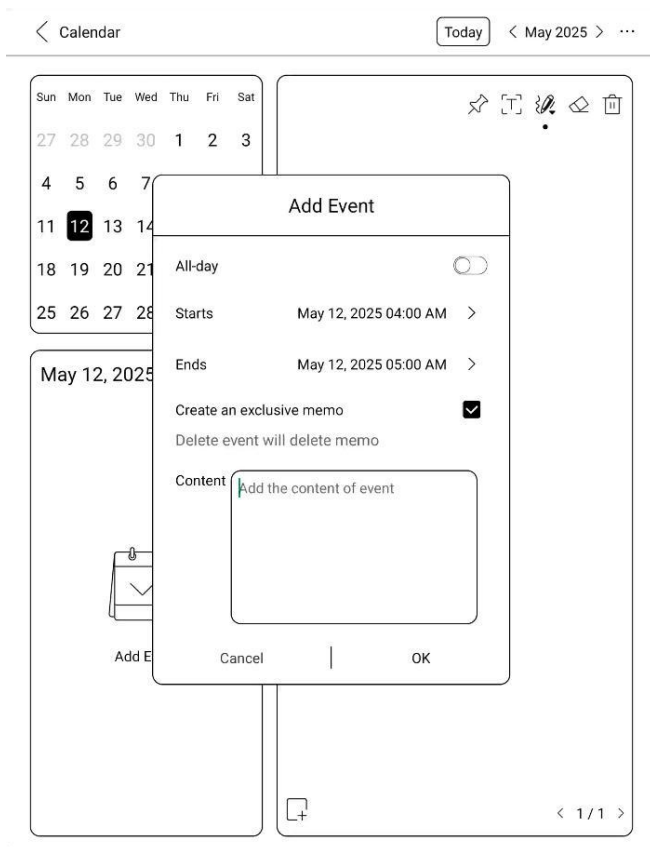


Tips:


1. In the upper right corner, click "More-Settings" to set whether to be notified when to-do items are due, whether system messages are displayed as banner notifications, and so on. The schedule screen saver can set the to-do items of the day as a dormant screen saver, and the items of the day can be viewed in dormant state.
2. In the upper right corner, click "More-Cloud Sync". Users can log in to the My Account APP with their Penstar account and turn on cloud sync. After the sync is complete, the synced schedule/calendar notes can be seen on the mobile assistant client, and can also be synced to OneCalendar.

Notepad

Click “Create Memo” to add a new text note, and click “Create Folder” to add a new category to manage your text notes.



Recent Memos

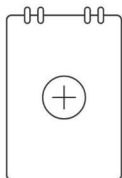

Create Memo



06-12-2025

All Memos



06-12-2025

Sort: Click settings and sort your note by date or title.

Edit: Change font size, spacing, and title. Click “Share” to share this note via email or QR Code.




Title: Memo 090325



Player

Support audio format: mp3

Click rescan content to auto-add audio files in your storage.

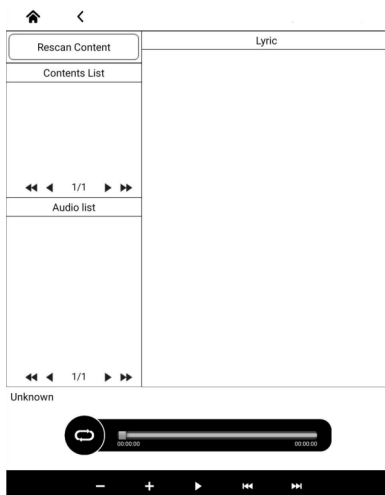

Click  to switch "Multi-song loop", "Single song loop" and "Shuffle play" three play modes.

Click  /  to decrease or increase the volume.


Click  /  to select the previous or next audio.

Tips:


1. When the auto sleep continues is set, the audio will continue to play when entering auto sleep.
2. Put the same name LRC file as the audio file in the same directory to show lyrics while playing.
3. Copy, cut, rename and other operations on the audio file, the LRC file with the same name will automatically perform the corresponding operation.

Calculator

The vertical screen is a basic calculator:

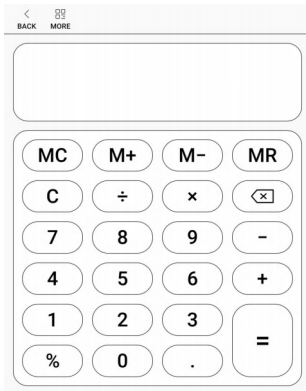

Rotate to the horizontal screen or click "More" to switch to the scientific calculator:

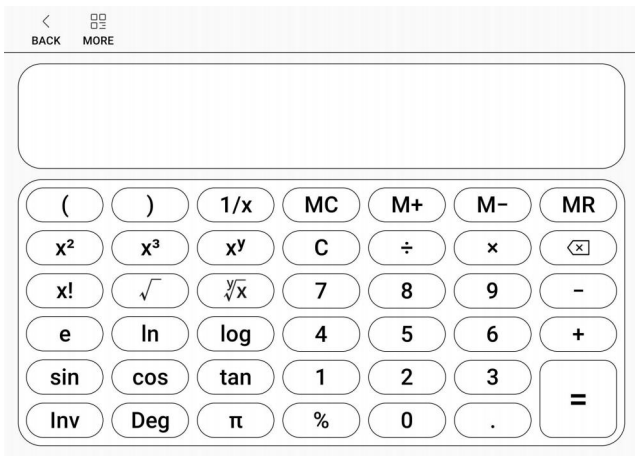

You can also view and delete the history:

Settings

Click “Settings” on the home page to open the system settings panel.

General

1. Date and Time: Set the system date and time, support custom date and time.
2. Home Page Customization: Customize the apps that are displayed on the home page.
3. Wallpaper and Display: Set the home banner wallpaper, screensaver, and power off image. You can use system wallpapers, download, or custom your own.
4. Password Security: Set a 4 or 6 digits password for startup, wake up the screen, or encrypt folders.
5. Button Settings: Customize device buttons and navigation bar functions.
6. Auto Sleep Settings: Set auto sleep and the Magnetic cover auto wake.
7. Auto Power Off: Set the auto power off the device after a specific time.
8. Sound Settings: Set sound mode and volume, and enable sleep mode playing.
9. Stylus Settings: Calibrate your stylus, set shortcut button function, or update your stylus firmware.
10. Stylus Button Setting: you can set the stylus button function to eraser, marker or touch. The stylus button function can also be turned off.


11. Refresh Settings: Choose whether to enable the "return to home page and refresh" function.

Reading

- 1) Continuous Page Turning: Support TXT file only.
- 2) Extended Fonts: Import your preferred fonts, and put the font file in the “Storage/Fonts” folder.

Network

- 1) Screen Mirroring: You can mirror the screen on a monitor that supports the projection function or a Windows 10+ computer/laptop. Here is the setting method for Windows PC:
 - a. Open the WiFi of both the Penstar device and your laptop.
 - b. Turn off Domain Network Firewall” in Windows Security.
 - c. On Windows PC, go to “Settings > System > Projecting to this PC” . Set up as below and then click “Launch the Wireless Display...” .

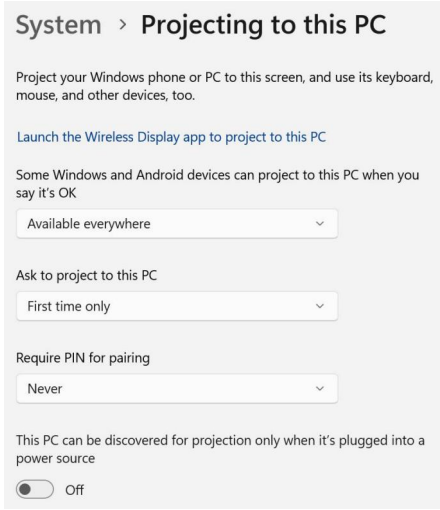

- d. On the Penstar device, click “Settings > Network > Screen Mirroring” , then choose the correct PC, and click “Yes” on the PC pop-up menu to start the wireless display.
- e. Tips: Close the LAN firewall if the connection fails.
- f. For MacOS Device: Download and install a third-party screen mirroring app on both your Penstar and MacBook.
Some popular options
- g. Include LetsView, Reflector, and AirDroid Cast. Once you have installed the app on both devices, follow the instructions in the app to connect your tablet to your Mac or MacBook.
- 2) WiFi Settings: Set up your network here.
- 3) Network Advanced: Check your MAC/IP here. You need to connect to WiFi first then the MAC address can be available.
- 4) Bluetooth Settings: Pair new Bluetooth headphones or Bluetooth keyboard here.
- 5) Bluetooth Status: This is for the sleep status option, choose to stop or continue your Bluetooth connection under sleep status. If choose “Continue” , it will increase the power consumption.
- 6) Reset Bluetooth and Wi-Fi: Reset all Wi-Fi and Bluetooth settings
- 7) WiFi Status: This is for the sleep status option, choose to stop or continue your WiFi connection under sleep status. If choose “Continue” , it will increase the power consumption.
- 8) WiFi Connection Tips: Turn it on when launching an app that requires a WiFi connection.

Storage

Displays the local & Internal storage capacity

Device Info Bar

Displays device ID, system version, hardware version, product name, model, and stylus firmware version.

System

- 1) Online Upgrade: Click “Check for Updates” . Please make sure the battery is fully charged before the upgrade process.
- 2) 2) Upgrade:
 - a. Local System Upgrade: Copy the downloaded system upgrade package to the Storage root directory and click on the local system upgrade interface to complete the upgrade.
 - b. Application Upgrade: Copy the downloaded application upgrade package to the Storage root directory and click on the local application upgrade interface to complete the upgrade.
 - c. Resources Upgrade: Copy the downloaded resource upgrade package to the Storage root directory and click on the local application upgrade interface to complete the upgrade.
 - d. Copy the resource file to the local storage root directory, and execute this function, the system automatically compares and updates the resource file. The resource file on the local storage can be deleted after the update.
- 3) Clear Temporary Files: If the system space becomes smaller or the performance becomes worse after long-term use, you can execute this function. After execution, the cover images of the

ebooks you have read will be cleared.

4) Reset Device:

a, Reset Default: Restore the system to default settings. You can also check whether to restore the default screensaver and the default power off image.

b, Reset Factory: Restore the system to the factory and clear all data from the device except the “Pre-installed ebooks” .

5) Legal Information: Displays the device's certification information, privacy policy, and other information.

6) Language: Support English, and Chinese.

7) Input Method: You can select the third-party input method installed on this device.

8) User Feedback: Please contact us if you have any questions.

Remaining power: You can check the current remaining power of the device.

Specifications

Brand	Penstar
Model	M10C
Dimension	197.35×232.5×5.8mm
Screen	10.3" E-Ink Screen (Kaleido 3)
Resolution	B/W: 2480(H)*1860(V) (300PPI) Color:1240(H)*930(V) (150PPI)
Weight	Net W. 430g
Storage	Internal Storage: 128G RAM: 4G
Battery	Lithium Polymer Battery 6500mAh USB-C Charging
Operating Temperature	32~104° F
Storage Temperature	-4~131° F

www.penstardeal.com

© Penstar Innovation Inc.- All rights reserved.

FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: This device has also been tested against this SAR limit.

This device was tested for typical body-worn operations with the back of the This device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the This device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

This device meets the exemption from the routine evaluation limits in section 6.6 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 0mm between the radiator & your body.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all

persons regardless of age or health. ISED RF Exposure Information and Statement the SAR limit of Canada (ISED) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with ISED RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with ISED RF exposure requirements, and should be avoided.

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

l'appareil numérique du ciem conforme canadien CAN ICES-3 (B)/NMB-3(B).

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.6 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF.

Cet équipement doit être installé et utilisé avec une distance minimale de 0 mm entre le radiateur et votre corps.

Informations sur le débit d'absorption spécifique (DAS) :

Cette appareil répond aux exigences du gouvernement en matière d'exposition aux ondes radio. Les lignes directrices sont basées sur des normes élaborées par des organisations scientifiques indépendantes à travers une évaluation périodique et approfondie des études scientifiques. Les normes comprennent une marge de sécurité substantielle conçue pour assurer la sécurité de toutes les personnes, quel que soit leur âge ou leur état de santé. Information et déclaration d'ISDE sur l'exposition aux RF la limite DAS du Canada (ISDE) est de 1,6 W / kg en moyenne sur un gramme de tissu. Types d'appareils: la appareil a également été testée par rapport à cette limite SAR. Cet appareil a été testé pour des opérations typiques portées sur le corps avec le dos de la appareil gardé à 0 mm du corps. Pour maintenir la conformité avec les exigences d'exposition RF d'ISDE, utilisez des accessoires qui maintiennent une distance de séparation de 0 mm entre le corps de l'utilisateur et l'arrière de la appareil. L'utilisation de clips de ceinture, d'étuis et d'accessoires similaires ne doit pas contenir de composants métalliques dans son assemblage. L'utilisation d'accessoires qui ne satisfont pas à ces exigences peut ne pas être conforme aux exigences d'exposition aux RF d'ISDE et doit être évitée.