

User Manual



Product Overview:

- Before using this product, please read the instructions carefully
- Before installation, please prepare the relevant tools to make holes and fix screws.
- This product is a Single Touch Music System With Tweeter And Bass Vibration. The packaging contains 1pcs of Single touch controller , 1pcs of Music somatosensory low frequency control box , 1 bag of install screw , 1pcs of Bass wooden box, 1 pair of Speaker, 1 pair of Net set (black) , 1pcs of Low frequency vibrator, 1 pc of DeskTop Power Supply (optional)

Applications:

APPL.000034 is a set of Bluetooth music somatosensory control system, which can be APPLIED to different styles of products, allowing us to switch and experience different massage modes at will in the daily/music/movie, which can also be controlled at will with the Bluetooth APP of mobile phone.

Using Instructions:

- Name of Bluetooth speaker : poltronesofà music-XXXX (The suffix serial number is random)
- Bluetooth on/off : Powered the devise it's in the Bluetooth off state. Long press the 3s touch button ,light will flash green that Bluetooth on.Long press the 3s touch button again the green light went out that Bluetooth off;
- Attention : In the state of Bluetooth off
 - (1) The vibration massage can be controlled by pressing buttons.
 - (2) If there are devices around (within 8 meters an open area) that turn on and connect to device of playing music, it can automatically synchronize the music playing device.by long press button, it can disconnect from other devices when Bluetooth on .
- Bluetooth connection: Turn on mobile phone Bluetooth ,search and select the devise named " poltronesofà music-XXXX " for connection, the button will be long green light when successful connected.
- Vibration massage : When power on, touch the button to open vibration massage Message mode. touch button again change to Music mode, vibration mode "Message mode-- Music mode --Movie mode-- turn off" circulated in this cycle.
- Massage mode: Vibrate 1s - Stop 1s
- Music mode : It will have rhythmic massage in sync with the audio source when audio source input,No Vibration response when there is no audio source
- Movie mode: It will have massage in sync with the movie sound,No Vibration response when there is no sound effect



Product Parameters:

Rated voltage: DC29V Rated current: 3.0A


Attentions:

- Do not overload the power supply. If there is smoke, sparks, burnt odor, etc., the power should be turned off immediately.
- Do not disassemble or modify this product by yourself.
- Do not store this product in a humid environment.
- Do not put the product close to heat source or charge close to heat source.
- Do not pour water or other liquids into the product, which may damage the product.
- Do not dispose of electronic products as household waste.
- Waste electronic products will be disposed in accordance with local laws and regulations.


Connection Diagram:

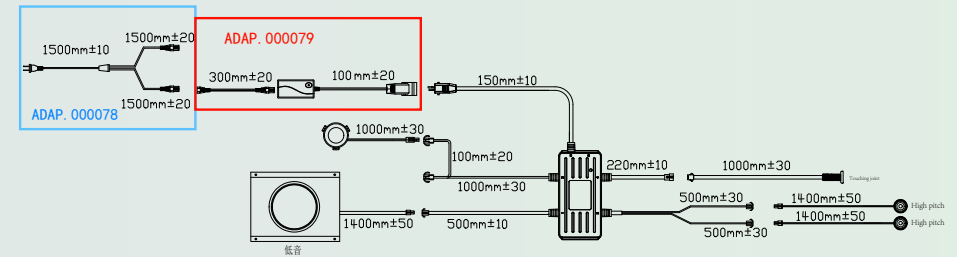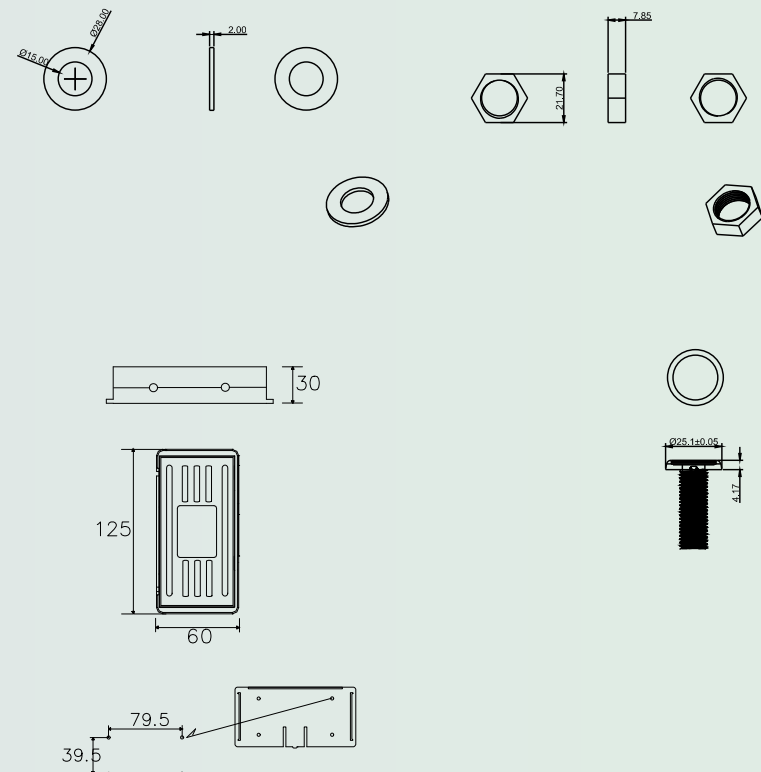Specification Diagram: 


Installation Diagram:



Hole-cutting 11.1mm



Install the component of 101 touch head



The effect of the front part being properly installed



Install gaskets and tighten nuts on the back.



The effect of the back side being properly installed

Other:

Compliance FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure requirements.

Company: SHENZHEN YIKONGDI INTELLIGENT HOME FURNISHING TECHNOLOGY CO., LTD.

Address: 2F, Building 5, Rongtaijia Industrial Park, Lisonglang, Gongming Town, Shenzhen, China. 518106

Phone #: +86 2910 9923

Fax #: +86 2916 8231

Email: Info@easy-ctrl.com

Web: www.neweasy-ctrl.com



APP Operational Guidelines



Software Download: €

- Please download the APP by scanning the QR code below, and scan the QR code in picture 1 for ios and picture 2 for Android.
- The IOS can also be downloaded by Apple Store app, and search for “poltronesofà smart sofa”.
- The Android can also be downloaded by Google Play Store, and search for “poltronesofà smart sofa” or download by explorer, and search for “poltronesofà smart sofa app Google Play Store”



ios



Android

Enter Software: ○

- Click on “” to enter into control interface (making sure your Bluetooth is on) If the Logo is in Grey, meaning the connection fails, when it's in color, meaning the connection is successful then you can operate freely from there.


Interface with failed connection




Refresh the interface of auto connection



to traditional selection connection

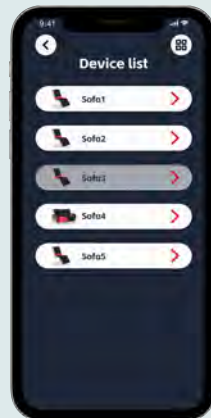


Interface Description: ⬢

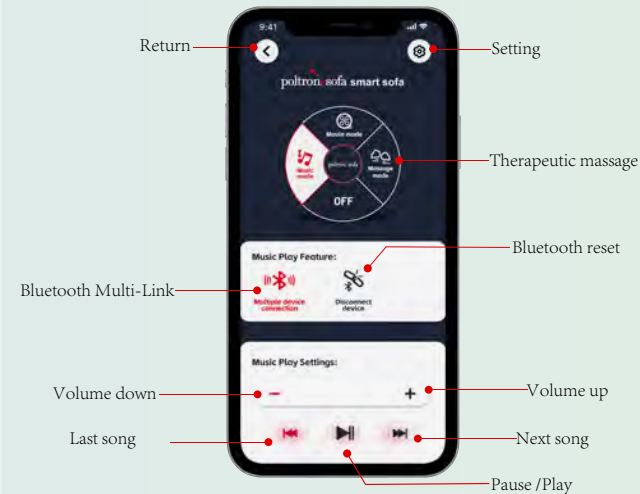


- Therapeutic massage: Press the buttons to switch therapeutic massage to music mode / movie mode / message mode.
- Bluetooth Multi-Button: Click the button to switch between Bluetooth multi-link states
- Bluetooth reset button: Long press the button to reset Bluetooth (disconnect any connected Bluetooth devices)
- Volume up/down button: Click the button to increase/decrease volume
- Last/Next Song: Click the button to select the last/next song
- Pause/Play Button: Click the button to switch between pausing and playing the music.

Setting interface

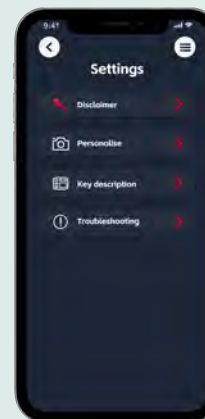

Individuation

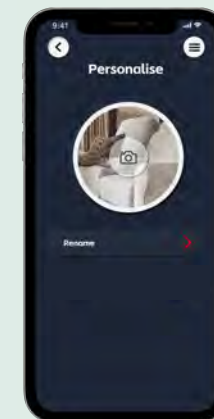

Rename

