




EZ LYNK Display User Guide

GET CONNECTED®
WHENEVER AND WHEREVER™

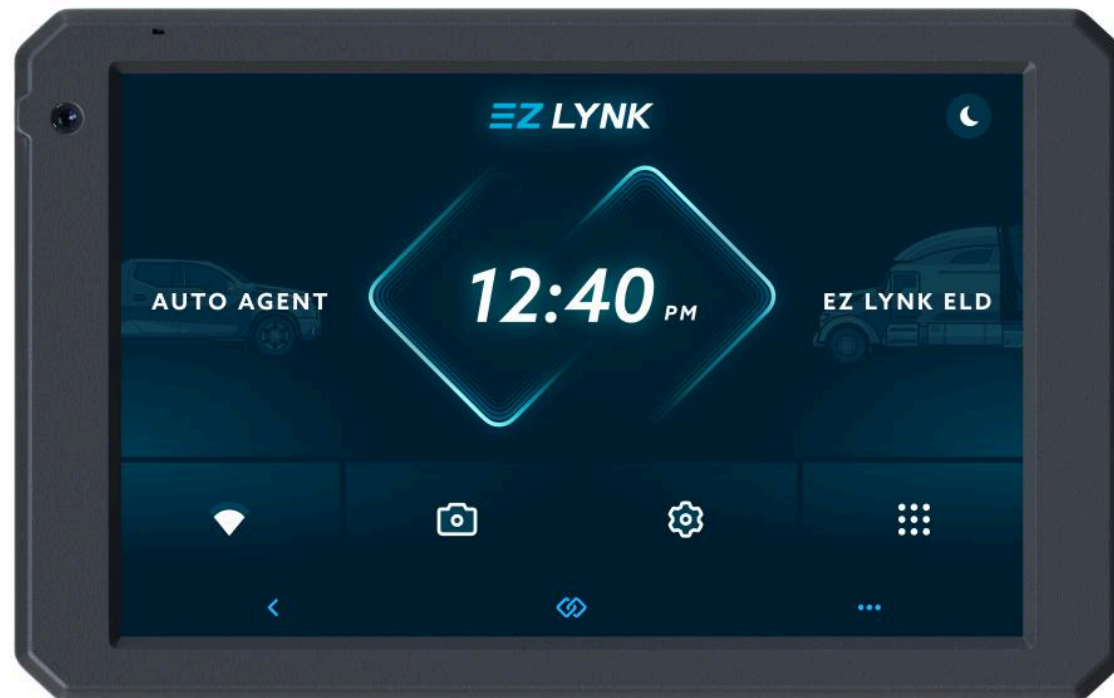

844-439-5965 • support@ezlynk.com

Introduction	3
Welcome	3
What's in the Box	3
Initial Setup	4
Getting Started	5
Pairing EZ LYNK Display with Auto Agent	8
Optional: Secure your EZ LYNK Display on the vehicle dashboard	10
Basic Operations	11
Home Screen Overview	11
System Navigation Buttons	12
Core Features and Applications	13
Pre-Installed Apps Overview	13
Application Update Guidelines	14
System Updates	15
Checking for Updates	15
Settings and Customization	18
Technical Support and Warranty	21
Contact Information	21
Warranty Terms and Conditions	21
Appendices	24
Appendix A: Technical Specifications	24
Appendix B: Regulatory and Safety Information	25

Introduction

Welcome

Thank you for choosing EZ LYNK Display. This device has been designed to provide you with a powerful, versatile computing experience in a portable form factor. Preconfigured with Auto Agent and EZ LYNK ELD apps for a seamless user experience.

What's in the Box

Please verify that your package contains the following items:

- EZ LYNK Display Device
- USB-C Charging Cable
- Magnetic Dock with Suction Stand
- Quick Start Guide

If any items are missing or damaged, please contact our customer support immediately.

Initial Setup

Powering On for the First Time

01. Press and hold the Power button on the back of your EZ LYNK Display for 3 seconds.
02. The EZ LYNK logo will appear on screen.
03. Wait for the device to boot up (this may take a minute on first boot).
04. The Home screen will appear.

Note: If your EZ LYNK Display doesn't start, try charging it via the magnetic dock and attached USB-C cable.

To access the FCCID:

Go to settings

Select ' About Phone'

Select 'Regulatory Info'

Getting Started

The front of your EZ LYNK Display includes




1 Front Camera

Located on the left side.

2 Display Screen

The main touchscreen interface for all interactions.

The back of your EZ LYNK Display includes

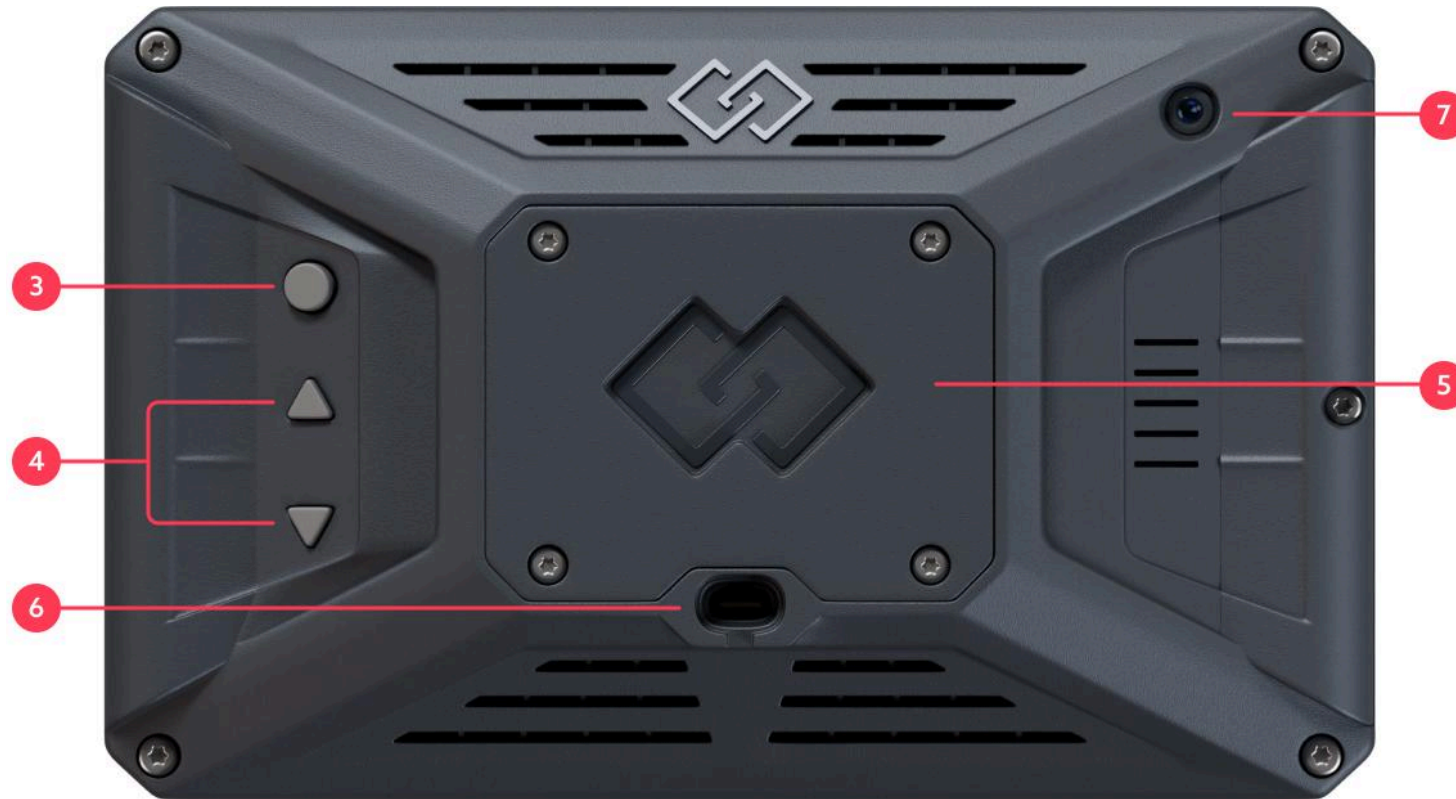

- 3 Power/Lock Button**
Press to wake/sleep or open the power menu (hold for 3 seconds).
- 4 Volume Buttons**
Volume up and volume down.
- 5 Mounting feature**
A magnetic mounting feature.
- 6 USB-C Port**
For charging and data transfer.
- 7 Rear Camera**
High-resolution camera for photos.

microSD Card and SIM Card Slots



8 microSD Card Slot - Expand storage capacity.


9 SIM Card Tray - For cellular connectivity.

Pairing EZ LYNK Display with Auto Agent

Connect your EZ LYNK Display to the Auto Agent via Wi-Fi or a USB cable.



Connection over Wi-Fi:

01. On the **Home Screen**, tap **Wi-Fi Settings** or open **Settings > Network & internet > Wi-Fi**.
02. Select **EZLYNK_XX...** (where XX... are characters of the Auto Agent serial number, printed on the bottom of the Auto Agent, for example, BCKJ4QS6).
03. Verify that the status is displayed as “Connected”.
04. Launch the Auto Agent or EZ LYNK ELD app on your device.
05. **Allow** the opened Auto Agent or EZ LYNK ELD app to access the device location and to send you notifications, via alerts presented on the initial launch.

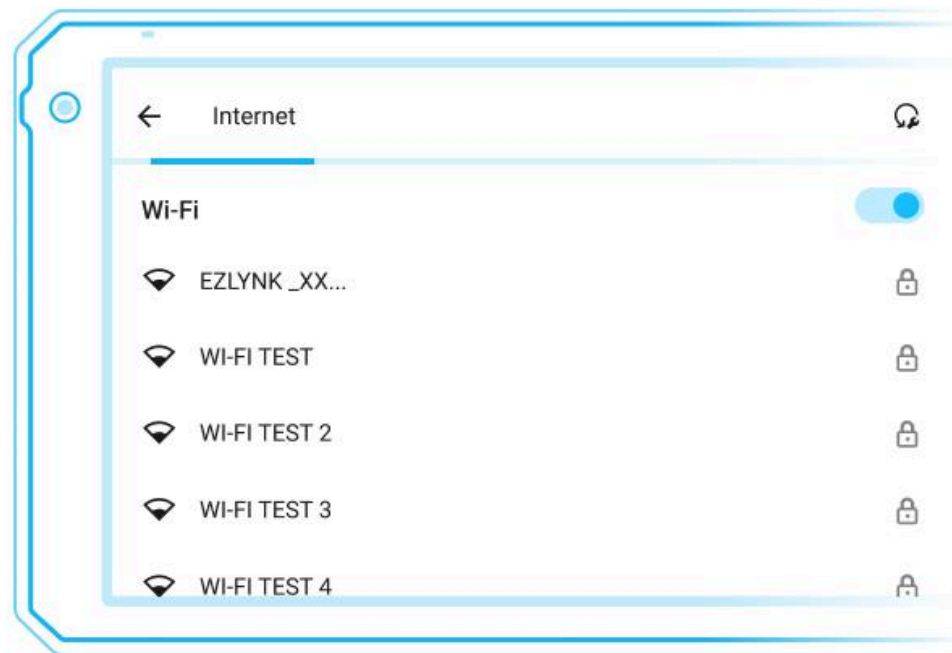


Connection over USB:

01. Plug the USB cable into your Auto Agent 3, and the other end into your EZ LYNK Display.
02. From the opened prompt, select the Auto Agent app or the EZ LYNK ELD app, then tap "**Always**" (this way, the prompt will not appear in the future). Both apps will work regardless of which app is selected.

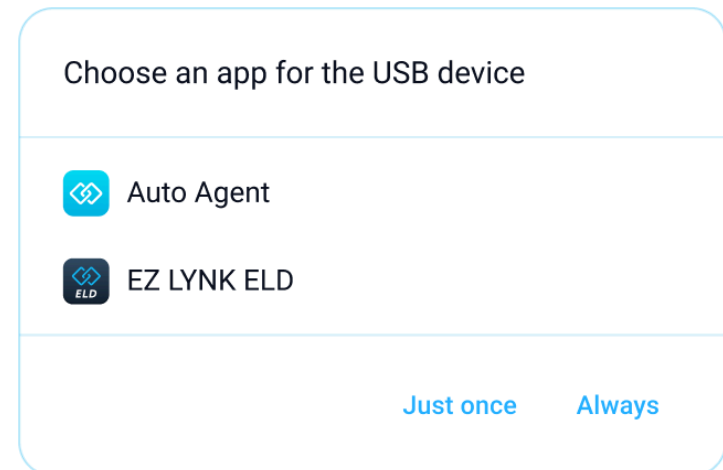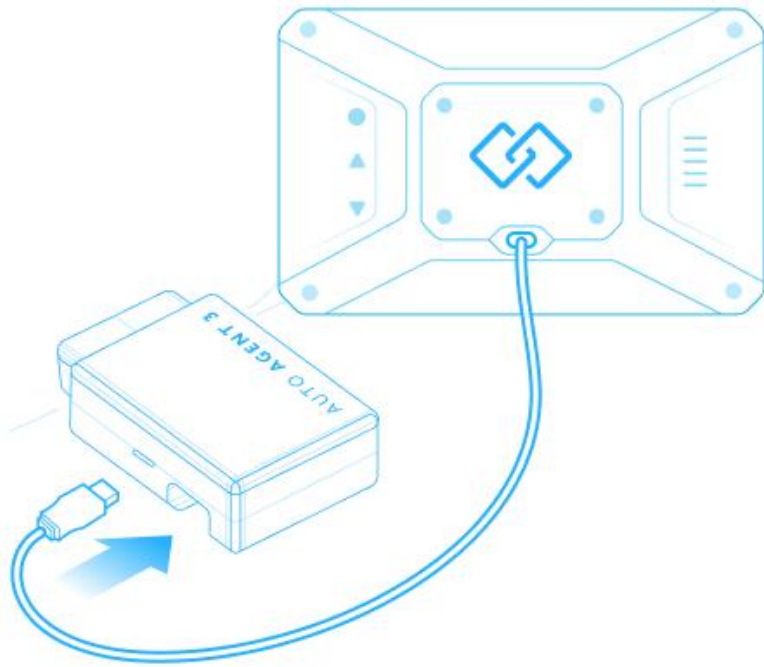

Optional: Secure your EZ LYNK Display on the vehicle dashboard

Mount your EZ LYNK Display in the vehicle using the suction cup dock supplied with the device. Make sure it is secure and will remain fixed while operating the vehicle. Verify that the EZ LYNK Display screen is clearly visible from a normal seated driving position while not blocking the driver's view.

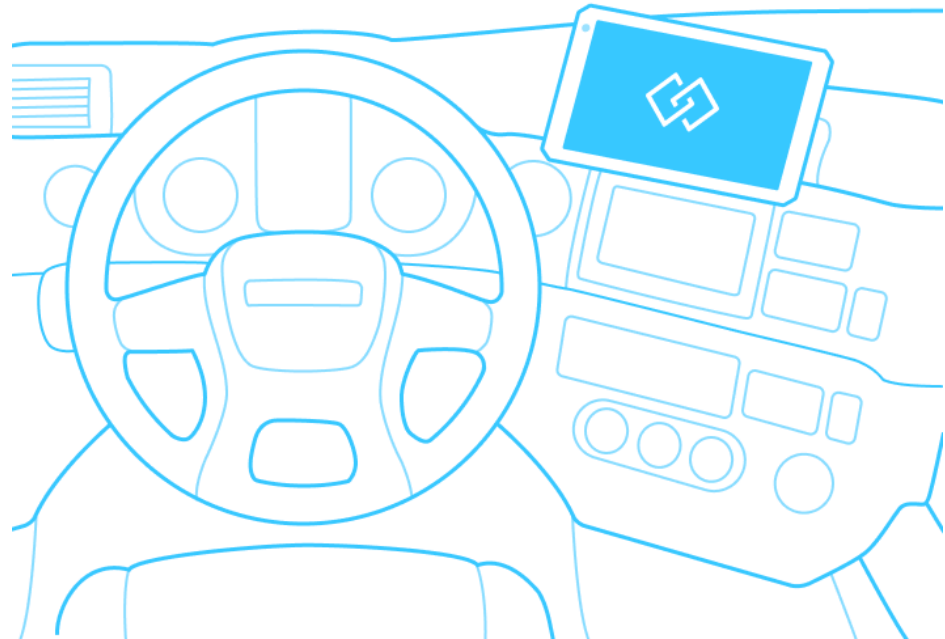

Basic Operations

Home Screen Overview

The Home screen is your starting point for accessing all tablet features:

- 1 **Auto Agent** – Quick-access shortcut to open the Auto Agent application.
- 2 **EZ LYNK ELD** – Quick-access shortcut to open the EZ LYNK ELD application.
- 3 **Wi-Fi Settings** – Tap to open the wireless network communications settings.
- 4 **Camera** – Tap to open the Camera app.
- 5 **Settings** – Tap to open the Settings menu.
- 6 **App Drawer Icon** – Access to all installed applications.
- 7 Dark/Light theme switch.
- 8 (Optionally) A row of quick-access shortcuts to a custom selection of the installed apps.
- 9 **Clock** – Shows the current time.



System Navigation Buttons

EZ LYNK Display uses the standard three-button navigation by default. You can switch it to gesture navigation in the Settings.



Back Button

Return to the previous screen.




Home Button

Return to the home screen.



Recent Apps Button

View and switch between open apps.

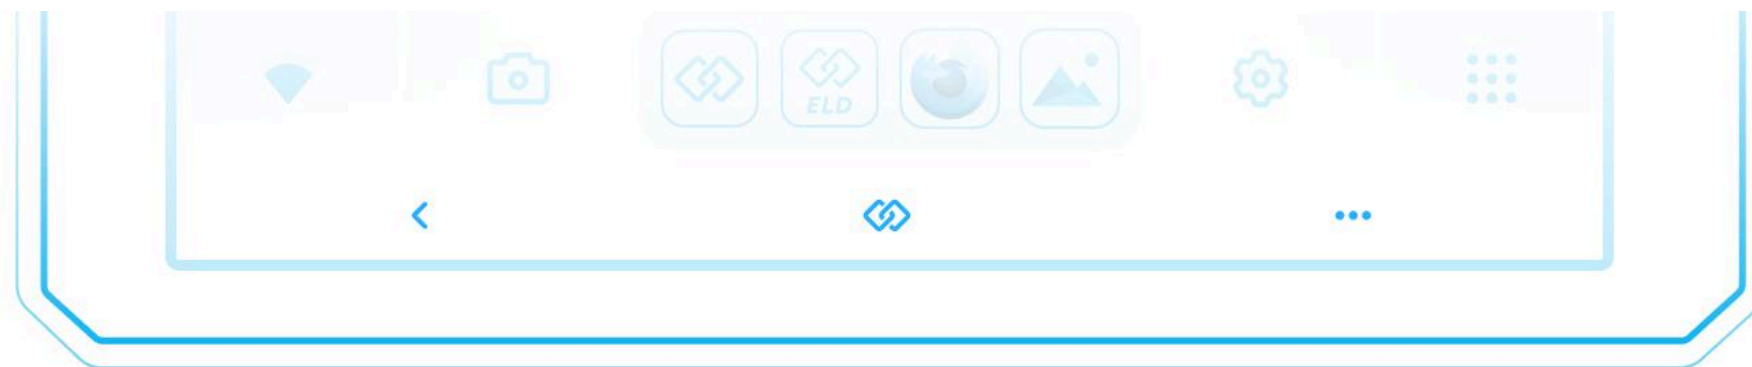

Core Features and Applications


Pre-Installed Apps Overview

EZ LYNK Display comes with essential applications ready to use:

-  **Auto Agent** – A vehicle scan tool app combining function and convenience, for you to monitor, diagnose, and update your vehicle's software.
-  **EZ LYNK ELD** – A powerful and easy-to-use solution for commercial motor vehicle drivers and fleet owners that helps streamline work and takes the hassles out of ELD compliance.
-  **EZ LYNK App Store** – EZ LYNK Application store.
-  **Clock** – Alarms, timers, stopwatch, world clock.
-  **Files** – Browse and manage local storage.
-  **Firefox** – Web browser.
-  **Gallery** – View photos and videos.
-  **PDF viewer** – PDF viewer and editor.
-  **Camera** – Capture photos.
-  **Settings** – Configure EZ LYNK Display settings.

Application Update Guidelines

To check for the app updates, follow the next steps:

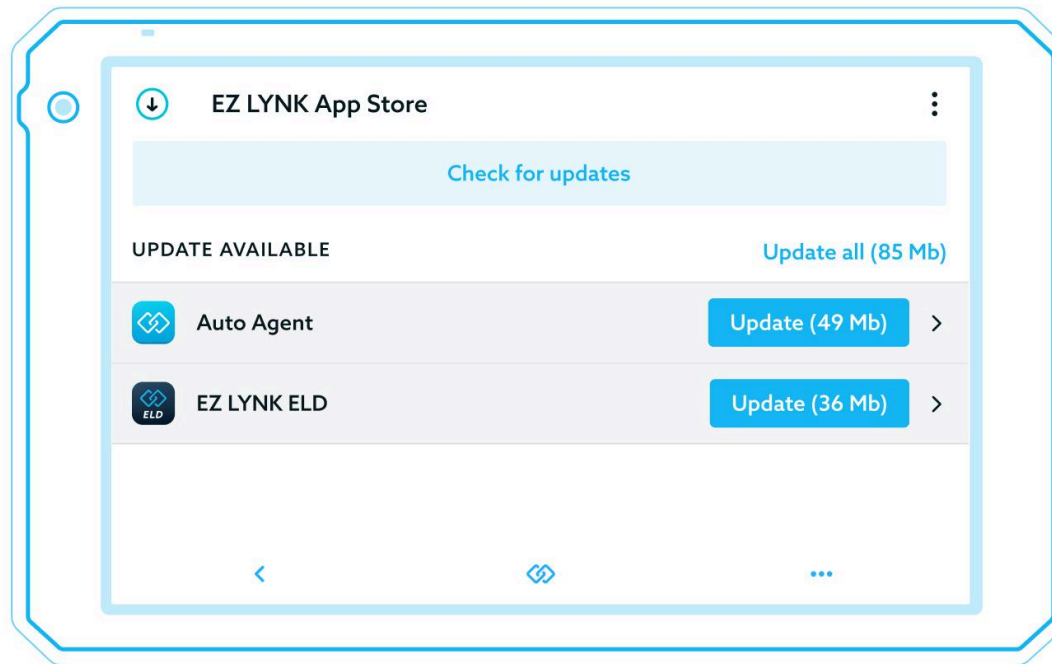

01. Open the EZ LYNK App Store application and tap the Check for updates button.

02. Press the Update button next to a specific app.

03. Update individually or all at once via the Update all button.


System Updates

Checking for Updates


System Updates:

To check for system updates, follow the next steps:


01. Go to Settings > System > System update.
02. Tap the "Check for update" button.

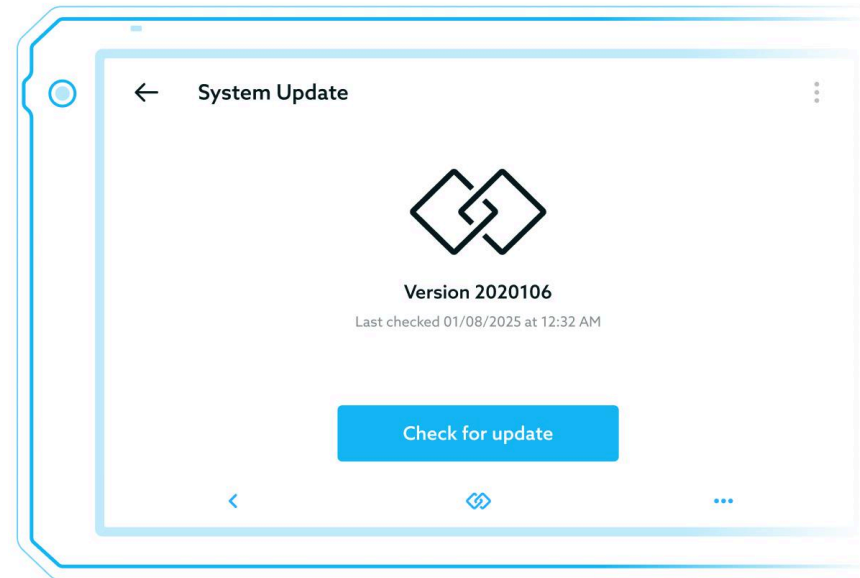


- 03. If an update is available, tap "Download".
Optionally, turn the Download over Wi-Fi only toggle on to enable the download over Wi-Fi only.
- 04. EZ LYNK Display will download updates.

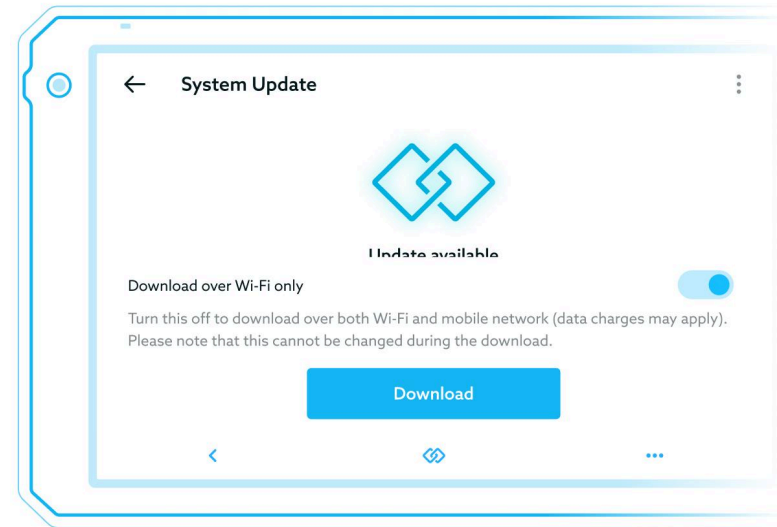

- 05. Once the download completes, tap the "Install" button when ready to install.

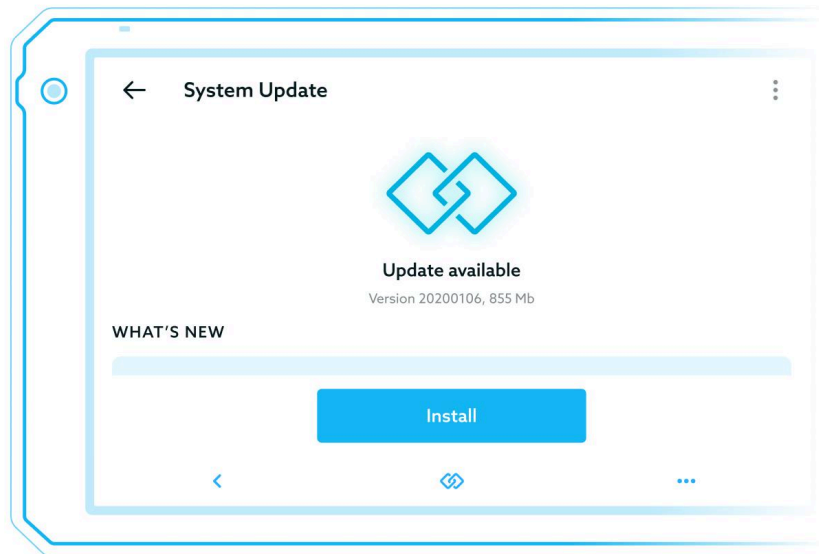

- 06.** Once the installation is complete, to finish the update, tap the "Reboot" button when ready to reboot the device.

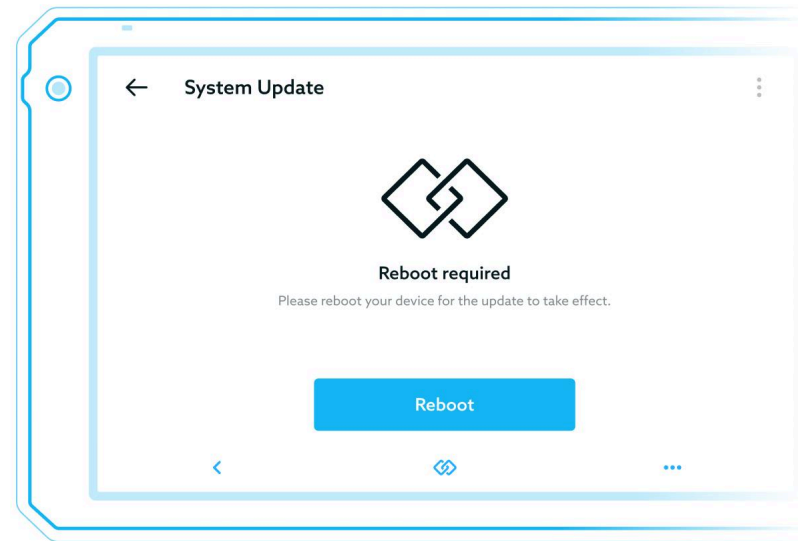

Update Best Practices

- Keep the device charged during updates.
- Connect to Wi-Fi for large downloads.
- Back up data before major updates.
- Install security updates promptly.
- Read update notes for new features.


Settings and Customization

Home Screen Customization


Users can customize a set of quick-access shortcuts to the selected installed apps available from the Home screen.

To do that, follow the next steps:

- 01.** On the Home screen, tap the Apps Drawer icon to open the list of installed applications.

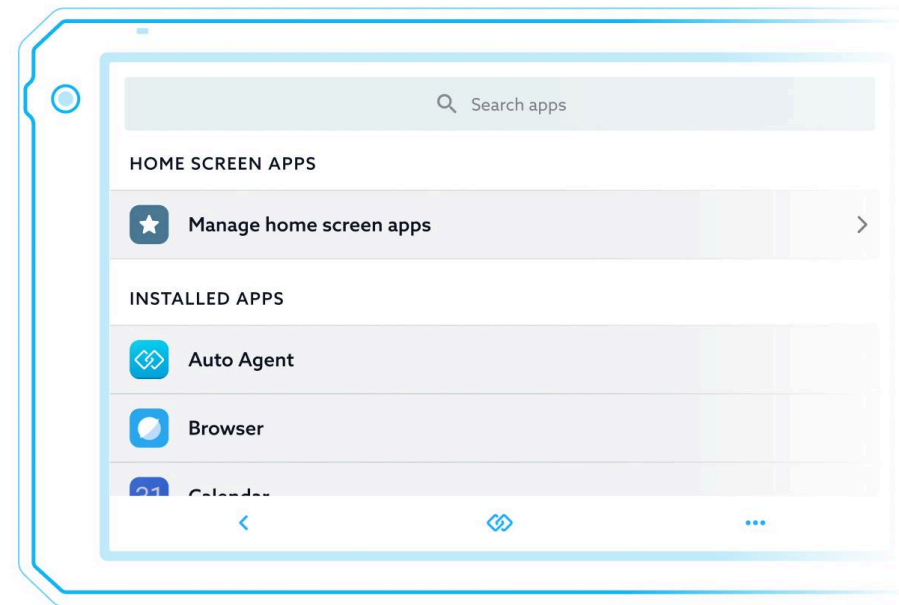


- 02.** From the list of installed applications, select the Manage home screen apps option to open the Home Screen Apps editing screen.

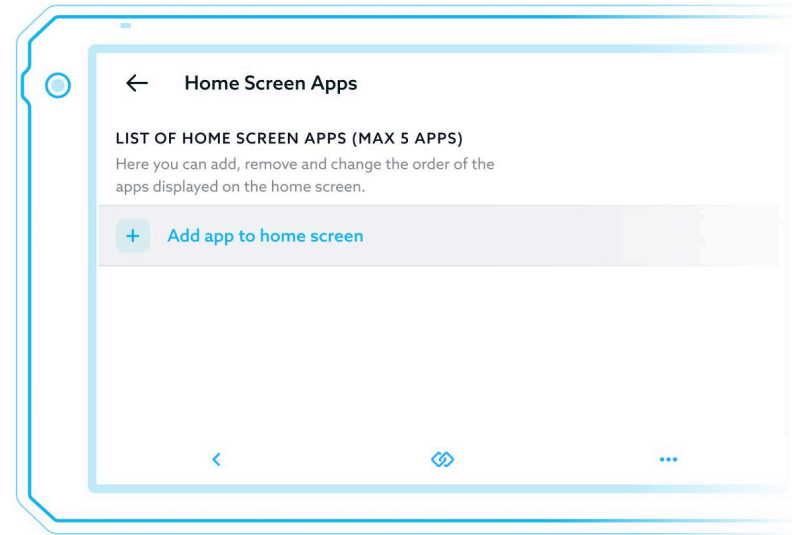


- 03.** On the Home Screen Apps screen, tap the Add app to home screen button and select an app you wish to have access to from the Home screen.

You can add up to 5 custom app shortcuts to the Home screen.

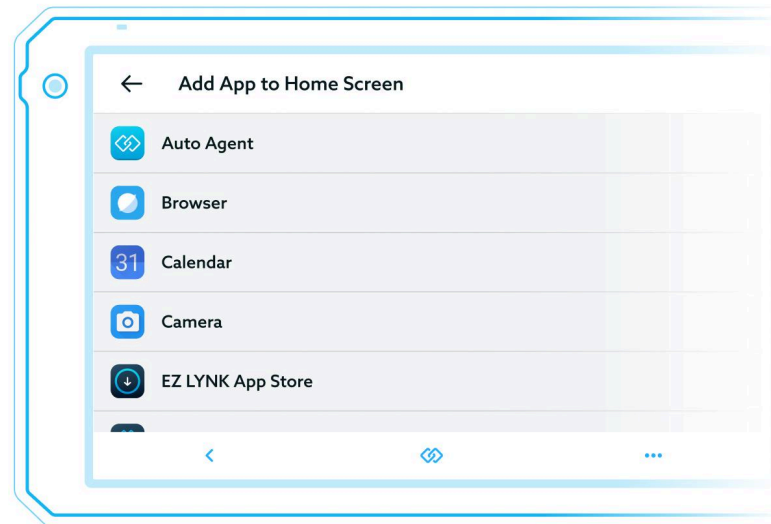

04. On the Home Screen Apps screen, you can review the result of your selection. Tap the Remove button next to an app in the List of Home Screen Apps section to remove it from the list.
05. Once you're done, return to the Home screen by tapping the Back button or the Home screen button.

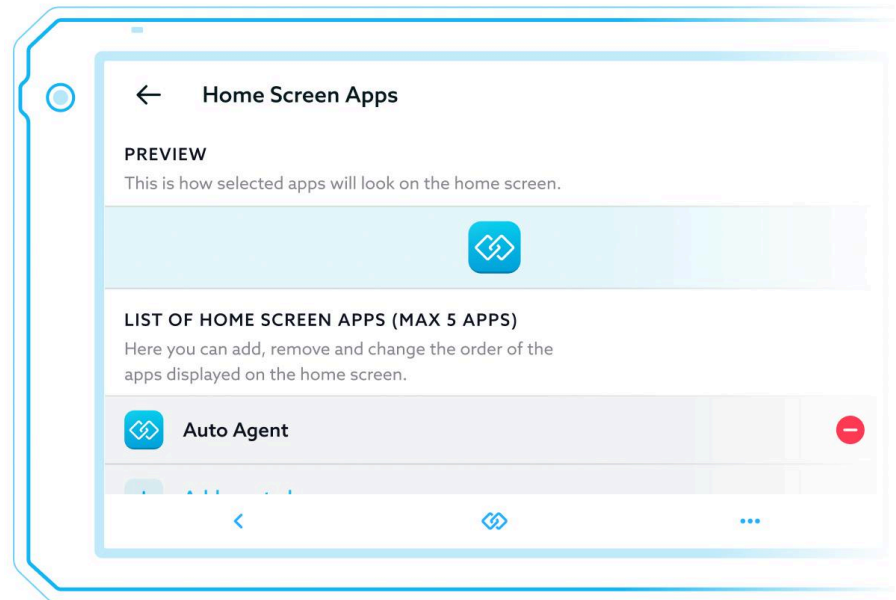

Technical Support and Warranty

Contact Information

Warranty Terms and Conditions

Standard Warranty Coverage

Duration:

1 year from the date of purchase.

What's Covered:

- Manufacturing defects,
- Faulty components,
- Hardware malfunctions under normal use,
- Defective screen (if not due to physical damage),
- Non-functional buttons or ports,
- Battery defects (not normal degradation).

What's NOT Covered:

- Physical damage (drops, cracks, liquid damage),
- Normal wear and tear,

- Cosmetic damage (scratches, dents),
- Damage from misuse or abuse,
- Unauthorized modifications or repairs,
- Software issues caused by user error,
- Lost or stolen devices,
- Damage from accidents or disasters,
- Battery degradation from normal use,
- Issues arising after warranty expiration.

Making a Warranty Claim

Required Documentation:

- Proof of purchase (receipt or invoice),
- Device serial number,
- Description of issue,
- Photos of damage (if applicable).

Process:

1. Contact customer support via phone or email.
2. Describe the issue and the troubleshooting attempted.
3. The support representative will diagnose.
4. If covered, receive RMA (Return Merchandise Authorization) number.
5. Ship the device to the service center (label may be provided).
6. Device returned via EZ Lynk's preferred shipping method.

Out-of-Warranty Repairs:

- Paid repair services are available,
- Quote provided after diagnosis,
- Approval is required before the repair,
- Standard labor and parts fees apply.

Appendices

Appendix A: Technical Specifications

Display	7 inches, 1900x1200 IPS, 1000nit	Operating System	Android 14
Storage	64 GB	RAM	4 GB
Cameras	Front: 5MP, Rear: 5MP	Battery	2000 mAh
Connectivity	Wi-Fi 5, Bluetooth 5.2, 4G LTE	Ports	USB-C, microSD slot
Sensors	Accelerometer & gyroscope	Dimensions	186 x 117 x 37 mm
Weight	453 grams		

Appendix B: Regulatory and Safety Information

Safety Warnings

General Safety:

- Read all safety information before using the device.
- Keep the device and accessories away from small children.
- Keep the device dry.
- Do not attempt to open, disassemble, or repair the device yourself.
- Use only manufacturer-approved accessories.
- Avoid exposing the device to extreme temperatures.

Battery Safety:

- Do not puncture, crush, or incinerate the battery.
- Do not expose to temperatures above 60°C (140°F).
- Do not attempt to replace the battery yourself.
- If the battery swells, discontinue use immediately and contact support.
- Dispose of battery properly per local regulations.
- Do not short-circuit battery terminals.

Charging Safety:

- Use only approved chargers and cables.
- Do not use damaged charging cables or adapters.
- Unplug the charger when not in use.

- Keep charging ports clean and dry.
- Do not charge on flammable surfaces (beds, sofas).
- Unplug during lightning storms.

Operational Safety:

- Do not use while driving or operating machinery unless the application in use is explicitly for such situations.
- Maintain awareness of surroundings when using the device.
- Avoid prolonged skin contact during charging or heavy use.
- Take regular breaks during extended use.
- Adjust volume to safe levels; avoid hearing damage.
- Discontinue use if the device causes discomfort.

Medical Device Interference:

- The device may interfere with pacemakers and other medical devices.
- Keep at least 15cm (6 inches) away from medical devices.
- Consult a physician if you have a medical device implanted.
- Follow hospital and aircraft guidelines for device use.

Stop using the device immediately if you experience:

- Disorientation,
- Altered vision,
- Eye or muscle twitching,
- Loss of awareness,
- Involuntary movements,

- Convulsions.

Repetitive Stress Injury

Prevention:

- Take regular breaks every 20-30 minutes.
- Use proper posture.
- Hold the device with a relaxed grip.
- Switch hands periodically.
- Stop if you experience discomfort.

Environmental Responsibility

Recycling:

- Do not dispose of the device in regular trash.
- Electronic waste must be recycled properly.
- Contains materials that can be harmful to the environment.
- Participate in take-back or recycling programs.



Battery Disposal:

- Do not dispose of batteries in fire or regular trash.
- Recycle at designated collection points.
- Lithium-ion batteries are recyclable.

Packaging:

- Packaging materials are recyclable.
- Separate materials by type before recycling.
- Follow local recycling guidelines.

Warning Statements

FCC:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC:

The radiated energy from the antennas connected to the wireless adapters conforms to the IC limit of the RF exposure requirement regarding IC RSS-102, Issue 6 clause 4.3.

L'énergie rayonnée par les antennes reliées aux adaptateurs sans fil conforme à la limite IC de l'exigence de l'exposition aux RF IC concernant RSS-102 , Issue 6 clause 4.3.



Additional Resources



Visit Support Site

ezlynk.com/support



Contact Us By Phone

844-439-5965



Email Us

support@ezlynk.com