

物料名称:			EB5 Max北美说明书		成品尺寸:	130x130 mm		版本号	变更时间	版本变更记录
品 牌:	中性	语 种:	英、法、西		材 质:	封面封底: 157g铜版纸 - 覆哑膜 内页: 80g铜版纸 四色印刷 骑马钉		V2		
时 间:	2025-10-16	版 本:	EB5 Max_NA_V1					工 艺:	V3	
备 注:							V4			
							V5			

NA



E-BIKE **EB5 MAX**

USER MANUAL

Before using the product, please read this manual. Read carefully and keep for future reference.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Table of Contents



PRODUCT OVERVIEW	02
PACKAGE CONTENTS	03
ASSEMBLY	04
CHARGING INSTRUCTIONS	11
DISPLAY	13
BASIC OPERATIONS	14
SETTINGS	16
FOR YOUR SAFETY	17
MAINTENANCE	18
SPECIFICATIONS	19

Table des matières

FR

PRÉSENTATION DU PRODUITPACK	21
CONTENU DE L'EMBALLAGE	22
ASSEMBLAGE	23
INSTRUCTIONS DE CHARGE	30
ÉCRAN	32
OPÉRATIONS DE BASE	33
PARAMÈTRES	35
POUR VOTRE SÉCURITÉ	36
ENTRETIEN	37
CARACTÉRISTIQUES	38

Tabla de contenido



DESCRIPCIÓN GENERAL DEL PRODUCTO	40
CONTENIDO DEL PAQUETE	41
MONTAJE	42
INSTRUCCIONES DE CARGA	49
PANTALLA	51
OPERACIONES BÁSICAS	52
CONFIGURACIÓN	54
PARA SU SEGURIDAD	55
MANTENIMIENTO	56
ESPECIFICACIONES	57

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR ELECTRIC SHOCK



IMPORTANT SAFETY INSTRUCTIONS


WARNING:

When using this product, basic precautions should always be followed, including the following:

- a) Read all the instructions before using the product.
- b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- c) Do not put fingers or hands into the product.
- d) Do not use this product if the flexible power cord or output cable is frayed, has broken insulation, or any other signs of damage.
- e) This equipment is not intended to be used at ambient temperatures less than -4°F (-20°C) or above ambient temperatures of 104°F (40°C).
- f) The battery is intended to be charged when the ambient temperature is between 32°F (0°C) and 104°F (40°C). Never charge the battery when ambient temperatures are outside this range.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.


Rider Height Guide

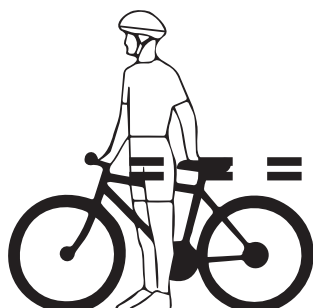

**= 1" Not less than one
inch clearance**

**THERE MUST BE AT LEAST 1 INCH OF
CLEARANCE BETWEEN THE TOP TUBE AND THE
CROTCH OF THE INTENDED RIDER WHILE
STANDING WITH ONE LEG ON EACH SIDE OF THE
BICYCLE. IF THERE IS LESS THAN 1 INCH
CLEARANCE, THE BICYCLE IS TOO LARGE FOR
THE RIDER AND SHOULD NOT BE USED.**

PRODUCT OVERVIEW

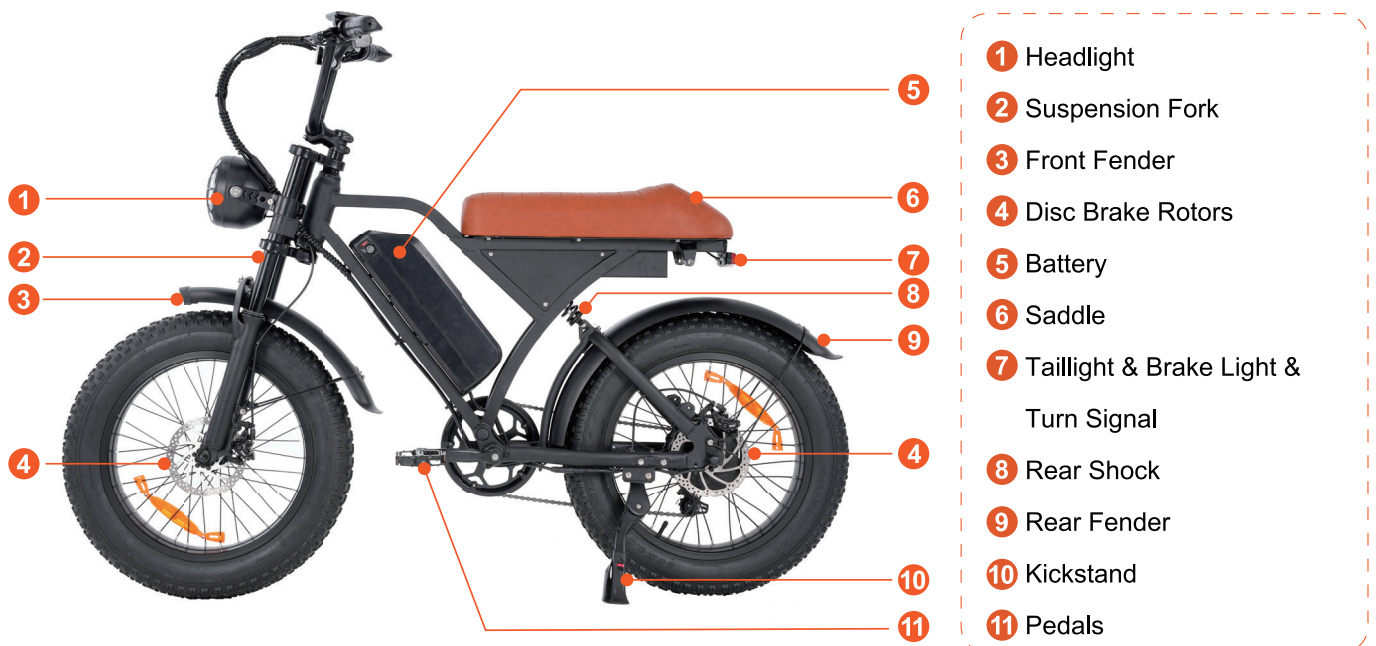

PACKAGE CONTENTS

If any parts are missing or damaged, please contact us.



E-bike x1
(Partially Assembled)




Front Wheel x1



Front Fender x1



Headlight x1



Battery x1



Rubber Plug for Headset
Top Cap Bolt x1




Rear Axle Nut
Cover x2




Left Pedal x1
Right Pedal x1




Battery Key x2

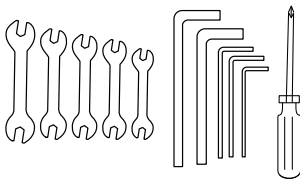


Toolkit x1

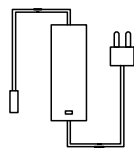

Charger x1



Pump x1

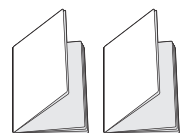

User Manual x1
Safety Instructions x1

ASSEMBLY

STEP 1: Install the Handlebar

1. Place the e-bike on a level surface stably.

TIP: Do not to put down the kickstand yet.



2. Rotate the stem to the position where it is perpendicular to the fork crown as shown, then tighten the headset top cap bolt and two binder bolts.



3. Insert the rubber plug into the head of the headset top cap bolt.



4. Remove the faceplate of the handlebar clamp.




NOTE: ALL four bolts must be removed, or the handlebar cannot be positioned into the clamp.

5. Place the handlebar into the clamp and the faceplate over the front of the handlebar, and fully tighten the bolts in an X pattern.



6. Ensure the faceplate bolts are tightened evenly, i.e., the gaps between the stem and the faceplate should typically be even on the top and bottom.

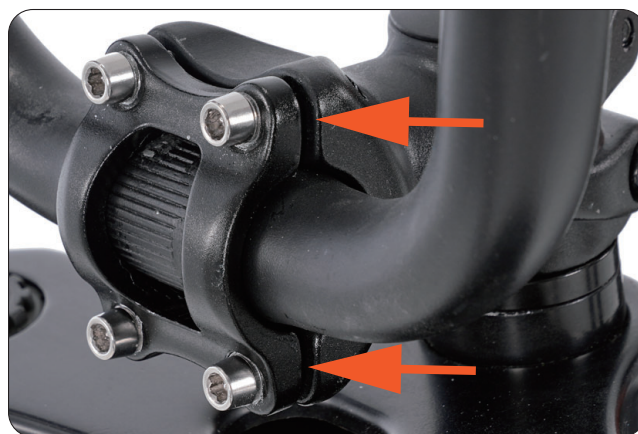

7. Adjust the reflector on the handlebar so that it faces forward, then use the supplied screwdriver to tighten its screw.



NOTE: Ensure the reflector faces straight forward so that it can reflect the lights of oncoming vehicles and alert them.

8. Adjust the display to your desired angle and then tighten its screw.



STEP 2: Install the Headlight

1. Rotate the headlight brackets to the front.



2. Remove the two headlight mounting bolts on both sides.



3. Attach the bolt and washers to the headlight brackets as shown in Figure a, position the headlight between the brackets, and tighten the bolts onto the headlight firmly to secure the headlight in place.



NOTE: The rubber washers should be located between the headlight and its brackets.

4. Align the arrow marks and connect the headlight cable.



CAUTION: Must align the arrows on the connectors to avoid breaking or bending pins.

STEP 3: Install the Front Fender

1. Remove the pre-installed front fender L-bracket bolt and nut from the fork arch.



2. Pass the bolt just removed through the L-bracket hole and retighten the bolt and nut onto the fork arch.



3. Remove the two pre-installed fender stay mounting bolts from each fork leg.



4. Pass the bolts through the eyelets of the fender stay and retighten the bolts firmly.



STEP 4: Install the Front Wheel

A second person is required to lift the front of the e-bike when installing the front wheel.

1. Remove all the nuts and washers from the front wheel axle.



2. Lift the front of the e-bike and remove the front fork protector.



TIP: Save the front fork protector for future use. The protector protects the fork blades from deformation during transportation when the wheel is removed.

3. Lower the fork onto the front wheel until the fork dropouts are fully seated onto the wheel axle.



4. Attach the washers onto the axle, adjust the safety washers so that they hook the holes above the dropouts, and tighten the nuts firmly.



NOTE: Ensure the brake rotor centers between the brake pads.

STEP 5: Install the Pedals

Rotate the pedals' axles (in the directions of the arrow marks on the crank arms) onto the crank arms, then tighten them with an appropriate open-end wrench.



STEP 6: Cover the Rear Axle Nuts

Cover the axle nuts on two sides to prevent rusting.



STEP 7: Install the Battery

1. Position the battery on the battery mount and slide it downward to engage.



2. Insert the battery key into the battery keyhole and turn it clockwise until it stops to lock the battery in place.



NOTE: Every time before you install the battery, ensure there is no debris or moisture on the battery connectors to avoid short circuits.