


# **GJ-8100**

---

User Manual

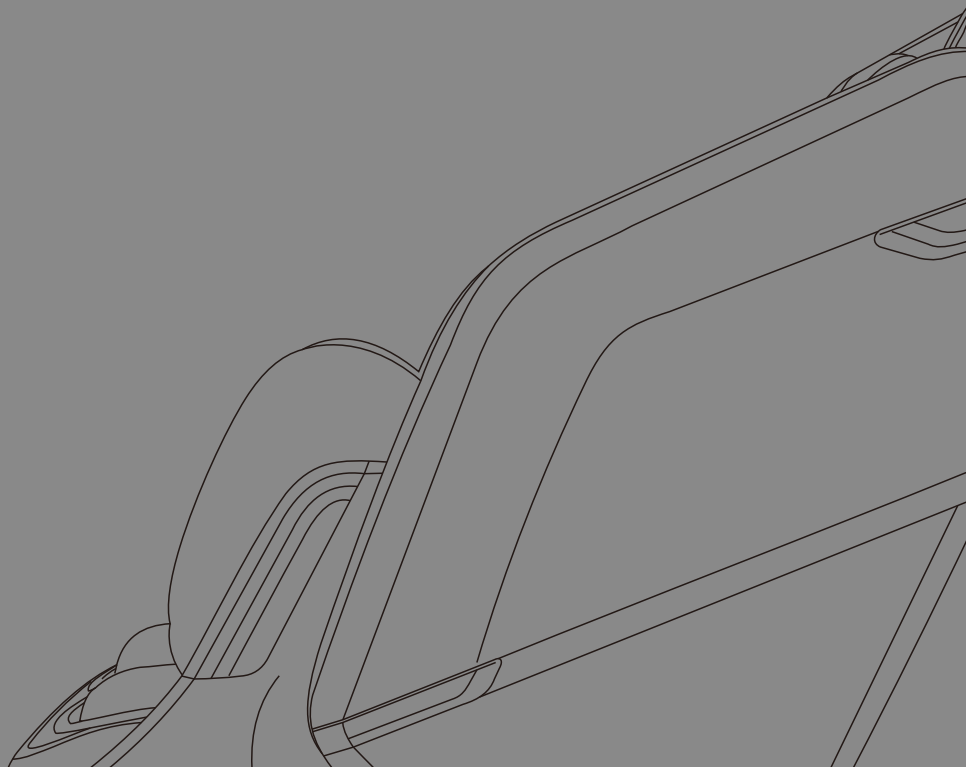

## Contents

|                                         |    |
|-----------------------------------------|----|
| Introduction .....                      | 02 |
| Safety precautions .....                | 02 |
| Preparation for use .....               | 03 |
| Product description .....               | 06 |
| Bluetooth music connection method ..... | 06 |
| After use .....                         | 07 |
| Troubleshooting .....                   | 07 |
| Care & Maintenance .....                | 07 |
| Operation Guide .....                   | 08 |
| Screen Operation Guide .....            | 09 |
| Function Menu .....                     | 11 |
| Quick Control Operation Guide .....     | 18 |
| Technical specifications .....          | 19 |
| Warranty policy .....                   | 19 |

## Introduction

Dear customer,

Thank you for choosing the massage chair GJ-8100 . Please read the manual instructions carefully and save it for later use, be sure to make them accessible to other users. Please follow the instructions and use the product as described.

## Safety precautions

1. People with the following conditions should consult their physician before using the product:

- Those who use a medical electronic device embedded in the body, such as a pacemaker.
- Those who have heart disease.
- Those who have a spinal/backbone disease.
- Those who have fragile bones, especially in the backbone.
- Those who have recently undergone surgery.
- Those who are pregnant or have recently given birth.
- Those who have malignant tumors.
- Those who have osteoporosis.
- Those who have skin disease or an infection.
- Those who are currently undergoing medical treatment, have experienced previous physical abnormalities, or are currently receiving treatment.
- Those who have abnormalities or deformities in their limbs or backbone.
- Those who have backbone problems or injuries resulting from illness or accidents.




**Note: Never massage the swollen or inflamed parts of the body.**

2. Do not let water enter the product or splash onto its surface.
3. Water contact with electricity is dangerous. Do not leave the product in humid environments (such as in the bathroom, shower room or near the swimming pool, etc).
4. Before connecting the product to a power supply, check that the product voltage matches the supply voltage.
5. Do not use the product if the plug, power cord, or product itself is damaged.
6. In order to prevent the risk of electric shock, do not open the outer casing of the product.
7. The product is not intended for use by individuals with disabilities, sensory or mental impairments (including children), unless supervised or guided by responsible individuals who ensure their safety during product usage.
8. If the product or power cord is damaged, do not attempt to repair it yourself to avoid potential danger. Attempting repairs yourself may void the product's warranty or maintenance guarantee.
9. Children must not use the product. They should be under supervision to ensure that they will not treat the product as a toy.
10. If you hear any unusual sound or noise coming from the product, turn off the product and immediately disconnect the power connection.
11. Do not use the product if the cover is damaged or if there is a mechanical or electronic failure.
12. Only place the product as instructed in this user manual.
13. Do not use the product in humid and high temperature environments or near heat surfaces such as heaters or stoves.
14. Do not apply medical or cosmetic cream on the product or on your body before or during product usage.
15. When massaging around or near the neck, take care of the movement of rollers and refrain from applying excessive intensity.
16. Do not destroy, bend, stretch, twist or tie the power cord. A damaged power cord can cause fire or electric shock.
17. Do not use the product on bare skin.
18. It is recommended to use the product for a maximum of 30 minutes per day.
19. The maximum weight capacity is up to 150 kg. Exceeding this weight limit may cause permanent damage to the product.
20. Always keep the product clean and never insert any object into the gaps of the product.
21. The product is designed for household use only.
22. To prevent injury or damage, do not stand, sit or jump on the calf-rest.
23. For your safety, do not attempt to stand on the backrest or armrest to prevent any potential injury.
24. People who are insensitive to heat should refrain from using the massage chair.
25. Before using the product, please remove all accessories from your body.
26. Do not use the product while sleeping, under the influence of alcohol, or during a fever.
27. Avoid using the product immediately after eating. Wait for at least an hour before using the product.


## Preparation for use

### 1. Remove the package and take out the chair and spare parts

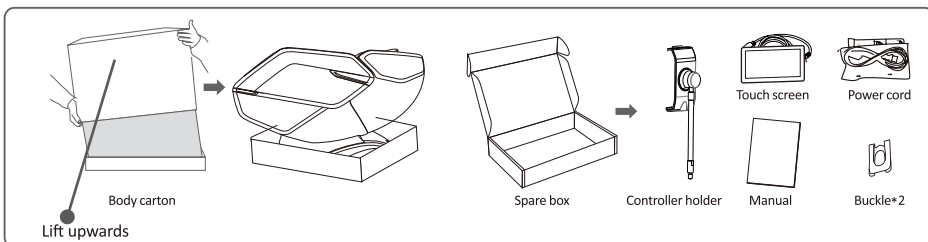


•Please remove the body carton and spare box, take out the spare parts

### 2. Power on and Reset

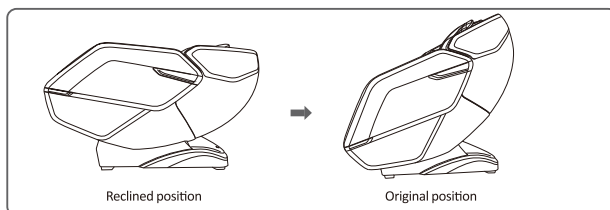


•Connect the power supply and switch on the power so that the chair returns to its original position

### 3. Install Footrest unit

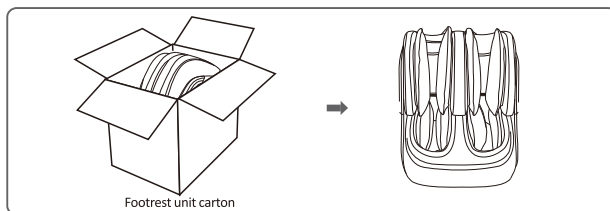


•Please remove the footrest unit carton and take out the footrest unit

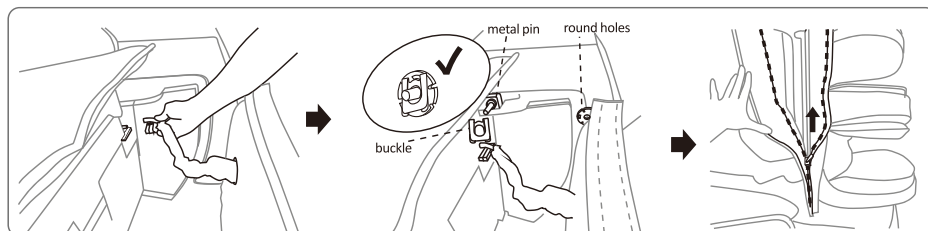

• Raise the footrest unit, thread the air hose into the air nozzle, and fit the air valve plug into the air valve port which located at the face side of seat base, make sure they are well secured.


•Lift the footrest unit, insert the round holes on both sides of the footrest into the metal pin of the massage chair, and then insert them with a buckle. Then zip the footrest and main chair together.

#### 4. Install Touch screen and Control Holder

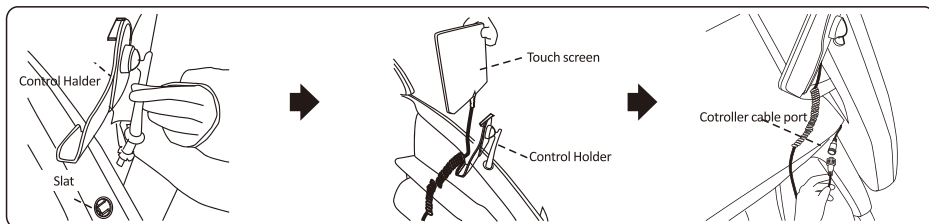

- Place the control holder into the controller slot according to the direction of the slot.
- Place the Touch screen on the control holder
- Connect the cable port of the Touch screen to the port of the seat of the massage chair.

#### 5. Place the chair in an open area

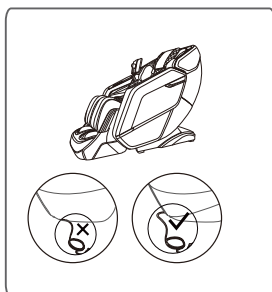

- Please ensure that there is a clearance of at least 8cm around the chair to allow for reclining.
- To avoid damage to the floor and to reduce noise, please put a rug under the chair.
- Make sure that there is no barrier at the front and the back of the chair.
- Please do not put the chair on wet or uneven floor.
- To avoid signal interference, please position the chair at least 1 meter away from any nearby TVs and radios.
- Avoid exposing the chair to direct sunlight or placing it in high-temperature areas. Otherwise it may cause the leather to fade or harden.




**Warning:**

**Do not place the power cord under the chair!**

**Beware of damaging the power cord while moving the chair!**

#### 6. Move the chair

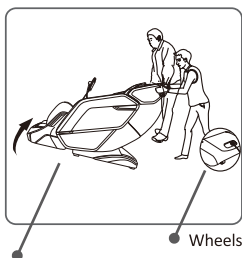


Tilt the front part of massage chair

- As illustrated, push the backrest downwards and tilt the chair on to its wheels at a 45° angle.
- Slowly push and move the chair to the desired location.
- Lower the chair slowly and smoothly until it is fully flat on the ground.

**Warning:**


- Before moving the chair, please adjust the footrest back to its original position.
- Do not move the chair when occupied or in use.
- Moving the chair may cause damage to the floor.
- Floor protection is recommended (e.g. rugs or carpet).
- Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- Two persons are recommended when moving the chair and extra care is required.

## 7. Check the space around the chair

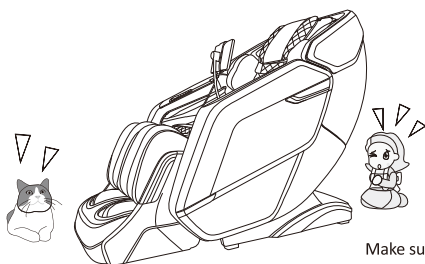

Make sure there is no person, pet or other object close to the chair.

## 8. Make sure no foreign matter is in the gaps of the chair

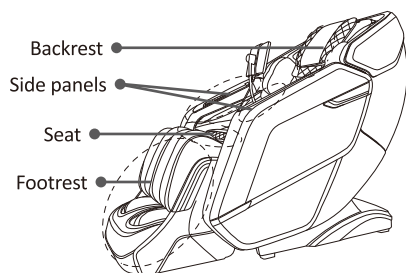

**⚠** Do not put hands or feet between footrest and seat base / footrest and side panel / seat base and side panels / upper and lower parts of the footrest / in the gap of seat base.