


Function Menu

Massage programmes / Massage chair adjustment /Settings



•Massage programmes

1. Auto Mode

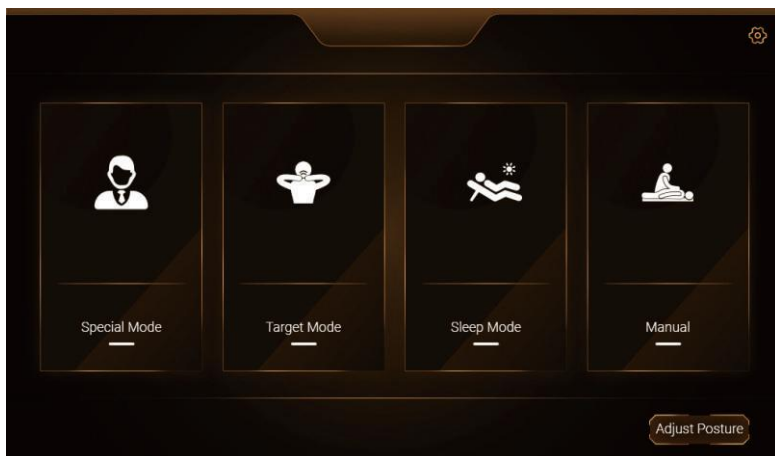

- Tap the Auto Massage Programs to go into the Auto Massage Programs screen, select “Special Mode”, “Local Mode”, “Sleep Mode” to change category.

You may choose among 24 pre-set auto wellness massage programs. Tap the program you prefer to start massage.

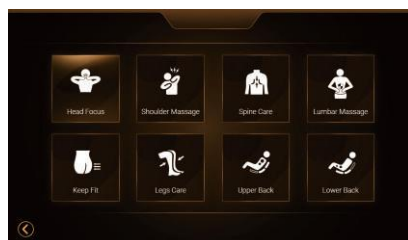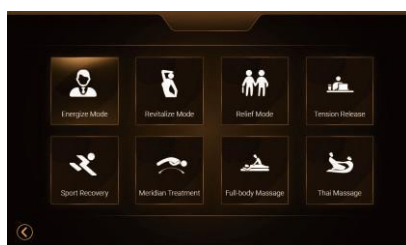

Function Menu

2. Massage programmes- Manual Massage



- Tap the “Manual” and select your preferable massage. You can adjust the manual massage settings during the massage session.

3. Manual Massage Mode Selection



- Massage Manual : 360°kneading, Direct Kneading, Reverse Kneading, Upper Kneading, Lower Kneading, Clapping, Kneading& Knocking, Shiatsu, Knocking .

Function Menu

4. Manual Massage Part Selection



- Part: Part Select your preferable technique: Whole, Area and Spot. When you select the Spot Massage, press the up & down button to adjust your preferable massage position.
- Width: Wide, Middle and Narrow. Width is not adjustable if Kneading or Kneading & Knocking is selected.


5. Air Massage Position Selection



- Select airbags working position

Function Menu

6.Strength Adjustment

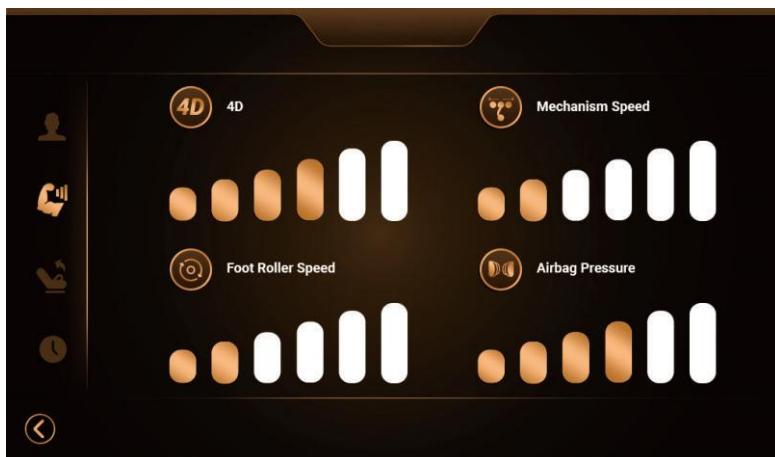

- 4D: 3 Levels of 4D Strength and Off.

Mechanism Speed: 3 Levels of Speed Adjustment.(Speed is not adjustable if Shiatsu is selected.)

Roller Speed: 3 Levels of Foot Roller Speed Adjustment

Airbag Pressure: 3 Levels of Air Strength Adjustment

Function Menu


•Massage chair adjustment

1. Posture Adjustment



- You can select your preferable Zero Gravity Mode, Backrest & Leg Position and Calf-rest&Footrest Extend / Retract Adjustment.

2. Posture Adjustment

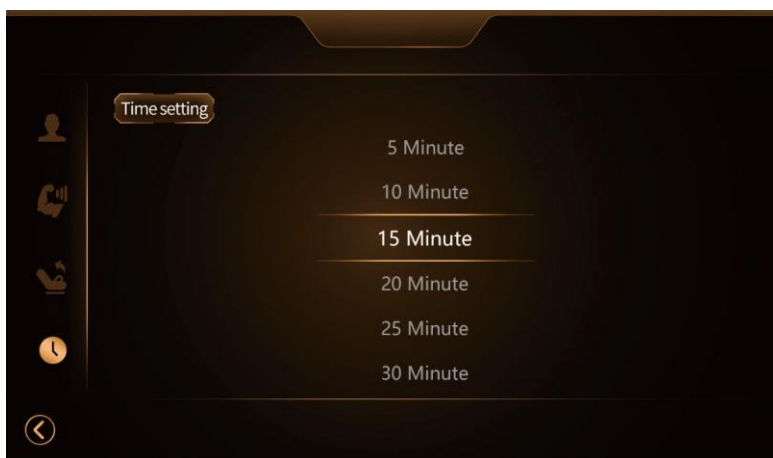

- You can select your preferable massage time in Auto or Manual mode:5mins,10mins,15mins, 20mins, 25mins, 30mins.

Function Menu

•Settings

1. Setting items



- You can select different setting items in Settings.

LED Light: ON/OFF

Touch Tone: ON/OFF


Voice Control: ON/OFF

Language: English

Voice Commands: Enter voice command words display

Light: Adjust screen brightness

2. Voice Command

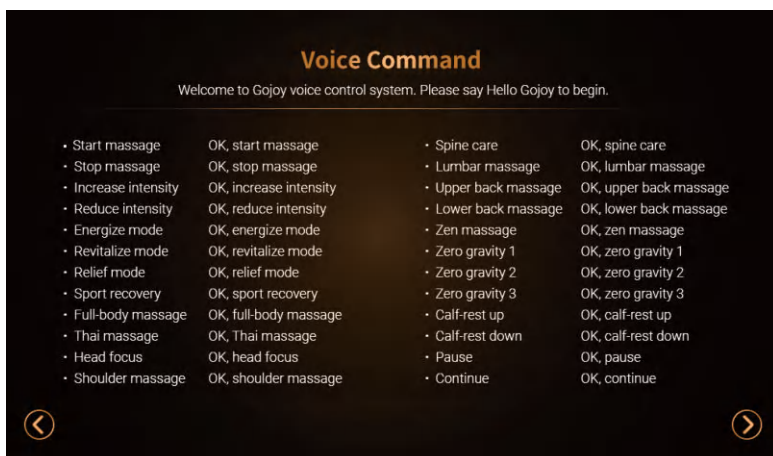

Function Menu

•Enter voice command words display

Start massage: Massage ON

Stop massage: Massage OFF

Increase intensity: Increase Massage Speed Adjustment.(Speed is not adjustable if Shiatsu is selected.)

Reduce intensity: Reduce Massage Speed Adjustment.(Speed is not adjustable if Shiatsu is selected.)

Energize mode: One of Special Auto mode, focusing on whole body massage. Mainly suitable for gentlemen's automatic massage.

Revitalize mode: One of Special Auto mode, focusing on whole body massage. Mainly suitable for lady's automatic massage.

Relief mode: One of Special Auto mode, focusing on whole body massage. Mainly suitable for elder's automatic massage.

Sport recovery: One of Special Auto mode, focusing on whole body massage. Mainly suitable for massage after exercise.

Full-body massage: One of Special Auto mode, focusing on whole body massage. Mainly suitable for full-body relax.

Thai massage: One of Special Auto mode, focusing on stretch massage.

Head focus: One of Local mode, focusing on Fengchi acupoint massage.

Shoulder massage: One of Local mode, focusing on Neck&Shoulder massage.

Spine care: One of Local mode, focusing on Neck&Shoulder massage.

Lumbar massage: One of Local mode, focusing on Waist massage.

Upper back: One of Local mode, focusing on Upper Back massage.

Lower back :One of Local mode, focusing on Lower Back massage.

Zen massage: One of Sleep mode, massage to help fall asleep.

Zero-G1: First level of Zero-G

Zero-G2: Second level of Zero-G

Zero-G3: Third level of Zero-G


Calf-rest up: Lift Calf-rest

Calf-rest down: Lower Calf-rest


Pause: Pause massage

Continue: Continue massage

Quick Control Operation Guide

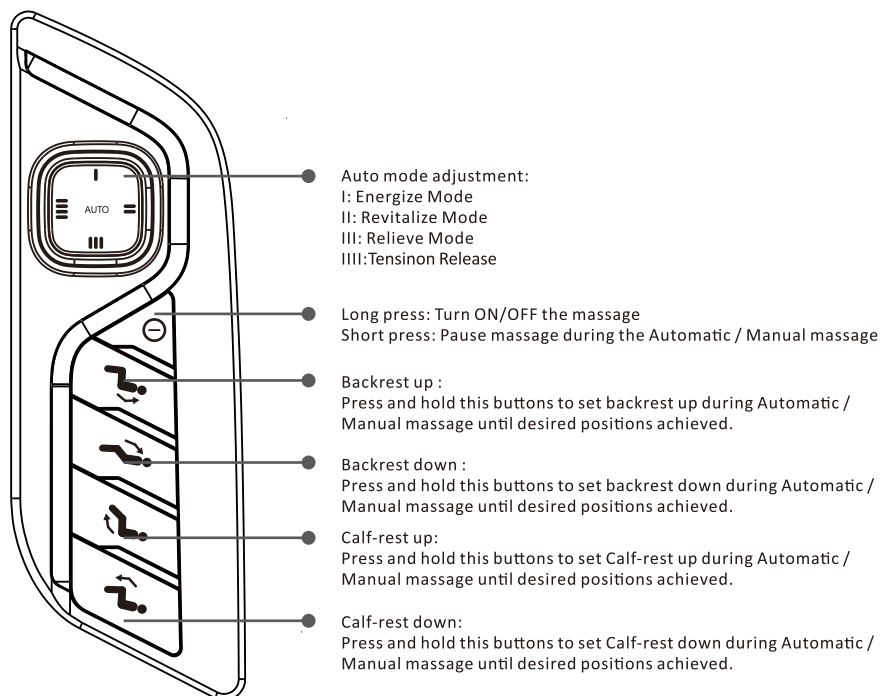

Wireless Charging

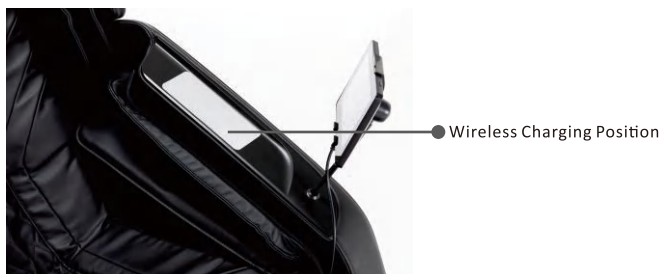

Noted:

1. Only phones with wireless charging are supported
2. Before using this function, it is recommended to remove the phone cover

Technical specifications

Product name	Gojoy
Product model	GJ-8100
Power Voltage	220V~240V 50/60HZ
Power Consumption	180W
Auto Timer	15 min
Product Dimension	Upright: Approx 1620 (L) x 755 (W) x 1220 (H) mm
	Reclined: Approx 1880 (L) x 770 (W) x 880 (H) mm
Box Dimension	Body Size: Approx 1580 (L) x 770 (W) x 880 (H) mm
	Footrest Unit Size: Approx 530 (L) x 530 (W) x 630 (H) mm
Net / Gross Weight	Approx. 106/126 kg



Warranty policy

The company Gojoy grants a valid manufacturer's warranty for the territory of the civil-law defect liability.

The warranty starts from the time the device was delivered to the customer. The warranty is granted only to the buyer and is not transferable to third parties.

In addition to the statutory liability for defects, we also repair or replace equipment whose defects are not initial defects unless they are caused by improper use or are insignificant. The choice between replacement and repair is ours. The warranty is only granted if the defect is notified immediately upon its occurrence and is reported. You must include the claim form and the copy of your purchase receipt as the proof of warranty.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

