




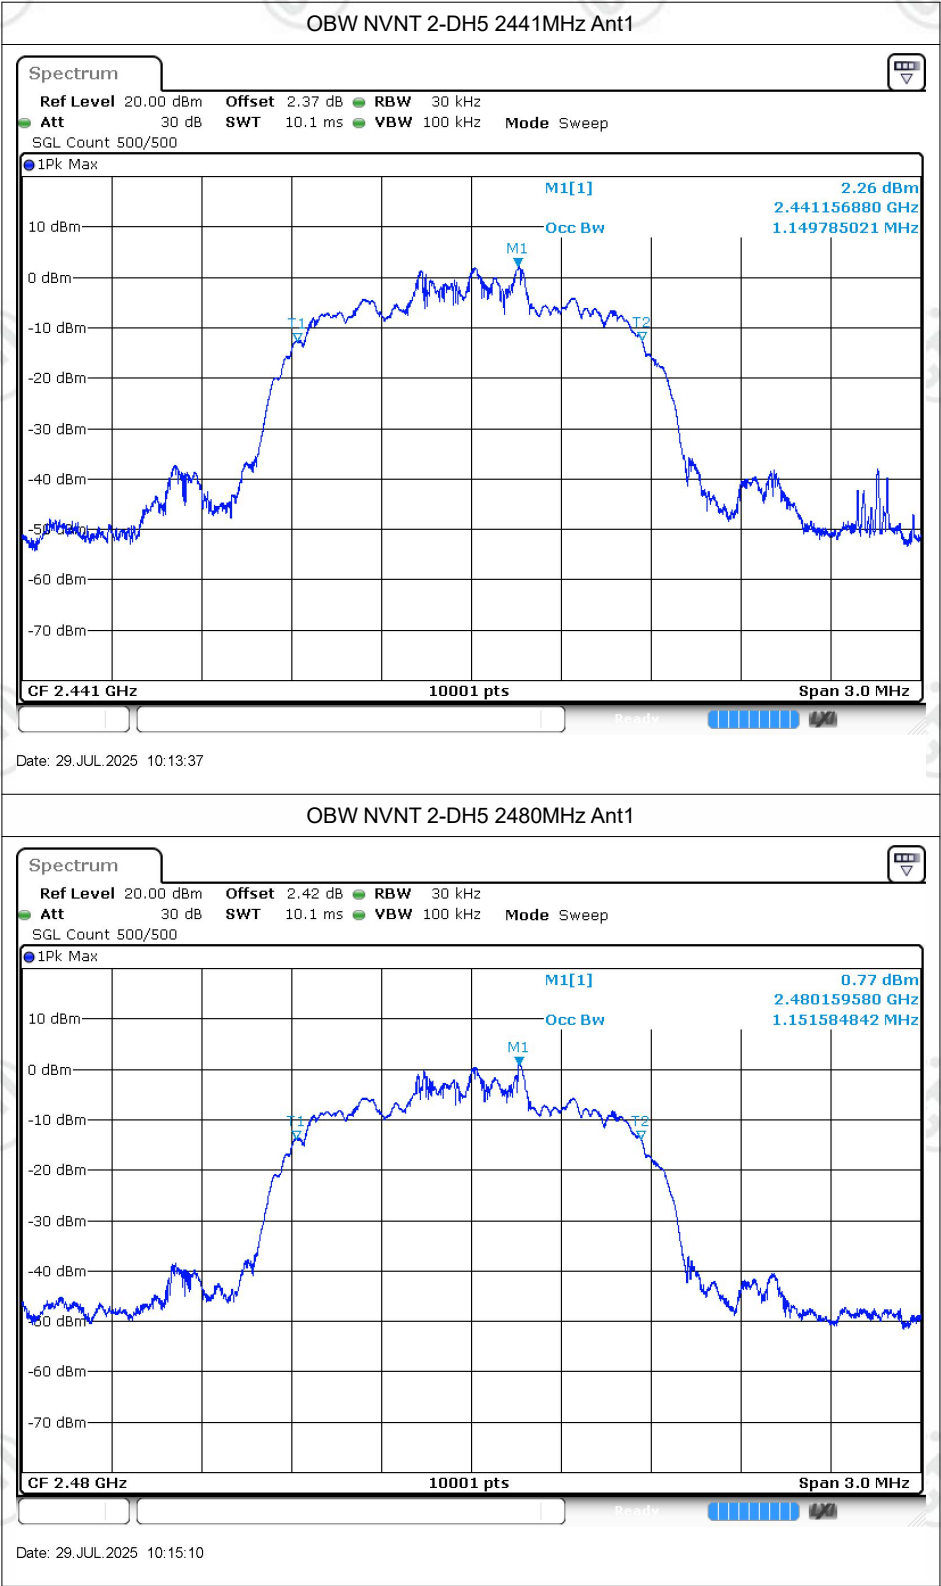


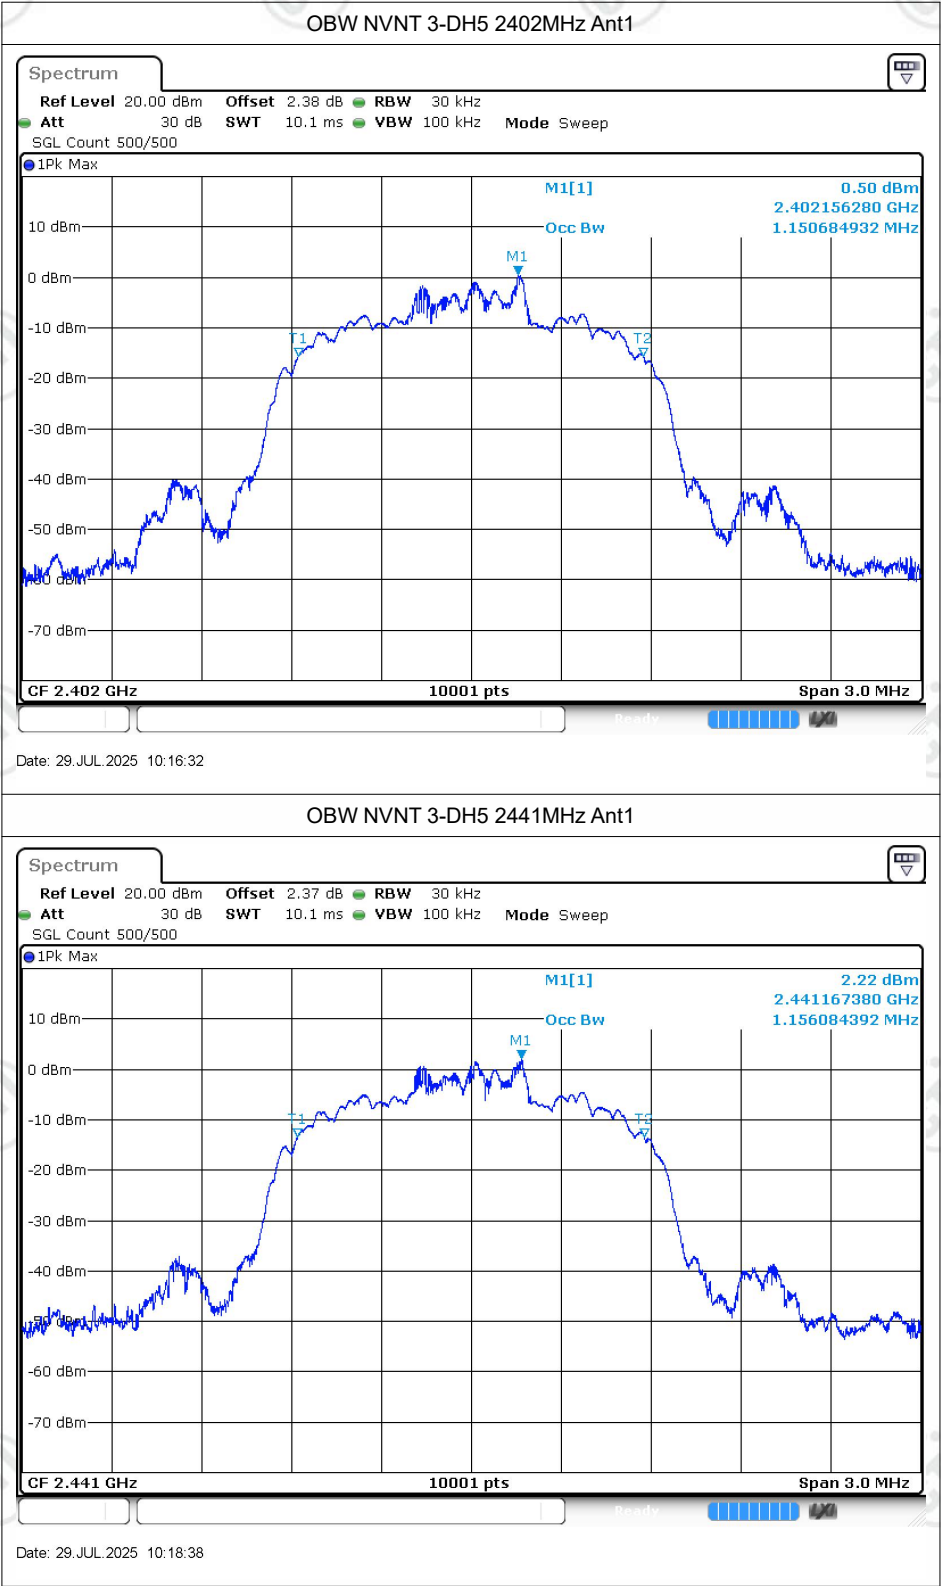


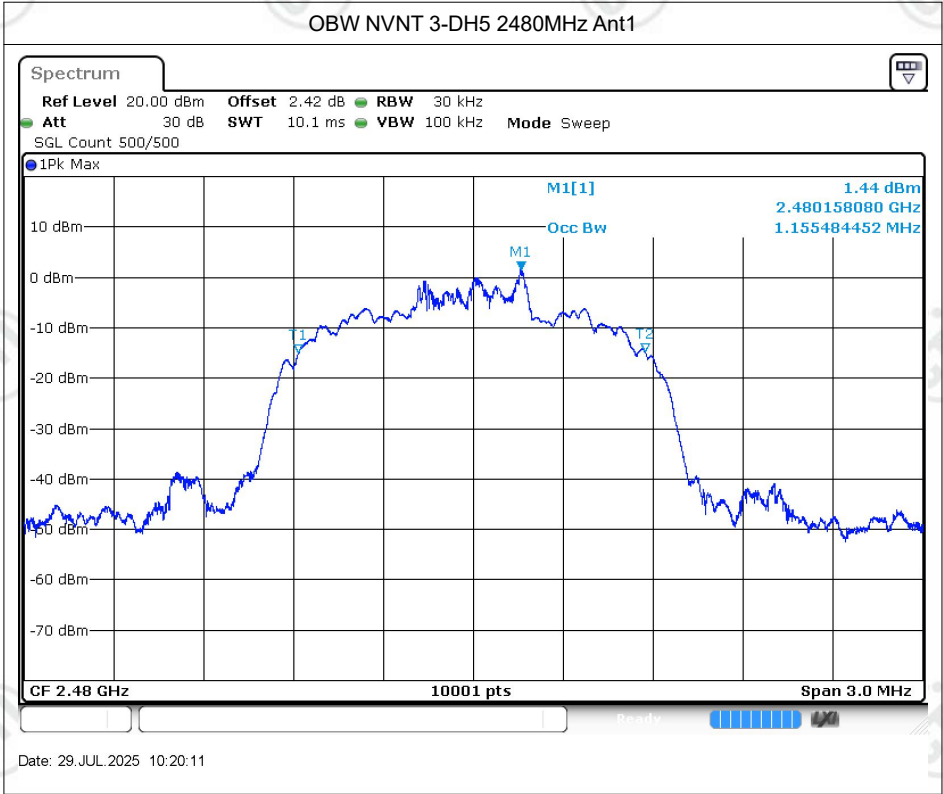



Carrier Frequencies Separation


Condition	Mode	Antenna	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH5	Ant1	2401.992	2403.02	1.028	0.572	Pass
NVNT	1-DH5	Ant1	2440.988	2442.048	1.06	0.572	Pass
NVNT	1-DH5	Ant1	2479.054	2480.01	0.956	0.573	Pass
NVNT	2-DH5	Ant1	2402.082	2403.16	1.078	0.836	Pass
NVNT	2-DH5	Ant1	2441.01	2442.014	1.004	0.838	Pass
NVNT	2-DH5	Ant1	2478.93	2479.874	0.944	0.839	Pass
NVNT	3-DH5	Ant1	2402.092	2402.994	0.902	0.835	Pass
NVNT	3-DH5	Ant1	2441.006	2442.168	1.162	0.839	Pass
NVNT	3-DH5	Ant1	2478.944	2480.08	1.136	0.838	Pass

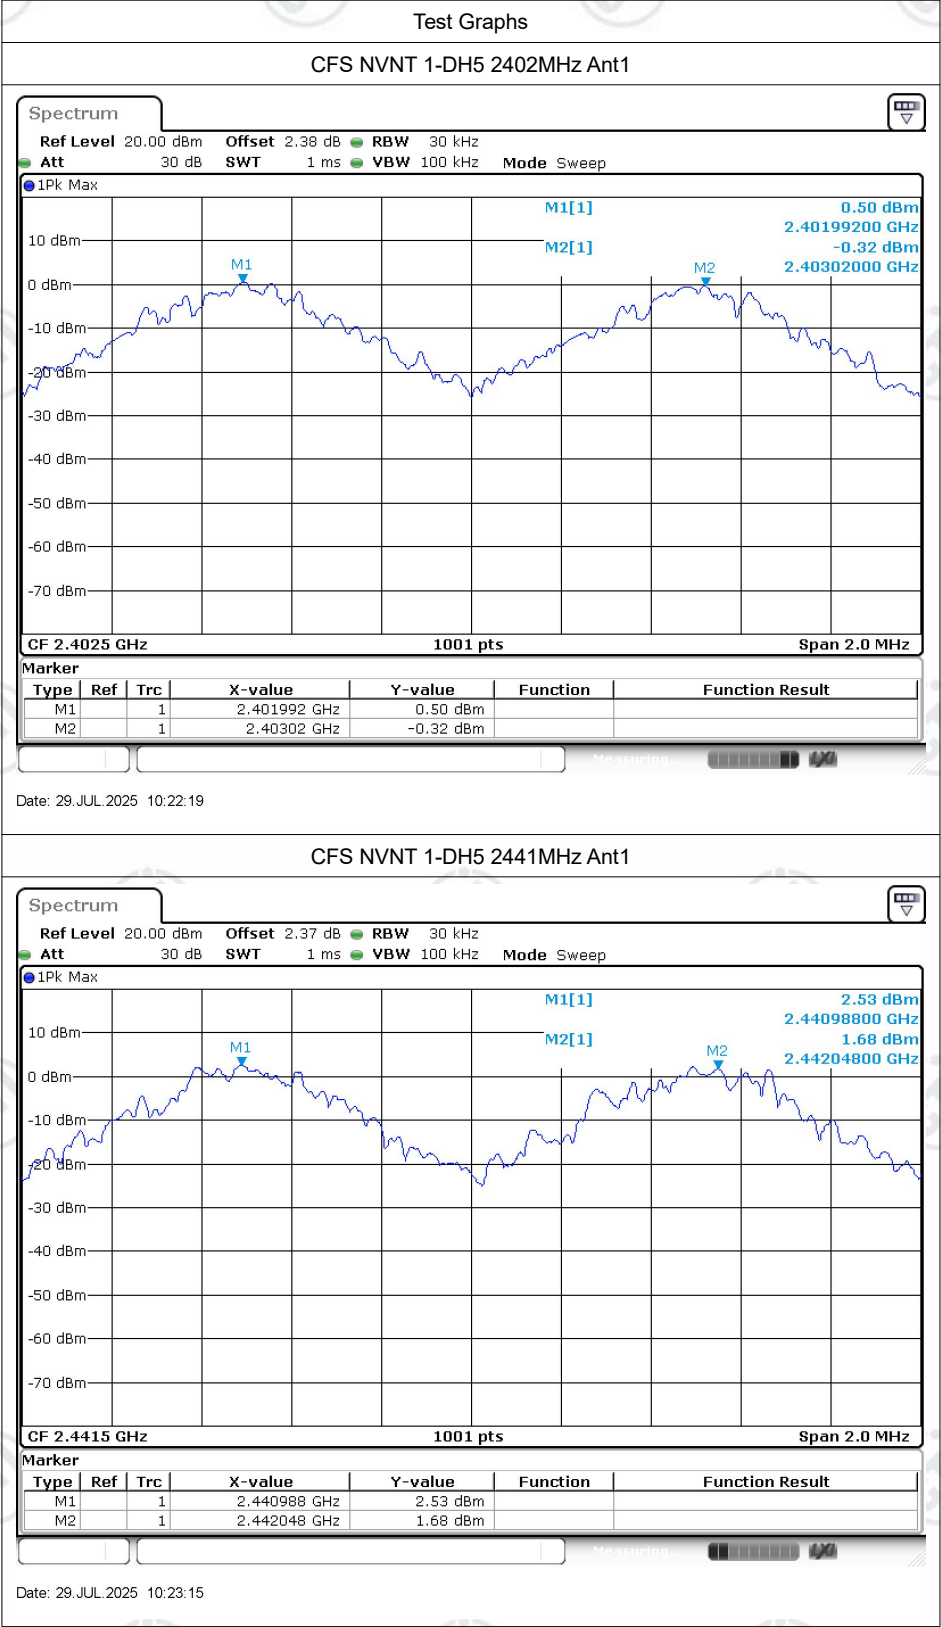

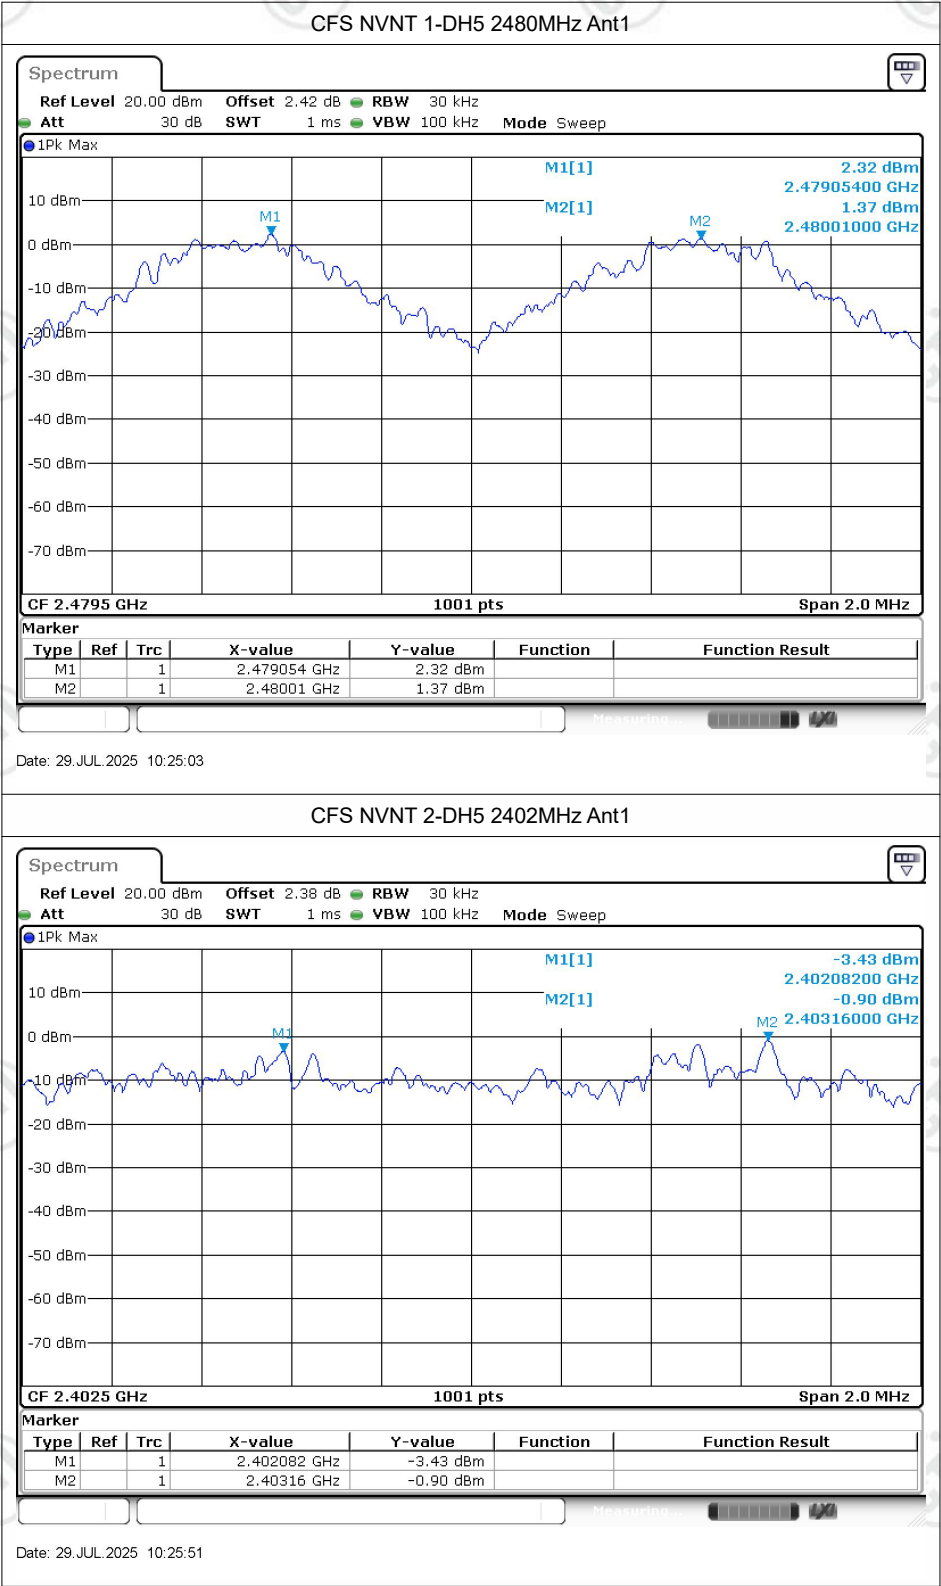

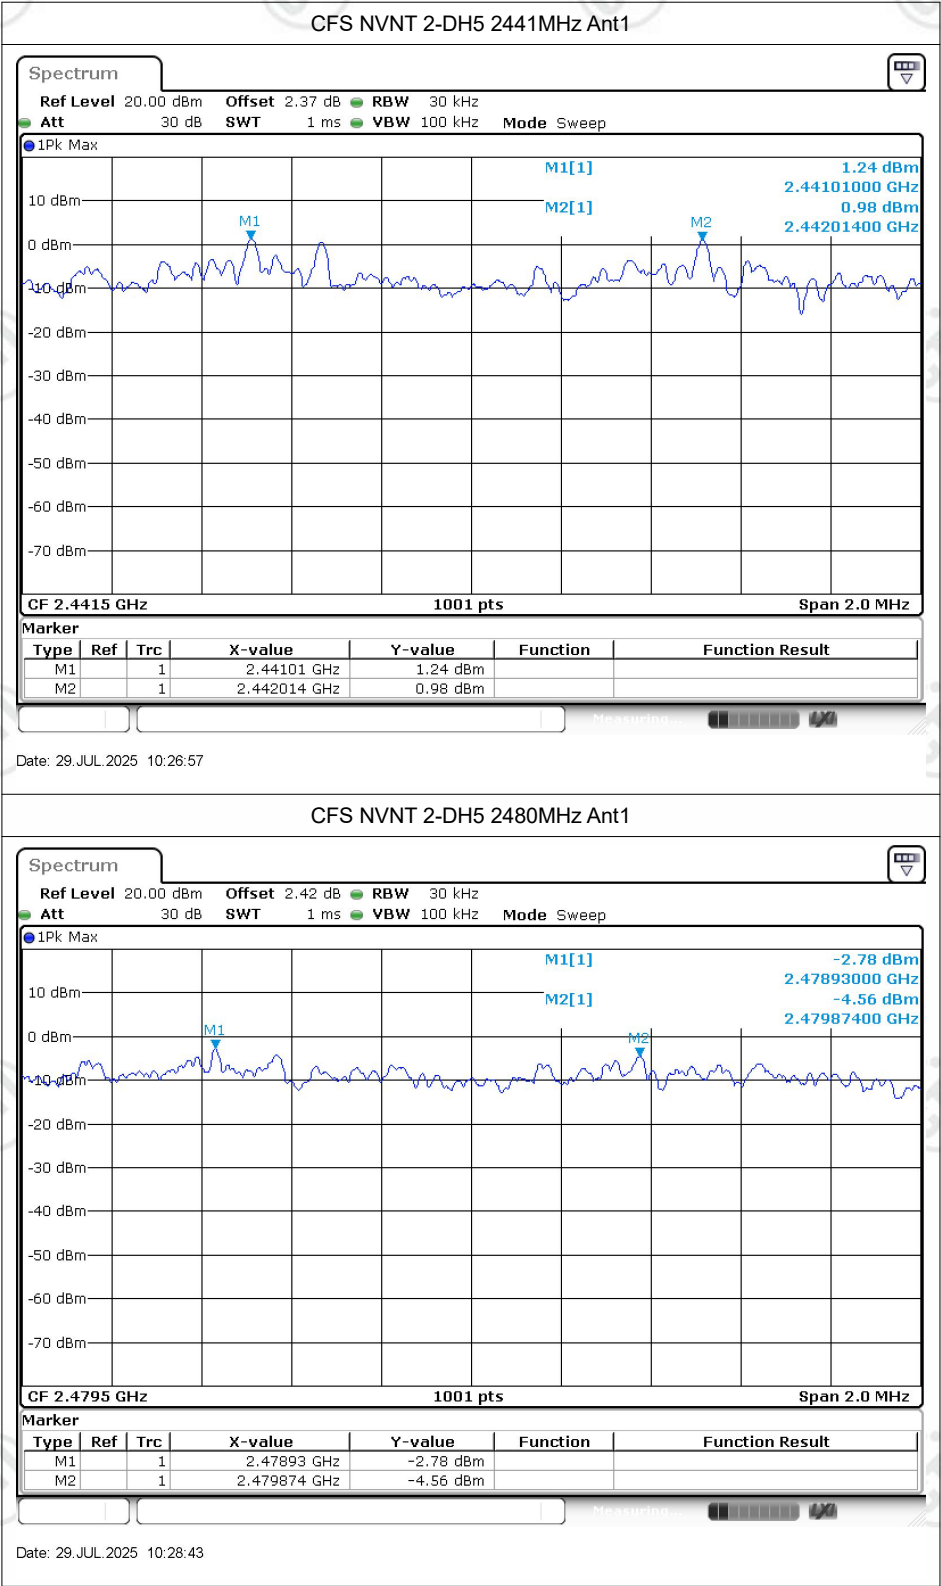

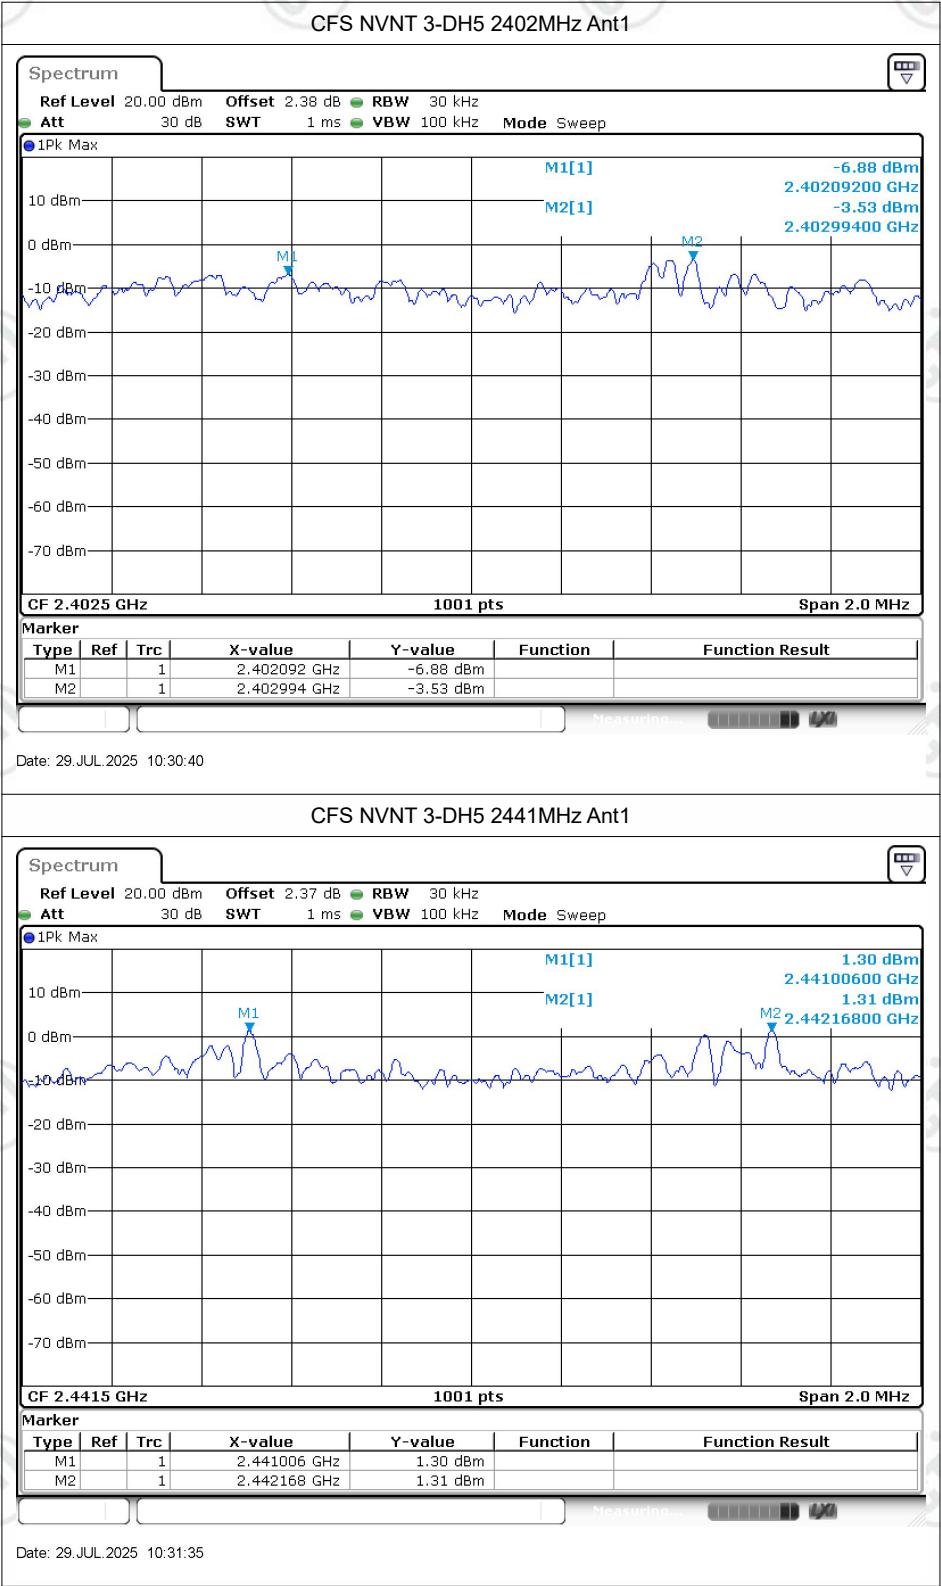

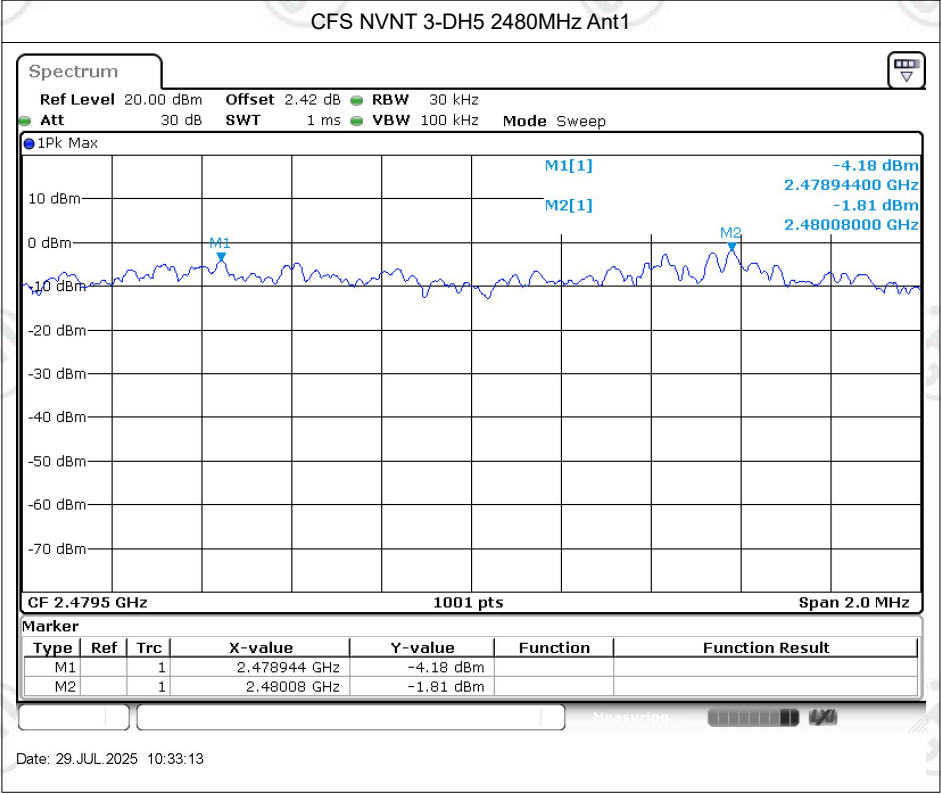

Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Hopping Mode	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	1-DH5	2402	Ant1	No-Hopping	-58.57	-20	Pass
NVNT	1-DH5	2480	Ant1	No-Hopping	-51.75	-20	Pass
NVNT	2-DH5	2402	Ant1	No-Hopping	-54.8	-20	Pass
NVNT	2-DH5	2480	Ant1	No-Hopping	-59.48	-20	Pass
NVNT	3-DH5	2402	Ant1	No-Hopping	-58.09	-20	Pass
NVNT	3-DH5	2480	Ant1	No-Hopping	-58.24	-20	Pass

