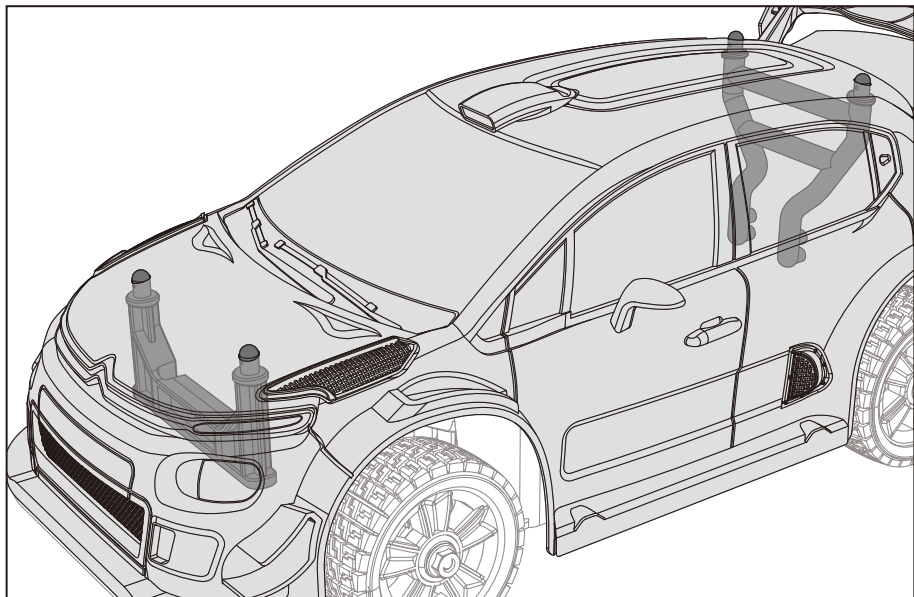
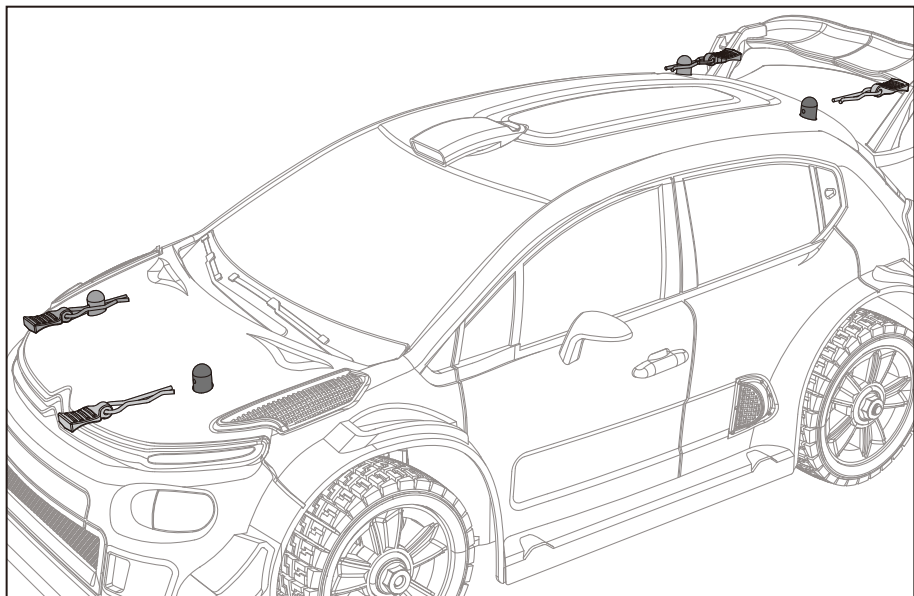


Install Car Shell 安装车壳

1. Align the 4 holes of the car shell with holders, then install it.
将车壳4个孔位对准车壳支架装入。



2. Insert the 4 clips into the holes to lock the car body.
将4个车壳扣插入锁紧车壳。



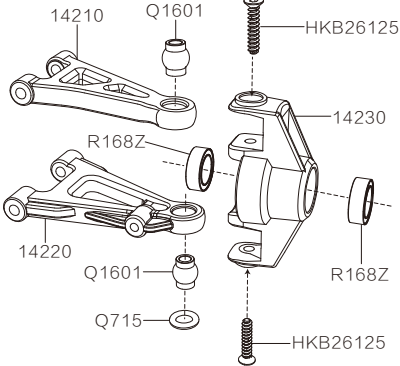
14200 Front Swing Set 前摆臂组件

Screw 螺丝:


HKB26125 Ø2.6x12.5mm 2PCS

Screws
沉头螺丝





14200

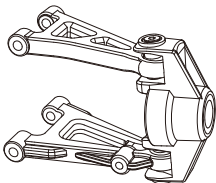

Bearing 轴承:

R168Z 2PCS

Ball bearing
滚珠轴承



Pivot balls 球头:

Q1601 2PCS

Steering pivot balls
球头



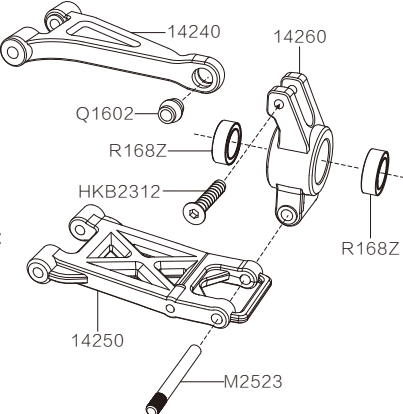
14201 Rear Swing Set 后摆臂组件

Screw 螺丝:


HKB2312 Ø2.3x12mm 1PCS

Screws
沉头螺丝





14201

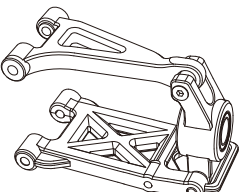

Bearing 轴承:

R168Z 2PCS

Ball bearing
滚珠轴承



Rear hub pins 单花轴:

M2523 1PCS

Rear hub pins
后固定座插销



Pivot balls 球头:

Q1602 1PCS

Steering pivot balls
球头



14400Y Metal Gears Main Driving Set 全金属主传动组件

Bearing 轴承:

R168Z 2PCS

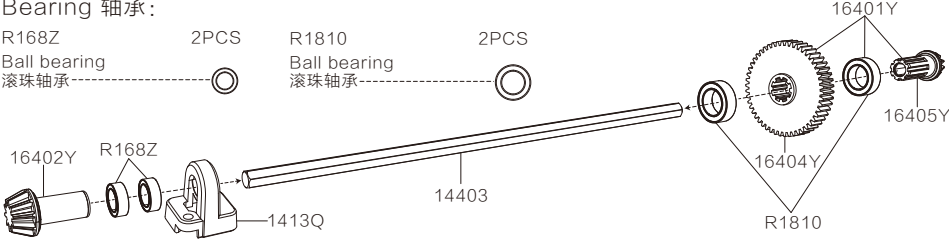
Ball bearing
滚珠轴承



R1810 2PCS

Ball bearing
滚珠轴承





14400Y



1413Q



Ø8xØ5x2.5mm

16420Y Metal Gears Diff Assembly 全金属齿轮差速箱

Screw 螺丝:

HKB2012 Ø2x12mm 4PCS

Screws
沉头螺丝

Bearing 轴承:

R1810 2PCS

Ball bearing
滚珠轴承

16421

R1810

HKB2012

16421

HKB2012

Front (前差速):
50000cs Silicone Oil 硅油
Rear (后差速):
Lubricating Oil 润滑油

16420Y

14500 Oil Filled Shock 油压避震

Add shock oil
添加避震油

Shock absorbers adjuster
避震调节器

Spin the suspension adjuster to adjust the shock absorbers' strength.
可旋转避震调节器以调整避震力度。

14500

14700 Servo Assembly 舵机组件

Screw 螺丝:

HKB2615 Ø2.6x15mm 1PCS

Screws
沉头螺丝

14700

HKB2615

14701

14702

Screw 螺丝:

HTM3060	Ø3x6mm	2PCS
Screws		
半圆头机丝螺丝		
HTB3015	Ø3x15mm	2PCS
Screws		
半圆头螺丝		
M3030	Ø3x3mm	1PCS
Hexagon socket machine screw		
内六角机丝螺丝		

The diagram illustrates the assembly of a motor unit. Key components and their assembly sequence are as follows:

- HTB3015**: Two screws used to secure the top cover (16397) to the motor housing.
- 16397**: The top cover of the motor housing.
- 16395B**: A fan or cooling fin assembly that fits onto the motor housing.
- B28454**: The main cylindrical motor housing.
- 16393**: A circular plate or end cap that fits onto the motor housing.
- 14392**: A gear or pulley component that fits onto the motor shaft.
- HTM3060**: Two screws used to secure the gear/pulley (14392) to the motor shaft.
- M3030**: A hex socket machine screw used to secure the gear/pulley (14392) to the motor shaft.

B284K & 16397

This close-up view shows the completed assembly of the motor unit, highlighting the top cover (16397) and the fan/cooling fin assembly (16395B) mounted on the motor housing (B284K).

Screw 螺丝:
HKB2312 Ø2.3x12mm 4PCS
Screws
沉头螺丝-----
HKB2012 Ø2x12mm 2PCS
Screws
沉头螺丝-----

14430

HKB2312

14431

14434

HKB2312

14431

14433

14433

14433

14432

P3665

HKB2012

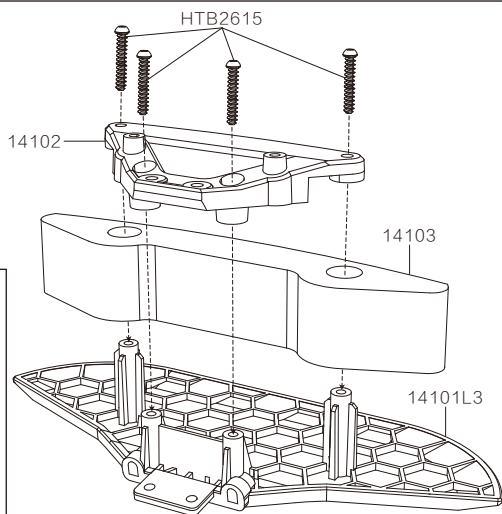
14100L3 Front Bumper Assembly 前防撞组件

Screw 螺丝:


HTB2615 Ø2.6x15mm 4PCS

Screws

半圆头螺丝-----



14100L3

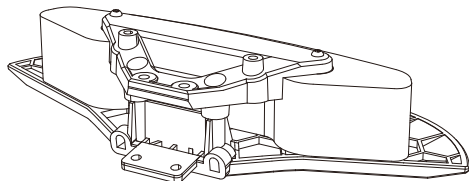


14110L3 Rear Bumper Assembly 后防撞组件

Screw 螺丝:


HTB2660 Ø2.6x6mm 2PCS

Screws

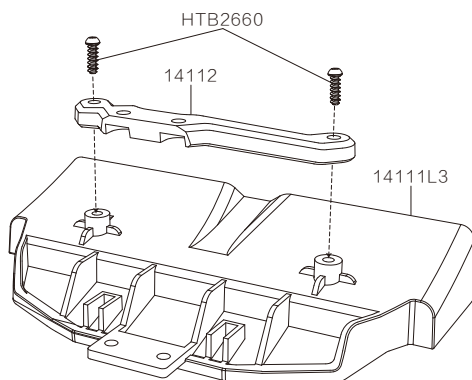
半圆头螺丝-----



14110L3

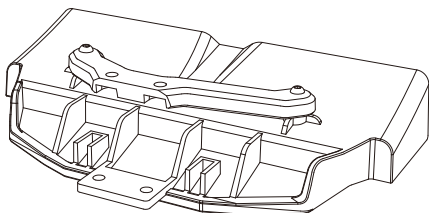

High Speed Car Assemble 高速车总装

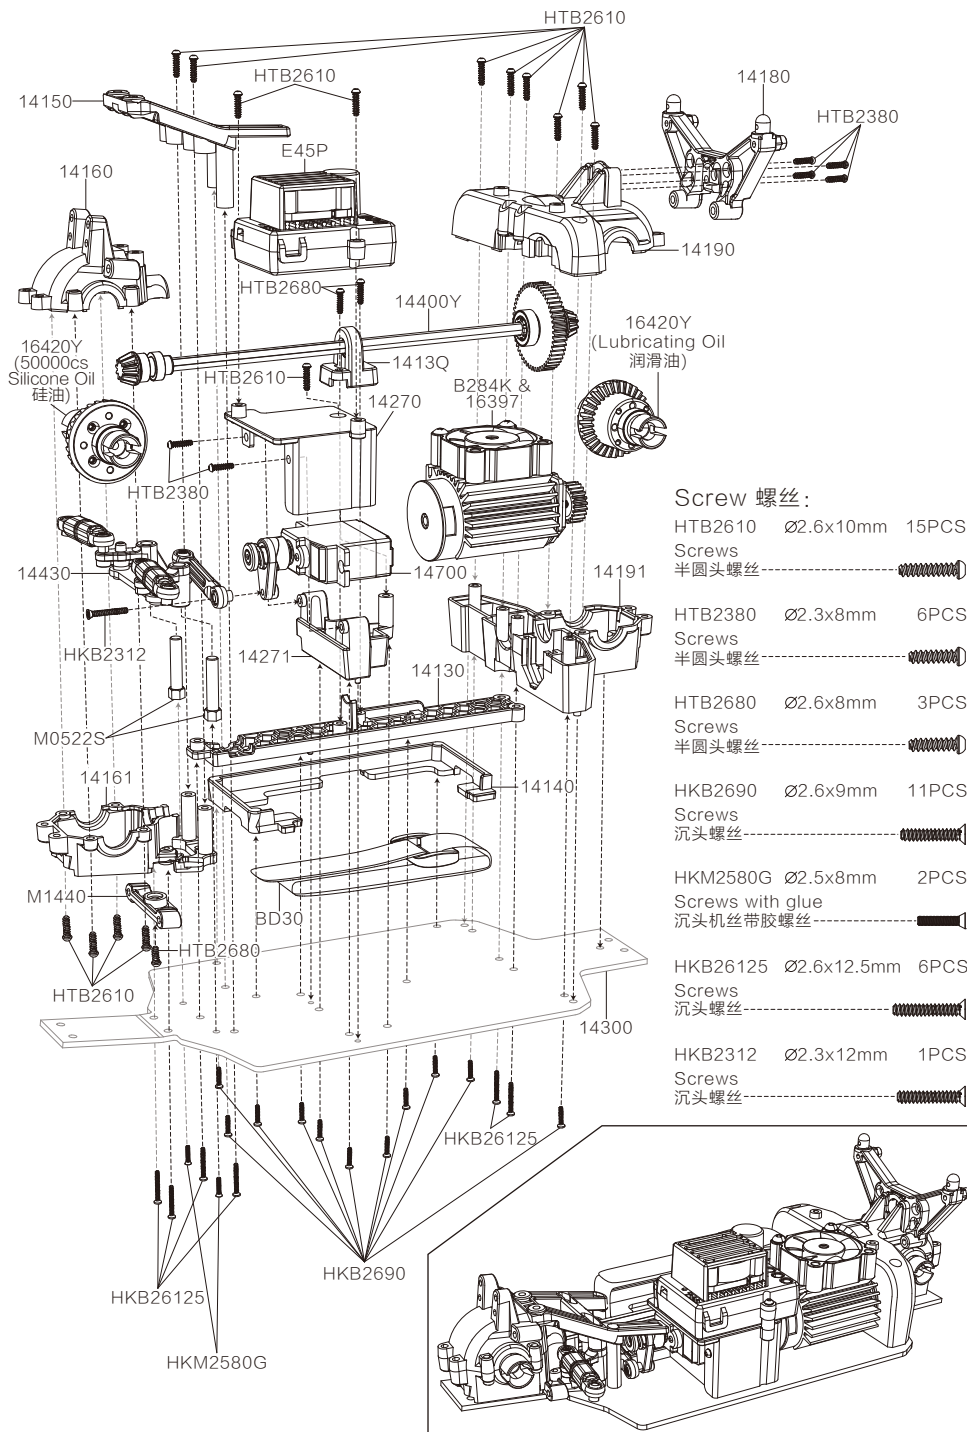

High Speed Car Assemble 高速车总装

Screw 螺丝:



HKB2312	Ø2.3x12mm	1PCS(2PCS)	HTHM3029	Ø3x29mm	4PCS
Screws			Screws		
沉头螺丝			半圆头平牙螺丝		

Iron shaft 铁轴:

M25425 4PCS
Lower swing arm fixed shaft 下摆臂固定轴

Screws
半圆头机丝螺丝
HTB2610
Ø2.6x10mm
6PCS
Screws
半圆头螺丝

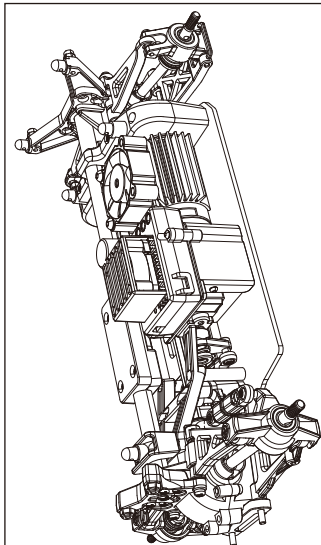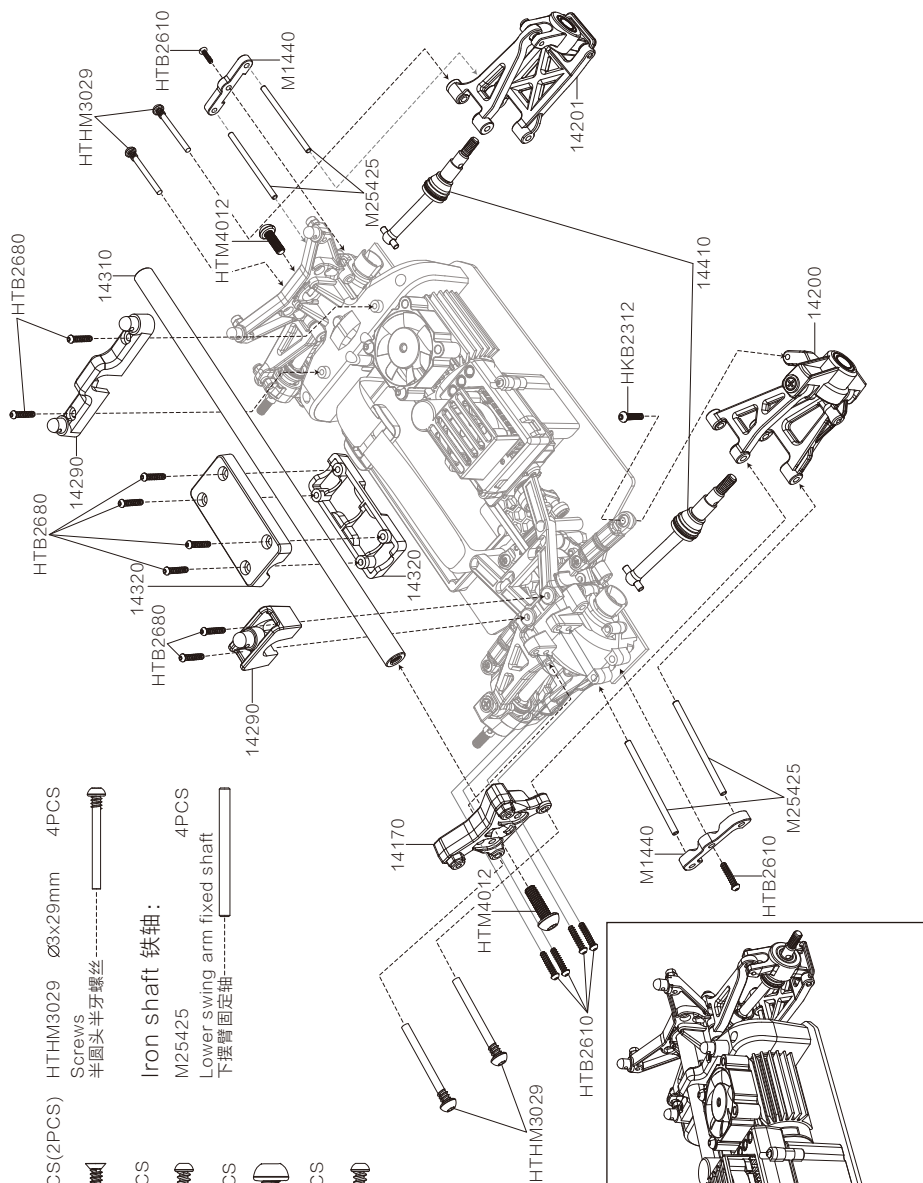HTB2610 Ø2.6x10mm 6PCS
Screws
半圆头螺丝



High Speed Car Assemble 高速车总装

Screw 螺丝:

HKB2312 Ø2.3x12mm 4PCS(8PCS)

Screws



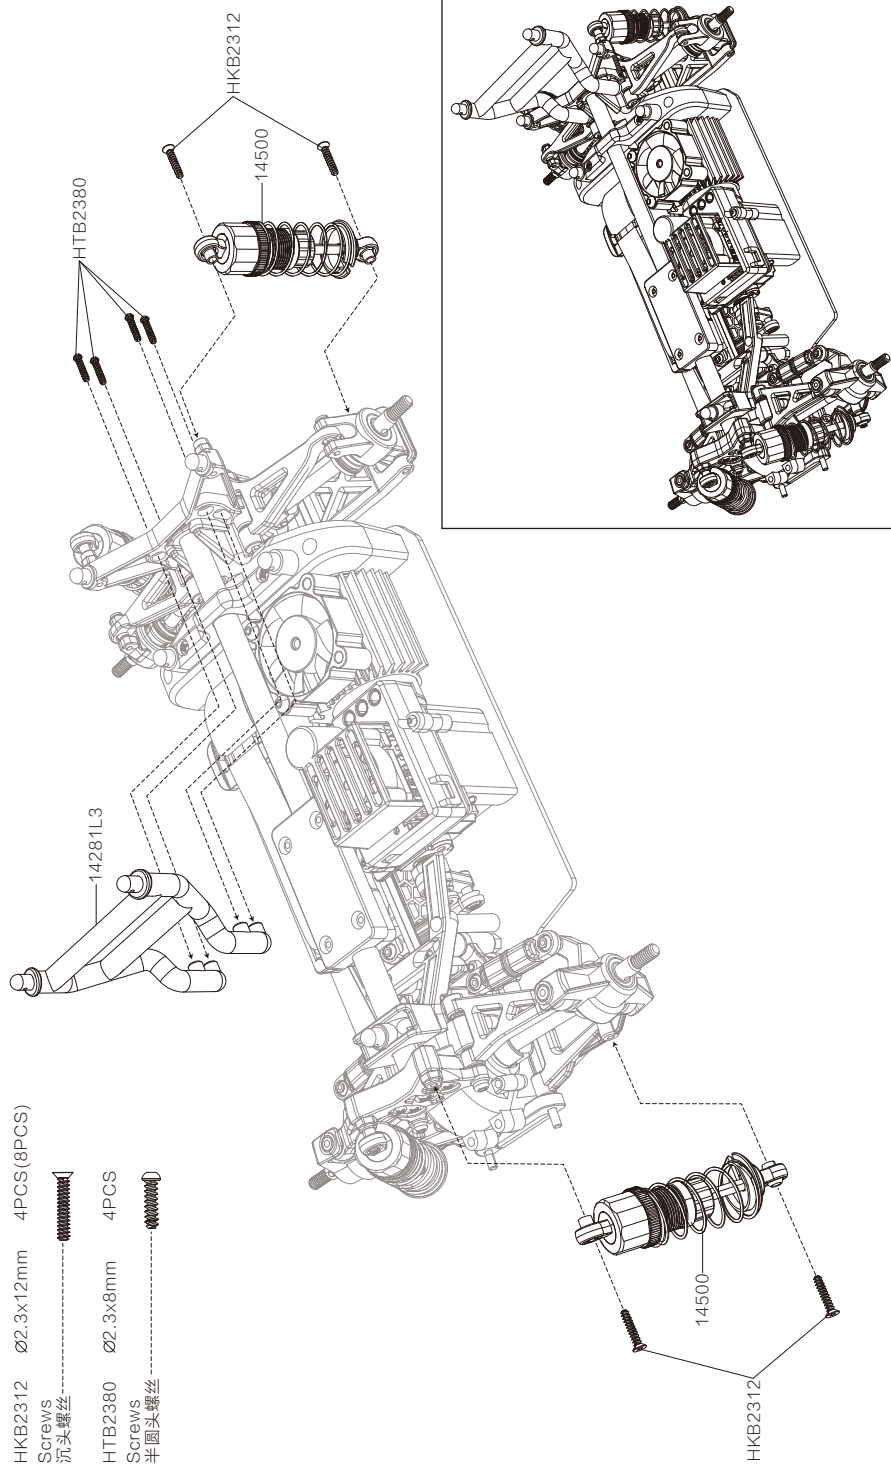
沉头螺丝

HTB2380 Ø2.3x8mm 4PCS


Screws



半圆头螺丝



High Speed Car Assemble 高速车总装

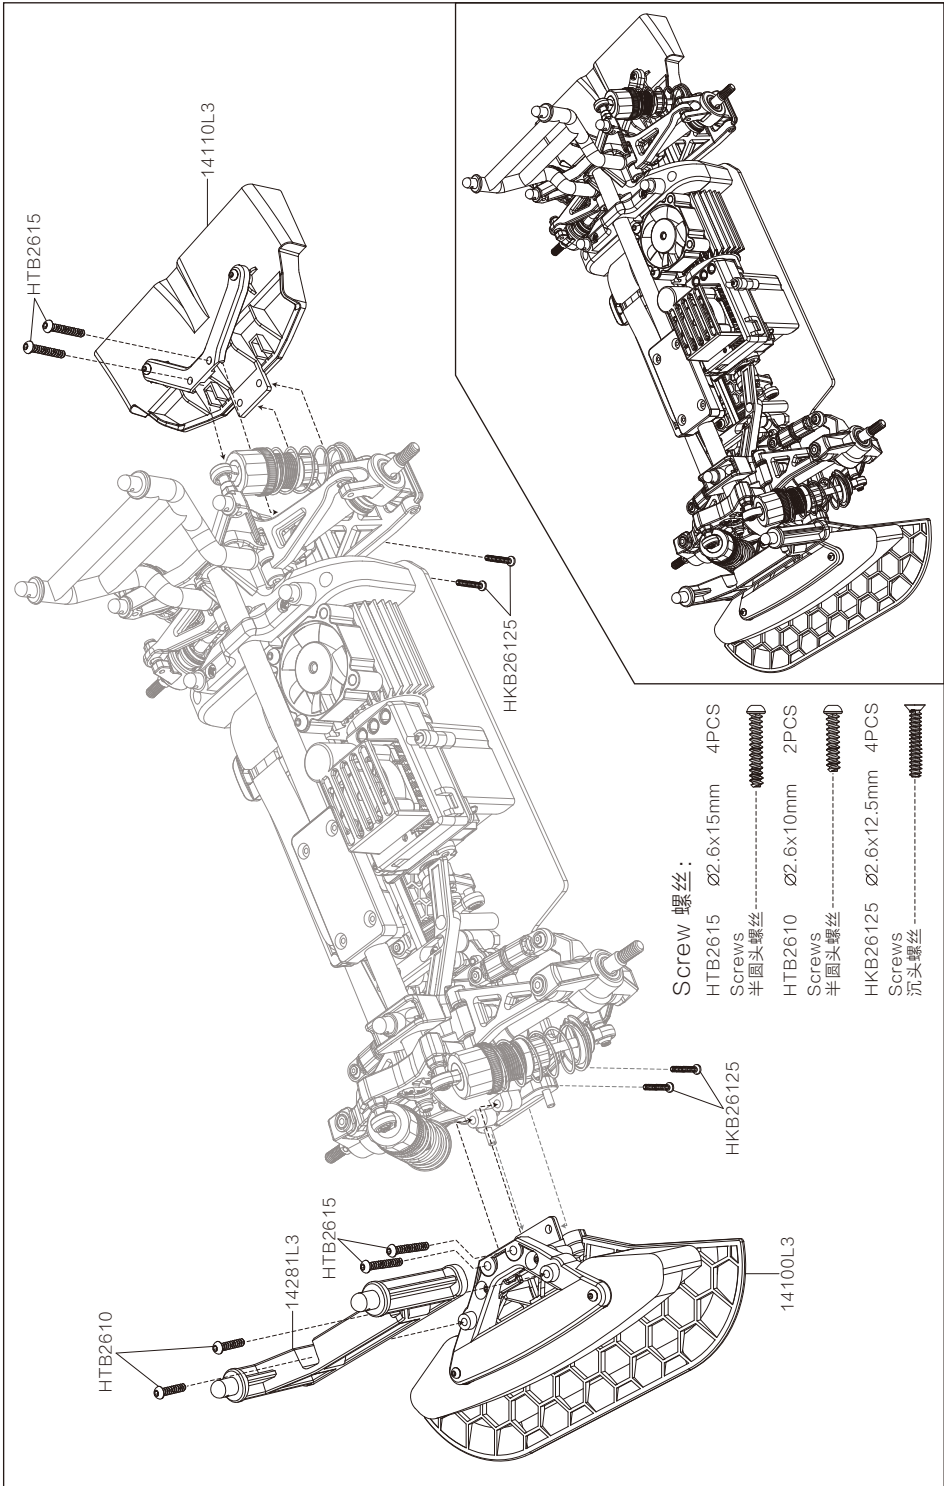

High Speed Car Assemble 高速车总装

Iron shaft 铁轴:

M20101 1PCS (4PCS)

Wheel hex pins 六角套铁轴

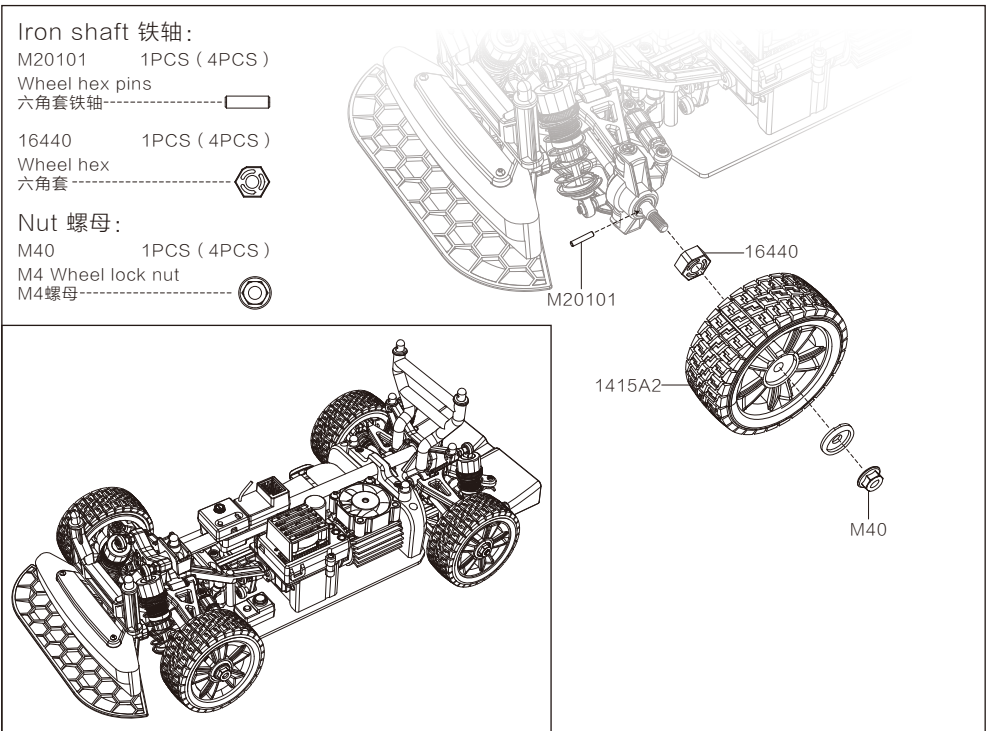
16440 1PCS (4PCS)

Wheel hex 六角套

Nut 螺母:

M40 1PCS (4PCS)

M4 Wheel lock nut M4螺母






1415A2

Body Standard 车身标配
Hardness: Soft. Better abrasion resistance.
硬度：软，更好的耐磨性。



1415B2











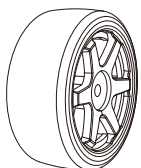
Hardness: Medium. Average abrasion resistance.
硬度：中，耐磨性一般。














1415C

Hardness: High. Suitable for drifting.
硬度：高，适合漂移。


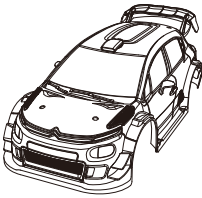
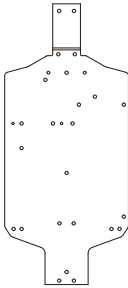
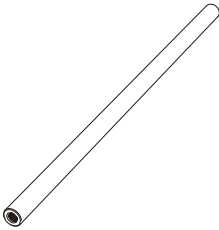
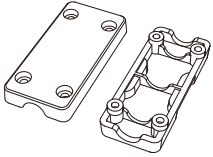
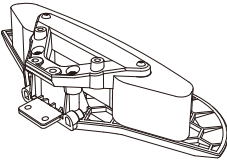
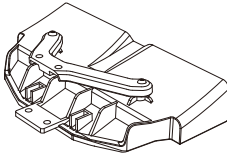
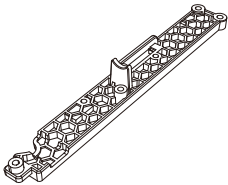
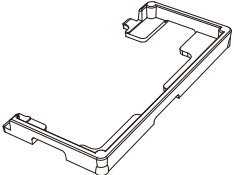
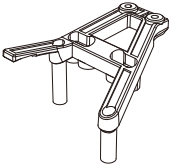
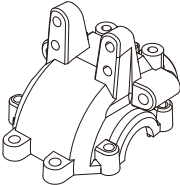
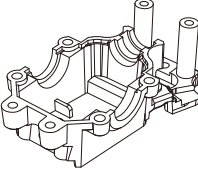
Spare Parts 配件表

			
1430L3	14300	14310	14320
Body 车壳组件	Chassis 底盘	Center Brace Bar 中支撑杆	Center Shelf 中搁架
			
14100L3	14110L3	14130	14140
Front Bumper Assembly 前防撞组件	Rear Bumper Assembly 后防撞组件	Chassis Parts 底盘配件	Battery Clip 电池固定卡座
			
14150	14160	14161	14170
Front Support Frame 前支撑架	Front Upper Gearbox Covers 前齿轮盖	Front Under Gearbox Covers 前差速底座	Front Shock Tower 前避震架

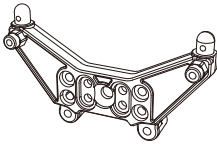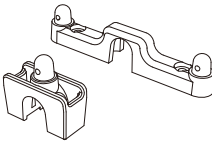
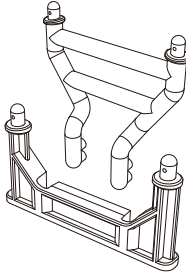
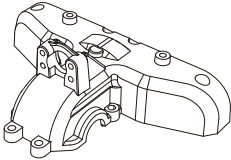
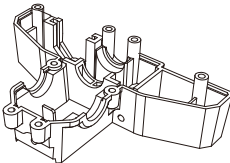
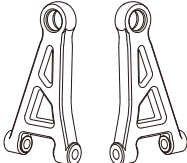
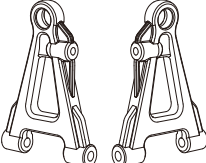
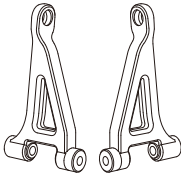
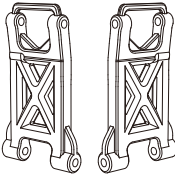
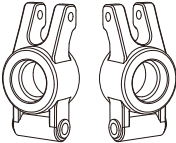

Spare Parts 配件表

			
14180	14290	14281L3	14190
Rear Shock Tower 后避震架	Cover Body Pillars 防尘罩支架	Body Pillars 车壳支架	Rear Upper Gearbox Covers 后齿轮盖
	 	 	
14191	14210	14220	14230
Front Under Gearbox Covers 后差速底座	Front Upper Suspension Arms (Including Ball Head) 前上摆臂(含球头)	Front Lower Suspension Arms (Including Ball Head) 前下摆臂(含球头)	Steering Block 转向座
 			
14240	14250	14260	M25425
Rear Upper Suspension Arms (Including Ball Head) 后上摆臂(含球头)	Rear Lower Suspension Arms 后下摆臂	Rear Hubs 后固定座	F/R Lower Swing Arm Fixed Shaft 下摆臂固定轴

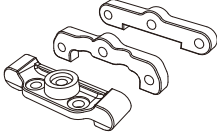
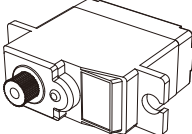

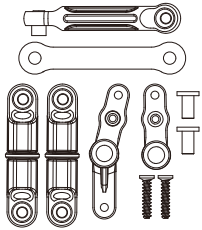

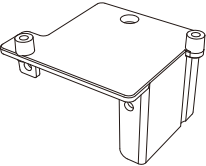
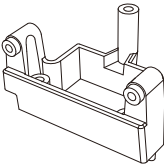
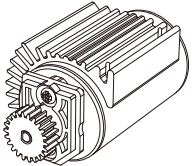
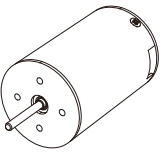

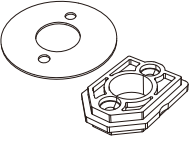
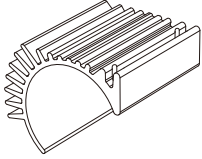
Spare Parts 配件表

			
M1440	14701	14702	14430
F/R Reinforced Sheet 前后加强件	Servo 舵机	Servo Saver Assembly 舵机离合摆臂	Steering Assembly 转向传动组件
			
14431	14270	14271	B284K
Steering Linkage 转向拉杆 (2PCS)	Servo Upper Fix Frame 舵机上固定架	Servo Under Fix Frame 舵机下固定架	Motor Assembly 电机组件
			
B28454	14392	16393	16395B
Brushless Motor 无刷电机	Motor Pinions 电机输出齿	Motor Guard 电机固定座	Motor Heatsink 散热片

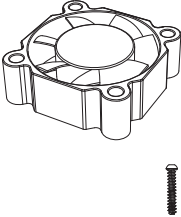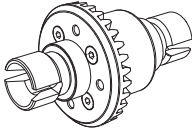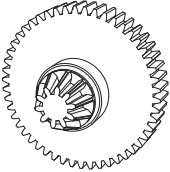
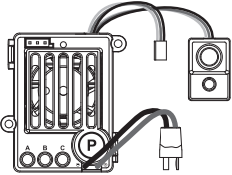

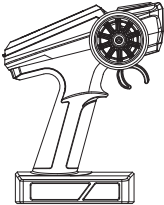

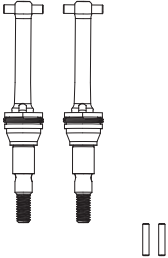

Spare Parts 配件表

			
16397	16420Y	14400Y	16401Y
Motor Fan 风扇	Metal Gears Diff Assembly 全金属齿轮差速箱	Metal Gears Main Driving Set 全金属主传动组件	Spur Gear Assembly (Metal) 传动主齿轮组件(金属)
			
16402Y	14403	E45P	R3B
Drive Gear (Metal) 前锥齿(金属)	Centre Drive Shaft 主轴	Brushless ESC 无刷电子调速器	Receiver 接收器
			
T3D	14500	14410	M20101
Transmitter 遥控器	Oil Filled Shock 油压避震	Metal F/R CVD Shafts (2 Sets) 轮胎转动组件	Wheel Hex Pins 六角套铁轴 (8PCS)

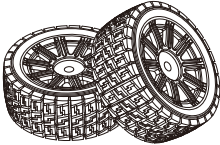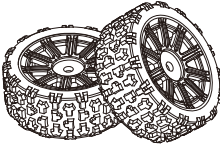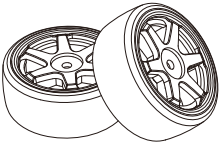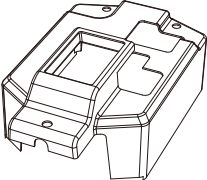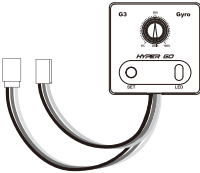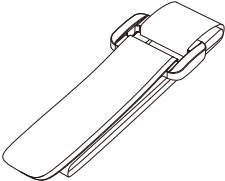Spare Parts 配件表

	 	 	 
16440	1415A2	1415B2	1415C
Wheel Hex 六角套	Tires (Rubber) 橡胶轮胎 (2PCS)	Tires (TPR) TPR轮胎 (2PCS)	Tires (Drift) 漂移轮胎 (2PCS)
			
M40	B2S20	P2050	1430Z
M4 Wheel Lock Nut M4螺母 (8PCS)	Battery 电池	USB Charging Cable USB充电线	Dust proof cover 防尘罩
			
G3	1413Q	BD30	M0522S
Gryo 陀螺仪	Drive Shaft Bracket 主轴支撑架	Battery Base 电池固定带	Steering Shaft 转向轴 (2PCS)

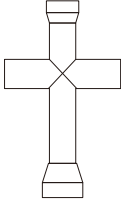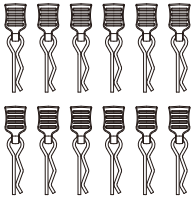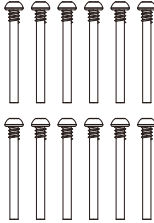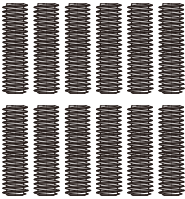Spare Parts 配件表

			
P810	P812	M001	Q1601
Screwdriver 螺丝刀	Hexagonal Wrench 六角扳手	Body Clips 车壳扣 (12PCS)	Steering Pivot Balls 球头 (8PCS)
			
Q1602	M2523	HTHM3029	M4018
Steering Pivot Balls 球头 (8PCS)	Rear Fixing Pin 后固定座插销 (4PCS)	Screws 半圆头半牙螺丝 (12PCS)	Screws 不锈钢紧定螺丝 (12PCS)
			
Q715	PH03		
Rubber washers 橡胶圈 (6PCS)	Screwdriver Sets 螺丝刀套装		

Screws 螺丝

HKM2580G	Ø2.5x8mm	12PCS
HKB2012	Ø2x12mm	12PCS
HTB2380	Ø2.3x8mm	12PCS
HTB2680	Ø2.6x8mm	12PCS
HTB2610	Ø2.6x10mm	12PCS
HTB2615	Ø2.6x15mm	12PCS
HKB2312	Ø2.3x12mm	12PCS
HKB2690	Ø2.6x9mm	12PCS
HKB26125	Ø2.6x12.5mm	12PCS
HKB2615	Ø2.6x15mm	12PCS
HTM4012	Ø4x12mm	12PCS

Others 其他

R1810	Bearing 轴承	8PCS
R168Z	Bearing 轴承	8PCS



MADE IN CHINA

Instructions must be retained since it contains important information.