


RF Test Data


Duty Cycle	2
Maximum Peak Conducted Output Power	8
-20dB Bandwidth	14
Occupied Channel Bandwidth	20
Carrier Frequencies Separation	26
Number of Hopping Channel	32
Band Edge	38
Band Edge(Hopping)	45
Conducted RF Spurious Emission	52
Dwell Time	62

Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	1-DH1	2402	Ant1	30.51	5.16	2.62
NVNT	1-DH1	2441	Ant1	30.48	5.16	2.62
NVNT	1-DH1	2480	Ant1	30.44	5.17	2.63
NVNT	2-DH1	2402	Ant1	99.6	0.02	3.98
NVNT	2-DH1	2441	Ant1	13.59	8.67	7.38
NVNT	2-DH1	2480	Ant1	13.54	8.68	7.41
NVNT	3-DH1	2402	Ant1	99.6	0.02	3.98
NVNT	3-DH1	2441	Ant1	99.6	0.02	3.98
NVNT	3-DH1	2480	Ant1	99.21	0.03	3.98

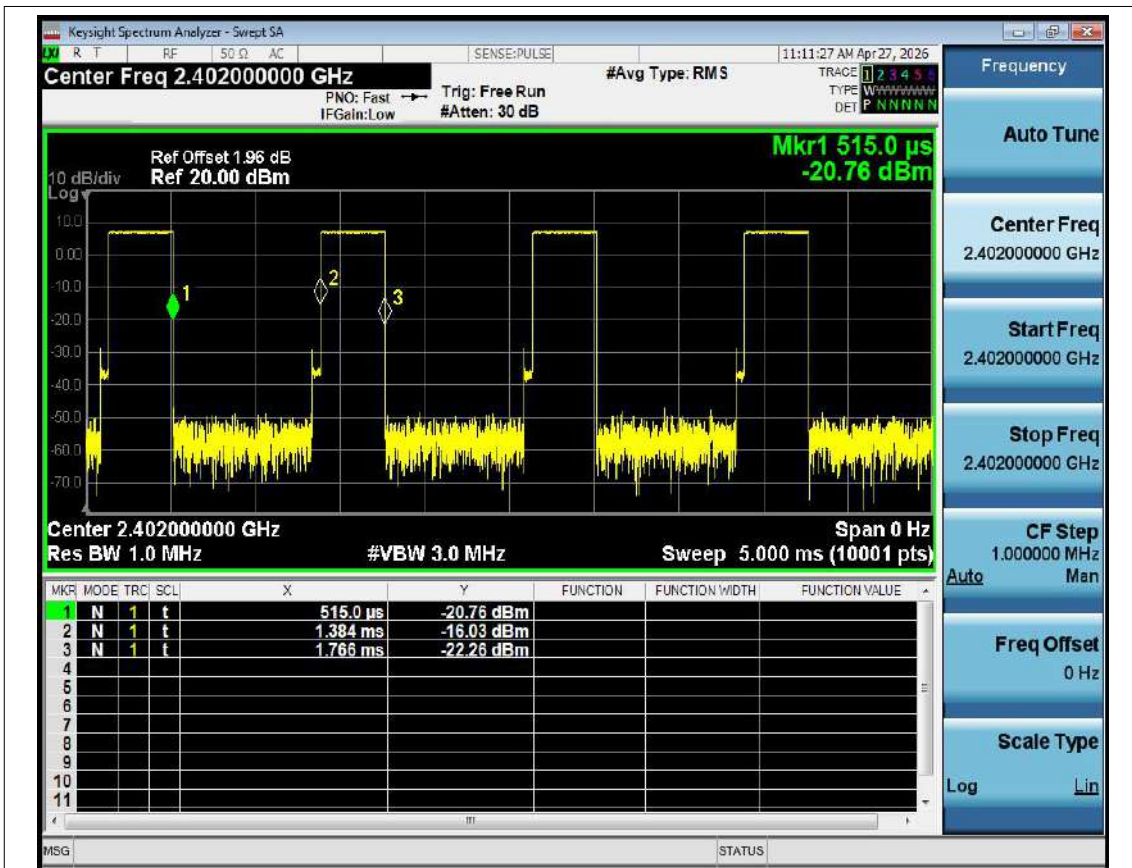


Duty Cycle NVNT 1-DH1 2402MHz Ant1

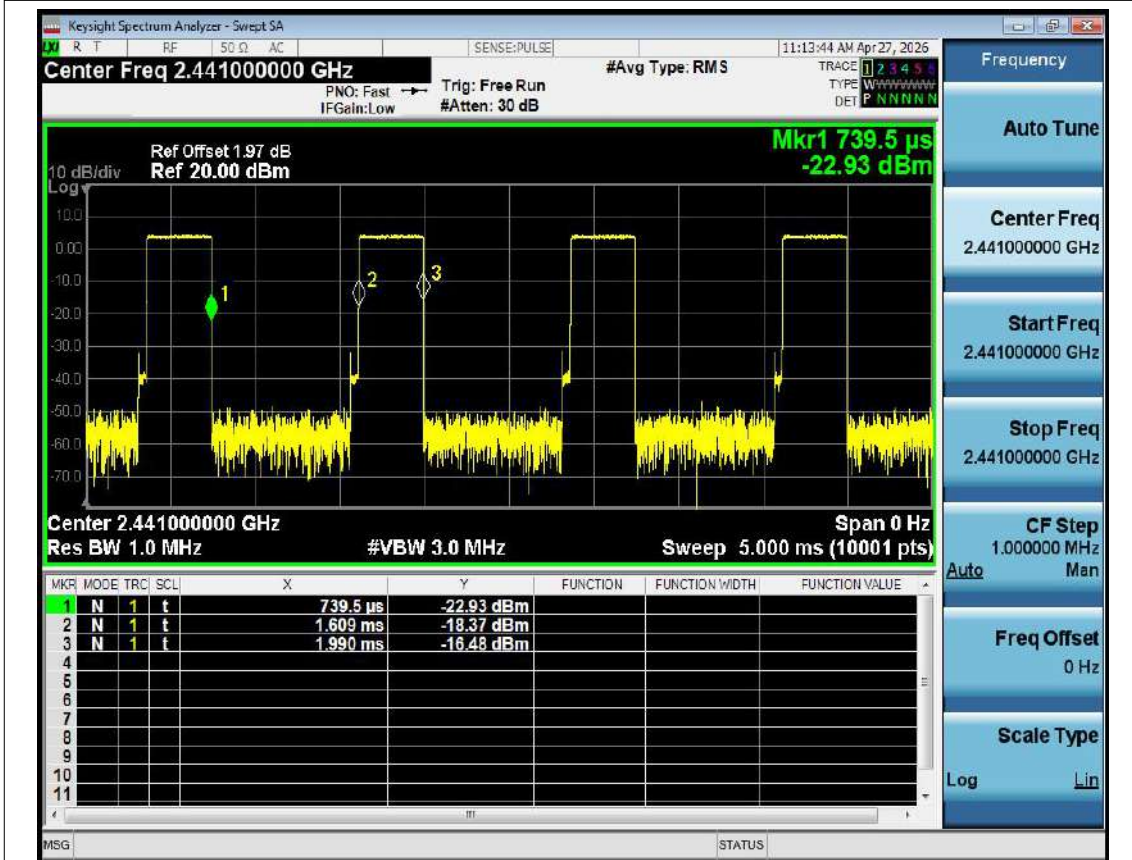


Duty Cycle NVNT 1-DH1 2441MHz Ant1

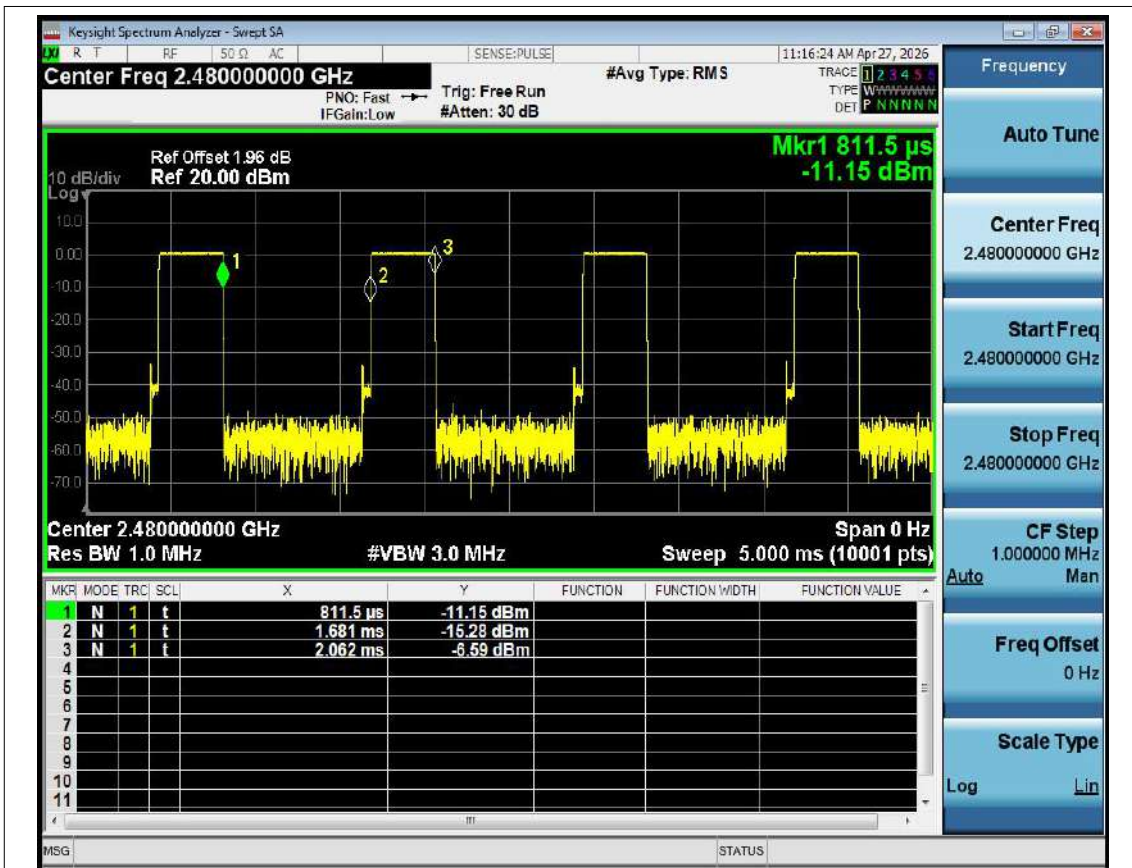


Duty Cycle NVNT 1-DH1 2480MHz Ant1

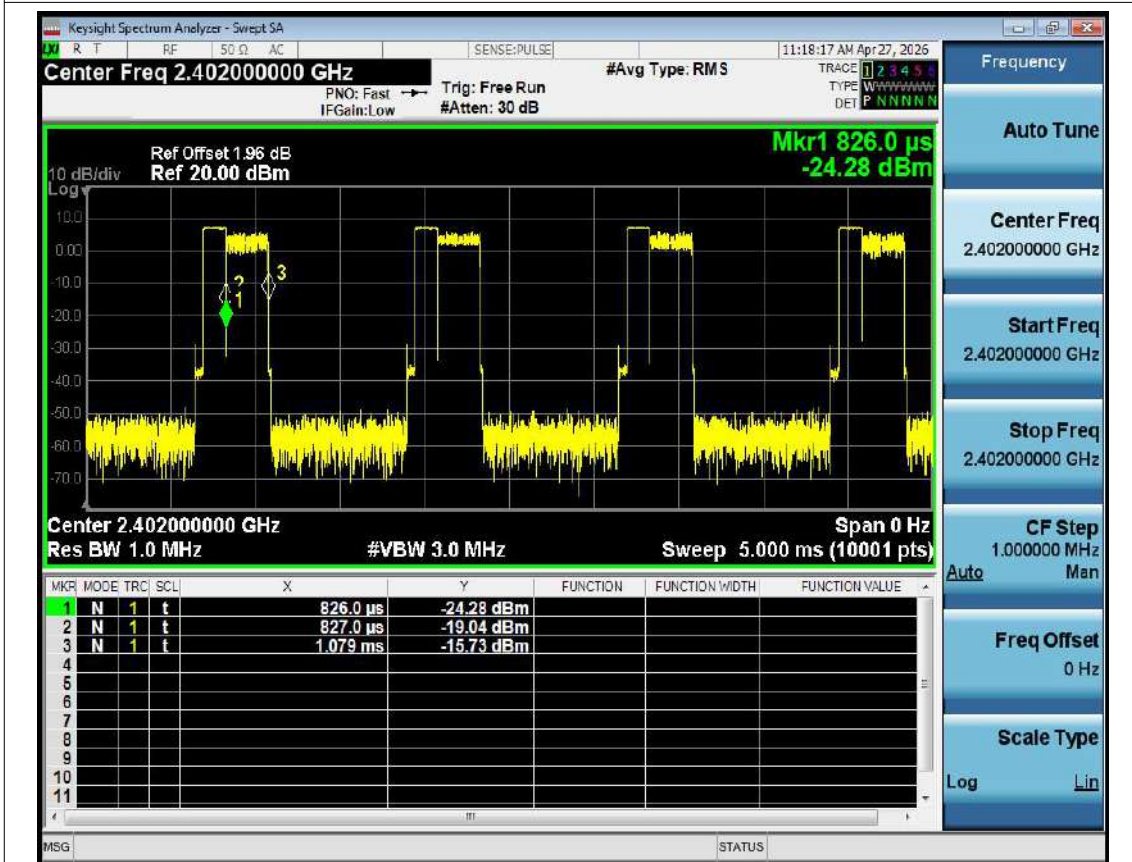


Duty Cycle NVNT 2-DH1 2402MHz Ant1

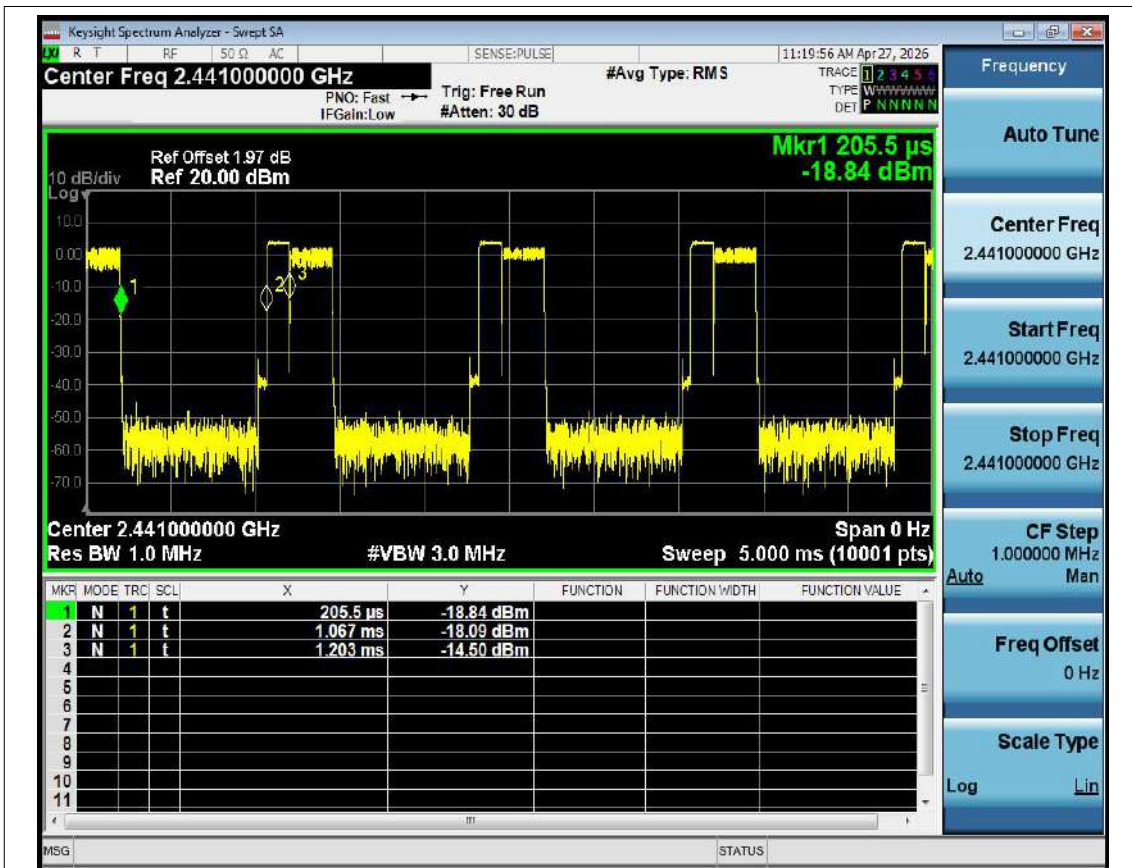


Duty Cycle NVNT 2-DH1 2441MHz Ant1

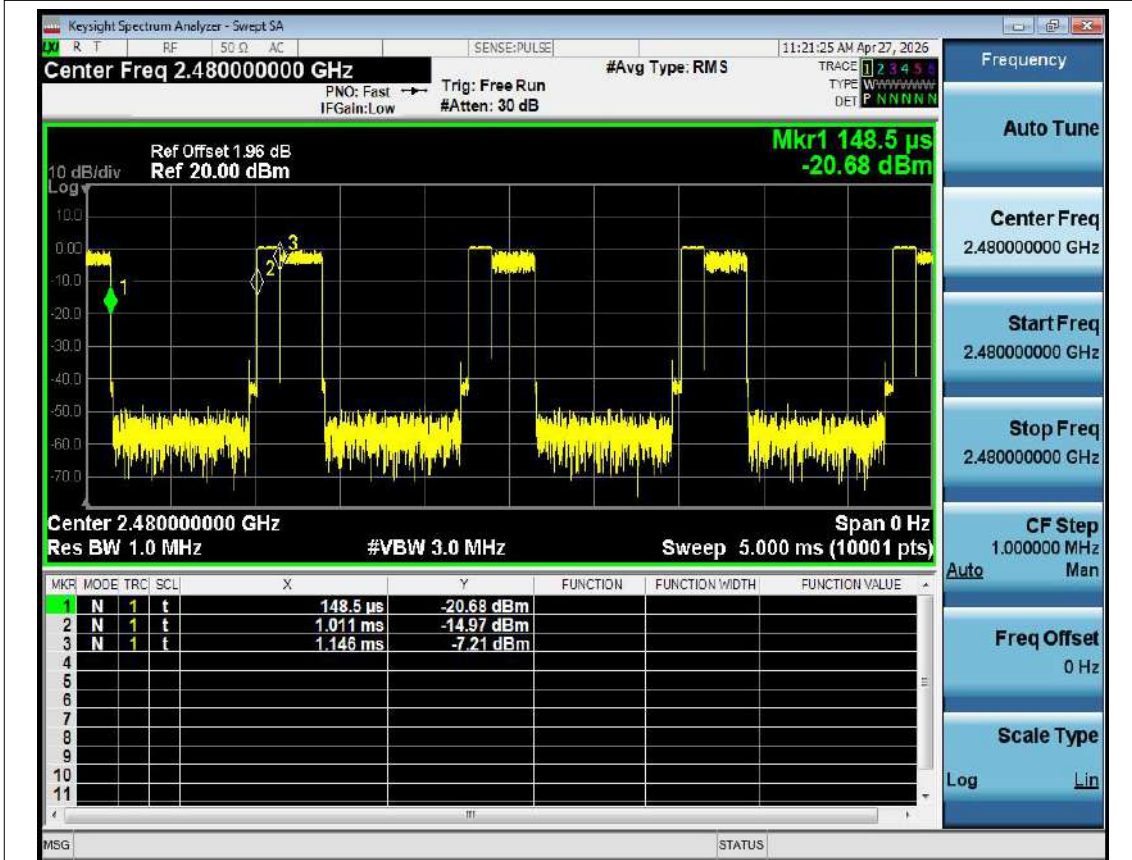


Duty Cycle NVNT 2-DH1 2480MHz Ant1

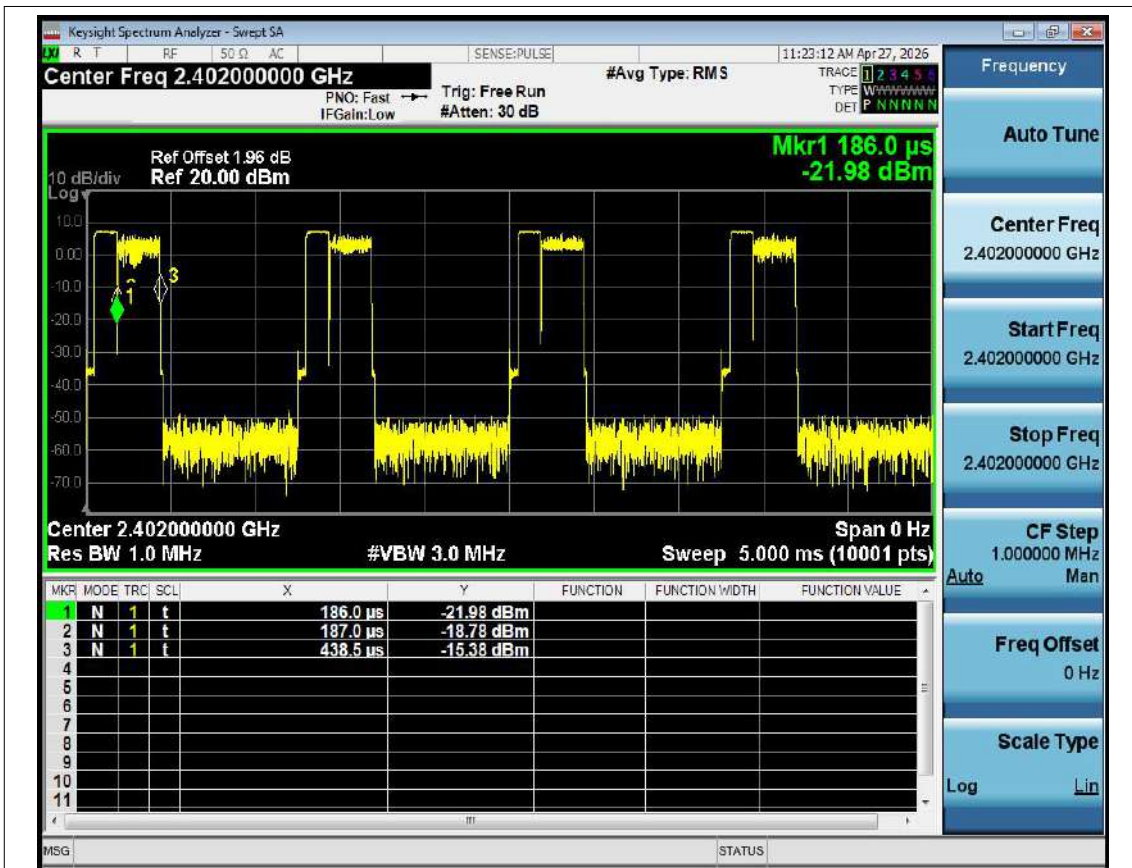

Duty Cycle NVNT 3-DH1 2402MHz Ant1

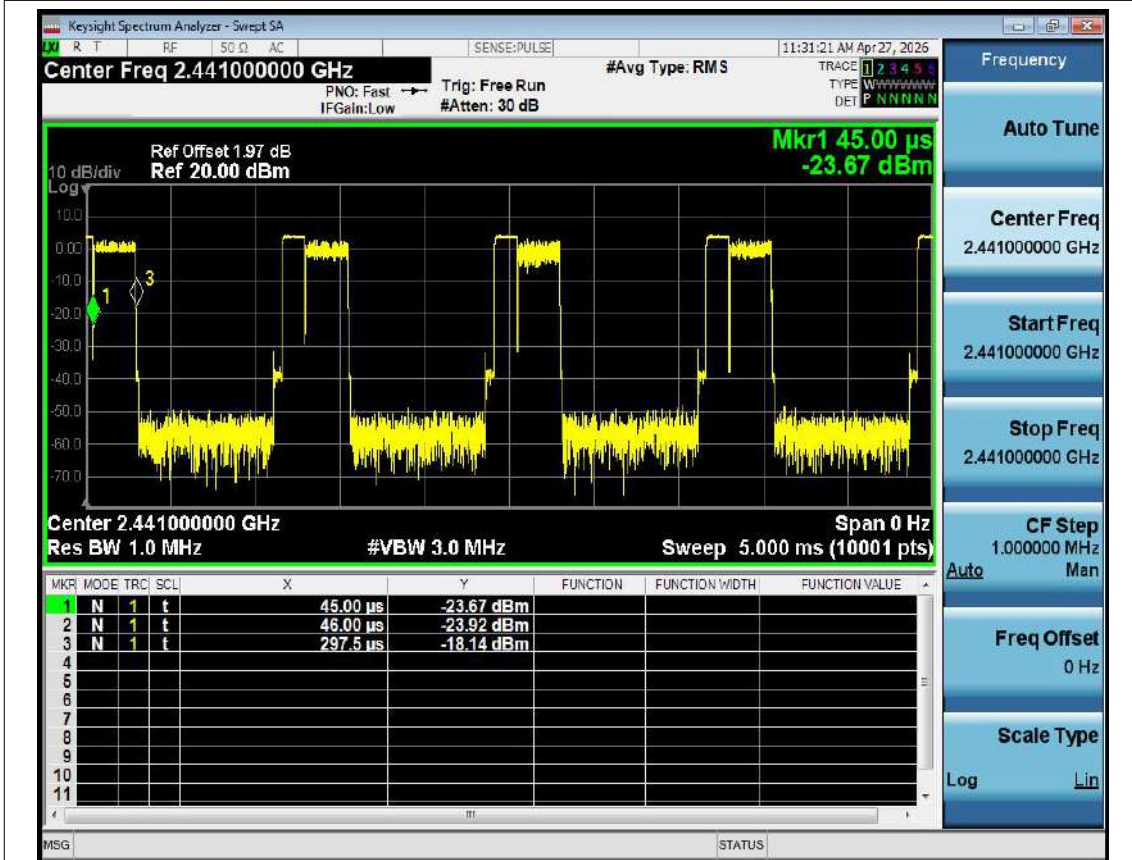

Duty Cycle NVNT 3-DH1 2441MHz Ant1

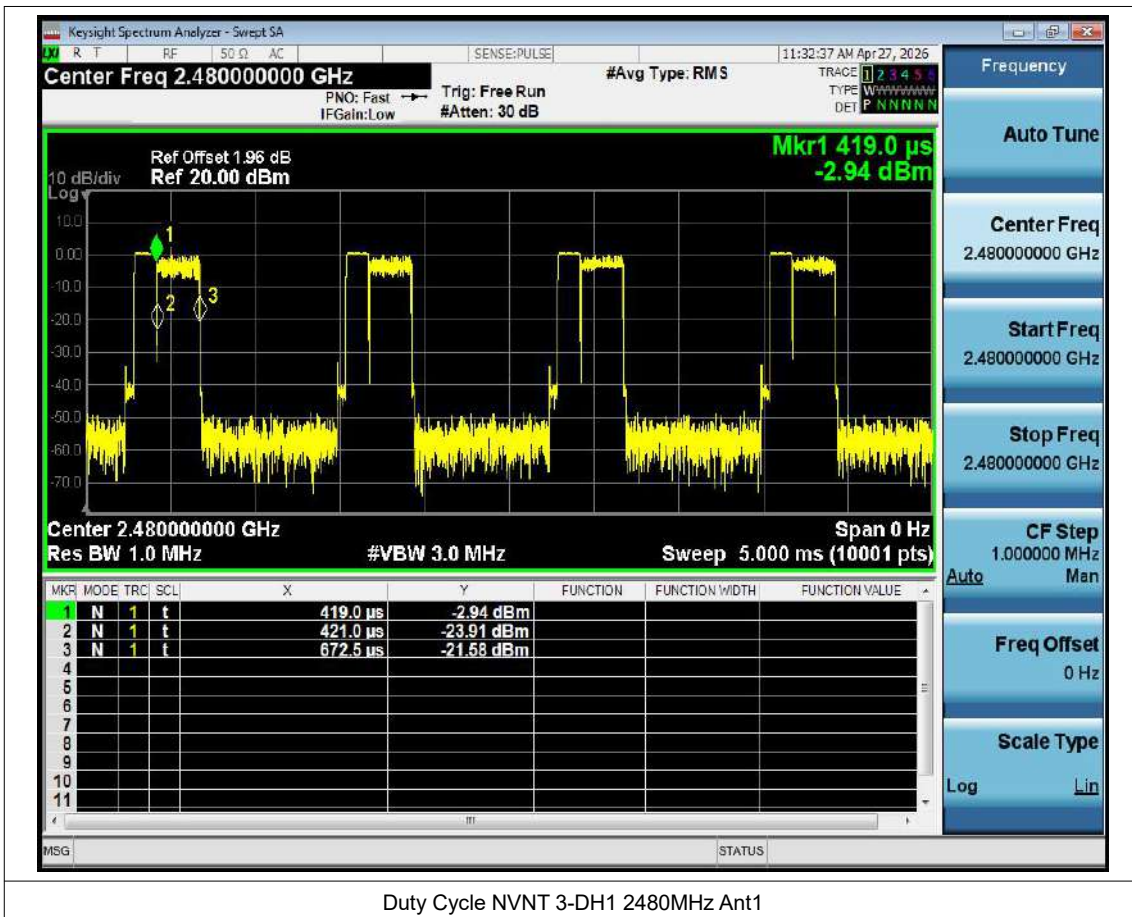

Maximum Peak Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Total Conducted Power (W)	Limit Conducted(dBm)	Verdict
NVNT	1-DH1	2402	Ant1	-0.12	0.00097	21	Pass
NVNT	1-DH1	2441	Ant1	-0.83	0.00083	21	Pass
NVNT	1-DH1	2480	Ant1	-1.61	0.00069	21	Pass
NVNT	2-DH1	2402	Ant1	0.67	0.00117	21	Pass
NVNT	2-DH1	2441	Ant1	-0.04	0.00099	21	Pass
NVNT	2-DH1	2480	Ant1	-0.78	0.00084	21	Pass
NVNT	3-DH1	2402	Ant1	1.24	0.00133	21	Pass
NVNT	3-DH1	2441	Ant1	0.57	0.00114	21	Pass
NVNT	3-DH1	2480	Ant1	-0.18	0.00096	21	Pass



Peak Power NVNT 1-DH1 2402MHz Ant1



Peak Power NVNT 1-DH1 2441MHz Ant1



Peak Power NVNT 1-DH1 2480MHz Ant1




Peak Power NVNT 2-DH1 2402MHz Ant1



Peak Power NVNT 2-DH1 2441MHz Ant1




Peak Power NVNT 2-DH1 2480MHz Ant1

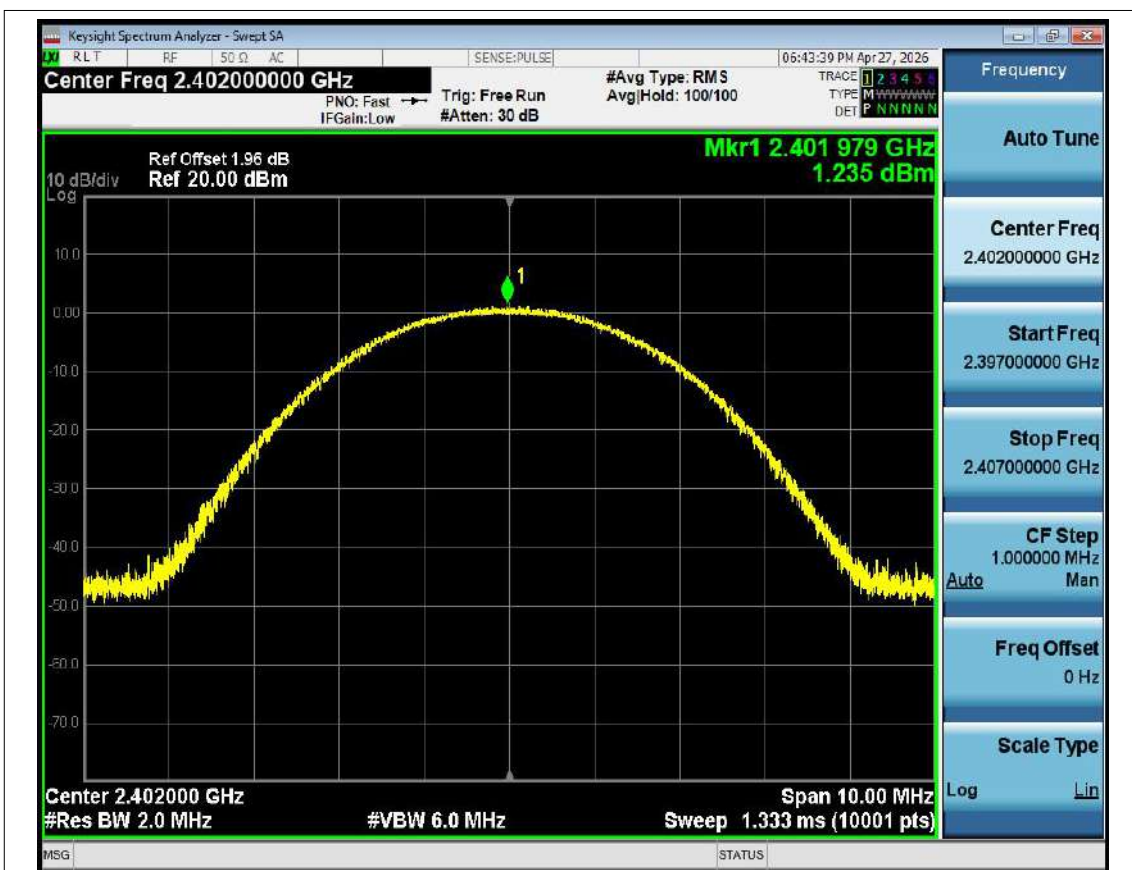

Peak Power NVNT 3-DH1 2402MHz Ant1



Peak Power NVNT 3-DH1 2441MHz Ant1

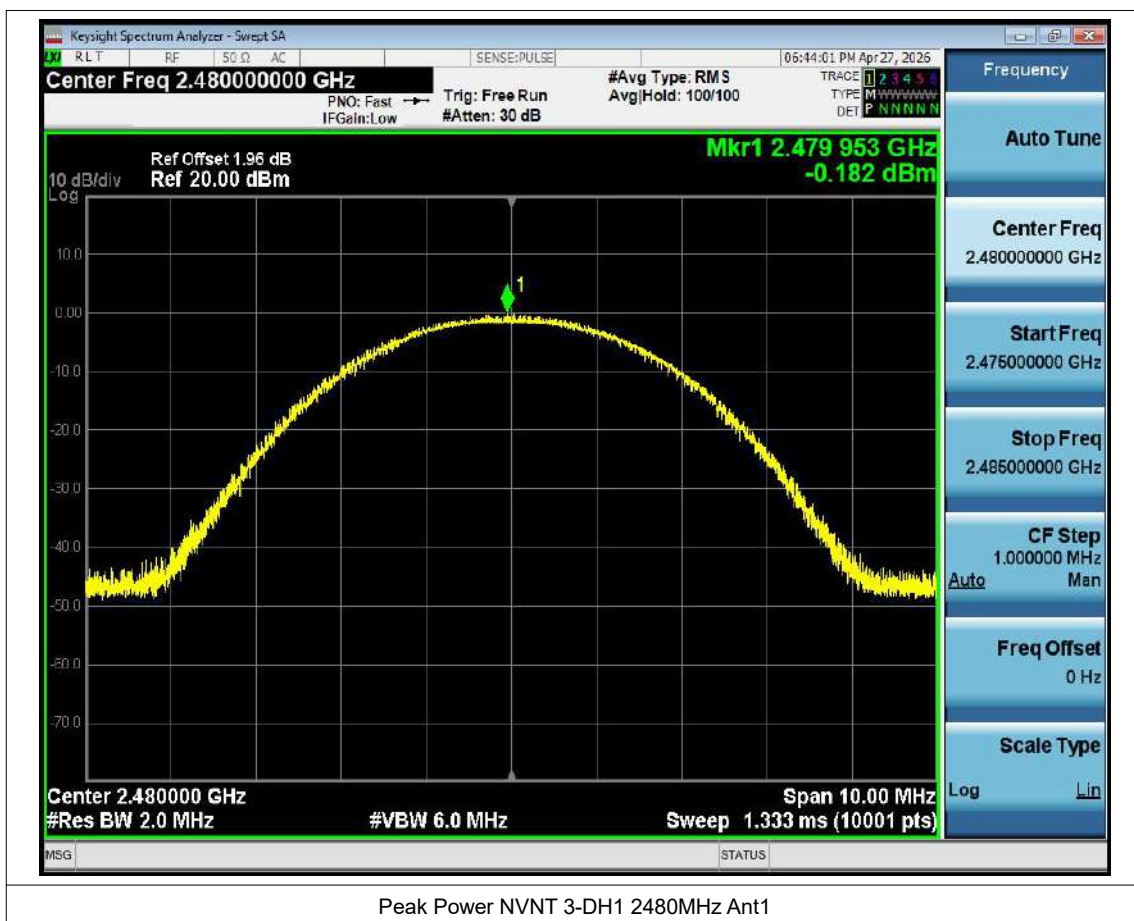

-20dB Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	-20 dB Bandwidth (MHz)	Verdict
NVNT	1-DH1	2402	Ant1	0.9784	Pass
NVNT	1-DH1	2441	Ant1	0.962	Pass
NVNT	1-DH1	2480	Ant1	0.9674	Pass
NVNT	2-DH1	2402	Ant1	1.228	Pass
NVNT	2-DH1	2441	Ant1	1.249	Pass
NVNT	2-DH1	2480	Ant1	1.265	Pass
NVNT	3-DH1	2402	Ant1	1.221	Pass
NVNT	3-DH1	2441	Ant1	1.236	Pass
NVNT	3-DH1	2480	Ant1	1.279	Pass



-20dB Bandwidth NVNT 1-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 1-DH1 2441MHz Ant1



-20dB Bandwidth NVNT 1-DH1 2480MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2441MHz Ant1



-20dB Bandwidth NVNT 2-DH1 2480MHz Ant1



-20dB Bandwidth NVNT 3-DH1 2402MHz Ant1



-20dB Bandwidth NVNT 3-DH1 2441MHz Ant1



Occupied Channel Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	1-DH1	2402	Ant1	0.91088
NVNT	1-DH1	2441	Ant1	0.91875
NVNT	1-DH1	2480	Ant1	0.89333
NVNT	2-DH1	2402	Ant1	1.1638
NVNT	2-DH1	2441	Ant1	1.158
NVNT	2-DH1	2480	Ant1	1.1596
NVNT	3-DH1	2402	Ant1	1.17
NVNT	3-DH1	2441	Ant1	1.1423
NVNT	3-DH1	2480	Ant1	1.1673



OBW NVNT 1-DH1 2402MHz Ant1



OBW NVNT 1-DH1 2441MHz Ant1



OBW NVNT 1-DH1 2480MHz Ant1



OBW NVNT 2-DH1 2402MHz Ant1



OBW NVNT 2-DH1 2441MHz Ant1



OBW NVNT 2-DH1 2480MHz Ant1



OBW NVNT 3-DH1 2402MHz Ant1



OBW NVNT 3-DH1 2441MHz Ant1



Carrier Frequencies Separation

Condition	Mode	Antenna	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH1	Ant1	2402	2402.806	0.806	0.652	Pass
NVNT	1-DH1	Ant1	2441.07	2441.98	0.91	0.641	Pass
NVNT	1-DH1	Ant1	2478.966	2480.024	1.058	0.645	Pass
NVNT	2-DH1	Ant1	2401.988	2402.986	0.998	0.819	Pass
NVNT	2-DH1	Ant1	2440.986	2441.986	1	0.833	Pass
NVNT	2-DH1	Ant1	2478.976	2479.976	1	0.843	Pass
NVNT	3-DH1	Ant1	2401.99	2402.988	0.998	0.814	Pass
NVNT	3-DH1	Ant1	2440.992	2441.98	0.988	0.824	Pass
NVNT	3-DH1	Ant1	2478.802	2479.974	1.172	0.853	Pass



CFS NVNT 1-DH1 2402MHz Ant1



CFS NVNT 1-DH1 2441MHz Ant1



CFS NVNT 1-DH1 2480MHz Ant1



CFS NVNT 2-DH1 2402MHz Ant1



CFS NVNT 2-DH1 2441MHz Ant1




CFS NVNT 2-DH1 2480MHz Ant1



CFS NVNT 3-DH1 2402MHz Ant1




CFS NVNT 3-DH1 2441MHz Ant1

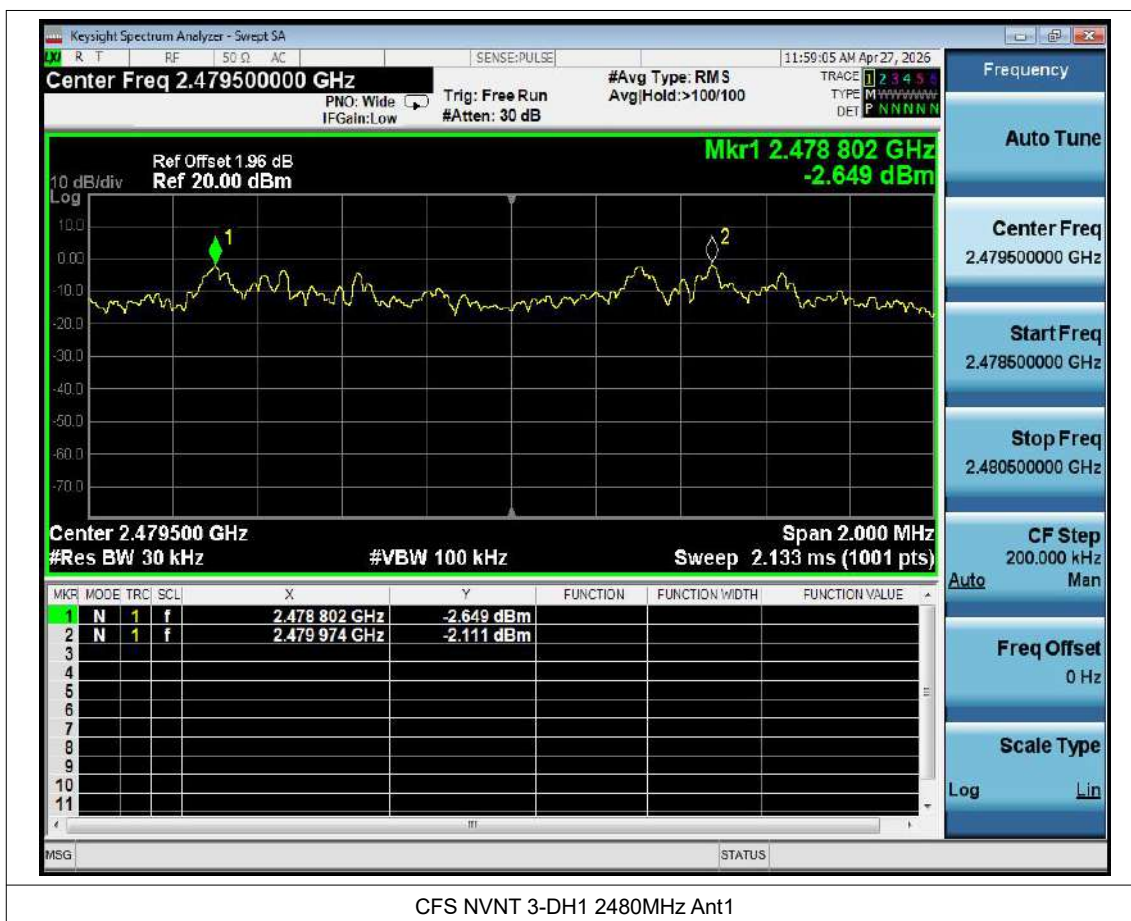


Number of Hopping Channel


Condition	Mode	Antenna	Hopping Number	Limit	Verdict
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass

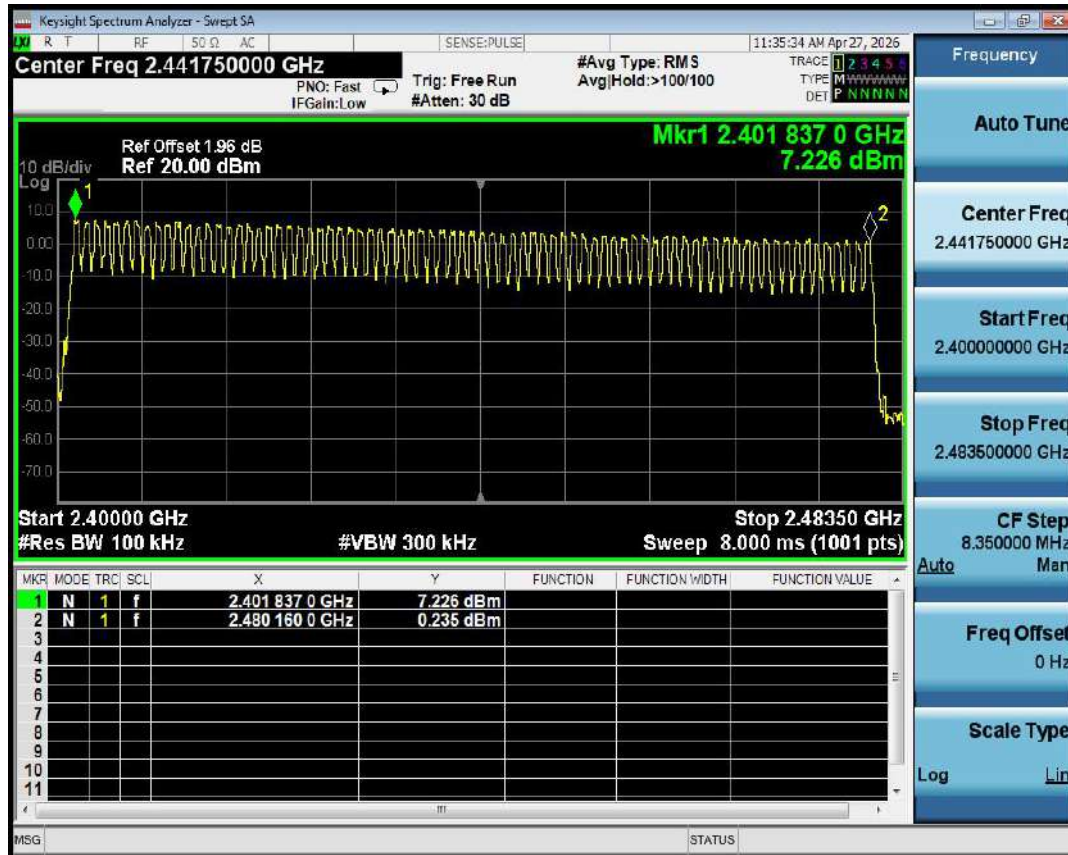


Hopping No. NVNT 1-DH1 2402MHz Ant1

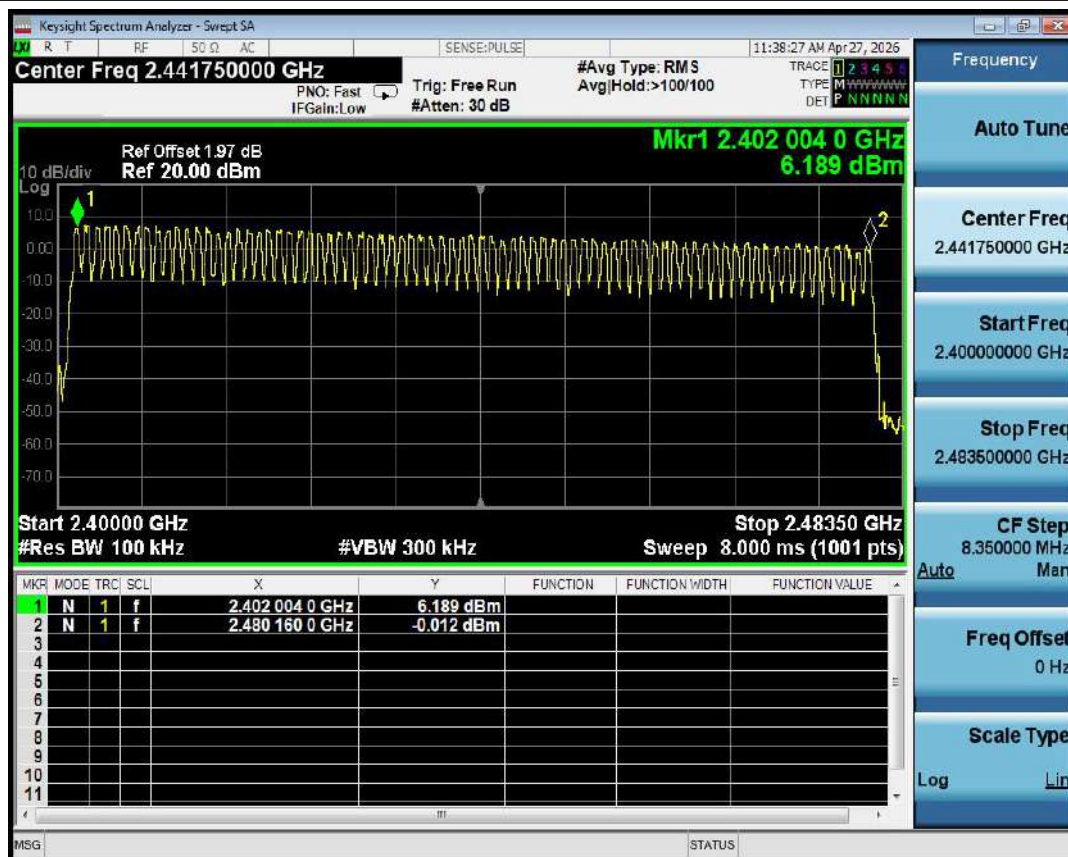


Hopping No. NVNT 1-DH1 2441MHz Ant1

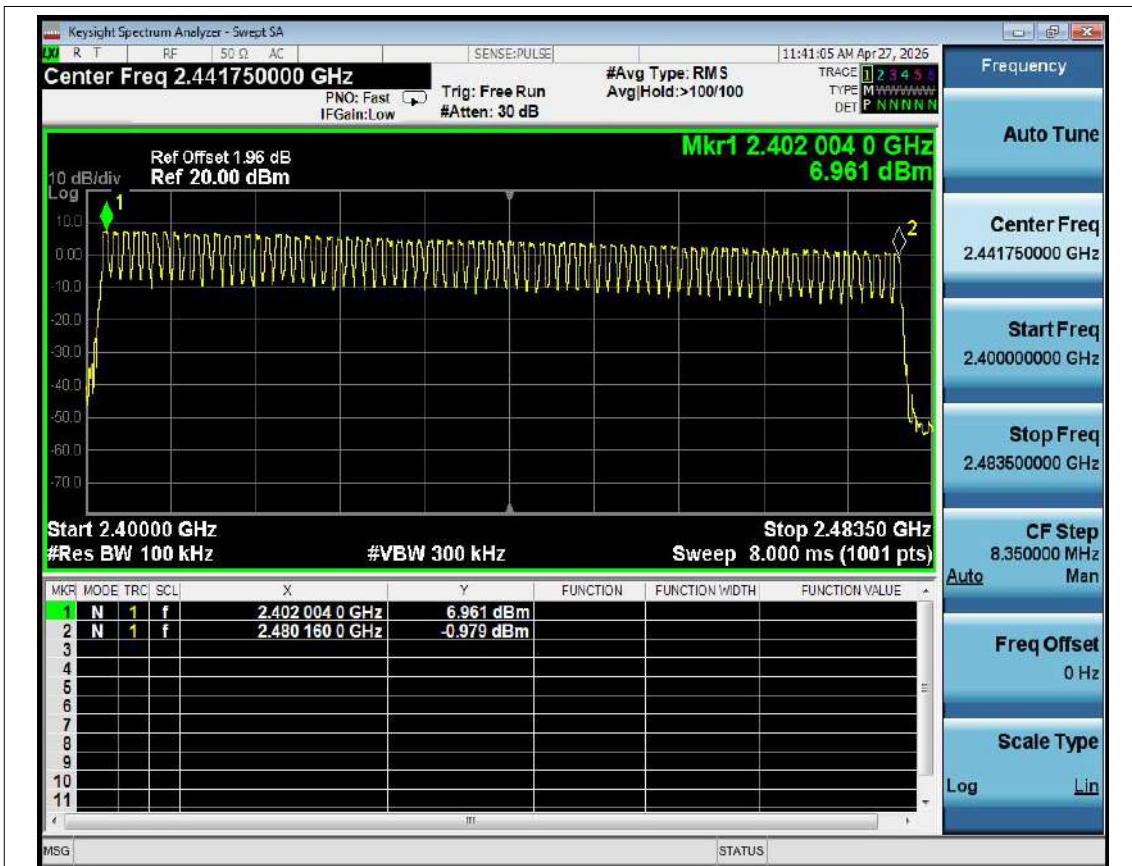


Hopping No. NVNT 1-DH1 2480MHz Ant1

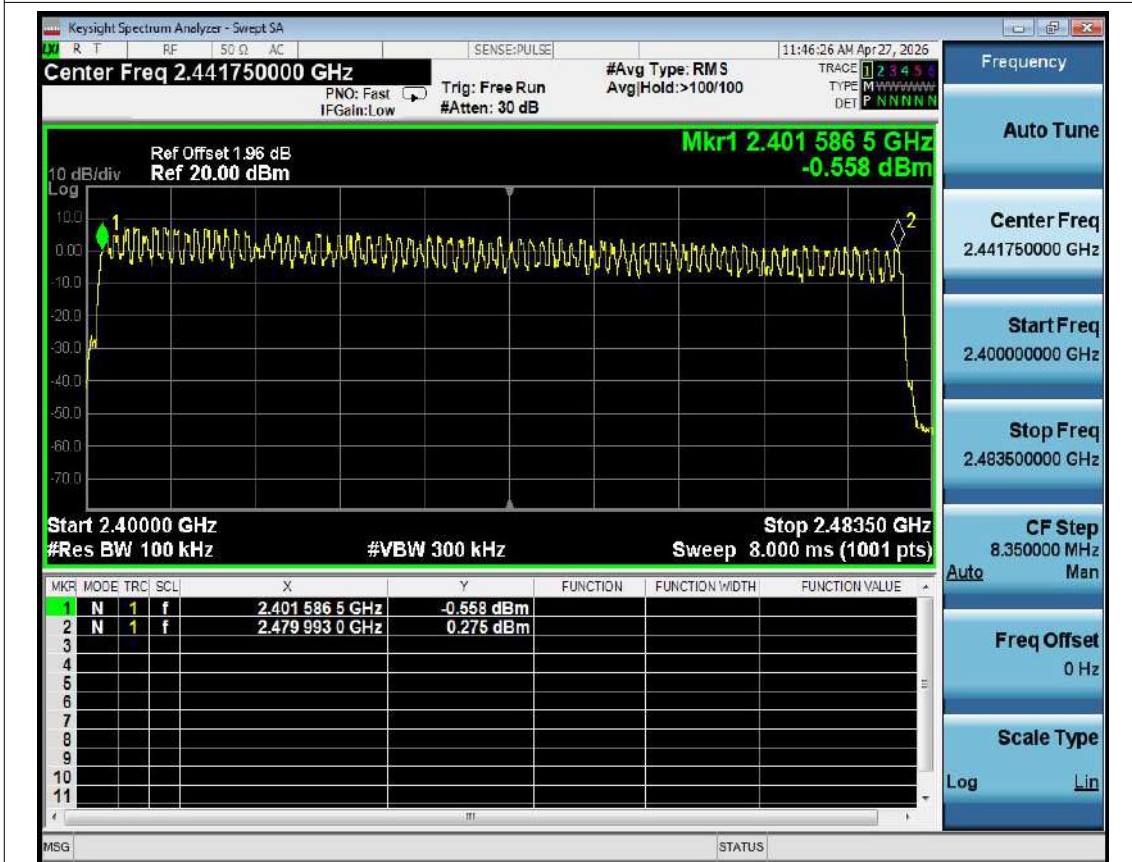


Hopping No. NVNT 2-DH1 2402MHz Ant1

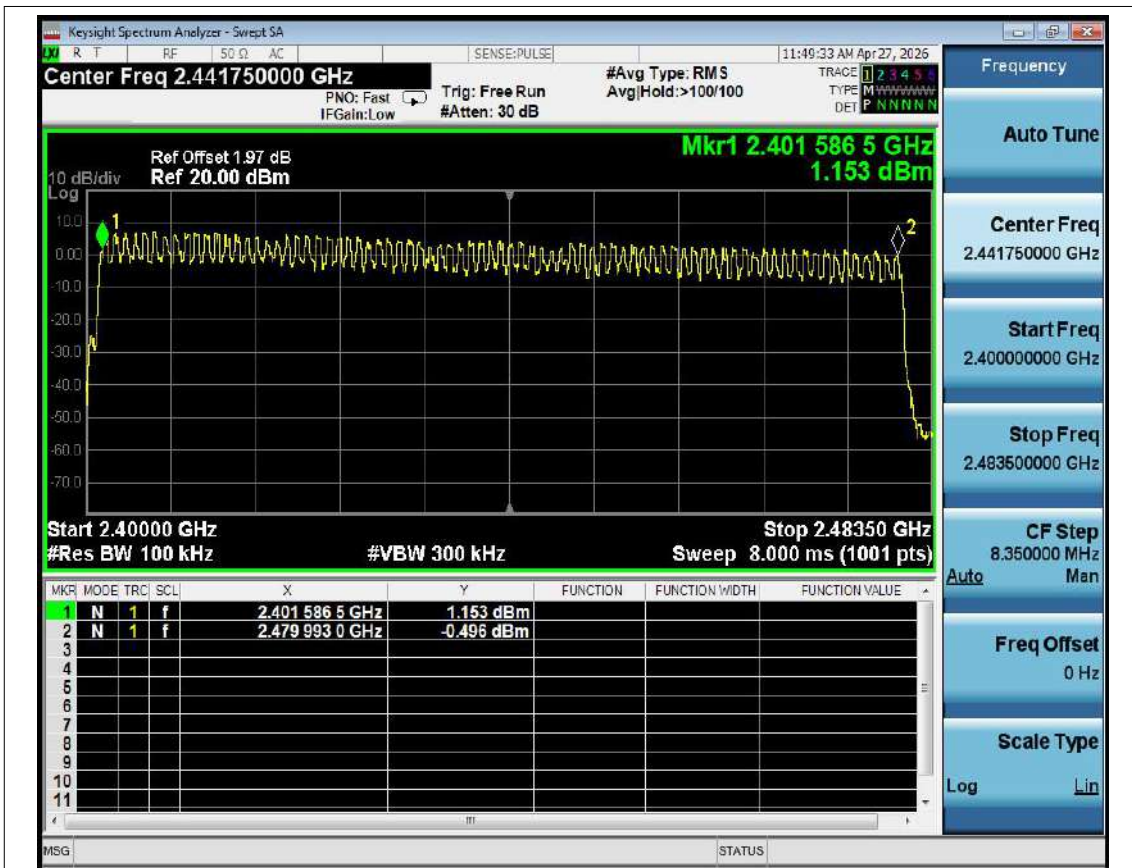


Hopping No. NVNT 2-DH1 2441MHz Ant1

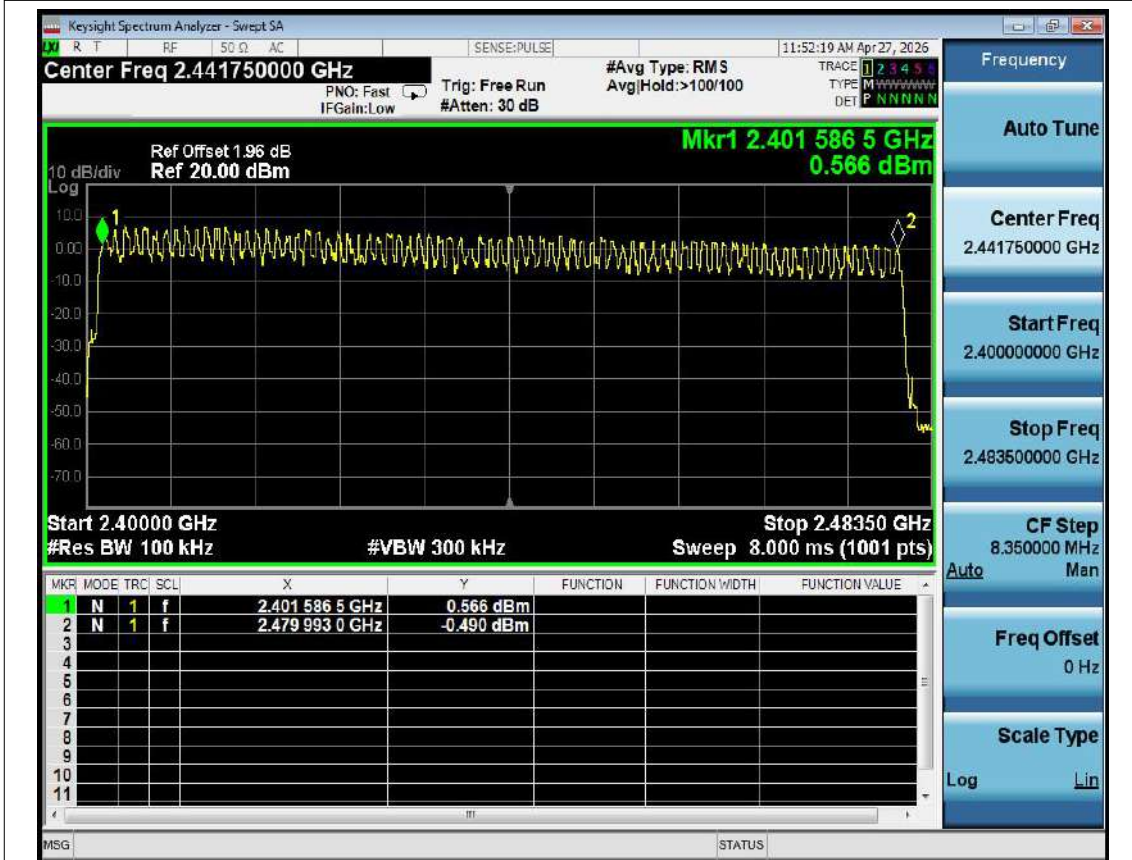

Hopping No. NVNT 2-DH1 2480MHz Ant1

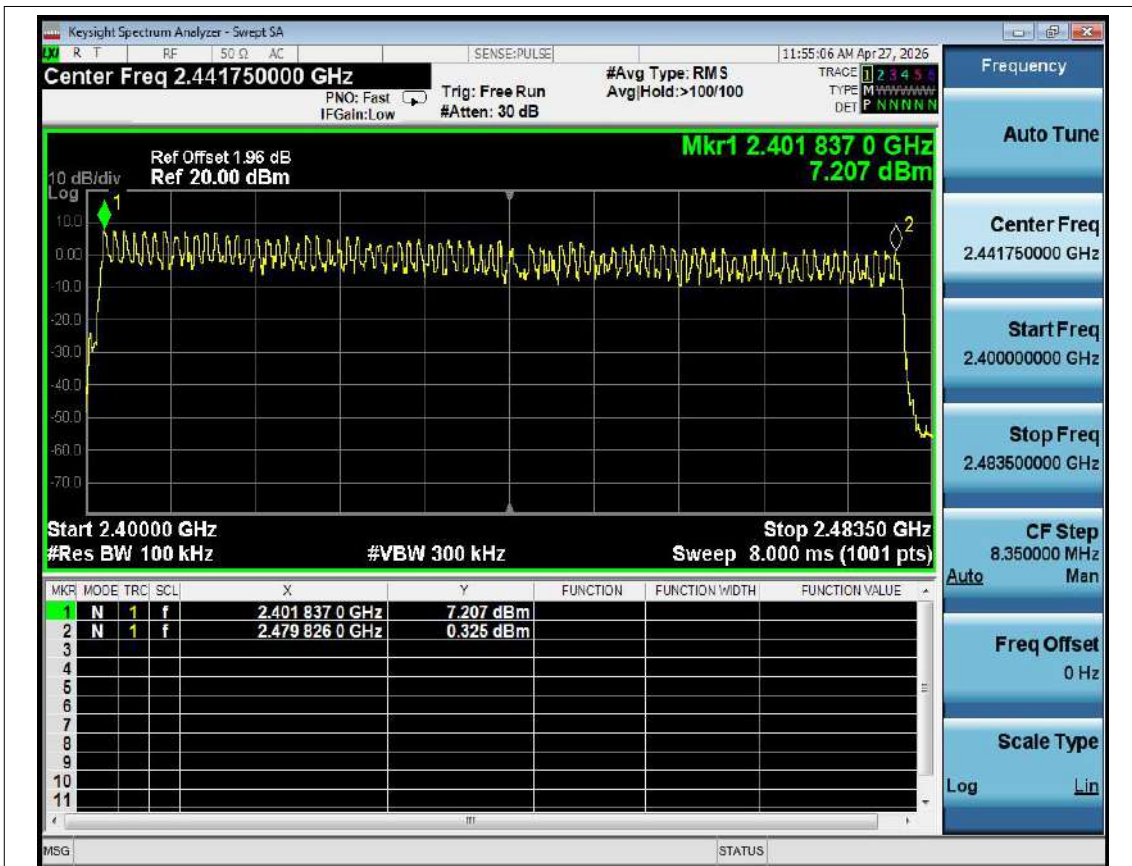

Hopping No. NVNT 3-DH1 2402MHz Ant1

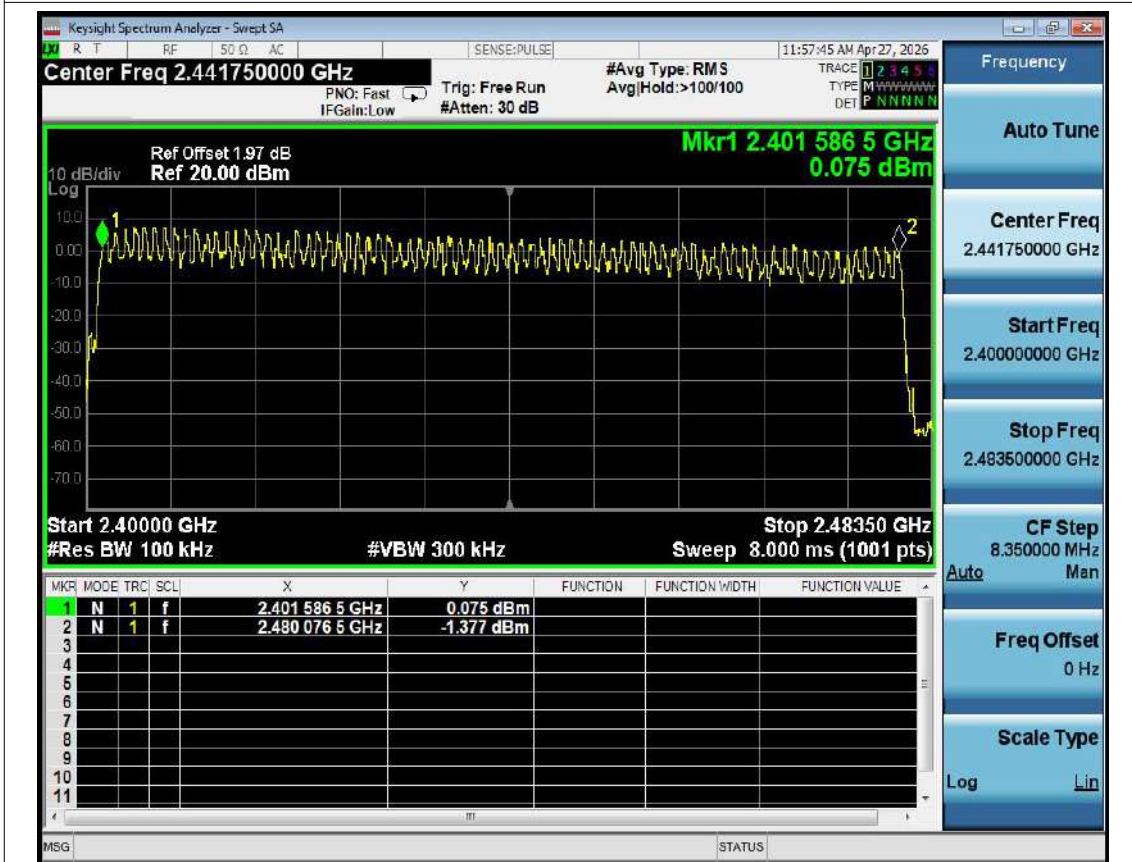

Hopping No. NVNT 3-DH1 2441MHz Ant1