

# User Manual

AINUOHUA

NAME: Smart Cat Litter Box

MODEL: C-02

Guangdong Well Technology Co., Ltd.

Before using this product, please read the manual carefully and keep it safe.

# Contents

|     |                                               |    |
|-----|-----------------------------------------------|----|
| 1.  | User Safety Guide .....                       | 1  |
| 2.  | Packing List .....                            | 2  |
| 3.  | Assembly Instruction .....                    | 2  |
| 4.  | Control Panel and Operations .....            | 5  |
| 5.  | Safety Features .....                         | 6  |
| 6.  | Product Cleaning and Maintenance .....        | 6  |
| 7.  | Installation App and Network Connection ..... | 8  |
| 8.  | Troubleshooting .....                         | 10 |
| 9.  | Product Specifications .....                  | 10 |
| 10. | Warranty Terms .....                          | 10 |

# 1. User Safety Guide

- Place the litter box on a flat, hard surface. Avoid placing it on carpet as this may affect the weight sensors' detection.
- This product is suitable for cats over 6 months old or weighing between 1.5 to 6 kg. For kittens under 6 months old or weighing less than 1.5 kg, please use the kitten mode.
- Always turn off the power before maintenance.
- Check the litter level in the drum regularly, add more if it is too low.
- Clean the litter clumps in the trash bin every 3 days.
- Do not expose the product to high temperatures, humidity, or direct sunlight.
- To avoid damaging the weight sensors, do not drag the litter box during movement. Lift it carefully instead.
- Do not use third-party power adapters, as they may cause damage to the product and pose potential safety risks.
- If the included power adapter is damaged, please contact us for a replacement.
- Children should use this product under adult supervision.
- Do not place heavy objects on top of the product, as this may affect its normal operation.
- Repairs should be conducted under the guidance of professionals.
- If you encounter any problems during use, please contact us immediately.

## Cat Litter Compatibility

- This litter box is compatible with most types of cat litter, such as bentonite litter, mineral litter, etc.
- Note: It is not recommended to use cat litter with lengths/diameters exceeding 6 mm (especially long, strip-shaped tofu litter), as it may not pass smoothly through the litter filter screen.


## Cat Litter Box Replacement Recommendation

- Transfer some used litter (if any) from the old box to the new one to help your cat adapt faster.

## 2.Packing List



Litter Box X1

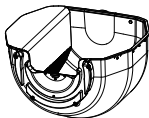

Drum X1



Trash Bin X1



Fragrance X1



Foot Pads X4



Garbage Bag X1




Adapter X1




Manual X1

## 3.Assembly Instruction

### ① Components:

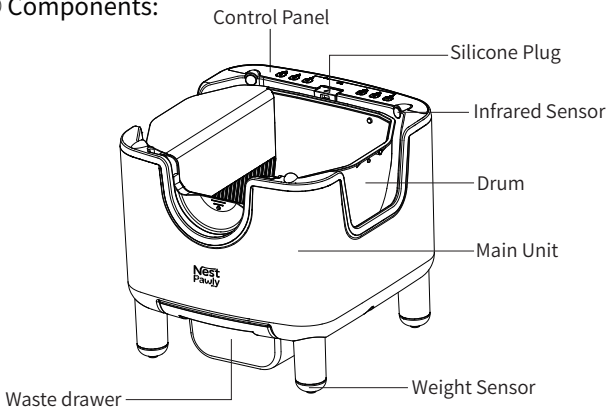


## ② Assembling the Foot Pads

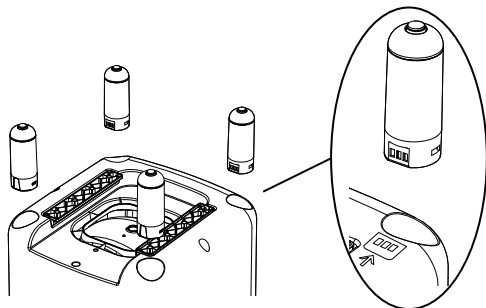


 **Note:** Ensure the markings align and the foot pads are fully inserted.


## ③ Assembling the Trash Bag

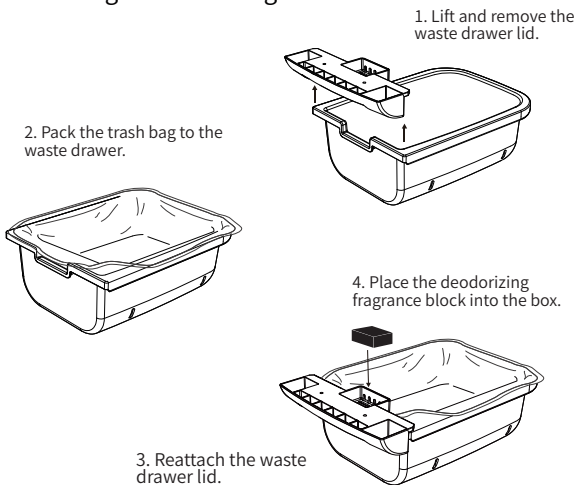

#### ④ Inserting the Trash Bin into Main Unit

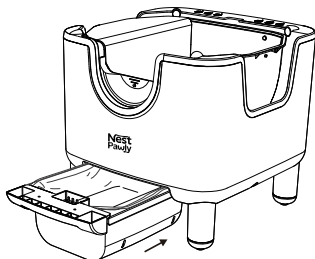


#### ⑤ Adding Cat Litter

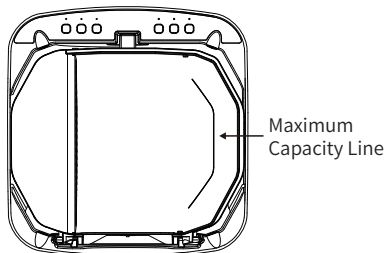

⚠ Pour cat litter into the drum. Make sure the litter does not exceed the maximum capacity line.

#### ⑥ Rear Power Interface and Switch

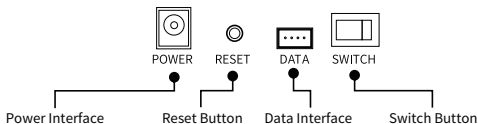


#### ⑦ Powering On

Plug in the power and turn on the switch. After the device self-checks (about 2 seconds), you can start using it.

⚠ Note: Do not coil the power cord under the base and keep it away from cats.

## 4. Control Panel and Operations

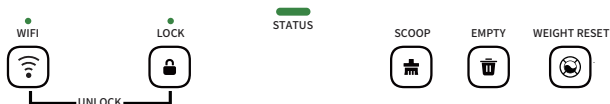

### ● Wi-Fi Network Setup

Press and hold the Wi-Fi button for 5 seconds to enter network setup mode. Follow the steps to install the app and complete network setup.

### ● Child Lock

Press and hold the “LOCK” button for 3 seconds or after 5 minutes of inactivity, it will enter child lock mode. The light will turn on.

### ● LOCK + Wi-Fi Unlock

Press and hold both the “LOCK” and “Wi-Fi” buttons for 3 seconds to unlock. The LOCK light will turn off.

### ● Scoop Clean

Press this button briefly to clean the cat litter clumps.

### ● Empty

Press this button to empty the litter into the trash bin.

### ● Weight Reset

After adding litter, press this button to reset the weight.

### ● Reset (Scoop + Weight Reset)

Press and hold the “RESET” button or press and hold “SCOOP + WEIGHT RESET” for 3 seconds to reset the device.

## Status Indicator Light

- ① **Solid white:** Normal state.
- ② **Flashing white:** The trash bin is not properly placed.
- ③ **Solid yellow:** Pause or protection mode.
- ④ **Flashing yellow:** The pet is using the litter box.



### Cautions

This device features multiple safety protections, such as infrared and pressure sensors. During operation, if a cat or person approaches (about 1.5 meters), the device will pause and resume after about 10 seconds once the protection is cleared.

## 5. Safety Features

### ● Infrared Sensor

If the infrared sensor detects a cat near the device during cleaning or emptying, the product will stop until the cat moves away from the sensor's range. After 10 seconds, the product will resume.

### ● Weight Sensor

If the weight sensor detects a weight change, the product will stop and resume after 10 seconds once the weight is cleared.


### ● Anti-Crushing Safety Sensor

During operation, if the drum detects resistance to rotation, it will stop. After a 10-second pause, it will resume.


## 6. Product Cleaning and Maintenance

### ① Removing the Drum


First, remove the silicone plug and lift the drum upwards with both hands, as shown in the figure.

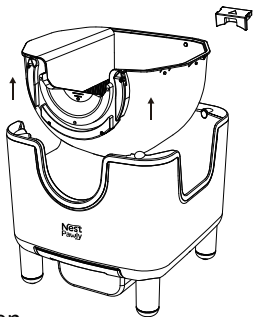

### ② Removing the Litter Filter Screen


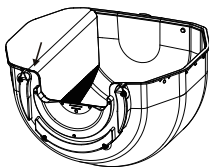


1. Pull apart in the direction of the arrow.

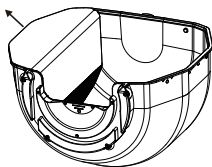

2. Remove the litter filter screen according to the arrow direction.


### ③ Installing the Litter Filter Screen

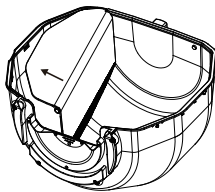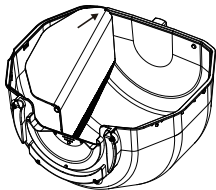

1. Align the arrow with the column.

2. Press the litter filter screen into place in the direction of the arrow.

### ④ Installing the Silicone Liner

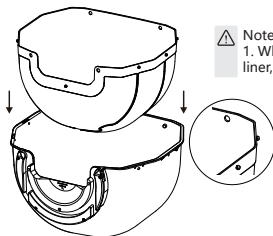


**Note:**  
1. When reinstalling the silicone liner, ensure all clips are secured.

**⚠** When installing the silicone liner, align it according to the direction shown in the diagram, insert the liner, and secure all the clips in place.

### ⑤ Cleaning the Drum


#### **Suggestions:**

1. Use wet wipes and deodorizing spray for daily cleaning.
2. Use a showerhead for deep cleaning.
3. Replace the silicone liner every six months to a year.

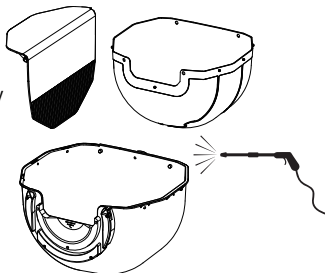


## ⑥ Cleaning the Main Unit

Wipe the main unit with a damp cloth.

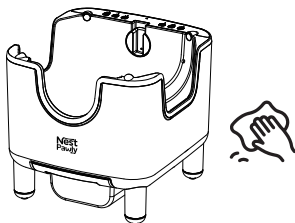

## ⑦ Installing and Assembling In Sequence

Note:  
1. When reinstalling the silicone liner, ensure all clips are secured.

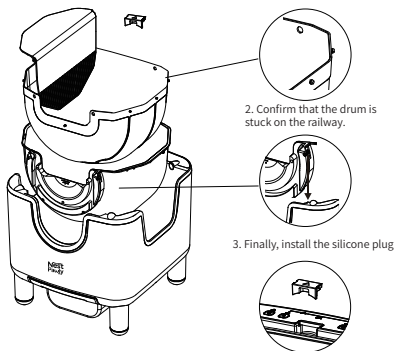

# 7. Installation App and Network Connection

⚠ Before network setup, confirm the Wi-Fi frequency band (only supports 2.4 GHz).

① Scan the QR code on the back or search for “SmartLife” in app stores to download the app.



Download QR Code (China)



Download QR Code (Global)



SmartLifeApp

- ② Long press the Wi-Fi button for 5 seconds to enter network setup mode, and the Wi-Fi indicator will be solid blue.
- ③ Add Device: Once the device enters setup mode, open the “SmartLife” app, and click the “+” icon in the top-right corner to add the device.
  - \* Before network setup, make sure to turn on your phone’s Wi-Fi and Bluetooth.
- ④ After entering the correct Wi-Fi password, the device will be automatically detected. Select “Add” and complete the process. Once the device is successfully connected, the Wi-Fi indicator will turn green.



Registration is required during first-time setup.



Tap the “+” icon in the top-right corner to add a device.



Enter your Wi-Fi password.



Searching for the device.



Select “Add Device”



Complete the setup.

## 8.Troubleshooting

| Abnormality               | Solution                                                                                                                                                                                                                                                             |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The drum is stuck mid-way | 1. Check if the litter exceeds 5.5 kg. If it is overweight, reset the device and reduce the litter to below 5.5 kg.<br>2. Check for any foreign objects obstructing the device. If there are any, power off the device, remove the object, and restart.              |
| White light blinking      | Check if the trash bin is properly seated. If not, push the trash bin all the way in.                                                                                                                                                                                |
| Solid yellow              | The device is in a protection state.<br>This includes infrared protection, gravity protection, and current protection. After the protection is lifted within 10 seconds, the device will automatically resume operation.                                             |
| Flashing yellow           | The device will automatically return to normal operation after the pet uses the litter box or 3 minutes after new litter is added.                                                                                                                                   |
| Weight error              | Disconnect the power and reconnect to restart the device.<br>Note: If the weight sensor is damaged, the device will no longer send cat toilet notifications and cannot perform automatic cleaning. You can manually press the "Clean" button on the device to clean. |

## 9.Product Specifications

|                     |                                 |
|---------------------|---------------------------------|
| Name                | Smart Litter Box                |
| Model               | NP-S9                           |
| Main Materials      | PP, ABS, POM                    |
| Rated Voltage       | DC12V/1A                        |
| Product Dimensions  | 20.1"×19.3"×25.2" (51×49×64 cm) |
| Toilet Space        | 13.8"×10.3"×5.2" (35×26×13 cm)  |
| Max Litter Capacity | 5L or 5.5 kg                    |
| Net Weight          | 23 lbs (10.5 kg)                |
| Trash Bin Volume    | 7.8L                            |

## 10.Warranty Terms

1. The warranty period for this product is one year.
2. The product is covered under warranty for functional damage not caused by human error.
3. Warranty services are not provided in the following situations:
  - Damage caused by force majeure, such as fire, flood, or lightning.
  - Damage caused by improper use, maintenance, or storage not in accordance with the user manual.
  - Damage caused by repair or service performed by unauthorized personnel.

# FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

# AINUOHUA

Guangdong Well Technology Co., Ltd.

Tangziling Section, Liantangmian Village, Sanhe Street, Huiyang  
District, Huizhou City, Guangdong Province, China