



7.8 Number of Hopping Channel

Condition	Mode	Antenna	Hopping Number	Limit	Verdict
NVNT	1-DH1	Ant1	79	15	Pass
NVNT	2-DH1	Ant1	79	15	Pass
NVNT	3-DH1	Ant1	79	15	Pass


Hopping No. NVNT 1-DH1 2441MHz Ant1

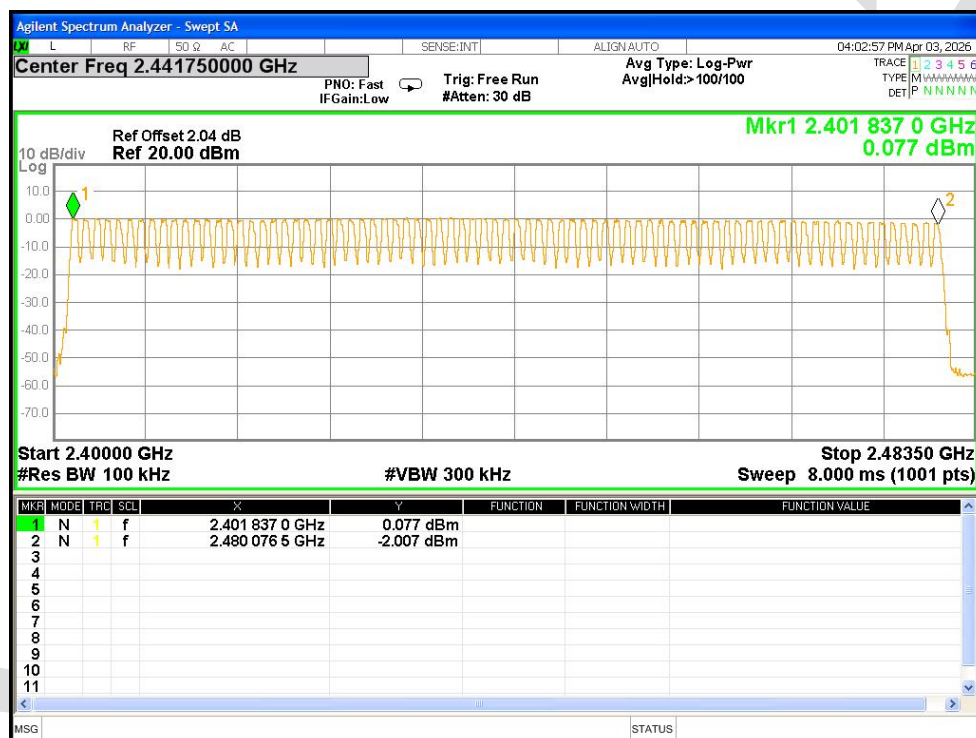

Hopping No. NVNT 2-DH1 2441MHz Ant1

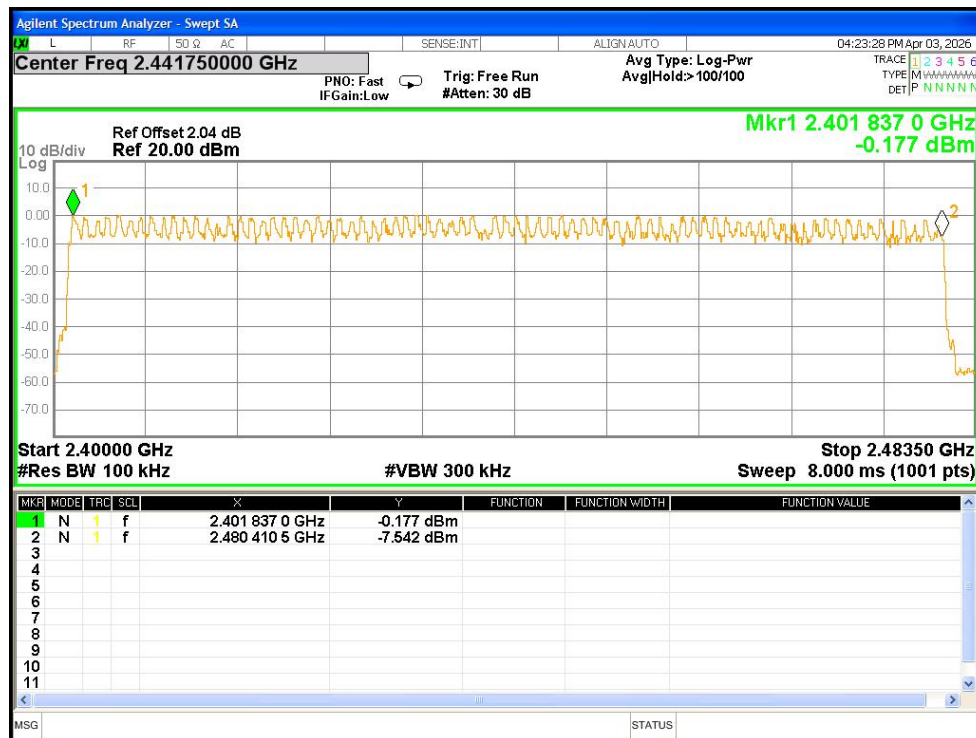

Hopping No. NVNT 3-DH1 2441MHz Ant1

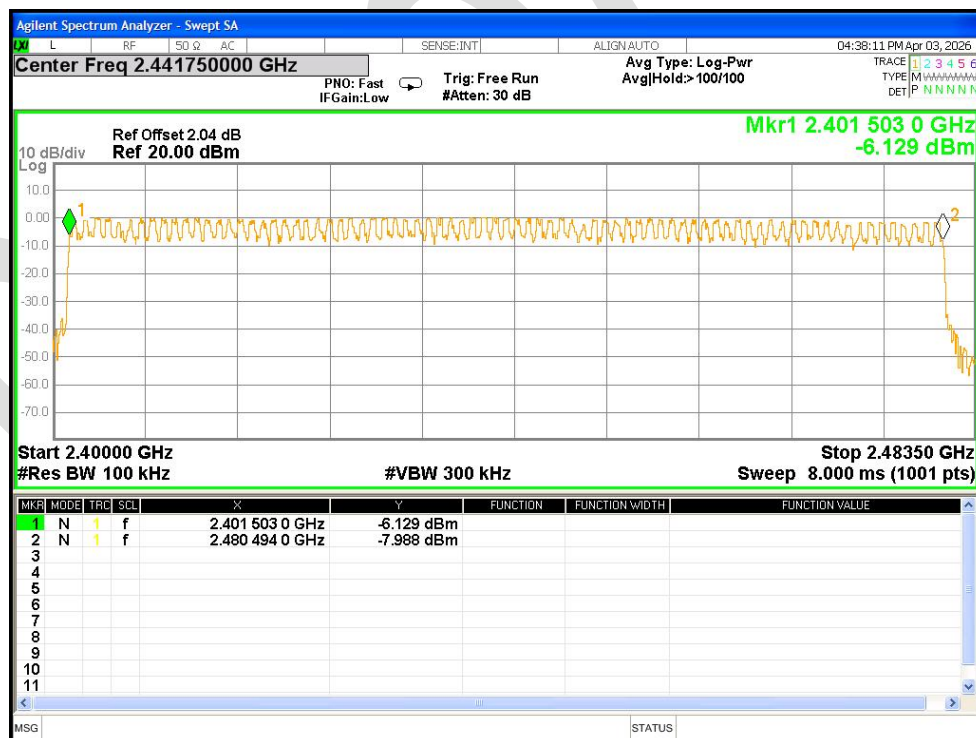


BlueAsia

7.9 Dwell Time

Condition	Mode	Frequency (MHz)	Antenna	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
NVNT	1-DH1	2441	Ant1	0.401	127.919	319	31600	400	Pass
NVNT	1-DH3	2441	Ant1	1.657	271.748	164	31600	400	Pass
NVNT	1-DH5	2441	Ant1	2.906	328.378	113	31600	400	Pass
NVNT	2-DH1	2441	Ant1	0.421	210.921	501	31600	400	Pass
NVNT	2-DH3	2441	Ant1	1.663	257.765	155	31600	400	Pass
NVNT	2-DH5	2441	Ant1	2.882	308.374	107	31600	400	Pass
NVNT	3-DH1	2441	Ant1	0.422	211.422	501	31600	400	Pass
NVNT	3-DH3	2441	Ant1	1.624	279.328	172	31600	400	Pass
NVNT	3-DH5	2441	Ant1	2.914	303.056	104	31600	400	Pass


Dwell NVNT 1-DH1 2441MHz Ant1 One Burst

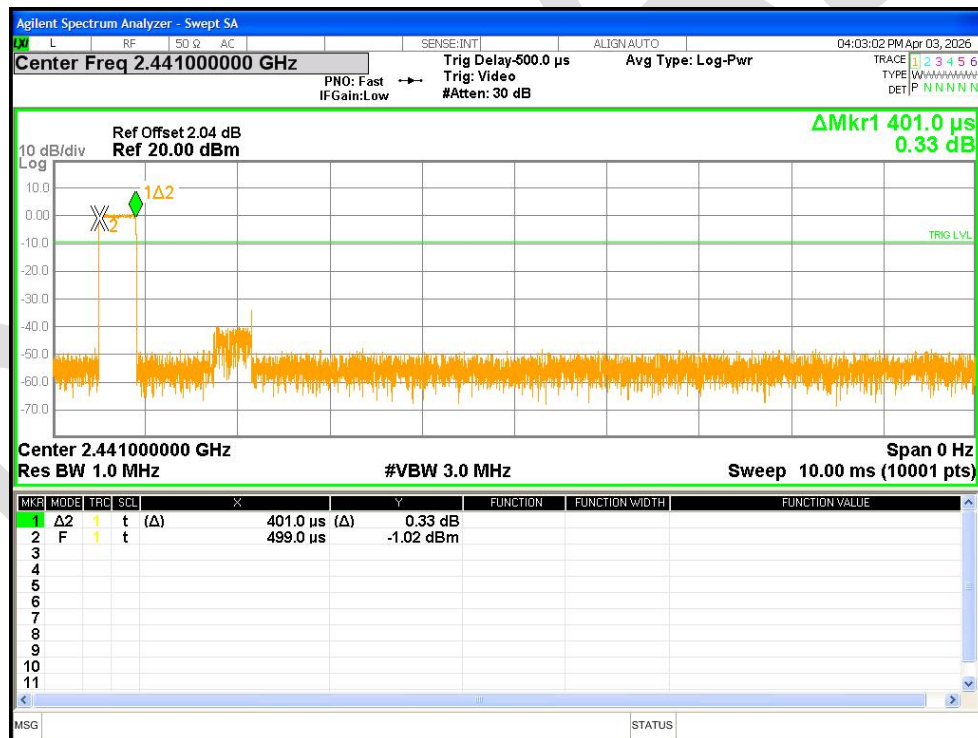


Dwell NVNT 1-DH1 2441MHz Ant1 Accumulated




Dwell NVNT 1-DH3 2441MHz Ant1 One Burst

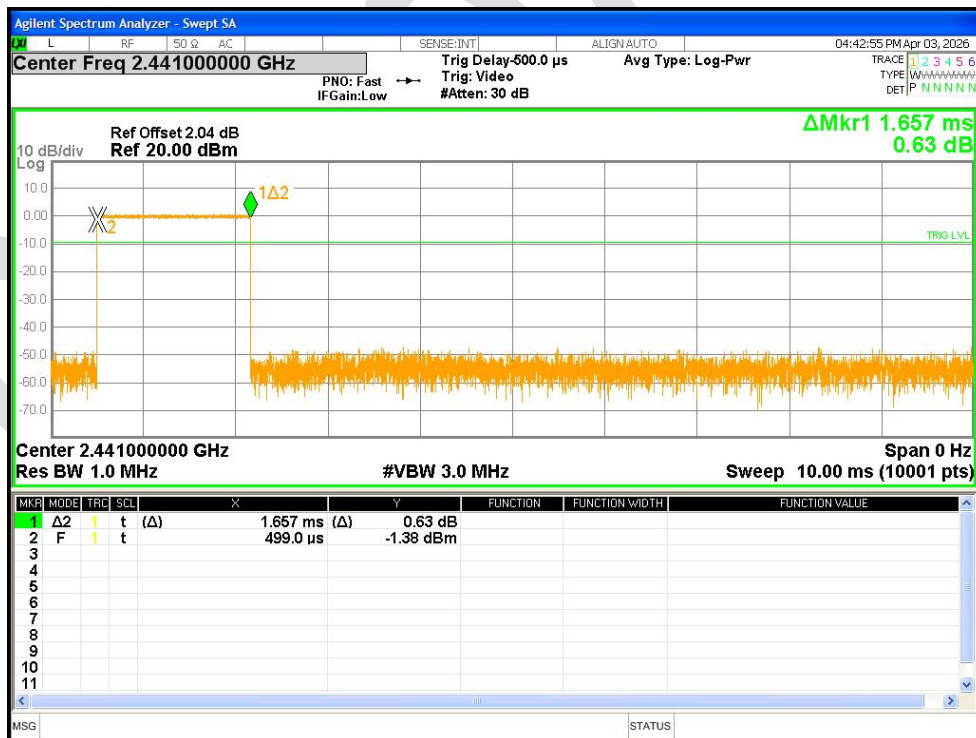


Dwell NVNT 1-DH3 2441MHz Ant1 Accumulated

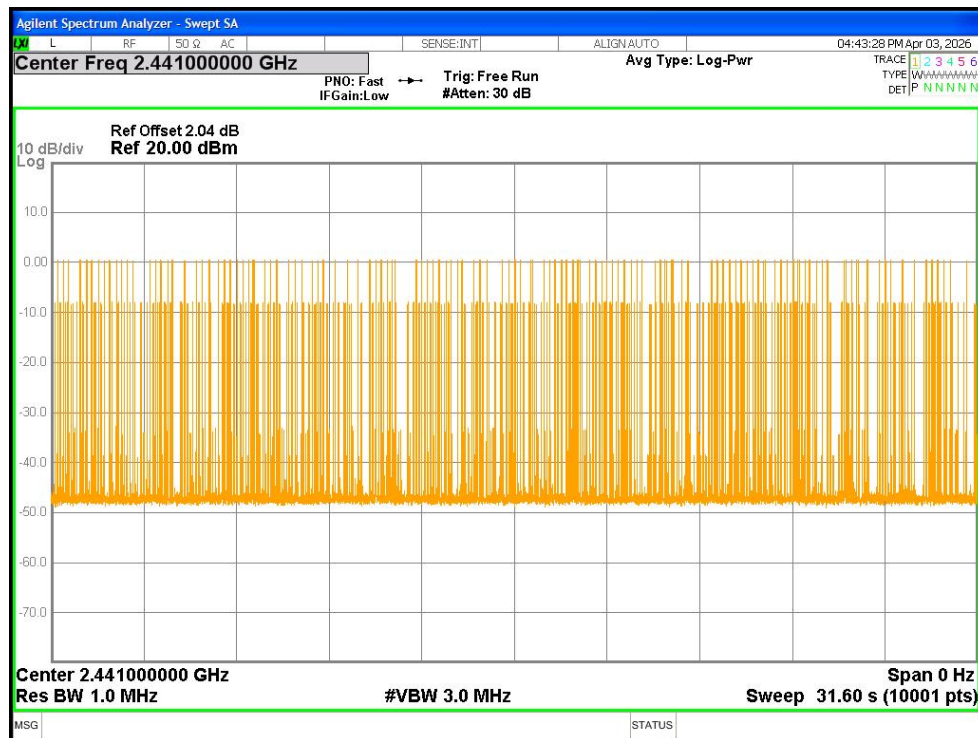


Dwell NVNT 1-DH5 2441MHz Ant1 One Burst

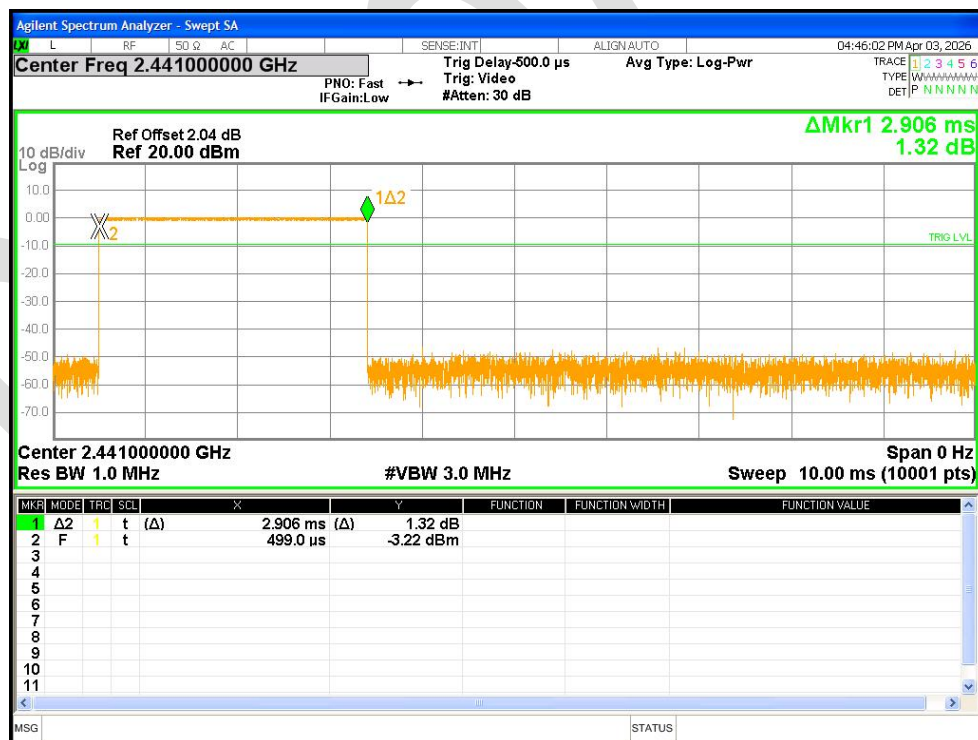


Dwell NVNT 1-DH5 2441MHz Ant1 Accumulated

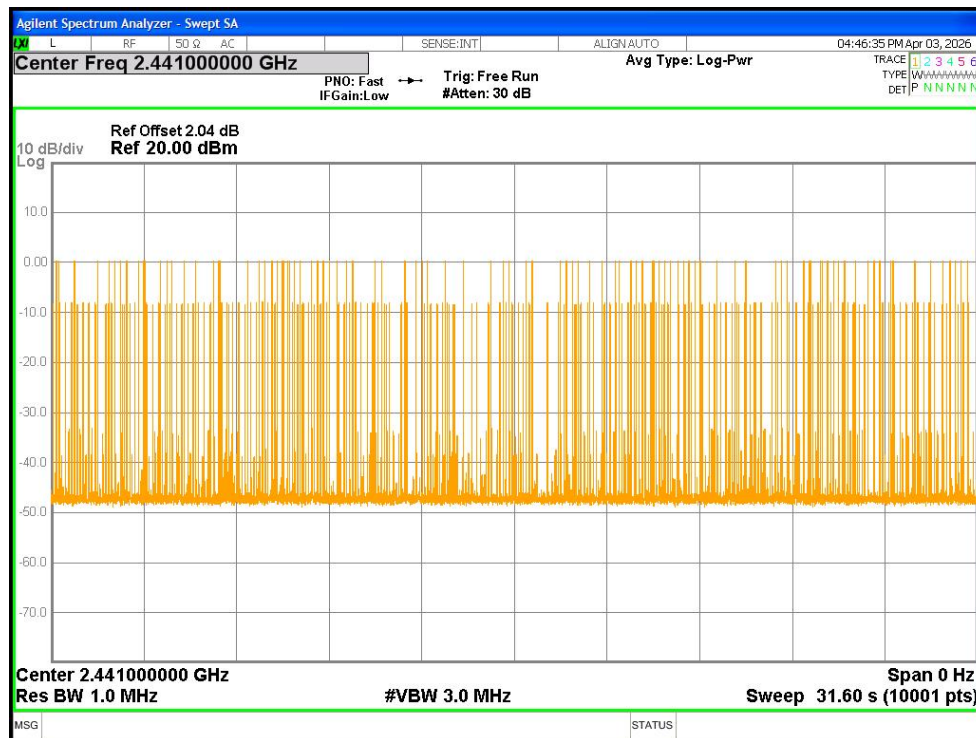


Dwell NVNT 2-DH1 2441MHz Ant1 One Burst

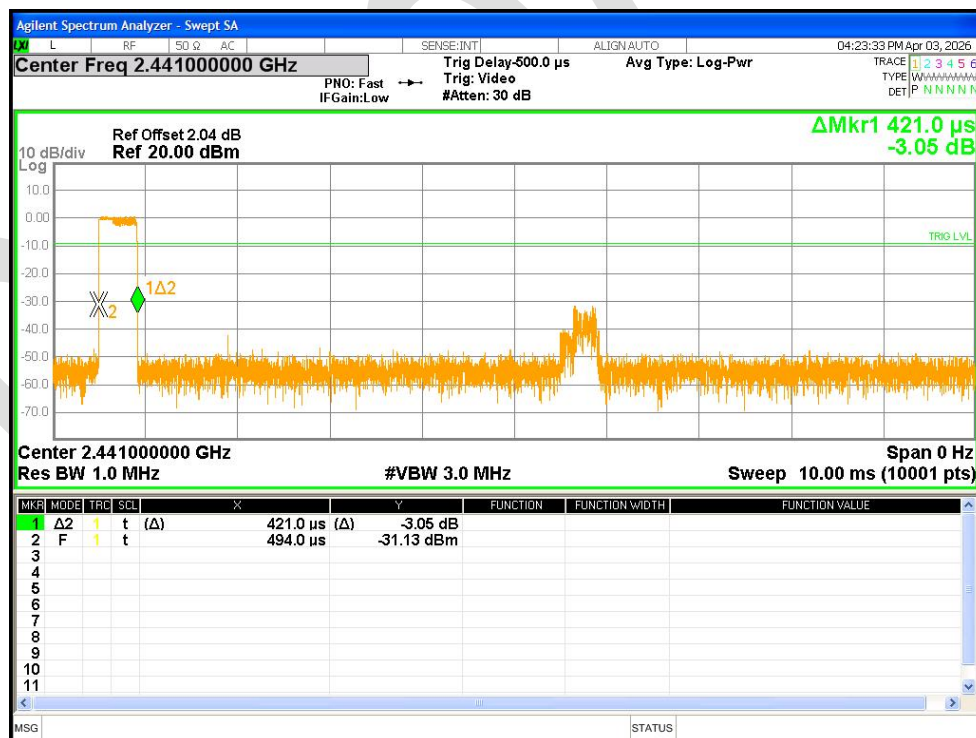


Dwell NVNT 2-DH1 2441MHz Ant1 Accumulated

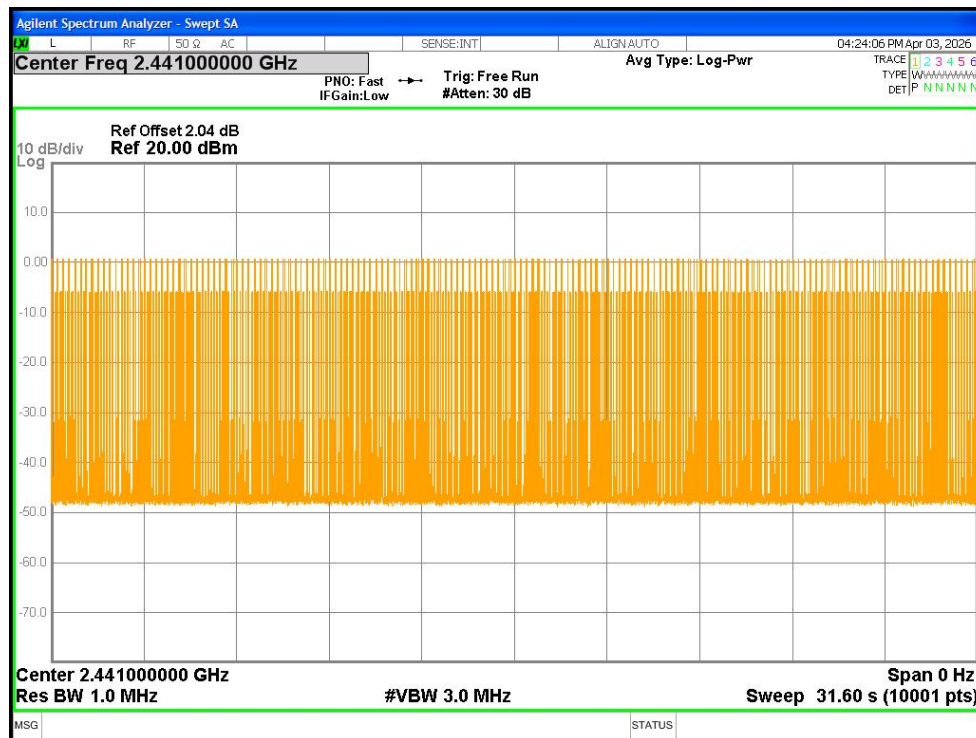

Dwell NVNT 2-DH3 2441MHz Ant1 One Burst

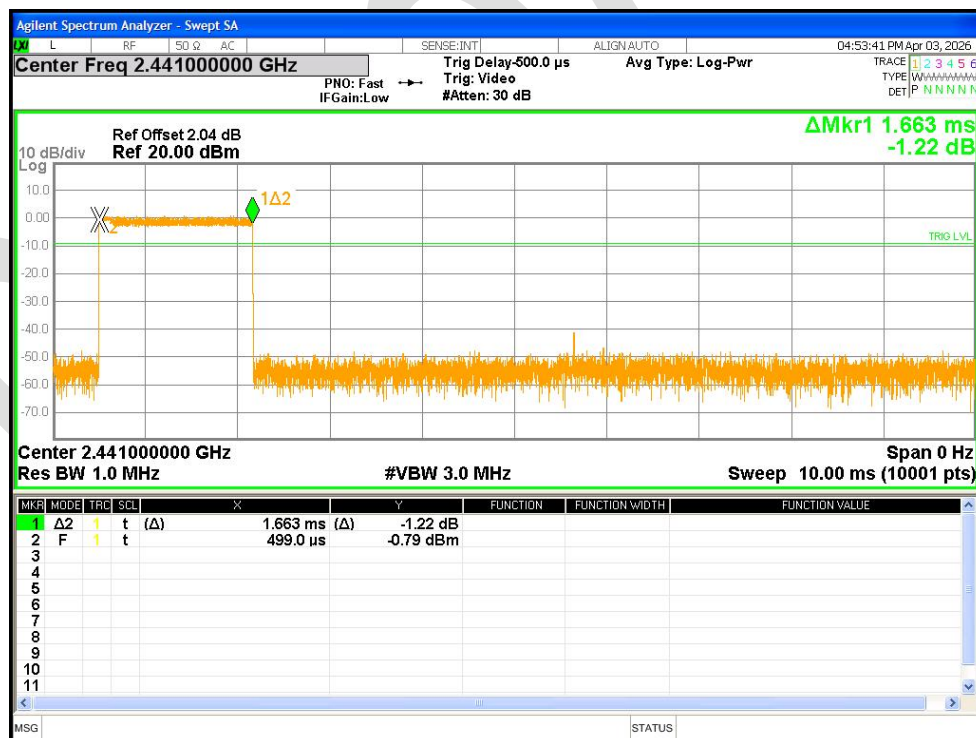


Dwell NVNT 2-DH3 2441MHz Ant1 Accumulated

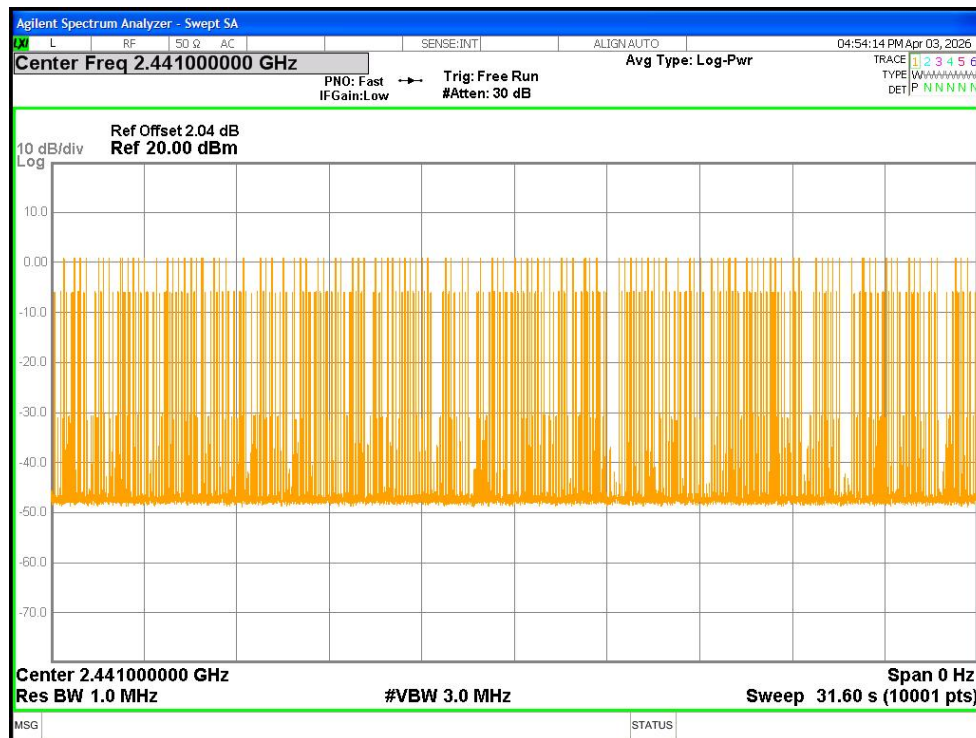


Dwell NVNT 2-DH5 2441MHz Ant1 One Burst



Dwell NVNT 2-DH5 2441MHz Ant1 Accumulated

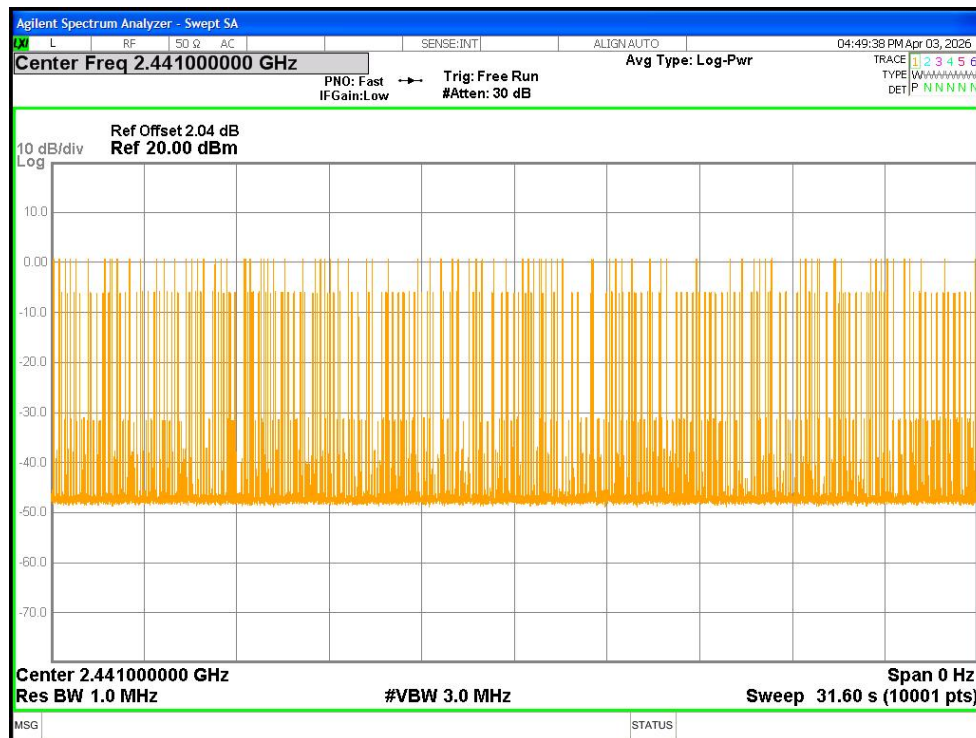

Dwell NVNT 3-DH1 2441MHz Ant1 One Burst

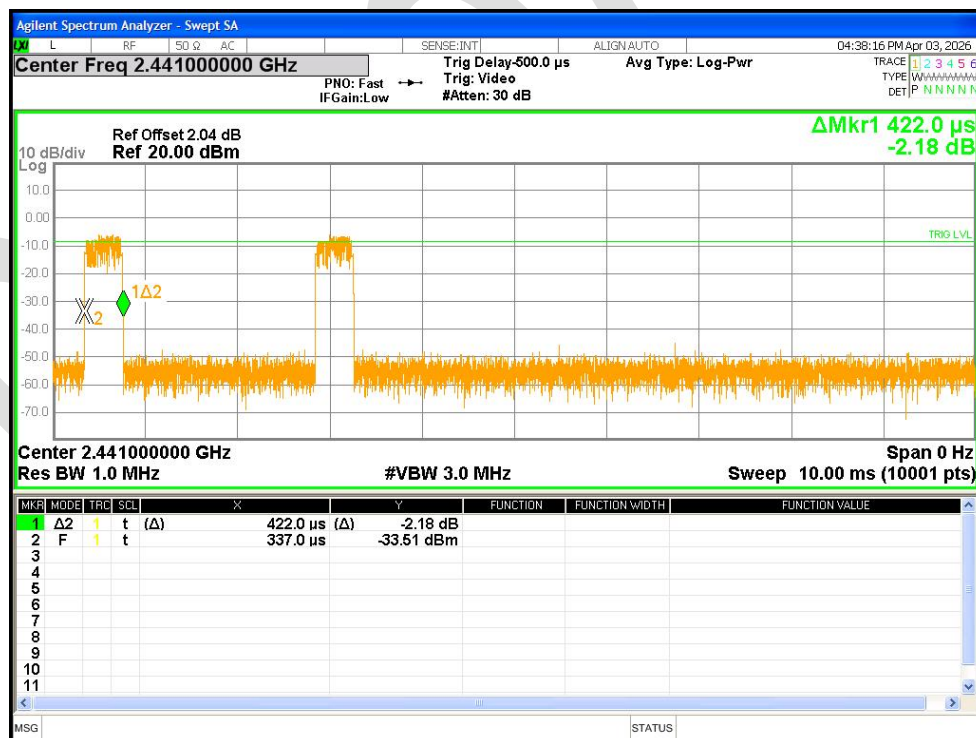

Dwell NVNT 3-DH1 2441MHz Ant1 Accumulated