



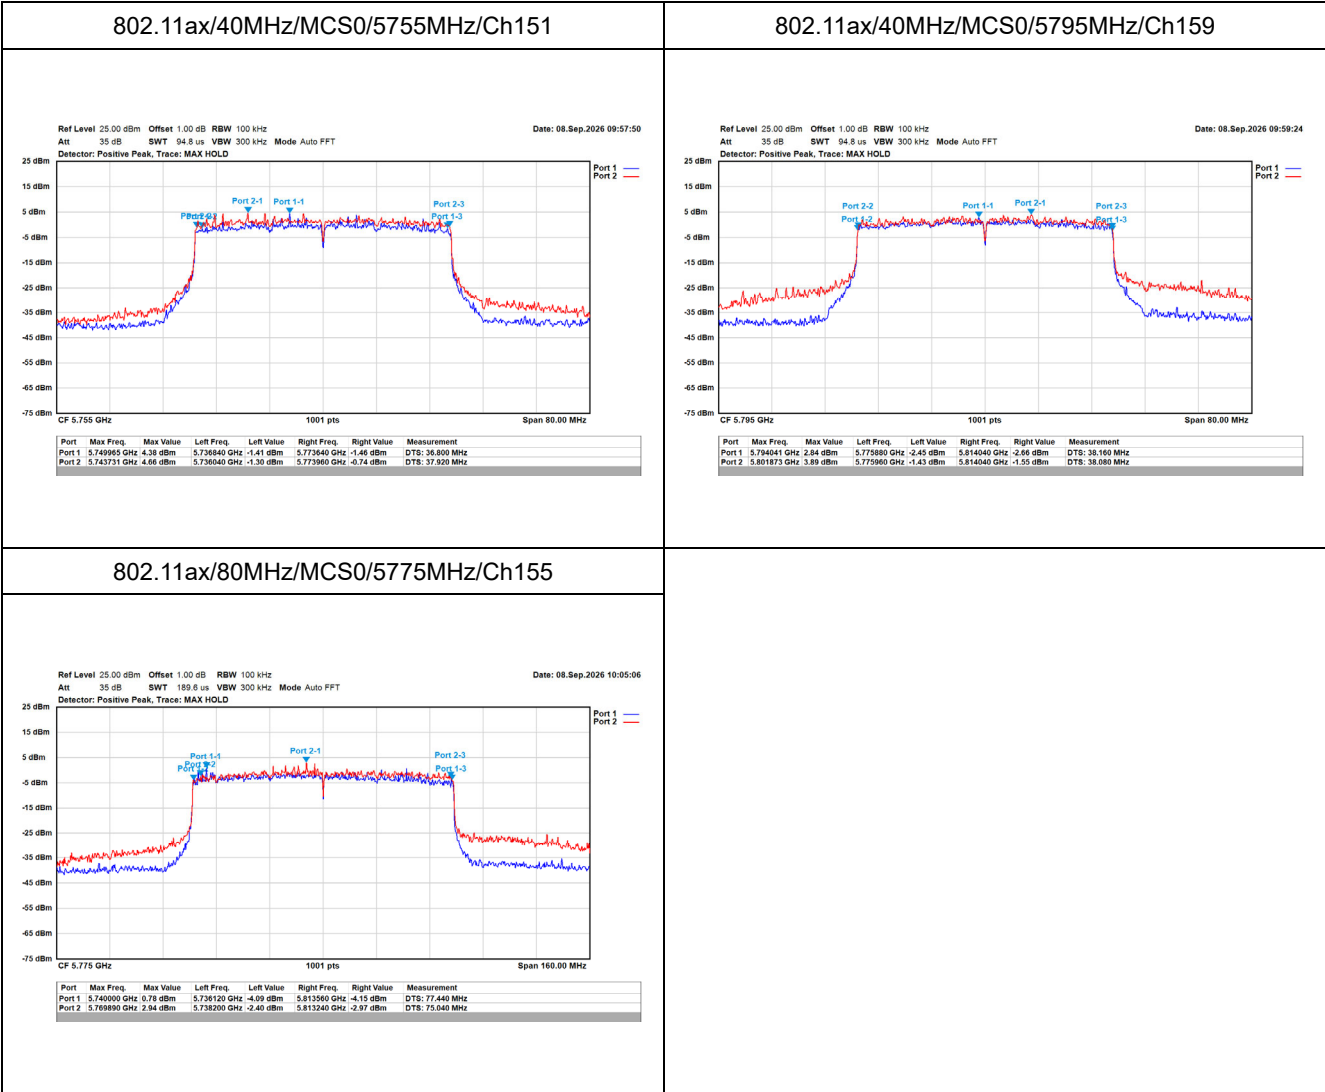



MAX BR2 Pro DX**Slave Mode**

Modulation	Frequency (MHz)	99% Occupied Bandwidth (MHz)		26dB Bandwidth (MHz)		Limit (MHz)
		Ant. 1	Ant. 2	Ant. 1	Ant. 2	99% Occupied Bandwidth & 26dB Bandwidth
802.11a (20MHz)	5180	16.38	16.34	20.32	20.32	-
	5220	16.38	16.38	20.52	20.48	-
	5240	16.38	16.38	20.24	20.44	-
Modulation	Frequency (MHz)	99% Occupied Bandwidth (MHz)		26dB Bandwidth (MHz)		Limit (MHz)
		Ant. 1	Ant. 2	Ant. 1	Ant. 2	99% Occupied Bandwidth & 26dB Bandwidth
802.11ax (20MHz)	5180	18.94	18.94	21.08	21.72	-
	5220	18.94	18.94	22.00	21.64	-
	5240	18.90	18.90	21.84	21.24	-
Modulation	Frequency (MHz)	99% Occupied Bandwidth (MHz)		26dB Bandwidth (MHz)		Limit (MHz)
		Ant. 1	Ant. 2	Ant. 1	Ant. 2	99% Occupied Bandwidth & 26dB Bandwidth
802.11ax (40MHz)	5190	37.80	37.72	40.64	40.48	-
	5230	37.64	37.88	40.72	40.64	-
Modulation	Frequency (MHz)	99% Occupied Bandwidth (MHz)		26dB Bandwidth (MHz)		Limit (MHz)
		Ant. 1	Ant. 2	Ant. 1	Ant. 2	99% Occupied Bandwidth & 26dB Bandwidth
802.11ax (80MHz)	5210	77.52	77.04	81.76	81.60	-


For 99% Occupied Bandwidth:

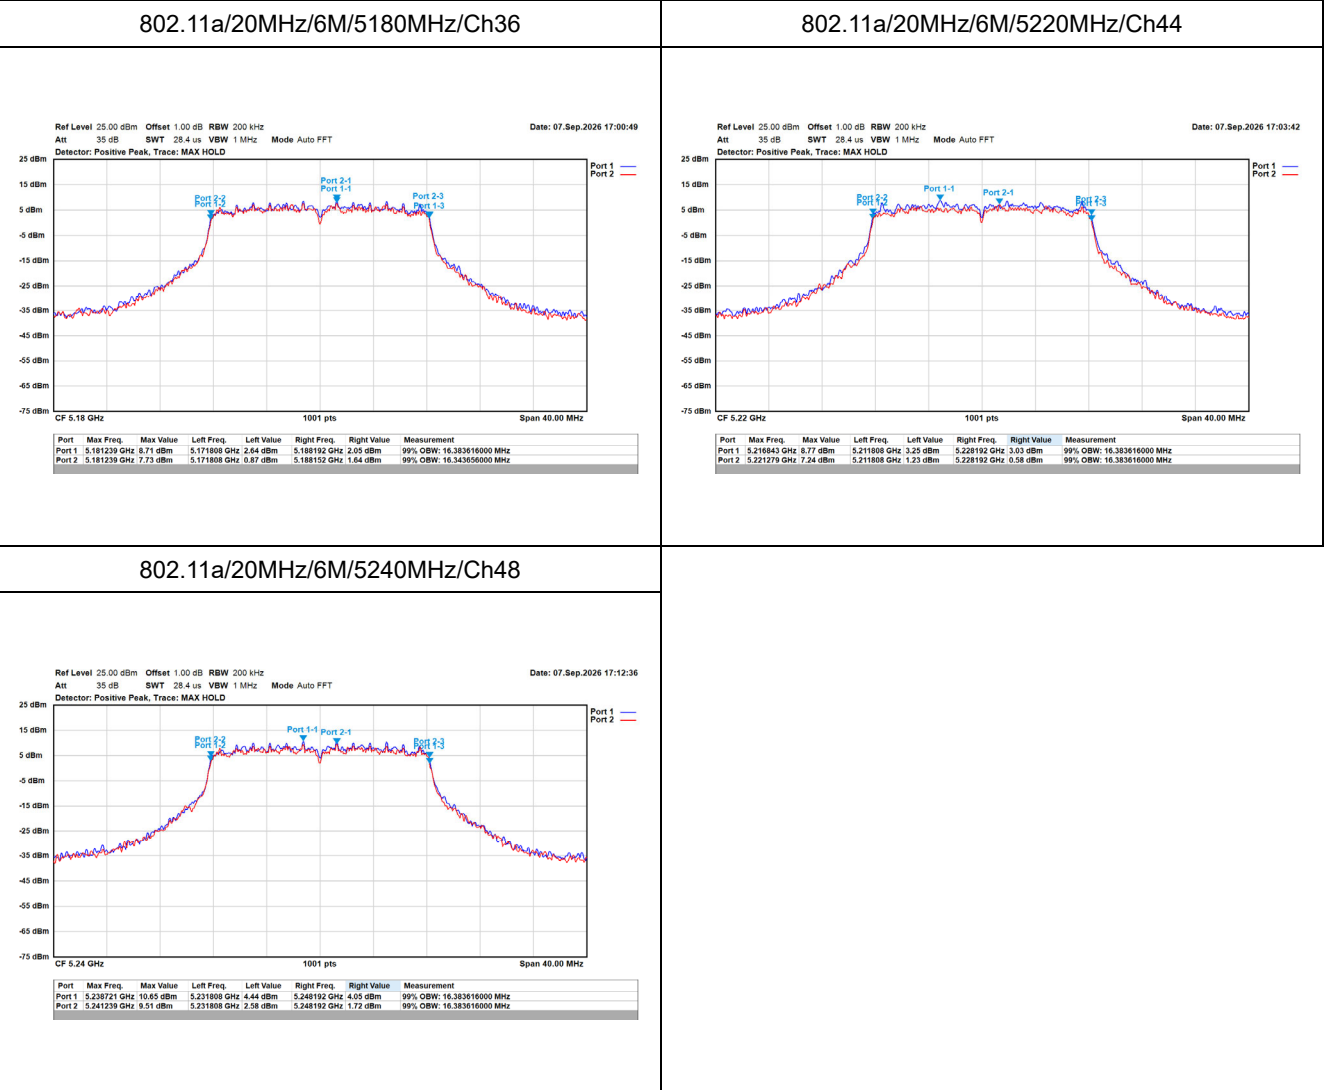

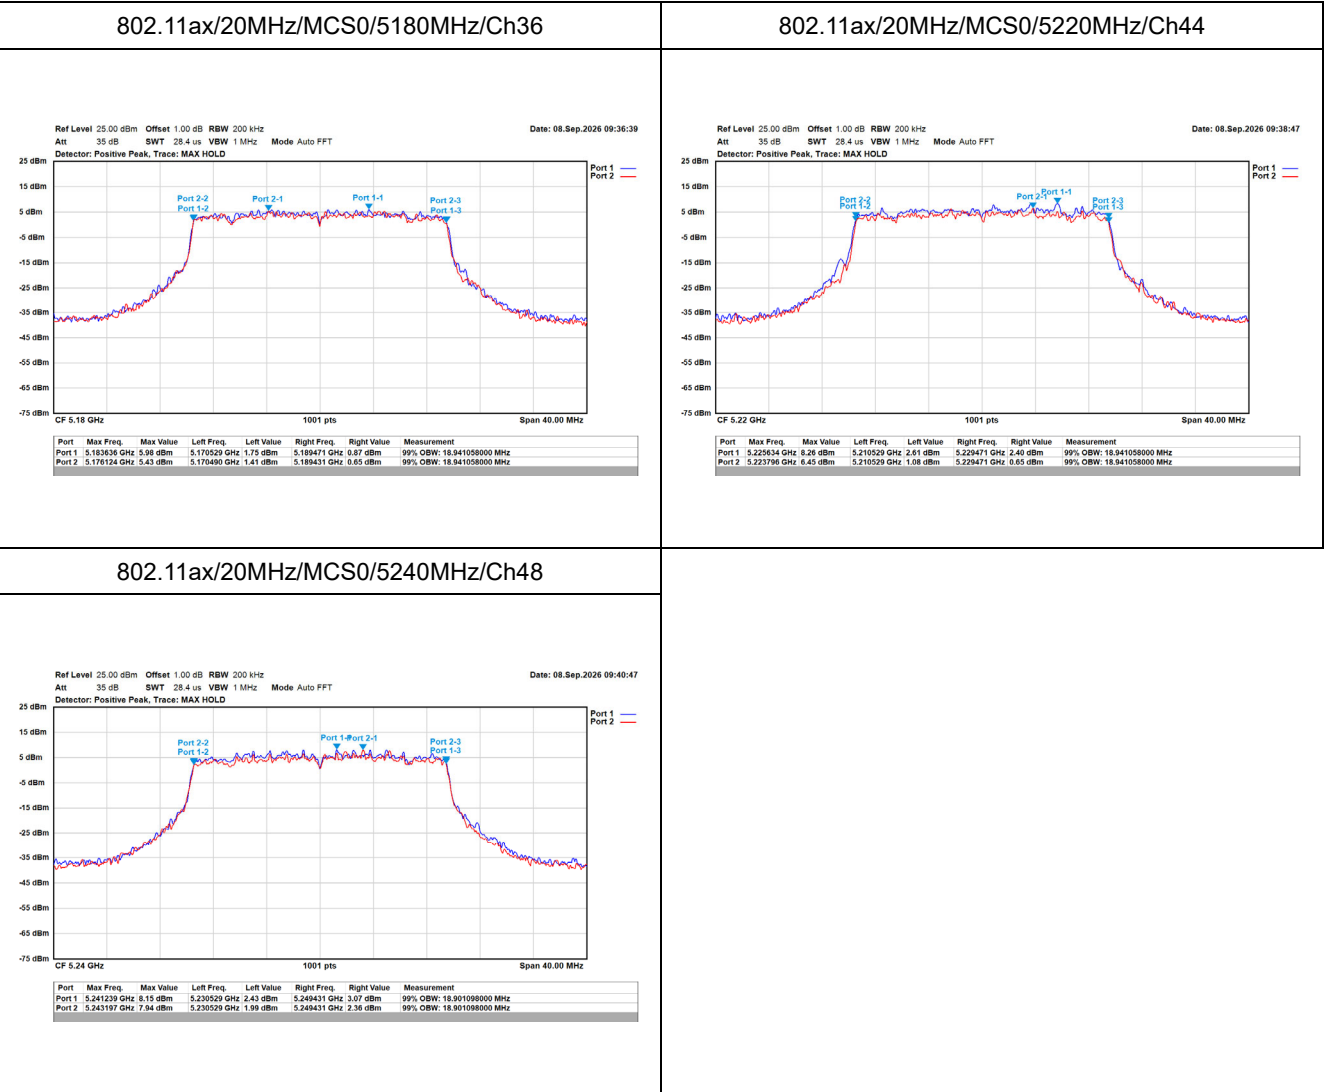


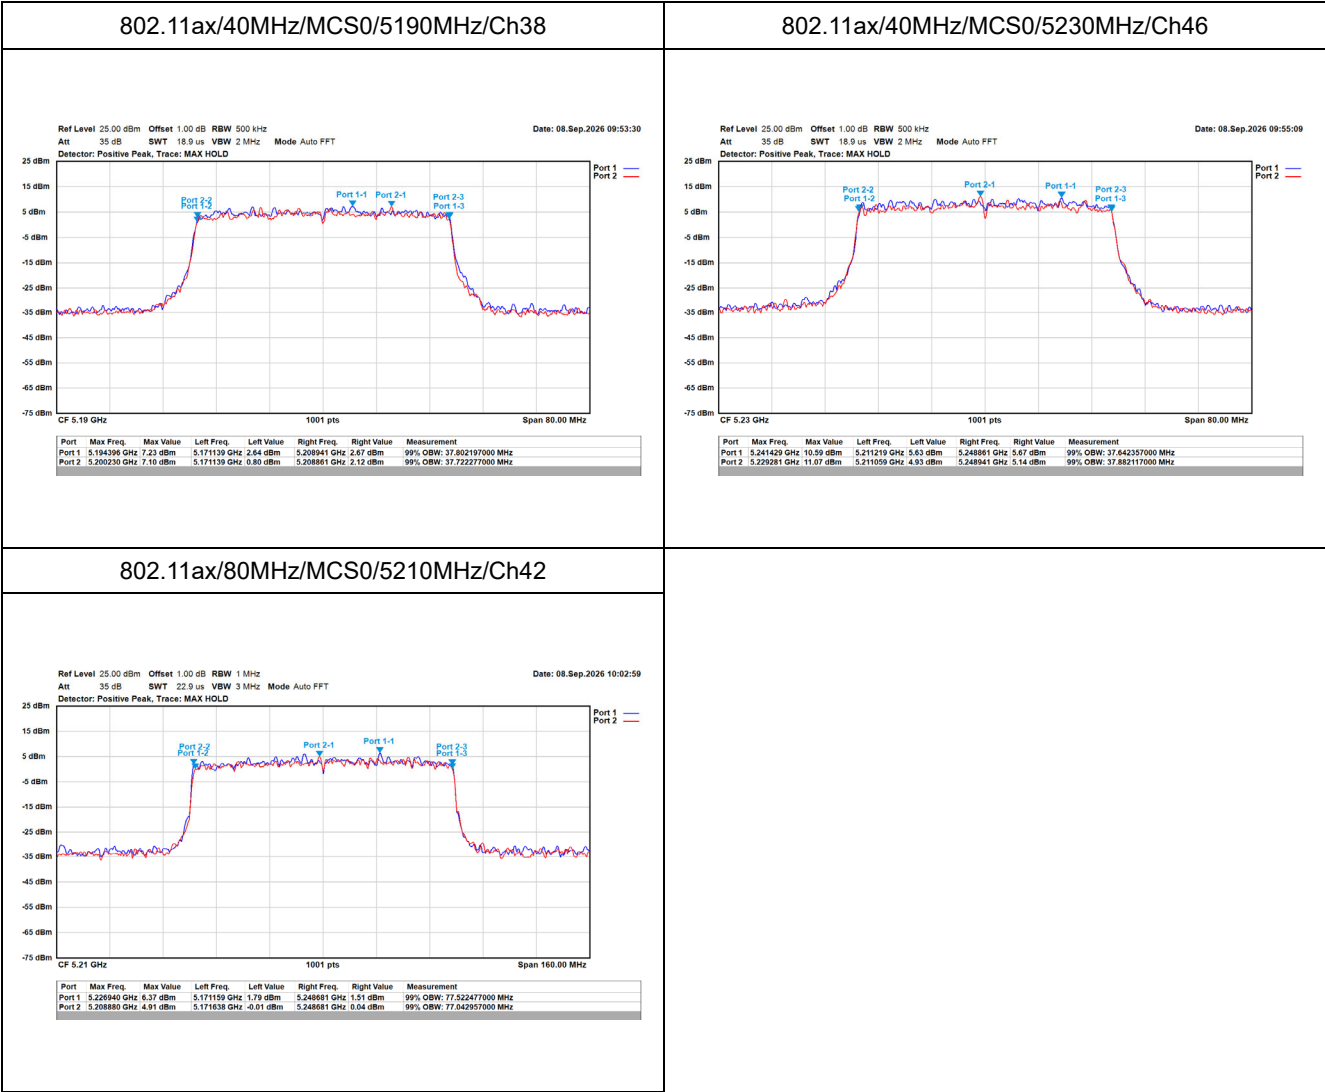


For 26dB Bandwidth:

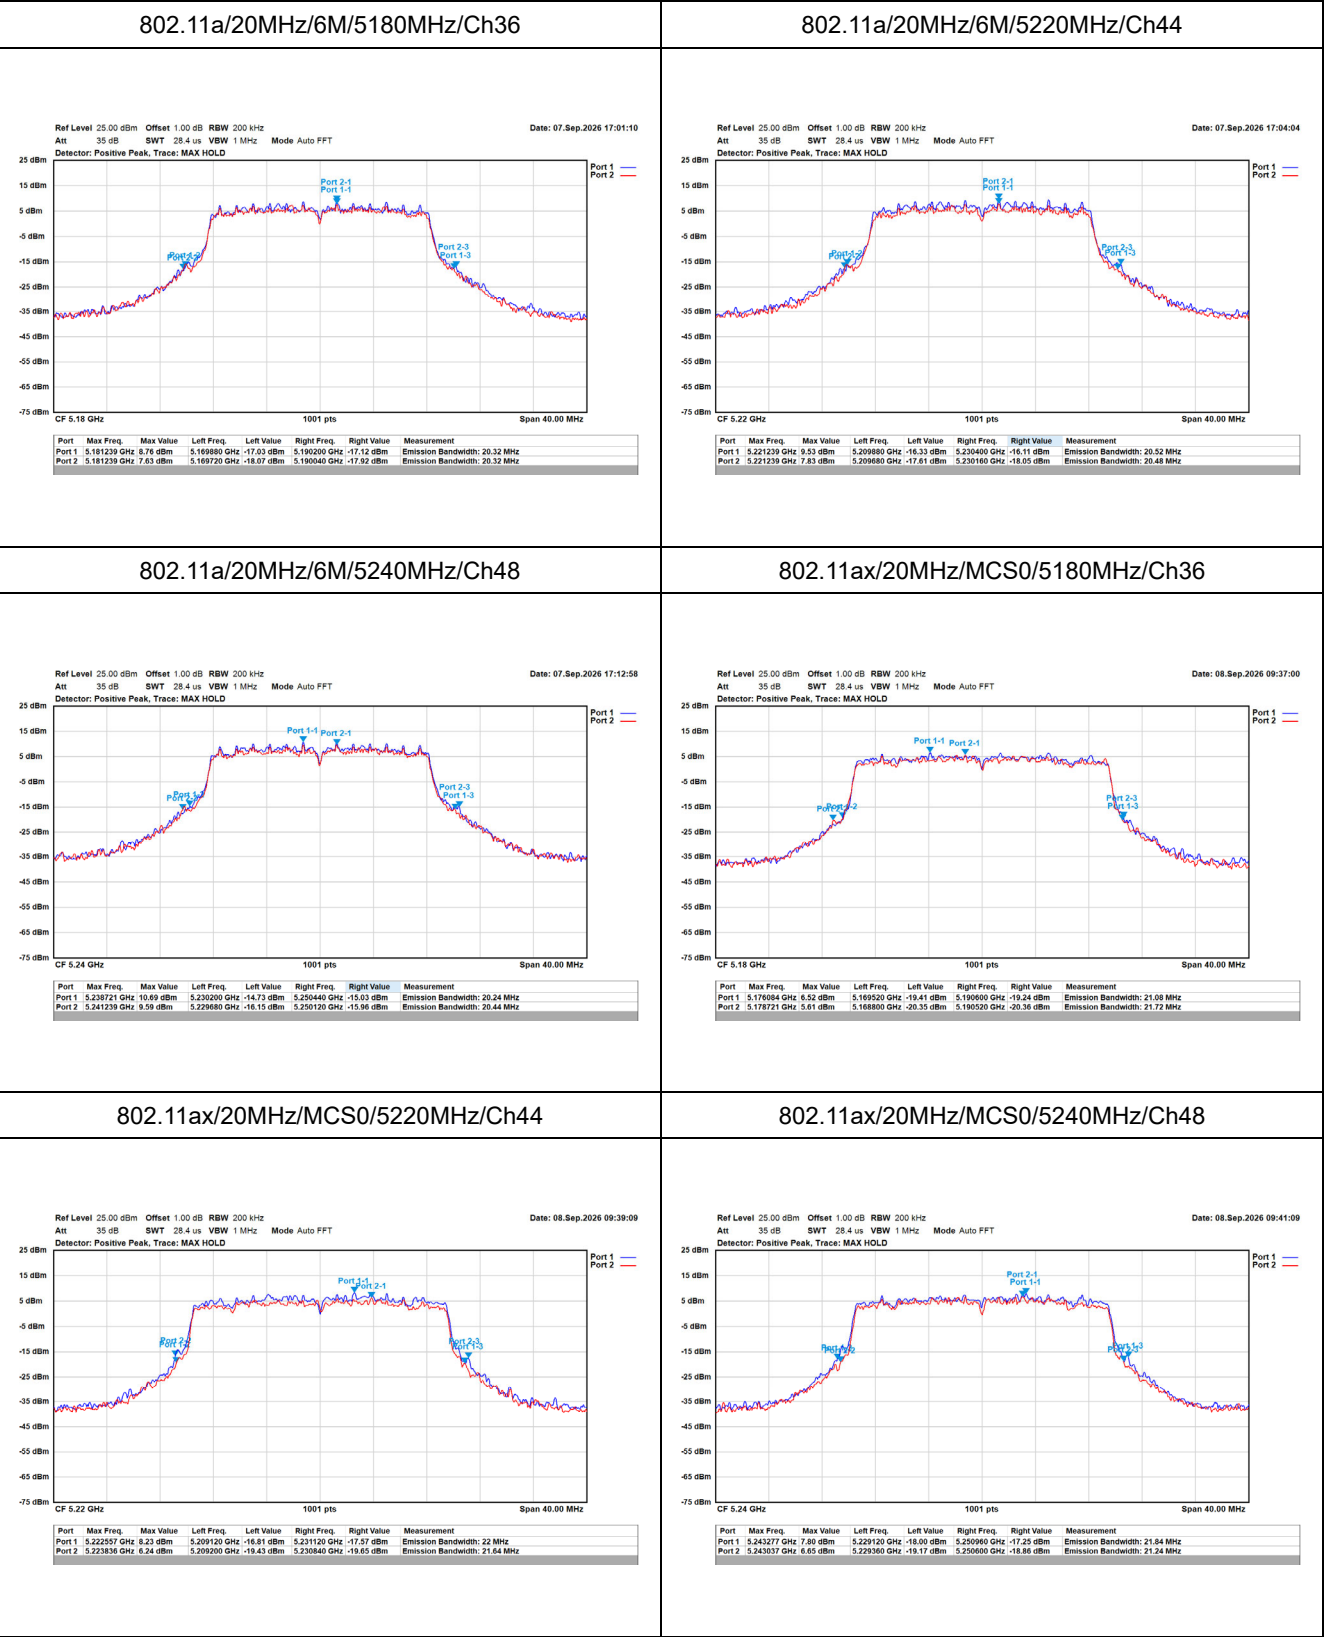


802.11ax/40MHz/MCS0/5190MHz/Ch38

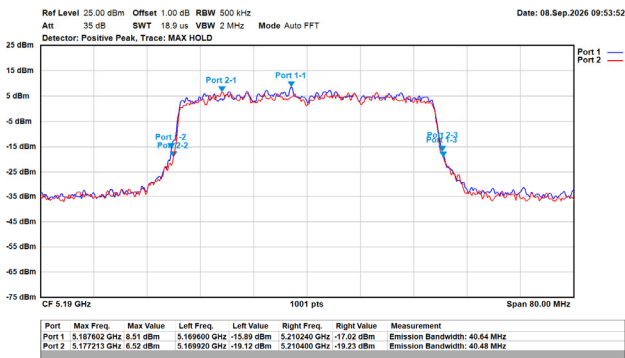

802.11ax/40MHz/MCS0/5230MHz/Ch46

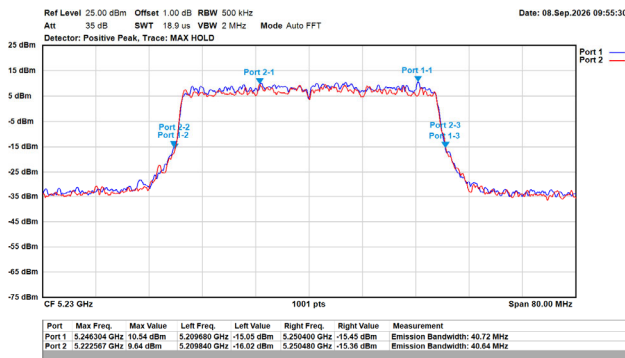

802.11ax/80MHz/MCS0/5210MHz/Ch42

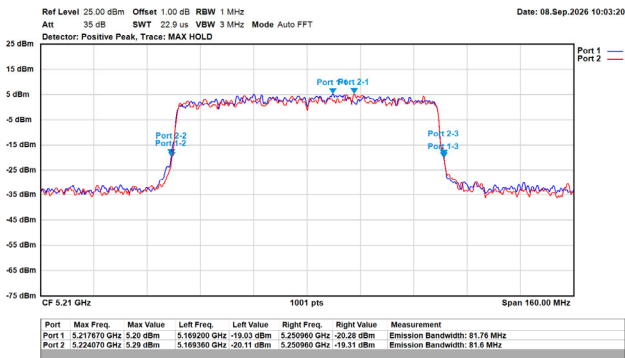

Appendix C. Test Result of Maximum Conducted Output Power

MAX BR2 Pro DX

Master Mode

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	16.94	17.12	20.04	30.00	Pass
	5220	17.74	17.42	20.59	30.00	Pass
	5240	18.50	18.67	21.60	30.00	Pass
	5745	17.36	19.34	21.47	30.00	Pass
	5785	17.17	18.34	20.80	30.00	Pass
	5825	18.78	18.96	21.88	30.00	Pass
802.11ax (20MHz)	5180	16.43	16.67	19.56	30.00	Pass
	5220	17.20	16.78	20.01	30.00	Pass
	5240	17.23	17.14	20.20	30.00	Pass
	5745	15.53	17.70	19.76	30.00	Pass
	5785	16.01	17.74	19.97	30.00	Pass
	5825	18.14	18.71	21.44	30.00	Pass
802.11ax (40MHz)	5190	15.94	16.01	18.99	30.00	Pass
	5230	18.83	18.64	21.75	30.00	Pass
	5755	18.06	20.47	22.44	30.00	Pass
	5795	19.59	20.53	23.10	30.00	Pass
802.11ax (80MHz)	5210	14.42	14.62	17.53	30.00	Pass
	5775	19.22	20.96	23.19	30.00	Pass

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11n (20MHz)	5180	16.29	16.54	19.43	30.00	Pass
	5220	17.07	16.64	19.87	30.00	Pass
	5240	17.1	16.99	20.06	30.00	Pass
	5745	15.35	17.53	19.59	30.00	Pass
	5785	15.9	17.59	19.84	30.00	Pass
	5825	17.97	18.61	21.31	30.00	Pass
802.11n (40MHz)	5190	15.78	15.84	18.82	30.00	Pass
	5230	18.69	18.55	21.63	30.00	Pass
	5755	17.94	20.33	22.31	30.00	Pass
	5795	19.45	20.4	22.96	30.00	Pass
802.11ac (20MHz)	5180	16.38	16.61	19.51	30.00	Pass
	5220	17.12	16.69	19.92	30.00	Pass
	5240	17.15	17.07	20.12	30.00	Pass
	5745	15.44	17.61	19.67	30.00	Pass
	5785	15.97	17.67	19.91	30.00	Pass
	5825	18.06	18.66	21.38	30.00	Pass
802.11ac (40MHz)	5190	15.85	15.93	18.90	30.00	Pass
	5230	18.74	18.59	21.68	30.00	Pass
	5755	17.99	20.4	22.37	30.00	Pass
	5795	19.52	20.46	23.03	30.00	Pass
802.11ac (80MHz)	5210	14.36	14.54	17.46	30.00	Pass
	5775	19.15	20.87	23.10	30.00	Pass

MAX BR2 Pro DX**Slave Mode**

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	16.94	17.12	20.04	24.00	Pass
	5220	17.74	17.42	20.59	24.00	Pass
	5240	18.50	18.67	21.60	24.00	Pass
802.11ax (20MHz)	5180	16.43	16.67	19.56	24.00	Pass
	5220	17.20	16.78	20.01	24.00	Pass
	5240	17.23	17.14	20.20	24.00	Pass
802.11ax (40MHz)	5190	15.94	16.01	18.99	24.00	Pass
	5230	18.83	18.64	21.75	24.00	Pass
802.11ax (80MHz)	5210	14.42	14.62	17.53	24.00	Pass

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11n (20MHz)	5180	16.29	16.54	19.43	24.00	Pass
	5220	17.07	16.64	19.87	24.00	Pass
	5240	17.1	16.99	20.06	24.00	Pass
802.11n (40MHz)	5190	15.78	15.84	18.82	24.00	Pass
	5230	18.69	18.55	21.63	24.00	Pass
802.11ac(20MHz)	5180	16.38	16.61	19.51	24.00	Pass
	5220	17.12	16.69	19.92	24.00	Pass
	5240	17.15	17.07	20.12	24.00	Pass
802.11ac(40MHz)	5190	15.85	15.93	18.90	24.00	Pass
	5230	18.74	18.59	21.68	24.00	Pass
802.11ac (80MHz)	5210	14.36	14.54	17.46	24.00	Pass


Appendix D. Test Result of Maximum Power Spectral Density


MAX BR2 Pro DX


Master Mode

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)			Limit (dBm/MHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	6.76	5.83	9.56	17.00	Pass
	5220	7.84	5.97	10.46	17.00	Pass
	5240	7.44	6.42	10.40	17.00	Pass
802.11ax (20MHz)	5180	4.04	3.11	7.04	17.00	Pass
	5220	5.36	3.75	8.19	17.00	Pass
	5240	5.79	4.47	8.51	17.00	Pass
802.11ax (40MHz)	5190	1.44	0.59	3.89	17.00	Pass
	5230	4.35	3.48	6.89	17.00	Pass
802.11ax (80MHz)	5210	-2.96	-3.46	0.01	17.00	Pass

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/500kHz)			Limit (dBm/500kHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5745	3.34	5.41	7.81	29.63	Pass
	5785	3.85	4.41	7.64	29.63	Pass
	5825	4.67	3.78	7.67	29.63	Pass
802.11ax (20MHz)	5745	1.28	2.03	5.07	29.63	Pass
	5785	1.01	2.48	5.22	29.63	Pass
	5825	2.70	2.58	6.01	29.63	Pass
802.11ax (40MHz)	5755	0.23	2.32	4.52	29.63	Pass
	5795	1.79	2.57	5.03	29.63	Pass
802.11ax (80MHz)	5775	-1.36	-0.41	2.19	29.63	Pass

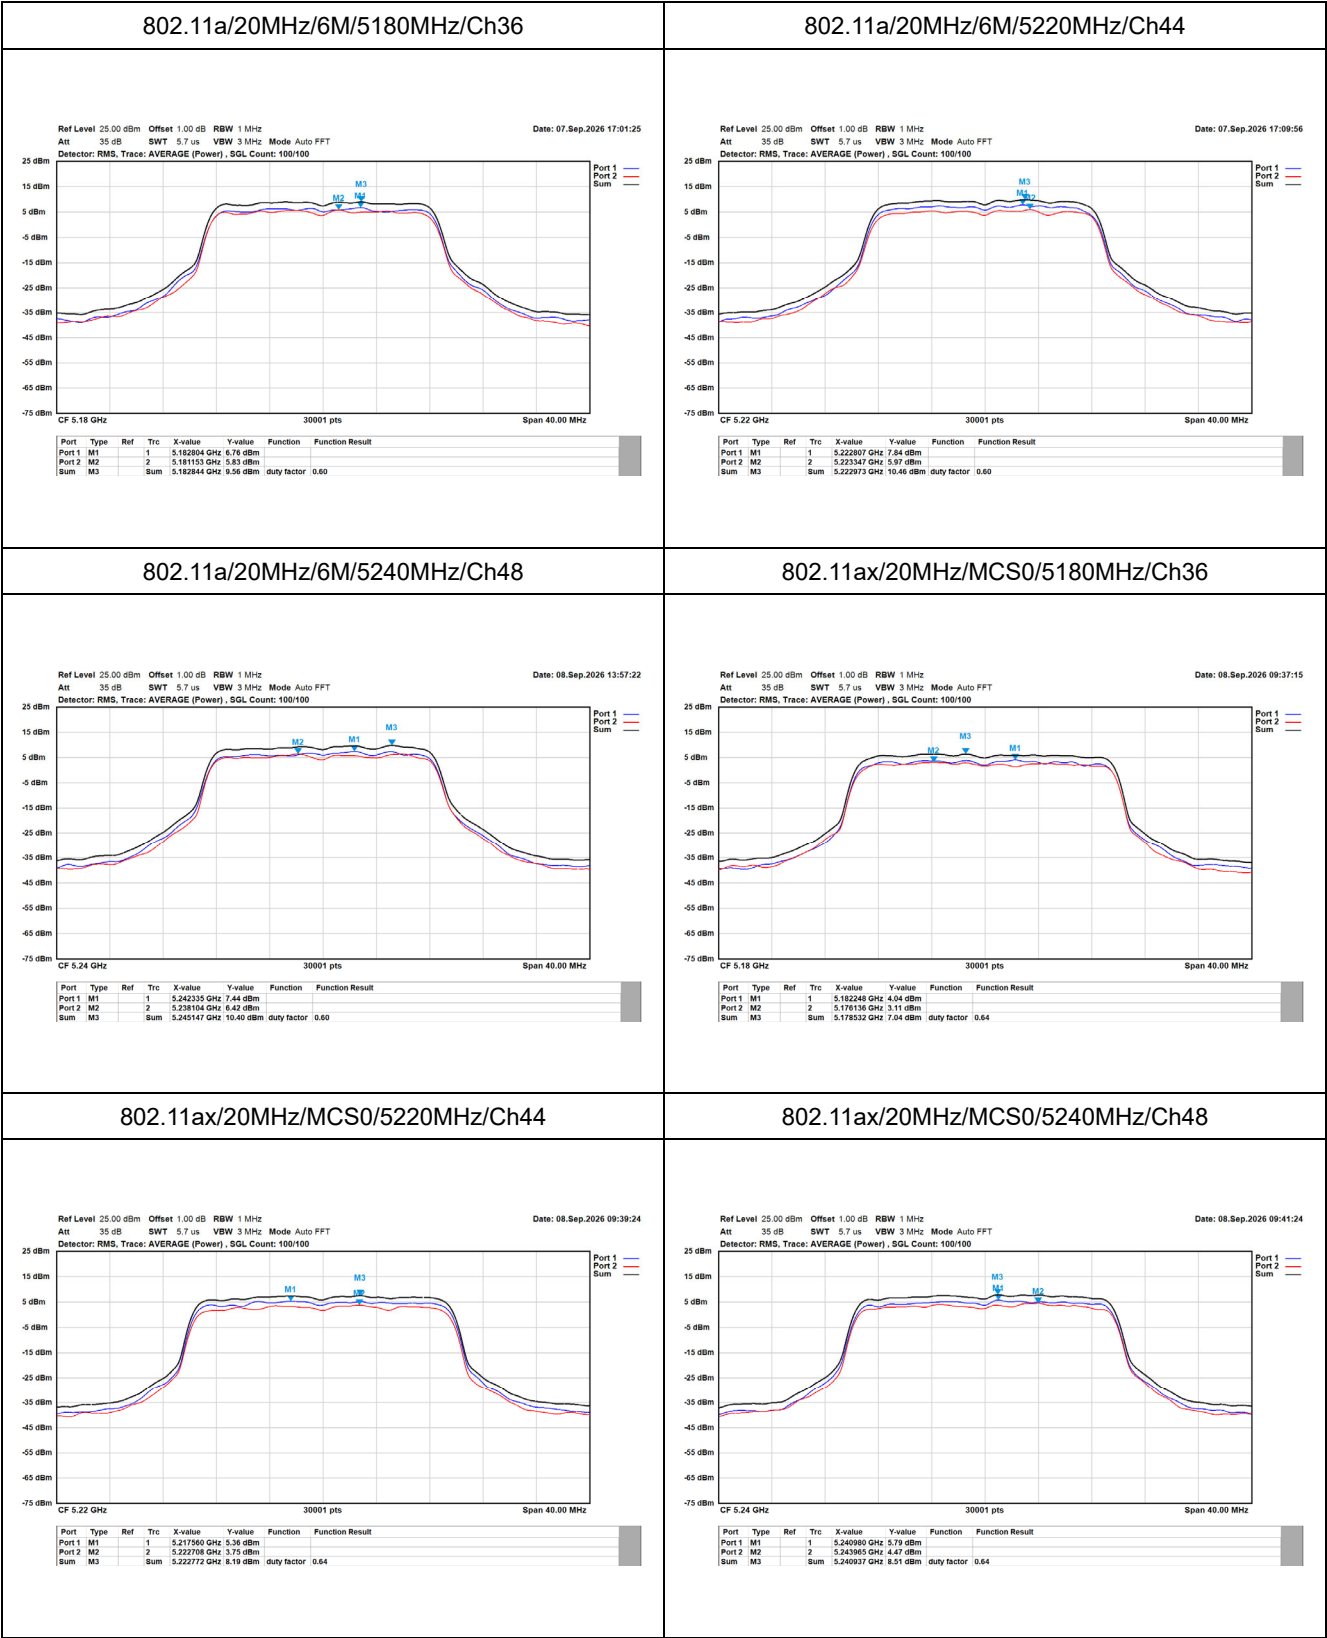


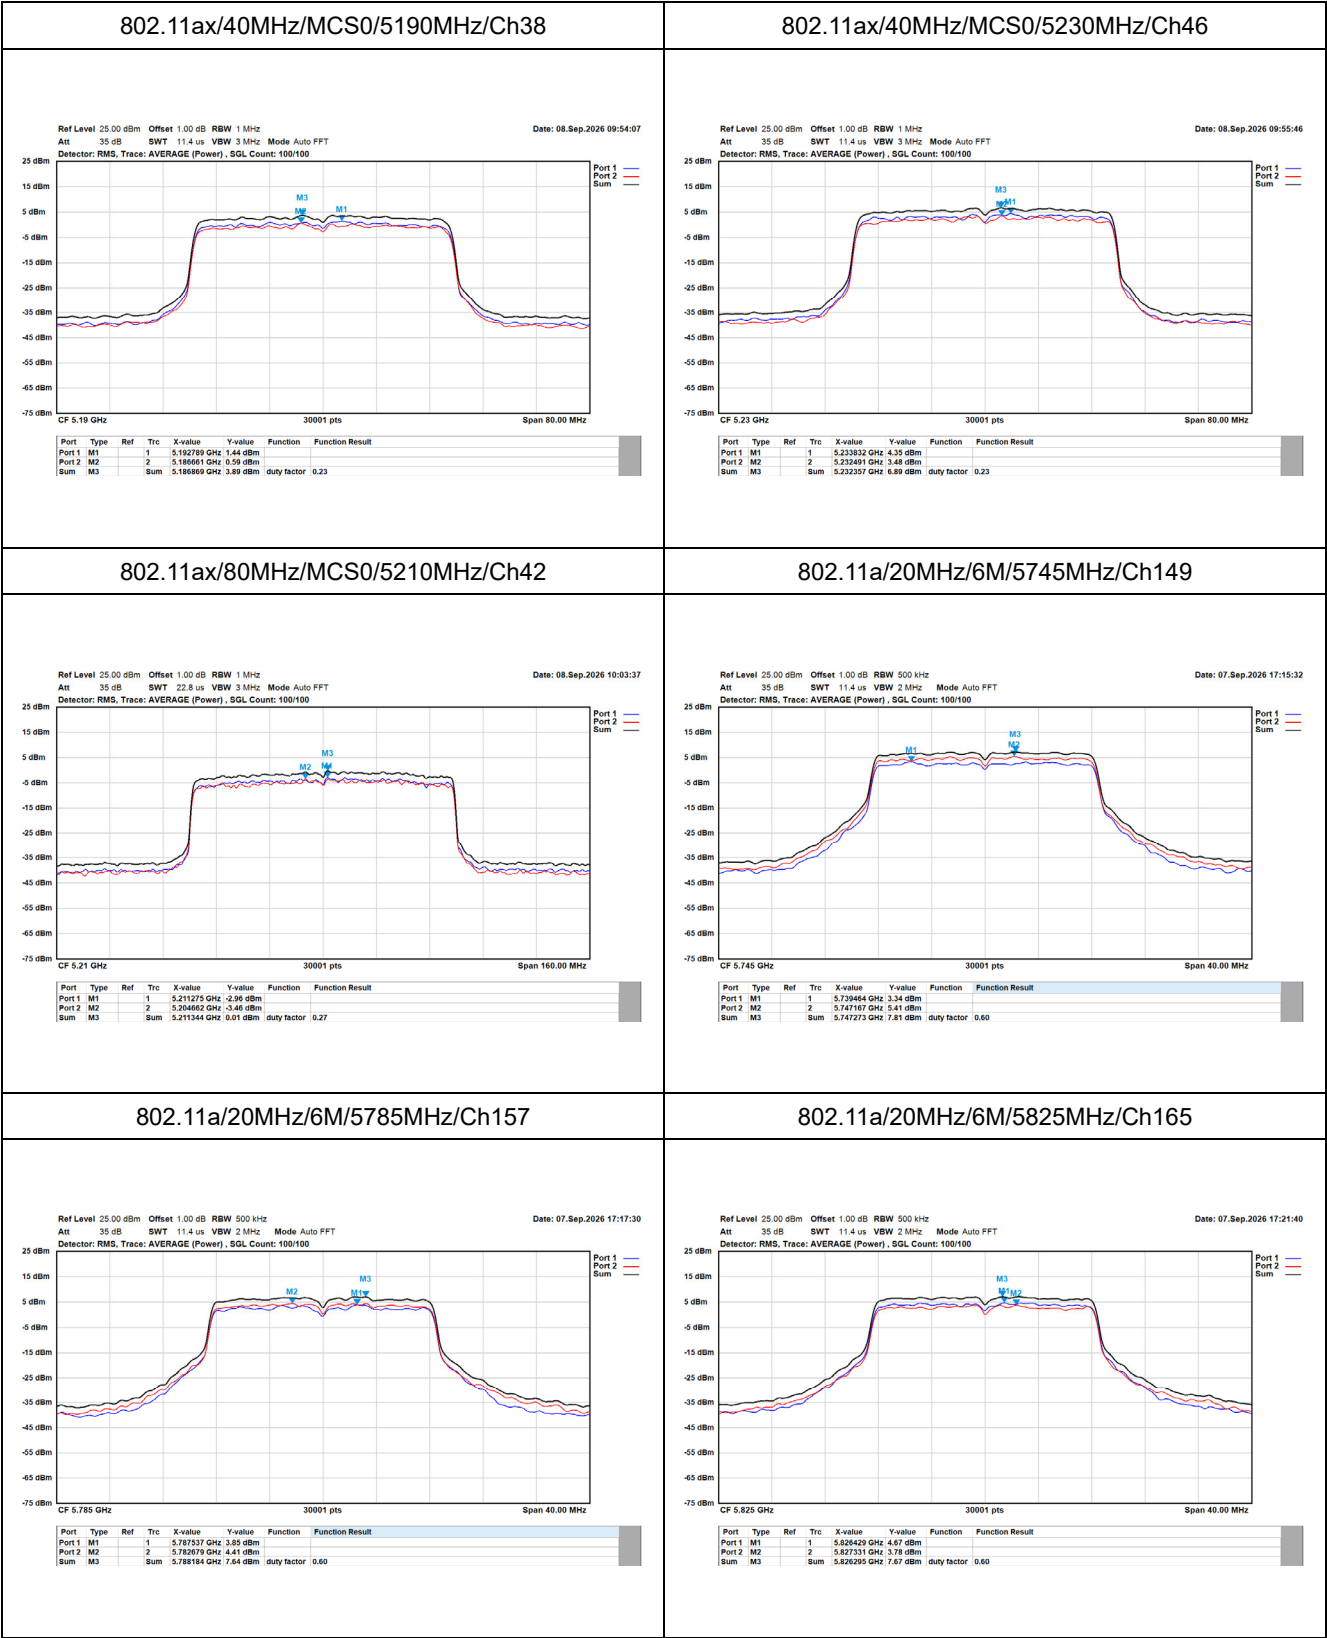

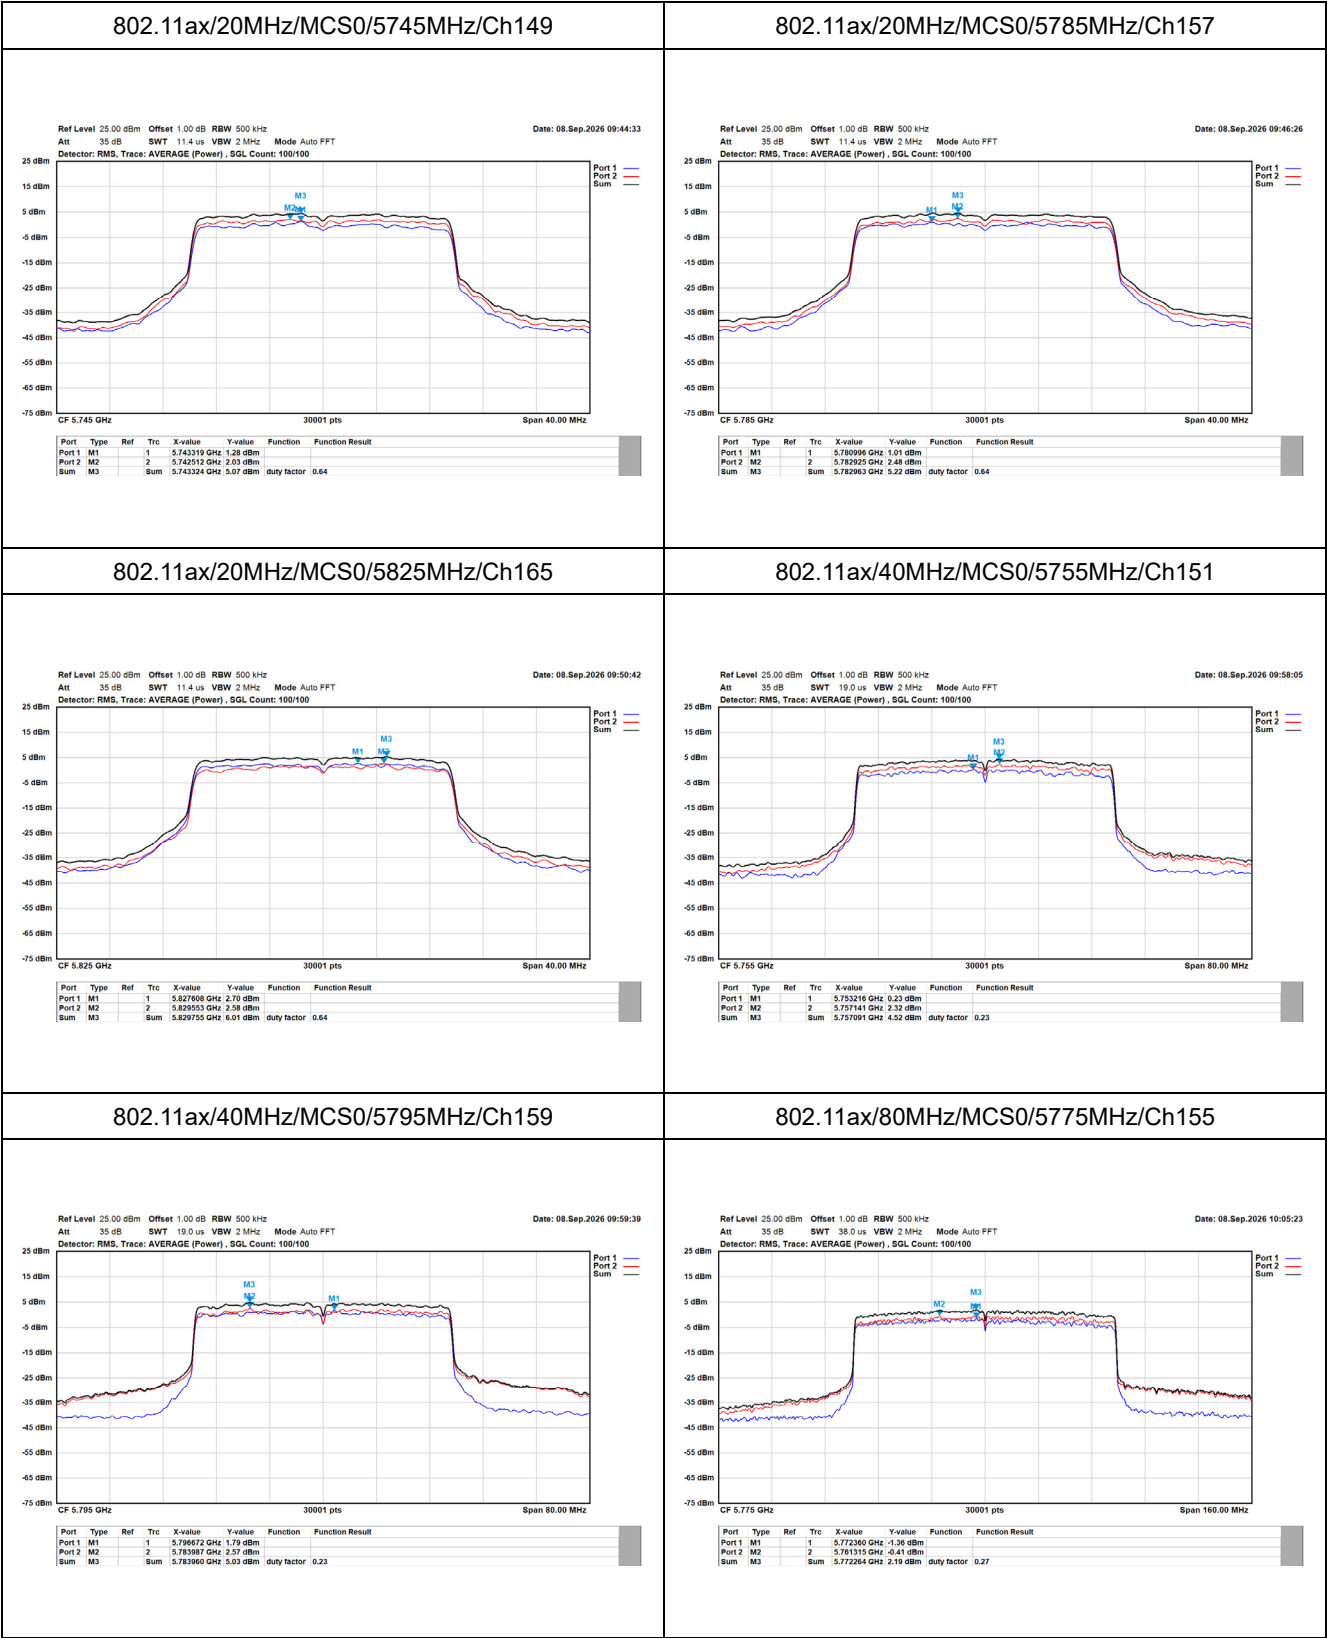


MAX BR2 Pro DX**Slave Mode**


Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)			Limit (dBm/MHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	6.76	5.83	9.56	11.00	Pass
	5220	7.84	5.97	10.46	11.00	Pass
	5240	7.44	6.42	10.40	11.00	Pass
802.11ax (20MHz)	5180	4.04	3.11	7.04	11.00	Pass
	5220	5.36	3.75	8.19	11.00	Pass
	5240	5.79	4.47	8.51	11.00	Pass
802.11ax (40MHz)	5190	1.44	0.59	3.89	11.00	Pass
	5230	4.35	3.48	6.89	11.00	Pass
802.11ax (80MHz)	5210	-2.96	-3.46	0.01	11.00	Pass

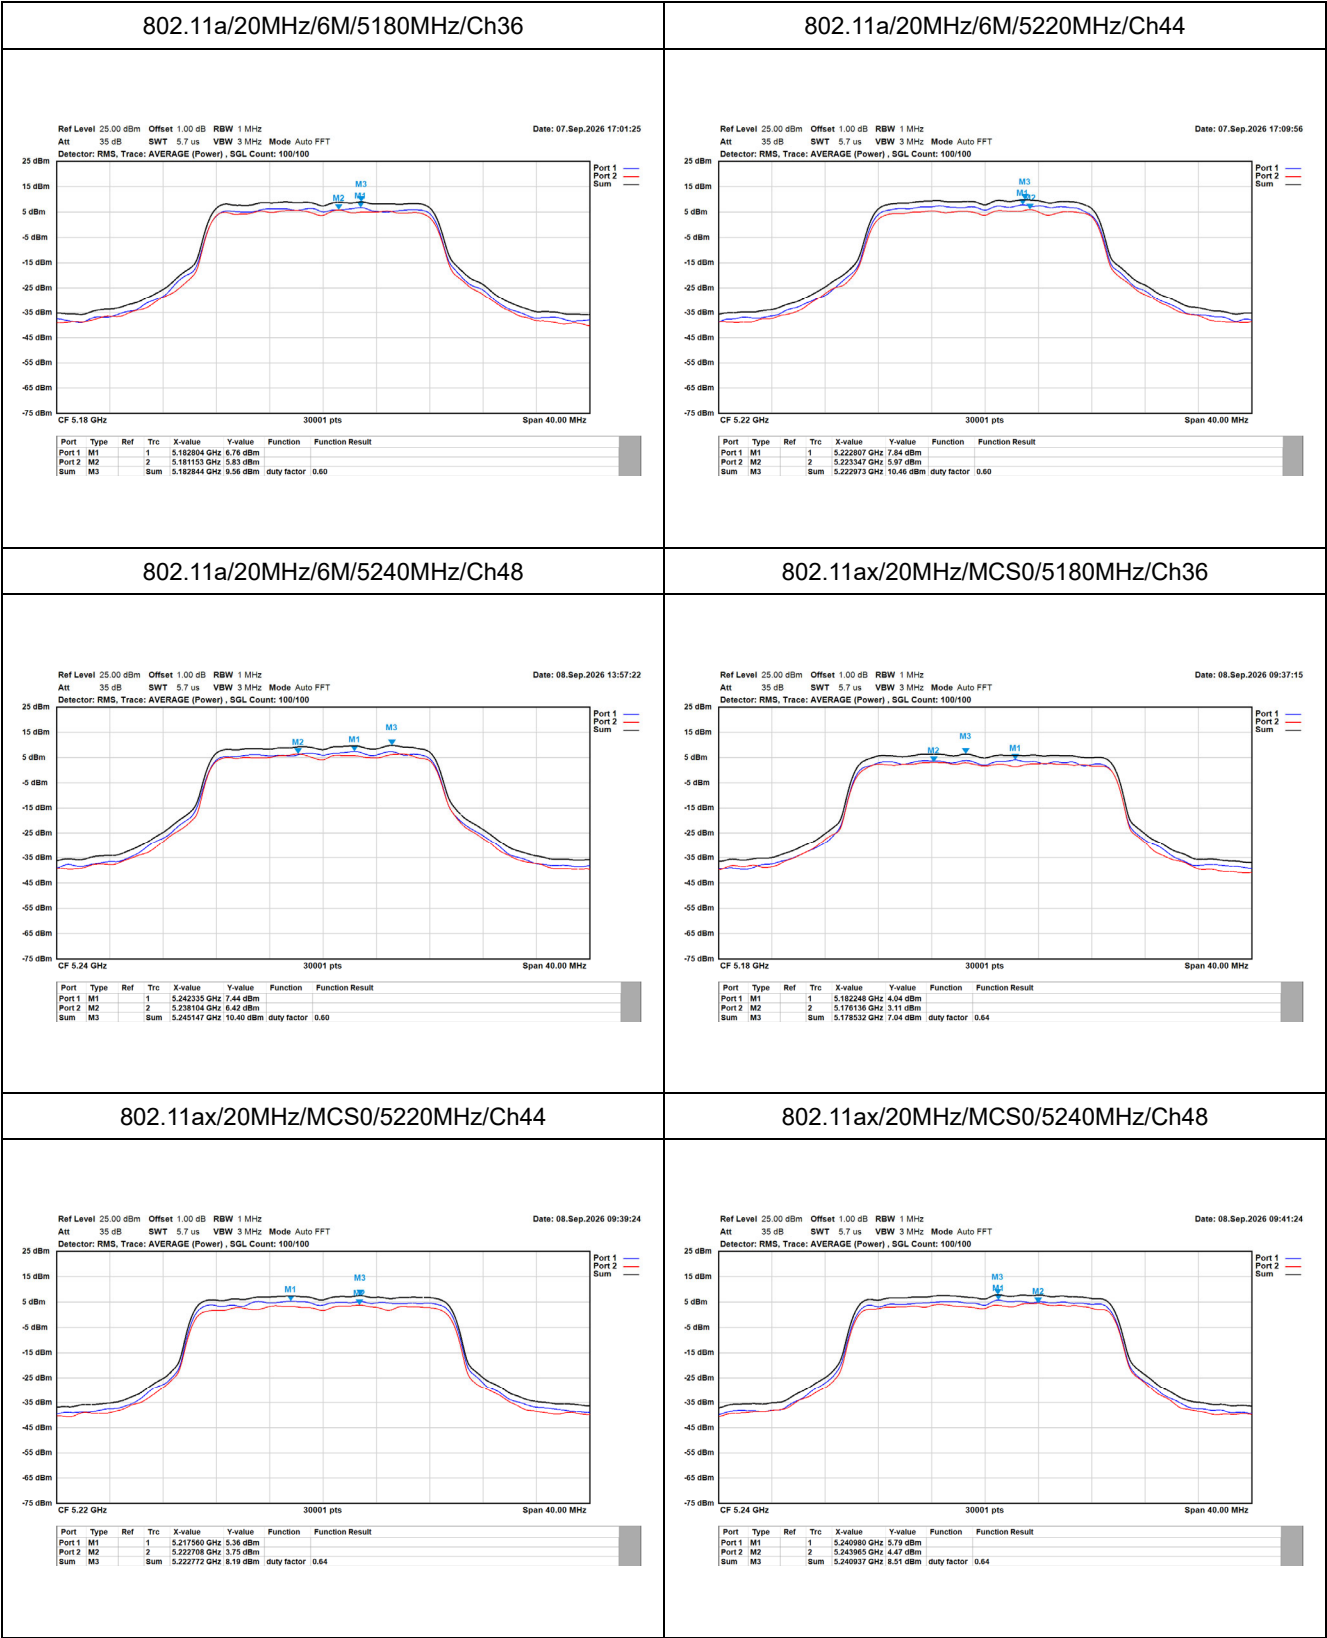


802.11ax/40MHz/MCS0/5190MHz/Ch38

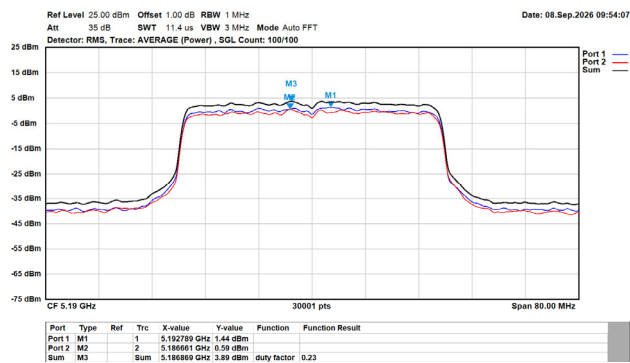

802.11ax/40MHz/MCS0/5230MHz/Ch46

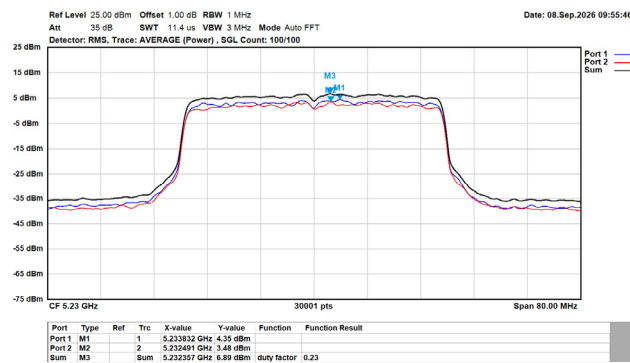

802.11ax/80MHz/MCS0/5210MHz/Ch42

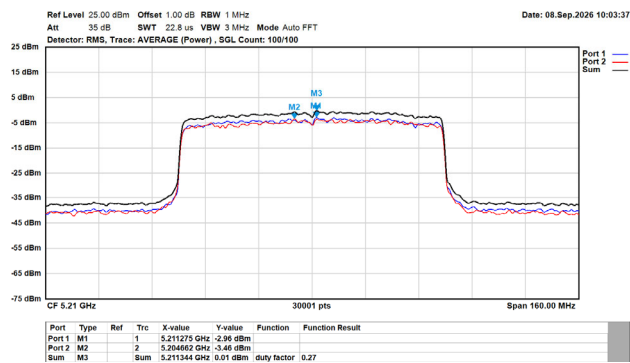


Appendix E. Test Result of Radiated Emission


MAX BR2 Pro DX

DC Power supply


TX_a_5180MHz_H

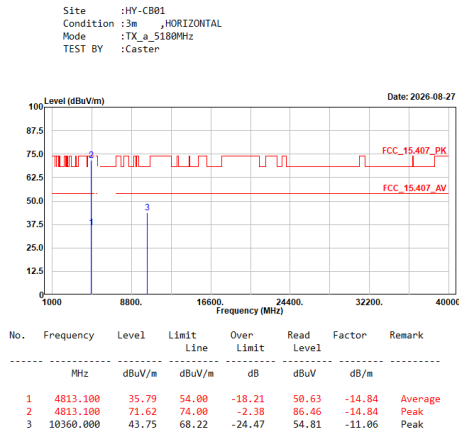


TX_a_5180MHz_V

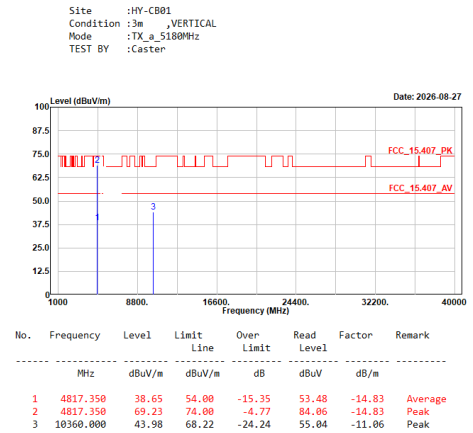

TX_a_5220MHz_H

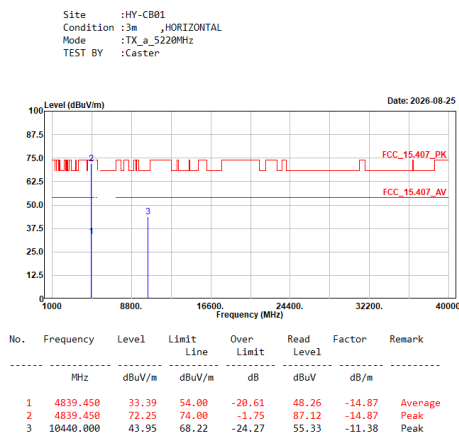


TX_a_5220MHz_V

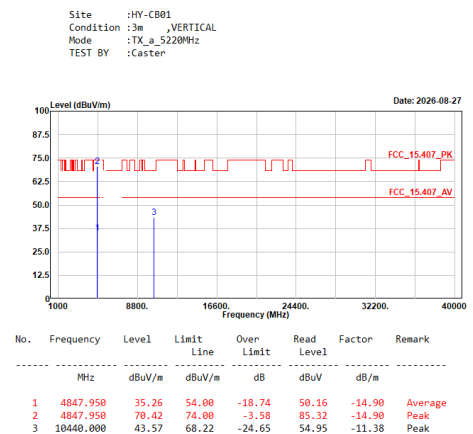

TX_a_5240MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

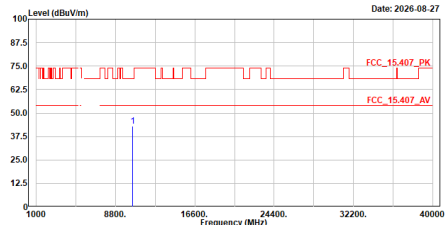


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	42.86	68.22	-25.36	54.13	-11.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Caster

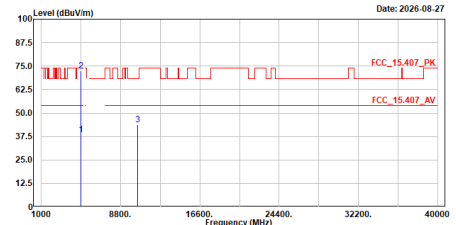


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4865.800	38.30	54.00	-15.70	53.14	-14.84	Average
2	4865.800	72.49	74.00	-1.51	87.33	-14.84	Peak
3	10480.000	43.69	68.22	-24.53	54.96	-11.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Caster

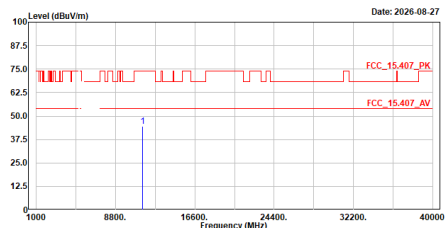


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	44.58	74.00	-29.42	53.93	-9.35	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Caster

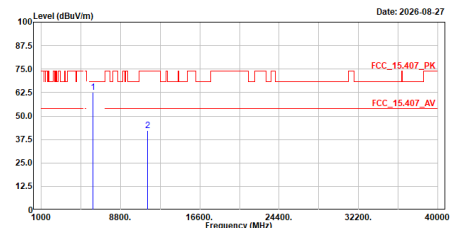


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	6116.150	62.71	68.22	-5.51	76.33	-13.62	Peak
2	11490.000	42.42	74.00	-31.58	51.77	-9.35	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_a_5785MHz_H

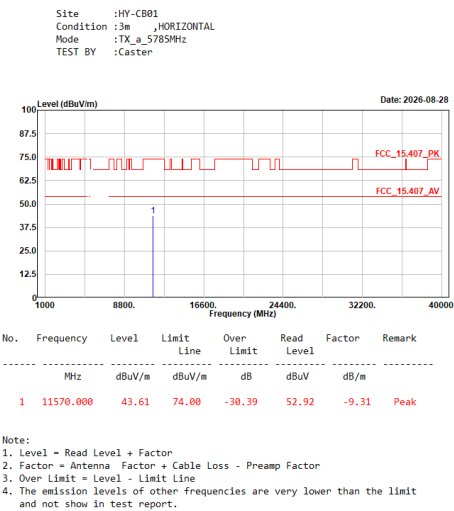


TX_a_5785MHz_V

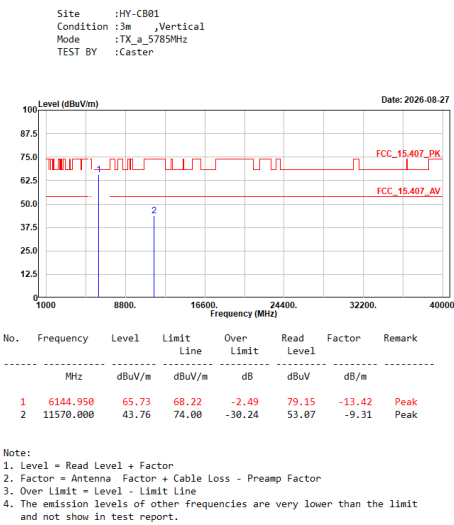

TX_a_5825MHz_H

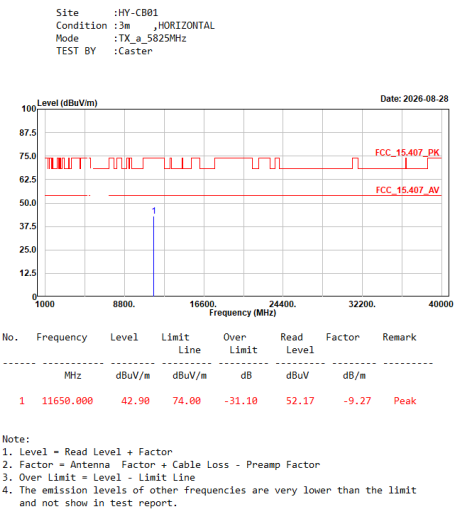


TX_a_5825MHz_V

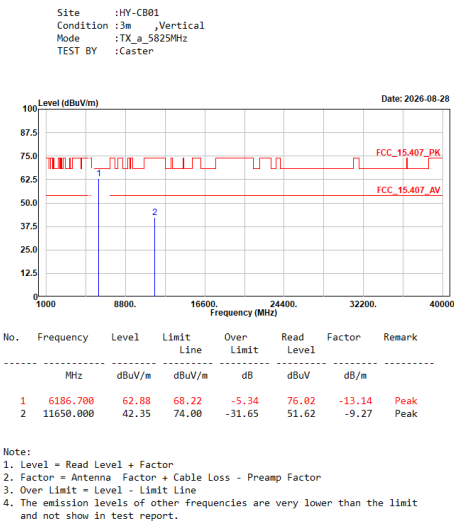

TX_ax20_5180MHz_H

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Caster

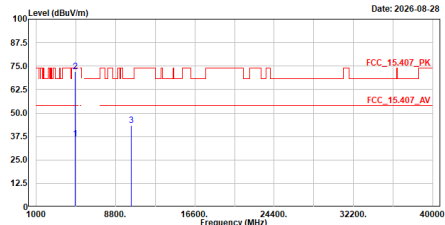


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	4813.950	36.11	54.00	-17.89	50.95	-14.84	Average
2	4813.950	71.90	74.00	-2.10	86.74	-14.84	Peak
3	10360.000	43.52	68.22	-24.70	54.58	-11.06	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Caster

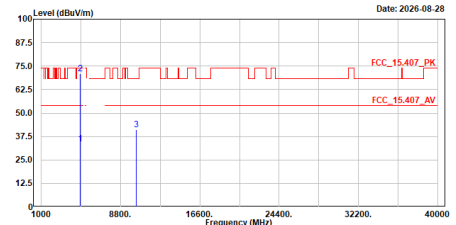


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	4813.950	33.72	54.00	-20.28	48.56	-14.84	Average
2	4813.950	70.77	74.00	-3.23	85.61	-14.84	Peak
3	10360.000	41.13	68.22	-27.09	52.19	-11.06	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz
TEST BY :Caster

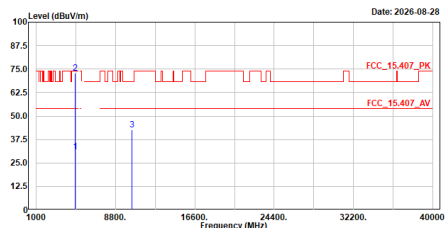


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	4859.000	31.11	54.00	-22.89	45.98	-14.87	Average
2	4859.000	72.82	74.00	-1.18	87.69	-14.87	Peak
3	10440.000	42.66	68.22	-25.56	54.04	-11.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz
TEST BY :Caster

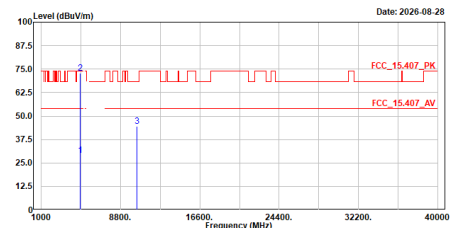


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	4854.750	29.13	54.00	-24.87	44.01	-14.88	Average
2	4854.750	72.75	74.00	-1.25	87.63	-14.88	Peak
3	10440.000	44.42	68.22	-23.80	55.80	-11.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

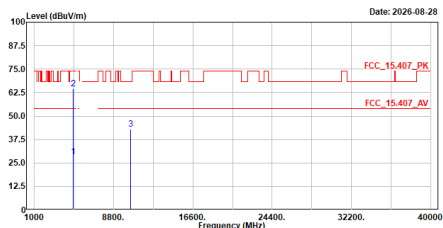


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4858.150	28.25	54.00	-25.75	43.13	-14.88	Average
2	4858.150	64.56	74.00	-9.44	79.44	-14.88	Peak
3	10480.000	43.15	68.22	-25.07	54.42	-11.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

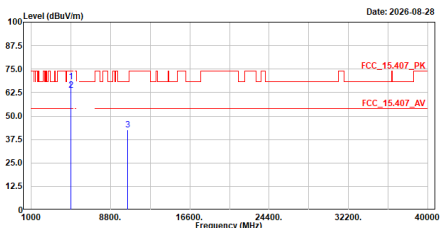


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4865.800	68.38	54.00	14.38	83.22	-14.84	Average
2	4865.800	63.68	74.00	-10.32	78.52	-14.84	Peak
3	10480.000	42.57	68.22	-25.65	53.84	-11.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Caster

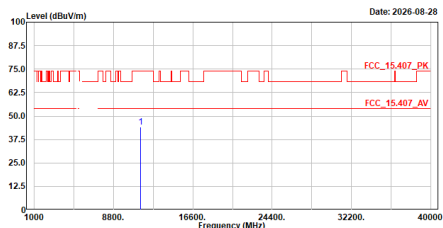


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	44.22	74.00	-29.78	53.57	-9.35	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_V

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5745MHz
TEST BY :Caster

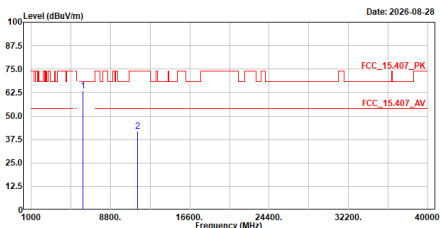


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	6118.700	63.55	68.22	-4.67	77.16	-13.61	Peak
2	11490.000	42.06	74.00	-31.94	51.41	-9.35	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_H

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5785MHz
TEST BY :Caster

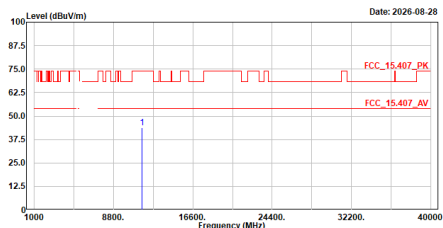


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	43.76	74.00	-30.24	53.07	-9.31	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5785MHz
TEST BY :Caster

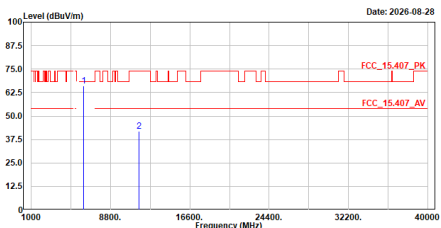


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	6143.350	66.09	68.22	-2.13	79.55	-13.46	Peak
2	11570.000	41.81	74.00	-32.19	51.12	-9.31	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Caster

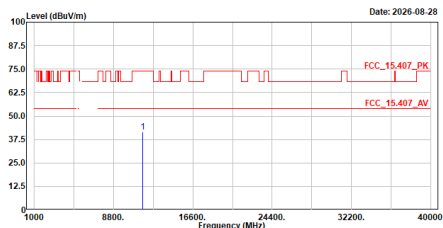


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	41.67	74.00	-32.33	50.94	-9.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_V

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5825MHz
TEST BY :Caster

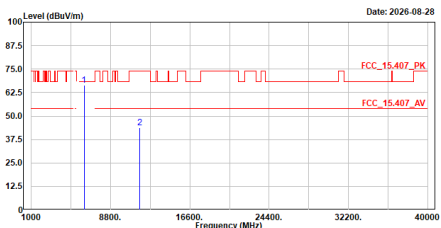


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	6191.800	66.55	68.22	-1.67	79.67	-13.12	Peak
2	11650.000	43.61	74.00	-30.39	52.88	-9.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_H

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
TEST BY :Caster

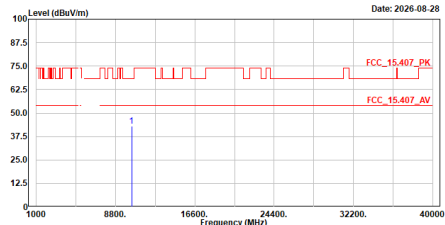


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	43.10	68.22	-25.12	54.27	-11.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

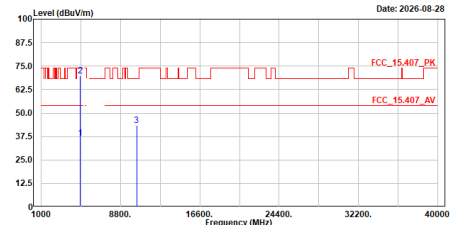


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4814.800	36.60	54.00	-17.40	51.43	-14.83	Average
2	4814.800	69.63	74.00	-4.37	84.46	-14.83	Peak
3	10380.000	43.56	68.22	-24.66	54.73	-11.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

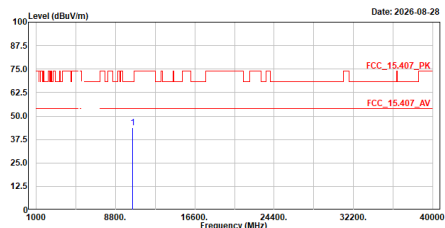


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.71	68.22	-24.51	55.05	-11.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

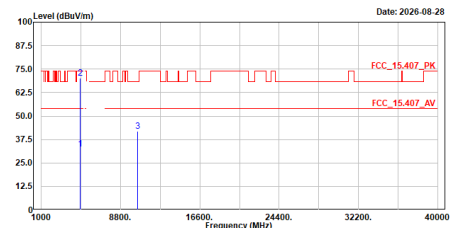


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4857.300	32.32	54.00	-21.68	47.20	-14.88	Average
2	4857.300	70.13	74.00	-3.87	85.01	-14.88	Peak
3	10460.000	41.70	68.22	-26.52	53.04	-11.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_H

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax40_5755MHz
TEST BY :Caster

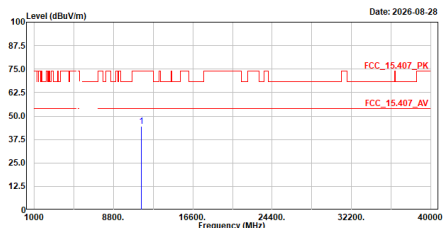


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	44.63	74.00	-29.37	53.95	-9.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_V

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax40_5755MHz
TEST BY :Caster

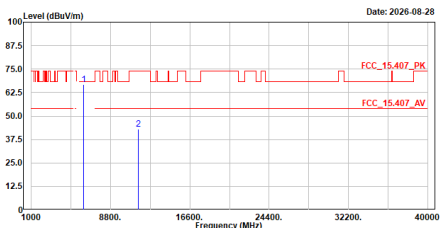


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	6134.000	66.82	68.22	-1.40	80.35	-13.53	Peak
2	11510.000	43.09	74.00	-30.91	52.41	-9.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

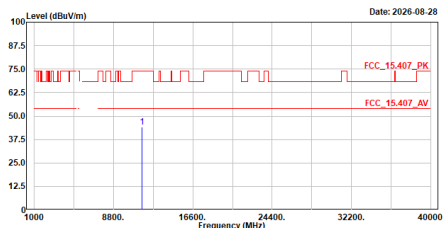


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11590.000	44.18	74.00	-29.82	53.52	-9.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

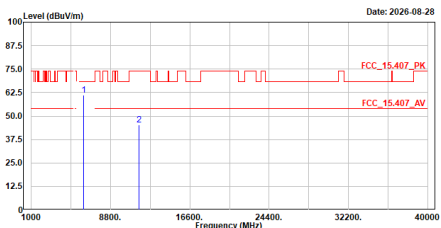


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	6155.250	61.22	68.22	-7.00	74.60	-13.38	Peak
2	11590.000	45.16	74.00	-28.84	54.50	-9.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

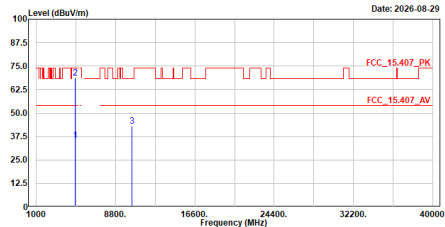


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4828.400	35.52	54.00	-18.48	50.36	-14.84	Average
2	4828.400	68.72	74.00	-5.28	83.56	-14.84	Peak
3	10420.000	43.21	68.22	-25.01	54.55	-11.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

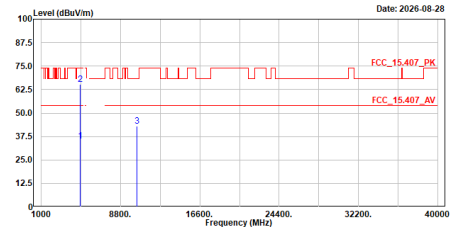


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4828.400	35.20	54.00	-18.80	50.04	-14.84	Average
2	4828.400	65.10	74.00	-8.90	79.94	-14.84	Peak
3	10420.000	42.98	68.22	-25.24	54.32	-11.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

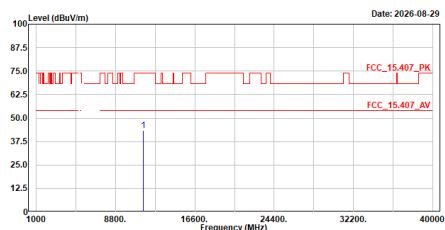


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	43.50	74.00	-30.50	52.77	-9.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

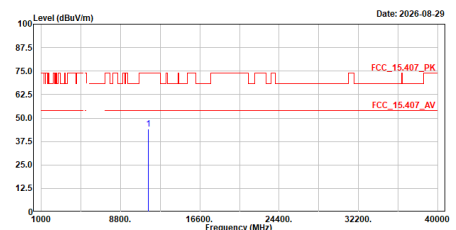


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	44.01	74.00	-29.99	53.28	-9.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

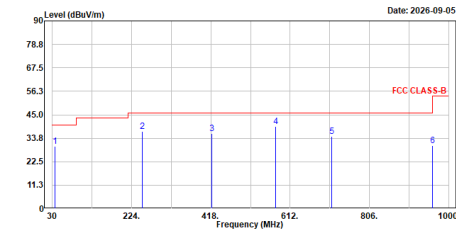


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	36.400	29.95	40.00	-10.05	54.68	-24.73	QP
2	250.011	37.14	46.00	-8.86	62.12	-24.98	QP
3	419.970	36.02	46.00	-9.98	56.32	-20.30	QP
4	576.028	39.33	46.00	-6.67	55.88	-16.55	QP
5	713.885	34.68	46.00	-11.32	48.74	-14.06	QP
6	959.998	30.25	46.00	-15.75	41.16	-10.91	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ax80_5775MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

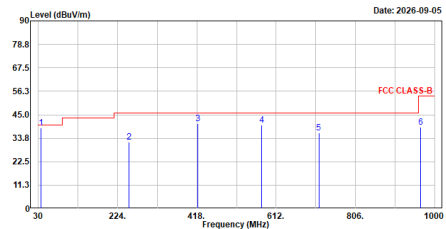


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	36.400	38.73	40.00	-1.27	63.45	-24.72	QP
2	252.061	32.08	46.00	-13.92	57.05	-24.97	QP
3	420.020	40.71	46.00	-5.29	61.01	-20.30	QP
4	576.028	39.93	46.00	-6.07	56.48	-16.55	QP
5	716.435	36.29	46.00	-9.71	50.30	-14.01	QP
6	964.948	38.94	46.00	-7.06	49.85	-10.91	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_a_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5180MHz
TEST BY :Caster

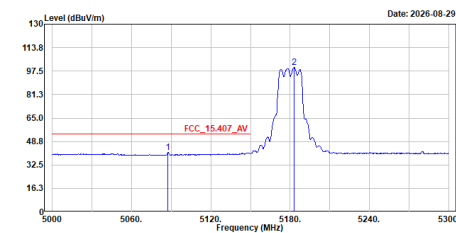


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5087.600	41.16	54.00	-12.84	27.37	13.79	Average
2	5183.000	100.01	-----	-----	86.16	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5180MHz
TEST BY :Caster

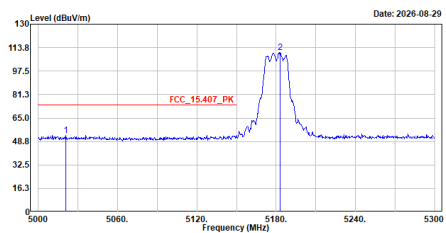


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5020.700	53.05	74.00	-20.95	39.29	13.76	Peak
2	5183.000	110.22	-----	-----	96.37	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

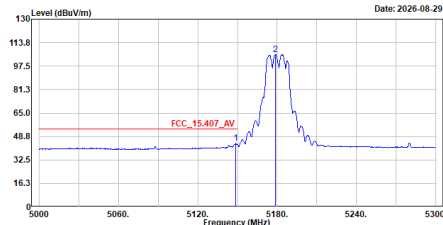


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.800	43.93	54.00	-10.07	30.01	13.92	Average
2	5178.800	105.70			91.84	13.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

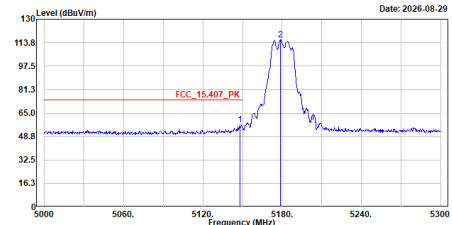


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.900	56.83	74.00	-17.17	42.91	13.92	Peak
2	5178.800	115.78			101.92	13.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

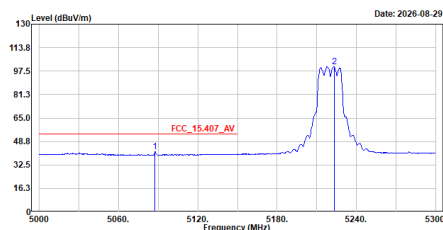


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5087.600	41.83	54.00	-12.17	28.04	13.79	Average
2	5223.200	100.58			86.73	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

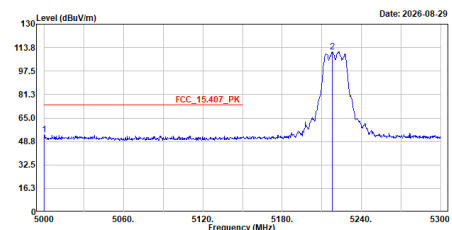


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5080.000	53.34	74.00	-20.66	39.59	13.75	Peak
2	5217.800	118.90			97.06	13.84	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

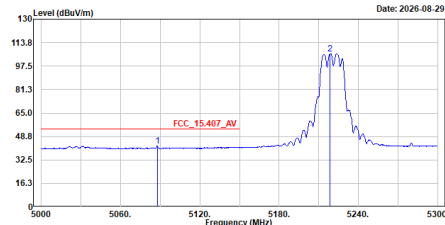


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	42.35	54.00	-11.65	28.56	13.79	Average
2	5218.700	106.14	-----	-----	92.30	13.84	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

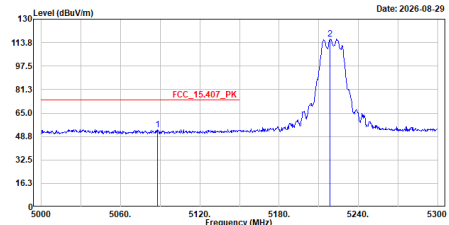


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	53.61	74.00	-20.39	39.82	13.79	Peak
2	5218.700	116.30	-----	-----	102.46	13.84	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

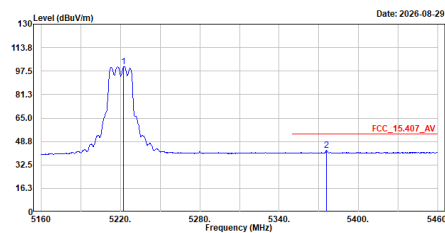


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5222.400	100.56	-----	-----	86.71	13.85	Average
2	5376.000	42.76	54.00	-11.24	28.89	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

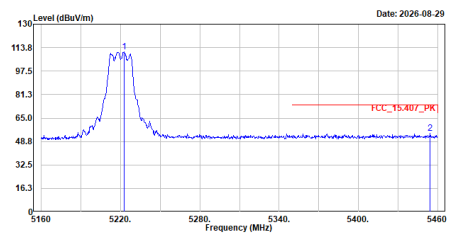


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5222.700	110.72	-----	-----	96.87	13.85	Peak
2	5454.300	54.39	74.00	-19.61	40.35	14.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

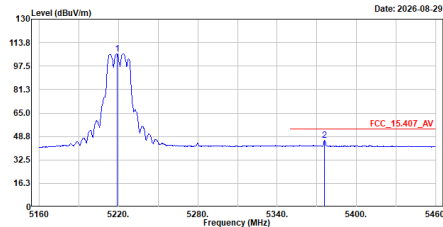


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5218.800	106.10	-----	-----	92.26	13.84	Average
2	5376.000	45.97	54.00	-8.03	32.10	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

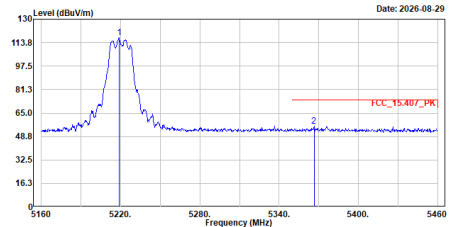


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5218.800	117.03	-----	-----	103.19	13.84	Peak
2	5366.400	56.03	74.00	-17.97	42.16	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

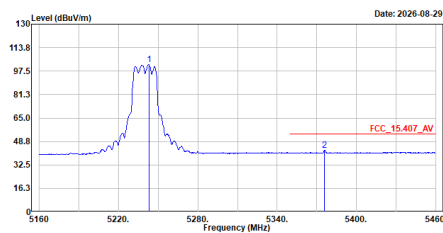


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5243.100	101.97	-----	-----	88.09	13.88	Average
2	5376.000	42.74	54.00	-11.26	28.87	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

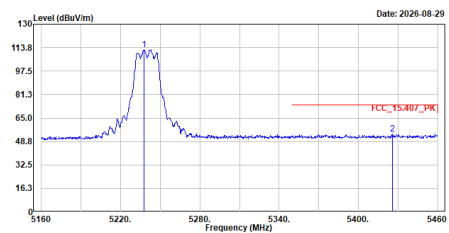


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5238.000	112.26	-----	-----	98.39	13.87	Peak
2	5425.500	54.18	74.00	-19.98	40.17	13.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Caster

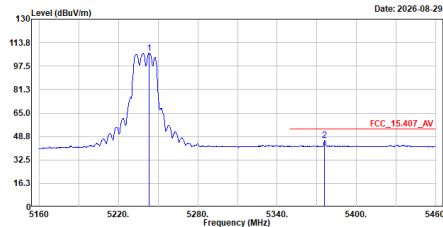


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5243.100	106.60	-----	-----	92.72	13.88	Average
2	5376.000	45.96	54.00	-8.04	32.09	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Caster

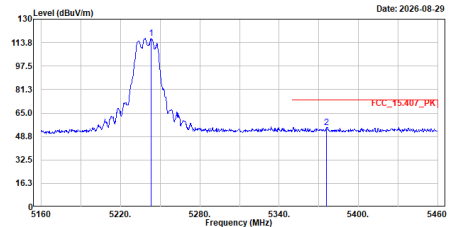


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5243.400	116.70	-----	-----	102.82	13.88	Peak
2	5376.000	54.97	74.00	-19.03	41.10	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Caster

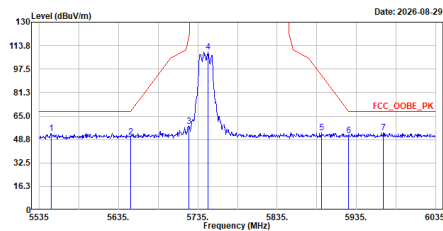


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5550.500	52.88	68.22	-15.34	38.37	14.51	Peak
2	5650.000	50.68	68.23	-17.55	35.48	15.20	Peak
3	5724.000	57.93	119.92	-61.99	42.33	15.60	Peak
4	5748.000	109.33	-----	-----	93.69	15.64	Peak
5	5891.500	53.35	93.00	-39.65	37.66	15.69	Peak
6	5925.000	51.46	68.23	-16.77	35.76	15.70	Peak
7	5969.000	53.63	68.22	-14.59	37.80	15.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Caster

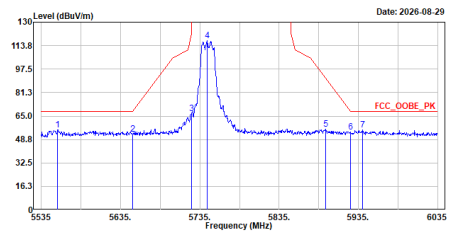


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5555.500	55.22	68.22	-13.00	40.68	14.54	Peak
2	5650.000	52.39	68.23	-15.84	37.19	15.20	Peak
3	5724.500	66.81	121.06	-54.25	51.21	15.60	Peak
4	5744.000	117.16	-----	-----	101.52	15.64	Peak
5	5893.500	56.07	91.52	-35.45	40.38	15.69	Peak
6	5925.000	53.97	68.23	-14.26	38.27	15.70	Peak
7	5948.500	55.36	68.22	-12.86	39.62	15.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
TEST BY :Caster

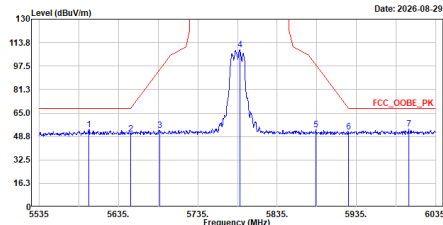


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5597.500	53.39	68.22	-14.83	38.55	14.84	Peak
2	5650.000	50.75	68.23	-17.48	35.55	15.20	Peak
3	5687.000	53.11	95.59	-42.48	37.62	15.49	Peak
4	5785.000	109.11	-----	-----	93.49	15.62	Peak
5	5884.000	53.35	98.54	-45.19	37.66	15.69	Peak
6	5925.000	51.90	68.23	-16.33	36.20	15.70	Peak
7	6001.000	53.87	68.22	-14.35	37.94	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
TEST BY :Caster

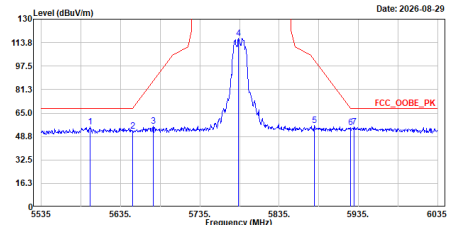


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5597.000	55.49	68.22	-12.73	40.65	14.84	Peak
2	5650.000	52.61	68.23	-15.62	37.41	15.20	Peak
3	5676.000	55.97	87.45	-31.48	40.54	15.43	Peak
4	5784.000	116.87	-----	-----	101.24	15.63	Peak
5	5879.500	56.41	101.87	-45.46	40.72	15.69	Peak
6	5925.000	54.77	68.23	-13.46	39.07	15.70	Peak
7	5929.500	55.34	68.22	-12.88	39.63	15.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
TEST BY :Caster

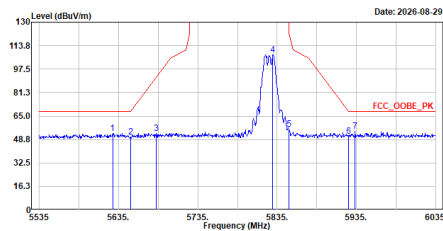


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5627.500	52.99	68.22	-15.23	37.94	15.05	Peak
2	5650.000	50.68	68.23	-17.55	35.48	15.20	Peak
3	5682.500	53.14	92.26	-39.12	37.69	15.45	Peak
4	5825.500	107.64	-----	-----	92.00	15.64	Peak
5	5850.000	55.83	122.20	-66.37	40.15	15.68	Peak
6	5925.000	50.99	68.23	-17.24	35.29	15.70	Peak
7	5933.500	54.57	68.22	-13.65	38.85	15.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
TEST BY :Caster

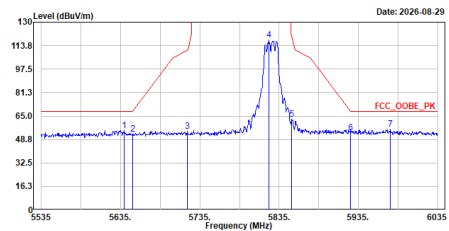


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5640.000	54.95	68.22	-13.27	39.81	15.14	Peak
2	5650.000	52.25	68.23	-15.98	37.05	15.20	Peak
3	5719.500	54.47	110.66	-56.19	38.87	15.60	Peak
4	5822.000	117.67	-----	-----	102.04	15.63	Peak
5	5850.500	62.59	121.06	-58.47	46.91	15.68	Peak
6	5925.000	53.64	68.23	-14.59	37.94	15.70	Peak
7	5975.500	55.79	68.22	-12.43	39.94	15.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

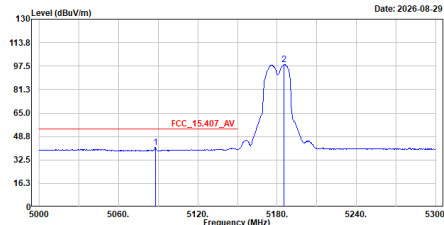


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5087.900	41.23	54.00	-12.77	27.44	13.79	Average
2	5185.100	98.54	-----	-----	84.69	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

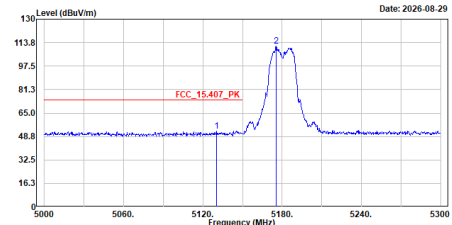


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5130.200	52.70	74.00	-21.30	38.82	13.88	Peak
2	5175.500	111.18	-----	-----	97.30	13.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

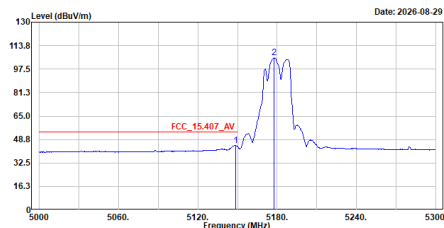


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.500	44.52	54.00	-9.48	30.60	13.92	Average
2	5177.600	105.25	-----	-----	91.38	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

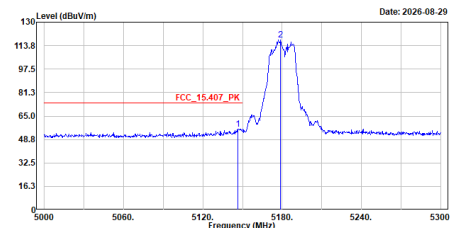


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5146.700	56.16	74.00	-17.84	42.24	13.92	Peak
2	5178.800	117.83	-----	-----	103.97	13.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band1_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz_Band1
TEST BY :Caster

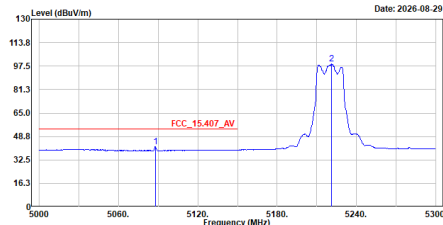


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5087.900	41.70	54.00	-12.30	27.91	13.79	Average
2	5221.100	98.91	-----	-----	85.06	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band1_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz_Band1
TEST BY :Caster

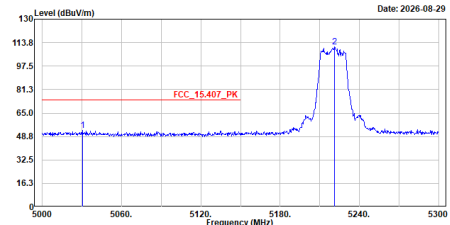


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5030.300	52.74	74.00	-21.26	38.98	13.76	Peak
2	5221.400	118.95	-----	-----	97.10	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band1_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz_Band1
TEST BY :Caster

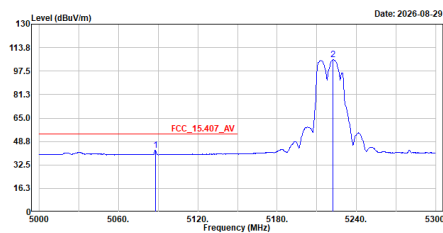


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5087.900	42.72	54.00	-11.28	28.93	13.79	Average
2	5222.300	105.59	-----	-----	91.74	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band1_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz_Band1
TEST BY :Caster

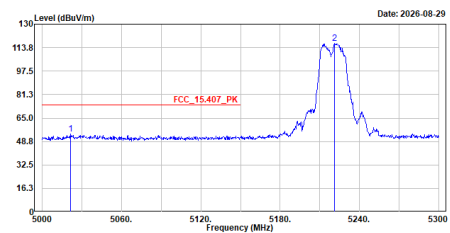


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5021.300	53.91	74.00	-20.09	40.15	13.76	Peak
2	5221.100	116.89	-----	-----	103.04	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band2_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz_Band2
TEST BY :Caster

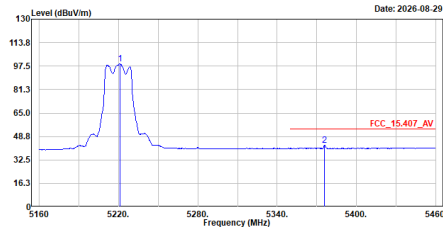


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5221.200	99.10	-----	-----	85.25	13.85	Average
2	5376.000	42.60	54.00	-11.40	28.73	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band2_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz_Band2
TEST BY :Caster

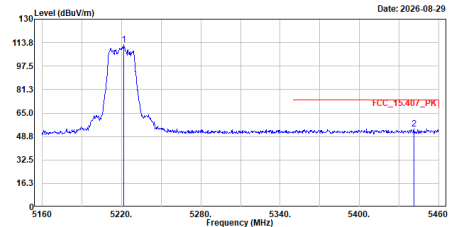


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5221.500	112.21	-----	-----	98.36	13.85	Peak
2	5441.100	54.04	74.00	-19.96	40.07	13.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band2_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz_Band2
TEST BY :Caster

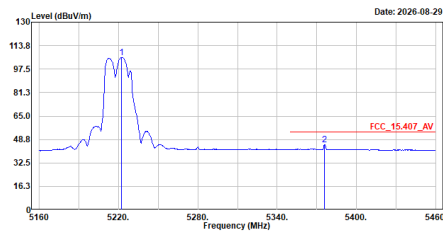


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5222.100	105.58	-----	-----	91.73	13.85	Average
2	5376.000	45.36	54.00	-8.64	31.49	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_Band2_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz_Band2
TEST BY :Caster

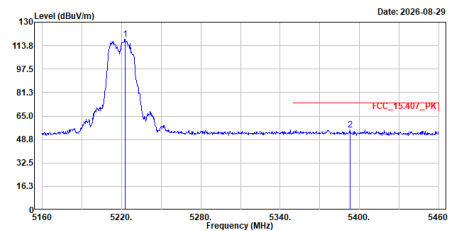


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5222.700	118.38	-----	-----	104.53	13.85	Peak
2	5392.800	55.27	74.00	-18.73	41.42	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

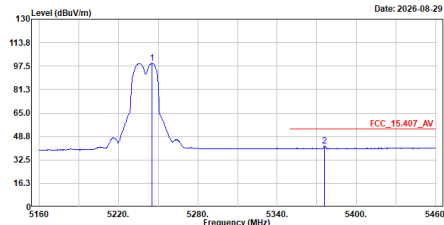


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5245.500	99.45	-----	-----	85.56	13.89	Average
2	5376.000	42.15	54.00	-11.85	28.28	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

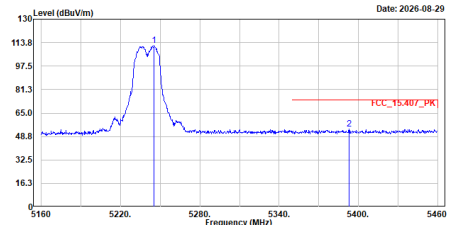


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5245.500	111.67	-----	-----	97.78	13.89	Peak
2	5393.100	53.98	74.00	-20.02	40.13	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

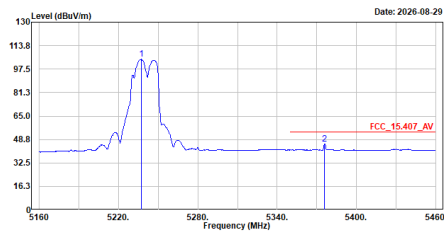


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5237.100	104.27	-----	-----	90.40	13.87	Average
2	5376.000	45.66	54.00	-8.34	31.79	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5240MHz
TEST BY :Caster

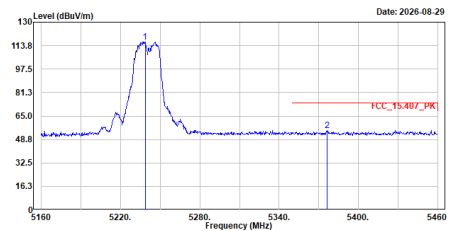


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5238.600	116.31	-----	-----	102.44	13.87	Peak
2	5376.300	55.04	74.00	-18.96	41.17	13.87	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_H_Peak

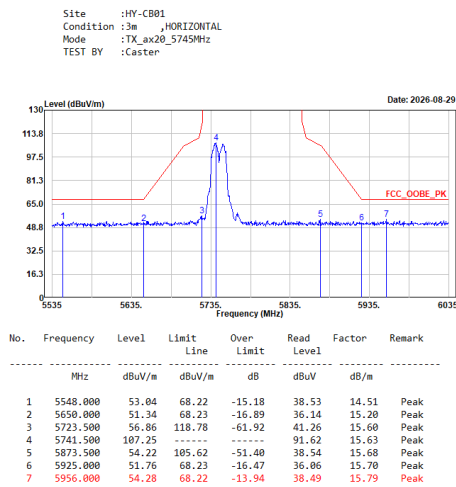


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_V_Peak

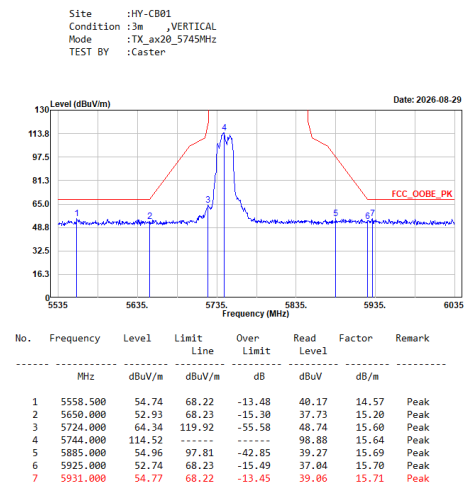


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_H_Peak

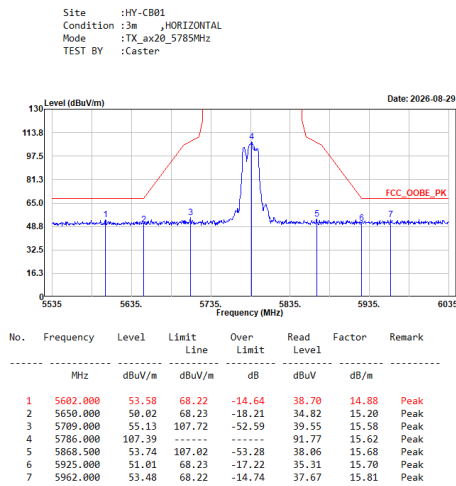

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax20_5785MHz_V_Peak

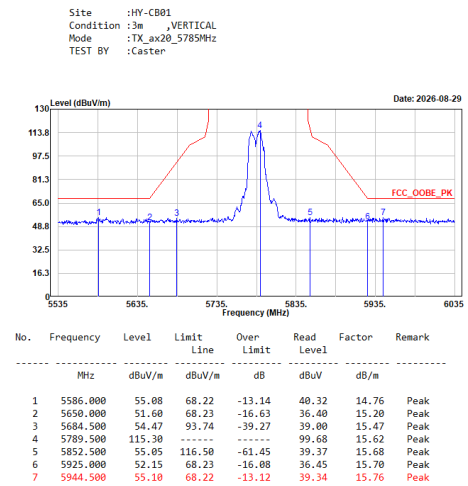

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Caster

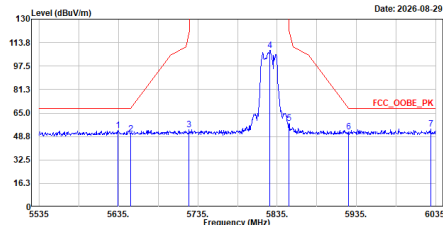


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5634.500	52.96	68.22	-15.26	37.86	15.10	Peak
2	5650.000	50.60	68.23	-17.63	35.40	15.20	Peak
3	5724.000	53.30	119.92	-66.62	37.70	15.60	Peak
4	5826.000	108.49	-----	-----	92.85	15.64	Peak
5	5850.000	57.97	122.20	-64.23	42.29	15.68	Peak
6	5925.000	51.95	68.23	-16.28	36.25	15.70	Peak
7	6028.500	54.19	68.22	-14.03	38.07	16.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Caster

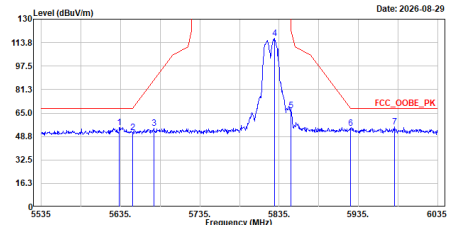


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5633.500	54.93	68.22	-13.29	39.84	15.09	Peak
2	5650.000	51.41	68.23	-16.82	36.21	15.20	Peak
3	5677.000	54.69	88.19	-33.50	39.26	15.43	Peak
4	5829.000	116.86	-----	-----	101.22	15.64	Peak
5	5850.000	66.56	122.20	-55.64	50.88	15.68	Peak
6	5925.000	54.28	68.23	-13.95	38.58	15.70	Peak
7	5981.000	55.31	68.22	-12.91	39.44	15.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

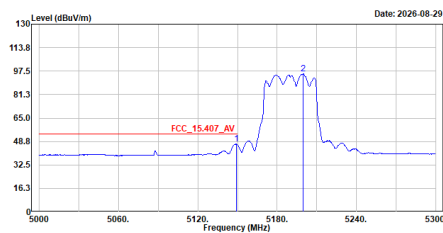


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	46.86	54.00	-7.14	32.93	13.93	Average
2	5199.800	95.51	-----	-----	81.70	13.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

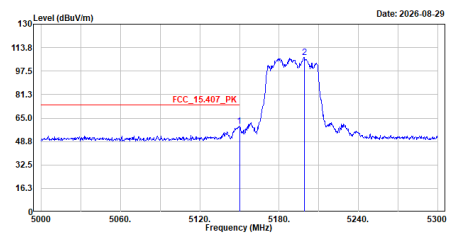


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	59.32	74.00	-14.68	45.39	13.93	Peak
2	5198.900	106.95	-----	-----	93.14	13.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

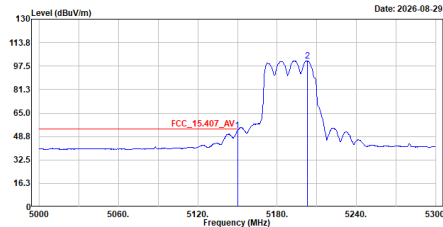


No.	Frequency	Level	Limit	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	52.74	54.00	-1.26	38.81	13.93	Average
2	5202.800	101.17	-----	-----	87.35	13.82	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

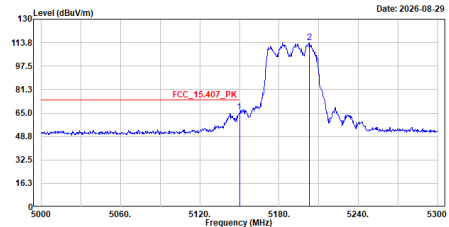


No.	Frequency	Level	Limit	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	65.90	74.00	-8.10	51.97	13.93	Peak
2	5202.800	113.77	-----	-----	99.95	13.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band1_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz_Band1
TEST BY :Caster

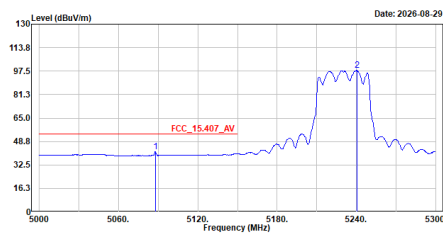


No.	Frequency	Level	Limit	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	41.74	54.00	-12.26	27.95	13.79	Average
2	5240.300	97.98	-----	-----	84.11	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band1_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz_Band1
TEST BY :Caster

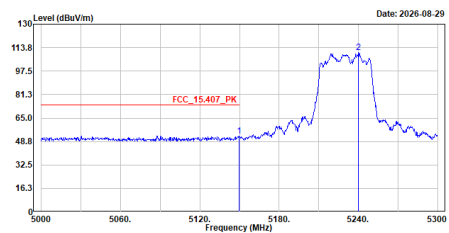


No.	Frequency	Level	Limit	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	52.64	74.00	-21.36	38.71	13.93	Peak
2	5240.000	118.55	-----	-----	96.68	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band1_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz_Band1
TEST BY :Caster

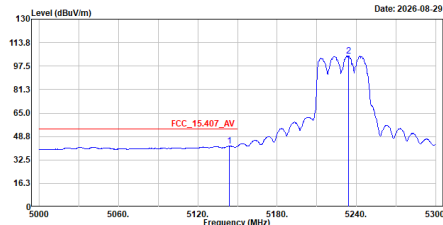


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.000	42.25	54.00	-11.75	28.34	13.91	Average
2	5234.000	104.62	-----	-----	90.75	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band1_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz_Band1
TEST BY :Caster

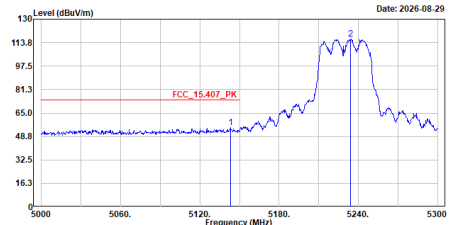


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.100	54.71	74.00	-19.29	40.80	13.91	Peak
2	5234.300	116.42	-----	-----	102.55	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band2_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz_Band2
TEST BY :Caster

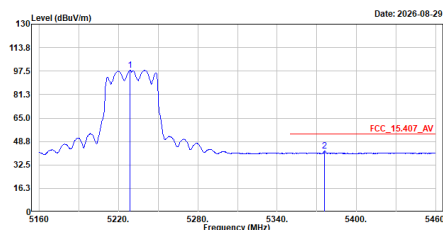


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5228.700	98.08	-----	-----	84.23	13.85	Average
2	5376.000	42.43	54.00	-11.57	28.56	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_Band2_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz_Band2
TEST BY :Caster

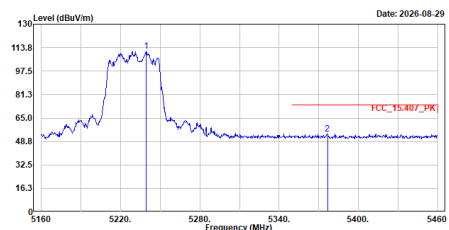

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5239.200	111.32	-----	-----	97.45	13.87	Peak
2	5376.600	53.93	74.00	-20.07	40.86	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.