
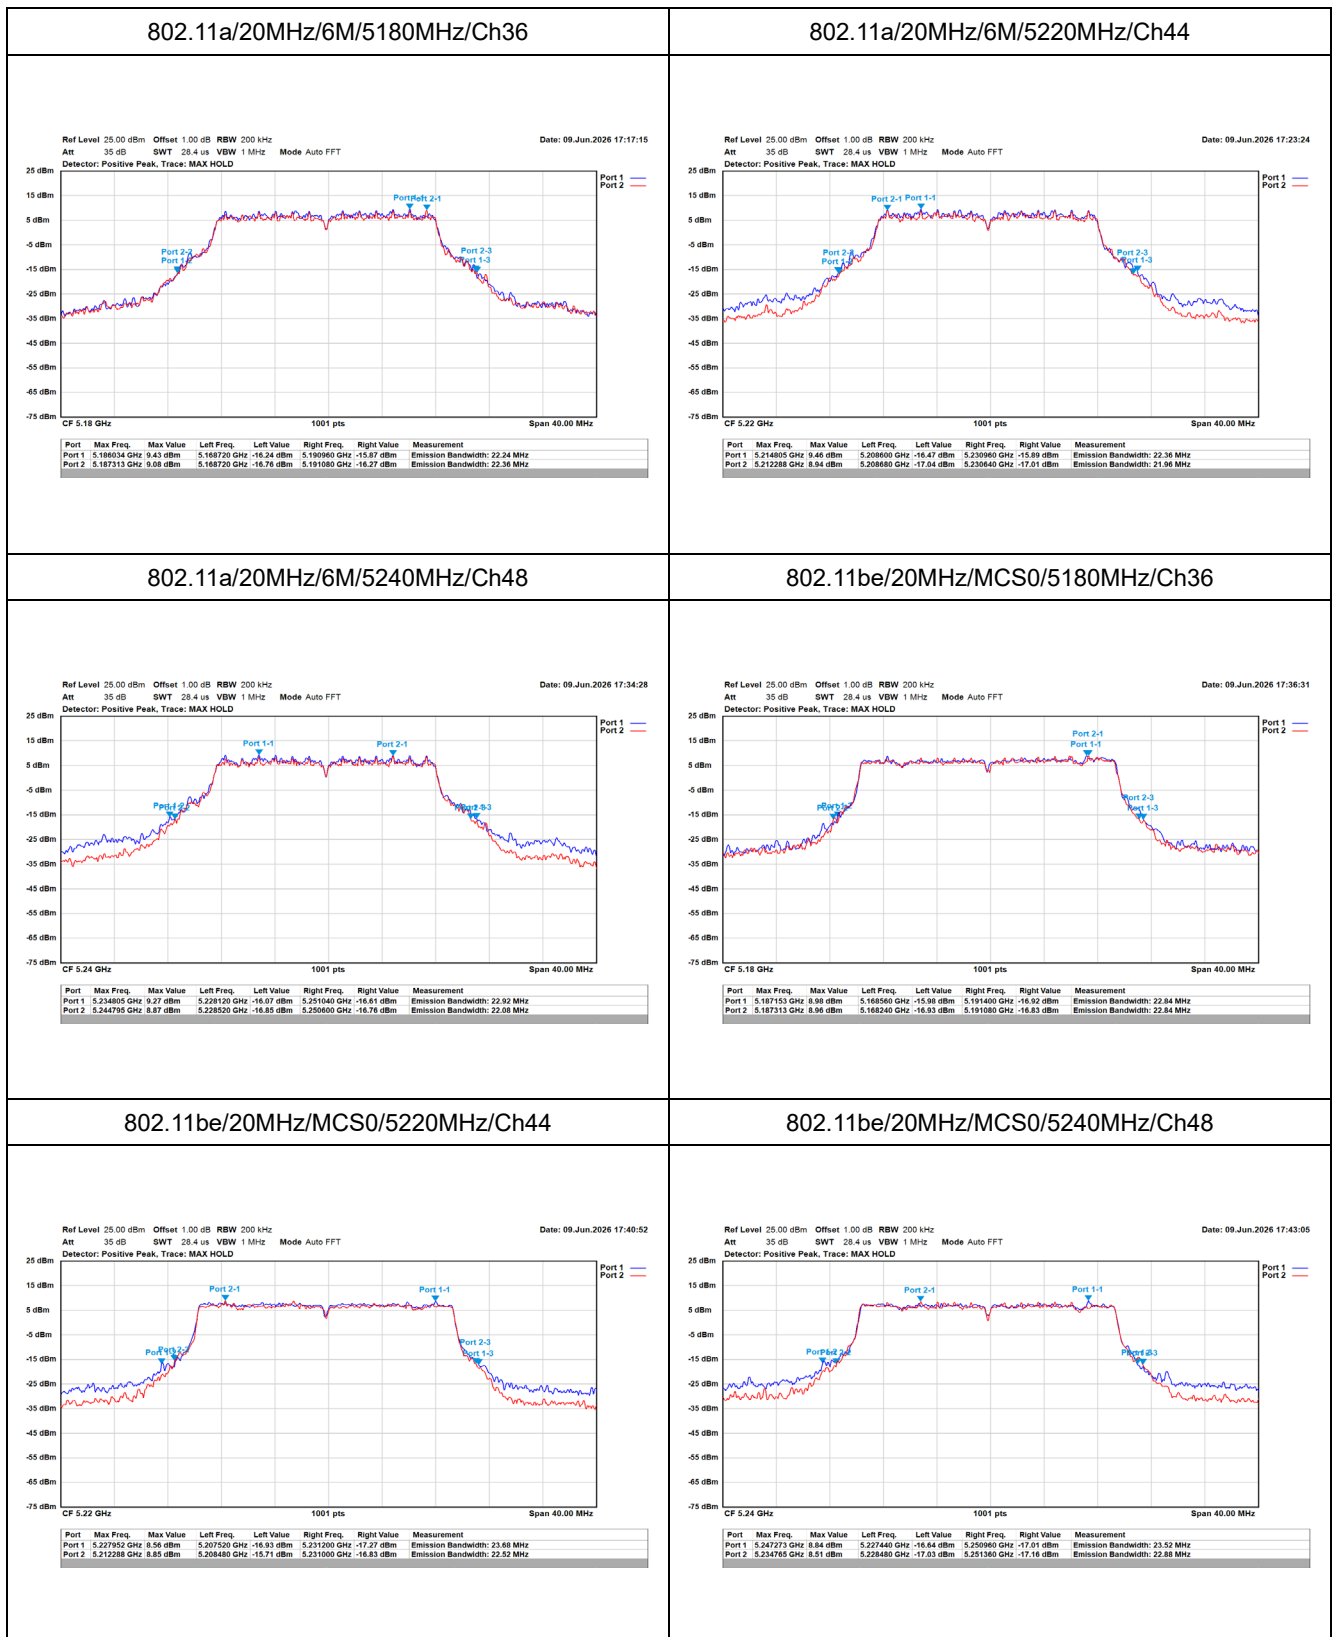


For 26dB Bandwidth:

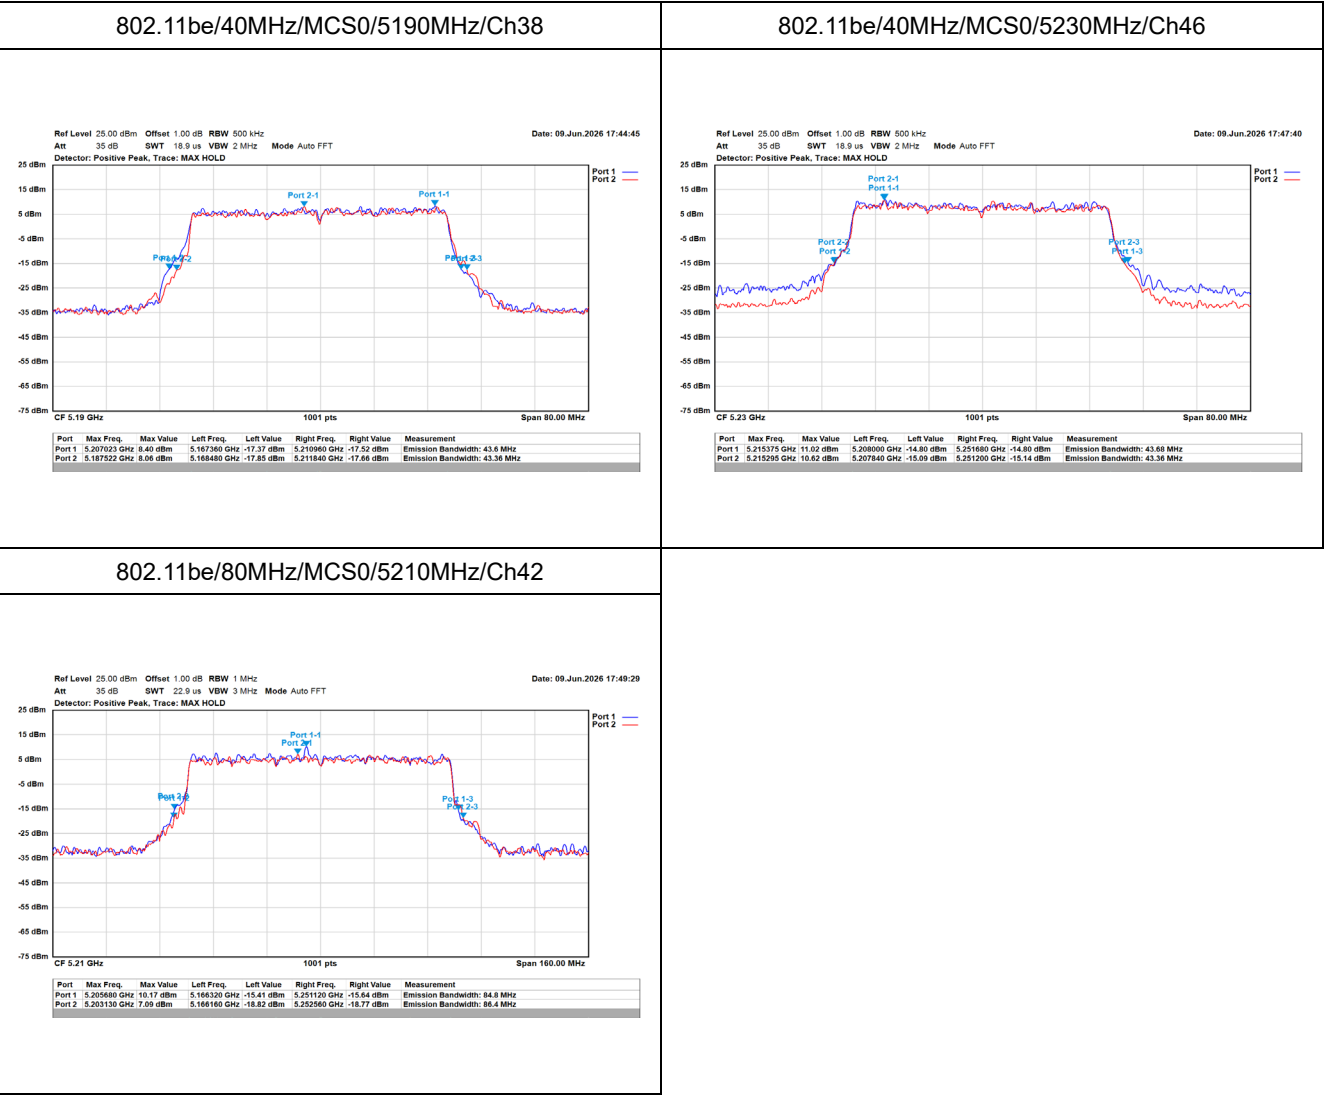

Appendix C. Test Result of Maximum Conducted Output Power

Master mode

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	20.29	19.55	22.95	30.00	Pass
	5220	25.82	25.18	28.52	30.00	Pass
	5240	25.62	24.78	28.23	30.00	Pass
	5745	26.04	25.82	28.94	30.00	Pass
	5785	24.89	25.58	28.26	30.00	Pass
	5825	24.42	25.06	27.76	30.00	Pass
802.11n (20MHz)	5180	20.20	19.68	22.96	30.00	Pass
	5220	25.77	25.09	28.45	30.00	Pass
	5240	25.45	24.76	28.13	30.00	Pass
	5745	25.78	25.44	28.62	30.00	Pass
	5785	24.63	25.18	27.92	30.00	Pass
	5825	24.17	24.78	27.50	30.00	Pass
802.11n (40MHz)	5190	18.00	17.40	20.72	30.00	Pass
	5230	23.36	22.51	25.97	30.00	Pass
	5755	23.76	23.50	26.64	30.00	Pass
	5795	24.37	24.59	27.49	30.00	Pass
802.11ac (20MHz)	5180	20.29	19.76	23.04	30.00	Pass
	5220	25.82	25.19	28.53	30.00	Pass
	5240	25.54	24.83	28.21	30.00	Pass
	5745	25.84	25.49	28.68	30.00	Pass
	5785	24.73	25.26	28.01	30.00	Pass
	5825	24.24	24.84	27.56	30.00	Pass
802.11ac (40MHz)	5190	18.07	17.45	20.78	30.00	Pass
	5230	23.43	22.60	26.05	30.00	Pass
	5755	23.81	23.56	26.70	30.00	Pass
	5795	24.45	24.65	27.56	30.00	Pass
802.11ac (80MHz)	5210	17.96	17.30	20.65	30.00	Pass
	5775	21.69	21.70	24.71	30.00	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11ax (20MHz)	5180	20.35	19.82	23.10	30.00	Pass
	5220	25.88	25.27	28.60	30.00	Pass
	5240	25.63	24.88	28.28	30.00	Pass
	5745	25.92	25.58	28.76	30.00	Pass
	5785	24.83	25.31	28.09	30.00	Pass
	5825	24.34	24.89	27.63	30.00	Pass
802.11ax (40MHz)	5190	18.16	17.50	20.85	30.00	Pass
	5230	23.51	22.69	26.13	30.00	Pass
	5755	23.90	23.61	26.77	30.00	Pass
	5795	24.52	24.71	27.63	30.00	Pass
802.11ax (80MHz)	5210	18.01	17.37	20.71	30.00	Pass
	5775	21.74	21.77	24.77	30.00	Pass
802.11be (20MHz)	5180	20.45	19.92	23.20	30.00	Pass
	5220	25.95	25.32	28.66	30.00	Pass
	5240	25.68	24.94	28.34	30.00	Pass
	5745	26.00	25.65	28.84	30.00	Pass
	5785	24.90	25.40	28.17	30.00	Pass
	5825	24.41	24.98	27.71	30.00	Pass
802.11be (40MHz)	5190	18.24	17.59	20.94	30.00	Pass
	5230	23.58	22.79	26.21	30.00	Pass
	5755	23.98	23.70	26.85	30.00	Pass
	5795	24.61	24.77	27.70	30.00	Pass
802.11be (80MHz)	5210	18.08	17.42	20.77	30.00	Pass
	5775	21.82	21.87	24.86	30.00	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.

Slave mode

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	20.32	19.69	23.03	24.00	Pass
	5220	20.70	20.38	23.55	24.00	Pass
	5240	21.00	20.43	23.73	24.00	Pass
802.11n (20MHz)	5180	20.16	19.60	22.90	24.00	Pass
	5220	20.71	20.06	23.41	24.00	Pass
	5240	20.80	20.31	23.57	24.00	Pass
802.11n (40MHz)	5190	17.84	17.29	20.58	24.00	Pass
	5230	20.55	20.02	23.30	24.00	Pass
802.11ac (20MHz)	5180	20.23	19.70	22.98	24.00	Pass
	5220	20.76	20.13	23.47	24.00	Pass
	5240	20.87	20.40	23.65	24.00	Pass
802.11ac (40MHz)	5190	17.92	17.37	20.66	24.00	Pass
	5230	20.64	20.12	23.40	24.00	Pass
802.11ac (80MHz)	5210	17.95	17.26	20.63	24.00	Pass
802.11ax (20MHz)	5180	20.32	19.78	23.07	24.00	Pass
	5220	20.81	20.23	23.54	24.00	Pass
	5240	20.93	20.47	23.72	24.00	Pass
802.11ax (40MHz)	5190	17.98	17.42	20.72	24.00	Pass
	5230	20.72	20.20	23.48	24.00	Pass
802.11ax (80MHz)	5210	18.02	17.32	20.69	24.00	Pass
802.11be (20MHz)	5180	20.38	19.88	23.15	24.00	Pass
	5220	20.89	20.29	23.61	24.00	Pass
	5240	21.00	20.53	23.78	24.00	Pass
802.11be (40MHz)	5190	18.05	17.51	20.80	24.00	Pass
	5230	20.80	20.26	23.55	24.00	Pass
802.11be (80MHz)	5210	18.11	17.41	20.78	24.00	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant. 1 (mW)} + \text{Ant. 2 (mW)})$.

Appendix D. Test Result of Maximum Power Spectral Density


Master mode


Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)			Limit (dBm/MHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	8.32	7.38	10.57	17.00	Pass
	5220	12.99	12.25	15.57	17.00	Pass
	5240	12.65	11.90	14.88	17.00	Pass
802.11be (20MHz)	5180	7.67	6.70	10.00	17.00	Pass
	5220	12.44	12.26	15.19	17.00	Pass
	5240	11.97	11.07	14.50	17.00	Pass
802.11be (40MHz)	5190	2.73	2.01	5.40	17.00	Pass
	5230	7.32	6.58	9.83	17.00	Pass
802.11be (80MHz)	5210	-0.61	-1.38	1.78	17.00	Pass


Note: Trace bin-by-bin of each transmits port summing can be performed maximum power density.

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/500kHz)			Limit (dBm/500kHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5745	11.67	11.29	14.11	29.63	Pass
	5785	9.42	10.69	12.81	29.63	Pass
	5825	9.77	10.72	13.06	29.63	Pass
802.11be (20MHz)	5745	10.47	10.28	13.26	29.63	Pass
	5785	8.66	9.27	11.99	29.63	Pass
	5825	9.81	9.61	12.20	29.63	Pass
802.11be (40MHz)	5755	6.49	5.36	8.51	29.63	Pass
	5795	6.17	6.27	8.98	29.63	Pass
802.11be (80MHz)	5775	1.55	0.85	4.07	29.63	Pass

Note: Trace bin-by-bin of each transmits port summing can be performed maximum power density.

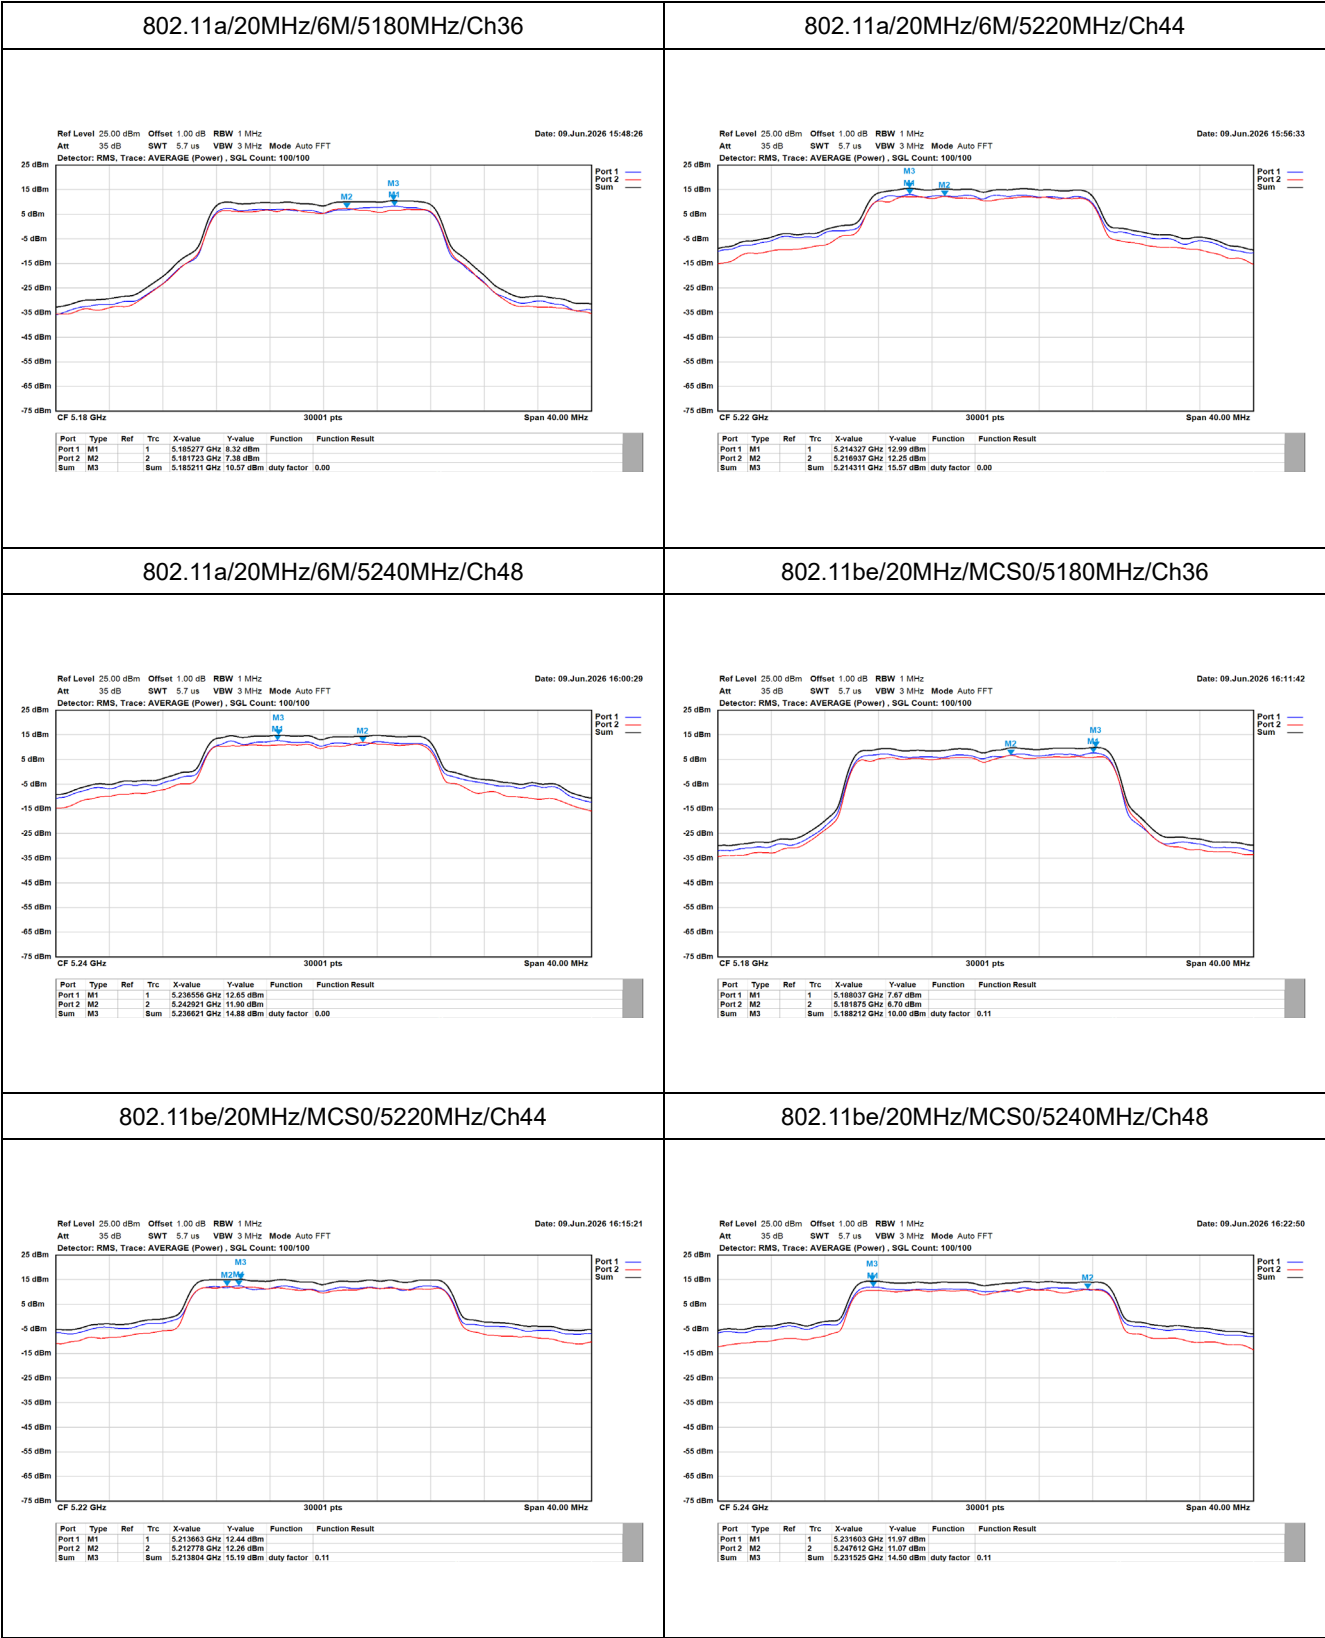

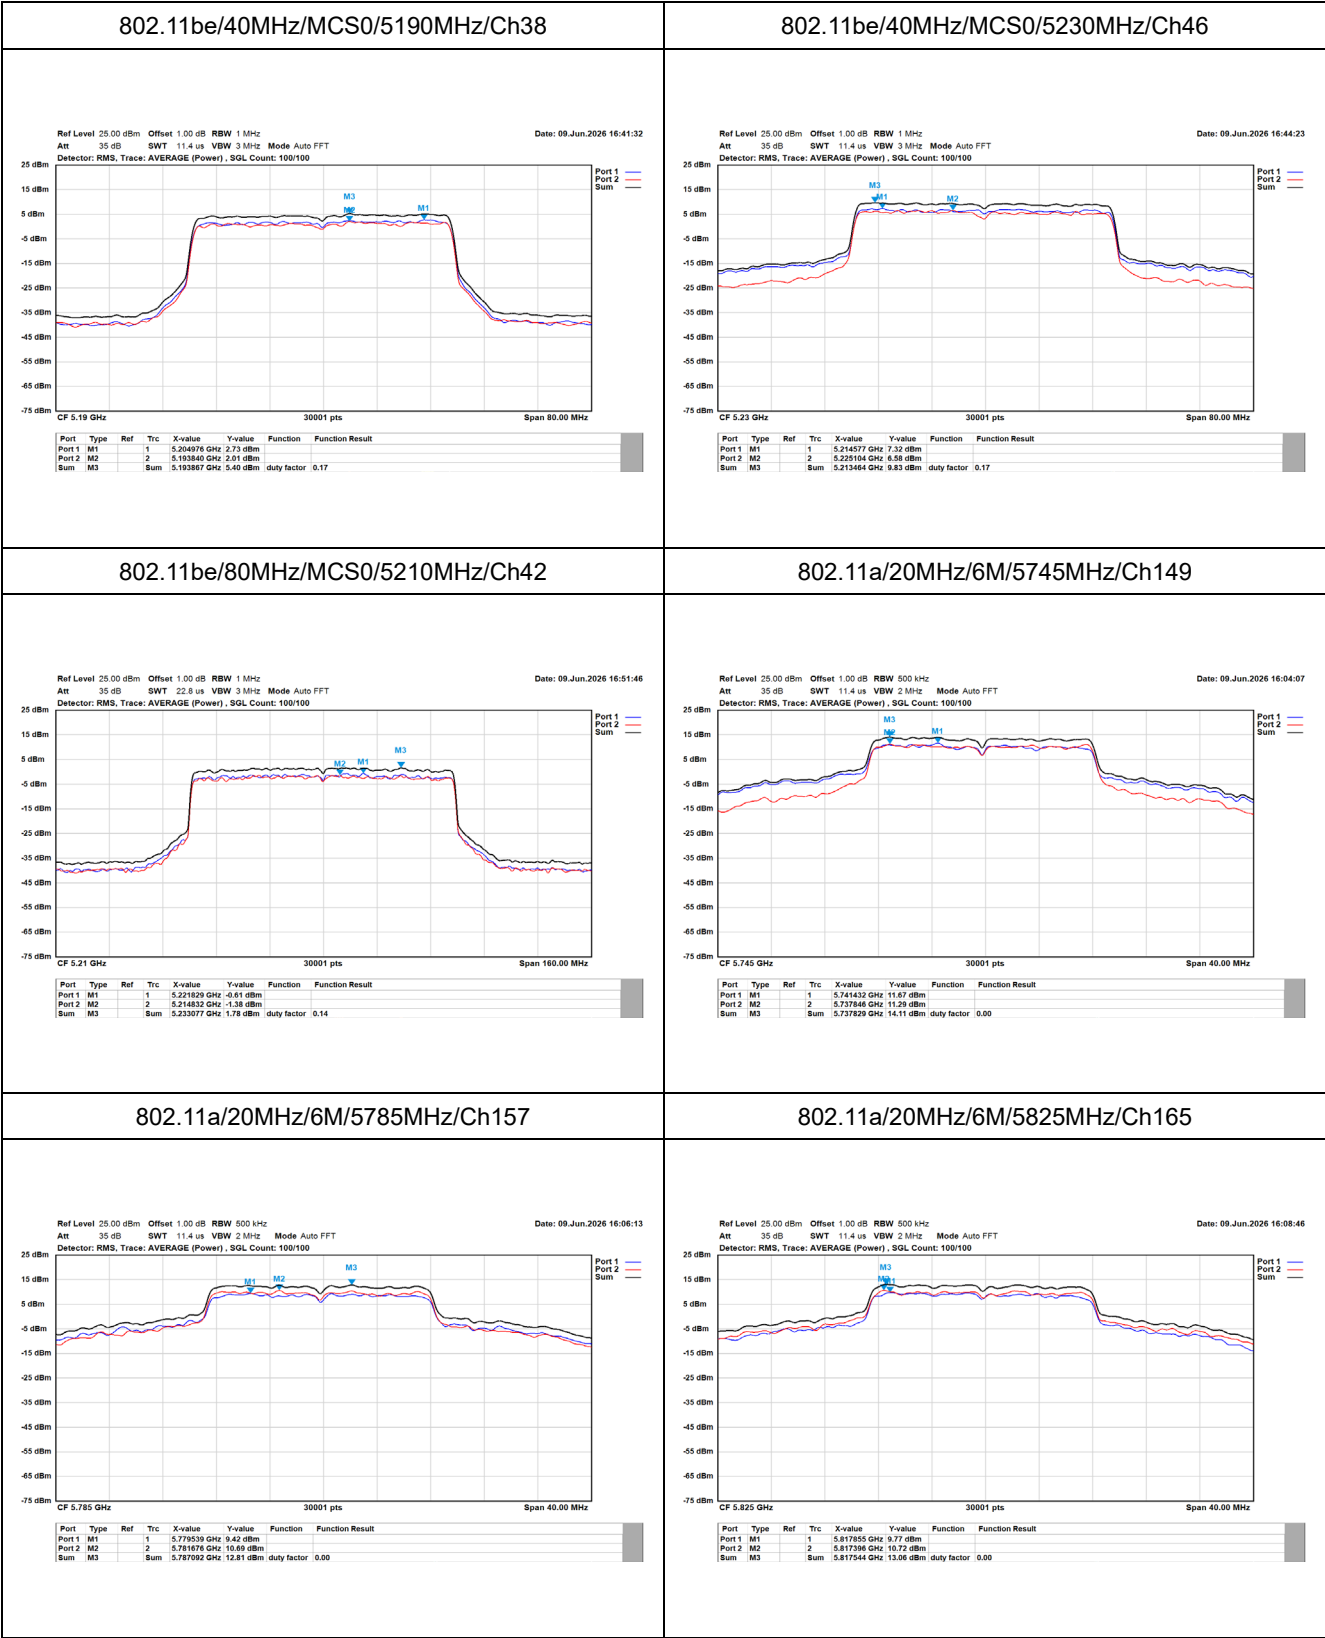


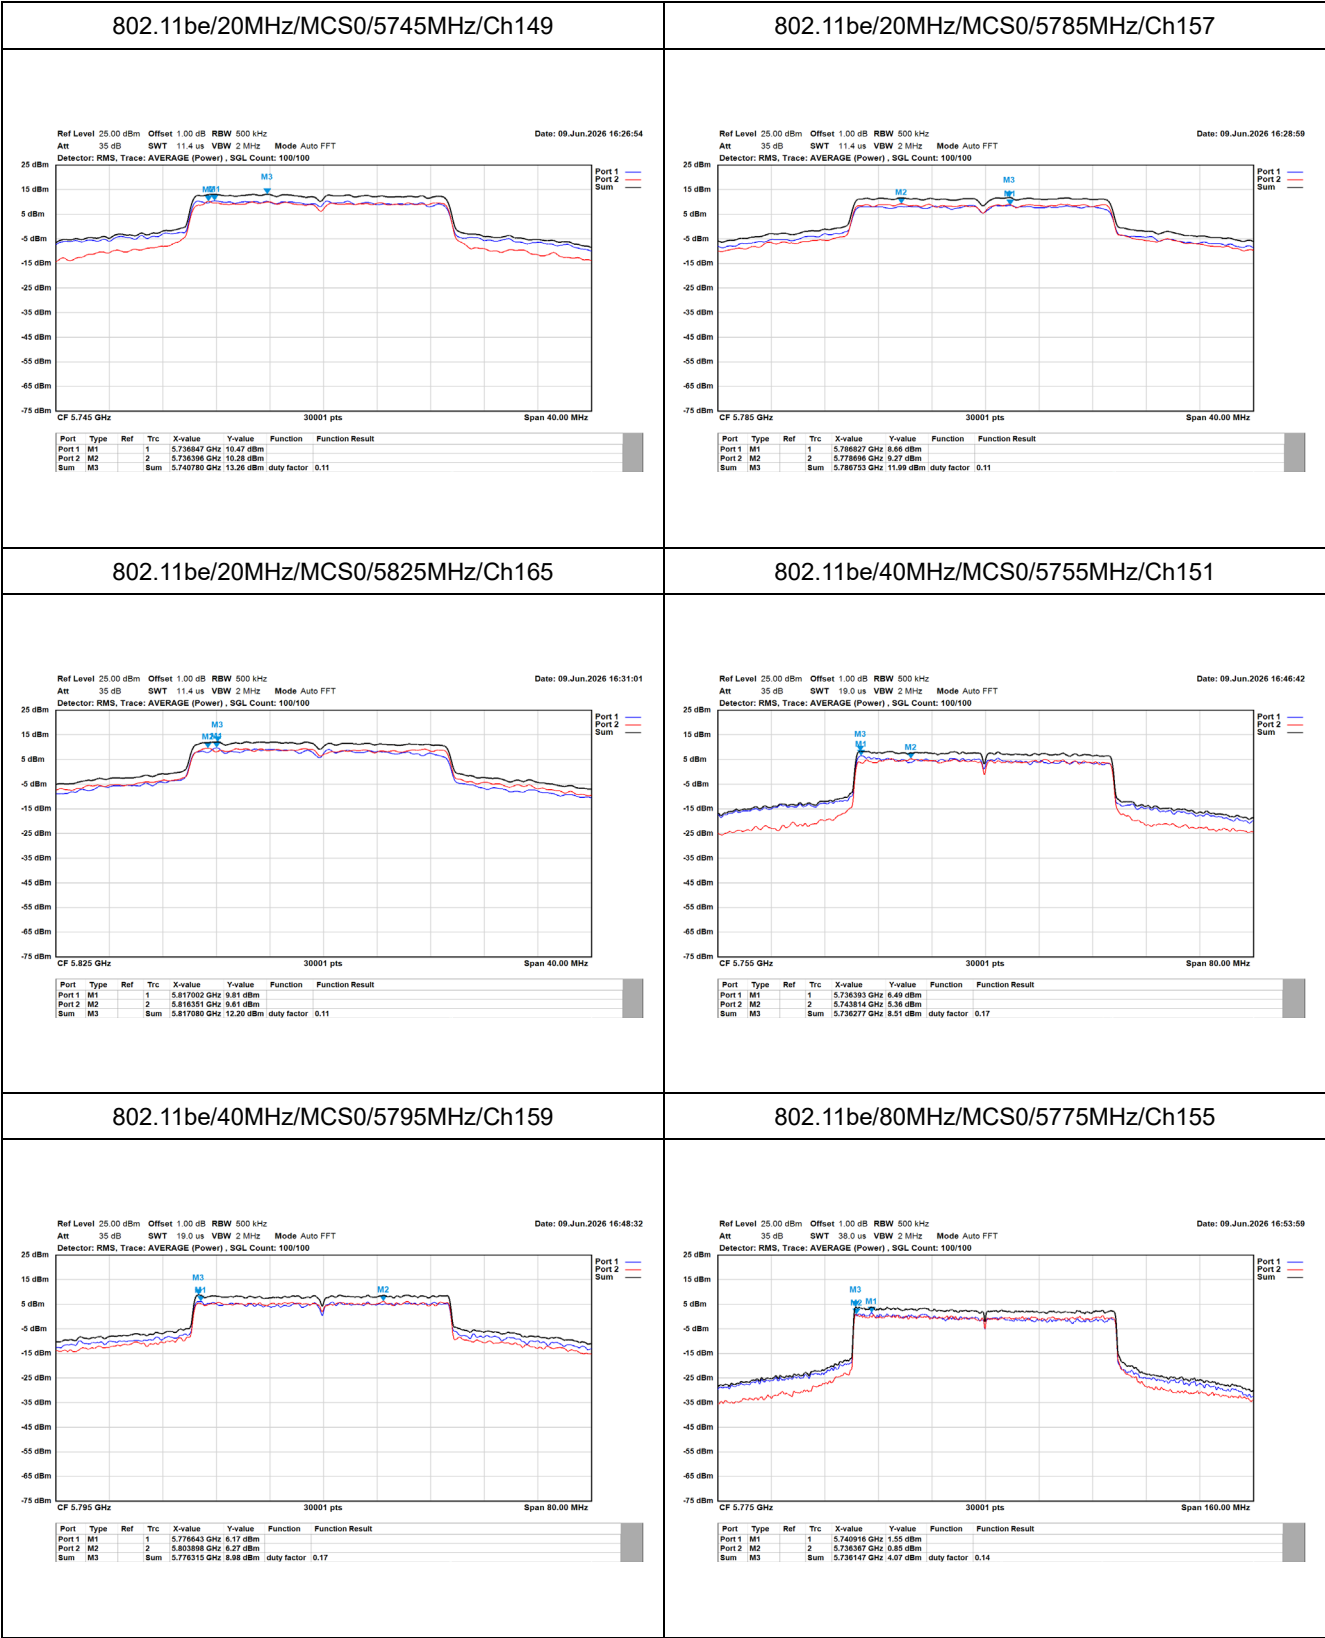


Slave mode

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)			Limit (dBm/MHz)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	8.22	7.42	10.83	11.00	Pass
	5220	8.06	7.78	10.85	11.00	Pass
	5240	8.01	7.57	10.76	11.00	Pass
802.11be (20MHz)	5180	7.79	7.65	10.64	11.00	Pass
	5220	7.79	7.15	10.21	11.00	Pass
	5240	7.60	7.28	10.22	11.00	Pass
802.11be (40MHz)	5190	2.95	1.93	5.53	11.00	Pass
	5230	5.34	4.92	8.13	11.00	Pass
802.11be (80MHz)	5210	-0.91	-1.34	1.83	11.00	Pass

Note: Trace bin-by-bin of each transmits port summing can be performed maximum power density.

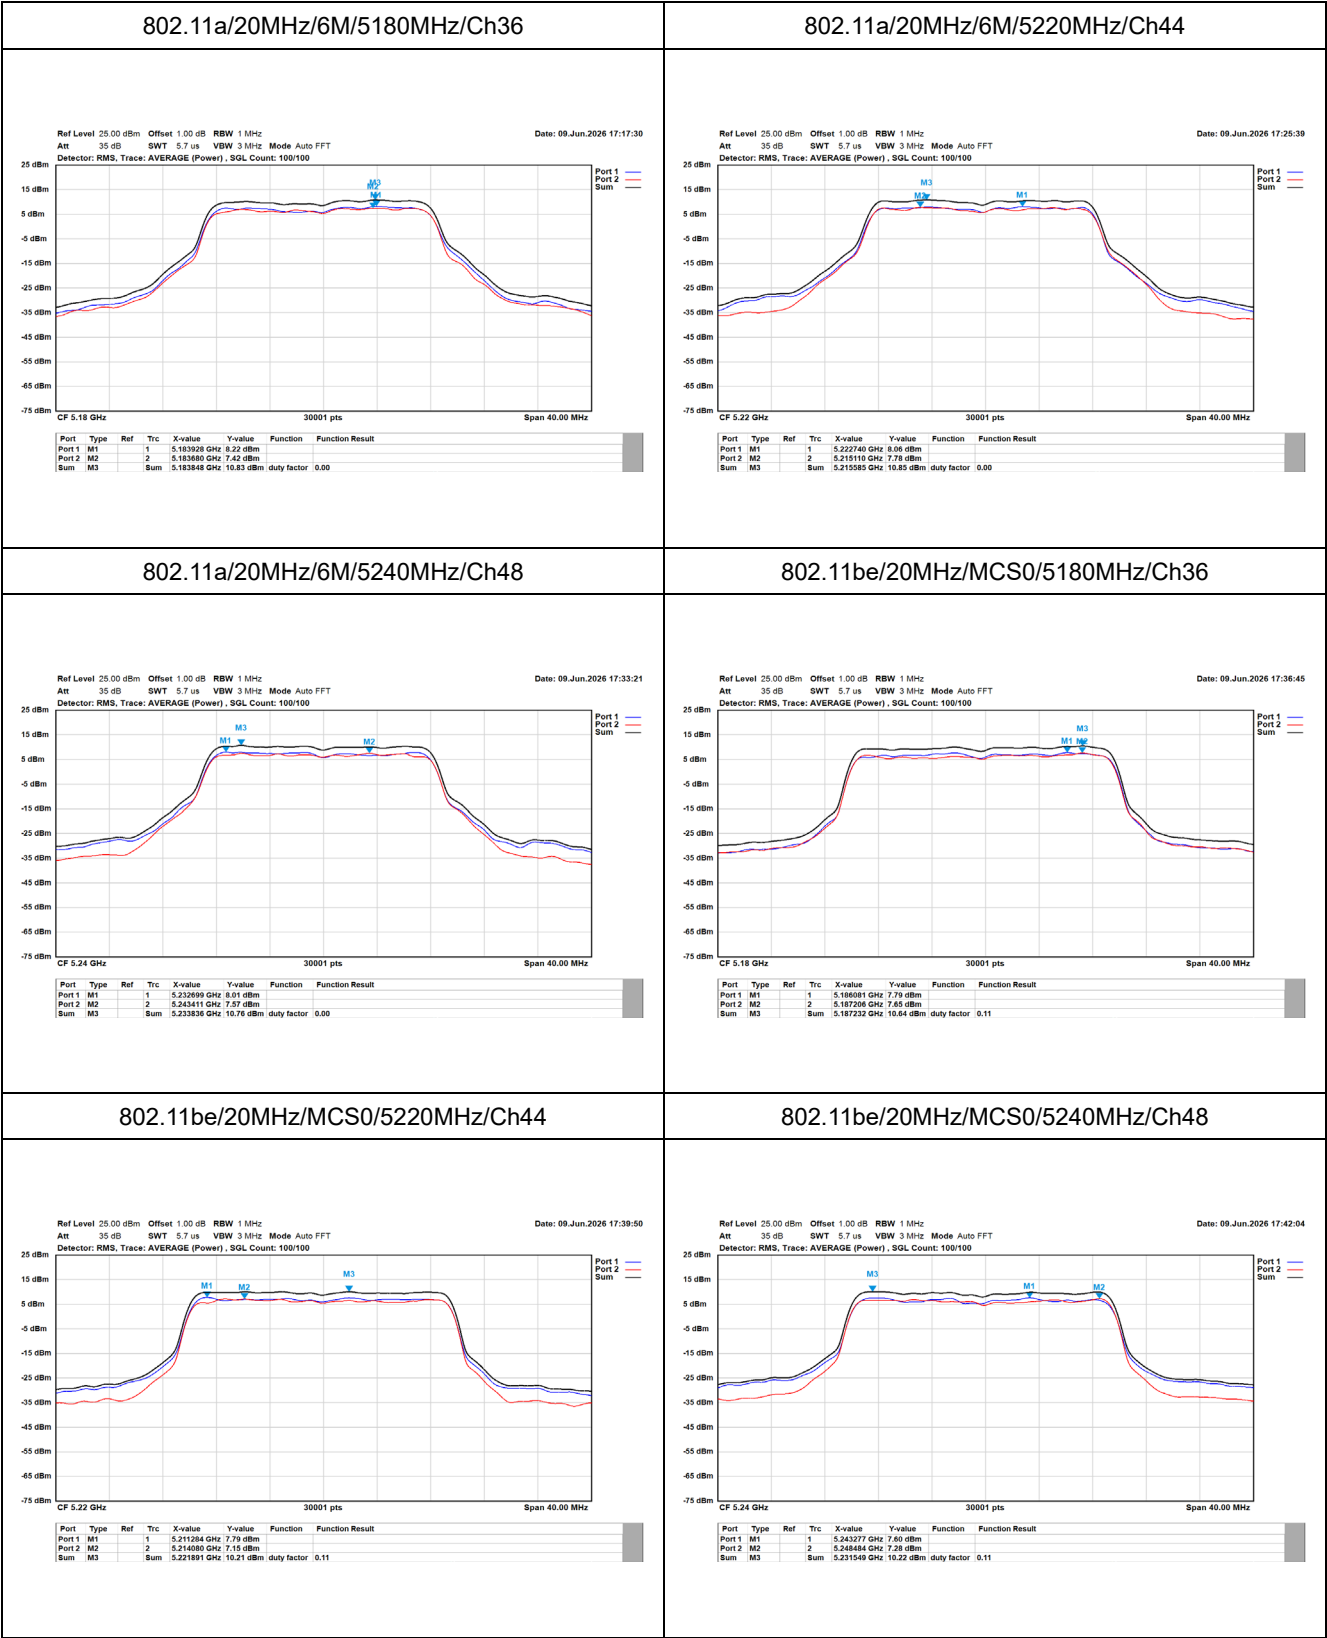

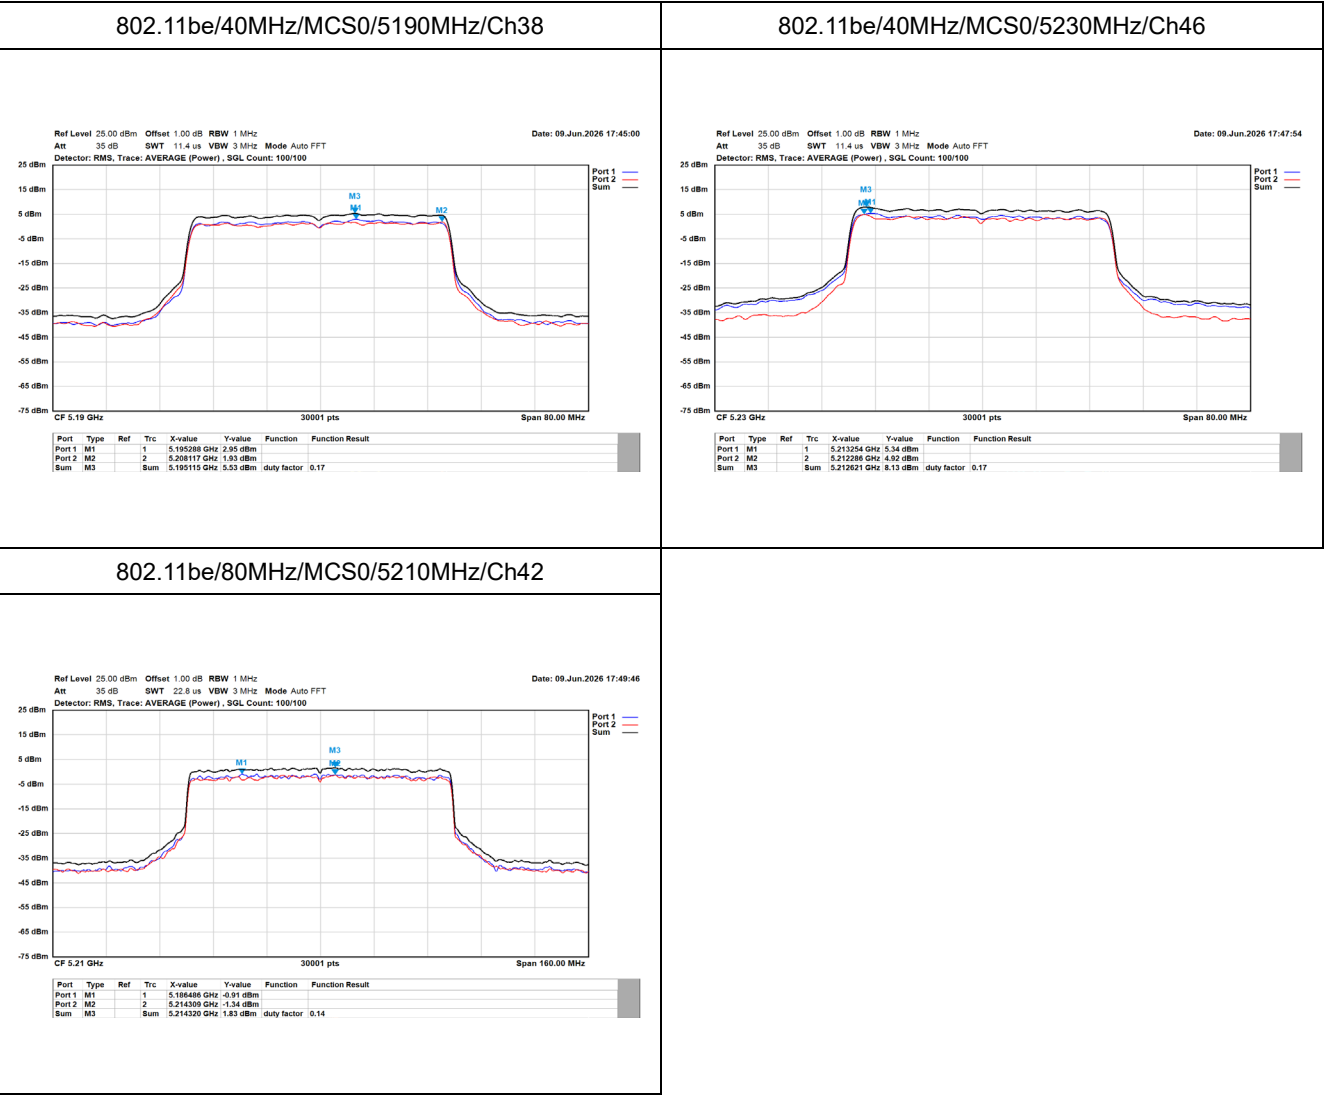


Appendix E. Test Result of Radiated Emission
Balance 310 5G

TX_a_5180MHz_H Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_a_5180MHz TEST BY :Caster Date: 2026-06-02 No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 10360.000 44.12 68.22 -24.10 55.18 -11.06 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	TX_a_5180MHz_V Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_a_5180MHz TEST BY :Caster Date: 2026-06-02 No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 10360.000 43.66 68.22 -24.56 54.72 -11.06 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.
TX_a_5220MHz_H Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_a_5220MHz TEST BY :Caster Date: 2026-06-02 No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 10440.000 43.42 68.22 -24.80 54.80 -11.38 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	TX_a_5220MHz_V Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_a_5220MHz TEST BY :Caster Date: 2026-06-02 No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 10440.000 43.52 68.22 -24.70 54.90 -11.38 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

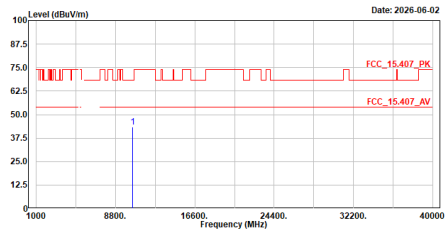


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	43.25	68.22	-24.97	54.52	-11.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Caster

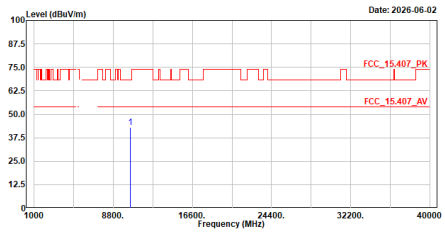


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	42.84	68.22	-25.38	54.11	-11.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Caster

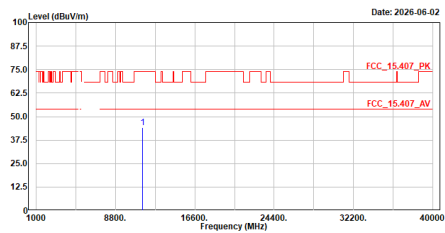


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	44.26	74.00	-29.74	53.61	-9.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Caster

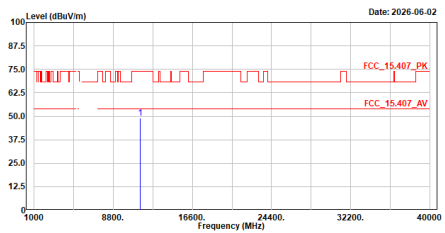


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	49.02	74.00	-24.98	58.37	-9.35	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_a_5785MHz_H

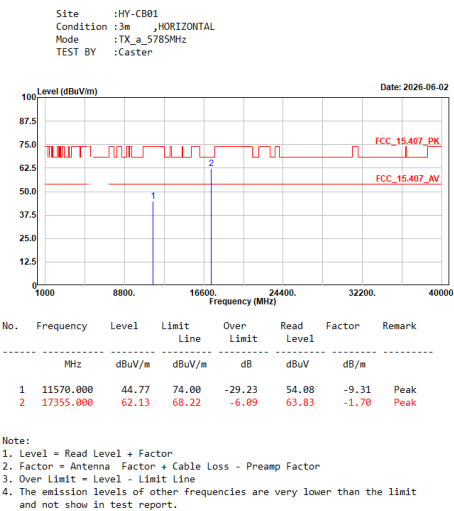


TX_a_5785MHz_V

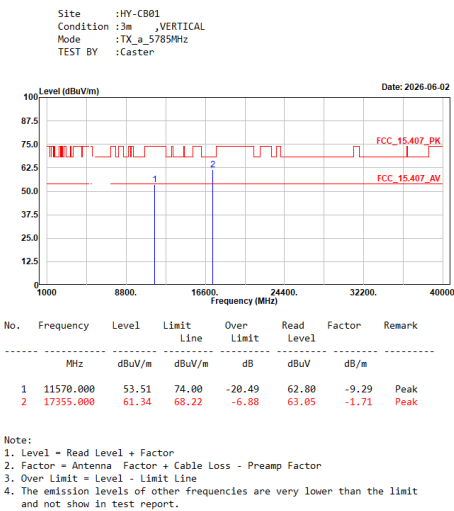

TX_a_5825MHz_H

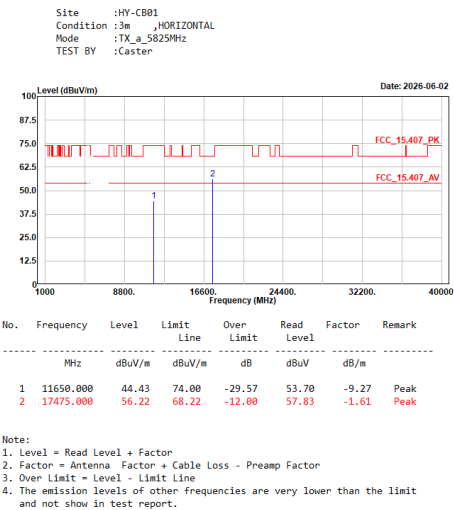


TX_a_5825MHz_V

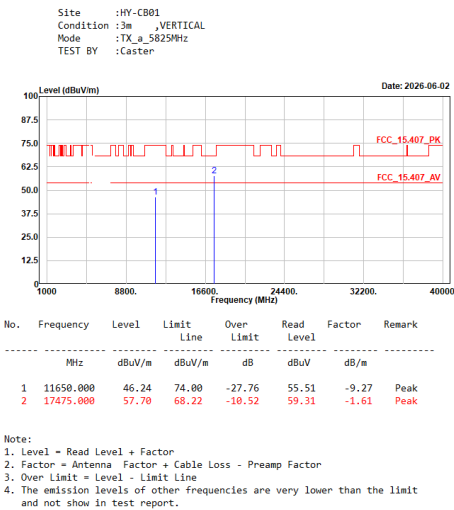

TX_be20_5180MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5180MHz
TEST BY :Caster

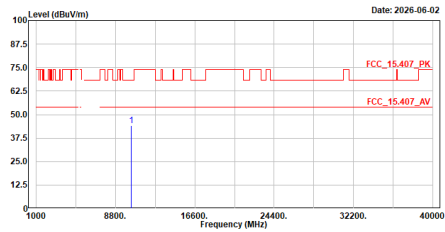


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	44.19	68.22	-24.03	55.25	-11.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5180MHz
TEST BY :Caster

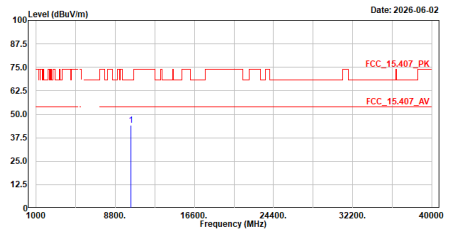


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	44.23	68.22	-23.99	55.29	-11.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5220MHz
TEST BY :Caster

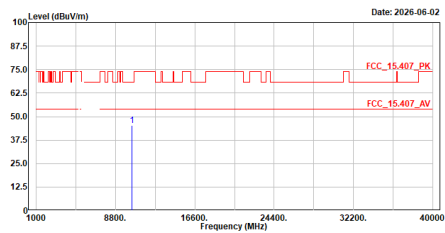


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	45.15	68.22	-23.07	56.53	-11.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5220MHz
TEST BY :Caster

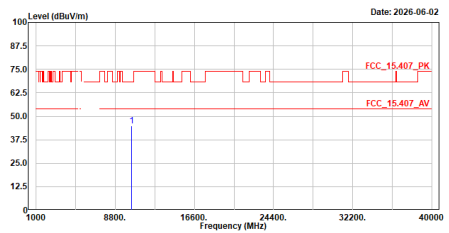


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	44.87	68.22	-23.35	56.25	-11.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5240MHz
TEST BY :Caster

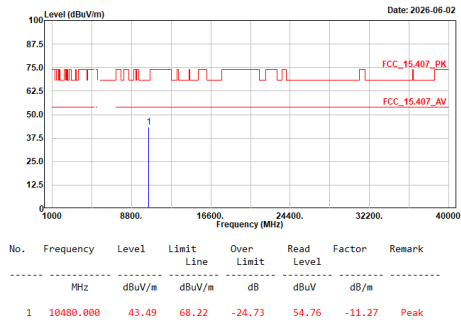

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5240MHz
TEST BY :Caster

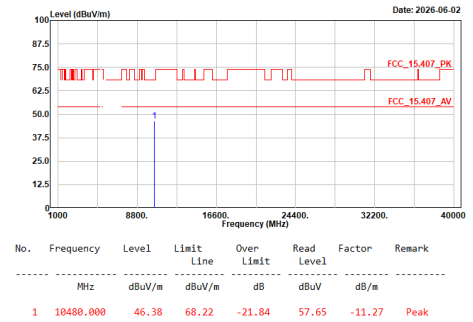

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5745MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5745MHz
TEST BY :Caster

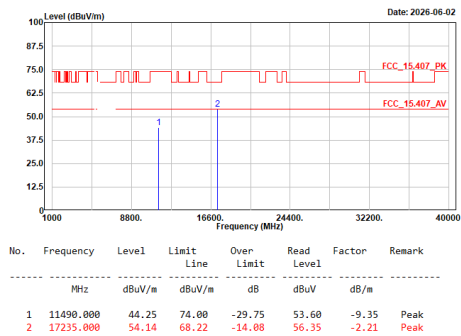

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5745MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5745MHz
TEST BY :Caster

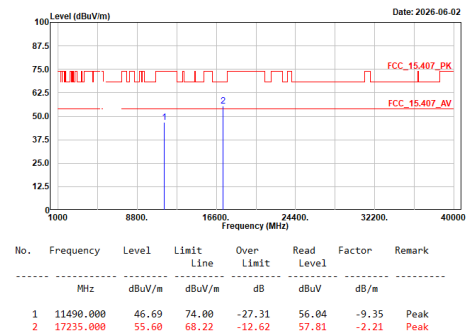

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5785MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5785MHz
TEST BY :Caster

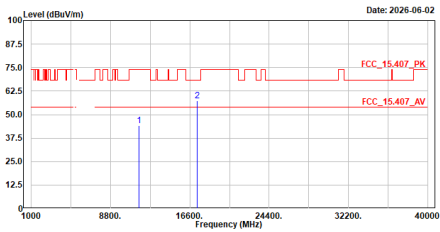


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	44.12	74.00	-29.88	53.43	-9.31	Peak
2	17355.000	57.23	68.22	-10.99	58.94	-1.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5785MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5785MHz
TEST BY :Caster

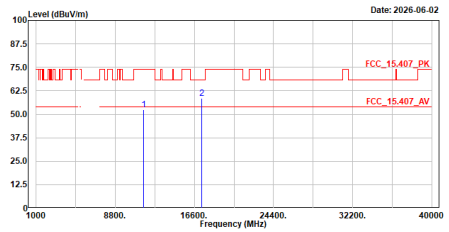


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	52.39	74.00	-21.61	61.71	-9.32	Peak
2	17355.000	58.65	68.22	-9.57	60.36	-1.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5825MHz
TEST BY :Caster

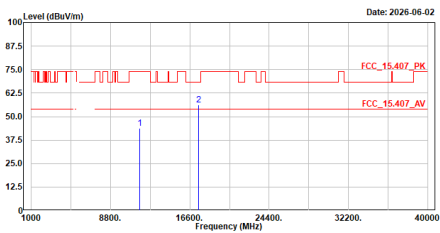


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	43.62	74.00	-30.38	52.89	-9.27	Peak
2	17475.000	56.34	68.22	-11.88	57.95	-1.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5825MHz
TEST BY :Caster

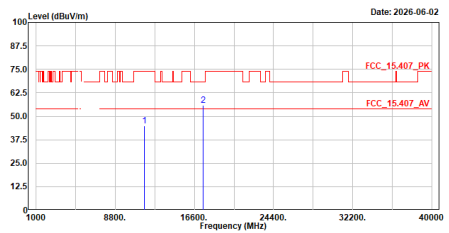


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	45.00	74.00	-29.00	54.27	-9.27	Peak
2	17475.000	55.77	68.22	-12.45	57.38	-1.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be40_5190MHz
TEST BY :Caster

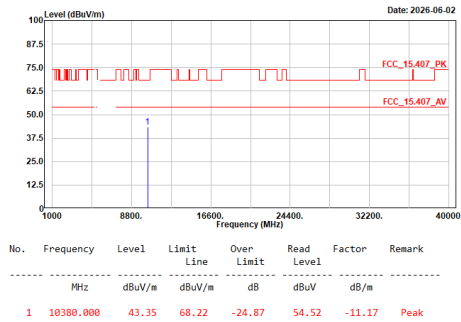

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be40_5190MHz
TEST BY :Caster

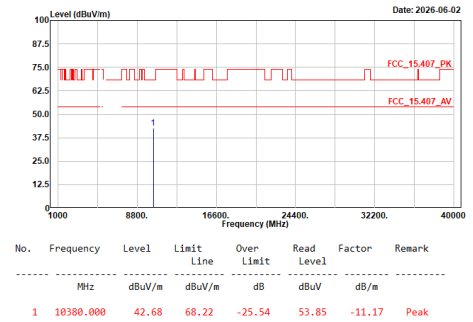

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be40_5230MHz
TEST BY :Caster

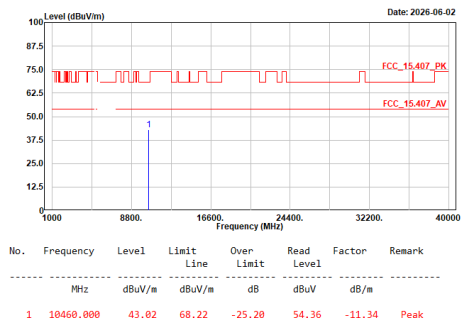

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be40_5230MHz
TEST BY :Caster

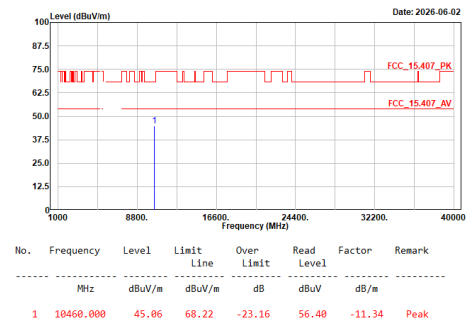

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5755MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be40_5755MHz
TEST BY :Caster

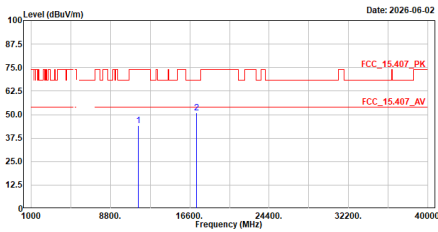


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	44.12	74.00	-29.88	53.44	-9.32	Peak
2	17265.000	51.04	68.22	-17.18	53.13	-2.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5755MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be40_5755MHz
TEST BY :Caster

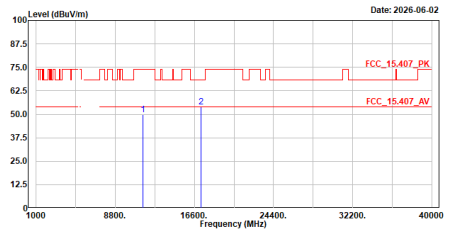


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	49.76	74.00	-24.24	59.08	-9.32	Peak
2	17265.000	53.96	68.22	-14.26	56.05	-2.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5795MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be40_5795MHz
TEST BY :Caster

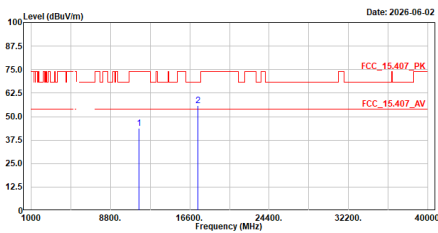


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11590.000	43.91	74.00	-30.09	53.25	-9.34	Peak
2	17385.000	55.83	68.22	-12.39	57.50	-1.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5795MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be40_5795MHz
TEST BY :Caster

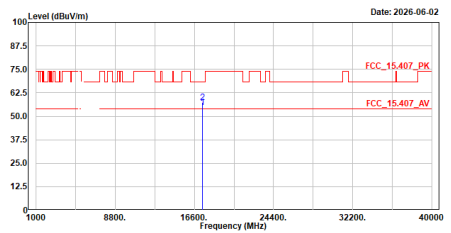


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	17385.000	54.75	68.22	-13.47	56.41	-1.66	Peak
2	17385.000	57.20	68.22	-11.02	58.89	-1.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be80_5210MHz
TEST BY :Caster

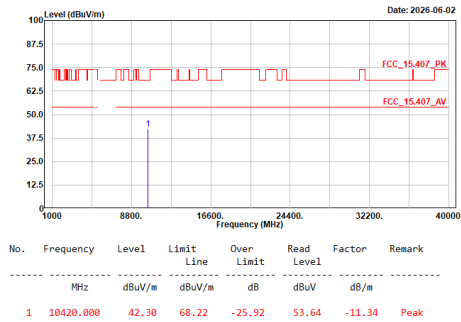

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5210MHz
TEST BY :Caster

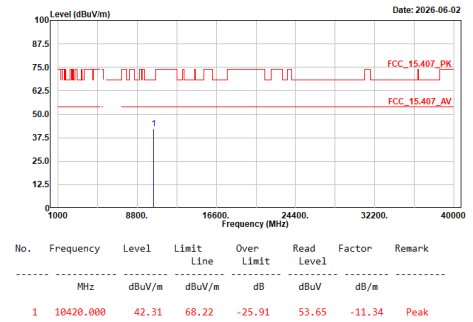

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be80_5775MHz
TEST BY :Caster



Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_V


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5775MHz
TEST BY :Caster

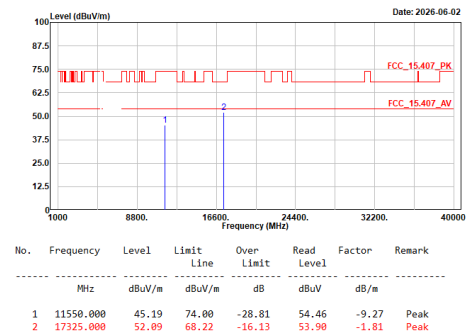

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be80_5775MHz
TEST BY :Caster

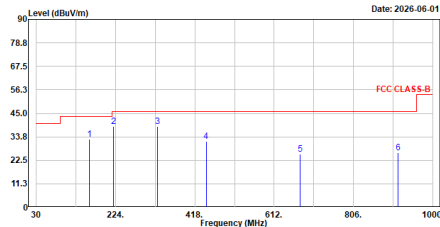


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	160.307	32.72	43.50	-10.78	56.75	-24.03	QP
2	219.310	38.63	46.00	-7.37	65.43	-26.80	QP
3	326.065	38.00	46.00	-7.20	61.26	-22.46	QP
4	445.571	31.71	46.00	-14.29	51.02	-19.31	QP
5	675.283	25.57	46.00	-20.43	40.38	-14.81	QP
6	915.346	26.14	46.00	-19.86	37.72	-11.58	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_be80_5775MHz_V

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5775MHz
TEST BY :Caster

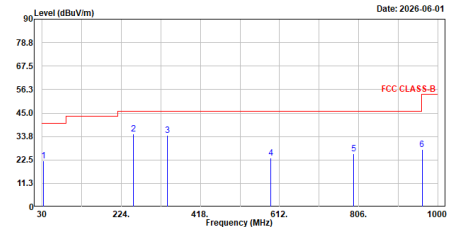


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	33.450	21.94	40.00	-18.06	46.96	-25.02	QP
2	253.412	35.06	46.00	-10.94	60.03	-24.97	QP
3	336.566	34.38	46.00	-11.62	56.65	-22.27	QP
4	591.229	23.37	46.00	-22.63	39.57	-16.20	QP
5	793.589	25.44	46.00	-20.56	38.25	-12.81	QP
6	961.298	27.47	54.00	-26.53	38.38	-10.91	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_a_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

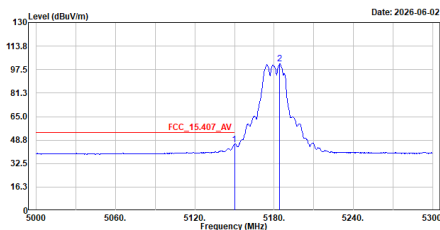


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5150.000	45.83	54.00	-8.17	31.90	13.93	Average
2	5184.200	101.53	-----	-----	87.69	13.84	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

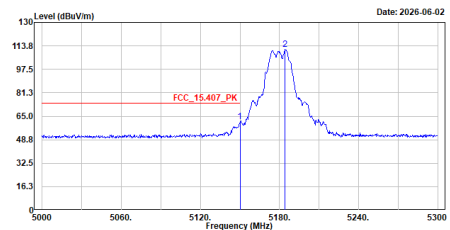


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5150.000	61.11	74.00	-12.89	47.18	13.93	Peak
2	5184.200	111.15	-----	-----	97.31	13.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
TEST BY :Caster

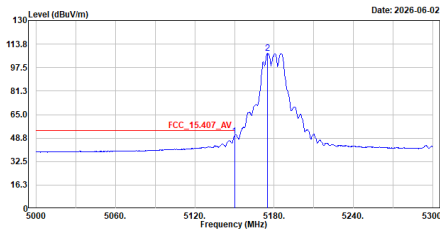


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	50.23	54.00	-3.77	36.30	13.93	Average
2	5175.200	107.27	-----	-----	93.39	13.88	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
TEST BY :Caster

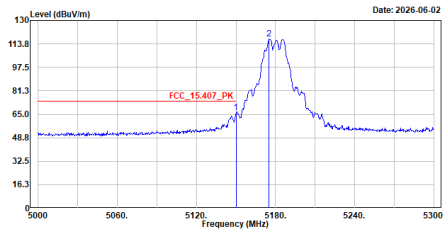


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	66.00	74.00	-8.00	52.07	13.93	Peak
2	5175.200	117.02	-----	-----	103.14	13.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

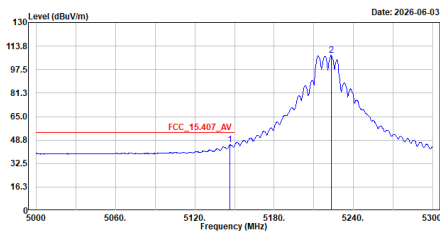


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5146.700	45.58	54.00	-8.42	31.66	13.92	Average
2	5223.200	107.36	-----	-----	93.51	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

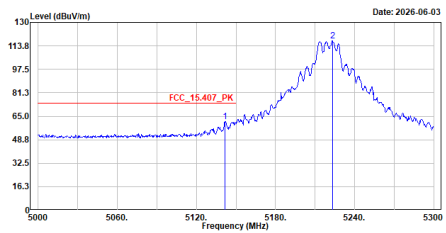


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5141.600	61.51	74.00	-12.49	47.60	13.91	Peak
2	5223.200	117.27	-----	-----	103.42	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

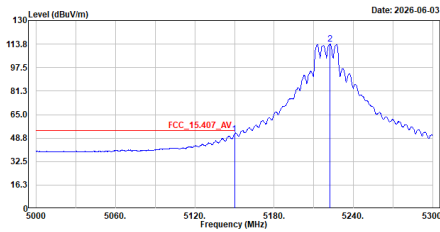


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	51.60	54.00	-2.40	37.67	13.93	Average
2	5222.300	113.80	-----	-----	99.95	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band1_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

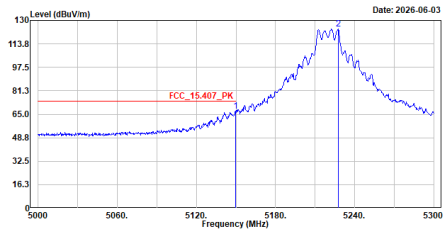


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.700	67.13	74.00	-6.87	53.20	13.93	Peak
2	5227.400	124.20	-----	-----	110.35	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

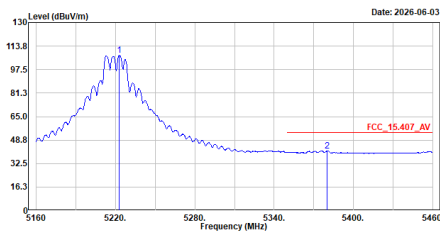


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5223.000	107.26	-----	-----	93.41	13.85	Average
2	5380.200	41.38	54.00	-12.62	27.52	13.86	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

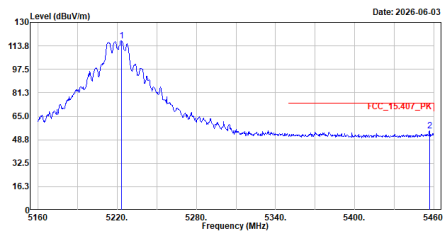


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5223.300	117.23	-----	-----	103.38	13.85	Peak
2	5456.700	54.89	74.00	-19.11	40.83	14.06	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

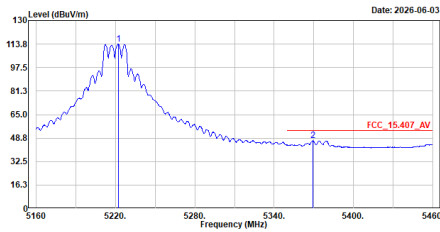


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5222.100	114.00	-----	-----	100.15	13.85	Average
2	5369.400	46.96	54.00	-7.04	33.09	13.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_Band2_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

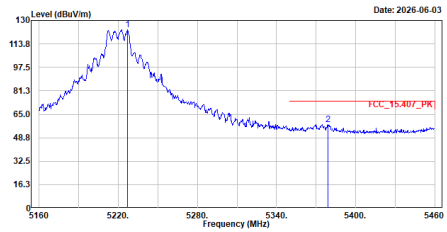


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5227.200	123.70	-----	-----	109.85	13.85	Peak
2	5379.000	57.81	74.00	-16.19	43.95	13.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

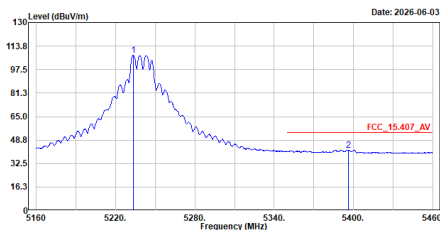


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5233.500	107.39	-----	-----	93.52	13.87	Average
2	5396.100	41.92	54.00	-12.08	28.07	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Caster

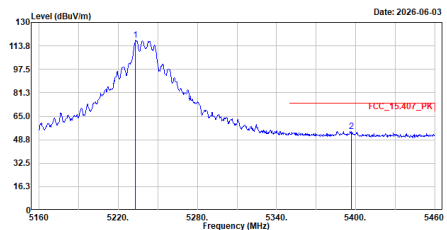


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5233.200	117.76	-----	-----	103.89	13.87	Peak
2	5396.700	54.46	74.00	-19.54	40.61	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Caster

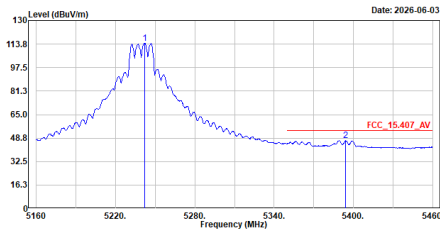


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5242.200	114.36	-----	-----	100.49	13.87	Average
2	5394.300	46.91	54.00	-7.09	33.06	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Caster

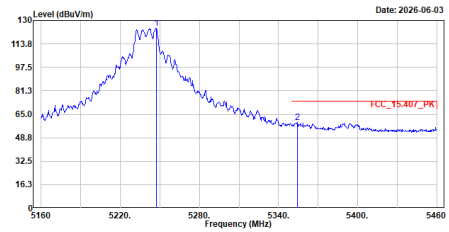


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5247.300	124.67	-----	-----	110.78	13.89	Peak
2	5354.100	59.12	74.00	-14.88	45.24	13.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
TEST BY :Caster

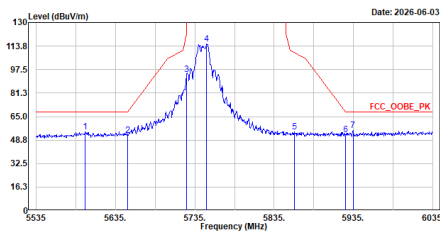


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5597.000	54.45	68.22	-13.77	39.61	14.84	Peak
2	5650.000	52.17	68.23	-16.06	36.97	15.20	Peak
3	5725.000	94.30	122.20	-27.90	78.70	15.60	Peak
4	5750.000	115.33	-----	-----	99.68	15.65	Peak
5	5860.500	54.41	109.26	-54.85	38.73	15.68	Peak
6	5925.000	52.73	68.23	-15.50	37.03	15.70	Peak
7	5934.500	55.34	68.22	-12.88	39.62	15.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5745MHz
TEST BY :Caster

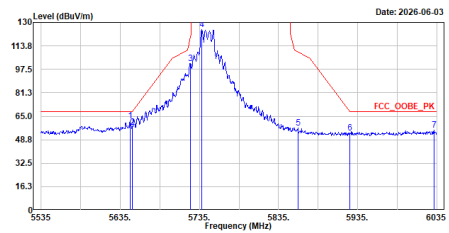


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5647.500	61.63	68.22	-6.59	46.44	15.19	Peak
2	5650.000	57.54	68.23	-10.69	42.34	15.20	Peak
3	5723.500	101.78	118.78	-17.00	86.18	15.60	Peak
4	5730.000	124.88	-----	-----	109.25	15.63	Peak
5	5859.500	56.98	109.54	-52.56	41.30	15.68	Peak
6	5925.000	53.42	68.23	-14.81	37.72	15.70	Peak
7	6032.000	55.66	68.22	-12.56	39.52	16.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5785MHz
TEST BY :Caster

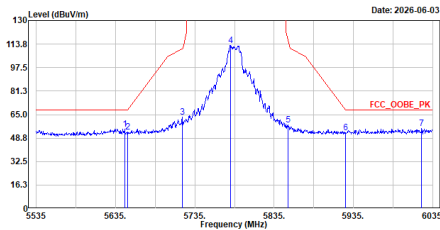


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5646.500	55.12	68.22	-13.10	39.94	15.18	Peak
2	5650.000	53.22	68.23	-15.01	38.02	15.20	Peak
3	5719.000	63.46	110.52	-47.06	47.86	15.60	Peak
4	5780.000	113.07	-----	-----	97.45	15.62	Peak
5	5852.500	58.10	116.50	-58.40	42.42	15.68	Peak
6	5925.000	52.63	68.23	-15.60	36.93	15.70	Peak
7	6021.000	55.62	68.22	-12.60	39.55	16.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
TEST BY :Caster

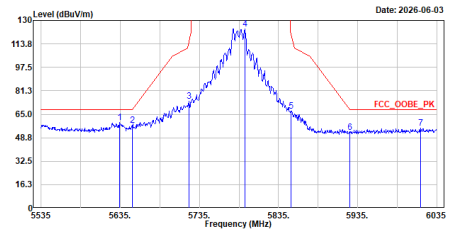


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5634.500	59.21	68.22	-9.01	44.11	15.10	Peak
2	5650.000	57.57	68.23	-10.66	42.37	15.20	Peak
3	5721.500	74.17	114.22	-40.05	58.57	15.00	Peak
4	5792.500	124.19	-----	-----	108.58	15.61	Peak
5	5851.000	67.18	119.92	-52.74	51.50	15.68	Peak
6	5925.000	52.58	68.23	-15.65	36.88	15.70	Peak
7	6015.000	55.29	68.22	-12.93	39.25	16.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
TEST BY :Caster

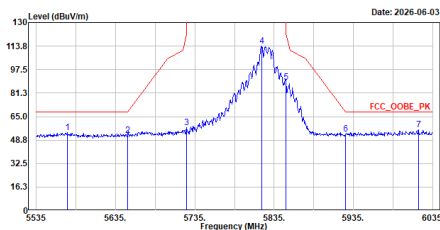


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5574.500	53.88	68.22	-14.34	39.20	14.68	Peak
2	5650.000	51.99	68.23	-16.24	36.79	15.20	Peak
3	5724.500	57.20	121.06	-63.86	41.60	15.60	Peak
4	5819.500	113.73	-----	-----	98.09	15.64	Peak
5	5850.000	88.62	122.20	-33.58	72.94	15.68	Peak
6	5925.000	52.98	68.23	-15.25	37.28	15.70	Peak
7	6017.000	55.71	68.22	-12.51	39.66	16.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
TEST BY :Caster

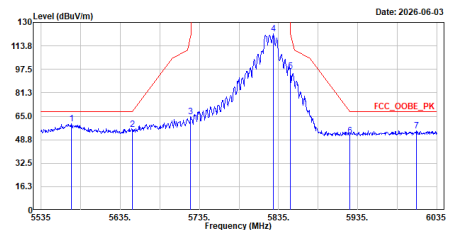


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5573.500	59.96	68.22	-8.26	45.29	14.67	Peak
2	5650.000	55.87	68.23	-12.36	40.67	15.20	Peak
3	5724.000	64.58	119.92	-55.34	48.98	15.60	Peak
4	5828.000	121.96	-----	-----	106.32	15.64	Peak
5	5850.000	96.05	122.20	-26.15	80.37	15.68	Peak
6	5925.000	51.67	68.23	-16.56	35.97	15.70	Peak
7	6009.500	54.88	68.22	-13.34	38.87	16.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5180MHz
TEST BY :Caster

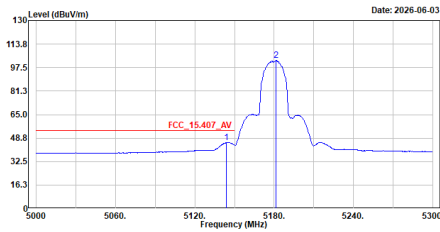


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5143.700	45.75	54.00	-8.25	31.84	13.91	Average
2	5181.500	102.42	-----	-----	88.57	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5180MHz
TEST BY :Caster

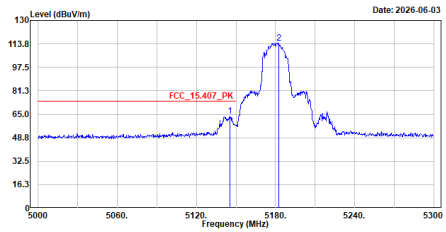


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5145.500	63.58	74.00	-10.42	49.67	13.91	Peak
2	5182.400	114.42	-----	-----	100.57	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5180MHz
TEST BY :Caster

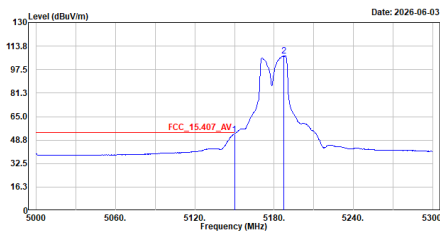


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	52.71	54.00	-1.29	38.78	13.93	Average
2	5187.200	107.12	-----	-----	93.27	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5180MHz
TEST BY :Caster

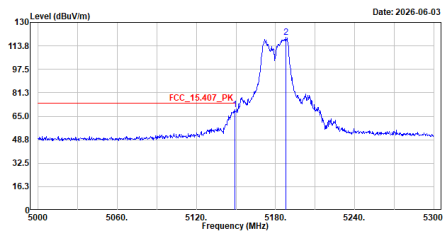


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.100	69.51	74.00	-4.49	55.58	13.93	Peak
2	5188.100	119.82	-----	-----	105.97	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5220MHz_Band1
TEST BY :Caster

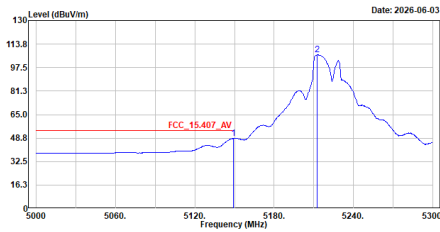


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.400	48.60	54.00	-5.40	34.67	13.93	Average
2	5212.400	106.34	-----	-----	92.51	13.83	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5220MHz_Band1
TEST BY :Caster

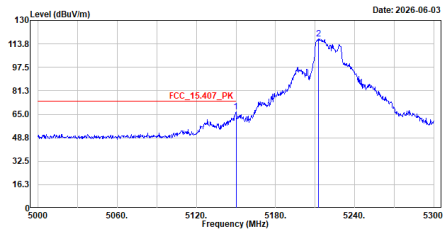


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	66.89	74.00	-7.11	52.96	13.93	Peak
2	5212.400	117.39	-----	-----	103.56	13.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5220MHz_Band1
TEST BY :Caster

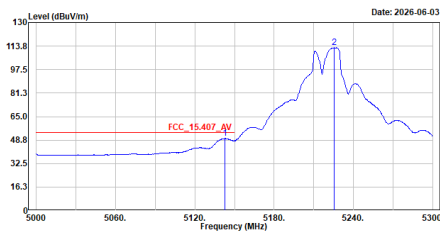


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5142.800	49.88	54.00	-4.12	35.97	13.91	Average
2	5225.300	112.66	-----	-----	98.81	13.85	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5220MHz_Band1
TEST BY :Caster

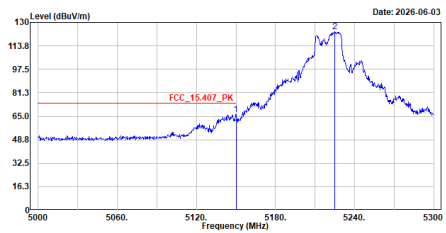


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	66.07	74.00	-7.93	52.14	13.93	Peak
2	5225.000	123.77	-----	-----	109.92	13.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band2_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5220MHz_Band2
TEST BY :Caster

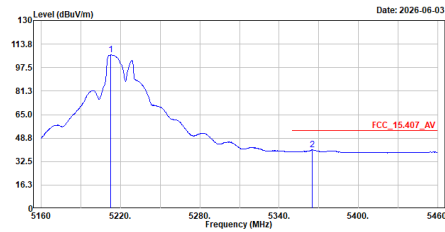


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5212.800	106.35	-----	-----	92.52	13.83	Average
2	5364.900	48.59	54.00	-13.41	26.72	13.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band2_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5220MHz_Band2
TEST BY :Caster

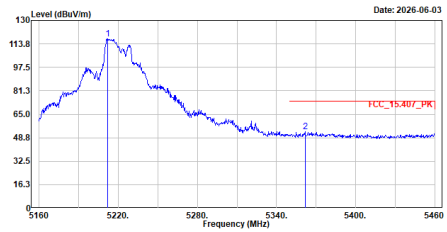


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5211.900	117.47	-----	-----	103.64	13.83	Peak
2	5361.600	53.02	74.00	-20.98	39.15	13.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band2_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5220MHz_Band2
TEST BY :Caster

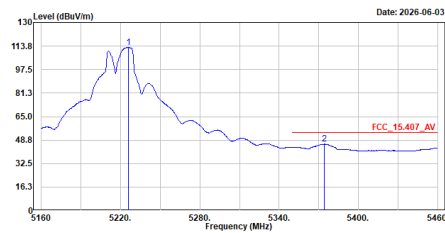


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5226.000	112.66	-----	-----	98.81	13.85	Average
2	5374.200	46.00	54.00	-8.00	32.14	13.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band2_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5220MHz_Band2
TEST BY :Caster

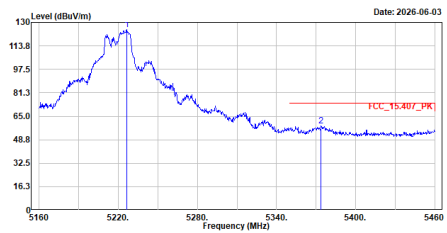


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5226.300	124.97	-----	-----	111.12	13.85	Peak
2	5373.900	58.15	74.00	-15.85	44.29	13.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5240MHz
TEST BY :Caster

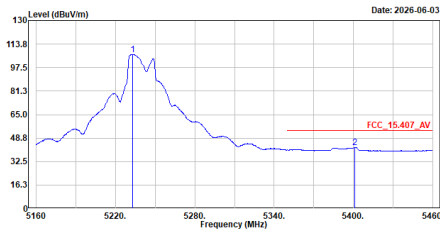


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5232.900	106.63	-----	-----	92.76	13.87	Average
2	5400.900	42.13	54.00	-11.87	28.28	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5240MHz
TEST BY :Caster

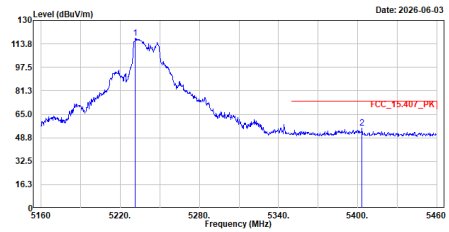


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5231.400	117.94	-----	-----	104.08	13.86	Peak
2	5403.300	55.58	74.00	-18.42	41.72	13.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5240MHz
TEST BY :Caster

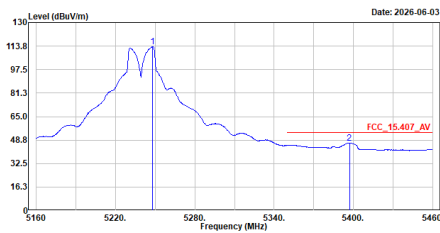


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5248.200	113.47	-----	-----	99.58	13.89	Average
2	5397.000	46.81	54.00	-7.19	32.96	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V_Peak

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_be20_5240MHz
TEST BY :Caster

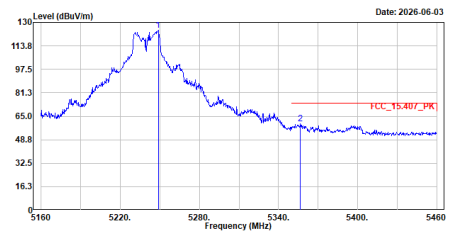

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5248.800	124.59	-----	-----	110.70	13.89	Peak
2	5356.500	59.99	74.00	-14.01	46.11	13.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.