




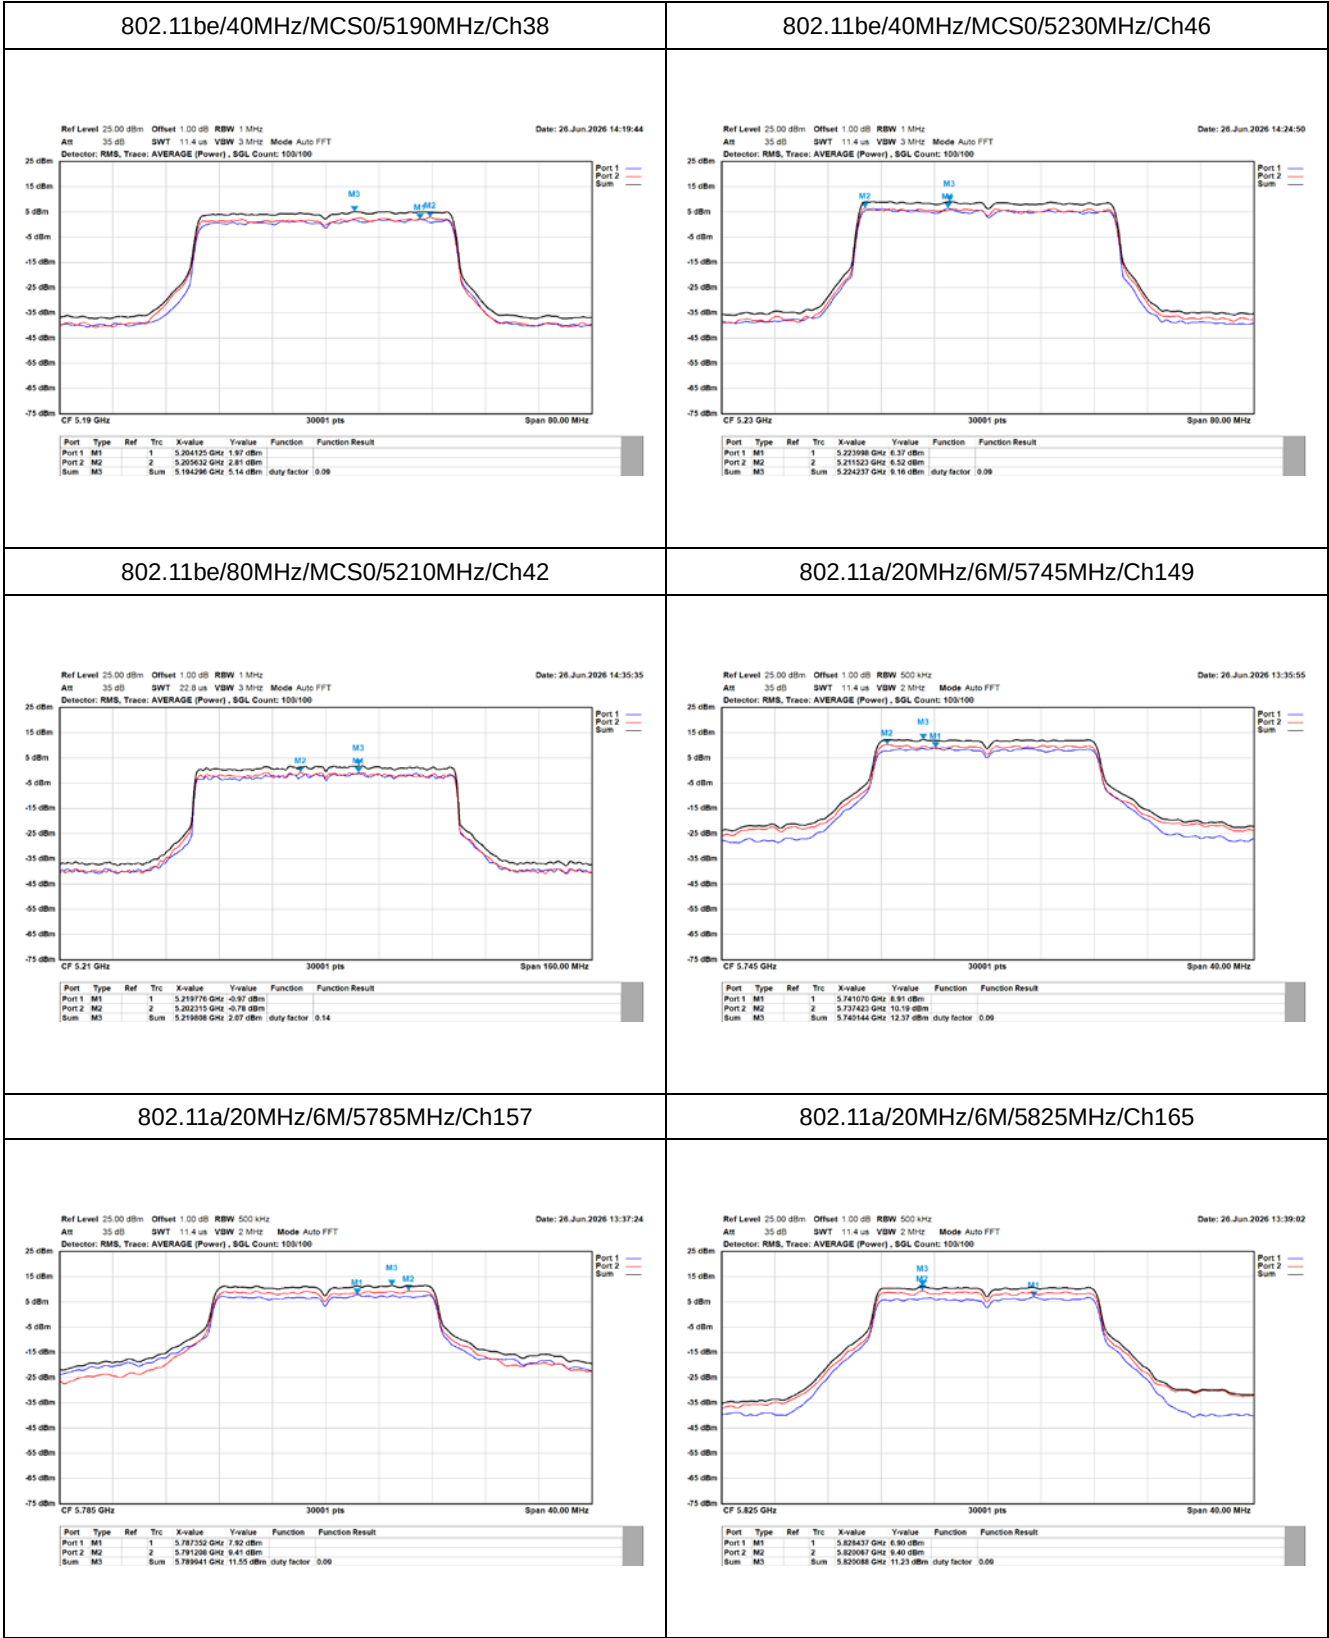


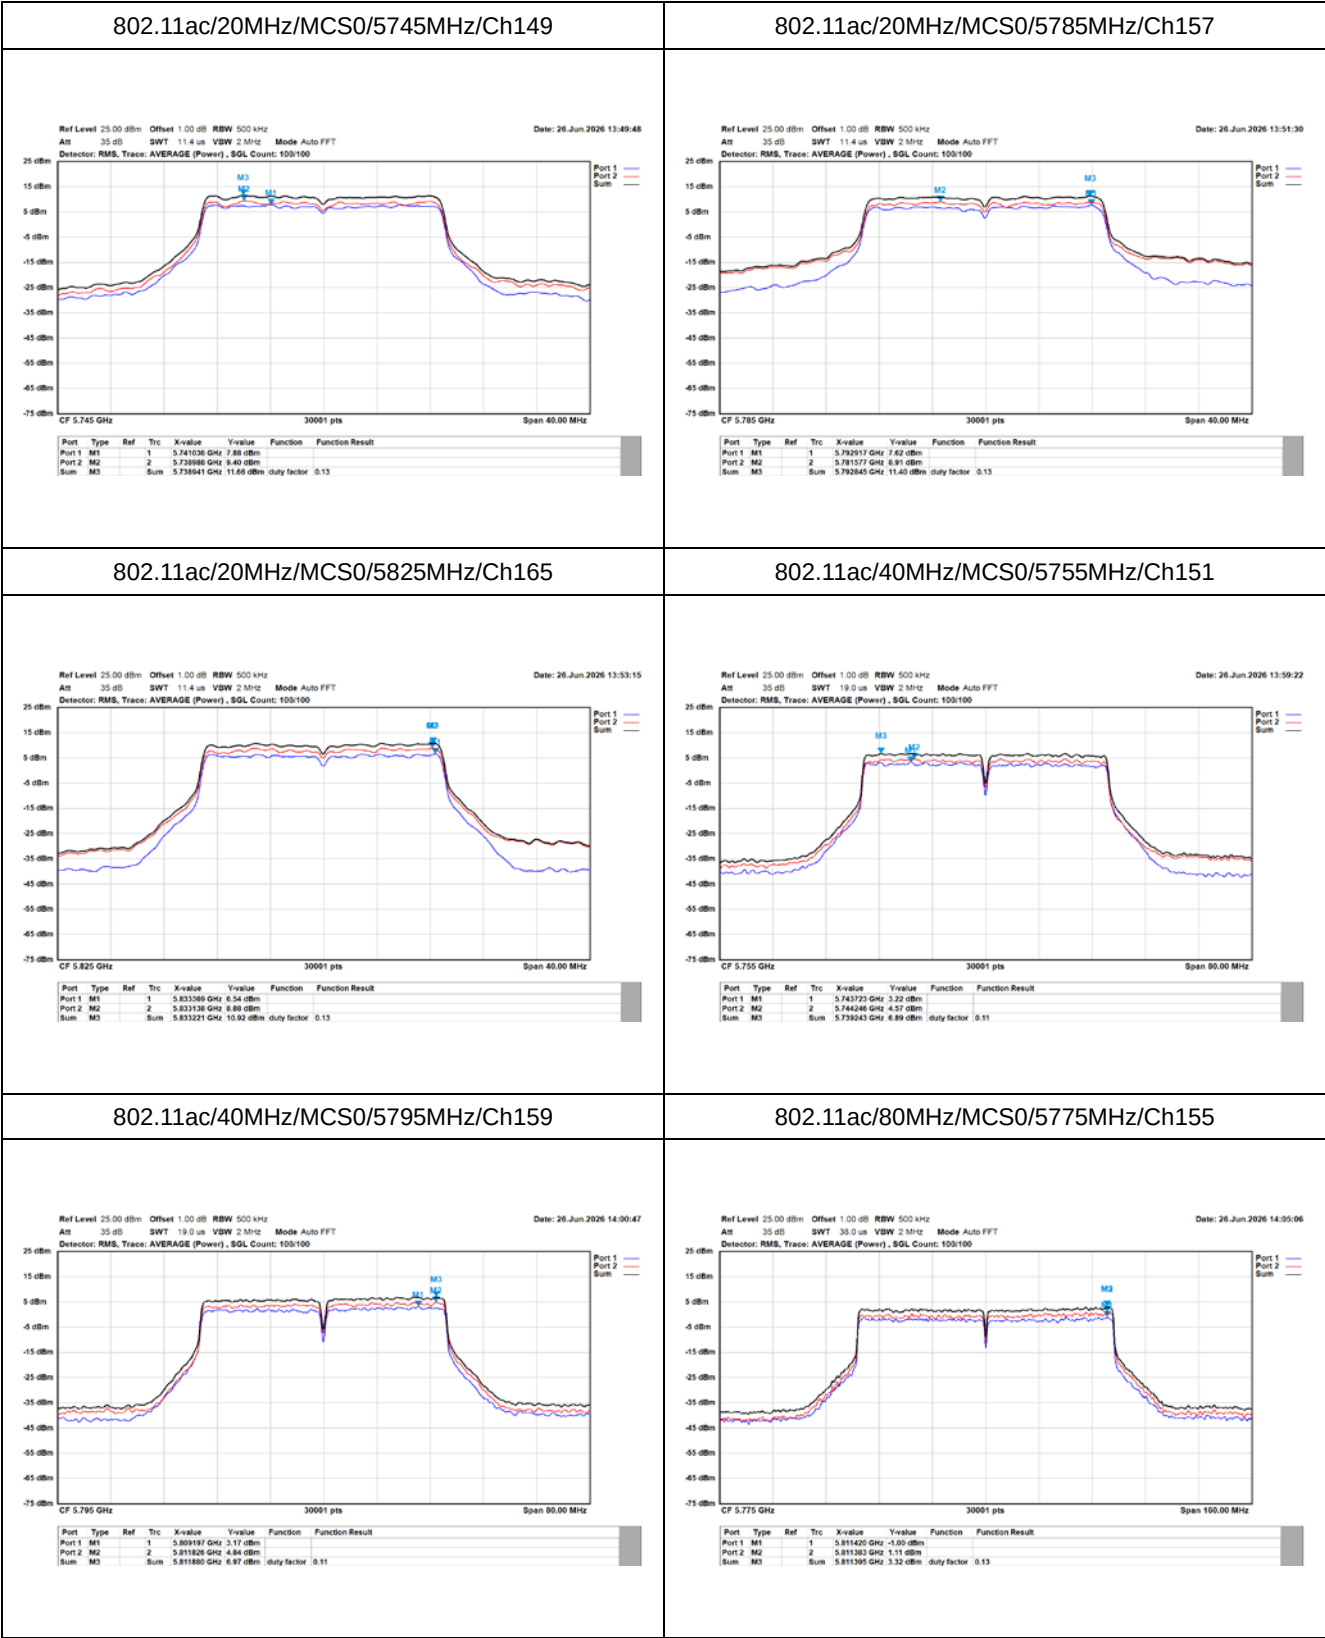


802.11be/20MHz/MCS0/5745MHz/Ch149

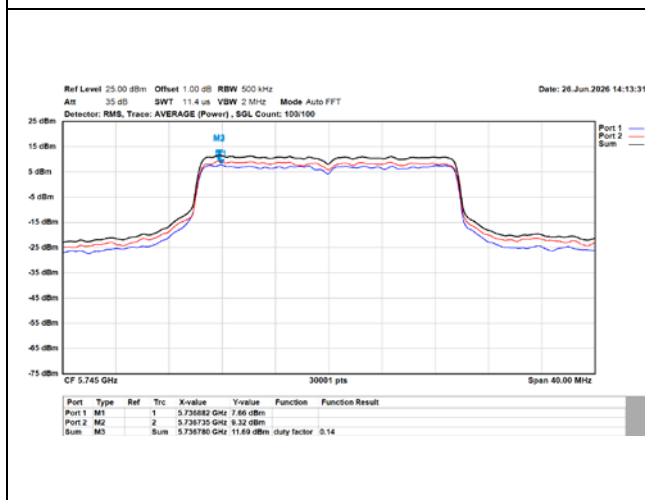


802.11be/20MHz/MCS0/5785MHz/Ch157

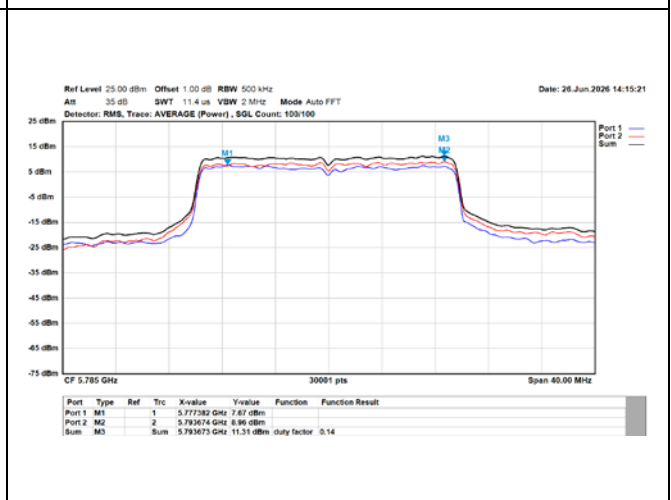


802.11be/20MHz/MCS0/5825MHz/Ch165

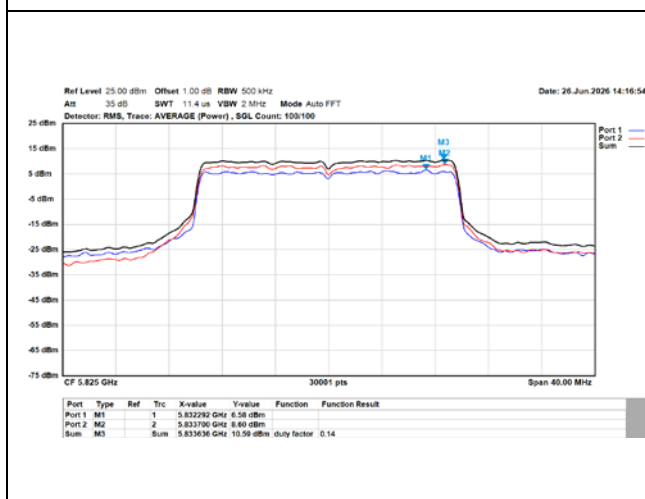


802.11be/40MHz/MCS0/5755MHz/Ch151

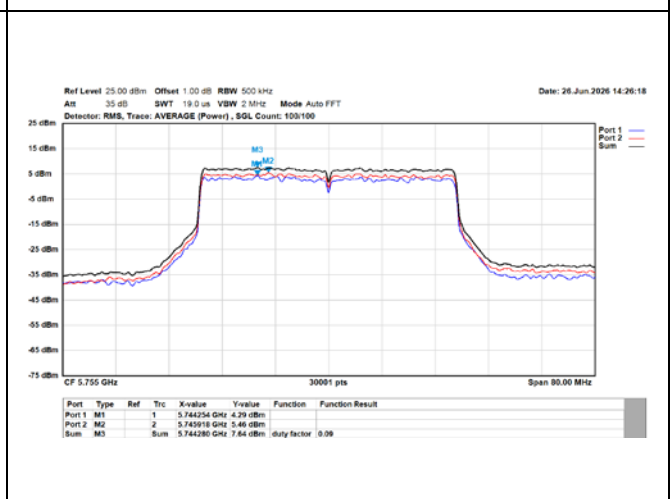

802.11be/40MHz/MCS0/5795MHz/Ch159

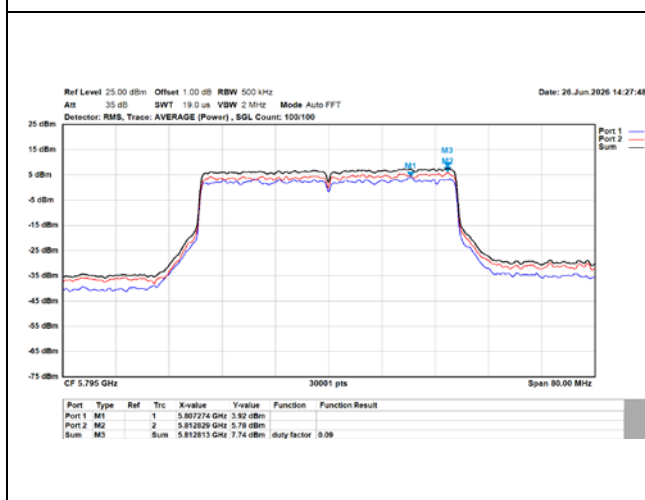


802.11be/80MHz/MCS0/5775MHz/Ch155

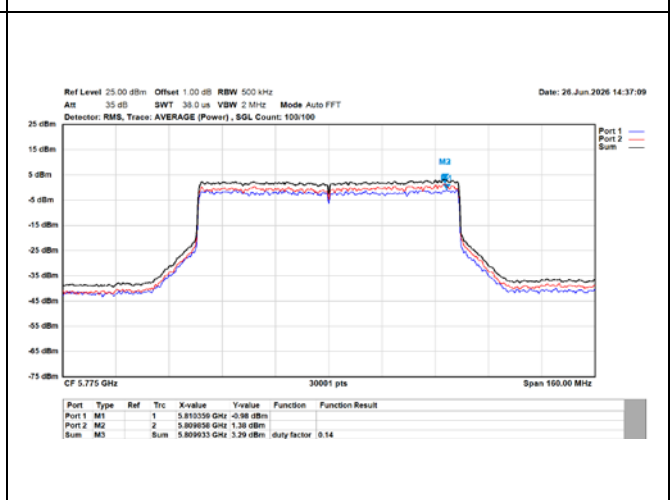



## Slave mode

| Modulation       | Frequency (MHz) | Maximum Power Spectral Density (dBm/MHz) |        |       | Limit (dBm/MHz) | Result |
|------------------|-----------------|------------------------------------------|--------|-------|-----------------|--------|
|                  |                 | Ant. 1                                   | Ant. 2 | Total |                 |        |
| 802.11a (20MHz)  | 5180            | 7.37                                     | 7.42   | 10.33 | 11.00           | Pass   |
|                  | 5220            | 7.55                                     | 8.12   | 10.68 | 11.00           | Pass   |
|                  | 5240            | 7.91                                     | 8.12   | 10.89 | 11.00           | Pass   |
| 802.11ac (20MHz) | 5180            | 7.67                                     | 8.12   | 10.76 | 11.00           | Pass   |
|                  | 5220            | 7.34                                     | 8.01   | 10.76 | 11.00           | Pass   |
|                  | 5240            | 7.70                                     | 8.30   | 10.79 | 11.00           | Pass   |
| 802.11ac (40MHz) | 5190            | 7.36                                     | 7.16   | 10.12 | 11.00           | Pass   |
|                  | 5230            | 6.69                                     | 6.69   | 9.63  | 11.00           | Pass   |
| 802.11ac (80MHz) | 5210            | 3.82                                     | 4.00   | 6.75  | 11.00           | Pass   |
| 802.11be (20MHz) | 5180            | 7.73                                     | 8.03   | 10.76 | 11.00           | Pass   |
|                  | 5220            | 7.95                                     | 7.80   | 10.96 | 11.00           | Pass   |
|                  | 5240            | 7.30                                     | 8.16   | 10.52 | 11.00           | Pass   |
| 802.11be (40MHz) | 5190            | 6.30                                     | 7.06   | 9.64  | 11.00           | Pass   |
|                  | 5230            | 6.09                                     | 6.61   | 9.26  | 11.00           | Pass   |
| 802.11be (80MHz) | 5210            | 3.54                                     | 4.07   | 6.91  | 11.00           | Pass   |

Note: Trace bin-by-bin of each transmits port summing can be performed maximum power density.

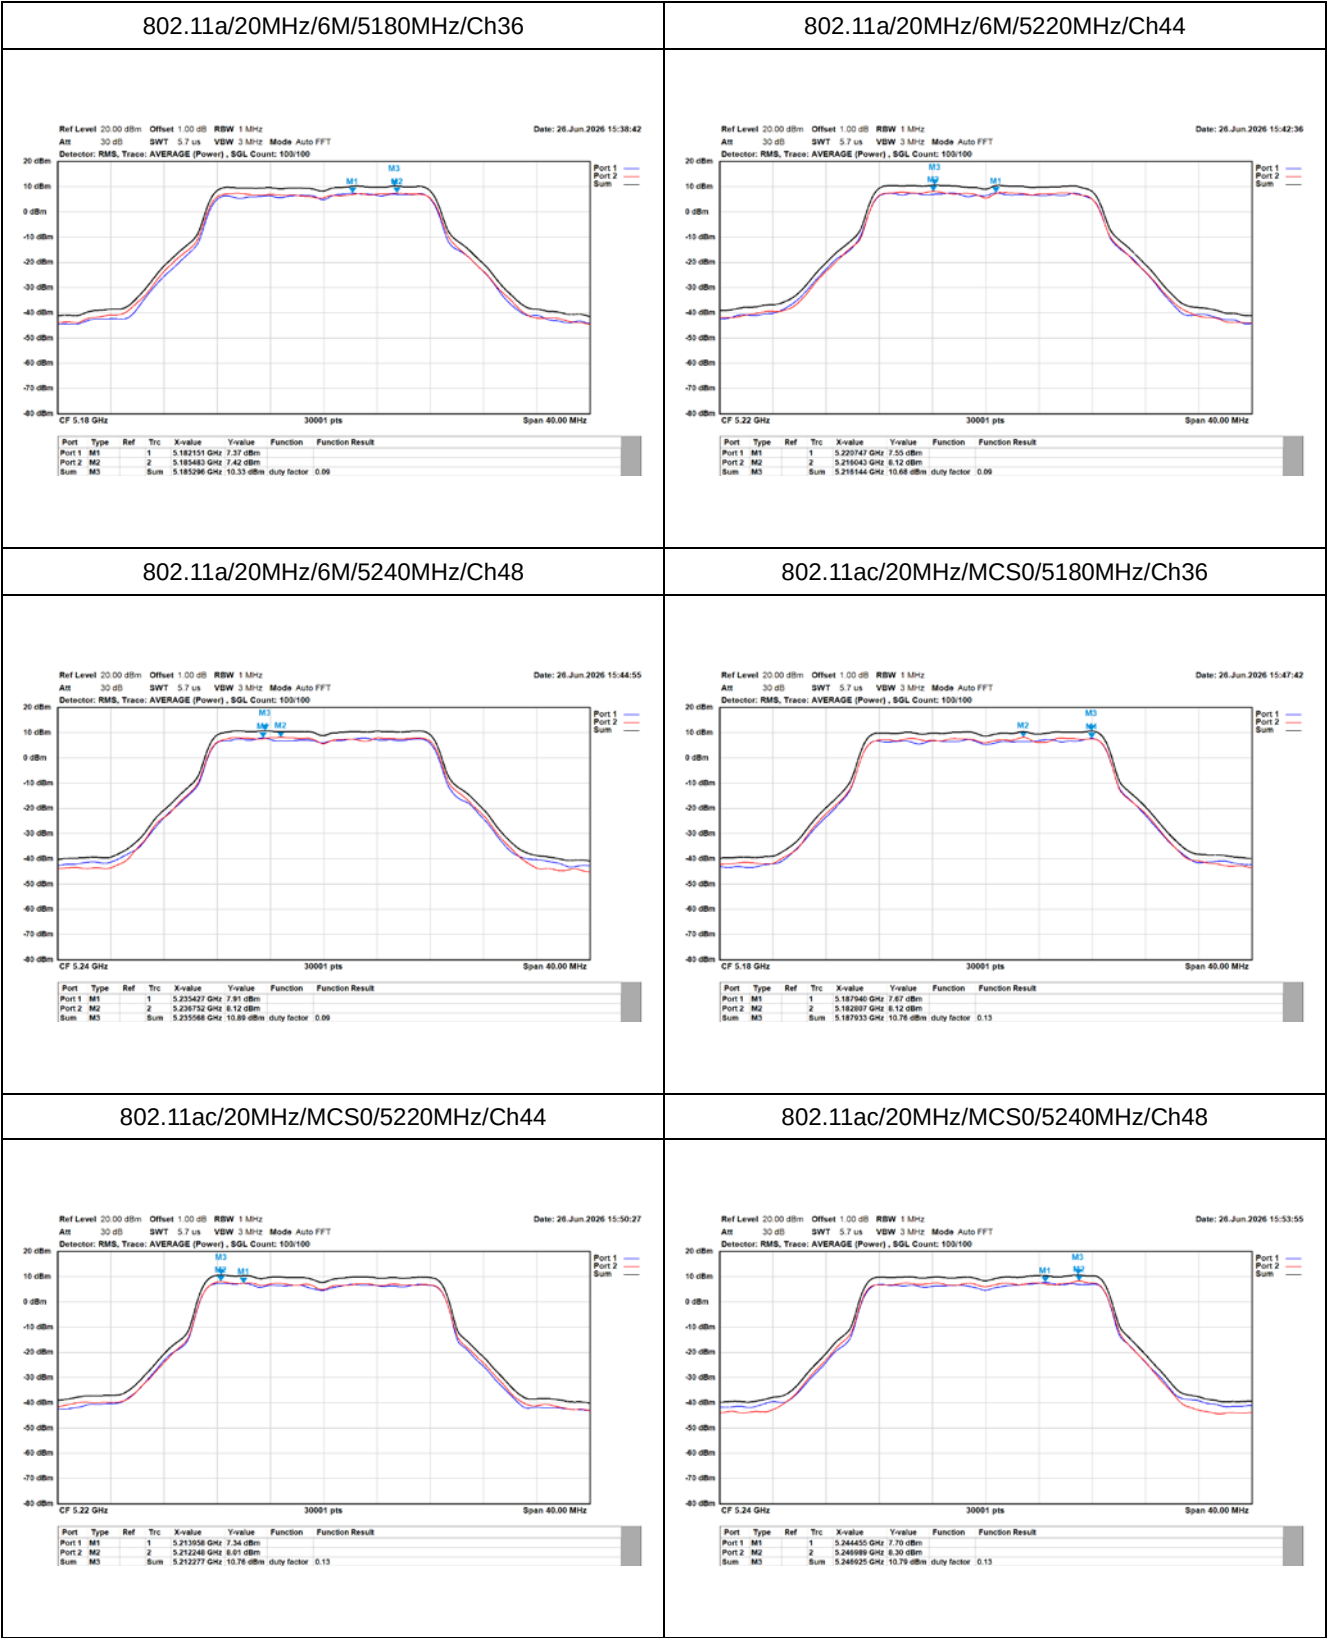

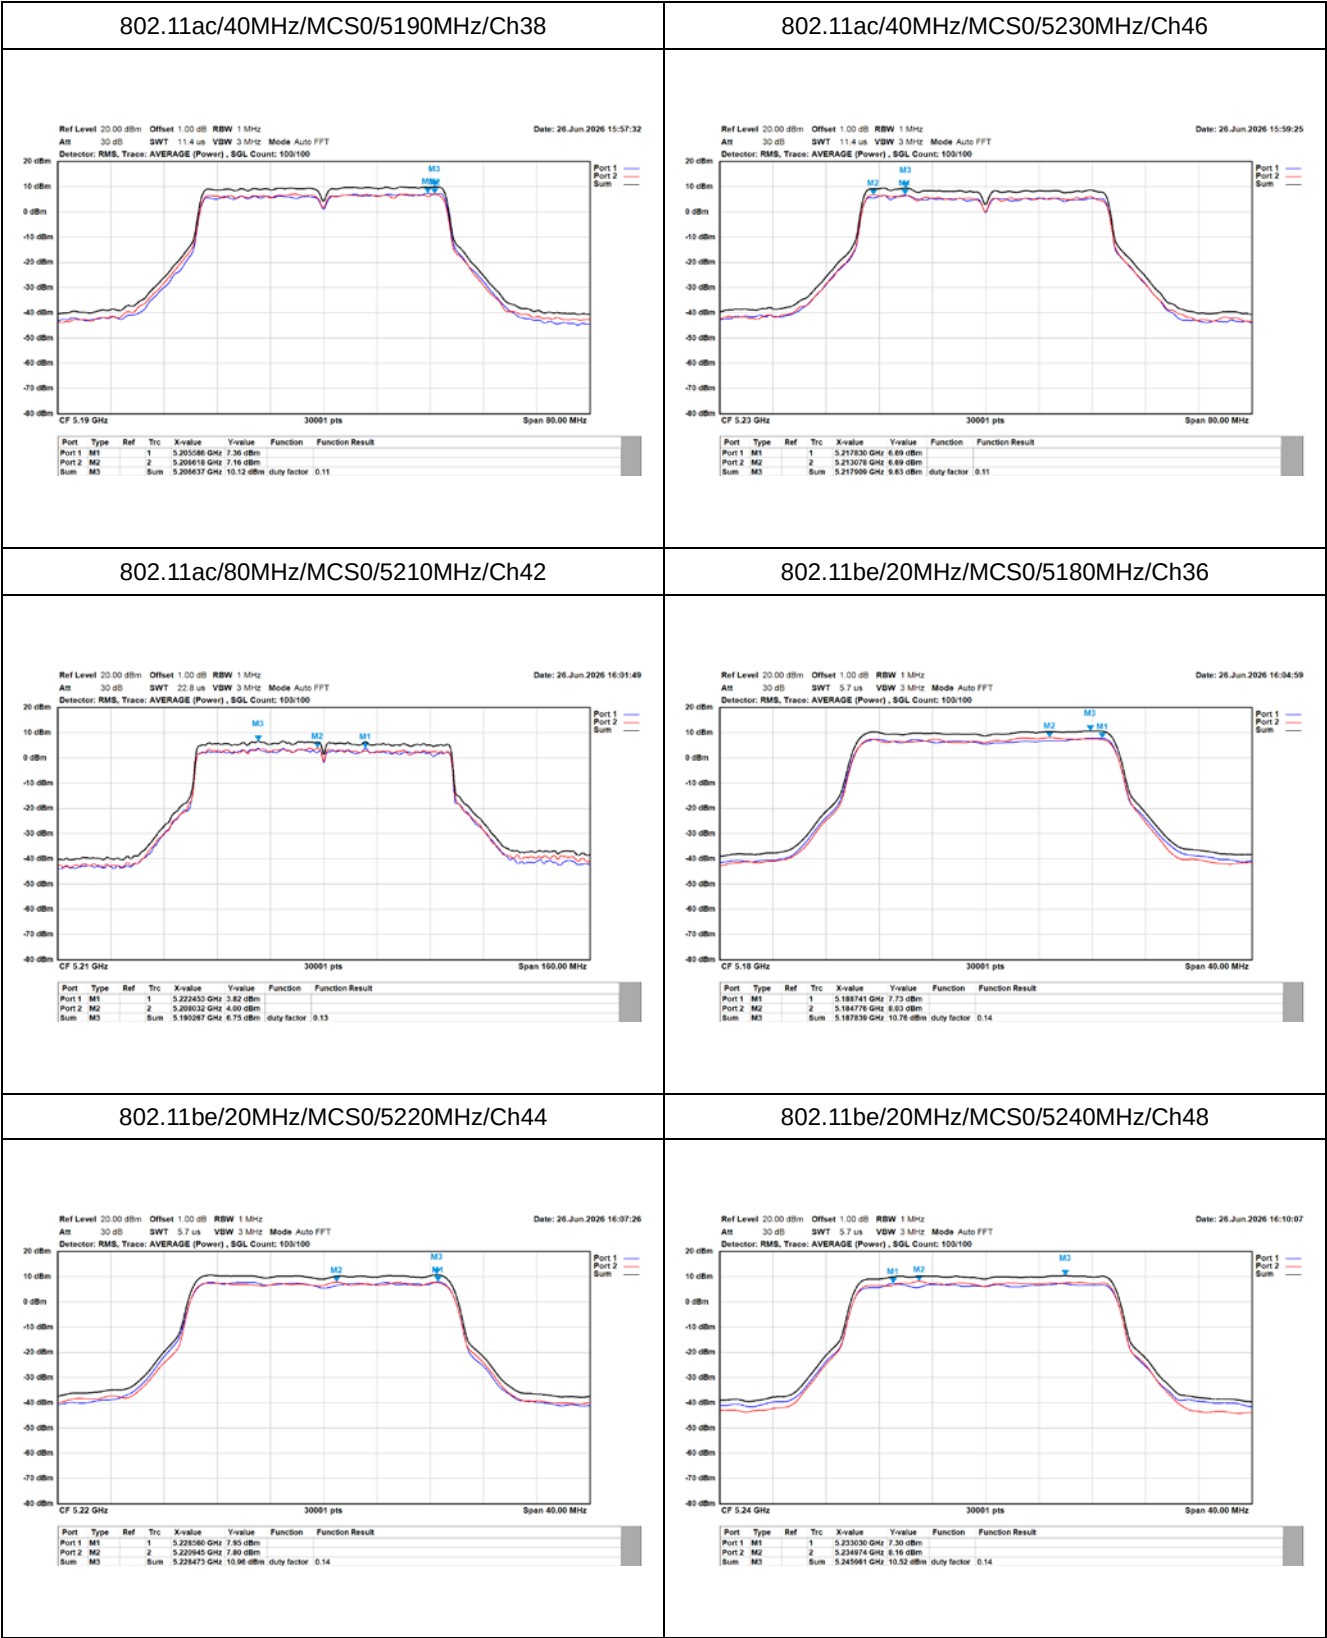


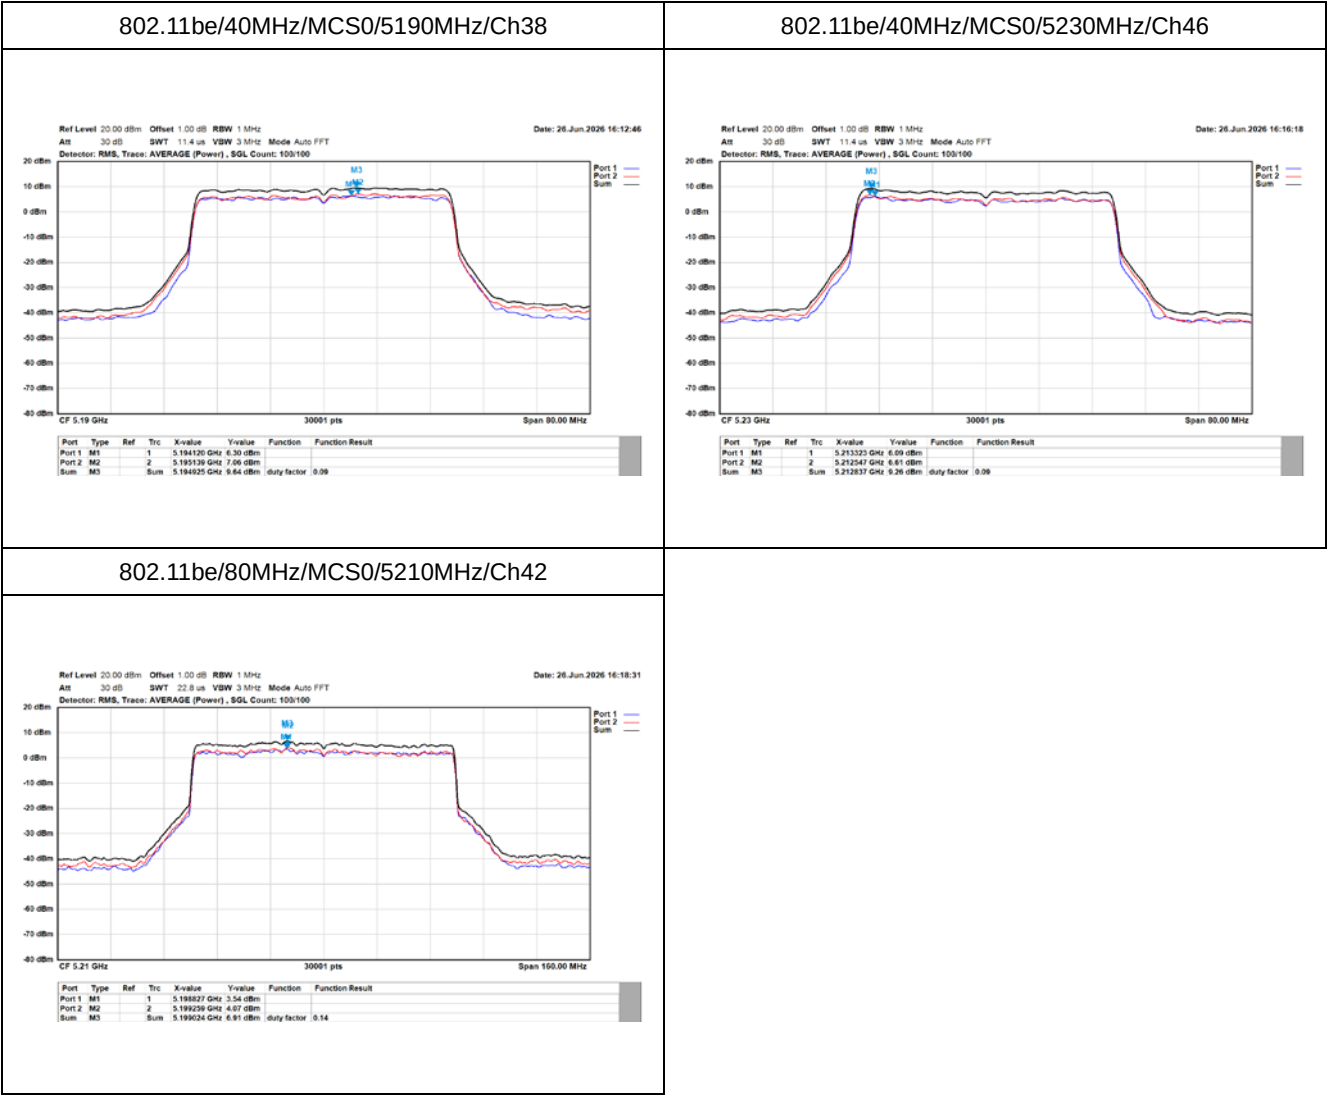

## Appendix E. Test Result of Radiated Emission

### Master mode


TX\_a\_5180MHz\_H

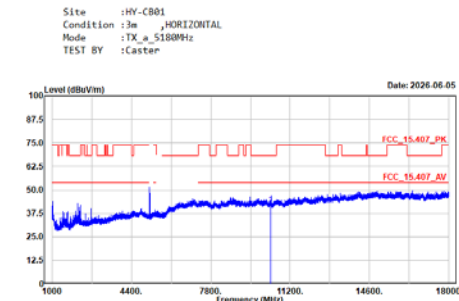

| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 10360.000        | 42.41           | 68.22           | -25.81              | 53.47                 | -11.06         | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX\_a\_5180MHz\_V

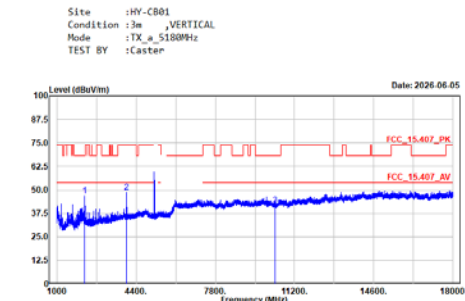

| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 2190.850         | 46.79           | 68.22           | -21.43              | 68.45                 | -21.66         | Peak   |
| 2   | 3986.050         | 48.65           | 74.00           | -25.35              | 65.67                 | -17.02         | Peak   |
| 3   | 10360.000        | 41.95           | 68.22           | -26.27              | 53.01                 | -11.06         | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX\_a\_5220MHz\_H

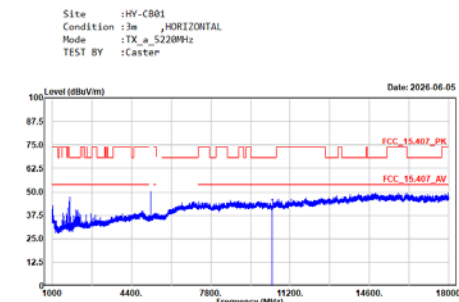

| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 10440.000        | 41.99           | 68.22           | -26.23              | 53.37                 | -11.38         | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX\_a\_5220MHz\_V

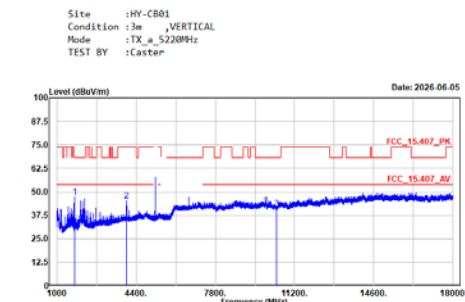


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 1747.150         | 47.10           | 68.22           | -21.12              | 71.00                 | -23.90         | Peak   |
| 2   | 3987.750         | 45.23           | 74.00           | -28.77              | 62.25                 | -17.02         | Peak   |
| 3   | 10440.000        | 41.02           | 68.22           | -27.20              | 52.40                 | -11.38         | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

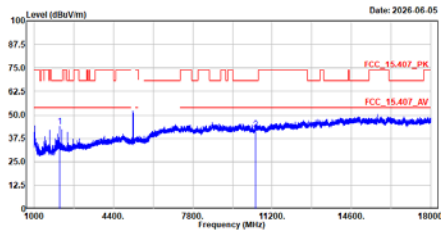


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2092.250  | 43.66  | 68.22  | -24.56 | 65.66 | -22.00 | Peak   |
| 2   | 10480.000 | 42.34  | 68.22  | -25.88 | 53.61 | -11.27 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

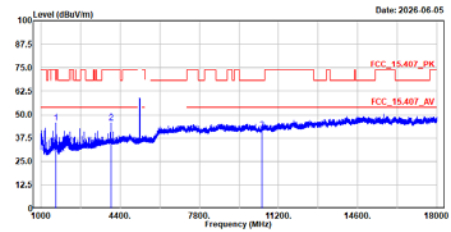


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1629.850  | 45.50  | 68.22  | -22.72 | 69.90 | -24.40 | Peak   |
| 2   | 3997.950  | 45.77  | 74.00  | -28.23 | 62.79 | -17.02 | Peak   |
| 3   | 10480.000 | 41.86  | 68.22  | -26.36 | 53.13 | -11.27 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5745MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_a\_5745MHz  
TEST BY :Caster

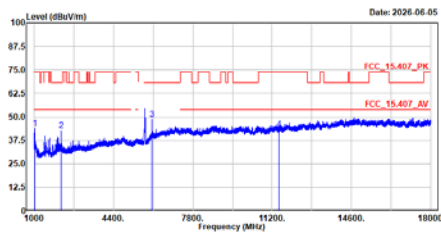


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1017.850  | 43.62  | 74.00  | -30.38 | 69.41 | -25.79 | Peak   |
| 2   | 2165.350  | 42.49  | 68.22  | -25.73 | 64.21 | -21.72 | Peak   |
| 3   | 6060.050  | 48.72  | 68.22  | -19.50 | 62.56 | -13.84 | Peak   |
| 4   | 11490.000 | 43.40  | 74.00  | -30.60 | 52.75 | -9.35  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5745MHz\_V


Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_a\_5745MHz  
TEST BY :Caster

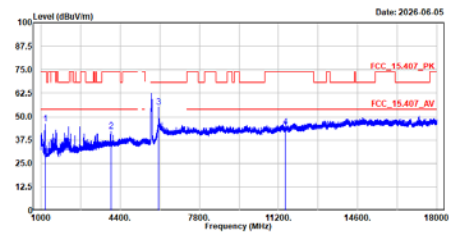

| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1164.900  | 46.16  | 74.00  | -27.84 | 70.92 | -24.76 | Peak   |
| 2   | 3997.100  | 42.16  | 74.00  | -31.84 | 59.18 | -17.02 | Peak   |
| 3   | 6054.100  | 55.06  | 68.22  | -13.16 | 68.91 | -13.85 | Peak   |
| 4   | 11490.000 | 44.61  | 74.00  | -29.39 | 53.96 | -9.35  | Peak   |


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5785MHz\_H

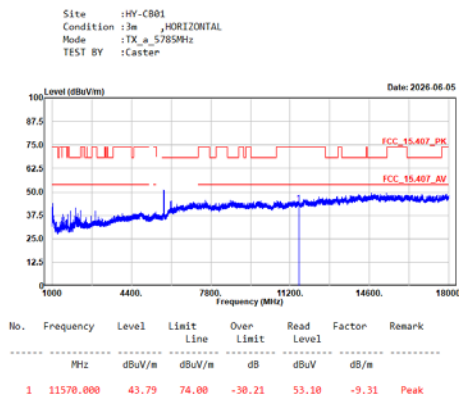


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5785MHz\_V

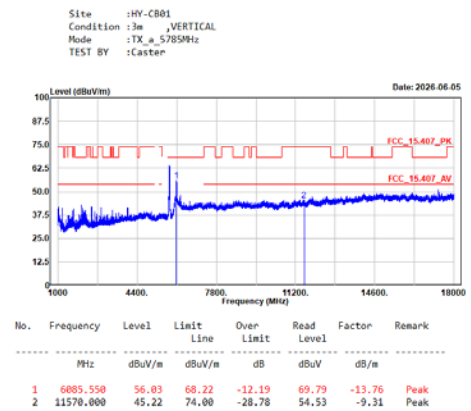


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5825MHz\_H

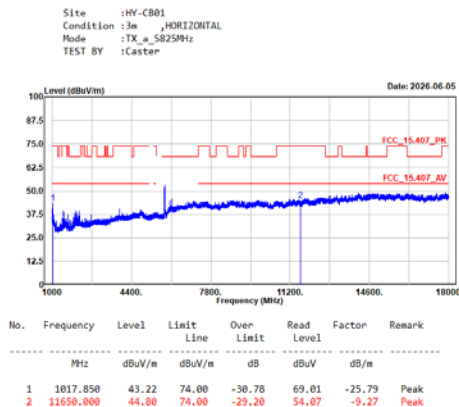

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


## TX\_a\_5825MHz\_V

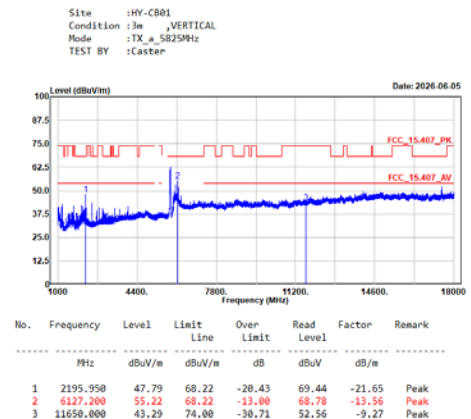

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5180MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5180MHz  
TEST BY :Caster

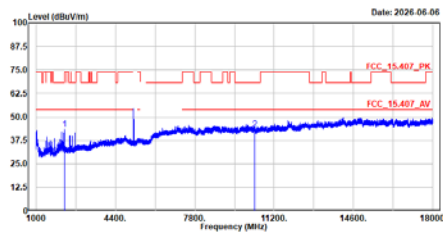


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2199.350  | 43.38  | 68.22  | -24.84 | 65.02 | -21.64 | Peak   |
| 2   | 10360.000 | 43.57  | 68.22  | -24.65 | 54.63 | -11.06 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5180MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5180MHz  
TEST BY :Caster

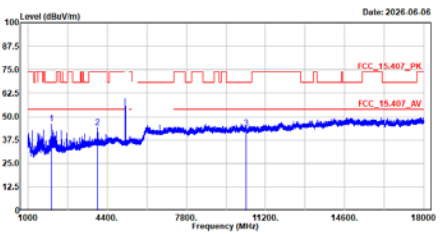


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1999.600  | 46.20  | 68.22  | -22.02 | 68.88 | -22.68 | Peak   |
| 2   | 3986.050  | 44.11  | 74.00  | -29.89 | 61.13 | -17.02 | Peak   |
| 3   | 10360.000 | 43.70  | 68.22  | -24.52 | 54.76 | -11.06 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5220MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5220MHz  
TEST BY :Caster

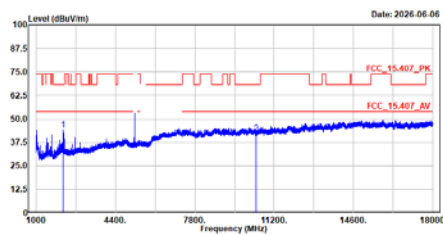


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2160.250  | 44.11  | 68.22  | -24.11 | 65.88 | -21.77 | Peak   |
| 2   | 10440.000 | 42.20  | 68.22  | -26.02 | 53.58 | -11.38 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5220MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5220MHz  
TEST BY :Caster

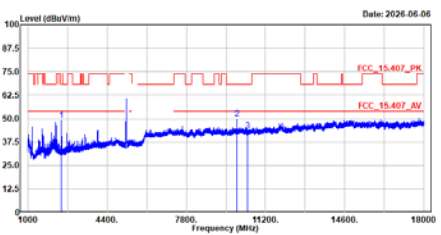


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2435.650  | 49.21  | 68.22  | -19.01 | 70.48 | -21.27 | Peak   |
| 2   | 9962.400  | 49.71  | 68.22  | -18.51 | 61.08 | -11.37 | Peak   |
| 3   | 10440.000 | 43.31  | 68.22  | -24.91 | 54.69 | -11.38 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5240MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5240MHz  
TEST BY :Caster

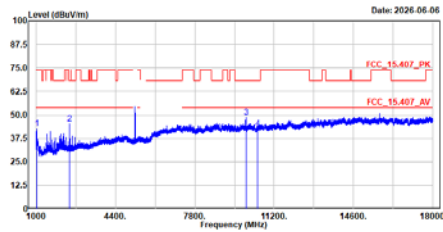


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1020.400  | 42.67  | 74.00  | -31.33 | 68.48 | -25.81 | Peak   |
| 2   | 2417.800  | 45.23  | 68.22  | -22.99 | 66.44 | -21.21 | Peak   |
| 3   | 10001.500 | 48.54  | 68.22  | -19.68 | 59.81 | -11.27 | Peak   |
| 4   | 10480.000 | 42.65  | 68.22  | -25.57 | 53.92 | -11.27 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5240MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5240MHz  
TEST BY :Caster

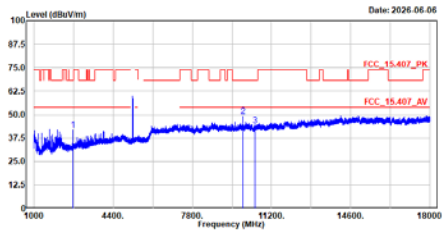


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2663.450  | 41.75  | 68.22  | -26.47 | 62.50 | -20.75 | Peak   |
| 2   | 9959.000  | 49.19  | 68.22  | -19.03 | 60.56 | -11.37 | Peak   |
| 3   | 10480.000 | 44.00  | 68.22  | -24.22 | 55.27 | -11.27 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5745MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5745MHz  
TEST BY :Caster

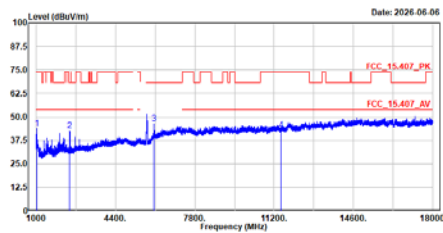


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1017.850  | 43.87  | 74.00  | -30.13 | 69.66 | -25.79 | Peak   |
| 2   | 2439.900  | 42.51  | 68.22  | -25.71 | 63.77 | -21.26 | Peak   |
| 3   | 6047.300  | 46.42  | 68.22  | -21.80 | 60.30 | -13.88 | Peak   |
| 4   | 11490.000 | 43.19  | 74.00  | -30.81 | 52.54 | -9.35  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5745MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5745MHz  
TEST BY :Caster

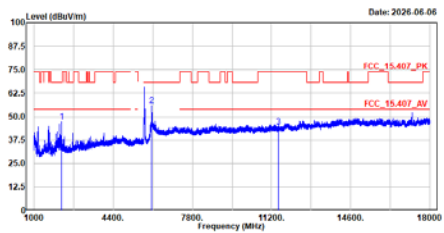


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2191.700  | 47.03  | 68.22  | -21.19 | 68.69 | -21.66 | Peak   |
| 2   | 6056.650  | 55.70  | 68.22  | -12.52 | 69.55 | -13.85 | Peak   |
| 3   | 11490.000 | 44.52  | 74.00  | -29.48 | 53.87 | -9.35  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5785MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5785MHz  
TEST BY :Caster

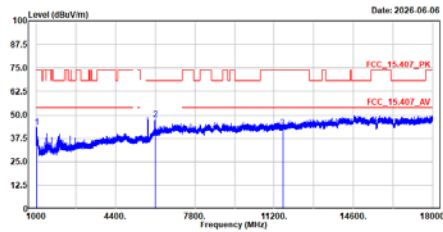


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1019.550  | 43.38  | 74.00  | -30.62 | 69.19 | -25.81 | Peak   |
| 2   | 6100.000  | 47.40  | 68.22  | -20.82 | 61.11 | -13.71 | Peak   |
| 3   | 11570.000 | 43.05  | 74.00  | -30.95 | 52.36 | -9.31  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5785MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5785MHz  
TEST BY :Caster

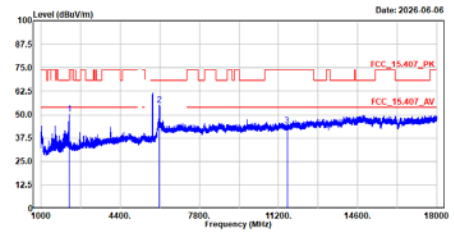


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2199.350  | 50.17  | 68.22  | -18.05 | 71.81 | -21.64 | Peak   |
| 2   | 6088.100  | 55.09  | 68.22  | -13.13 | 68.84 | -13.75 | Peak   |
| 3   | 11570.000 | 44.10  | 74.00  | -29.90 | 53.41 | -9.31  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5825MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac20\_5825MHz  
TEST BY :Caster

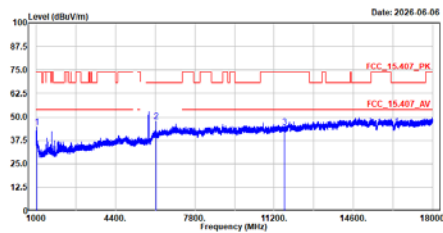


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1017.850  | 44.67  | 74.00  | -29.33 | 70.46 | -25.79 | Peak   |
| 2   | 6129.750  | 47.70  | 68.22  | -20.52 | 61.24 | -13.54 | Peak   |
| 3   | 11650.000 | 44.54  | 74.00  | -29.46 | 53.81 | -9.27  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac20\_5825MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac20\_5825MHz  
TEST BY :Caster

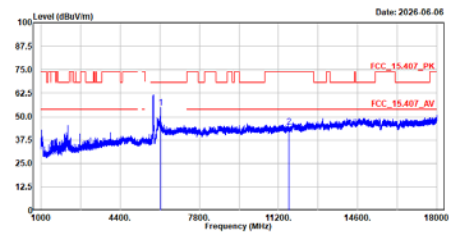


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 6130.250  | 54.78  | 68.22  | -13.44 | 68.28 | -13.50 | Peak   |
| 2   | 11650.000 | 44.38  | 74.00  | -29.62 | 53.65 | -9.27  | Peak   |


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX\_ac40\_5190MHz\_H

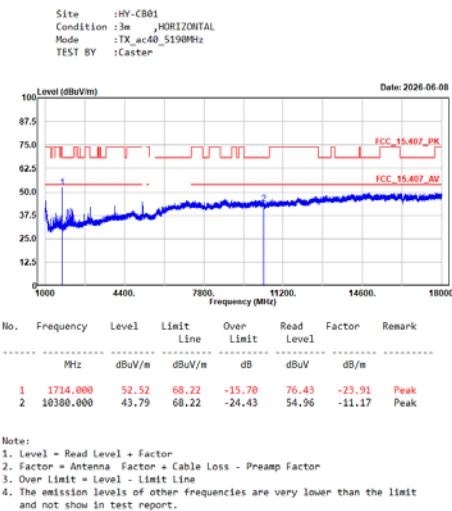


TX\_ac40\_5190MHz\_V

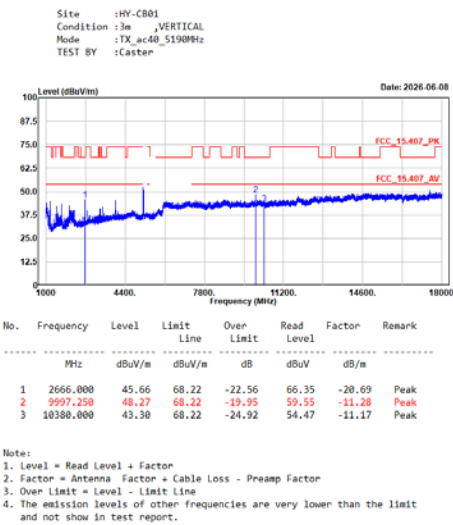

TX\_ac40\_5230MHz\_H

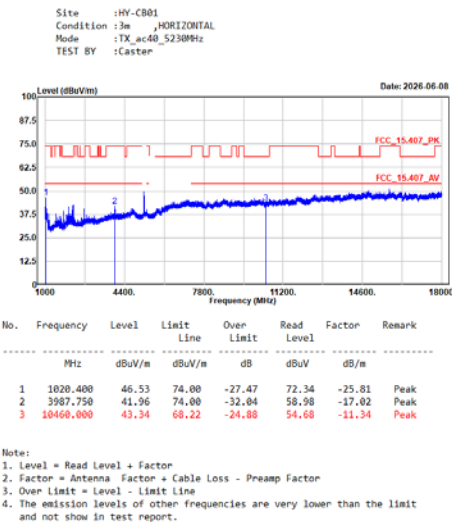


TX\_ac40\_5230MHz\_V

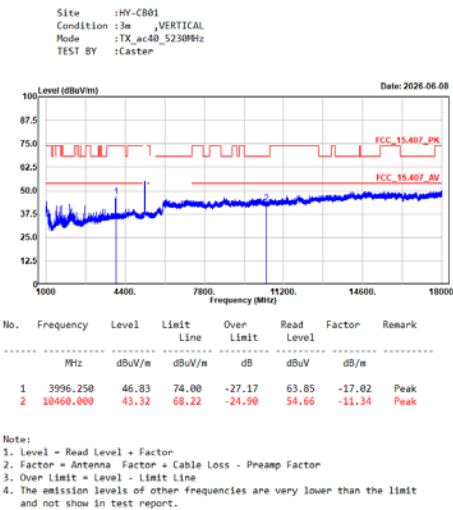

## TX\_ac40\_5755MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac40\_5755MHz  
TEST BY :Caster

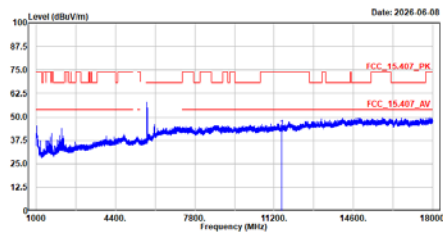


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 11510.000 | 43.95  | 74.00  | -30.05 | 53.27 | -9.32  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac40\_5755MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac40\_5755MHz  
TEST BY :Caster

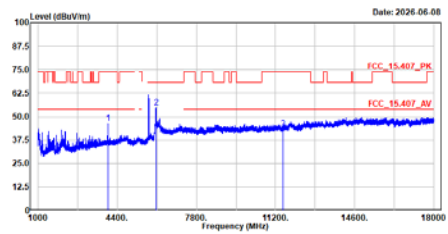


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 3997.100  | 46.54  | 74.00  | -27.46 | 63.56 | -17.02 | Peak   |
| 2   | 6066.000  | 54.80  | 68.22  | -13.42 | 68.62 | -13.82 | Peak   |
| 3   | 11510.000 | 43.54  | 74.00  | -30.46 | 52.86 | -9.32  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac40\_5795MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac40\_5795MHz  
TEST BY :Caster

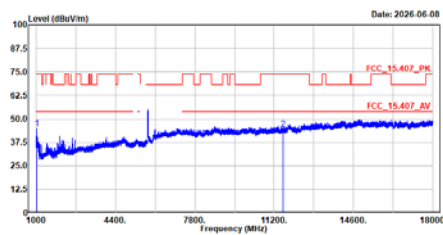


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1017.850  | 44.82  | 74.00  | -29.18 | 70.61 | -25.79 | Peak   |
| 2   | 11590.000 | 44.65  | 74.00  | -29.35 | 53.99 | -9.34  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac40\_5795MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac40\_5795MHz  
TEST BY :Caster

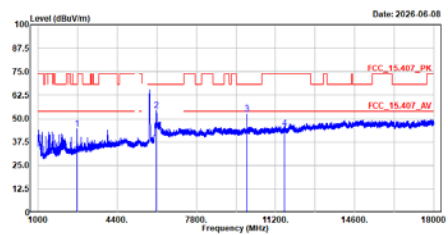


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2660.050  | 44.65  | 68.22  | -23.57 | 65.47 | -20.82 | Peak   |
| 2   | 6089.800  | 54.50  | 68.22  | -13.72 | 68.24 | -13.74 | Peak   |
| 3   | 9965.800  | 52.43  | 68.22  | -15.79 | 63.79 | -11.36 | Peak   |
| 4   | 11590.000 | 44.88  | 74.00  | -29.12 | 54.22 | -9.34  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac80\_5210MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac80\_5210MHz  
TEST BY :Caster

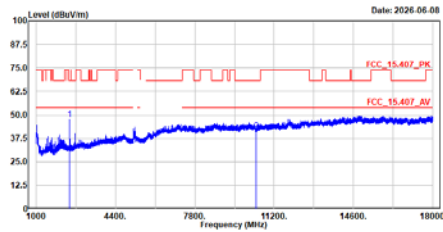


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2427.150  | 47.63  | 68.22  | -20.59 | 68.67 | -21.24 | Peak   |
| 2   | 10420.000 | 41.54  | 68.22  | -26.68 | 52.88 | -11.34 | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac80\_5210MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac80\_5210MHz  
TEST BY :Caster

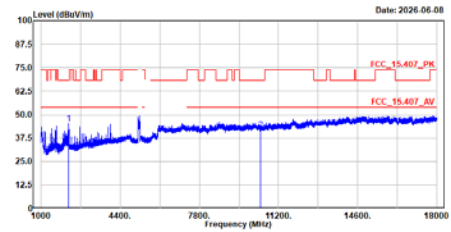


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2190.000  | 45.17  | 68.22  | -23.05 | 66.83 | -21.66 | Peak   |
| 2   | 10420.000 | 41.73  | 68.22  | -26.49 | 53.07 | -11.34 | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac80\_5775MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_ac80\_5775MHz  
TEST BY :Caster

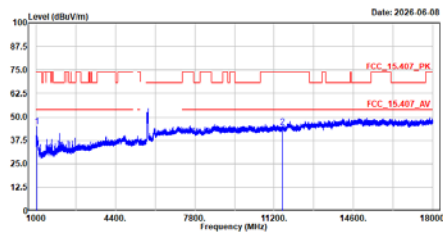


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1020.400  | 44.79  | 74.00  | -29.21 | 70.60 | -25.81 | Peak   |
| 2   | 11550.000 | 44.51  | 74.00  | -29.49 | 53.78 | -9.27  | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_ac80\_5775MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_ac80\_5775MHz  
TEST BY :Caster

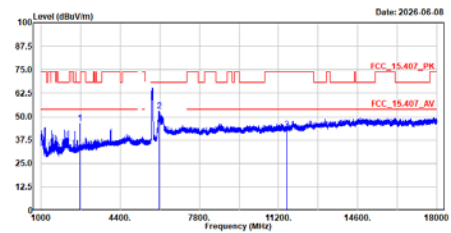


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2657.500  | 46.28  | 68.22  | -21.94 | 67.07 | -20.79 | Peak   |
| 2   | 6085.550  | 52.86  | 68.22  | -15.36 | 66.62 | -13.76 | Peak   |
| 3   | 11550.000 | 42.96  | 74.00  | -31.04 | 52.23 | -9.27  | Peak   |


## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX\_be20\_5180MHz\_H

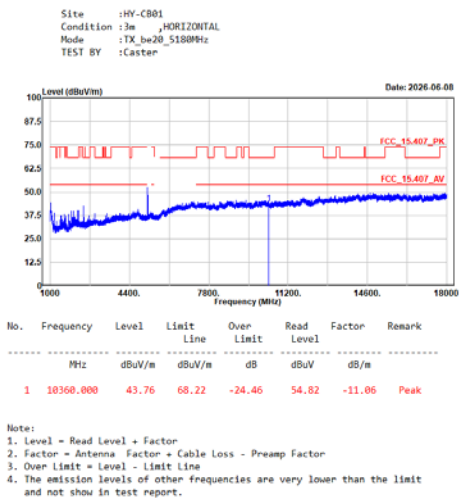


TX\_be20\_5180MHz\_V

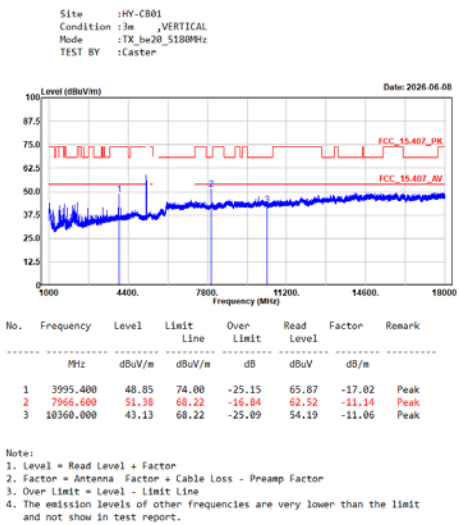

TX\_be20\_5220MHz\_H

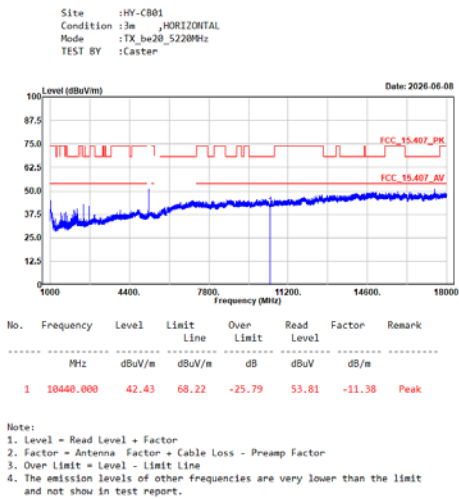


TX\_be20\_5220MHz\_V

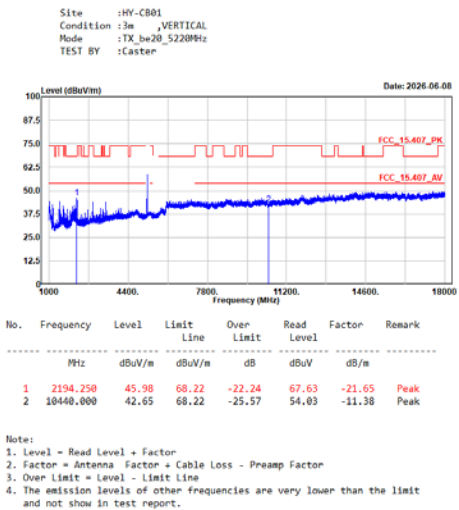

## TX\_be20\_5240MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be20\_5240MHz  
TEST BY :Caster

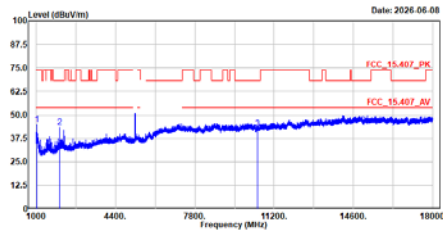


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1026.350  | 44.94  | 74.00  | -29.06 | 70.75 | -25.81 | Peak   |
| 2   | 1998.750  | 43.37  | 68.22  | -24.85 | 66.05 | -22.68 | Peak   |
| 3   | 10480.000 | 42.46  | 68.22  | -25.76 | 53.73 | -11.27 | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5240MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be20\_5240MHz  
TEST BY :Caster

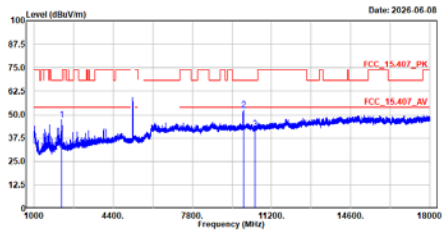


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2192.550  | 47.15  | 68.22  | -21.07 | 68.81 | -21.66 | Peak   |
| 2   | 9993.000  | 52.42  | 68.22  | -15.80 | 63.70 | -11.28 | Peak   |
| 3   | 10480.000 | 42.36  | 68.22  | -25.86 | 53.63 | -11.27 | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5745MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be20\_5745MHz  
TEST BY :Caster

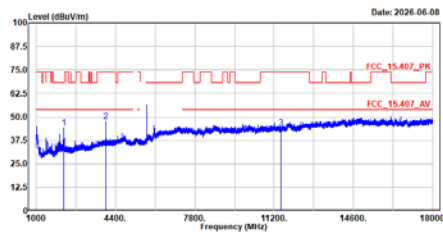


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2191.700  | 44.19  | 68.22  | -24.03 | 65.85 | -21.66 | Peak   |
| 2   | 3987.750  | 47.49  | 74.00  | -26.51 | 64.51 | -17.02 | Peak   |
| 3   | 11490.000 | 44.23  | 74.00  | -29.77 | 53.58 | -9.35  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5745MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be20\_5745MHz  
TEST BY :Caster

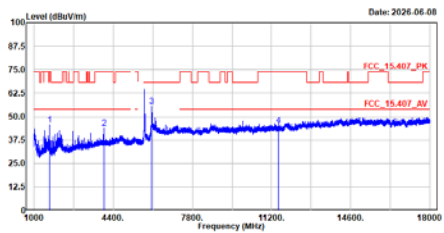


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1664.700  | 45.77  | 74.00  | -28.23 | 69.94 | -24.17 | Peak   |
| 2   | 3998.800  | 43.61  | 74.00  | -30.39 | 60.63 | -17.02 | Peak   |
| 3   | 6060.050  | 55.36  | 68.22  | -12.86 | 69.20 | -13.84 | Peak   |
| 4   | 11490.000 | 45.26  | 74.00  | -28.74 | 54.61 | -9.35  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5785MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be20\_5785MHz  
TEST BY :Caster

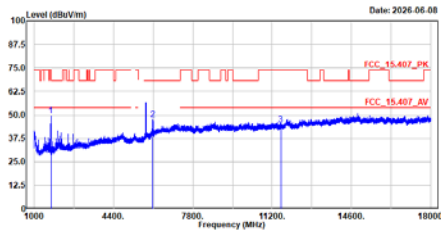


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1710.600  | 49.61  | 68.22  | -18.61 | 73.55 | -23.94 | Peak   |
| 2   | 6889.800  | 47.48  | 68.22  | -20.74 | 61.22 | -13.74 | Peak   |
| 3   | 11578.000 | 44.92  | 74.00  | -29.08 | 54.23 | -9.31  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5785MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be20\_5785MHz  
TEST BY :Caster

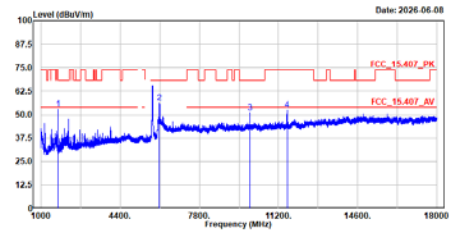


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1713.150  | 52.78  | 68.22  | -15.44 | 76.70 | -23.92 | Peak   |
| 2   | 6891.500  | 56.11  | 68.22  | -12.11 | 69.85 | -13.74 | Peak   |
| 3   | 9988.250  | 58.94  | 68.22  | -17.28 | 62.26 | -11.32 | Peak   |
| 4   | 11578.000 | 52.52  | 74.00  | -21.48 | 61.84 | -9.32  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5825MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be20\_5825MHz  
TEST BY :Caster

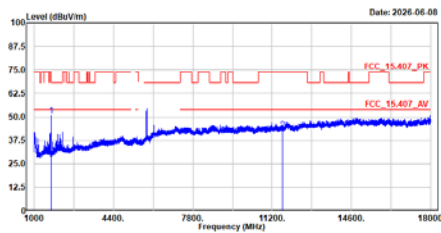


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1712.300  | 50.38  | 68.22  | -17.84 | 74.31 | -23.93 | Peak   |
| 2   | 11650.000 | 43.14  | 74.00  | -30.86 | 52.41 | -9.27  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be20\_5825MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be20\_5825MHz  
TEST BY :Caster

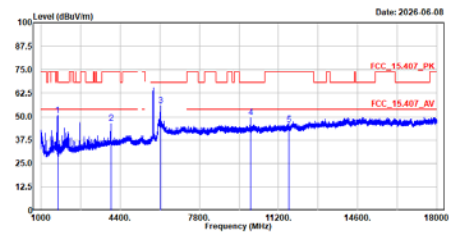


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1710.600  | 50.66  | 68.22  | -17.56 | 74.60 | -23.94 | Peak   |
| 2   | 3996.250  | 46.38  | 74.00  | -27.62 | 63.40 | -17.02 | Peak   |
| 3   | 6135.700  | 55.71  | 68.22  | -12.51 | 69.23 | -13.52 | Peak   |
| 4   | 9998.100  | 49.32  | 68.22  | -18.90 | 60.59 | -11.27 | Peak   |
| 5   | 11650.000 | 45.59  | 74.00  | -28.41 | 54.86 | -9.27  | Peak   |

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5190MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be40\_5190MHz  
TEST BY :Caster

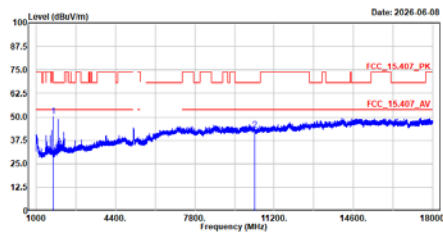


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1722.500  | 50.36  | 68.22  | -17.86 | 74.18 | -23.82 | Peak   |
| 2   | 10380.000 | 42.85  | 68.22  | -25.37 | 54.02 | -11.17 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5190MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be40\_5190MHz  
TEST BY :Caster

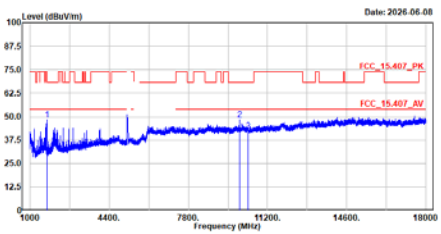


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1715.700  | 48.18  | 68.22  | -20.04 | 72.06 | -23.88 | Peak   |
| 2   | 9992.150  | 48.43  | 68.22  | -19.79 | 59.72 | -11.29 | Peak   |
| 3   | 10380.000 | 42.35  | 68.22  | -25.87 | 53.52 | -11.17 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5230MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be40\_5230MHz  
TEST BY :Caster

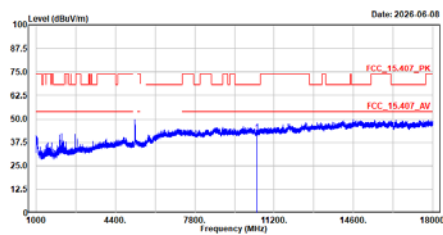


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 10460.000 | 42.56  | 68.22  | -25.66 | 53.90 | -11.34 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5230MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be40\_5230MHz  
TEST BY :Caster

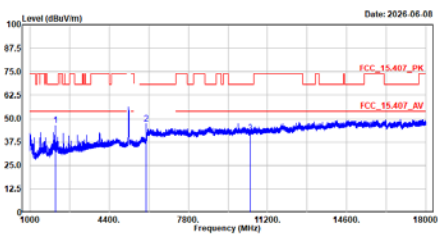


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2099.050  | 46.24  | 68.22  | -21.98 | 68.31 | -22.07 | Peak   |
| 2   | 5983.550  | 47.24  | 68.22  | -20.98 | 61.40 | -14.16 | Peak   |
| 3   | 10460.000 | 42.09  | 68.22  | -26.13 | 53.43 | -11.34 | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5755MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be40\_5755MHz  
TEST BY :Caster

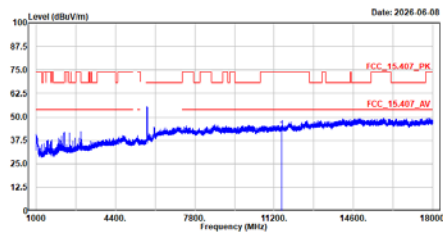


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 11510.000 | 43.49  | 74.00  | -30.51 | 52.81 | -9.32  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5755MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be40\_5755MHz  
TEST BY :Caster

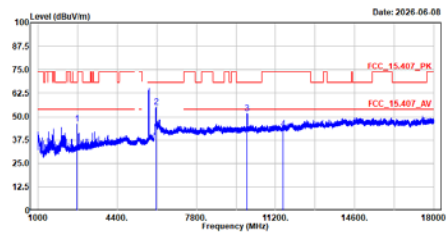


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2660.050  | 45.96  | 68.22  | -22.26 | 66.78 | -20.82 | Peak   |
| 2   | 6063.450  | 55.11  | 68.22  | -13.11 | 68.93 | -13.82 | Peak   |
| 3   | 9977.700  | 51.70  | 68.22  | -16.52 | 63.02 | -11.32 | Peak   |
| 4   | 11510.000 | 43.48  | 74.00  | -30.52 | 52.80 | -9.32  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5795MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be40\_5795MHz  
TEST BY :Caster

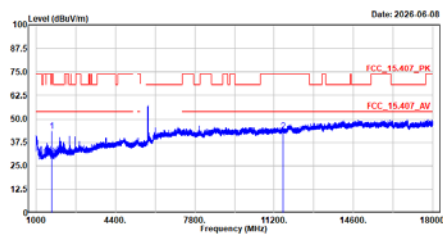


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1666.400  | 43.44  | 74.00  | -30.56 | 67.61 | -24.17 | Peak   |
| 2   | 11590.000 | 43.51  | 74.00  | -30.49 | 52.85 | -9.34  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be40\_5795MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be40\_5795MHz  
TEST BY :Caster

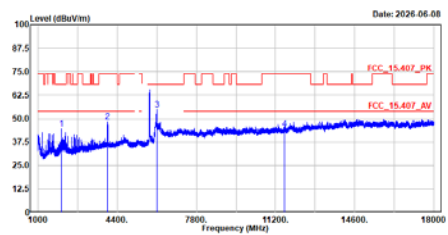


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1993.650  | 44.37  | 68.22  | -23.85 | 67.05 | -22.68 | Peak   |
| 2   | 3987.750  | 48.16  | 74.00  | -25.84 | 65.18 | -17.02 | Peak   |
| 3   | 6093.200  | 54.56  | 68.22  | -13.66 | 68.29 | -13.73 | Peak   |
| 4   | 11590.000 | 44.51  | 74.00  | -29.49 | 53.85 | -9.34  | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be80\_5210MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be80\_5210MHz  
TEST BY :Caster

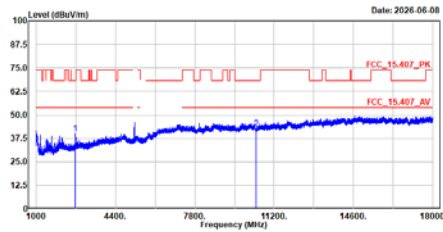


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2660.050  | 39.83  | 68.22  | -28.39 | 60.65 | -20.82 | Peak   |
| 2   | 10420.000 | 42.73  | 68.22  | -25.49 | 54.07 | -11.34 | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be80\_5210MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be80\_5210MHz  
TEST BY :Caster

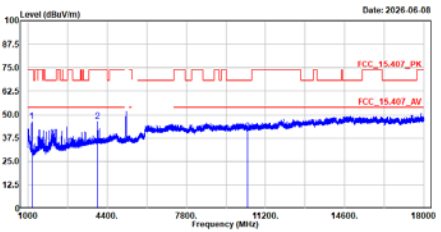


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 1162.350  | 46.27  | 74.00  | -27.73 | 71.04 | -24.77 | Peak   |
| 2   | 3991.150  | 46.45  | 74.00  | -27.55 | 63.48 | -17.03 | Peak   |
| 3   | 10420.000 | 40.96  | 68.22  | -27.26 | 52.30 | -11.34 | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be80\_5775MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be80\_5775MHz  
TEST BY :Caster

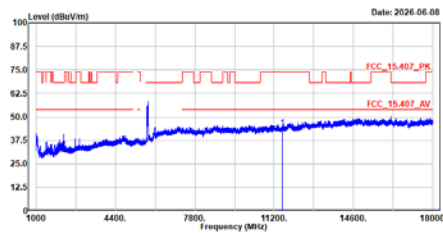


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 11550.000 | 44.23  | 74.00  | -29.77 | 53.50 | -9.27  | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be80\_5775MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be80\_5775MHz  
TEST BY :Caster

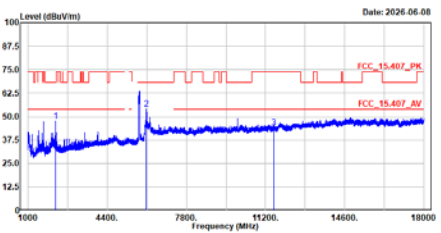


| No. | Frequency | Level  | Limit  | Over   | Read  | Factor | Remark |
|-----|-----------|--------|--------|--------|-------|--------|--------|
|     | MHz       | dBuV/m | dBuV/m | Limit  | Level | dB/m   |        |
| 1   | 2190.000  | 47.40  | 68.22  | -20.82 | 69.06 | -21.66 | Peak   |
| 2   | 6077.050  | 53.86  | 68.22  | -14.36 | 67.65 | -13.79 | Peak   |
| 3   | 11550.000 | 44.10  | 74.00  | -29.90 | 53.37 | -9.27  | Peak   |

## Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_be80\_5775MHz\_H

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_be80\_5775MHz  
TEST BY :Caster

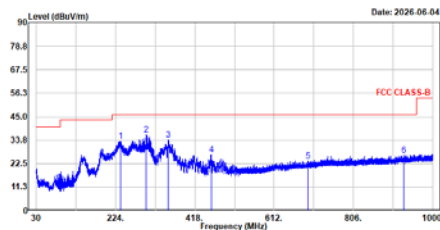


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>Line<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-------------------------|---------------------|-----------------------|----------------|--------|
| 1   | 236.111          | 33.42           | 46.00                   | -12.58              | 58.95                 | -25.53         | QP     |
| 2   | 299.314          | 36.24           | 46.00                   | -9.76               | 59.64                 | -23.40         | QP     |
| 3   | 352.167          | 33.94           | 46.00                   | -12.06              | 56.19                 | -22.25         | QP     |
| 4   | 458.422          | 26.73           | 46.00                   | -19.27              | 45.73                 | -19.00         | QP     |
| 5   | 695.384          | 23.84           | 46.00                   | -22.16              | 38.21                 | -14.37         | QP     |
| 6   | 929.396          | 26.45           | 46.00                   | -19.55              | 37.81                 | -11.36         | QP     |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

## TX\_be80\_5775MHz\_V

Site :HY-CB01  
Condition :3m ,VERTICAL  
Mode :TX\_be80\_5775MHz  
TEST BY :Caster

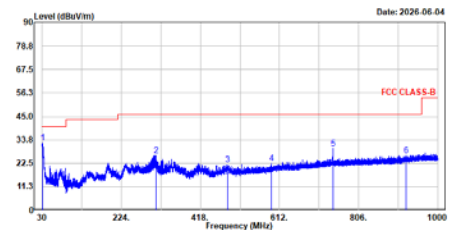


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>Line<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-------------------------|---------------------|-----------------------|----------------|--------|
| 1   | 31.150           | 32.29           | 40.00                   | -7.71               | 57.50                 | -25.21         | QP     |
| 2   | 309.664          | 26.31           | 46.00                   | -19.69              | 49.39                 | -23.08         | QP     |
| 3   | 485.124          | 21.89           | 46.00                   | -24.11              | 40.59                 | -18.70         | QP     |
| 4   | 592.279          | 22.40           | 46.00                   | -23.60              | 38.57                 | -16.17         | QP     |
| 5   | 742.537          | 29.50           | 46.00                   | -16.50              | 42.88                 | -13.38         | QP     |
| 6   | 921.396          | 26.27           | 46.00                   | -19.73              | 37.72                 | -11.45         | QP     |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

## TX\_a\_5180MHz\_H\_Average

Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_a\_5180MHz  
TEST BY :Caster

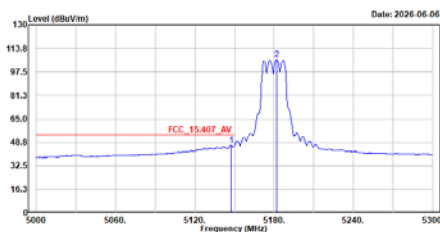


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>Line<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-------------------------|---------------------|-----------------------|----------------|---------|
| 1   | 5147.600         | 46.77           | 54.00                   | -7.23               | 32.85                 | 13.92          | Average |
| 2   | 5181.000         | 105.98          | -----                   | -----               | 92.13                 | 13.85          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5180MHz\_H\_Peak


Site :HY-CB01  
Condition :3m ,HORIZONTAL  
Mode :TX\_a\_5180MHz  
TEST BY :Caster

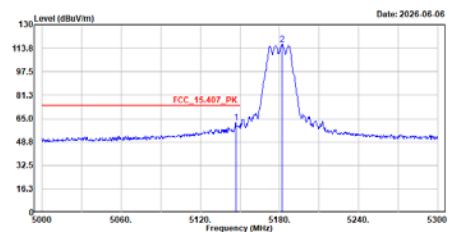

| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>Line<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-------------------------|---------------------|-----------------------|----------------|--------|
| 1   | 5147.000         | 62.24           | 74.00                   | -11.76              | 48.32                 | 13.92          | Peak   |
| 2   | 5182.100         | 116.17          | -----                   | -----               | 102.32                | 13.85          | Peak   |


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5180MHz\_V\_Average

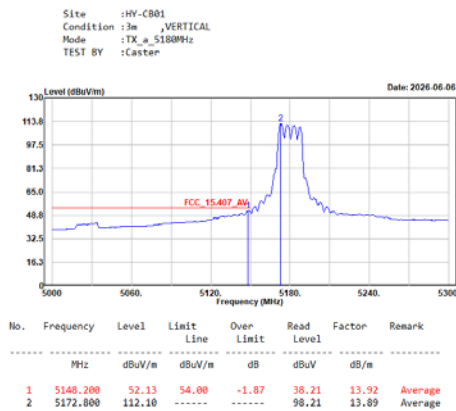


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5180MHz\_V\_Peak

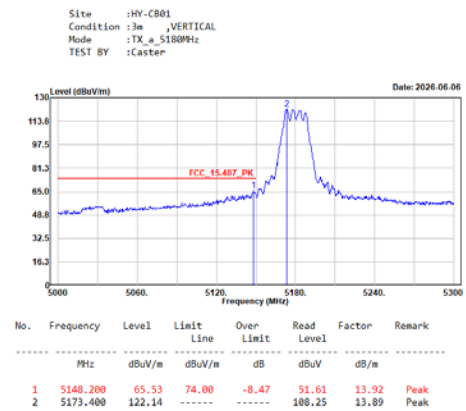


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band1\_H\_Average

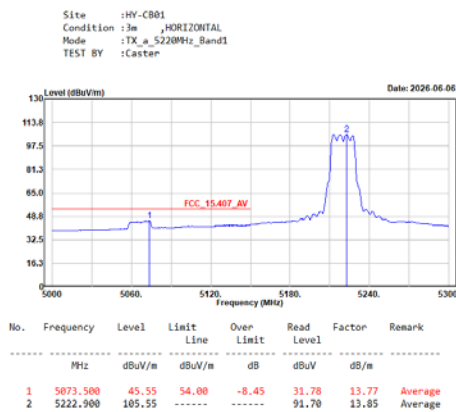

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


## TX\_a\_5220MHz\_Band1\_H\_Peak

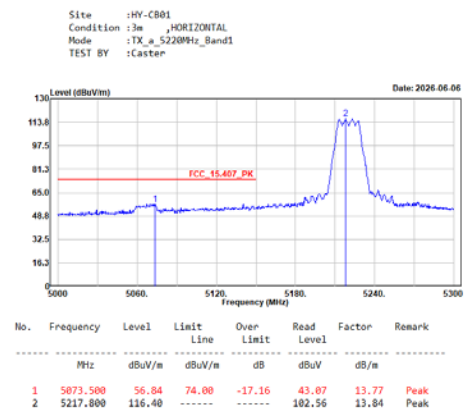

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band1\_V\_Average

Site :HY-CB01  
Condition :3m\_VERTICAL  
Mode :TX\_a\_5220MHz\_Band1  
TEST BY :Caster

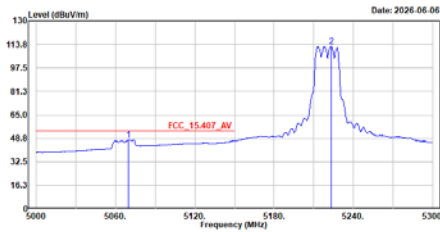


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|---------|
| 1   | 5069.900         | 47.74           | 54.00           | -6.26               | 33.97                 | 13.77          | Average |
| 2   | 5223.200         | 112.52          | -----           | -----               | 98.67                 | 13.85          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band1\_V\_Peak

Site :HY-CB01  
Condition :3m\_VERTICAL  
Mode :TX\_a\_5220MHz\_Band1  
TEST BY :Caster

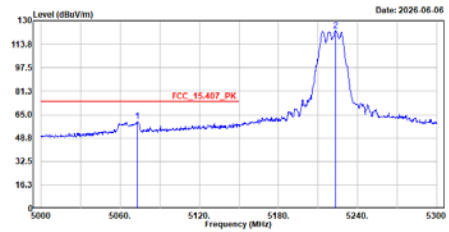


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5073.200         | 60.42           | 74.00           | -13.58              | 46.65                 | 13.77          | Peak   |
| 2   | 5223.200         | 123.36          | -----           | -----               | 109.51                | 13.85          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band2\_H\_Average

Site :HY-CB01  
Condition :3m\_HORIZONTAL  
Mode :TX\_a\_5220MHz\_Band2  
TEST BY :Caster

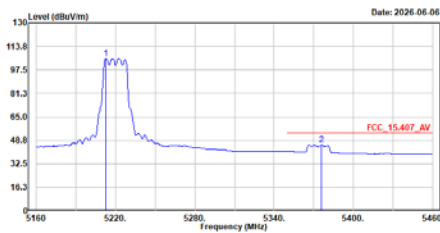


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|---------|
| 1   | 5212.800         | 105.67          | -----           | -----               | 91.84                 | 13.83          | Average |
| 2   | 5376.000         | 45.52           | 54.00           | -8.48               | 31.65                 | 13.87          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band2\_H\_Peak

Site :HY-CB01  
Condition :3m\_HORIZONTAL  
Mode :TX\_a\_5220MHz\_Band2  
TEST BY :Caster

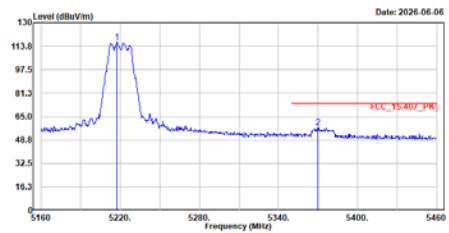


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5212.800         | 116.40          | -----           | -----               | 102.56                | 13.84          | Peak   |
| 2   | 5376.000         | 57.56           | 74.00           | -16.44              | 43.69                 | 13.87          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band2\_V\_Average

Site :HY-CB01  
Condition :3m\_VERTICAL  
Mode :TX\_a\_5220MHz\_Band2  
TEST BY :Caster

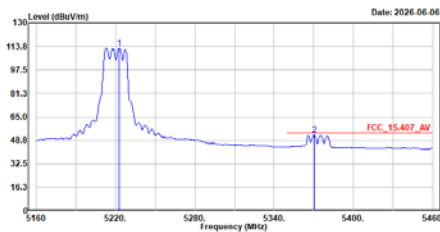


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|---------|
| 1   | 5222.700         | 112.52          | -----           | -----               | 98.67                 | 13.85          | Average |
| 2   | 5370.300         | 52.38           | 54.00           | -1.62               | 38.51                 | 13.87          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5220MHz\_Band2\_V\_Peak

Site :HY-CB01  
Condition :3m\_VERTICAL  
Mode :TX\_a\_5220MHz\_Band2  
TEST BY :Caster

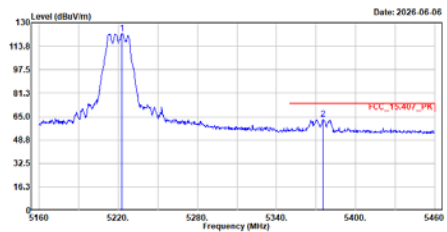


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5223.000         | 122.71          | -----           | -----               | 108.86                | 13.85          | Peak   |
| 2   | 5375.100         | 63.44           | 74.00           | -10.56              | 49.57                 | 13.87          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_H\_Average

Site :HY-CB01  
Condition :3m\_HORIZONTAL  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

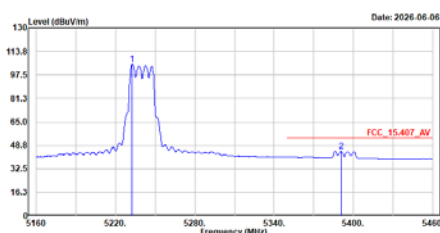


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|---------|
| 1   | 5232.600         | 104.83          | -----           | -----               | 90.96                 | 13.87          | Average |
| 2   | 5390.700         | 44.65           | 54.00           | -9.35               | 30.79                 | 13.86          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_H\_Peak

Site :HY-CB01  
Condition :3m\_HORIZONTAL  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

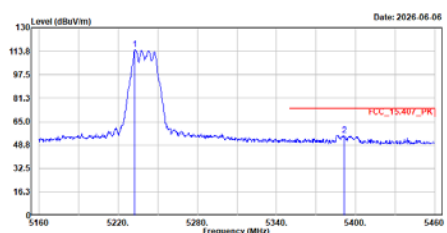


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5232.600         | 114.91          | -----           | -----               | 101.04                | 13.87          | Peak   |
| 2   | 5391.300         | 55.56           | 74.00           | -18.44              | 41.70                 | 13.86          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_V\_Average

Site :HY-CB01  
Condition :3m\_Vertical  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

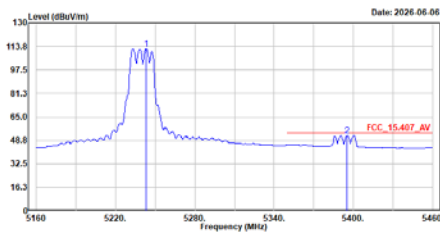


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark  |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|---------|
| 1   | 5243.100         | 112.03          | -----           | -----               | 98.15                 | 13.88          | Average |
| 2   | 5395.200         | 52.23           | 54.00           | -1.77               | 38.38                 | 13.85          | Average |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5240MHz\_V\_Peak

Site :HY-CB01  
Condition :3m\_Vertical  
Mode :TX\_a\_5240MHz  
TEST BY :Caster

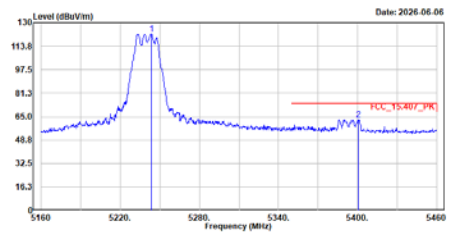


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5243.700         | 122.35          | -----           | -----               | 108.47                | 13.88          | Peak   |
| 2   | 5400.300         | 62.84           | 74.00           | -11.16              | 48.99                 | 13.85          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5745MHz\_H\_Peak

Site :HY-CB01  
Condition :3m\_HORIZONTAL  
Mode :TX\_a\_5745MHz  
TEST BY :Caster

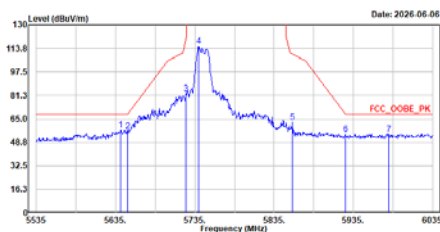


| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5641.500         | 57.50           | 68.22           | -10.72              | 42.35                 | 15.15          | Peak   |
| 2   | 5650.000         | 56.36           | 68.23           | -11.87              | 41.16                 | 15.20          | Peak   |
| 3   | 5724.000         | 82.61           | 119.92          | -37.31              | 67.01                 | 15.60          | Peak   |
| 4   | 5740.000         | 115.19          | -----           | -----               | 99.56                 | 15.63          | Peak   |
| 5   | 5858.000         | 62.89           | 109.96          | -47.07              | 47.21                 | 15.68          | Peak   |
| 6   | 5925.000         | 54.22           | 68.23           | -14.01              | 38.52                 | 15.70          | Peak   |
| 7   | 5979.500         | 54.68           | 68.22           | -13.54              | 38.81                 | 15.87          | Peak   |

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5745MHz\_V\_Peak


Site :HY-CB01  
Condition :3m\_VERTICAL  
Mode :TX\_a\_5745MHz  
TEST BY :Caster

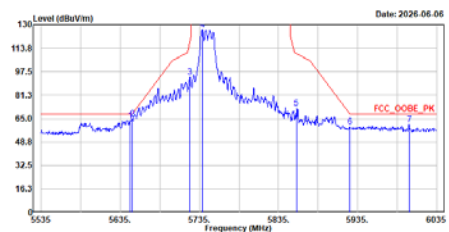

| No. | Frequency<br>MHz | Level<br>dBuV/m | Limit<br>dBuV/m | Over<br>Limit<br>dB | Read<br>Level<br>dBuV | Factor<br>dB/m | Remark |
|-----|------------------|-----------------|-----------------|---------------------|-----------------------|----------------|--------|
| 1   | 5648.000         | 63.82           | 68.22           | -4.40               | 48.63                 | 15.19          | Peak   |
| 2   | 5650.000         | 64.56           | 68.23           | -3.67               | 49.36                 | 15.20          | Peak   |
| 3   | 5723.000         | 93.92           | 117.64          | -23.72              | 78.32                 | 15.60          | Peak   |
| 4   | 5739.000         | 126.43          | -----           | -----               | 110.60                | 15.63          | Peak   |
| 5   | 5857.500         | 72.15           | 110.10          | -37.95              | 56.47                 | 15.68          | Peak   |
| 6   | 5925.000         | 59.29           | 68.23           | -8.94               | 43.59                 | 15.70          | Peak   |
| 7   | 6000.000         | 60.88           | 68.22           | -7.34               | 44.95                 | 15.93          | Peak   |


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5785MHz\_H\_Peak

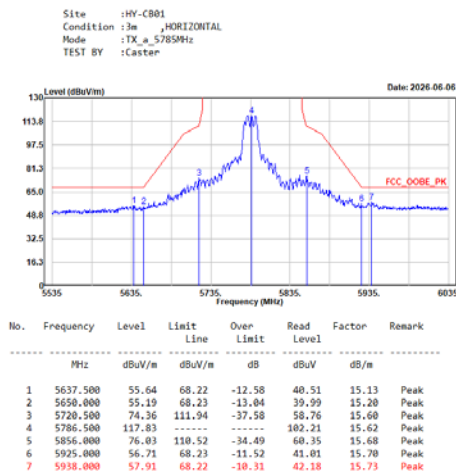


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5785MHz\_V\_Peak

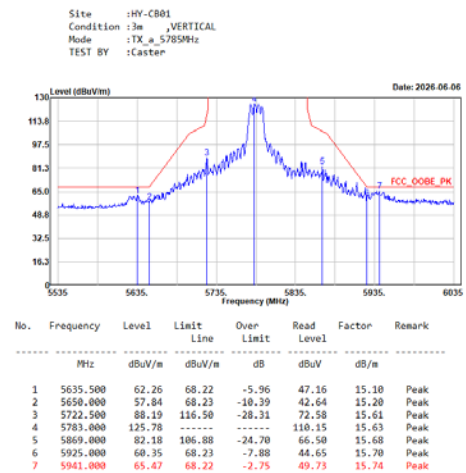


Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5825MHz\_H\_Peak

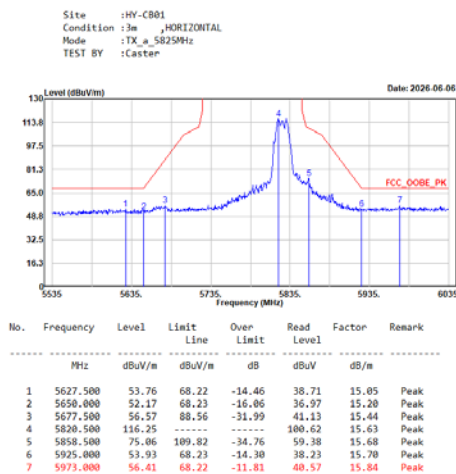

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

## TX\_a\_5825MHz\_V\_Peak

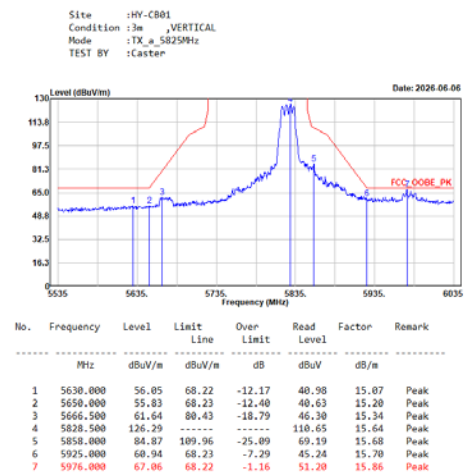

Note:  
1. Level = Read Level + Factor  
2. Factor = Antenna Factor + Cable Loss - Preamp Factor  
3. Over Limit = Level - Limit Line  
4. The omission levels of other frequencies are very lower than the limit and not show in test report.