


TX_ac20_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5180MHz
TEST BY :Caster

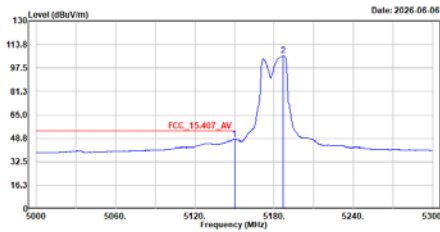


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	47.89	54.00	-6.11	33.96	13.93	Average
2	5186.900	105.81	-----	-----	91.96	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5180MHz
TEST BY :Caster

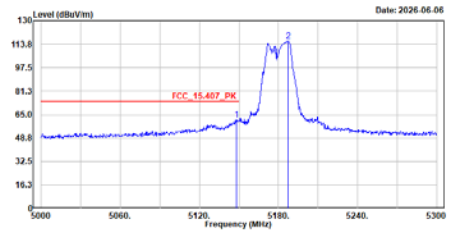


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.200	61.49	74.00	-12.51	47.57	13.92	Peak
2	5187.500	115.83	-----	-----	101.98	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Caster

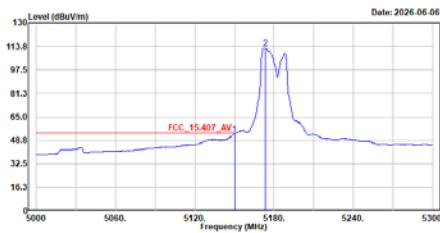


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	52.94	54.00	-1.06	39.01	13.93	Average
2	5173.400	112.49	-----	-----	98.60	13.89	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V_Peak


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Caster

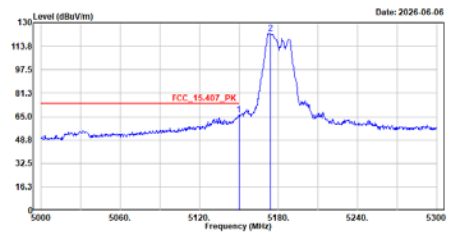

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	66.03	74.00	-7.97	52.10	13.93	Peak
2	5174.000	122.45	-----	-----	108.57	13.88	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_Band1_H_Average

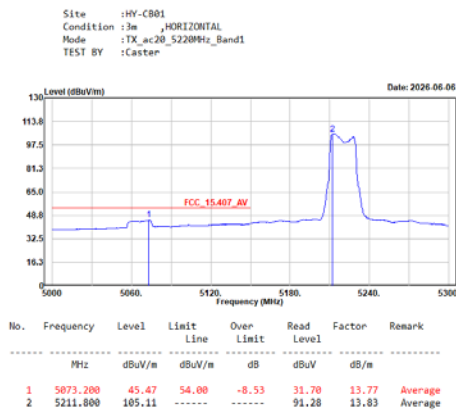


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_Band1_H_Peak

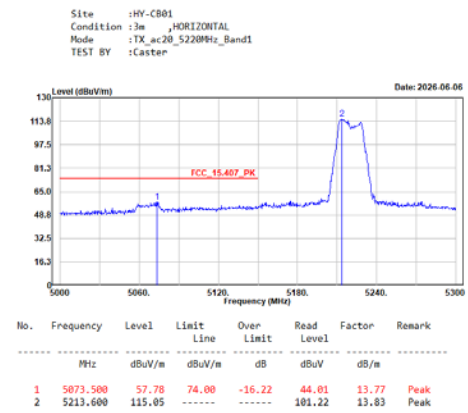


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_Band1_V_Average

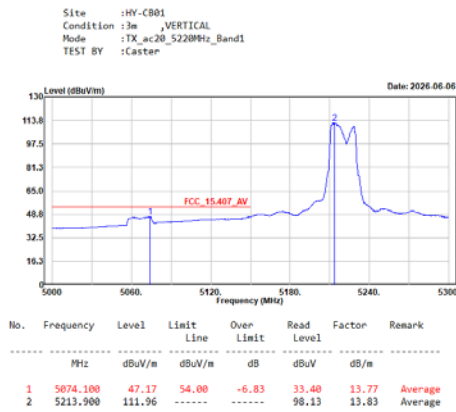


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_Band1_V_Peak

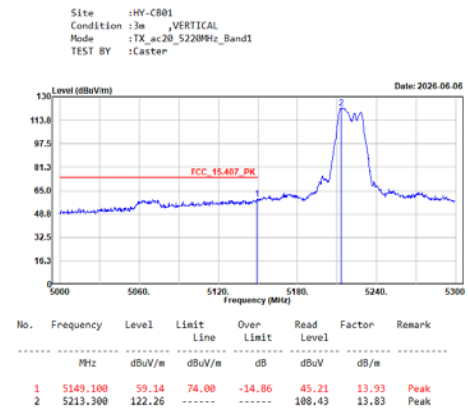


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5220MHz_Band2_H_Average

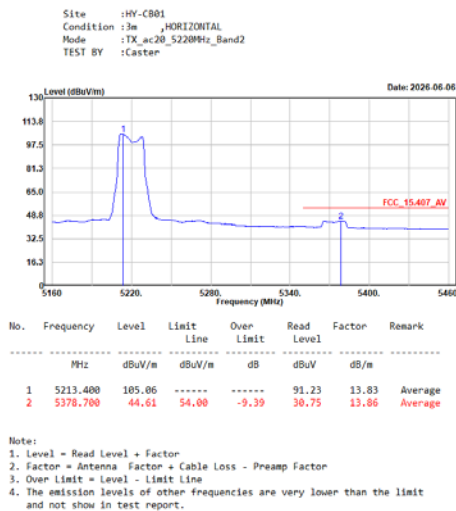


TX_ac20_5220MHz_Band2_H_Peak

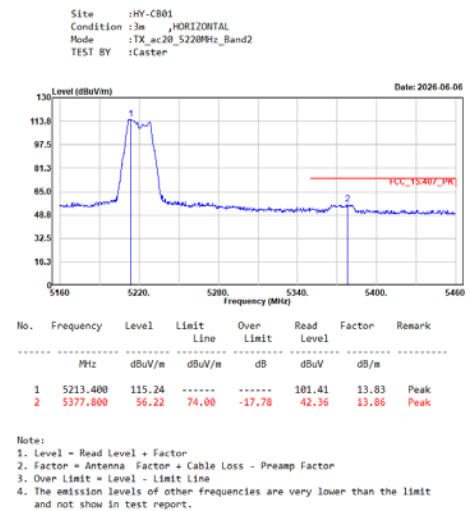

TX_ac20_5220MHz_Band2_V_Average

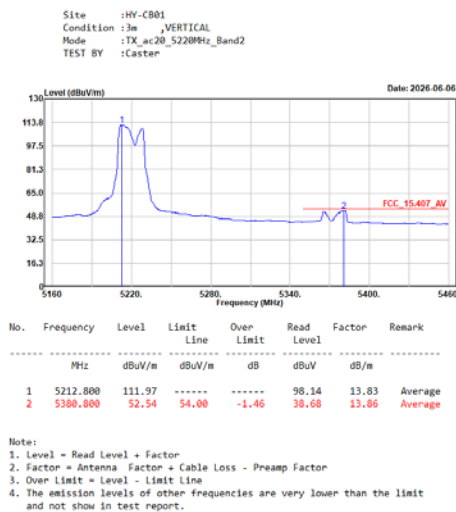


TX_ac20_5220MHz_Band2_V_Peak

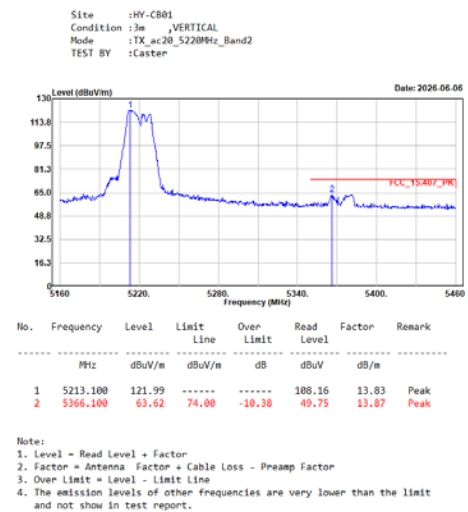

TX_ac20_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5240MHz
TEST BY :Caster

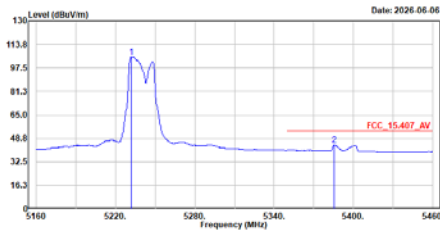


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5232.000	105.16	-----	-----	91.30	13.86	Average
2	5385.600	44.17	54.00	-9.83	30.32	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5240MHz
TEST BY :Caster

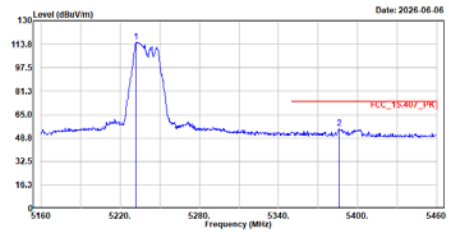


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5232.000	115.15	-----	-----	101.29	13.86	Peak
2	5385.900	55.28	74.00	-18.72	41.43	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Caster

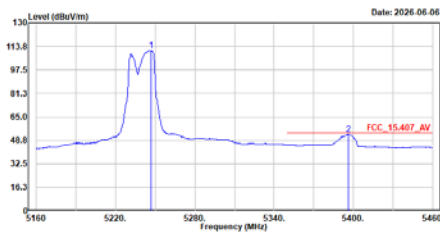


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5246.700	110.97	-----	-----	97.08	13.89	Average
2	5396.100	52.86	54.00	-1.14	39.01	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_V_Peak


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Caster

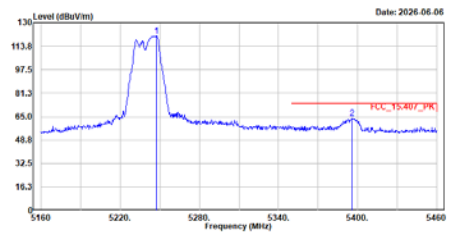

No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5247.300	120.81	-----	-----	106.92	13.89	Peak
2	5395.500	63.86	74.00	-10.14	50.01	13.85	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_H_Peak

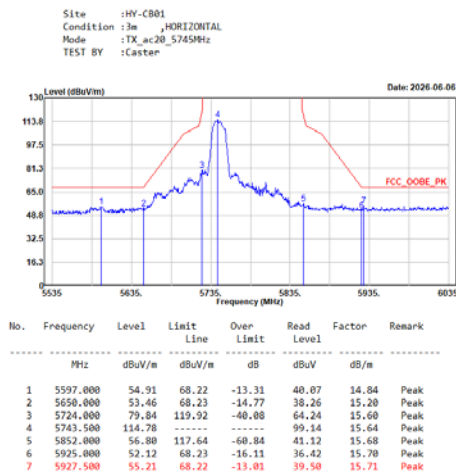


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_V_Peak

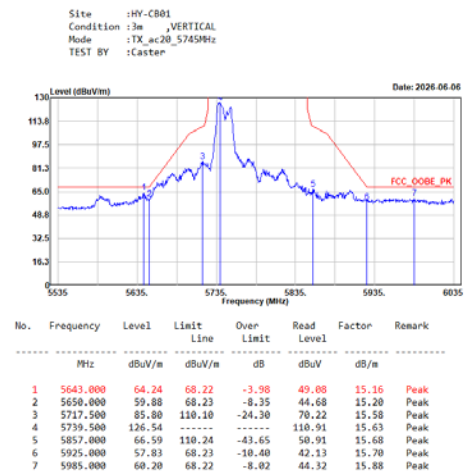


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_H_Peak

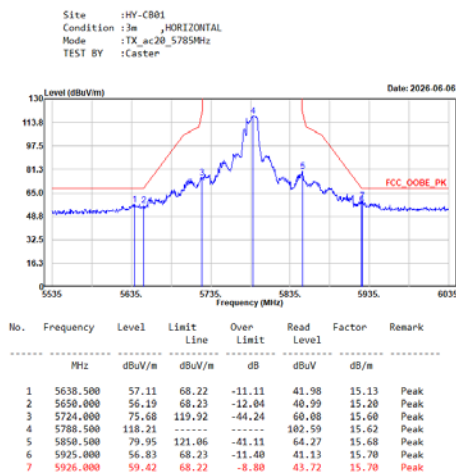


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_V_Peak

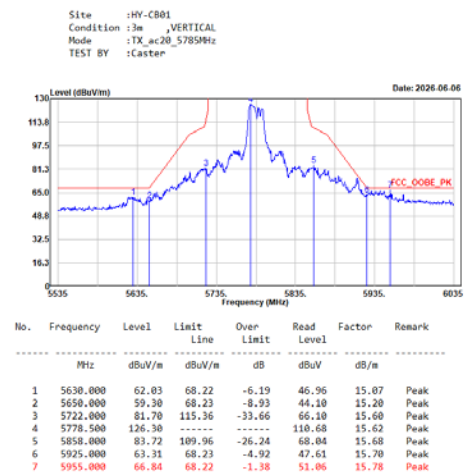


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_H_Peak

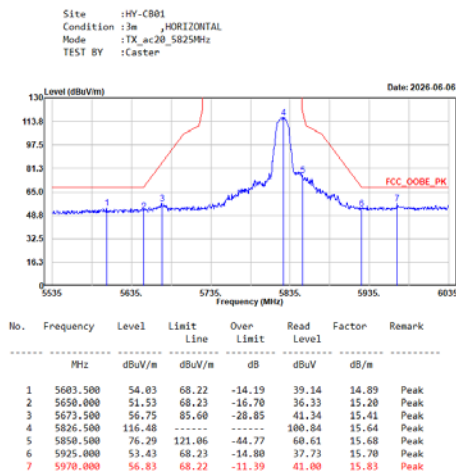


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_V_Peak

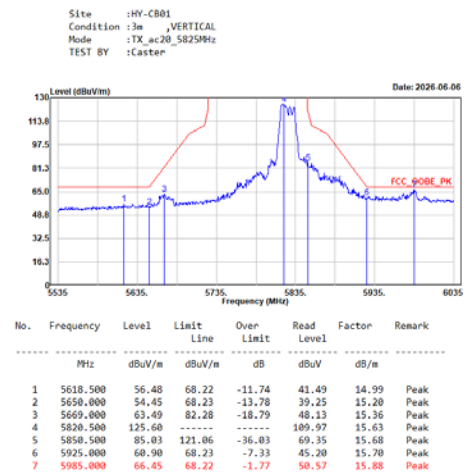


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H_Average

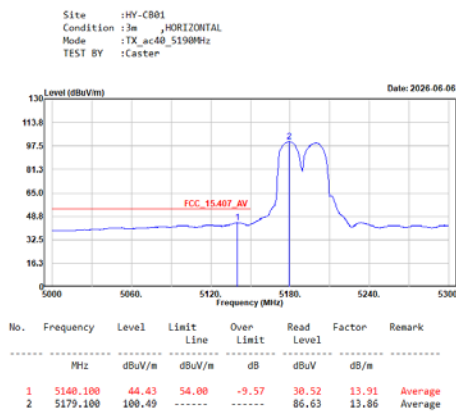

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5190MHz_H_Peak

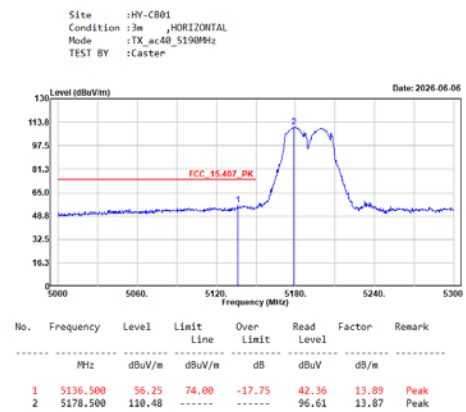

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V_Average

Site :HY-CB01
Condition :3m_Vertical
Mode :TX_ac40_5190MHz
TEST BY :Caster

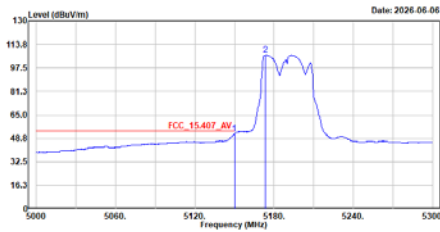


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	51.89	54.00	-2.11	37.96	13.93	Average
2	5173.400	106.55	-----	-----	92.66	13.89	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V_Peak

Site :HY-CB01
Condition :3m_Vertical
Mode :TX_ac40_5190MHz
TEST BY :Caster

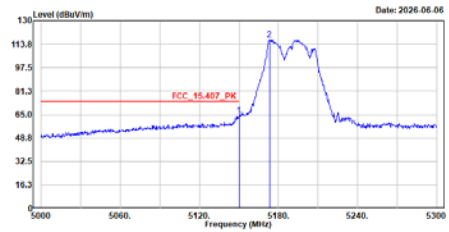


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	64.05	74.00	-9.95	50.12	13.93	Peak
2	5173.100	116.53	-----	-----	102.64	13.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band1_H_Average

Site :HY-CB01
Condition :3m_Horizontal
Mode :TX_ac40_5230MHz_Band1
TEST BY :Caster

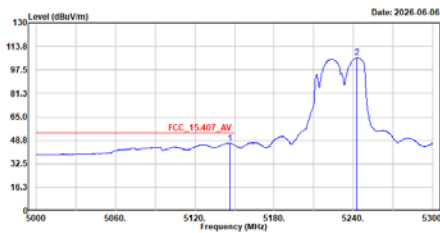


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5146.400	46.81	54.00	-7.19	32.89	13.92	Average
2	5242.400	105.85	-----	-----	91.98	13.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band1_H_Peak


Site :HY-CB01
Condition :3m_Horizontal
Mode :TX_ac40_5230MHz_Band1
TEST BY :Caster

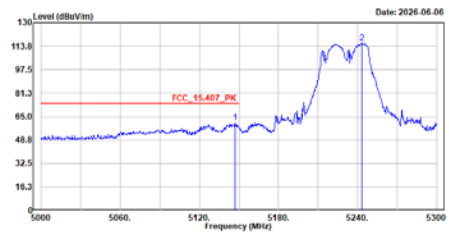

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.000	60.79	74.00	-13.21	46.87	13.92	Peak
2	5243.300	115.97	-----	-----	102.09	13.88	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band1_V_Average

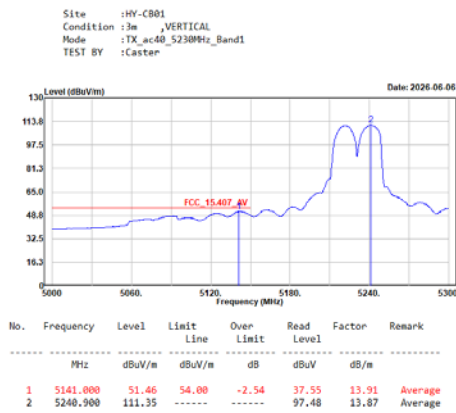


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band1_V_Peak

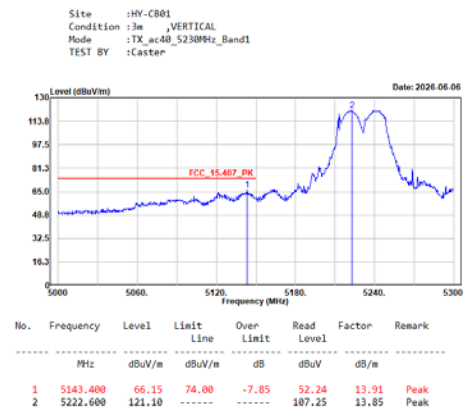


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band2_H_Average

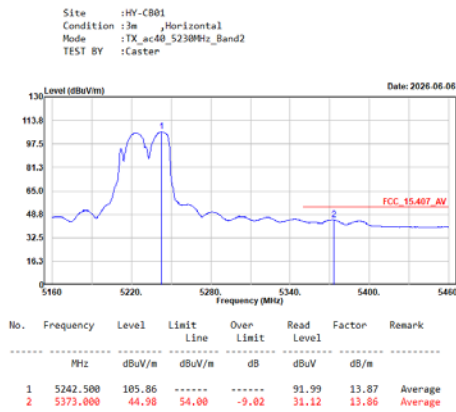


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band2_H_Peak

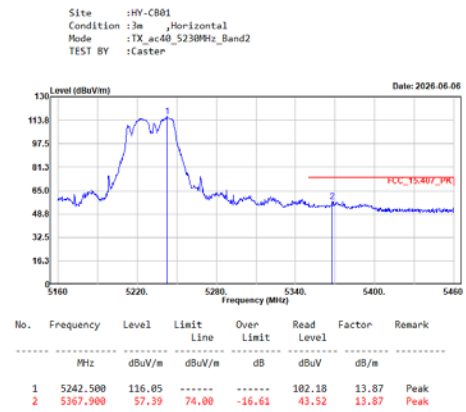


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band2_V_Average

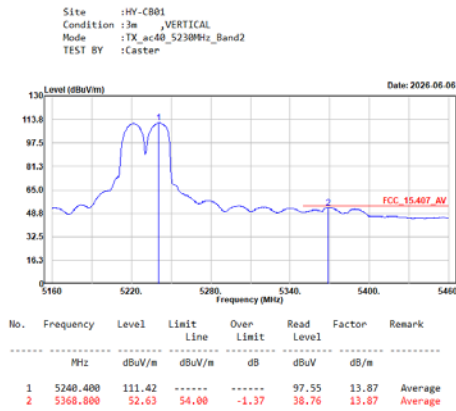


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_Band2_V_Peak

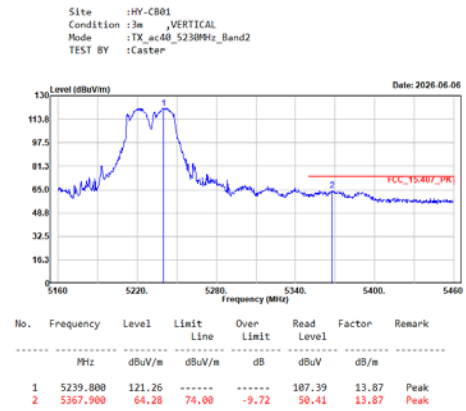


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_H_Peak

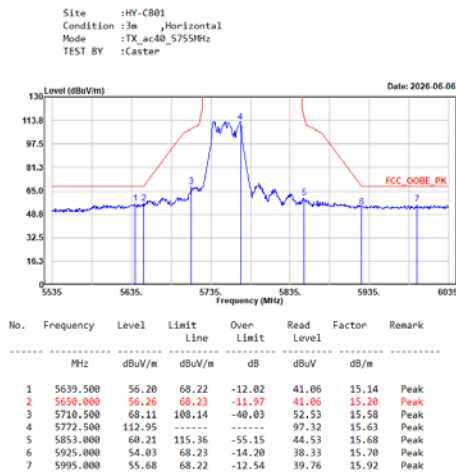


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_V_Peak

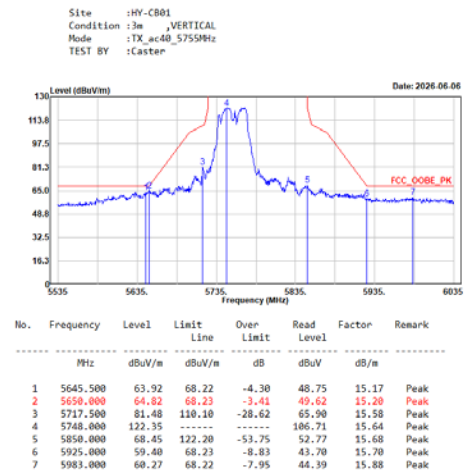


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_H_Peak

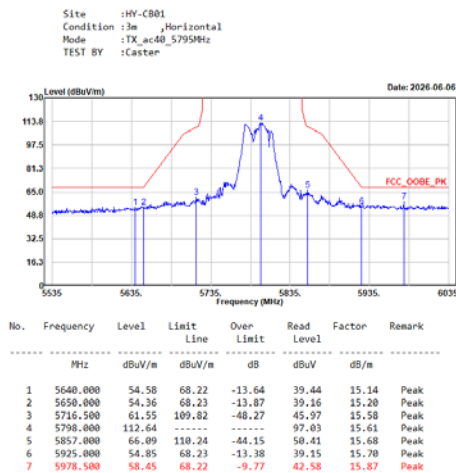


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_V_Peak

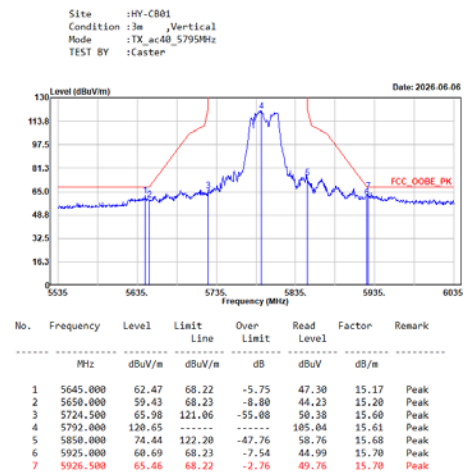


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Average

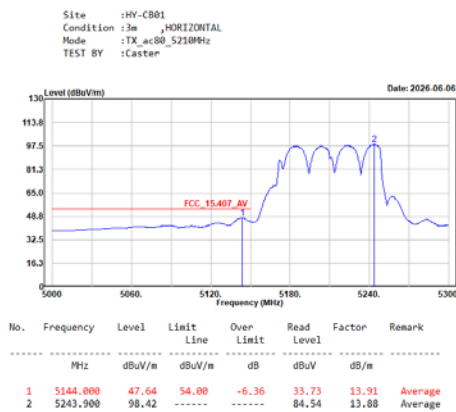

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5210MHz_H_Peak

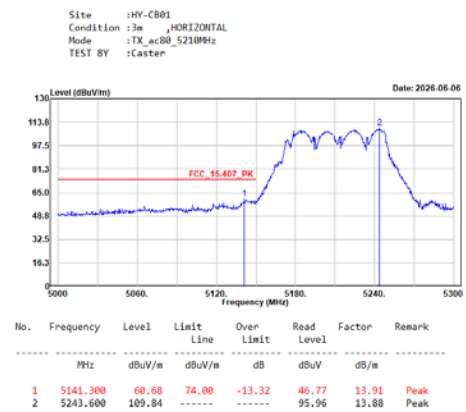

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Average

Site :HY-CB01
Condition :3m_VERTICAL
Mode :TX_ac80_5210MHz
TEST BY :Caster

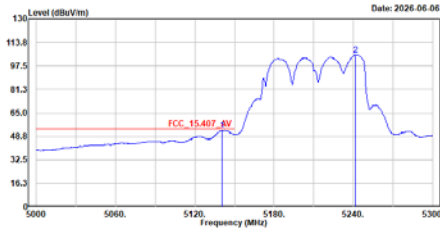


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5140.400	52.89	54.00	-1.11	38.98	13.91	Average
2	5241.800	105.09	-----	-----	91.22	13.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Peak

Site :HY-CB01
Condition :3m_VERTICAL
Mode :TX_ac80_5210MHz
TEST BY :Caster

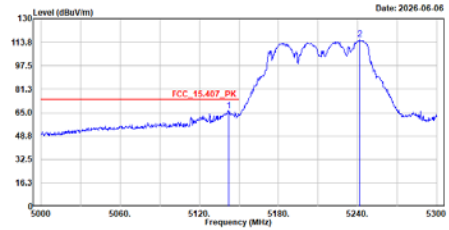


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5142.200	66.02	74.00	-7.98	52.11	13.91	Peak
2	5241.800	115.64	-----	-----	101.77	13.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H_Peak

Site :HY-CB01
Condition :3m_HORIZONTAL
Mode :TX_ac80_5775MHz
TEST BY :Caster

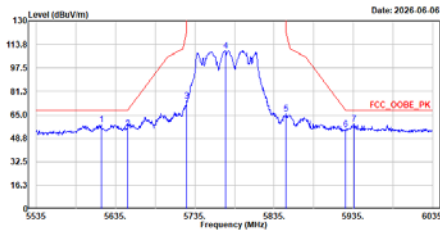


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5617.000	58.25	68.22	-9.97	43.27	14.98	Peak
2	5650.000	55.66	68.23	-12.57	40.46	15.20	Peak
3	5725.000	74.50	122.20	-47.70	58.90	15.60	Peak
4	5775.500	109.60	-----	-----	93.97	15.63	Peak
5	5850.000	65.72	122.20	-56.48	50.04	15.68	Peak
6	5925.000	55.13	68.23	-13.10	39.43	15.70	Peak
7	5935.500	58.83	68.22	-9.39	43.11	15.72	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V_Peak

Site :HY-CB01
Condition :3m_VERTICAL
Mode :TX_ac80_5775MHz
TEST BY :Caster

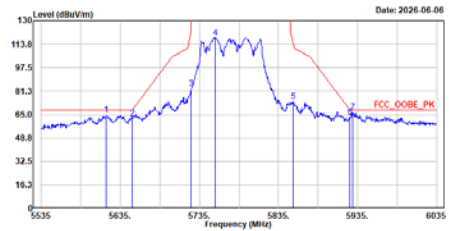


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5617.500	64.85	68.22	-3.37	49.87	14.98	Peak
2	5650.000	62.50	68.23	-5.73	47.30	15.20	Peak
3	5725.000	82.83	122.20	-39.37	67.23	15.60	Peak
4	5775.000	118.39	-----	-----	102.75	15.64	Peak
5	5853.500	74.14	114.22	-40.08	58.46	15.68	Peak
6	5925.000	63.05	68.23	-5.18	47.35	15.70	Peak
7	5928.500	66.58	68.22	-1.64	50.87	15.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Average

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5180MHz
TEST BY :Caster

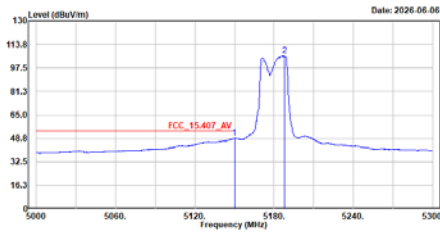


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	48.87	54.00	-5.13	34.94	13.93	Average
2	5187.000	105.91	-----	-----	92.06	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Peak

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_be20_5180MHz
TEST BY :Caster

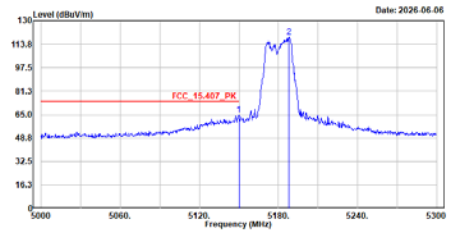


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	64.75	74.00	-9.25	50.82	13.93	Peak
2	5188.100	118.95	-----	-----	105.10	13.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5180MHz
TEST BY :Caster

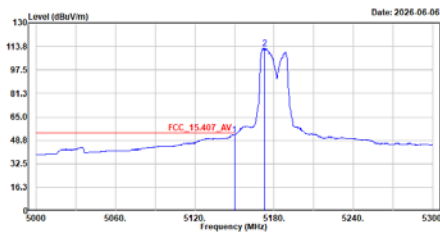


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	52.72	54.00	-1.28	38.79	13.93	Average
2	5172.000	112.41	-----	-----	98.52	13.89	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Peak


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5180MHz
TEST BY :Caster

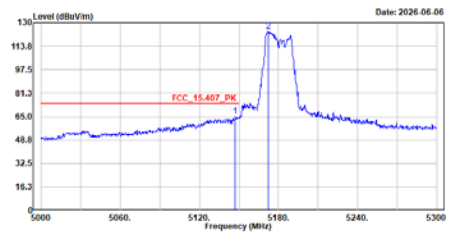

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.300	65.03	74.00	-8.97	51.11	13.92	Peak
2	5172.200	124.16	-----	-----	110.28	13.88	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_H_Average

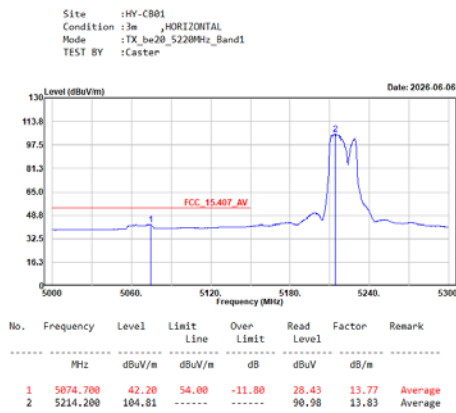


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_H_Peak

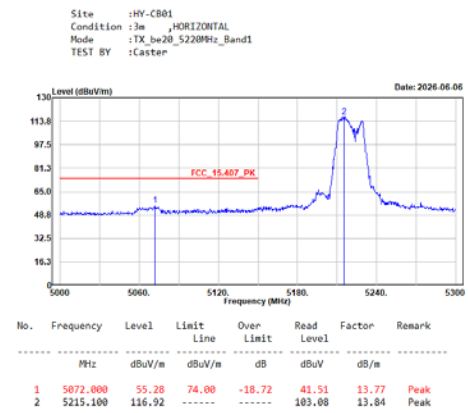


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_V_Average

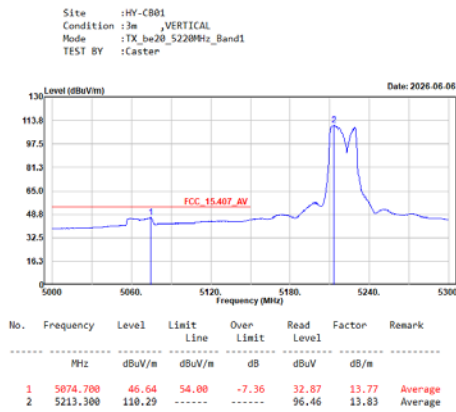


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5220MHz_Band1_V_Peak

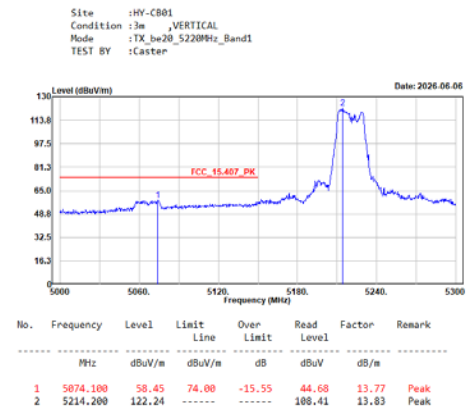

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be20_5220MHz_Band2_H_Average

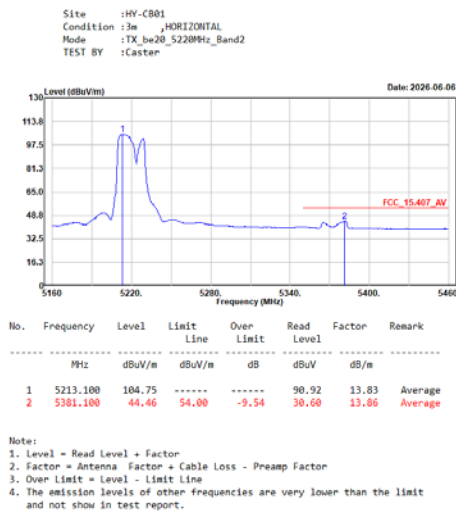


TX_be20_5220MHz_Band2_H_Peak



TX_be20_5220MHz_Band2_V_Average

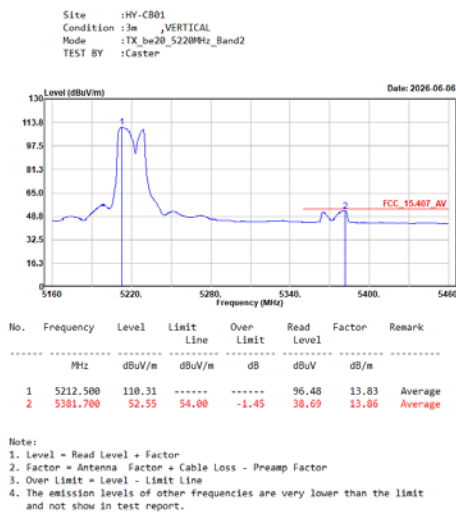


TX_be20_5220MHz_Band2_V_Peak

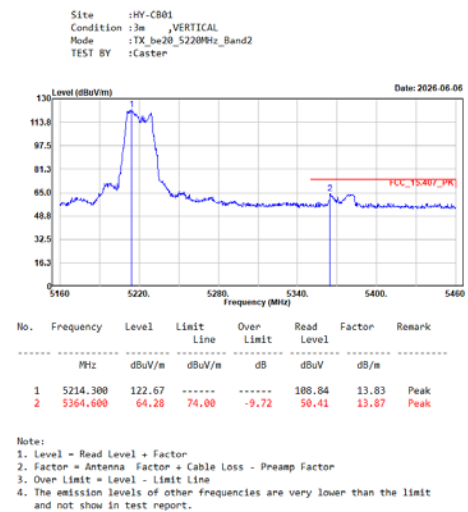

TX_be20_5240MHz_H_Average

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5240MHz
TEST BY :Caster

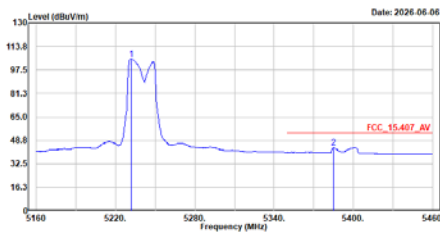


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5232.000	105.08	-----	-----	91.22	13.86	Average
2	5385.000	43.63	54.00	-10.37	29.78	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be20_5240MHz
TEST BY :Caster

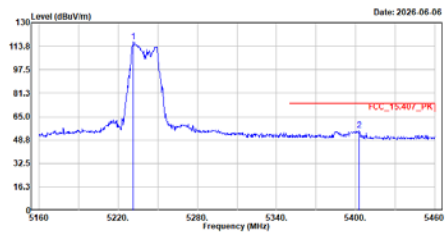


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5231.400	116.60	-----	-----	102.74	13.86	Peak
2	5402.700	55.37	74.00	-18.63	41.51	13.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5240MHz
TEST BY :Caster

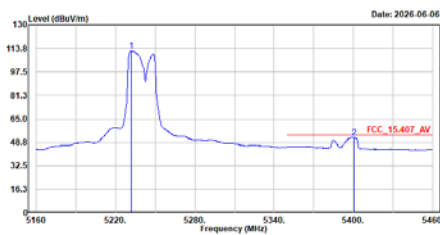


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5232.000	111.89	-----	-----	98.03	13.86	Average
2	5400.300	52.23	54.00	-1.77	38.38	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V_Peak


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be20_5240MHz
TEST BY :Caster

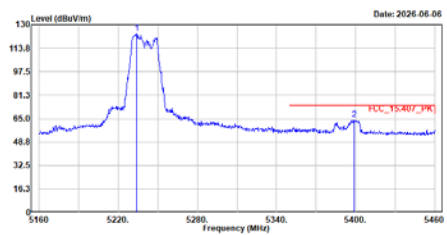

No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5233.800	123.94	-----	-----	110.07	13.87	Peak
2	5398.800	64.44	74.00	-9.56	50.60	13.84	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5745MHz_H_Peak

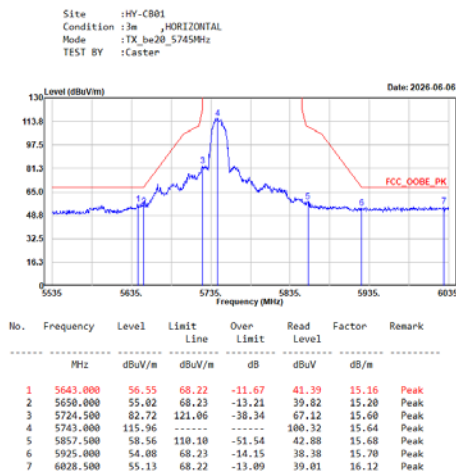


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5745MHz_V_Peak

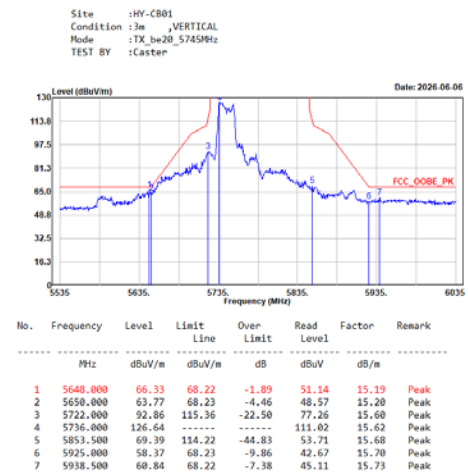


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5785MHz_H_Peak

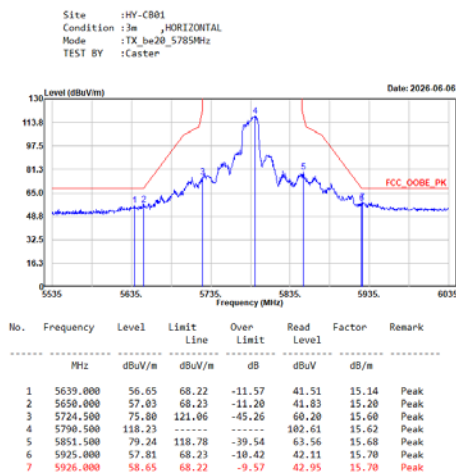


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5785MHz_V_Peak

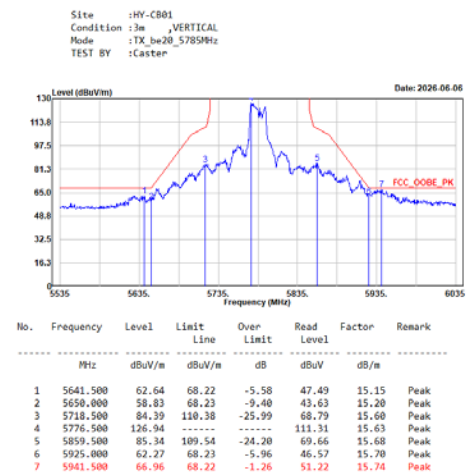


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_H_Peak

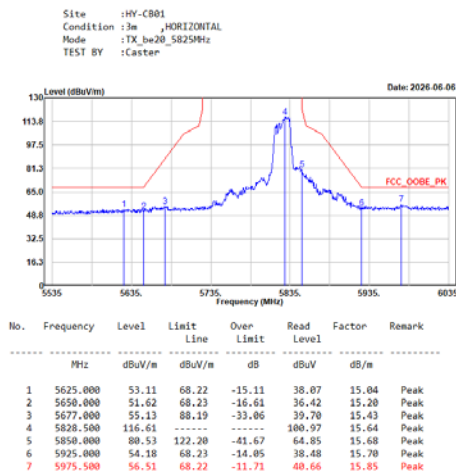


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_V_Peak

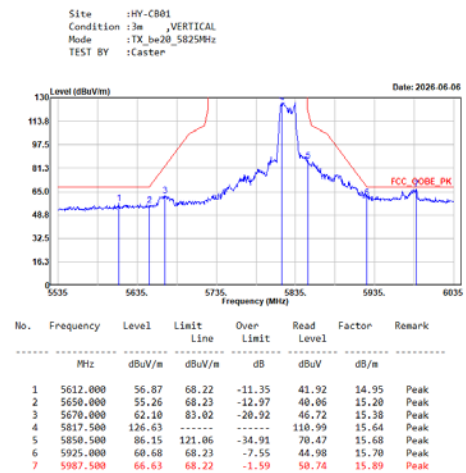


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_H_Average

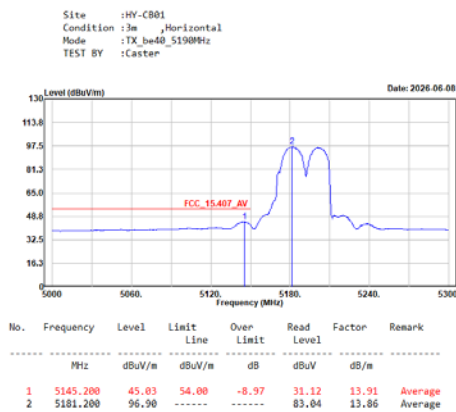

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.


TX_be40_5190MHz_H_Peak

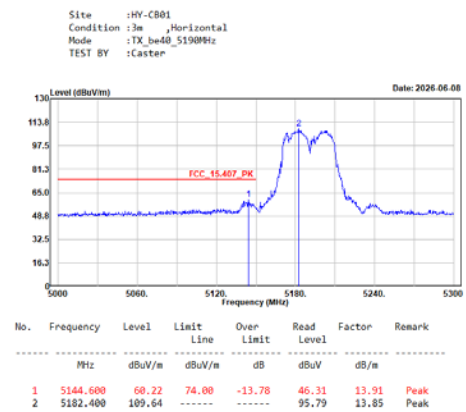

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V_Average

Site :HY-CB01
Condition :3m_VERTICAL
Mode :TX_be40_5190MHz
TEST BY :Caster

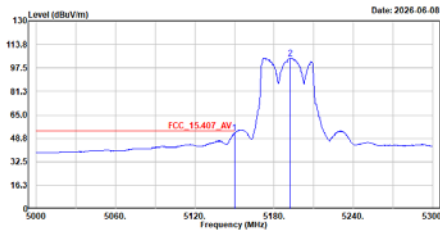


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5150.000	52.41	54.00	-1.59	38.48	13.93	Average
2	5192.000	104.15	-----	-----	90.32	13.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V_Peak

Site :HY-CB01
Condition :3m_VERTICAL
Mode :TX_be40_5190MHz
TEST BY :Caster

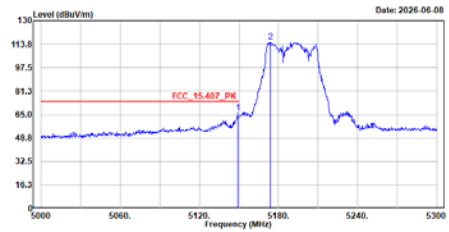


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5149.100	66.12	74.00	-7.88	52.19	13.93	Peak
2	5174.000	115.45	-----	-----	101.57	13.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band1_H_Average

Site :HY-CB01
Condition :3m_Horizontal
Mode :TX_be40_5230MHz_Band1
TEST BY :Caster

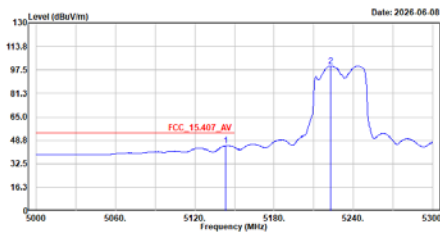


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5143.100	45.30	54.00	-8.70	31.39	13.91	Average
2	5222.900	100.30	-----	-----	86.45	13.85	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band1_H_Peak


Site :HY-CB01
Condition :3m_Horizontal
Mode :TX_be40_5230MHz_Band1
TEST BY :Caster

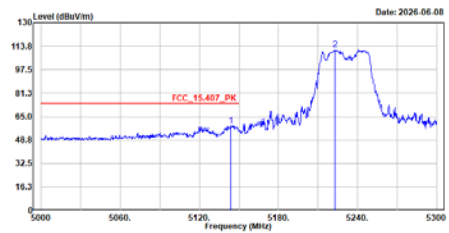

No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5144.000	58.99	74.00	-15.01	45.08	13.91	Peak
2	5222.600	111.27	-----	-----	97.42	13.85	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band1_V_Average

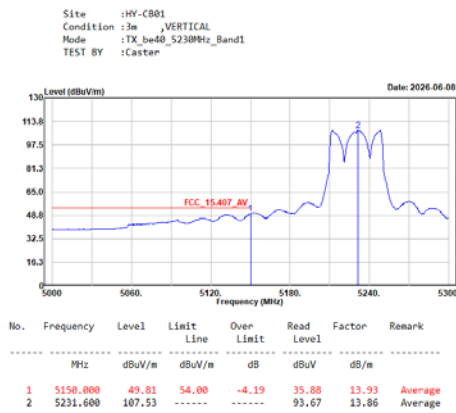


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band1_V_Peak

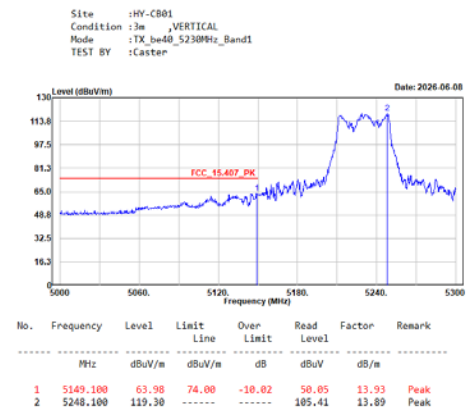


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band2_H_Average

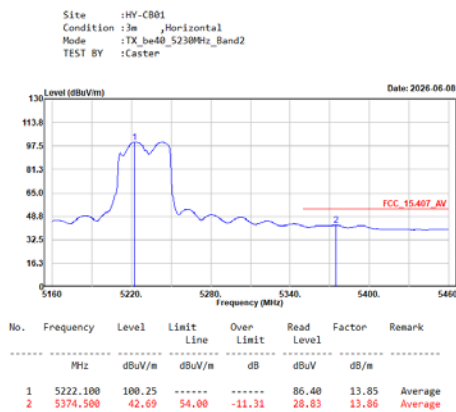


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5230MHz_Band2_H_Peak

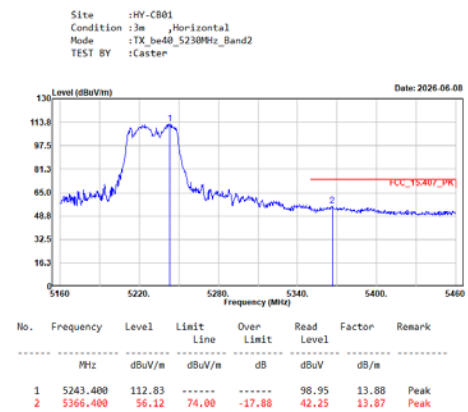

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be40_5230MHz_Band2_V_Average

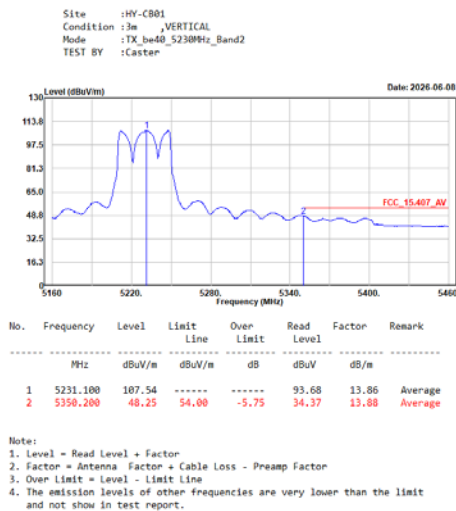


TX_be40_5230MHz_Band2_V_Peak




TX_be40_5755MHz_H_Peak

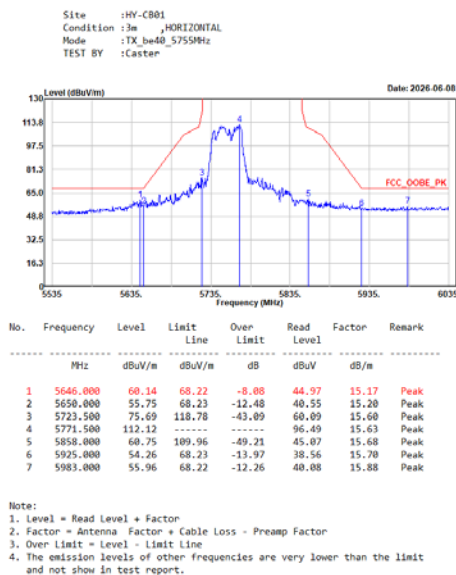

TX_be40_5755MHz_V_Peak

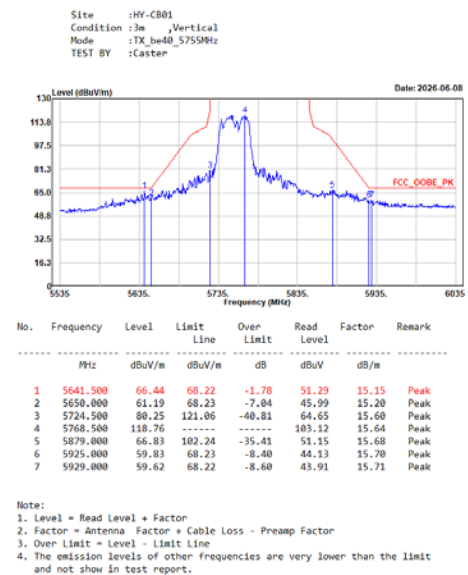


TX_be40_5795MHz_H_Peak

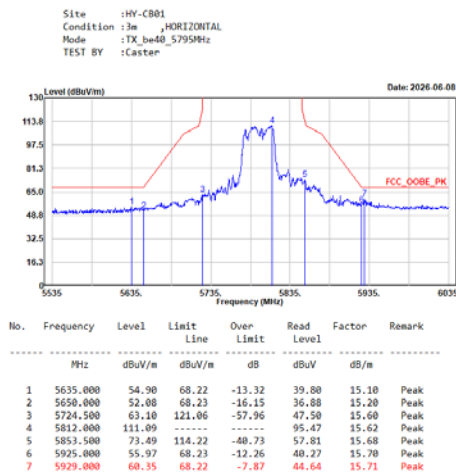


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5795MHz_V_Peak

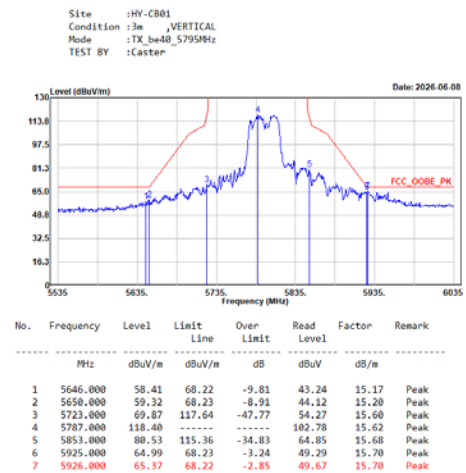


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H_Average

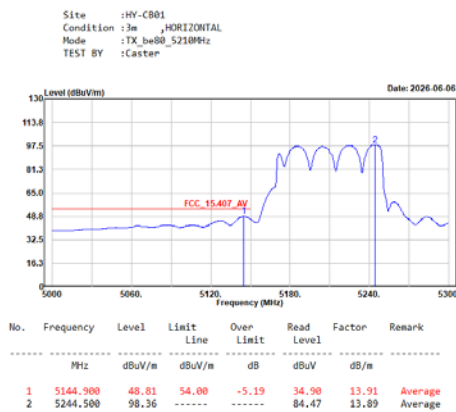

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.


TX_be80_5210MHz_H_Peak

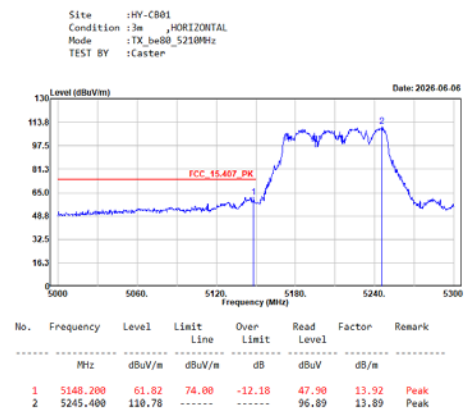

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The omission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Average

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5210MHz
TEST BY :Caster

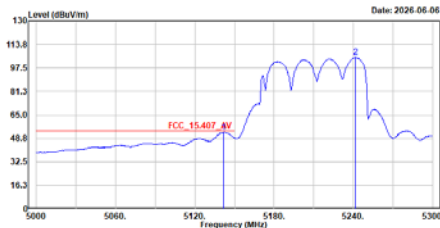


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5141.600	52.92	54.00	-1.08	39.01	13.91	Average
2	5241.800	104.81	-----	-----	90.94	13.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Peak

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5210MHz
TEST BY :Caster

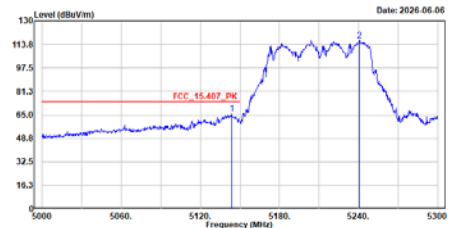


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.700	65.67	74.00	-8.33	51.76	13.91	Peak
2	5240.600	116.38	-----	-----	102.51	13.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H_Peak

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_be80_5775MHz
TEST BY :Caster

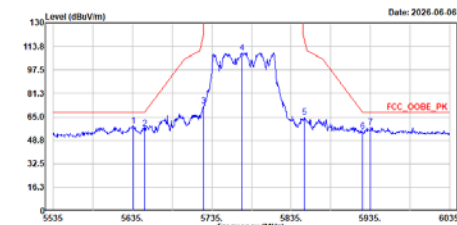


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5636.000	58.99	68.22	-9.23	43.89	15.10	Peak
2	5650.000	56.67	68.23	-11.56	41.47	15.20	Peak
3	5725.000	72.46	122.20	-49.74	56.86	15.60	Peak
4	5773.000	109.62	-----	-----	93.99	15.63	Peak
5	5851.500	64.76	118.78	-54.02	49.08	15.68	Peak
6	5925.000	54.77	68.23	-13.46	39.07	15.70	Peak
7	5935.000	57.81	68.22	-10.41	42.89	15.72	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_V_Peak


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_be80_5775MHz
TEST BY :Caster

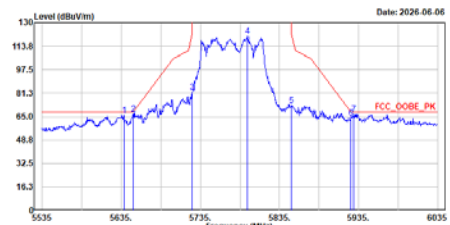





No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5638.500	65.56	68.22	-2.66	50.43	15.13	Peak
2	5650.000	66.74	68.23	-1.49	51.54	15.20	Peak
3	5725.000	81.86	122.20	-40.34	66.26	15.60	Peak
4	5794.000	120.57	-----	-----	104.96	15.61	Peak
5	5850.000	72.79	122.20	-49.41	57.11	15.68	Peak
6	5925.000	63.60	68.23	-4.63	47.90	15.70	Peak
7	5929.000	66.63	68.22	-1.59	50.92	15.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Worst-Case Emissions Above 18 GHz

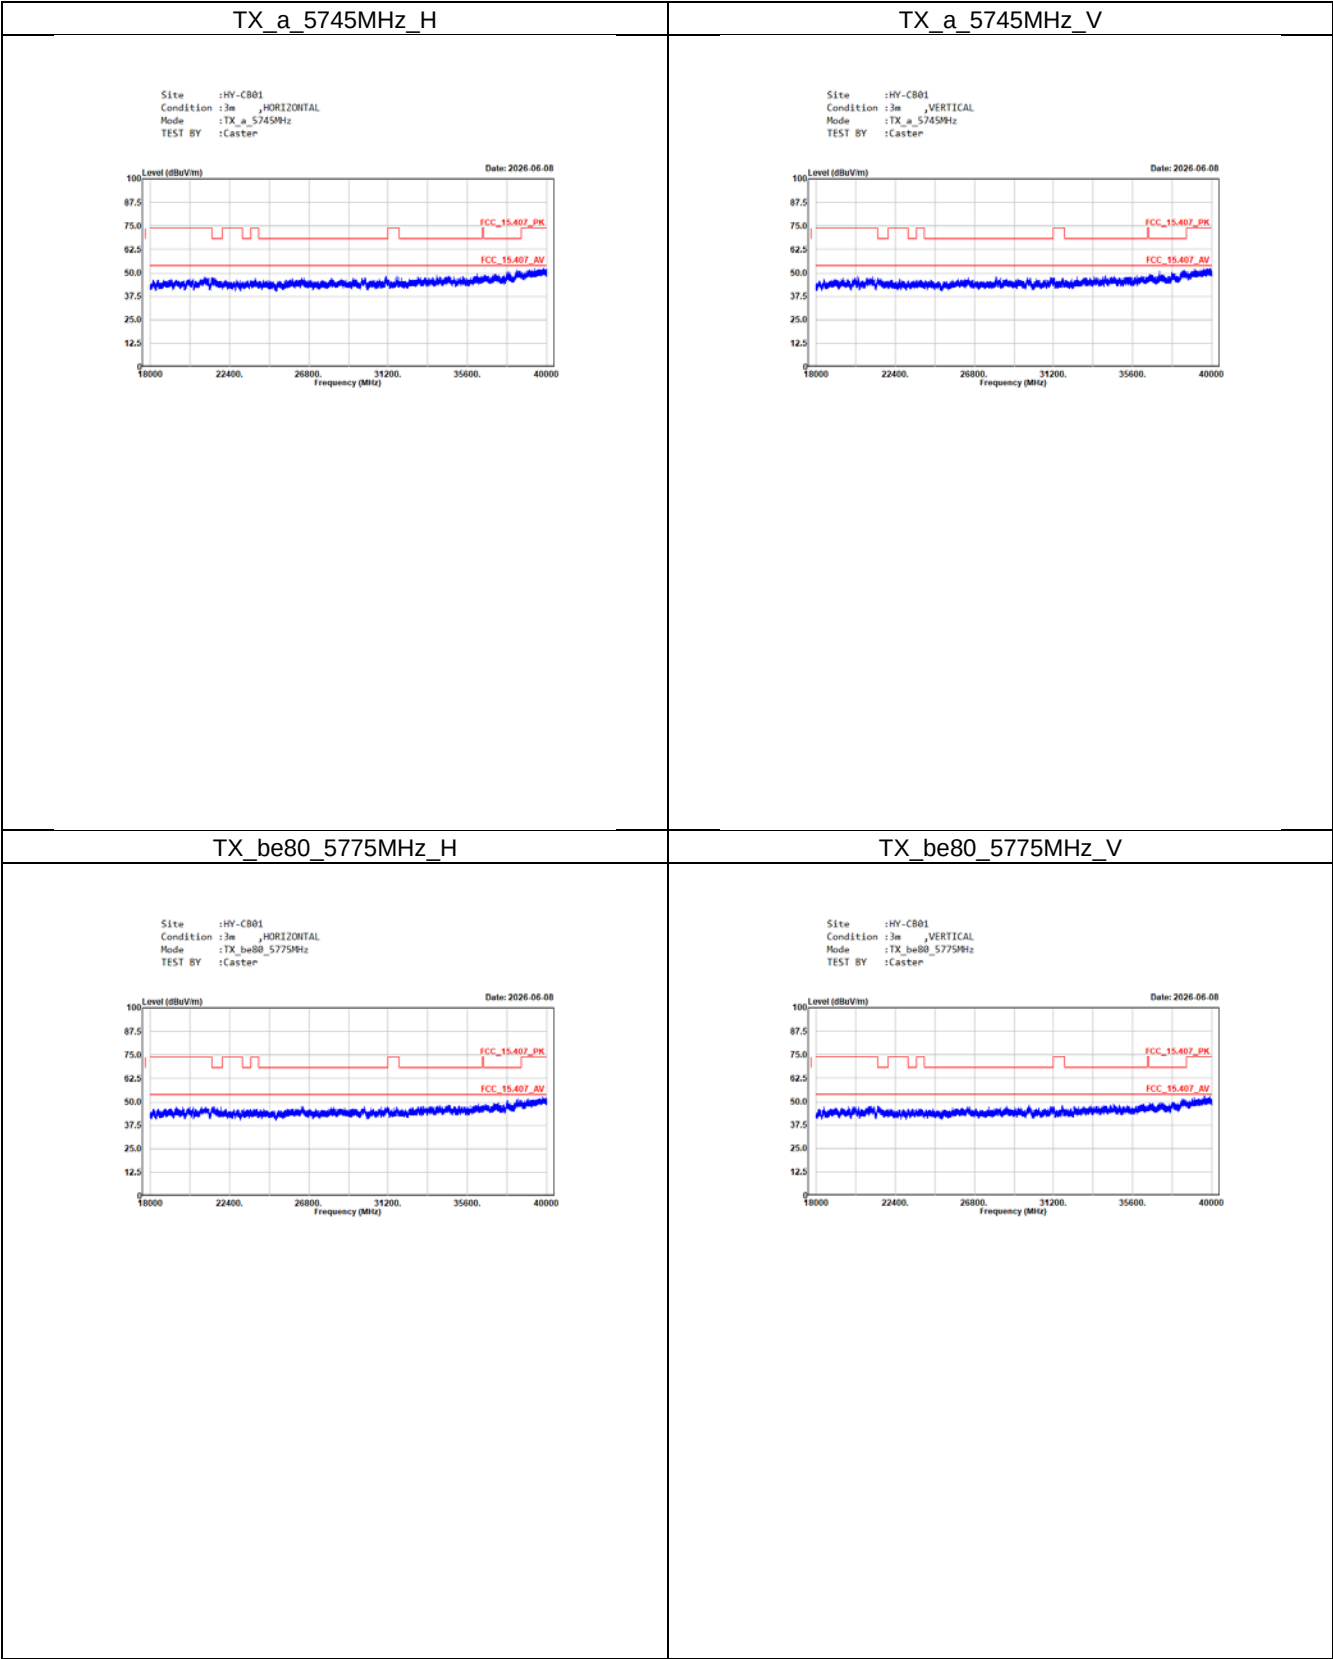


Co-location

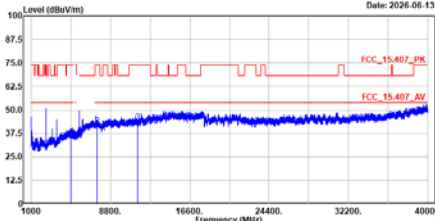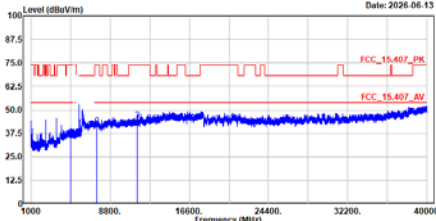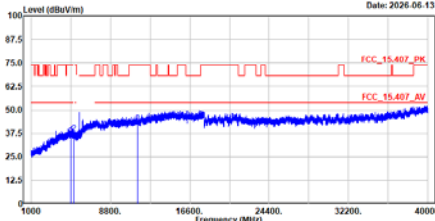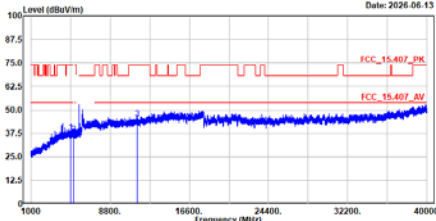TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000_H Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000 TEST BY :Caster Level (dBuV/m) Date: 2026.06.13  <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit</th><th>Over</th><th>Read</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>4874.000</td><td>35.49</td><td>74.00</td><td>-38.51</td><td>50.30</td><td>-14.81</td><td>Peak</td></tr><tr><td>2</td><td>7500.000</td><td>41.33</td><td>74.00</td><td>-32.67</td><td>52.88</td><td>-11.55</td><td>Peak</td></tr><tr><td>3</td><td>11490.000</td><td>43.58</td><td>74.00</td><td>-30.42</td><td>52.93</td><td>-9.35</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	No.	Frequency	Level	Limit	Over	Read	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	4874.000	35.49	74.00	-38.51	50.30	-14.81	Peak	2	7500.000	41.33	74.00	-32.67	52.88	-11.55	Peak	3	11490.000	43.58	74.00	-30.42	52.93	-9.35	Peak	TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000_V Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000 TEST BY :Caster Level (dBuV/m) Date: 2026.06.13  <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit</th><th>Over</th><th>Read</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>4874.000</td><td>35.44</td><td>74.00</td><td>-38.56</td><td>50.25</td><td>-14.81</td><td>Peak</td></tr><tr><td>2</td><td>7500.000</td><td>41.48</td><td>74.00</td><td>-32.52</td><td>53.03</td><td>-11.55</td><td>Peak</td></tr><tr><td>3</td><td>11490.000</td><td>44.62</td><td>74.00</td><td>-29.38</td><td>53.97</td><td>-9.35</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	No.	Frequency	Level	Limit	Over	Read	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	4874.000	35.44	74.00	-38.56	50.25	-14.81	Peak	2	7500.000	41.48	74.00	-32.52	53.03	-11.55	Peak	3	11490.000	44.62	74.00	-29.38	53.97	-9.35	Peak
No.	Frequency	Level	Limit	Over	Read	Factor	Remark																																																																										
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																											
1	4874.000	35.49	74.00	-38.51	50.30	-14.81	Peak																																																																										
2	7500.000	41.33	74.00	-32.67	52.88	-11.55	Peak																																																																										
3	11490.000	43.58	74.00	-30.42	52.93	-9.35	Peak																																																																										
No.	Frequency	Level	Limit	Over	Read	Factor	Remark																																																																										
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																											
1	4874.000	35.44	74.00	-38.56	50.25	-14.81	Peak																																																																										
2	7500.000	41.48	74.00	-32.52	53.03	-11.55	Peak																																																																										
3	11490.000	44.62	74.00	-29.38	53.97	-9.35	Peak																																																																										
TX_b_2437MHz+TX_a_5745MHz+LTE_B41_20M_1RB0_40620_H Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_b_2437MHz+TX_a_5745MHz+LTE_B41_20M_1RB0_40620 TEST BY :Caster Level (dBuV/m) Date: 2026.06.13  <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit</th><th>Over</th><th>Read</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>4874.000</td><td>36.53</td><td>74.00</td><td>-37.47</td><td>51.34</td><td>-14.81</td><td>Peak</td></tr><tr><td>2</td><td>5186.000</td><td>37.32</td><td>74.00</td><td>-36.68</td><td>537.32</td><td>-500.00</td><td>Peak</td></tr><tr><td>3</td><td>11490.000</td><td>42.73</td><td>74.00</td><td>-31.27</td><td>52.08</td><td>-9.35</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	No.	Frequency	Level	Limit	Over	Read	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	4874.000	36.53	74.00	-37.47	51.34	-14.81	Peak	2	5186.000	37.32	74.00	-36.68	537.32	-500.00	Peak	3	11490.000	42.73	74.00	-31.27	52.08	-9.35	Peak	TX_b_2437MHz+TX_a_5745MHz+LTE_B41_20M_1RB0_40620_V Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_b_2437MHz+TX_a_5745MHz+LTE_B41_20M_1RB0_40620 TEST BY :Caster Level (dBuV/m) Date: 2026.06.13  <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit</th><th>Over</th><th>Read</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>4874.000</td><td>38.28</td><td>74.00</td><td>-35.72</td><td>53.09</td><td>-14.81</td><td>Peak</td></tr><tr><td>2</td><td>5186.000</td><td>36.84</td><td>74.00</td><td>-37.16</td><td>51.56</td><td>-14.72</td><td>Peak</td></tr><tr><td>3</td><td>11490.000</td><td>45.45</td><td>74.00</td><td>-28.55</td><td>54.80</td><td>-9.35</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	No.	Frequency	Level	Limit	Over	Read	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	4874.000	38.28	74.00	-35.72	53.09	-14.81	Peak	2	5186.000	36.84	74.00	-37.16	51.56	-14.72	Peak	3	11490.000	45.45	74.00	-28.55	54.80	-9.35	Peak
No.	Frequency	Level	Limit	Over	Read	Factor	Remark																																																																										
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																											
1	4874.000	36.53	74.00	-37.47	51.34	-14.81	Peak																																																																										
2	5186.000	37.32	74.00	-36.68	537.32	-500.00	Peak																																																																										
3	11490.000	42.73	74.00	-31.27	52.08	-9.35	Peak																																																																										
No.	Frequency	Level	Limit	Over	Read	Factor	Remark																																																																										
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																											
1	4874.000	38.28	74.00	-35.72	53.09	-14.81	Peak																																																																										
2	5186.000	36.84	74.00	-37.16	51.56	-14.72	Peak																																																																										
3	11490.000	45.45	74.00	-28.55	54.80	-9.35	Peak																																																																										


TX_b_2437MHz+TX_a_5745MHz+WCDMA_B5_CH4182_H

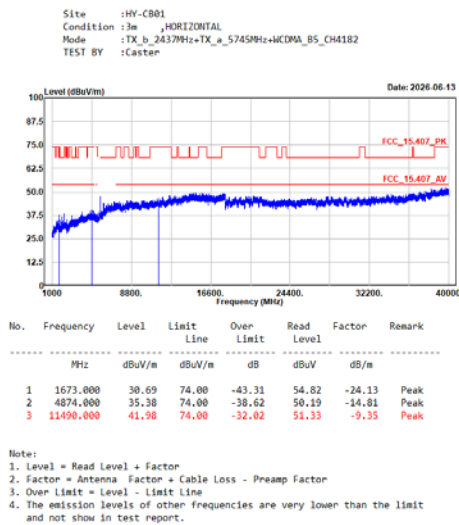


TX_b_2437MHz+TX_a_5745MHz+WCDMA_B5_CH4182_V

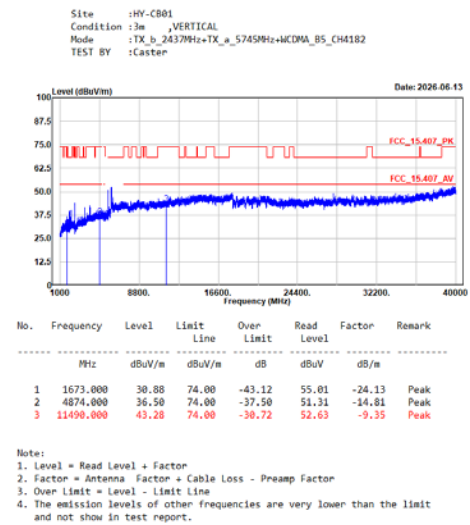

TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000_H

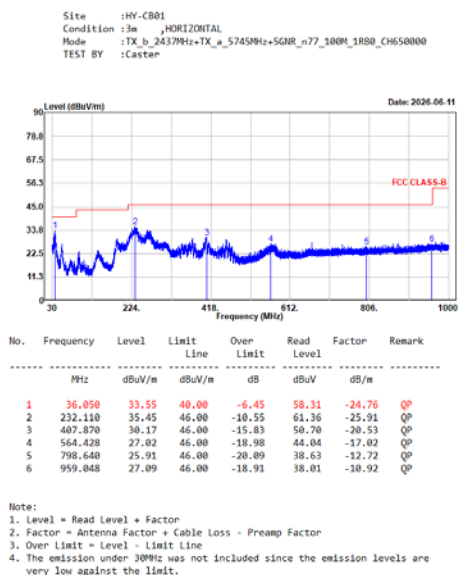

TX_b_2437MHz+TX_a_5745MHz+5GNR_n77_100M_1RB0_CH650000_V

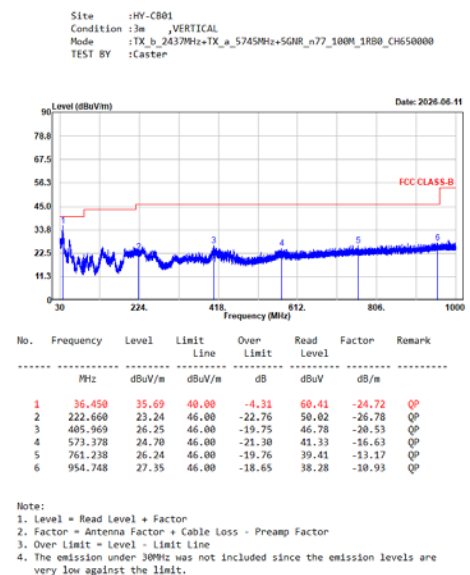

Page : 84 of 87