

A-S329

展开尺寸: 378*208mm

红色实线为折叠线不作印刷

工艺: 128g铜版纸


AROMA²⁴₇

ECO SCENT

Aroma Diffuser


PRODUCT MANUAL

FOR MODELS MAX/ULTRA

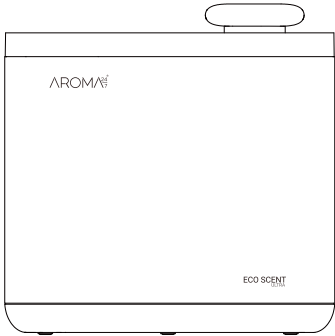

Specification

【	Model	】	ECOSCENT V.2 MAX	ECOSCENT V.2 ULTRA
【	Size	】	274*137*273.7mm	
【	Bottle	】	850ml	
【	Input	】	DC12V==2A	
【	Power	】	6.6W/11.2W	
【	Coverage	】	500m ² / 1500m ³ /16145ft ³	
【	N.W.	】	2.9kg/3kg	
【	Material	】	PP	

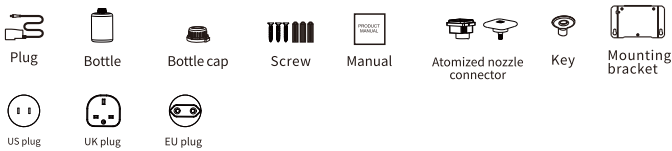

Usage of sealing tape:

- Before replacing atomizing core, wrap sealing tape around atomized core thread about 3-5 turns to avoid air leakage;
- Before connecting atomized connector, wrap sealing tape around atomized connector thread about 3-5 turns to avoid air leakage.

WARNING

Safety Instructions

To ensure safe use and prevent harm or property damage, please follow these safety precautions. Failure to comply with these warnings may result in accidents. This product is not designed for the following situations:

- Use by unattended infants, individuals with disabilities, or those with cognitive impairments.
- Use as a toy by young children.

Usage and Storage Instructions

- This aroma diffuser is designed for use with essential oils. Please read the manual carefully before use.
- This product is not suitable for individuals with weakened health (including children). Elderly, pregnant individuals, and those with physical, sensory, or intellectual impairments should consult a doctor before use. Those lacking experience or knowledge, especially children, must be supervised by a responsible person to ensure safe use. Otherwise, they should be prevented from accessing the device.
- The optimal operating temperature for the machine is 20-35°C, with a relative humidity of <85%. Diffusion performance may vary depending on environmental temperature and humidity.
- Store essential oils in a cool, dry place with the cap securely closed, away from direct sunlight. The recommended storage temperature is around 25°C.
- Dispose of the product and protective packaging materials in accordance with local regulations.

Prohibited Guidelines

- Keep away from fire sources.
- Do not ingest essential oil; seek medical attention if swallowed.
- Do not use for purposes other than space diffusion; do not apply fragrance essential oil directly to the skin.
- Avoid extreme temperatures (below -5°C or above 40°C).
- Use only the provided power adapter. Please do not use a fast charger with this product

Mandatory Guidelines

- Keep out of reach of children and pets to prevent accidental ingestion. Supervise children to ensure they do not play with the device.
- Do not modify, disassemble, or repair the machine unless you are a qualified technician. If a malfunction occurs, contact customer service from the original purchase channel.
- Stop using the device immediately if any abnormalities occur during or after use.
- Place the machine on a level surface and keep it upright after installation. Tilting or placing the device flat may cause oil leakage or malfunction.
- Wipe up any spilled essential oil immediately.
- Battery disposal: Wear gloves, place leaking batteries in a plastic bag, and dispose of them properly to avoid environmental contamination.

Potential Risks of Injury or Property Damage

- The following actions may cause electric shock, short circuits, or fire hazards:
 - Do not get the machine or charging port wet.
 - Do not use overloaded power outlets, damaged cords, or faulty plugs.
- When adding essential oil, avoid excessive pressure to prevent leakage and damage to machine components.
- Do not pull, crush, cut, or tamper with the power cord.
- To prevent malfunctions or damage, do not disassemble the machine during use.
- Before disposing of the device, remove the battery. Ensure the device is powered off before removal, and dispose of the battery safely. (Not applicable to non-battery models.)
- If the adapter, charging cable, or power cord is damaged, it must be replaced with a specialized component provided by the manufacturer or authorized service provider.
- Use only the specified low-voltage power supply as marked on the device.
- Only use the power adapter included with the product.
- Use only the recommended evaporation medium. Using other substances may pose toxic or fire risks.
- When installing the device, please avoid positioning it directly facing an air conditioner's air outlet or any ventilation opening against the wind; otherwise, oil mist may accumulate on the device's surface, affecting its normal operation and lifespan.

This product is intended for sale and application in a business environment.RED Article 10 (2)

-This product can be used across EU member states

RED Article 10 (10)

- The product is class 1 product, No restrictions
- The RF distance between body and product is 20cm
- Frequency Range: 2402-2480MHz 5150-5250MHz 5725-5850MHz Max.RF Output Power: -1.92 dBm (BT) -3.43 dBm (wifi)
- Operating Temperature: 20°C to 35°C


Concentration and consumption

Grade	work(s)	intervals(s)	Consumption(g/h)	
			ECOSCENT V.2 MAX	ECOSCENT V.2 ULTRA
G1	15s	300s	0.15	0.3
G2	15s	150s	0.26	0.48
G3	20s	120s	0.39	0.66
G4	20s	85s	0.52	1.02
G5	25s	80s	0.65	1.2
G6	30s	75s	0.76	1.43
G7	30s	60s	0.87	1.66
G8	30s	50s	0.98	1.89
G9	30s	40s	1.09	2.12
G10	30s	33s	1.2	2.35
G11	33s	30s	1.36	2.64
G12	40s	30s	1.52	2.93
G13	50s	30s	1.68	3.22
G14	60s	30s	1.84	3.51
G15	75s	30s	2	3.8
G16	80s	25s	2.1	3.98
G17	85s	20s	2.2	4.16
G18	120s	20s	2.3	4.34
G19	150s	15s	2.4	4.52
G20	300s	15s	2.5	4.7
Customized	5-500s	5-500s	—	—


Notice:1. Above date is base on test trial.

2. Consumption data is for reference only. Different fragrance may be coming with different consumption.

Installation Steps




- Unlock the machine with key ;
- Take out the diffuser head and the bottle;
- Twist off the bottle and fill it with essential oils;
- Tighten the diffuser head securely after inserting the seal gasket into place;
- Put it in the machine and screw the atomized connector;
- Set the machine working schedules and lock the machine with key.

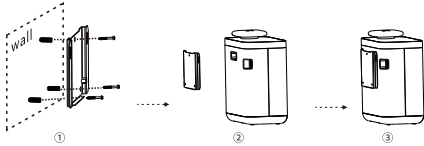

- Aim at the position of the mounting bracket, then drill the hole in the wall and insert the expansion bolts into the hole in the wall;
- Install the mounting bracket on the wall with screws, and finally hang the machine on the mounting bracket.

The method of using expansion bolts:



Drill the wall, insert the expansion tube into the hole, put the screw into the expansion tube and tighten it.

Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first following to below instructions.

Breakdown	Solution
Does not diffuse	-Check whether the mode you choose is correct or not. -Check if the machine is during "Non-Working period" -Air pump may be damaged, change to new one.
Weak diffuse	-The atomizing core is blocked, clean by alcohol or change a new component. -Check whether the gasket is damage/loose or not. -Check whether the tube is loose or not.
Oil leaking	-Check whether the bottle is loose or not -The gasket in the atomized head is damaged or loose.
Oil sprinkle	-The atomized head is damaged, change to new one -The machine is tilted or laying down, keep machine vertical.
Abnormal noise	-The air pump is loose, retighten the pump -The air pump is damaged, change to new one.

Equipment cleaning

The machine needs to be cleaned when below situations happen:

- You're about to change to another kind of essential oil.
- The atomization volume becomes weak .
- We recommend cleaning machine by diffusing isopropyl alcohol once a month.

Cleaning steps:


- Pull out the atomized head, loose the bottle.
- Find a larger container and fill the industrial alcohol up, then soak the atomized head and the bottle for 5-10mins.
- Airing the atomized head and the bottle.

Bluetooth instruction


Search AROMA 24/7 in Google Play or App Store

NOTE

- Please make sure the bluetooth function is turned on
- Please make sure the location of the mobile phone is turned on

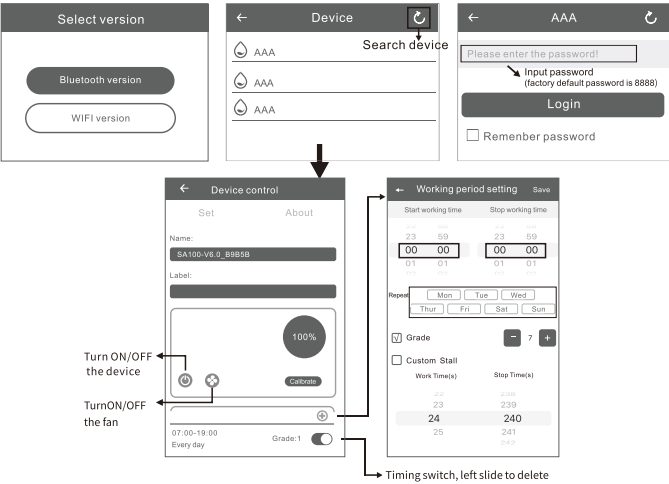


Amend password

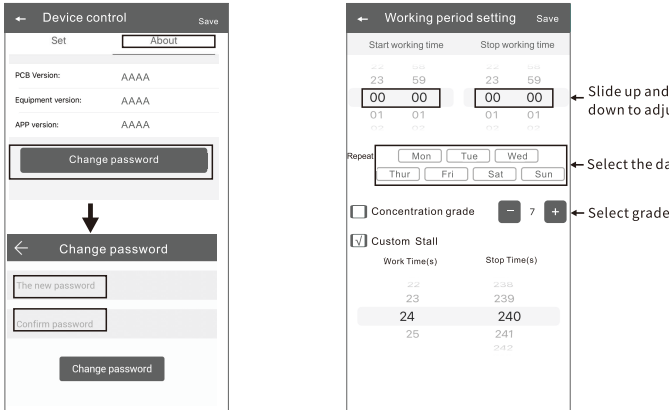

If you forget the password, please press the reset button to restore the factory setting.The factory settings password is 8888.

Wifi instruction

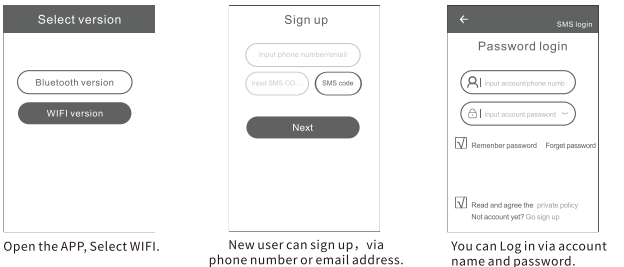

Forget password

Input phone number(email)

Input SMS CODE

SMS code

Next

Reset password

Input phone number(email)

Submit

If you forget the password, enter your mobile phone number or email address for verification.

You can reset the password.

Home

Total devices

0

Add device

Group list

Not grouped

Device

Add device

Please select the WIFI for device working

Enter WIFI password to connect

ChYingYF_2.4G

SA100-V6.0_78CB7

Next

Confirm

Home

Total devices

2

Add device

Group list

Not grouped

Users can click "+" in the upper right corner to create a new group.

Not grouped

Click the icon in the upper right corner to manage the current device.

Move device

Delete device

Cancel

Device control

Set

About

Name: SA100-V6.0_6985B

Label:

100%

Calibrate

07:00-19:00

Every day

Grade:1

Working period setting

Save

Start working time

Stop working time

00:00

00:00

00:00

00:00

00:00

00:00

Mon

Tue

Wed

Thur

Fri

Sat

Sun

Grade

Custom

Stall

Work Times(s)

Stop Times(s)

24

239

25

241

242

Calibrate the amount of essential oil

Timing switch, left slide to delete

Note:

1. When using this machine for the first time, turn on the power, place an empty bottle inside, and open the APP to perform the empty bottle calibration. After the empty bottle calibration is completed, you need to turn off the machine, fill the bottle with the desired amount of essential oil that will be used, and then place the bottle inside the machine.

2. After completing Step 1, continue to use the same type of essential oil and there is no need to perform the empty bottle calibration again.

3. If you need to replace with another type of essential oil, there is no need to perform a calibration with an empty bottle. However, you need to turn off the machine, then fill the bottle with another type of oil that occupies more than 50% of the capacity. Place the bottle inside the machine, then turn on the machine. Wait for 15-30 seconds. The machine will automatically complete the full-capacity calibration, and you can then use the other type of oil normally.

4. A successful Bluetooth connection will also trigger the full bottle calibration function. Therefore, if you encounter significant deviations in the liquid level display during normal use, you can reconnect the Bluetooth to perform a calibration. However, this function is not applicable for low liquid levels (below 30%).

LCD time setting

ON/OFF

Date

Local time

Fan icon

Diffusing display

Current grade

Power on/off

Connect power supply, power on with a sound "beep", and the screen displays initial time and current grade. The screen will be off when disconnect the power.

Fan on/off

Touch ▲ button (3s) to turn on fan, touch ▼ button (3s) to turn off fan.

Auto-lock and un-lock

Button will be locked automatically if there is no any further manual manipulation in 60s; Touch SET (about 3s) comes out with sound "beep" and screen lights on to unlock machine.

Local time setting

Touch SET button (about 3s) till a sound "beep" comes out for day setting; touch▲or▼to adjust the day; touch ENT button for local time setting, touch▲or▼to adjust the time (Figure 1)

Concentration grade setting

There are 20 grades available. Touch▲to increase grade, touch ▼to decrease grade(Figure 2).

Indicator Light Explanation

Power indicator light: Always on when powered on

Red and blue dual-color Wi-Fi indicator light

1. After the power is turned on, the blue light will remain on for 3 seconds. If it is in the smart mode, it will remain on; otherwise, it will go off.

2. Waiting for network connection: The red and blue lights will alternate flashing.

3. Network connection successful or Bluetooth connection established: The blue light will flash.

4. During network configuration, network disconnection, or network connection failure, the red light will remain on for 60 seconds. If it is in the smart mode, the blue light will remain on; otherwise, it will go off.

Note: Long press the ▼ /▲ buttons without releasing to accelerate the adjustment operation.

Work time period setting

There are 5 working periods available to be set every day (Figure 3).

Touch SET button to set working period (ON1), touch ▲or▼ to choose working period (1-5); touch ENT button for the working period switch, touch ▲or▼ to choose ON or OFF, touch ENT button again to move to the operation time, touch ▲or▼to adjust number.

Touch ENT again for grade. Next touch ENT to choose the day (MON), touch ▲ button to turn on the working period (ON1) (Figure4), touch ▼ button to turn off the working period (OFF1) (Figure5).

Touch ENT to move to the next day and repeat the steps for TUES to SUN.

Once finish, touch SET to confirm and exit, Repeat the same setting steps of ON1 for ON2, ON3 ON4 and ON5.

PS:Grade display with "-Cu-" is for customized grade set by APP only(Figure6).

Machine doesn't work when the start working period is as same as stop working time

Available working period	00:00 00:00	00:00 00:00	00:00 00:00	00:00 00:00	00:00 00:00
Mon	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Tues	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Wed	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Thur	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Fri	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sat	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sun	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF

(PS: The first working period is factory defaults with start working time 07:00 and stop working time 19:00, Grade1, the rest are all with 00:00.)

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Not applicable

RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Statement

English:This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

l'appareil numérique du ciem conforme canadien peut- 3 (b) / nmb-3 (b).

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.3 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

SAVE THESE INSTRUCTIONS