

T-93

AI Smart Audio Glasses

User Manual




QR Code for APP Downloaddownload

Made in China


Volume Increase / Decrease

Triple-tap the left touch button on the glasses to decrease
Triple-tap the right touch button on the glasses to increase

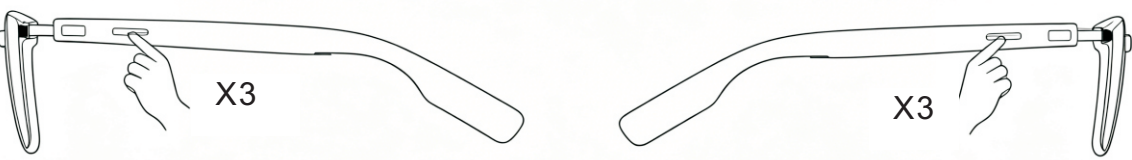

AI Translation / QA

Long press touch control to speak; release to auto translate.

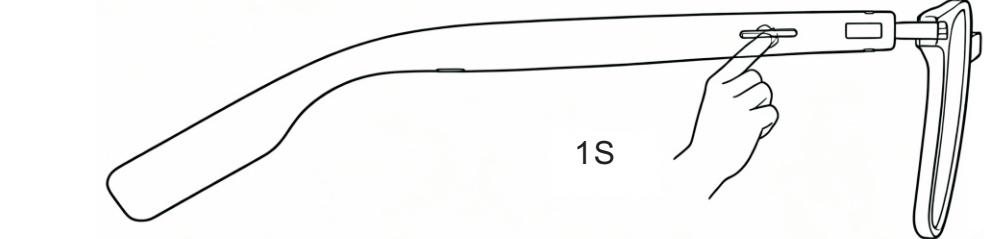

Packing List

Smart Audio Glasses ×1;Eyeglass Case ×1;
Lens Cleaning Cloth ×1;USB Charging Cable ×1;
Audio Guide Sleeve ×1;User Manual ×1;
Retail Gift Box ×1


Thank you for choosing our product. Please check whether the packaging of the product you purchased is intact. If there is any packaging damage or any missing accessories, please contact your dealer as soon as possible.

Product Specifications

Item:Parameter
Product Name:AI Smart Audio Glasses
Bluetooth Name:T-93
Music Play Time:3-5 hours
Talk Time:3 -4 hours
Charging Time:About 1 hour
Charging Input:DC 5V / 440mA
Battery:3.8V, 85mAh X2
Transmission Distance:>10m
Operating Temperature:0°C~40°C
Storage Temperature:- 10°C~50°C


Charging

Red light: Charging
Green light for 30s: Fully charged then off

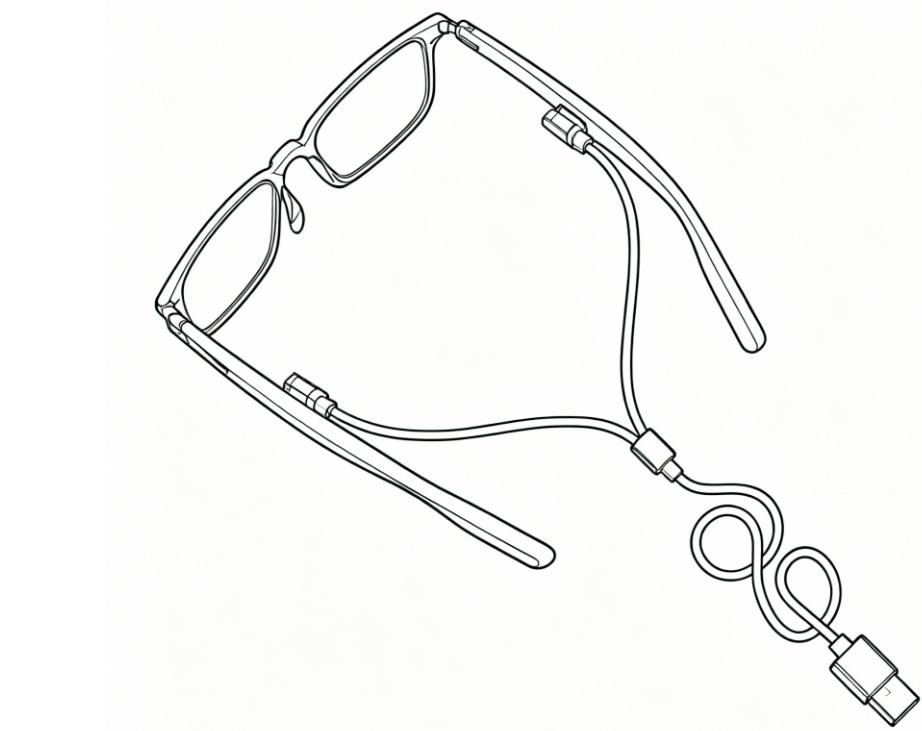


Factory Reset

Not connected: Triple tap + long press 8s to clear all pairings.
Connected to AiNex: Long press 1s until beep.

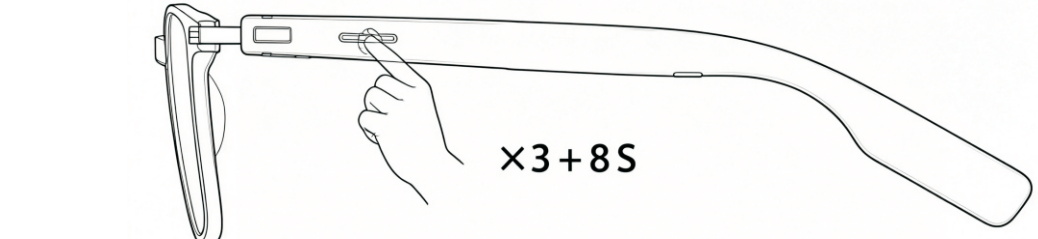


Product Structure Diagram

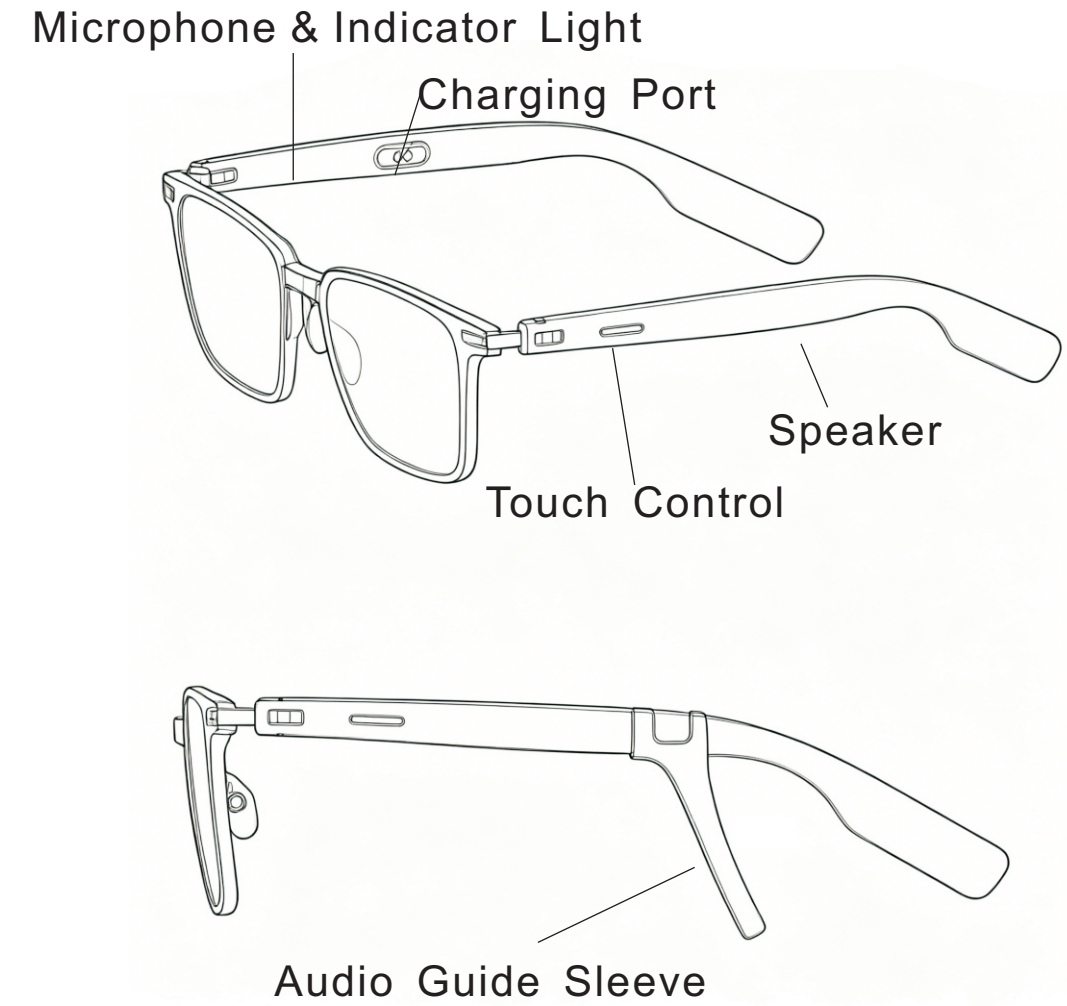

Power On/Off

Power on: Open the glasses
Power off: Fold the glasses
Auto power off: No Bluetooth connection within 3 minutes

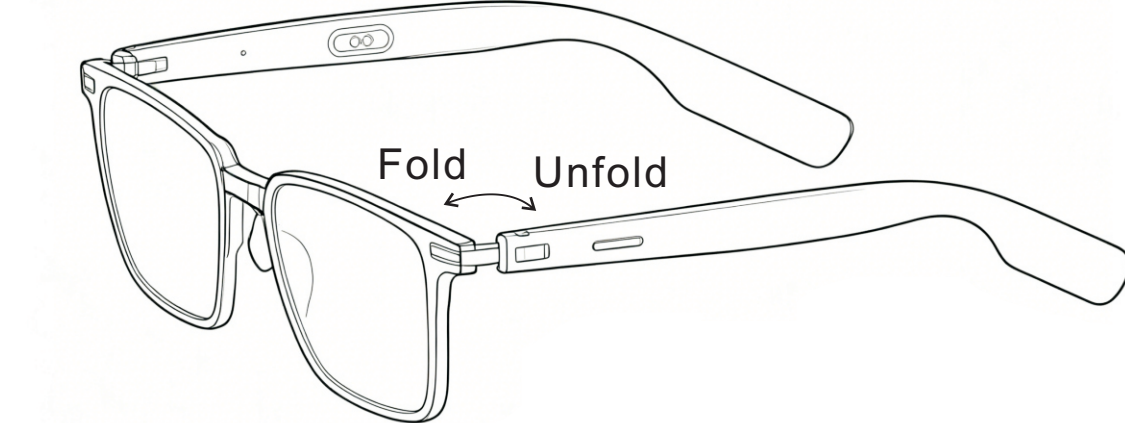

Install software

- Download the 'AiNex Smart Terminal Software,' scan the QR code to download and install it.
(1)On Android, just tap to trigger.
(2) On iOS, after scanning the QR code, use the default browser.
- Registration and Login
Open 'AiNex' and log in using your mobile phone number.
- Bind connected device
(1) Open 'AiNex' on your phone, make sure the phone's Bluetooth is turned on, and then turn on the glasses.
(2) In the app, select T-93 and follow the prompts to complete the pairing operation.




Important Notes

- Dialogue mode: After activating Dialogue Mode, a beep prompt will sound to confirm mode entry.
- Memo Mode: Enable Memo Mode inside the AiNex APP → tap Settings at top-right corner → select Sync with Phone Calendar; your schedule data will automatically sync to your mobile system calendar.
- To switch paired eyewear, unbind the original glasses via AiNex APP in advance; ensure your mobile phone has stable internet access.
- The glasses will auto power off when folded or plugged into charging. After full charge, unfold the frames to enable automatic reconnection to previously paired devices.
- Simultaneous Interpretation applies to real-time listening & translation; Dialogue Translation is designed for face-to-face instant communication across different languages.
- If any malfunction or abnormal situation occurs, follow these steps: Close all background processes of AiNex, then restart the APP. If the indicator lamp of glasses stays off with no flash: the product is likely drained; connect to charger and power on after short charging.


Left & Right Temples Pairing

Double tap left and right touch controls at the same time when not connected.

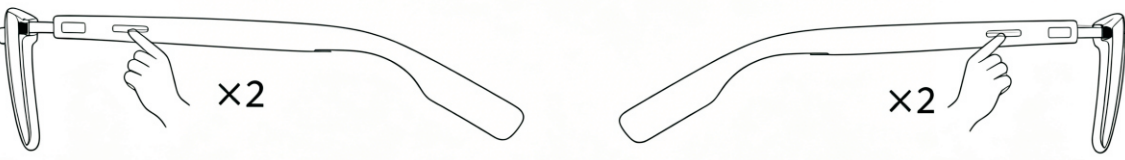


Play / Pause

Double-tap the left / right touch button on the glasses.

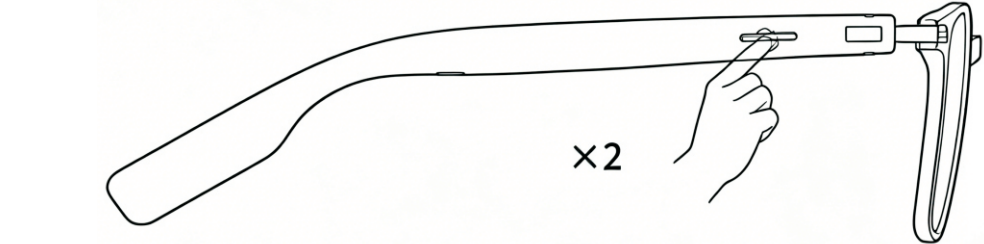


Answer / Hang up the phone

Double-tap the left / right touch button on the glasses

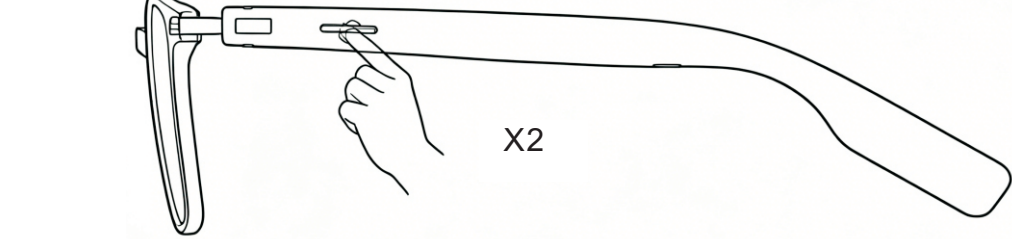

Reject the call

Press and hold the left / right touch button on the glasses for 2 seconds

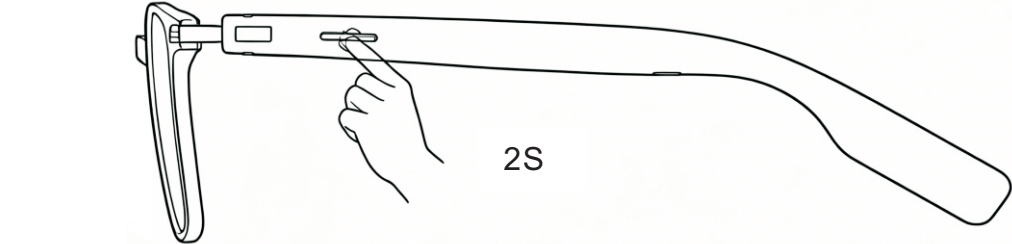

Battery Safety Instructions

- Mismatched unauthorized battery replacement risks fire, explosion or safety circuit breakdown.
- Burning, piercing, crushing or cutting the battery pack will trigger explosion.
- Extreme high temperature leads to battery explosion or flammable liquid/gas leakage.
- Extremely low air pressure causes battery explosion or flammable liquid/gas leakage.
- Built-in non-replaceable Li-ion battery; keep away from kids to prevent accidental swallowing.
- Do not discard product & built-in battery with household trash; follow local e-waste & battery recycling rules.
- Never disassemble the built-in inner battery.

Warranty Instructions

This product has a 1-year limited warranty for the main frame and internal electronics, effective from original purchase date, covering factory material and craftsmanship defects.
Exclusion: Prescription (myopia/hyperopia) lenses are unwarrantable.
Non-Warranty Items (Repairs Chargeable)
1.Daily cosmetic wear, paint fade & aging
2.Damage/malfunction from unauthorized disassembly, self-repair or improper storage
3.Damage caused by natural disasters and other force majeure
4.Mismatched serial numbers on invoice, warranty card and device
5.Damaged product certificate or tamper stickers
6.Missing/unfilled/unstamped invoice or warranty card
*Warranty terms comply with consumer protection laws of the sales region.

WARRANTY CARD

(Customer's Copy; No replacement available if this card is lost)
Name of Customer: _____

Address: _____

Contact Phone: _____

Model No.: _____

Serial No.(SN): _____

Purchase Date: _____

Invoice No.: _____

Authorized Dealer Name & Official Stamp: _____ (Seal)