

Wake-up Command	Massage Elf
After the massage chair accepts the command, issue the following functional commands to the remote control	
Turn on massage (start the massage chair)	
Turn off massage (enter standby)	
Turn on air pressure	Increase air pressure
Turn off air pressure	Decrease air pressure
Turn on heating	
Turn off heating	Increase strength
Turn on foot massage	Decrease strength
Turn off foot massage	Turn on zero gravity
Raise the backrest	Turn off zero gravity
Lower the backrest	Change massage technique
Stop the backrest	Change mode

In Mandarin, call the massage assistant, turn on the massage function, and enable zero-gravity mode. Open the phone's Bluetooth, search for "AMY-888", use the connection password "8888", and click to connect.

Massage Chair

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Thank you for choosing our massage chair.

Please read this manual carefully before use and pay special attention to safety precautions to ensure proper operation of the chair and prolong its service life. Keep this manual safe as it includes the warranty card and to refer to for any future inquiries.

Catalogue

- I. Product information
- II. Parts diagram
- III. Set up
- IV. Maintenance
- V. Health & Safety
- VI. Chair- Safety & Protection
- VII. Useful Tips
- VIII. Technical Specification
- IX. Circuit Diagram
- X. Hazardous Products
- XI. Warranty Instructions
- XII. Warranty/ Guarantee Card
- XIII. Trouble-shooting Common Faults

XIII. Trouble-shooting Common Faults

<u>Fault</u>	<u>Reason for fault</u>	<u>Resolution</u>
Sound (working sound) *Inflatable sound of airbags *Decompression sound of airbags *changing-over sound on solenoid valve	*The sound produced by the chair when in use. *Sound of mechanical operation	This sound is normal so no need to deal with it
The entire chair is not functioning	*The power plug is not inserted into the socket. *Socket switch not on *The massage button is not pressed	Check the power plug is in good contact with the socket. Then press the power button
The massage suddenly stops when in use during the program	This product has just completed 15 minutes of rated working time and will automatically switch to standby mode. Overheating protection for motors exceeding rated service time	To continue with a massage, press the power key on the touch screen panel. This will restart the massage program. Turn off, Cut the power, use the unit again after the motor is cool down

- *The company reserves the right to improve products and instructions. If alteration is made without notice, the appearance of the product shall be in accordance with material object.
- *This volume has been carefully checked, but it does not exclude the possibility of misprints or misunderstandings in the content.

Certificate of Compliance

Name: _____ Model No.: _____

Inspection No.: _____ Production Date: _____

XII. Warranty Card

Warranty Card

With this card you are eligible for
two years warranty.

Buyer ID: _____
Order No.: _____
Product Name: _____
Model No.: _____
Store: _____
Date: _____
User name: _____
Telephone: _____
Address: _____

Warranty Card

With this card you are eligible for
two years warranty.

Buyer ID: _____
Order No.: _____
Product Name: _____
Model No.: _____
Store: _____
Date: _____
User name: _____
Telephone: _____
Address: _____

Maintenance record:

Date	Fault Condition	Address	Result

I. Product Information

- The overall lines are elegant, the colors are vivid, the design is humanized, and the material is green and environmentally friendly.
 - Airbag massage-key switch, can manually adjust the arm, leg airbag massage, massage strength to achieve three-gear adjustment.
 - The backrest can be adjusted to the desired tilt angle 115°~155° free adjustment, when the backrest angle is adjusted to the lowest, it can achieve zero gravity function.
 - One-key heating, temperature 35°-45°C
 - The massage time is adjusted according to the need, with a 5-minute step up and down, which can be set 15 minutes, 20 minutes, 25 minutes, 30 minutes to adjust a massage course.
- Ad hoc foot rollers, combined with airbag swing massage.

II. Parts Diagram



III. Set up

No tedious installation is required- Simply plug in and enjoy



- 1) Unbox the chair and lower the leg section of the chair until it sits just above the floor.
- 2) Simply connect the power cord to the plug point located on the lower rear section of the massage chair. The other end would be a 3 pin plug and will need to be connected to the mains power socket.

Directions of movement:

Force down

Pushing in forward Direction



- This chair can tilt back 40° so please carefully choose a location to facilitate free movement of the massage chair indoors.
- Do not apply excessive pressure on the chair to avoid damage and to prevent the chair from collapsing.
- Please do not move the massage chair when it is in use.
- The massage airbags can get damaged if the chair is laid on its side on the floor and not in the correct upright position from the base.

X. Hazardous products

Part name	Hazardous substances					
	(Pb)	(Hg)	(Cd)	{Cr (VI)}	(PBB)	(PBDE)
PCB Board	X	0	0	0	0	0
Leather cover	0	0	0	0	0	0
Power cable	0	0	0	0	0	0
Electrical components	X	0	0	0	0	0
Sponge/ foam	0	0	0	0	0	0
Packing materials	0	0	0	0	0	0
Metal frame	X	0	0	0	0	0
Plastic trims	X	0	0	0	0	0

This form is prepared in accordance with SJ/ T 11364

0 - Indicates that the content of the hazardous substance in all mean materials of the part is below the limit requirements specified in GB/ T 26572.

X - Indicates that the content of the hazardous substance in each material of the component exceeds the limit requirements specified in GB/ T 26572.

*The "harmful substance shown in table will not cause any harm to the body and environment under normal use of the product. The "hazardous substances" shown in the table and there to provide consumers and recycling practitioners with information about the relevant substances included which is helpful for proper disposal procedure when the products are eventually discarded. This is to be noted for regulations on electronic recycling and treatment of waste of electrical appliances.

*Our company advocates for environmental protection and low-carbon footprint. It is why we recommended that users who own the product should abide by the national laws and regulations on recycling of waste electronic products when they are no longer needed.

*We suggest users hand it over to local manufacturers with a nationally recognized qualification for recycling treatment to reduce resource waste and protect the earth's natural environment.


XI. Warranty instructions

1. Consumers can enjoy a two year warranty service. If the product is faulty during the warranty period, we can repair or replace spare parts free of charge.
2. During the warranty period, the company will charge for parts and labour to repair any faults in the massage chair if caused by the following circumstances:
 - Used improperly or attempted to be repaired by user
 - Users who do not comply with the prescribed power supply voltage
 - If the chair is not maintained according to guidance advised in this manual
 - Damage caused by natural or man-made disasters
 - Damage caused by insects and pets
3. In case of the following circumstances, the company charge for parts labour:
 - Beyond the warranty period
 - Failure to show the warranty card



VIII. Technical Specification

Product Name:	Massage chair
Rated voltage:	100-240v
Rated frequency:	50Hz
Rated power:	100W
Rated working time:	15mins.
Security level:	Class I
Implementation criteria:	GB4706.1-2005 GB4706.10-2008

3.Manual operation instructions

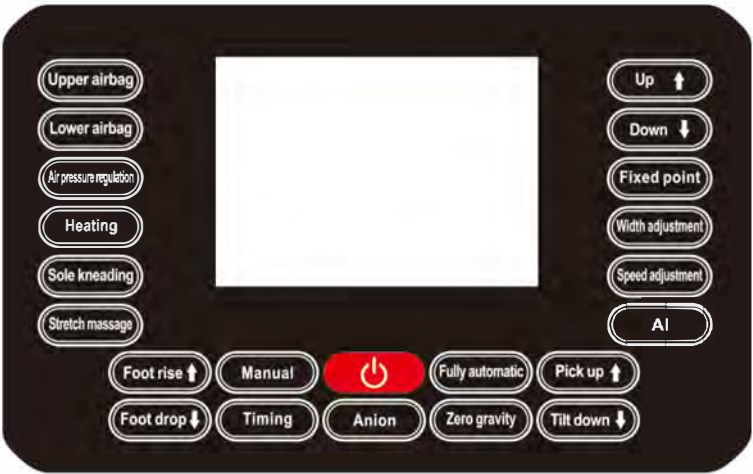

IX. Circuit Diagram

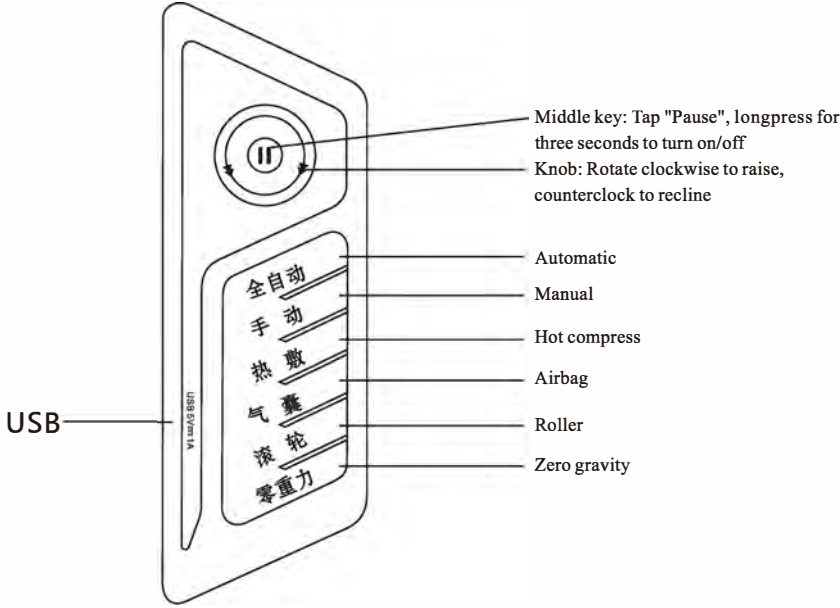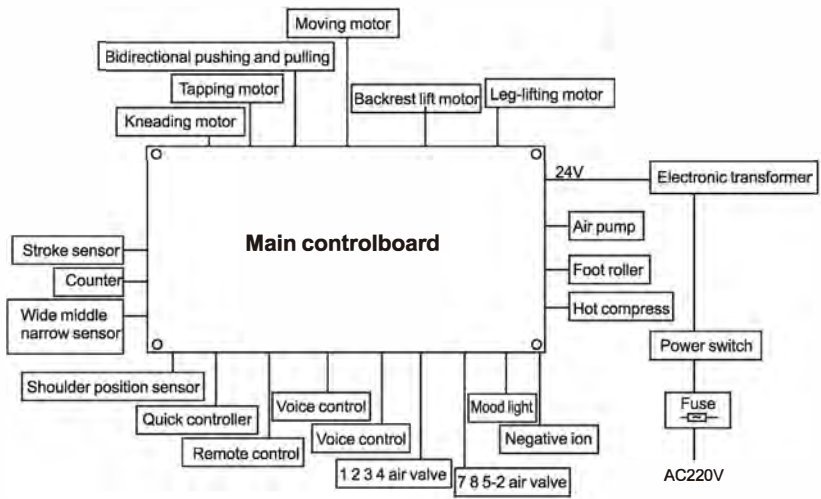

IV. Maintenance

1. Please use neutral detergent and a soft cloth for regular cleaning. Do not use corrosive detergent.
2. If the power cord is damaged, it must be carefully replaced by a professional with an identical specification cord to avoid danger.
3. When not using this product or cleaning, please unplug the power supply to avoid danger.
4. Do not use any sharp objects in and around the chair.
5. Do not place the chair in a humid environment, but in a dry and ventilated place.

V. Health & Safety

In order to ensure the safety and correct use of the massage chair, please refer to the operation manual in detail before using this product.

To reduce the risk of fire, burns, electric shock, or injury to others, follow these instructions:

- 1) Power supply other than AC 220V shall not be used.
- 2) When no one is using the machine, please be sure to remove the power plug of the massage chair from the socket. When not using the machine or before removing the device/ parts, please also remove the power plug from the socket in time.
- 3) In order to avoid fire, electric shock or injury caused by overheating, please do not put the product under pillows, blankets and other covers.
- 4) If the product is used for children, adult guardians must supervise them.
- 5) Do not use parts that are not recommended by the manufacturer.
- 6) Do not use this product in case of any of the following conditions: the power cord or plug is damaged, the operation is not functioning correctly, if it falls to the ground or other damages, or falls into water.
- 7) Do not drag the power cord to move the product or use the power cord as a handle.
- 8) Keep a safe distance between the power cord and any hot surfaces.
- 9) Do not operate the product when the air outlet is blocked. Please keep the air outlet unobstructed to avoid being blocked.
- 10) Do not insert or drop objects into any openings of the product.
- 11) Do not use this product outdoors.
- 12) Do not operate this product near a hazardous environment.
- 13) To cut off the power supply, please turn off all operation controls, and unplug the power plug from the socket.
- 14) Do not cover the massage chair to prevent malfunction or fire due to excessive temperature.

VI. Chair Safety & Protection

- Do not use the massage chair in excessively humid or dusty environment to avoid electric shock or mechanical failure.
- Do not use the massage chair when the room temperature exceeds 40 °C.
- Do not place the massage chair near the electric heater, stove or direct sunlight.
- This massage chair is not designed for medical use but personal use for relaxation.
- Suitable body type for users is: Max weight: 110 Kg, Max Height: 190cm

- Massage chair is only for indoor use.
- Use massage chair at low room temperature, do not suddenly adjust the temperature. It is recommended to gradually adjust the temperature to the normal range before use.
- If the massage chair is moved from a low temperature storage place to a warmer environment, it may affect the normal operation of the machine due to the accumulation of moisture in the parts, or even cause parts failure. It is recommended that the product be placed at normal room temperature for 1 hour before use.

VII. Useful Tips

- The power switch must be turned on before other functions can be selected.
- Children should use this massage chair under the supervision of adults to avoid equipment damage and injury due to improper use.
- Please do not let children climb on the massage chair to avoid injury.
- This chair has multiple programs. We recommend that users start with the lowest intensity and adjust according to desired comfort.
- Use the massage chair to relax both the body and mind to put you in a calm and comfortable state
- Massage chairs are not suitable for people with heart disease, hypertension, osteoporosis, local skin damage, ulcer, bleeding, tuberculosis or tumours.
- In order to avoid the reduction of massage effect or injury, please do not use the massage chair together with other effective equipment such as electric blanket.
- Do not use the massage chair within 1 hour after eating to avoid adverse effects.
- Do not use the massage chair when your hands or other parts of your body are wet. Do not plug or unplug the power plug.
- Do not insert any chemicals or inflammables on or in the massage chair. This may cause an electric shock, malfunction or fire.
- If you feel discomfort during massage, please stop immediately and if necessary seek medical advice.
- This product is not intended for medical use.
- Do not use if you are pregnant.
- We recommend using the chair for 15 minutes each time and no more than 3 times a day per person.
- Avoid using for more than 30 minutes per session.
- After the chair has been in use for 30 minutes, we recommend to allow the chair to rest for ten minutes before use. If it is used continuously for a long time, the overheat protection device may be activated and the power will be cut off automatically. This will affect the service life of the chair.
- The chair has a heating function up to 35- 40 °C which is in accordance with intentional standards that consider safety and protection to the skin. For users who are sensitive to heat must pay special attention when using this function.
- Do not directly massage your elbow joint, knee, chest and abdomen.
- In case of any of the following conditions, please turn off the switch immediately and cut off the power supply.
 - Accidentally spilling liquid on the massage chair may cause electric shock.
 - The cloth cover of massage chair is damaged and the internal parts are exposed.
- In case of abnormal or severe pain during massage, please stop massage immediately and seek medical consultation.
- Please stop using immediately if any mechanical failure or abnormal condition is detected during use.
- Please stop using if you experience any power interruption during use to avoid user injury due to sudden power recovery.