

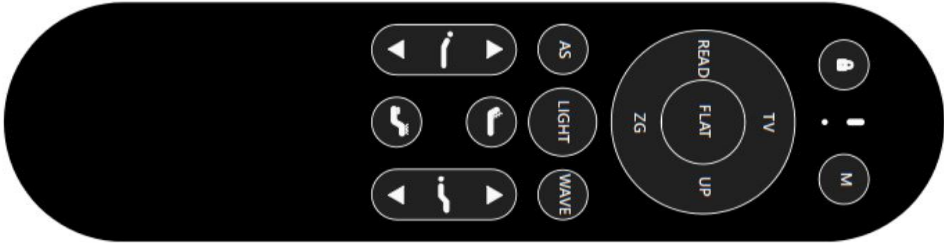
Product User Manual

Tiankang Two-Motor

Remote Control

Model: RF.16.001

一、Product Appearance:

Control Box: RD00009020101 0001	 Notes: 1. PWR: Connect to adapter. Input voltage 24 - 29V, input power $\geq 58W$. For multiple motors, input power should exceed the total rated power of all motors. 2. LIGHT: Reserved LED strip interface. 3. SYNC: Synchronization interface. 4. HEAD: Connect to head adjustment motor. 5. FOOT: Connect to leg adjustment motor. 6. MAS1: Connect to back massage motor. 7. MAS2: Connect to leg massage motor. 8. RST: Pinhole reset button (press twice briefly to re- enter 10-second remote pairing; press and hold for 5 seconds to reset the control box to factory defaults).
Remote Control: RF. 16. 001	

二：Remote Control Functions



FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

KEY	Function	Description
KEY1	Child Lock	Press and hold for 3–5 seconds; control box beeps twice and remote enters locked mode. In locked mode, press and hold again for 3–5 seconds; control box beeps once and remote exits locked mode.
KEY2	M (Memory)	Press and hold for 3 seconds (one beep) to save current position as memory. Short- press to go to the saved memory position. If no position is saved, short- press goes to the factory- default angle.
KEY3	TV	Short- press to move bed to the movie- watching position.
KEY4	READ	Short- press to move bed to the reading position.
KEY5	FLAT	Short- press to move bed to the flat position.
KEY6	UP	Short- press to move bed to the assist- stand position.
KEY7	ZG (Zero Gravity)	Short- press to move bed to the zero- gravity position.
KEY8	AS (Anti-Snore)	Short- press to activate anti- snore mode.
KEY9	LIGHT	Short- press to turn on the under- bed light. Short- press again to turn it off.
KEY10	WAVE	Short- press to activate cradle rocking (lulling) mode.
KEY11	Back Raise	Press and hold to raise the backrest; release to stop. Short- press to raise the backrest for 3 seconds, then stop.
KEY12	Back Massage	Short- press to start back massage motor at level 1. Short- press again for level 2, again for level 3, again to stop.
KEY13	Leg Raise	Press and hold to raise the foot section; release to stop. Short- press to raise the foot section for 3 seconds, then stop.
KEY14	Back Lower	Press and hold to lower the backrest; release to stop. Short- press to lower the backrest for 3 seconds, then stop.
KEY15	Leg Massage	Short- press to start leg massage motor at level 1. Short- press again for level 2, again for level 3, again to stop.
KEY16	Leg Lower	Press and hold to lower the foot section; release to stop. Short- press to lower the foot section for 3 seconds, then stop.
/	Interrupt	During normal operation, pressing any button immediately stops the current movement.
KEY8+KEY10	Pairing	Within 30 seconds of power- on, press and hold both Button 8 and Button 10 simultaneously. A "beep- beep- beep" sound confirms successful pairing.