Wireless Compression Boots

MODEL NO. DY-217

User Manual

Please read the instructions carefully before use and keep it well for further reference.

Contents

Safety Precautions 1-2
FAQs 2-4
Specifications 5-5
Product Description 6-7
Operating Instructions 7-9
Pair and Unpair Devices 10-11
About Charging 11-11
Troubleshooting 12-12
Notes after Use 13-13
Cleaning 13-13
Storage & Maintenance 14-14
Disposal 14-14
Package includes 14-14

Safety Precautions

Please read the following safety precautions carefully to ensure safe and correct use.

Warnings

1. If you experience severe pain, any unusal symptoms, or want to remove the sleeves in an emergency during use:

- Press the power button to stop the device;
- Remove the sleeves and consult your doctor.

2.Consult your doctor before using this device if:

a. Using pacemaker or other medical devices which are susceptible to electrical interference;

b. Suffering from malignant tumors;

c. Suffering from cardiac diseases;

d. Having serious peripheral neuropathy dysfunction or sensory disturbance caused by diabetes;

e. Being unsuitable to do the massage because of traumas or bone fractures on the body;

3. Keep it out of the reach of infants, children, and people without the ability to use it independently.

4. Don't use another charger but the original one.
5. Don't scratch, damage, process, excessively band, pull or twist the power cord of charger. Otherwise, it may cause fire or electric shock.
6. It is not allowed to use when the charger dysfunctions or the plug is loose.
7. Don't plug or unplug the charger with wet hands.
8. Don't put the controller in the quilt or use the machine in high temperature condition.
9. It is forbidden to remodel, disassemble or repair the product without permission.

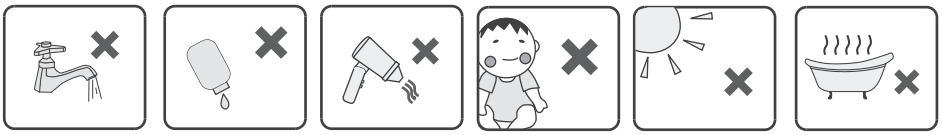

Cautions

1. Don't use it in the bathroom or other humid places.
2. Unplug the charger when you are not using it.
3. Don't walk around when you are using this item or wearing the sleeves.
4. Do not leave the system, power supply, or any accessories where they could be damaged by children, pet, pests, or liquids.

FAQS

Q1: How does this product massage?
A1: This is an air compression device with 5 overlapped chambers (foot, lower calf, upper calf, and thigh) that are inflated and deflated using a sophisticated sequence to simulate hand kneading and stroking.It maximizes blood flow throughout the body, reduces pain and soreness in the treated areas and improves circulation.

Q2: How many massage modes, and what's the difference?
A2: There are 3 massage modes:

Mode 1: Combination Mode

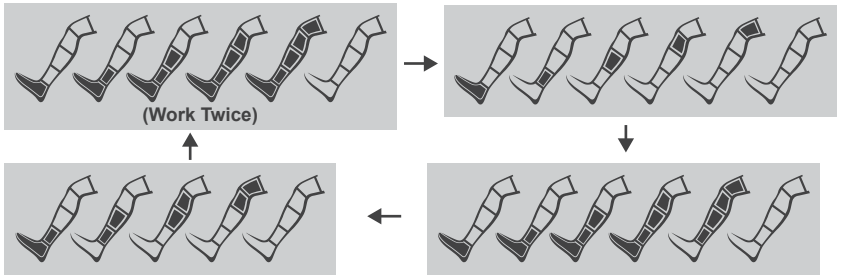

Mode 2: Circulation Mode

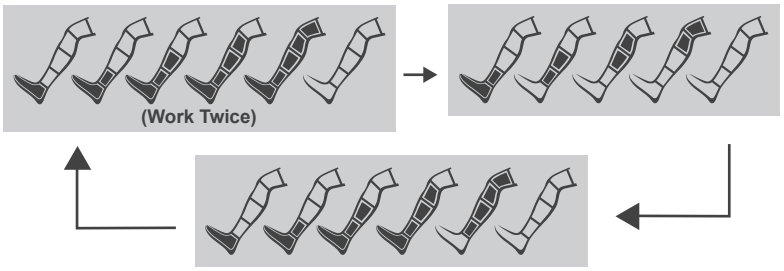

Mode 3: Sequence Mode

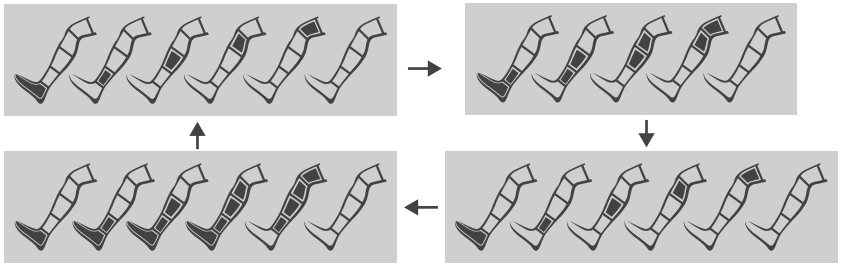

Q3: Does the power have to be plugged into an electrical socket when in use?
A3: No, the controller has a rechargeable battery that you could use wherever you like.
A fully charged battery can last up to 2.5 hours (depending on mode and intensity).

Q4:Can this product be used while charging?
A4: No, the device cannot be used during charging.(Effectively extend battery life)

Q5:What should I do if I feel the massage strength is too weak or too strong?
A5: There are 11 levels of massage strength available, please select the one that is appropriate for you. If you still feel it is too strong at the lowest setting, please stop using the device, we suggest consulting your doctor before next use.

Q6: How long should I use it?
A6: Recommend Use Time:1-2 times a day, no more than 60 minutes at a time. But you can restart it if you feel too tired and want it massage longer to work on the soreness.

Q7: Why does the controller make sound?
A7: The sound comes from the working air pump in the controller, providing air continuously to the airbags in the sleeves, that's normal.

Q8: When should I use this product?
A8: This device pushes the blood to flow and effectively relieves muscle soreness and fatigue; Because it is rechargeable and portable, you can use it anywhere anytime you like. Ideal for pre-workout warming up and post-workout rehabilitation, as well as when returning home from a long day at work.

Q9: Can two sleeves be used separately?
A9: Yes, you can prevent automatic synchronization between the two devices by unpairing them Via Bluetooth, allowing each person to use their device independently. Refer to page 8 for instructions.(Note: To resume synchronization, simply re-pair the Bluetooth devices.)

Q10: What is the function of "Emergency Stop" switch ?
A10: The default position of "Emergency Stop" switch is at " 🔓 " position. When you feel the intensity is too strong to make you uncomfortable during use, please push "Emergency Stop" switch to the arrow " → " position to release the air. Please make sure the device is locked before use and during normal running.

Specifications

Product Name	Wireless Compression Boots
Model	S9082
Charger	AC 100~240V 50/60Hz,DC5V/3A
Rated Power	15W
Battery Capacity	7.4V 2600mAh
Charging Time	About 3.5-4H
Using Time with One Charging	2.5H
Material	Sleeves : Durable Nylon; Controller : Fireproof ABS; Air Hoses : Silicone
Compression Modes	3 Modes: Sequence/Circulation /Combination
Intensity Levels / Pressure Range	11 Levels: LOW-50~70mmHg; MID-80~110mmHg; HIGH-120~150mmHg
Timer	15~60 Mins. The default value is 30 Mins,each press +/- 5 Mins
Weight (with all accesories)	3.0 KGS
Sleeve size	Inseam length: 86 cm. Maximum thigh circumference: 75 cm. Maximum foot circumference: 46 cm.
Operating Conditions	Temperature: +5℃ to 35℃; Humidity: 5% to 80% non-condensing; Atmospheric Pressure: 70 kPa to 106 kPa;
Storage Conditions	Temperature: -20℃ to 55℃; Humidity: 5% to 90% non-condensing; Atmospheric Pressure: 70 kPa to 106 kPa; Keep dry and avoid direct sunlight exposure.

Product Description

Controller

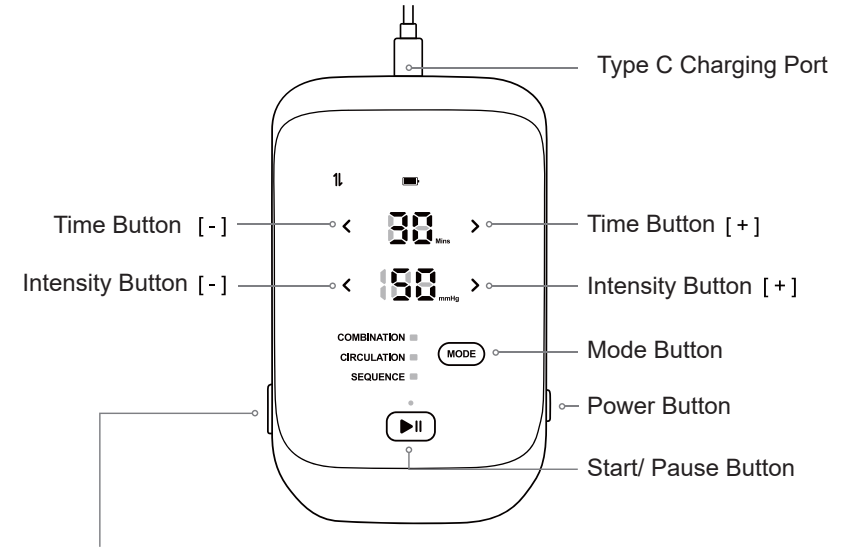

Emergency Stop Switch

* Push the switch to the arrow for any emergency stop.
* Ensure the switch is locked for normal running.

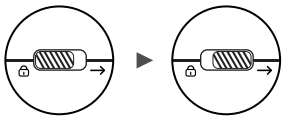

Display Screen

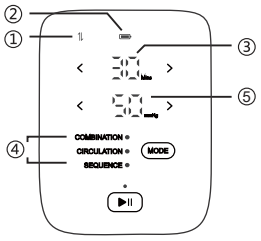

Display current setting and working status (remaining time and pressure range)

①. Bluetooth Indicator
②. Battery Status
③. Remaining Time
④. Current Mode
⑤. Current Intensity

Massage Sleeve

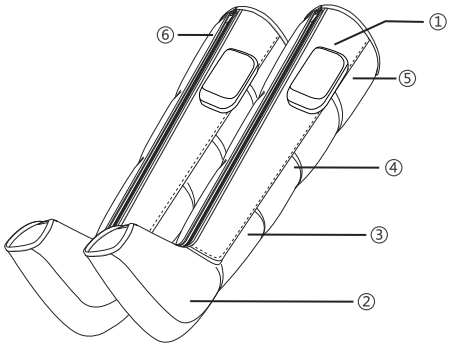

①. Controller
②. Foot Air Chamber
③. Lower Calf Chamber
④. Upper Calf Chamber
⑤. Thigh Chamber
⑥. Zipper

Operating Instructions

Please read safety precautions carefully before using the product. In order to get better massage, please use it according to the instruction.

1.It's recommended to fully charge it for 3.5-4 hours before the first use.
2.Please find a comfortable position reclining or lying down, and then put on the sleeves properly.

* Please make sure the zipper is zip up completely before using, don't use this system with the zipper partially or totally unzipped.

* Please make sure that the controller is positioned at the center of the thigh to ensure proper operation and optimal massage performance.

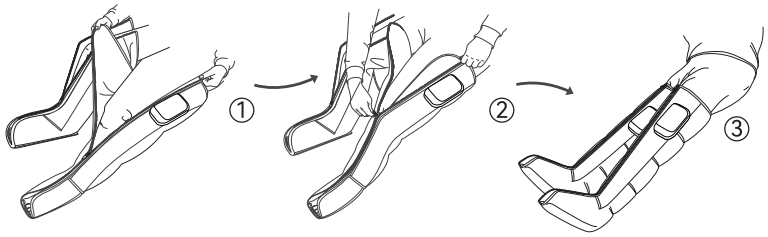

3. Check & ensure the Emergency Stop Switch is in the locked position before powering on, otherwise it will not work.



Controller Left Side

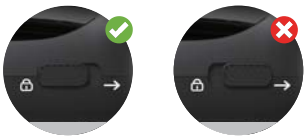

4. Press and hold the power button " " for 3 seconds, until you hear an audible " Di " , the screen will be light up and display current setting. Press the Start / Pause button " " to start. It will start massage with the default setting.

* The device will auto shut down after 2 minutes of standby if not in use.

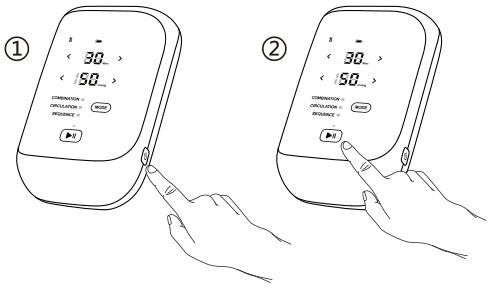

Indicator in blue means the product is working, indicator in white means the product pauses working.

5. Adjust Settings:

The two controllers can synchronize their operations via the built-in Bluetoothcomponents. Setting up either controller will automatically sync the otherone.

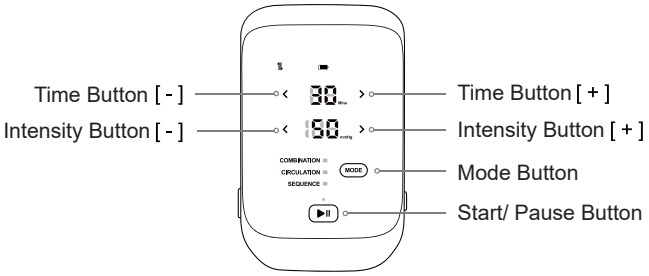

After turning on both controllers, the Bluetooth connection takes about 10 seconds. Both Bluetooth indicators will light solid blue as below.

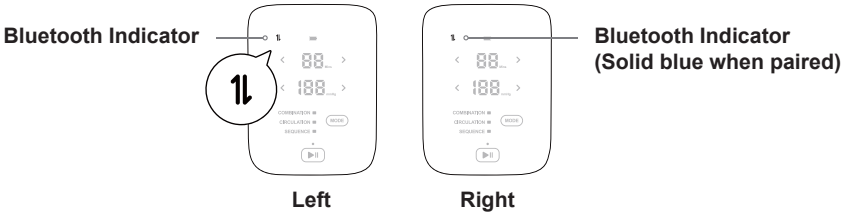

If users find that the massage experience on left leg and right leg is inconsistent during use, please re-pair the Bluetooth, refer to Pair and Unpair Devices section of the manual.

6. Press mode button" MODE " to change the massage mode. 3 modes optional,see the difference in FAQS A2 session.

7. To adjust pressure intensity, press the pressure button" < > ", there are 11 Levels available.

LOW-50~70mmHg; MID-80~110mmHg; HIGH-120~150mmHg.

8. Press the time button " < > " to choose treatment time, 10-time interval options available (15-60 minutes). Default setting is 30 mins, each press will add or subtract 5 minutes.

Pair and Unpair Devices

Pair Devices

Press the Mode button at the same time and hold for 5 seconds until you hear one beep. The Bluetooth indicator lights will keep flash, then the device paired when the indicator lights stop flashing.

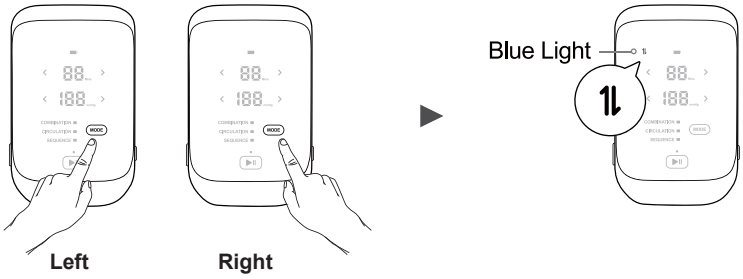

① Simultaneously press and hold for 5 seconds

② The light flashes until it stays on

If you want to operate the two sleeves separately, you can unpair the Bluetooth.

Unpair Devices

Press and hold the Mode buttons for 5 seconds on any devices until you hear a beep. The Bluetooth indicator lights will turn off, indicating the devices are successfully unpaired.

About Charging

Fully charge the battery for 3.5-4 hours before using it for the first time.

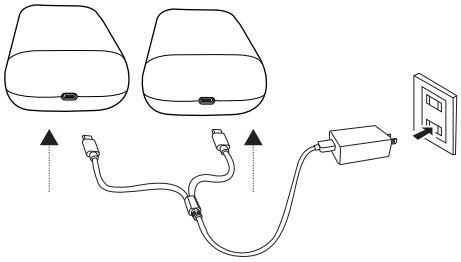

Type-C Charging Port

How to charge the battery?

- Connect the attached charger to the type-c charging port on the base of the controller.
- Plug the charger into a wall outlet.

The Battery Indicator LEDs on the controller screen indicate the current battery level.

Battery Indicator Guide	Charging: White Light Flashes
	Fully Charged: White Light Stay on
	Battery>50%: White Light Stays on
	Battery<50%: Orange Light Stays on
	Battery<20%: Red Light Stays on
	Battery<10%: Red Light Flashes (Charging Reminder)

Note: Please use the attached charger inside our package, do not use any other chargers. This device cannot be used while charging.

Troubleshooting

Problems	Possible Causes	Solutions
After shutting down, press the Power button but no response	Press the Power button immediately after shutting down.	After shutting down, please wait 2 seconds before pressing the Power button.
Massage sleevesare out of synchronization / Bluetooth status indicator do not light up	The device's Bluetooth is not connected.	Re-pair the Bluetooth for both sleeves. Please refer to the Page 7 pair device details.
The controller cannot be charged	The charging cable is not securely inserted.	Please firmly reinsert the charging cable.
Device not working	Low battery (The charging indicator flashes red light, device powered off after beep 10 times)	Recharge the battery fully.
	The Emergency Stop Switch now is in the position"→". (After power-on, device beeps 6 times then shuts down)	During operation, please make sure the switch be moved to position "🔓".
Device stops during operation	If device is powered on but Start button "⏯" is not pressed within 2 minutes, it will automatically shut down with an audible beep.	Touch Start button " ⏯ " to activate device after power-on within 2 mintues.
	Session timer ended.	The device will shut down automatically once the preset time ends. Press the Power button "⏻" to restart.
	Sleeve air leakage. (Devices shuts down after 2 minutes with 6 beeps)	Please check leg sleeve for air leaks. If found, contact us
	Charging during use. The device will shut down automatically after inserting the Type-C charging cable.	Please avoid using the product while charging; This device cannot be used while charging.

Notes After Use

1. After using this device, please turn off the control unit by pressing the power button.
2. Take off the sleeves and pack all the accessories into the storage bag after the boots completely deflate.

How to fold the sleeves?

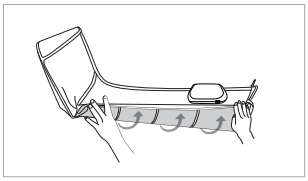

① Fold the sleeve in half

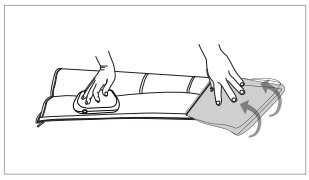

② Fold the sleeve up from the heel area

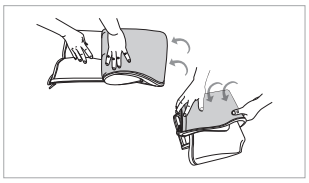

③ Fold upward about 3 times

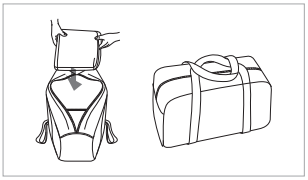

④ Place the folded sleeve into the storage bag

Cleaning

Make sure to cut off the power before you clean the device.

1. If dirty, please wipe the controller, sleeves with a damp, clean cloth.
2. Dry thoroughly with a clean cloth.
3. Don't use gasoline, alcohol, diluent, and other iritating liquid to wipe the machine in case it causes malfunction or the components are damaged or discolored.
4. Don't allow foreign matters to enter the hoses.
5. Don't dry clean.

Storage & Maintenance

1.Don't disassemble the device by yourself. it has no user-serviceable part. If you have any problems during using this product, please contact us.
2.Keep it out of the reach of infants, children and people without the ability to use it independently.
3.Don't place it in high temperature and humidity condition.
4.Avoid direct sunlight.
5.Avoid needles puncture the sleeves.
6.Don' t place heavy stuff on it.
7.Keep the open ports of the controller, hose interconnect, and power in let free of debris.
8.Do not allow lint or dust accumulates, wipe down the system with a dry cloth before use.

Disposal

Please adhere to the local requlations when you dispose of the wasted.

Package Includes

- 2 x Massage Sleeves With Controller
- 1 x Charger(DC 5V 3A)
- 1 x Type-C Cable
- 1 x User Manual
- 1 x Portable Carrying Bag

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction