


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Sam

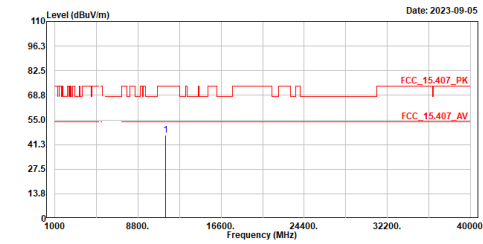


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	46.30	74.00	-27.70	53.76	-7.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Sam

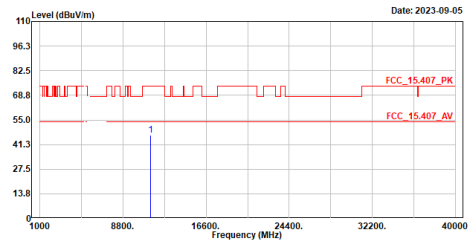


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	46.40	74.00	-27.60	53.86	-7.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5720MHz
TEST BY :Sam

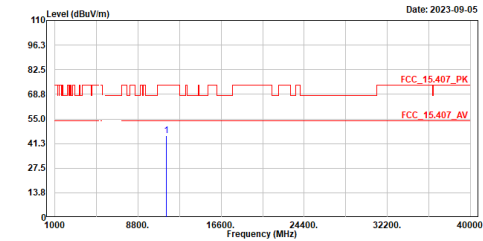


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11440.000	45.72	74.00	-28.28	53.07	-7.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5720MHz
TEST BY :Sam

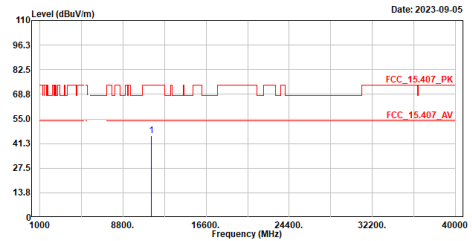


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11440.000	45.61	74.00	-28.39	52.96	-7.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Sam

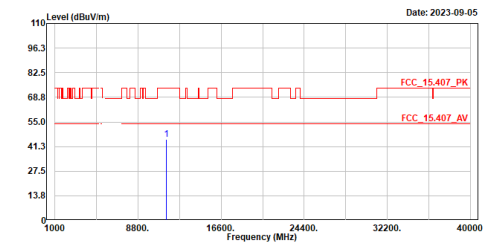

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11490.000	45.13	74.00	-28.87	52.39	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz
TEST BY :Sam

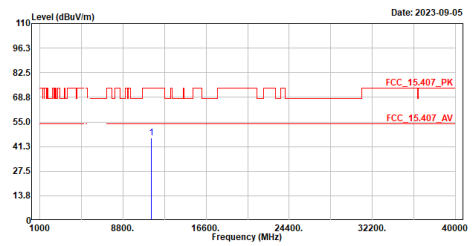

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11490.000	46.21	74.00	-27.79	53.47	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5785MHz
TEST BY :Sam

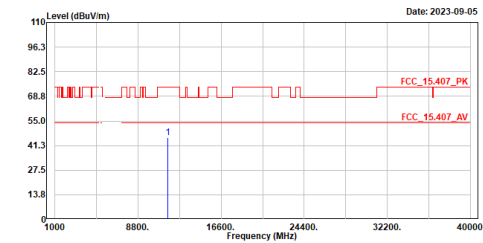

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	45.73	74.00	-28.27	53.01	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5785MHz
TEST BY :Sam

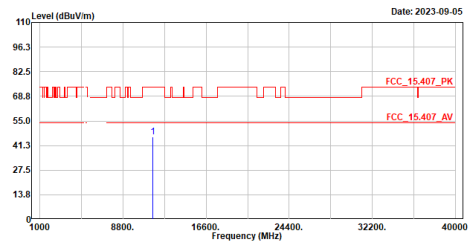

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	46.19	74.00	-27.81	53.47	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Sam

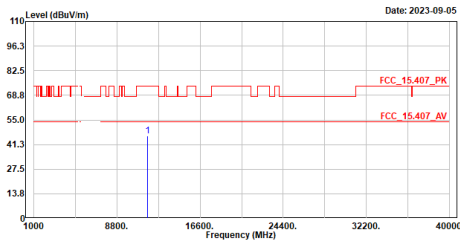

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	45.93	74.00	-28.07	53.20	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Sam

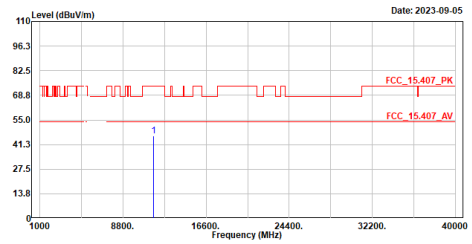

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	45.94	74.00	-28.06	53.21	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Sam

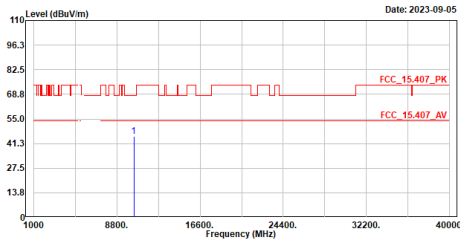

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	45.32	68.22	-22.90	54.35	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Sam

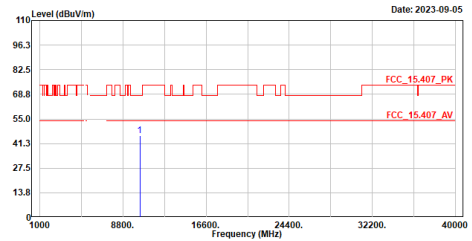

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	45.86	68.22	-22.36	54.89	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Sam

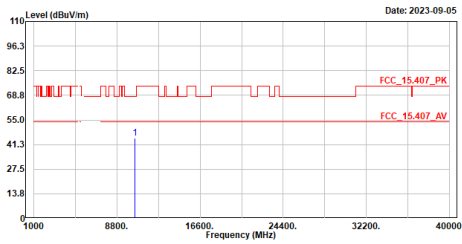


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10460.000	44.63	68.22	-23.59	53.58	-8.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Sam

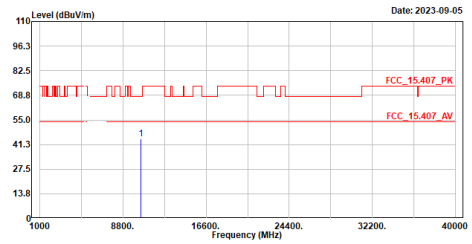


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10460.000	44.42	68.22	-23.80	53.37	-8.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Sam

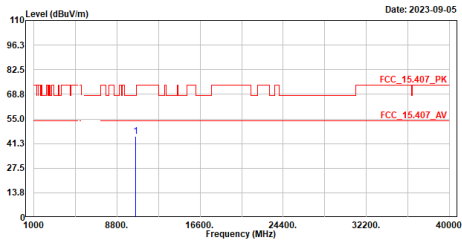


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10540.000	45.34	68.22	-22.88	54.24	-8.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Sam

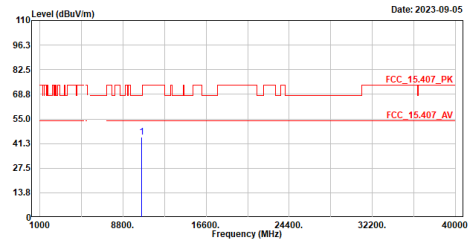


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10540.000	44.90	68.22	-23.32	53.80	-8.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Sam

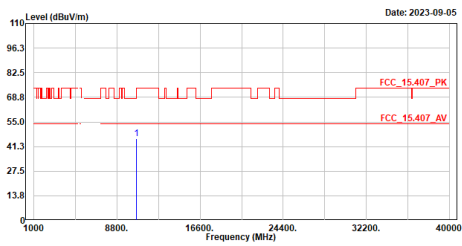

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	45.58	74.00	-28.42	54.48	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Sam

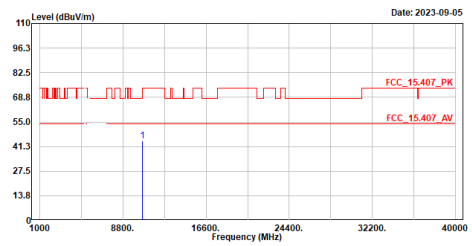

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	44.51	74.00	-29.49	53.41	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Sam

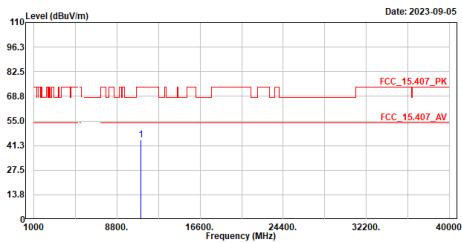

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11020.000	44.32	74.00	-29.68	52.89	-8.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Sam

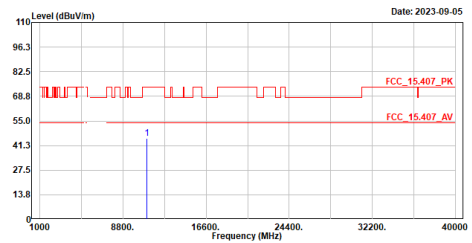

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11020.000	45.35	74.00	-28.65	53.92	-8.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Sam

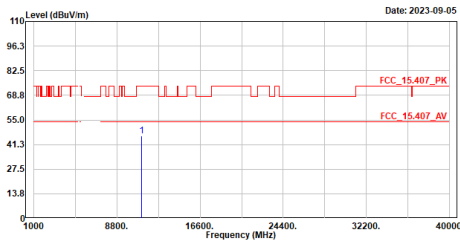

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11100.000	45.89	74.00	-28.11	54.09	-8.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Sam

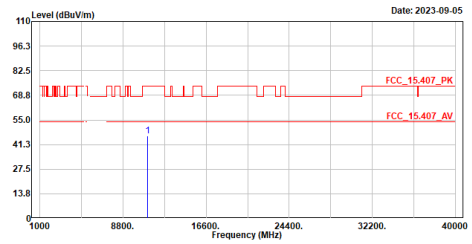

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11100.000	45.90	74.00	-28.10	54.10	-8.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Sam

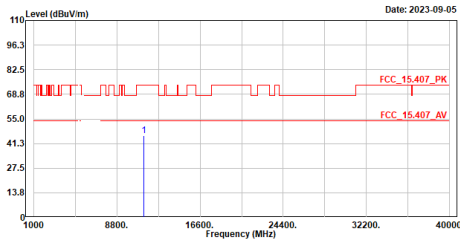

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11340.000	45.69	74.00	-28.31	53.22	-7.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Sam

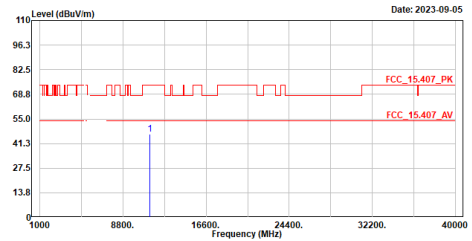

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11340.000	46.58	74.00	-27.42	54.11	-7.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5710MHz
TEST BY :Sam

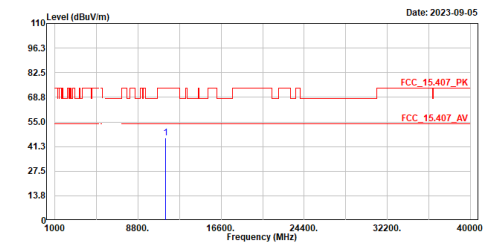

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11420.000	46.10	74.00	-27.90	53.50	-7.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5710MHz
TEST BY :Sam

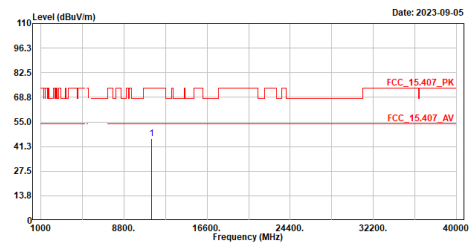

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11420.000	45.51	74.00	-28.49	52.91	-7.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz
TEST BY :Sam

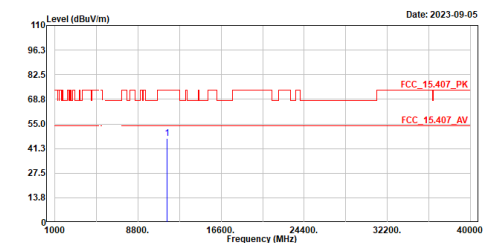

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11510.000	47.08	74.00	-26.92	54.33	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz
TEST BY :Sam

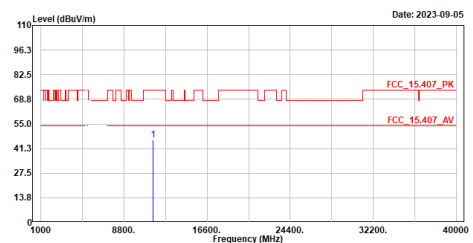

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11510.000	45.91	74.00	-28.09	53.16	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Sam

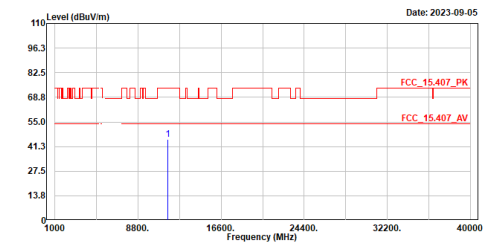


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11590.000	45.40	74.00	-28.60	52.72	-7.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Sam

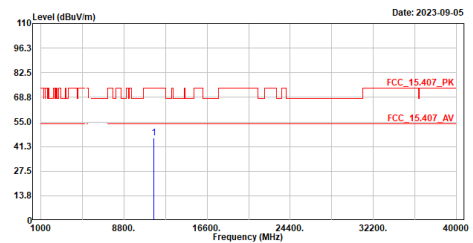


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11590.000	46.00	74.00	-28.00	53.32	-7.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Sam

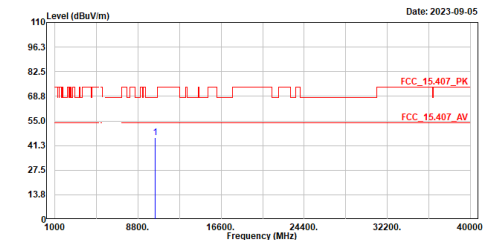


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10420.000	45.52	68.22	-22.70	54.52	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Sam

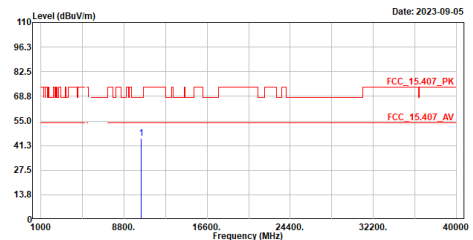


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10420.000	45.43	68.22	-22.79	54.43	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Sam

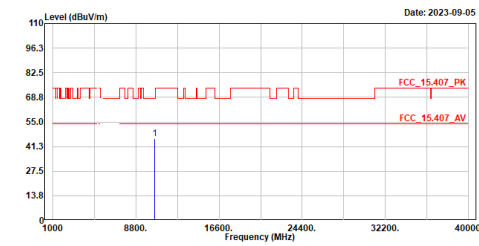

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	45.69	68.22	-22.53	54.62	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Sam

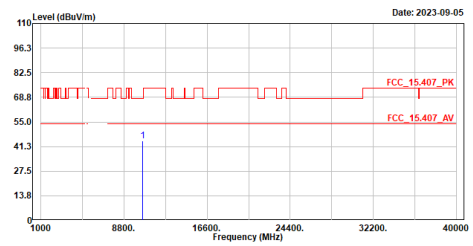

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	44.30	68.22	-23.92	53.23	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Sam

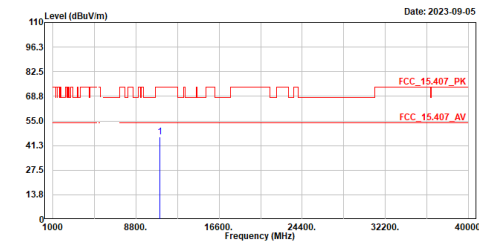

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	45.98	74.00	-28.02	54.40	-8.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Sam

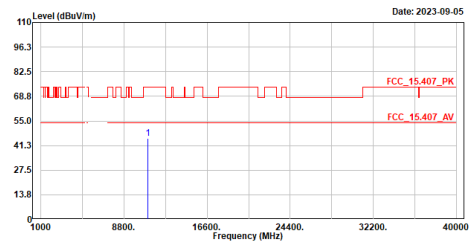

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	45.11	74.00	-28.89	53.53	-8.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5610MHz
TEST BY :Sam

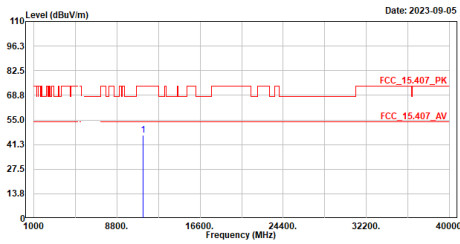

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	46.52	74.00	-27.48	54.25	-7.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5610MHz
TEST BY :Sam

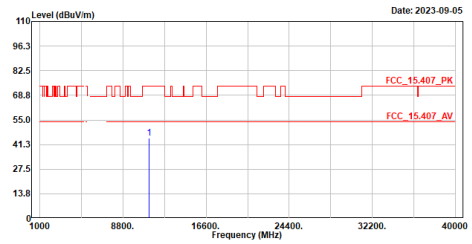

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	44.90	74.00	-29.10	52.63	-7.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5690MHz
TEST BY :Sam

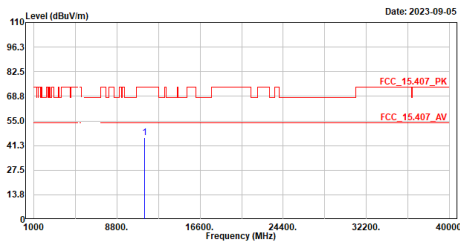

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11380.000	45.64	74.00	-28.36	53.17	-7.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5690MHz
TEST BY :Sam

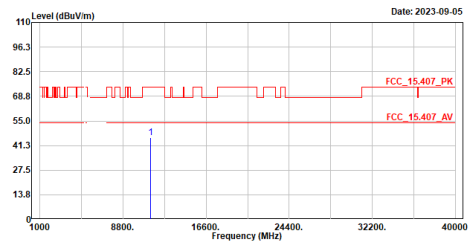

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11380.000	45.80	74.00	-28.20	53.33	-7.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Sam

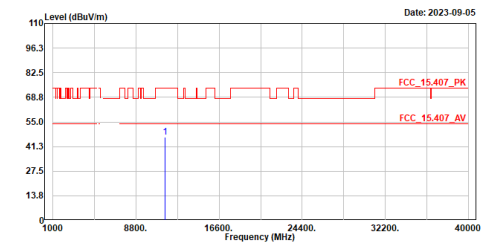


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	46.68	74.00	-27.32	53.93	-7.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Sam

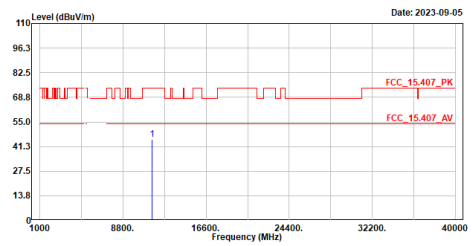


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	45.19	74.00	-28.81	52.44	-7.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5250MHz
TEST BY :Sam

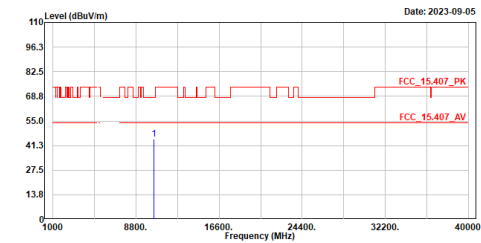


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10500.000	44.62	68.22	-23.60	53.52	-8.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5250MHz
TEST BY :Sam

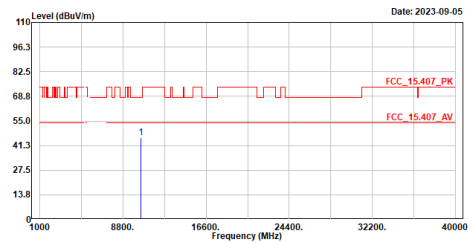


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10500.000	45.64	68.22	-22.58	54.54	-8.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5570MHz
TEST BY :Sam

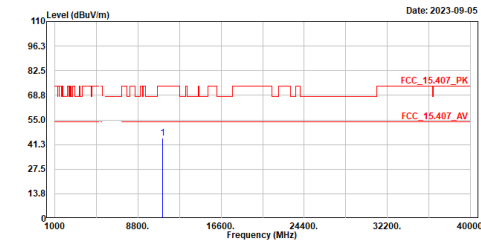

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11140.000	44.67	74.00	-29.33	52.70	-8.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5570MHz
TEST BY :Sam

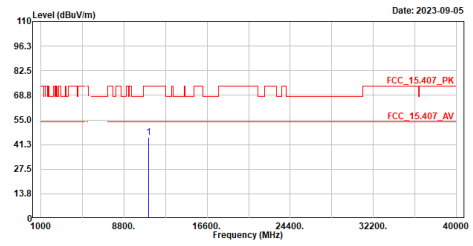

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11140.000	45.36	74.00	-28.64	53.39	-8.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5570MHz
TEST BY :Sam

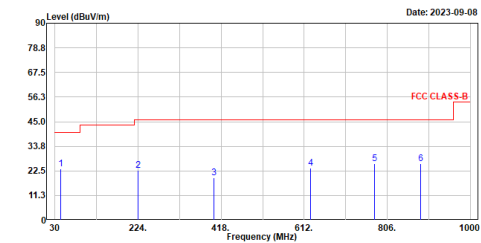

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	43.580	23.39	40.00	-16.61	47.17	-23.78	QP
2	224.970	22.65	46.00	-23.35	49.45	-26.80	QP
3	400.540	19.35	46.00	-26.65	39.82	-26.47	QP
4	626.550	23.83	46.00	-22.17	38.95	-15.12	QP
5	775.930	25.68	46.00	-20.32	38.42	-12.74	QP
6	883.600	25.92	46.00	-20.08	37.94	-12.02	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5570MHz
TEST BY :Sam

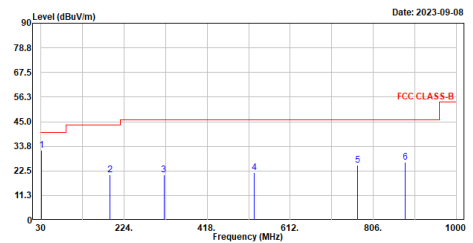


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	31.940	31.94	40.00	-8.06	56.98	-25.04	QP
2	191.020	20.86	43.50	-22.64	47.25	-26.39	QP
3	317.120	20.80	46.00	-25.20	43.29	-22.49	QP
4	528.580	21.81	46.00	-24.19	39.29	-17.48	QP
5	770.110	25.09	46.00	-20.91	37.94	-12.85	QP
6	879.720	26.52	46.00	-19.48	38.61	-12.09	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Partial RU-SISO A


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 26 0
TEST BY :Caster

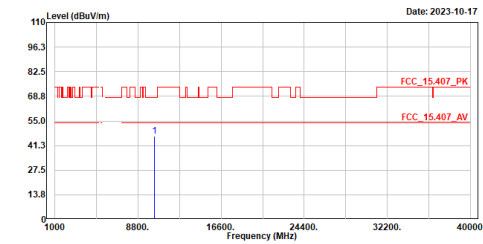

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10343.000	46.46	68.22	-21.76	55.50	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 26 0
TEST BY :Caster

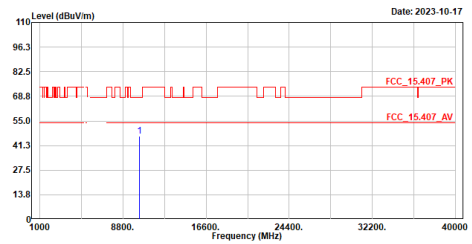

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10343.000	46.69	68.22	-21.53	55.73	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 52 37
TEST BY :Caster

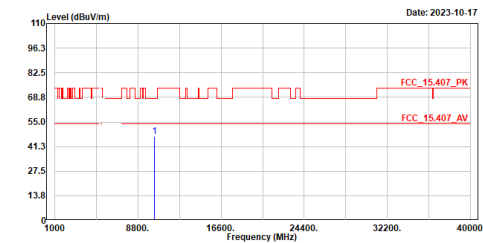

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10345.000	46.92	68.22	-21.30	55.97	-9.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 52 37
TEST BY :Caster

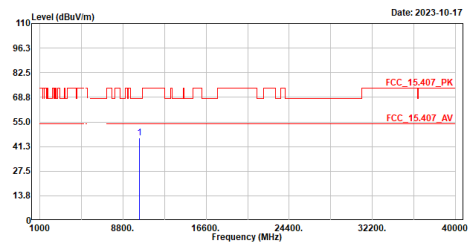

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10345.000	46.20	68.22	-22.02	55.25	-9.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 106 53
TEST BY :Caster

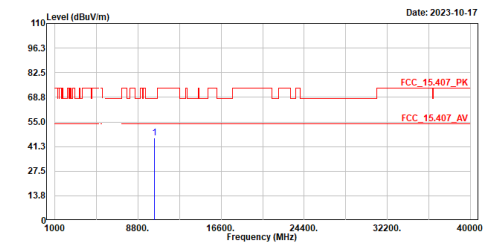


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10349.000	46.04	68.22	-22.18	55.09	-9.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 106 53
TEST BY :Caster

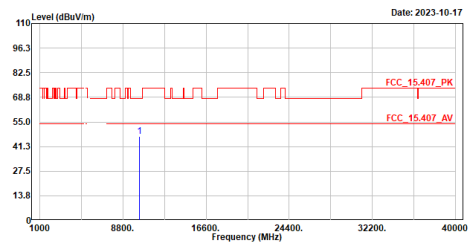


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10349.000	47.10	68.22	-21.12	56.15	-9.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 26 8
TEST BY :Caster

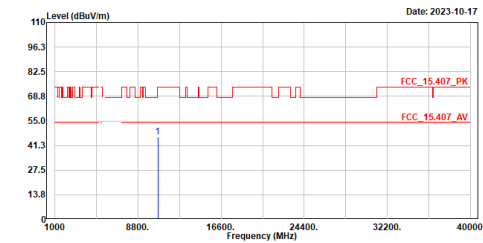


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10657.000	45.99	74.00	-28.01	54.82	-8.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 26 8
TEST BY :Caster

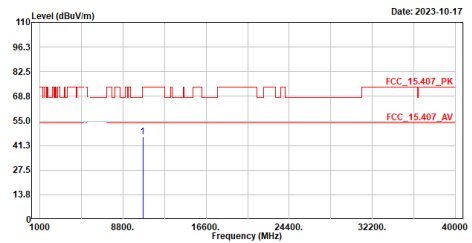


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10657.000	45.94	74.00	-28.06	54.77	-8.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 52 40
TEST BY :Caster

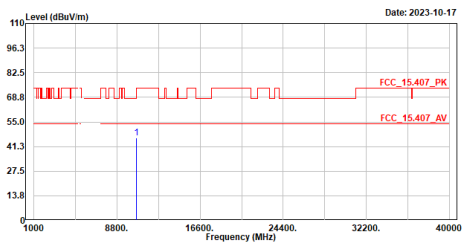

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10655.000	46.20	74.00	-27.80	55.04	-8.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 52 40
TEST BY :Caster

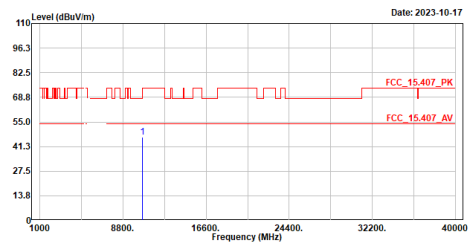

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10655.000	46.34	74.00	-27.66	55.18	-8.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 106 54
TEST BY :Caster

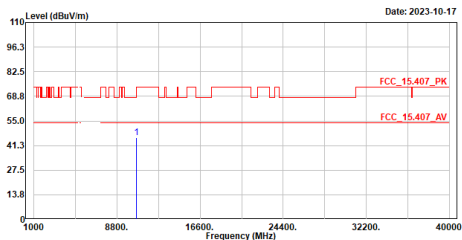

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10651.000	45.82	74.00	-28.18	54.67	-8.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 106 54
TEST BY :Caster

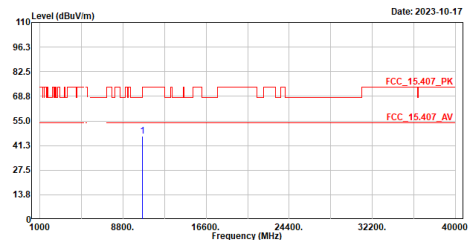

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10651.000	46.38	74.00	-27.62	55.23	-8.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 26 0
TEST BY :Caster

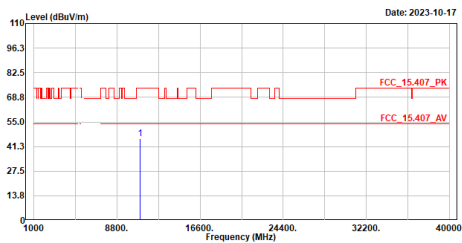


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10983.000	45.85	74.00	-28.15	54.32	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 26 0
TEST BY :Caster

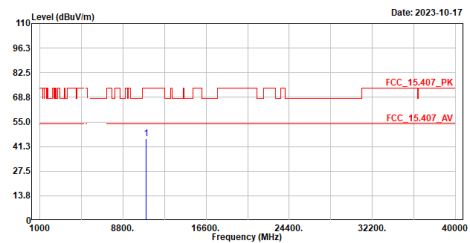


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10983.000	45.79	74.00	-28.21	54.26	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 52 37
TEST BY :Caster

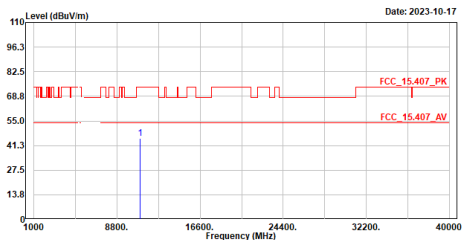


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10985.000	45.08	74.00	-28.92	53.55	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 52 37
TEST BY :Caster

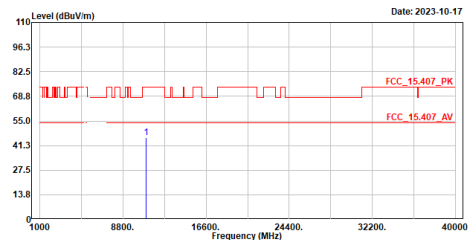


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10985.000	45.57	74.00	-28.43	54.04	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 106 53
TEST BY :Caster

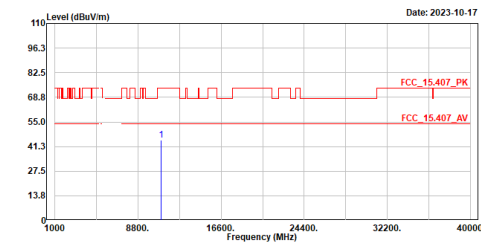

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10989.000	44.96	74.00	-29.04	53.46	-8.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 106 53
TEST BY :Caster

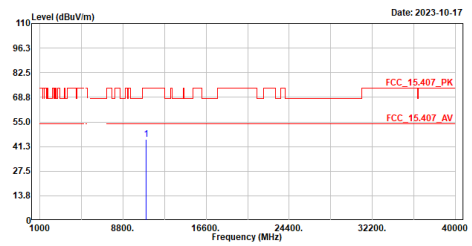

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10989.000	45.34	74.00	-28.66	53.84	-8.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 26 8
TEST BY :Sam

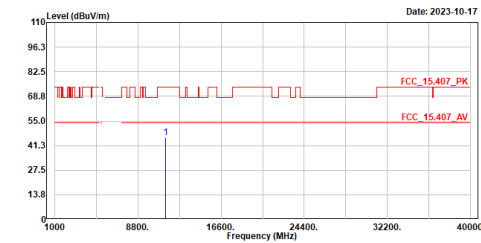

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11417.000	45.56	74.00	-28.44	52.97	-7.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 26 8
TEST BY :Sam

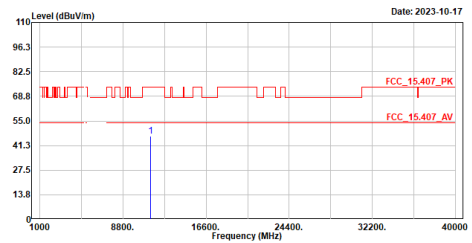

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11417.000	46.35	74.00	-27.65	53.76	-7.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 52 40
TEST BY :Sam

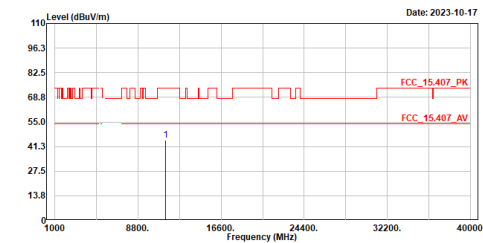

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11415.000	45.00	74.00	-29.00	52.41	-7.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 52 40
TEST BY :Sam

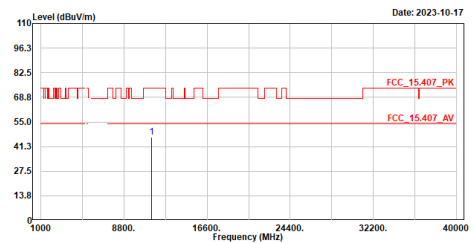

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11415.000	46.30	74.00	-27.70	53.71	-7.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 106 54
TEST BY :Sam

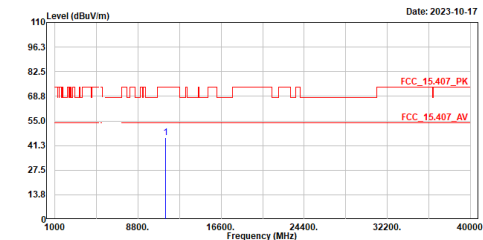

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11411.000	45.61	74.00	-28.39	53.03	-7.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 106 54
TEST BY :Sam

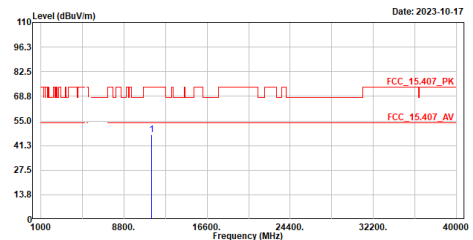

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11411.000	47.17	74.00	-26.83	54.59	-7.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 26 0
TEST BY :Caster

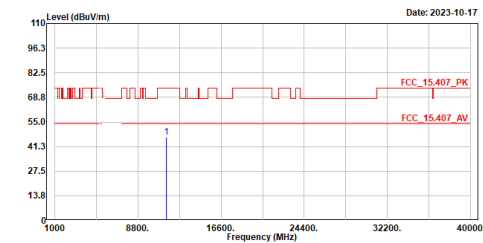


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11473.000	46.43	74.00	-27.57	53.71	-7.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 26 0
TEST BY :Caster

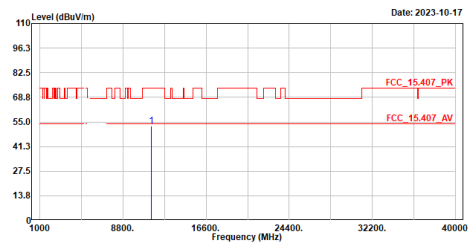


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11473.000	52.52	74.00	-21.48	59.80	-7.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 52 37
TEST BY :Caster

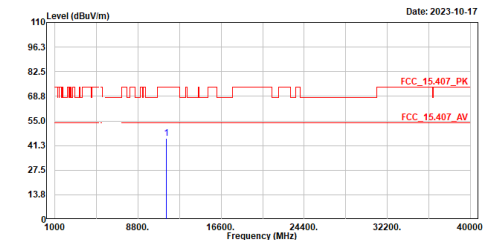


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11475.000	45.23	74.00	-28.77	52.51	-7.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 52 37
TEST BY :Caster

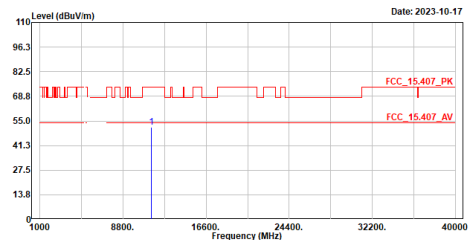


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11475.000	51.31	74.00	-22.69	58.59	-7.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 106 53
TEST BY :Caster

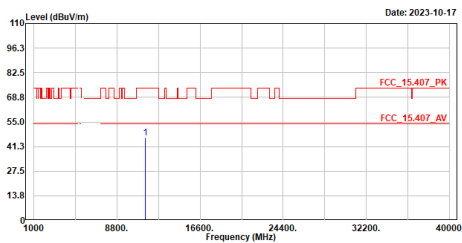

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11479.000	46.25	74.00	-27.75	53.53	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 106 53
TEST BY :Caster

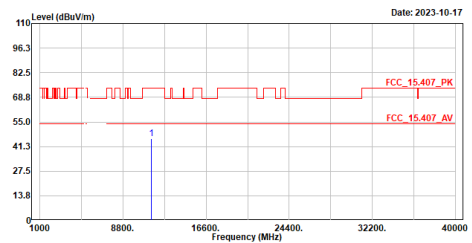

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11479.000	45.54	74.00	-28.46	52.82	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz 242 61
TEST BY :Caster

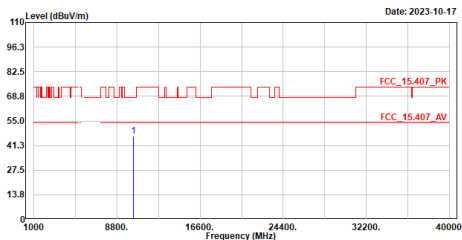

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10361.000	46.31	68.22	-21.91	55.35	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz 242 61
TEST BY :Caster

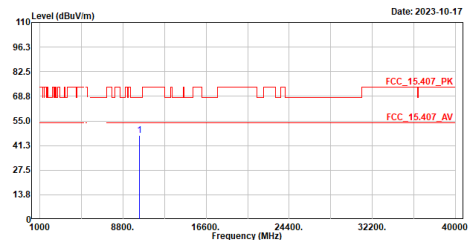

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10361.000	46.74	68.22	-21.48	55.78	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz 242 62
TEST BY :Caster

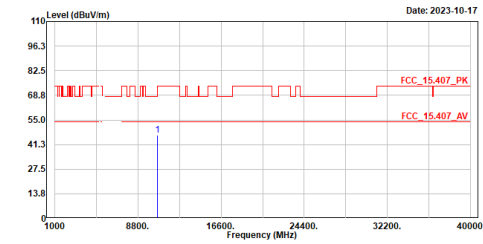

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10639.000	46.50	74.00	-27.50	55.37	-8.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz 242 62
TEST BY :Caster

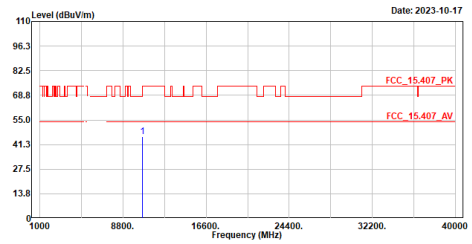

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10639.000	45.66	74.00	-28.34	54.53	-8.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz 242 61
TEST BY :Caster

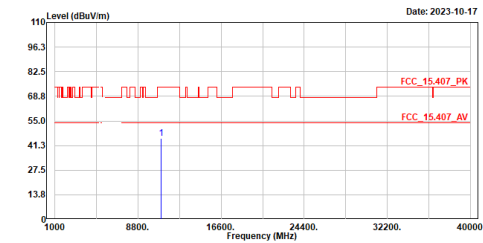

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11001.000	45.24	74.00	-28.76	53.78	-8.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz 242 61
TEST BY :Caster

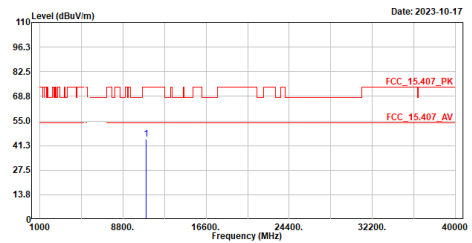

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11001.000	44.93	74.00	-29.07	53.47	-8.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz 242 62
TEST BY :Caster

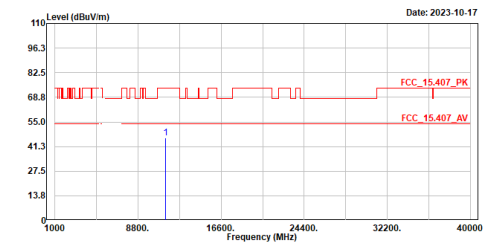


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11359.000	46.23	74.00	-27.77	53.77	-7.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz 242 62
TEST BY :Caster

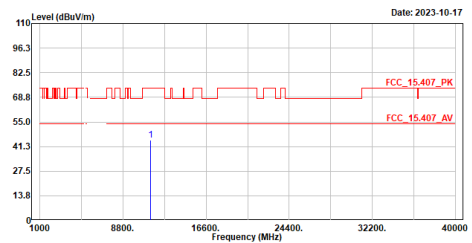


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11359.000	44.64	74.00	-29.36	52.18	-7.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz 242 61
TEST BY :Caster

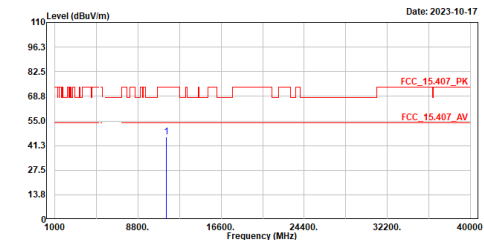


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11491.000	46.14	74.00	-27.86	53.40	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz 242 61
TEST BY :Caster

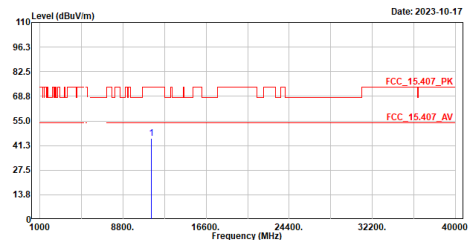


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11491.000	45.12	74.00	-28.88	52.38	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5250MHz 996 67
TEST BY :Caster

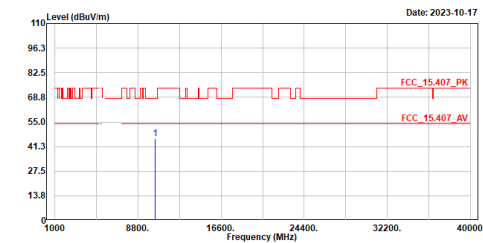


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10420.000	45.50	68.22	-22.72	54.50	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz 996 67
TEST BY :Caster

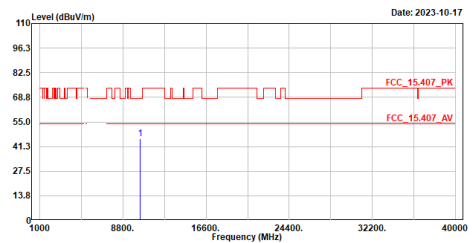


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10420.000	45.60	68.22	-22.62	54.60	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5250MHz 996 567
TEST BY :Caster

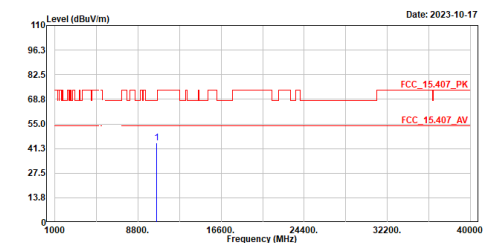


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	44.58	68.22	-23.64	53.51	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz 996 567
TEST BY :Caster

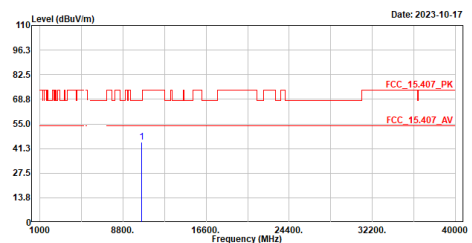


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	44.94	68.22	-23.28	53.87	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5570MHz 996 67
TEST BY :Caster

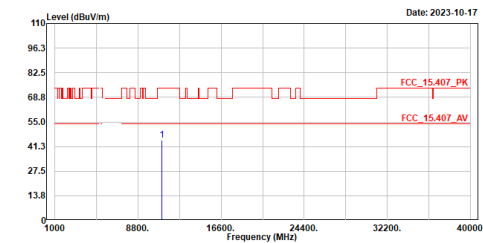


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	44.88	74.00	-29.12	53.30	-8.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5570MHz 996 67
TEST BY :Caster

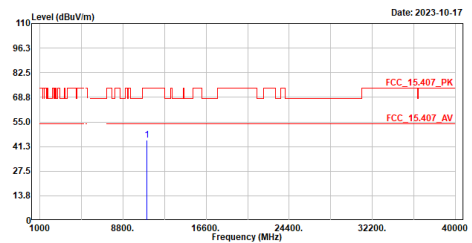


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	44.90	74.00	-29.10	53.32	-8.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5570MHz 996 567
TEST BY :Caster

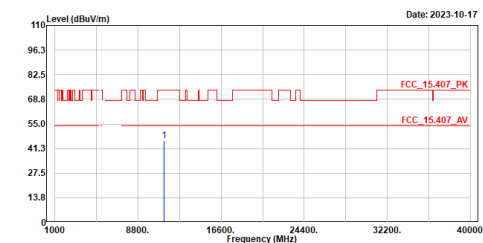


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	45.53	74.00	-28.47	53.26	-7.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5570MHz 996 567
TEST BY :Caster

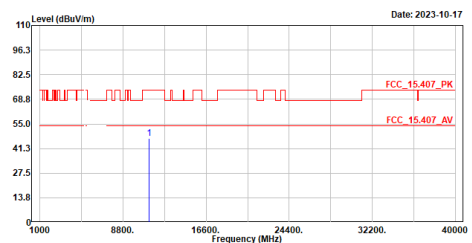


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	46.80	74.00	-27.20	54.53	-7.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Partial RU-SISO B


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz 484 65
TEST BY :Caster

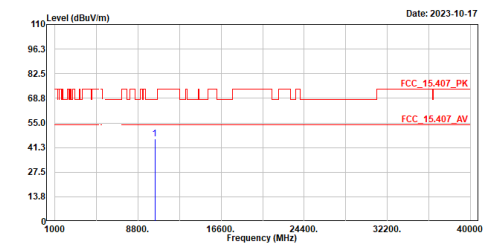

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10379.000	45.99	68.22	-22.23	55.02	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz 484 65
TEST BY :Caster

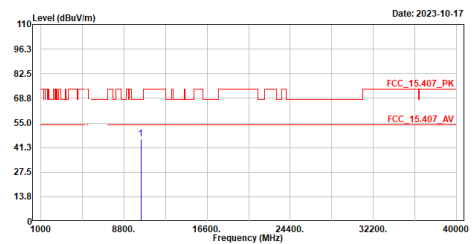

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10379.000	46.06	68.22	-22.16	55.09	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz 484 66
TEST BY :Caster

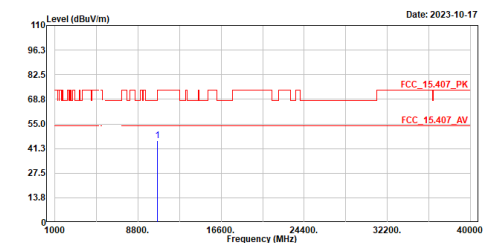

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	45.70	74.00	-28.30	54.60	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz 484 66
TEST BY :Caster

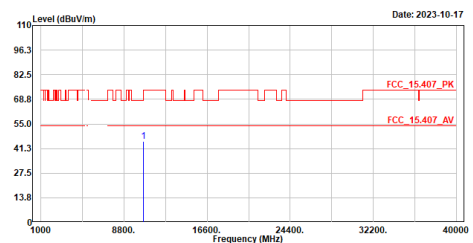

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	45.36	74.00	-28.64	54.26	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz 484 65
TEST BY :Caster

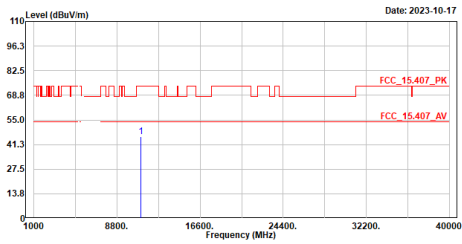

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11019.000	45.58	74.00	-28.42	54.14	-8.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz 484 65
TEST BY :Caster

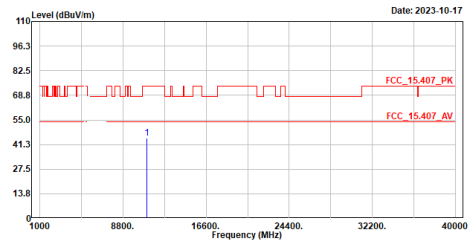

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11019.000	44.97	74.00	-29.03	53.53	-8.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz 484 65
TEST BY :Caster

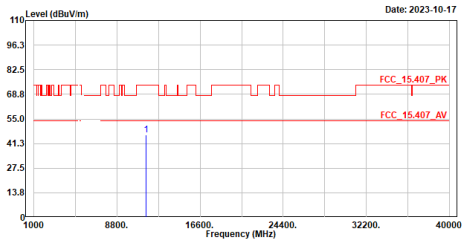

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11509.000	45.97	74.00	-28.03	53.22	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz 484 65
TEST BY :Caster

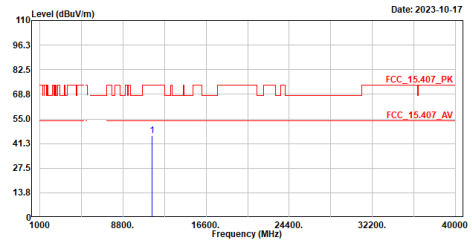


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11509.000	45.70	74.00	-28.30	52.95	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Partial RU-MIMO


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 106 53
TEST BY :Caster

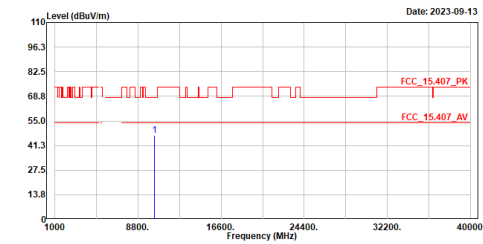

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10349.000	46.72	68.22	-21.50	55.77	-9.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 106 53
TEST BY :Caster

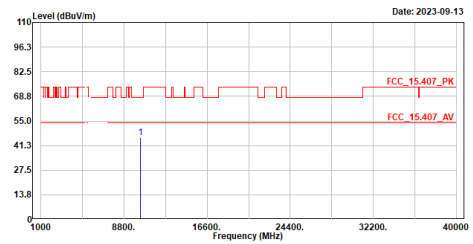

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10349.000	45.52	68.22	-22.70	54.57	-9.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 26 0
TEST BY :Caster

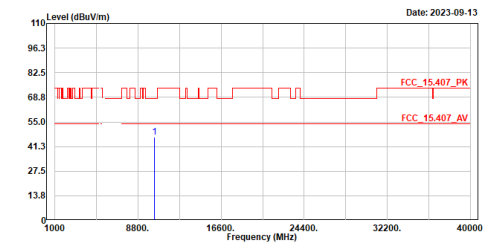

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10343.000	46.37	68.22	-21.85	55.41	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 26 0
TEST BY :Caster

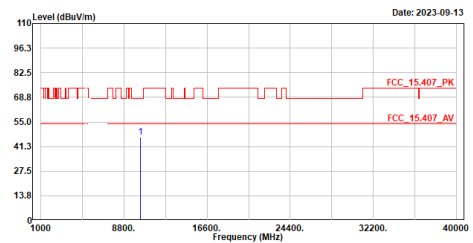

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10343.000	46.42	68.22	-21.80	55.46	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz 52 37
TEST BY :Caster

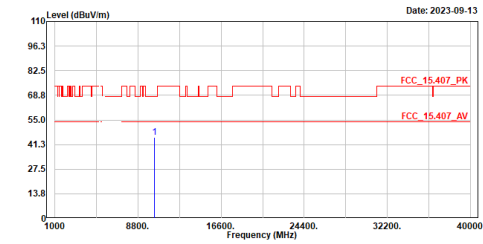


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10345.000	45.15	68.22	-23.07	54.20	-9.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz 52 37
TEST BY :Caster

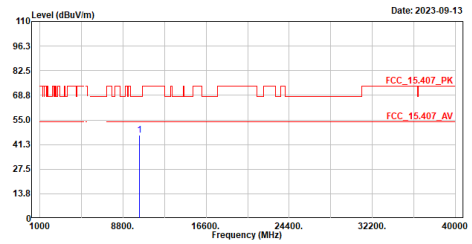


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10345.000	46.34	68.22	-21.88	55.39	-9.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 106 54
TEST BY :Caster

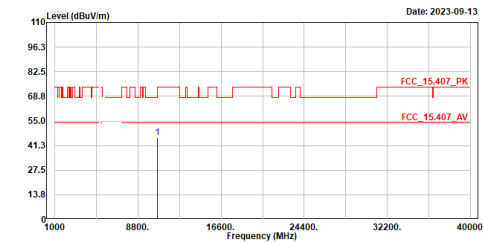


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10651.000	45.81	74.00	-28.19	54.66	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 106 54
TEST BY :Caster

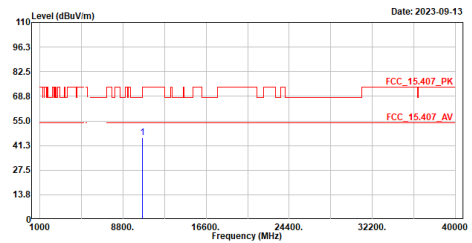


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10651.000	45.56	74.00	-28.44	54.41	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 26 8
TEST BY :Caster

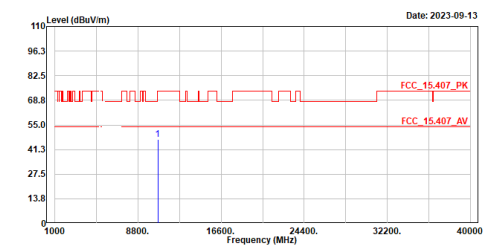

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10657.000	46.72	74.00	-27.28	55.55	-8.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 26 8
TEST BY :Caster

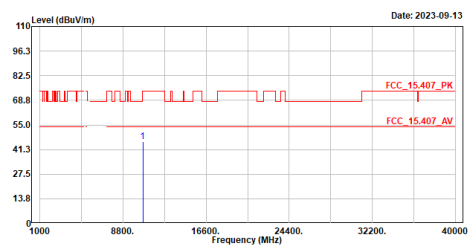

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10657.000	45.72	74.00	-28.28	54.55	-8.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz 52 40
TEST BY :Caster

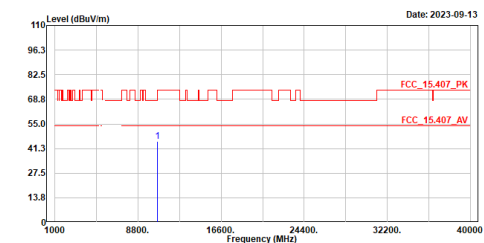

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10655.000	45.43	74.00	-28.57	54.27	-8.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz 52 40
TEST BY :Caster

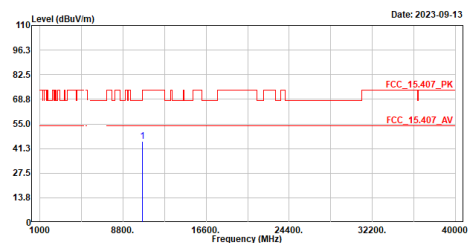

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10655.000	45.44	74.00	-28.56	54.28	-8.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 106 53
TEST BY :Caster

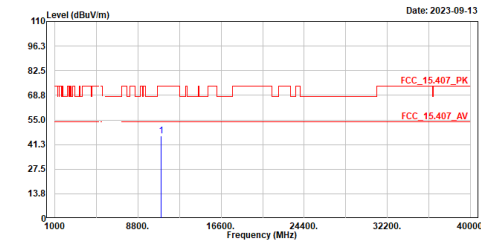


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10989.000	46.05	74.00	-27.95	54.55	-8.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 106 53
TEST BY :Caster

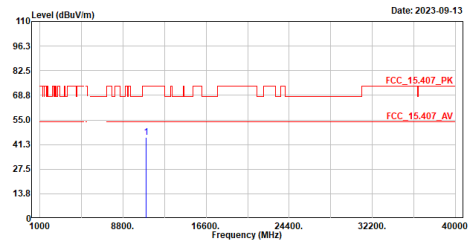


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10989.000	45.39	74.00	-28.61	53.89	-8.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 26 0
TEST BY :Caster

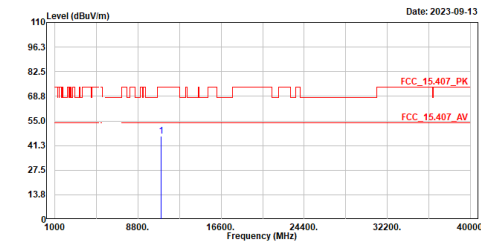


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10983.000	46.64	74.00	-27.36	55.11	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 26 0
TEST BY :Caster

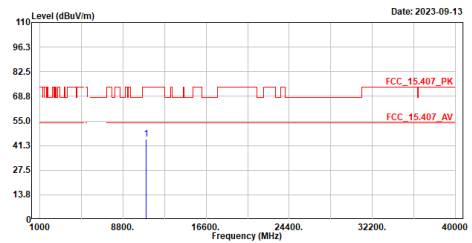


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10983.000	45.01	74.00	-28.99	53.48	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz 52 37
TEST BY :Caster

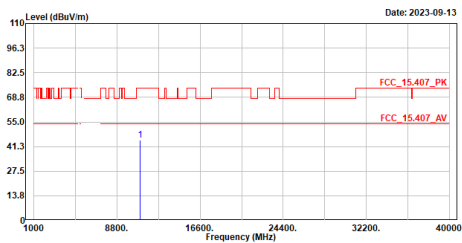

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10985.000	44.98	74.00	-29.02	53.45	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz 52 37
TEST BY :Caster

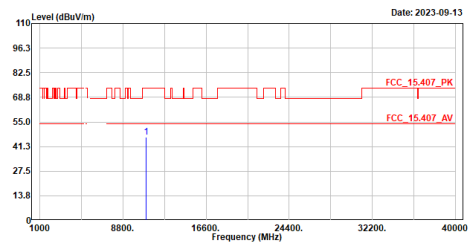

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10985.000	46.69	74.00	-27.31	55.16	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 106 54
TEST BY :Caster

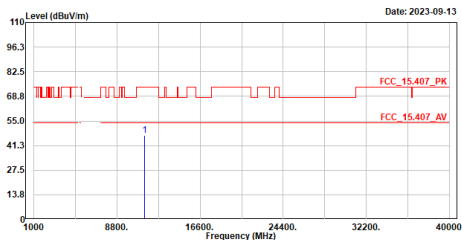

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11411.000	46.92	74.00	-27.08	54.34	-7.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 106 54
TEST BY :Caster

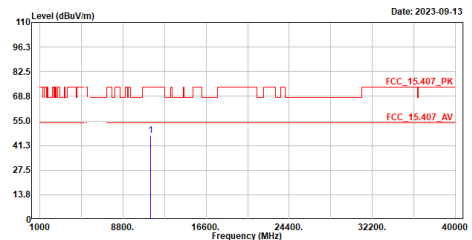

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11411.000	46.94	74.00	-27.06	54.36	-7.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 26 8
TEST BY :Caster

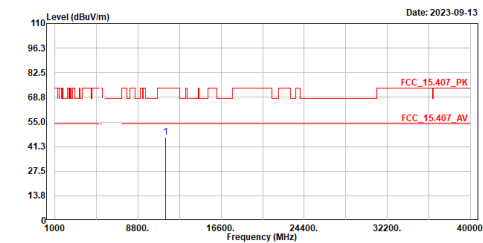


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11417.000	46.29	74.00	-27.71	53.70	-7.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 26 8
TEST BY :Caster

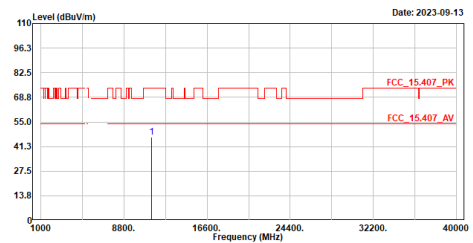


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11417.000	46.67	74.00	-27.33	54.08	-7.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz 52 40
TEST BY :Caster

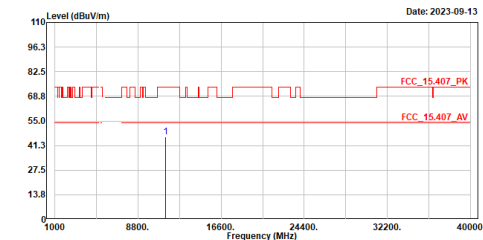


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11415.000	46.07	74.00	-27.93	53.48	-7.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz 52 40
TEST BY :Caster

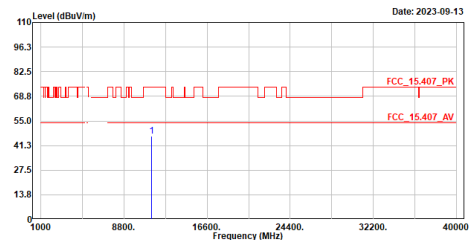


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11415.000	46.44	74.00	-27.56	53.85	-7.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 106 53
TEST BY :Caster

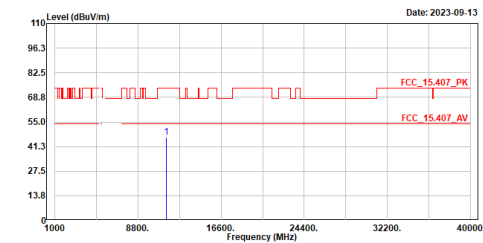

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11479.000	46.37	74.00	-27.63	53.65	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 106 53
TEST BY :Caster

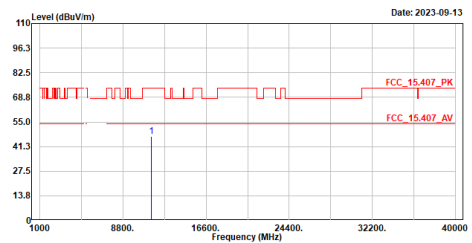

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11479.000	46.98	74.00	-27.02	54.26	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 26 0
TEST BY :Caster

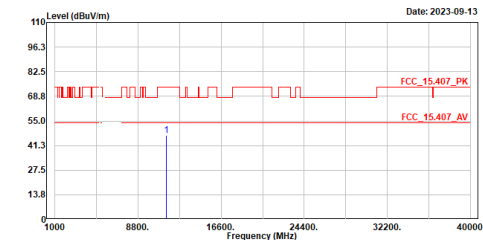

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11473.000	46.71	74.00	-27.29	53.99	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 26 0
TEST BY :Caster

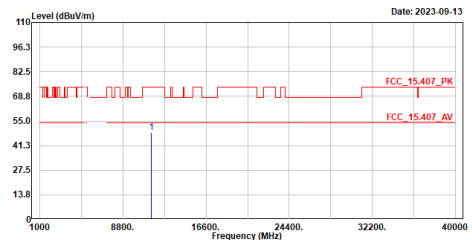

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11473.000	48.50	74.00	-25.50	55.78	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz 52 37
TEST BY :Caster

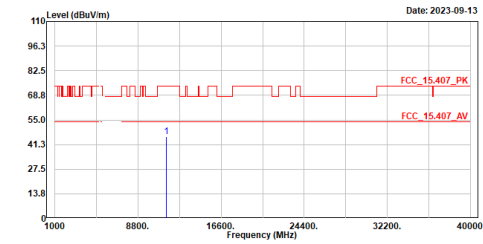

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11475.000	45.62	74.00	-28.38	52.90	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz 52 37
TEST BY :Caster

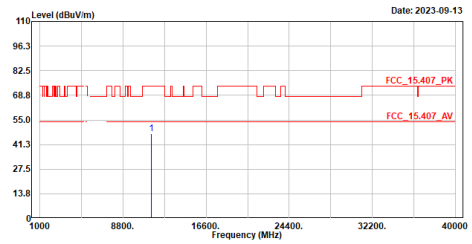

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11475.000	47.43	74.00	-26.57	54.71	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz 242 61
TEST BY :Caster

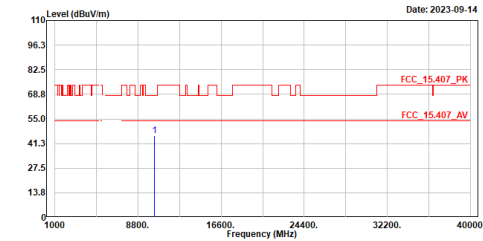

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10361.000	45.77	68.22	-22.45	54.81	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz 242 61
TEST BY :Caster

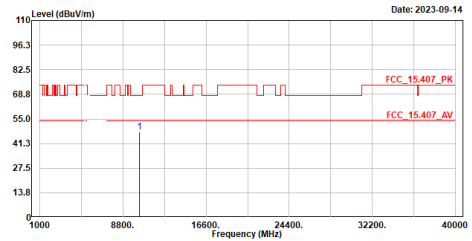

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10361.000	47.53	68.22	-20.69	56.57	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz 242 62
TEST BY :Caster

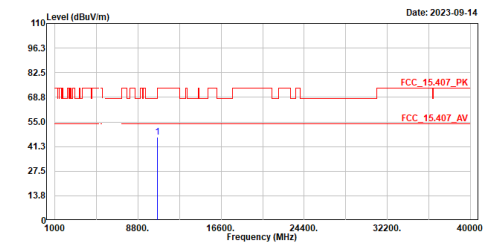

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10639.000	46.50	74.00	-27.50	55.37	-8.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz 242 62
TEST BY :Caster

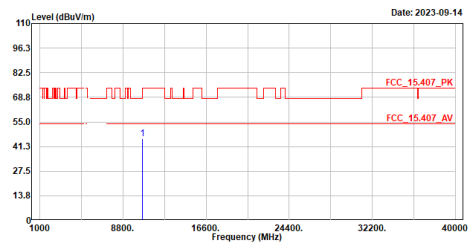

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10639.000	45.54	74.00	-28.46	54.41	-8.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz 242 61
TEST BY :Caster

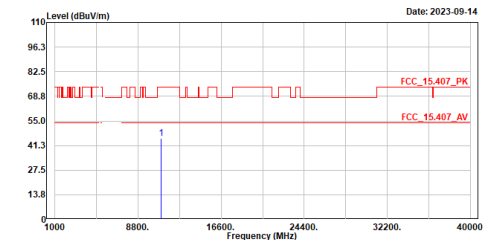

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11001.000	45.19	74.00	-28.81	53.73	-8.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz 242 61
TEST BY :Caster

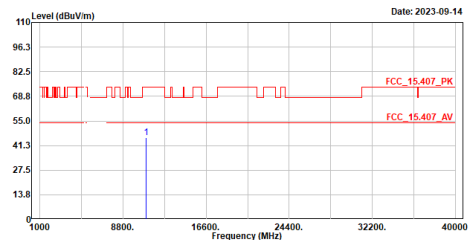

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11001.000	45.85	74.00	-28.15	54.39	-8.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz 242 62
TEST BY :Caster

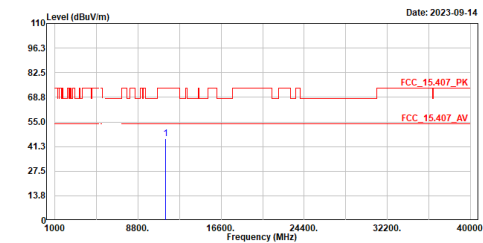


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11359.000	45.78	74.00	-28.22	53.32	-7.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz 242 62
TEST BY :Caster

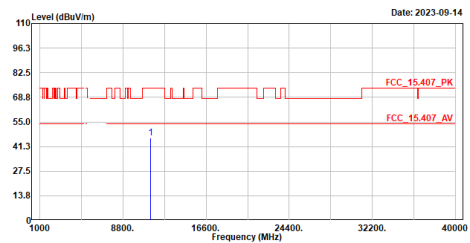


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11359.000	45.97	74.00	-28.03	53.51	-7.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz 242 61
TEST BY :Caster

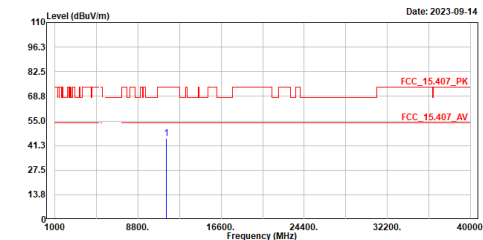


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11491.000	45.33	74.00	-28.67	52.59	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz 242 61
TEST BY :Caster

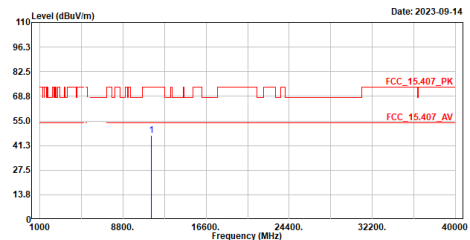


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11491.000	47.00	74.00	-27.00	54.26	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz 484 65
TEST BY :Caster

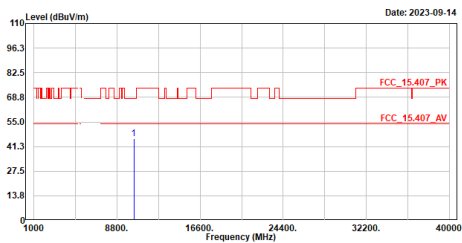

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10379.000	45.49	68.22	-22.73	54.52	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz 484 65
TEST BY :Caster

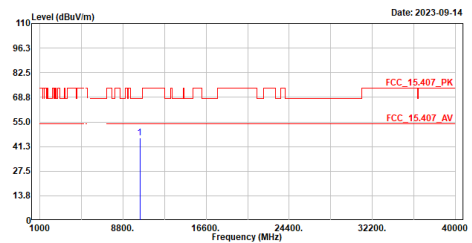

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10379.000	45.88	68.22	-22.34	54.91	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz 484 66
TEST BY :Caster

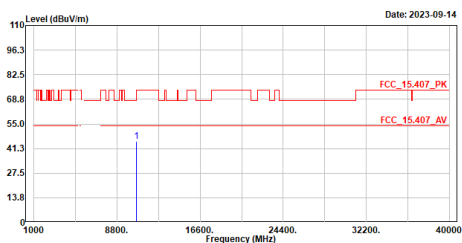

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	45.31	74.00	-28.69	54.21	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz 484 66
TEST BY :Caster

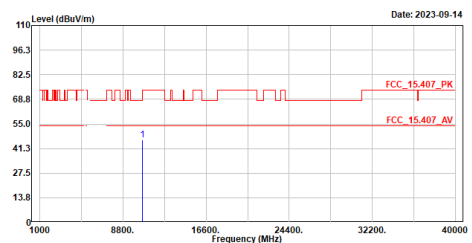

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	45.93	74.00	-28.07	54.83	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz 484 65
TEST BY :Caster

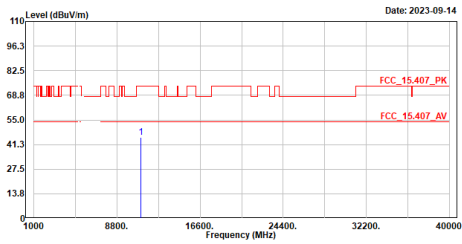


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11019.000	45.10	74.00	-28.90	53.66	-8.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz 484 65
TEST BY :Caster

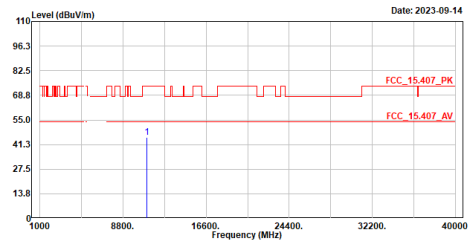


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11019.000	45.26	74.00	-28.74	53.82	-8.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz 484 65
TEST BY :Caster

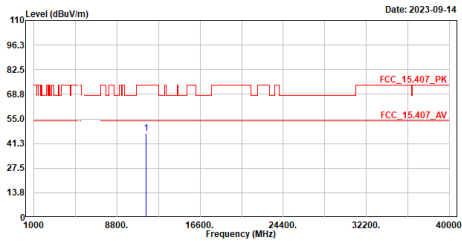


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11509.000	46.00	74.00	-27.20	54.05	-7.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz 484 65
TEST BY :Caster

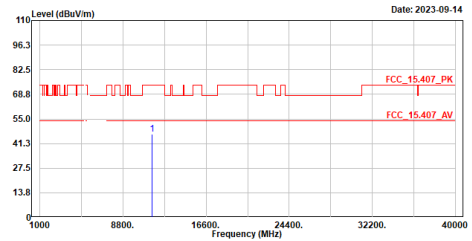


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11509.000	46.41	74.00	-27.59	53.66	-7.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5250MHz 996 67
TEST BY :Sam

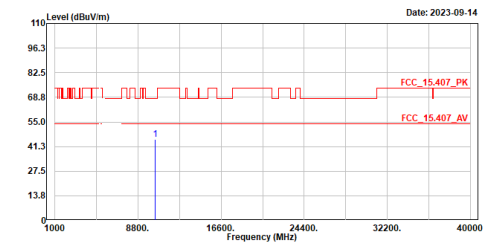


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10428.000	45.29	68.22	-22.93	54.29	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5250MHz 996 67
TEST BY :Sam

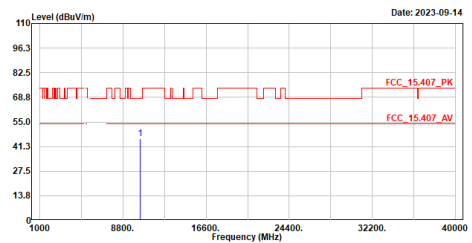


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10428.000	45.70	68.22	-22.52	54.70	-9.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5250MHz 996 567
TEST BY :Sam

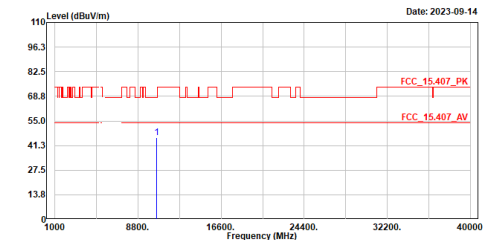


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	45.46	68.22	-22.76	54.39	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5250MHz 996 567
TEST BY :Sam

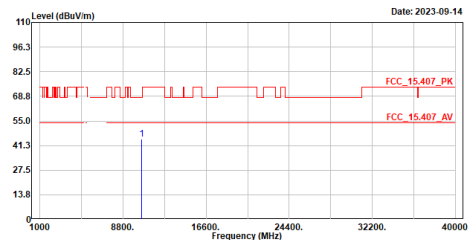


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	44.66	68.22	-23.56	53.59	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5570MHz 996 67
TEST BY :Sam

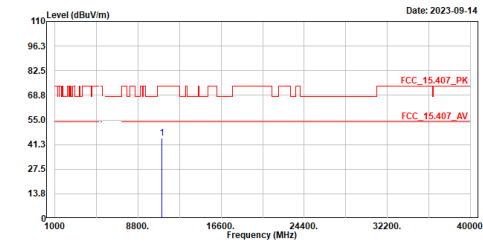


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	44.62	74.00	-29.38	53.04	-8.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5570MHz 996 67
TEST BY :Sam

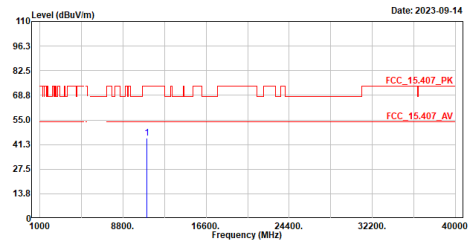


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	44.69	74.00	-29.31	53.11	-8.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax160_5570MHz 996 567
TEST BY :Sam

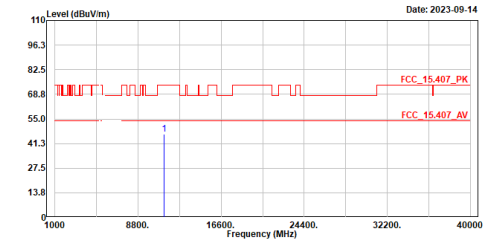


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	46.42	74.00	-27.58	54.15	-7.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax160_5570MHz 996 567
TEST BY :Sam

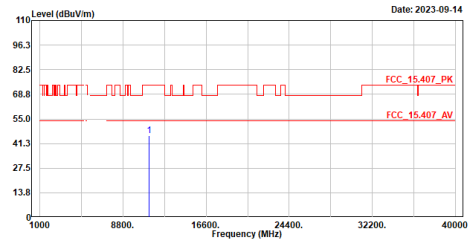

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11220.000	45.69	74.00	-28.31	53.42	-7.73	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


6. Band Edge

6.1. Test Setup

RF Conducted Measurement:

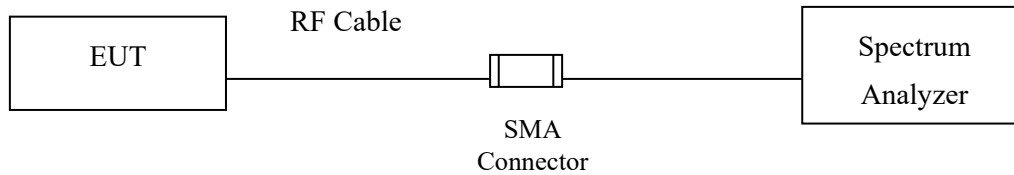

RF Radiated Measurement:

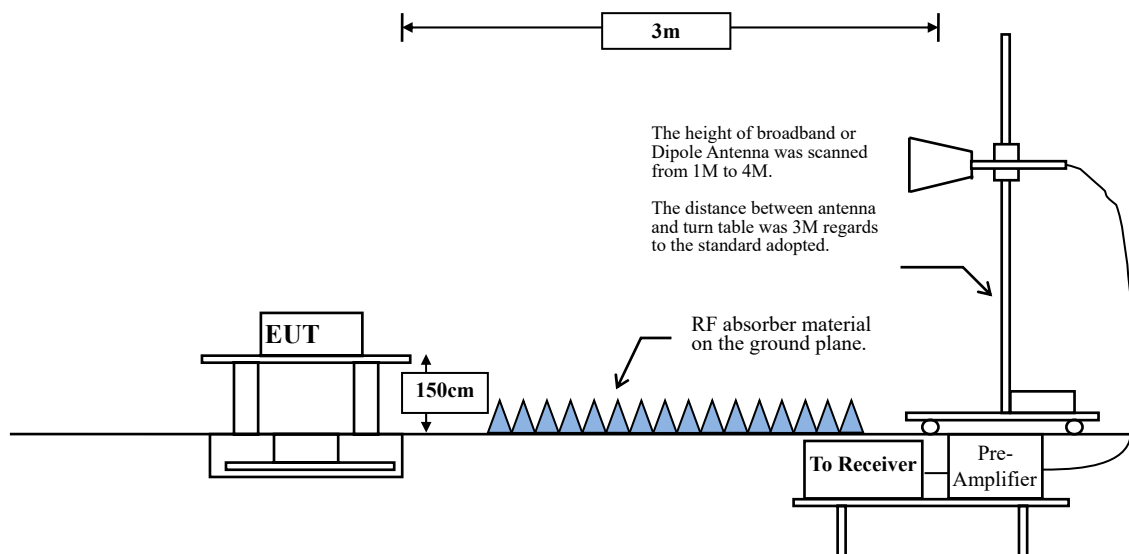

6.2. Limits

The provisions of Section 15.205 of this part apply to intentional radiators operating under this section. Radiated emissions which fall in the restricted bands, as defined in Section 15.205, must also comply with the radiated emission limits specified in Section 15.209:

FCC Part 15 Subpart C Paragraph 15.209 Limits		
Frequency MHz	$\mu\text{V/m @3m}$	$\text{dB}\mu\text{V/m@3m}$
30-88	100	40
88-216	150	43.5
216-960	200	46
Above 960	500	54

Remarks :

1. RF Voltage ($\text{dB}\mu\text{V}$) = $20 \log \text{RF Voltage } (\mu\text{V})$
2. In the Above Table, the tighter limit applies at the band edges.
3. Distance refers to the distance in meters between the measuring instrument antenna and the closed point of any part of the device or system.

- For transmitters operating in the 5.15-5.25 GHz band: All emissions outside of the 5.15-5.35 GHz band shall not exceed an e.i.r.p. of -27 dBm/MHz .
- For transmitters operating in the 5.25-5.35 GHz band: All emissions outside of the 5.15-5.35 GHz band shall not exceed an e.i.r.p. of -27 dBm/MHz .
- For transmitters operating in the 5.47-5.725 GHz band: All emissions outside of the 5.47-5.725 GHz band shall not exceed an e.i.r.p. of -27 dBm/MHz .
- For transmitters operating in the 5.725-5.85 GHz band:
All emissions shall be limited to a level of -27 dBm/MHz at 75 MHz or more above or below the band edge increasing linearly to 10 dBm/MHz at 25 MHz above or below the band edge, and from 25 MHz above or below the band edge increasing linearly to a level of 15.6 dBm/MHz at 5 MHz above or below the band edge, and from 5 MHz above or below the band edge increasing linearly to a level of 27 dBm/MHz at the band edge.
- For transmitters operating in the 5.850-5.895 GHz band:
 - (i) For an indoor access point or subordinate device, all emissions at or above 5.895 GHz shall not exceed an e.i.r.p. of 15 dBm/MHz and shall decrease linearly to an e.i.r.p. of -7 dBm/MHz at or above 5.925 GHz.
 - (ii) For a client device, all emissions at or above 5.895 GHz shall not exceed an e.i.r.p. of -5 dBm/MHz and shall decrease linearly to an e.i.r.p. of -27 dBm/MHz at or above 5.925 GHz.
 - (iii) For a client device or indoor access point or subordinate device, all emissions below 5.725 GHz shall not exceed an e.i.r.p. of -27 dBm/MHz at 5.65 GHz increasing linearly to 10 dBm/MHz at 5.7 GHz, and from 5.7 GHz increasing linearly to a level of 15.6 dBm/MHz at 5.72 GHz, and from 5.72 GHz increasing linearly to a level of 27 dBm/MHz at 5.725 GHz.
- For transmitters operating within the 5.925-7.125 GHz band: Any emissions outside of the 5.925-7.125 GHz band must not exceed an e.i.r.p. of -27 dBm/MHz .

Based on ANSI C63.10-2013 Section 12.7.3 d) provides the conversion formula between field strength and EIRP, if distance is 3m, -27 dBm is equivalent to 68.22 dBuV/m .

6.3. Test Procedure

The EUT is placed on a turn table which is 1.5 meter above ground. The turn table can rotate 360 degrees to determine the position of the maximum emission level. The EUT was positioned such that the distance from antenna to the EUT was 3 meters.

The antenna can move up and down between 1 meter and 4 meters to find out the maximum emission level.

Both horizontal and vertical polarization of the antenna are set on measurement. In order to find the maximum emission, all of the interface cables must be manipulated according to ANSI C63.10:2013 on radiated measurement.

The bandwidth below 1 GHz setting on the field strength meter is 120 kHz, above 1 GHz are 1 MHz.

The EUT was setup to ANSI C63.10, 2013; tested to UNII test procedure of FCC KDB-789033 for compliance to FCC 47CFR Subpart E requirements.

RBW and VBW Parameter setting:

According to KDB 789033 section II.G.5 Procedure for Unwanted Maximum Emissions Measurements above 1000 MHz.

RBW = 1 MHz.

VBW $\geq$ 3 MHz.

According to KDB 789033 section II.G.6 Procedures for Average Unwanted Emissions Measurements above 1000 MHz.

RBW = 1 MHz.

VBW = 10 Hz, when duty cycle $\geq$ 98 %

VBW $\geq$ 1/T, when duty cycle < 98 %

(T refers to the minimum transmission duration over which the transmitter is on and is transmitting at its maximum power control level for the tested mode of operation.)

SISO A

5 GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11a	97.20	2.0800	481	500
802.11ax-20 MHz	98.51	3.9750	252	10
802.11ax-40 MHz	98.51	3.9750	252	10
802.11ax-80 MHz	98.14	3.9600	253	10
802.11ax-160 MHz	98.51	3.9750	252	10
802.11 ax-20 MHz (Partial RU)	97.73	2.5800	388	500
802.11 ax-40 MHz (Partial RU)	98.10	2.5800	388	10
802.11 ax-80 MHz (Partial RU)	97.73	2.5800	388	500
802.11 ax-160 MHz (Partial RU)	97.73	2.5800	388	500

SISO B

5 GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11a	97.18	2.0700	483	500
802.11ax-20 MHz	98.51	3.9750	252	10
802.11ax-40 MHz	98.51	3.9750	252	10
802.11ax-80 MHz	98.51	3.9750	252	10
802.11ax-160 MHz	98.51	3.9600	253	10
802.11 ax-20 MHz (Partial RU)	98.10	2.5800	388	10
802.11 ax-40 MHz (Partial RU)	97.73	2.5800	388	500
802.11 ax-80 MHz (Partial RU)	98.10	2.5800	388	10
802.11 ax-160 MHz (Partial RU)	98.11	2.5900	386	10

MIMO

5 GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11ax-20 MHz	98.51	3.9700	252	10
802.11ax-40 MHz	98.51	3.9700	252	10
802.11ax-80 MHz	98.51	3.9750	252	10
802.11ax-160 MHz	97.63	2.3040	434	500
802.11 ax-20 MHz (Partial RU)	98.11	2.5900	386	10
802.11 ax-40 MHz (Partial RU)	98.11	2.5900	386	10
802.11 ax-80 MHz (Partial RU)	97.74	2.5900	386	500
802.11 ax-160 MHz (Partial RU)	98.11	2.6000	385	10

Note: Duty Cycle Refer to Section 8.

6.4. Test Result of Band Edge SISO A

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

Level (dBuV/m)

Date: 2023-09-02

Frequency (MHz)

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5148.500	41.04	54.00	-12.96	26.26	14.78	Average
2	5183.600	82.59	-----	-----	67.78	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Level (dBuV/m)

Date: 2023-09-02

Frequency (MHz)

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5146.400	53.21	74.00	-20.79	38.44	14.77	Peak
2	5183.900	92.98	-----	-----	78.17	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
TEST BY :Caster

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
TEST BY :Caster

Level (dBuV/m)

Date: 2023-09-02

Frequency (MHz)

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5149.700	41.89	54.00	-12.11	27.11	14.78	Average
2	5183.000	87.75	-----	-----	72.94	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Level (dBuV/m)


Date: 2023-09-02

Frequency (MHz)

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5138.600	53.88	74.00	-20.12	39.11	14.77	Peak
2	5183.900	98.14	-----	-----	83.33	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Caster

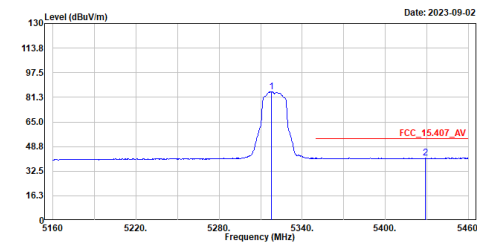

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5317.800	84.93	-----	-----	78.06	14.87	Average
2	5429.100	41.10	54.00	-12.90	26.24	14.86	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Caster

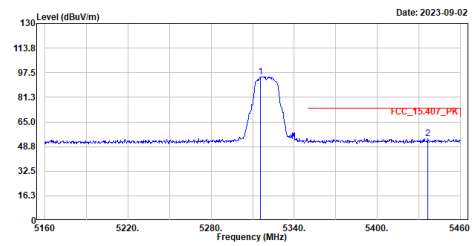

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5315.700	94.92	-----	-----	80.05	14.87	Peak
2	5436.600	53.93	74.00	-20.07	39.03	14.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5320MHz
TEST BY :Caster

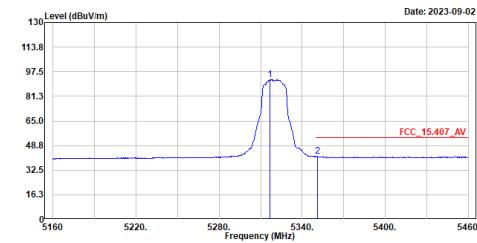

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.900	92.20	-----	-----	77.32	14.88	Average
2	5351.100	41.58	54.00	-12.42	26.71	14.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5320MHz
TEST BY :Caster

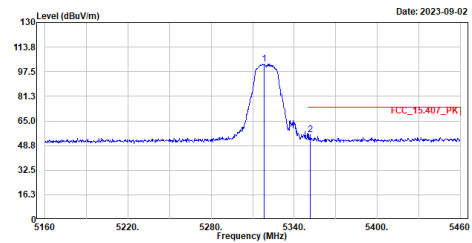

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.100	102.67	-----	-----	87.80	14.87	Peak
2	5351.400	55.71	74.00	-18.29	40.84	14.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Caster

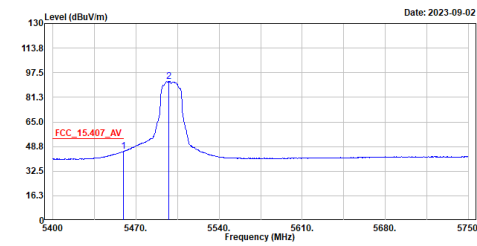

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.500	45.65	54.00	-8.35	30.63	15.02	Average
2	5497.650	91.67	-----	-----	76.43	15.24	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Caster

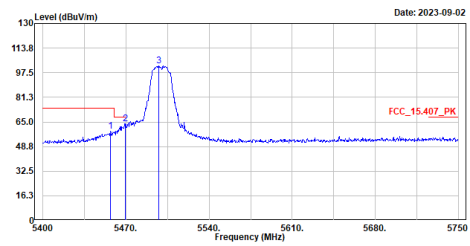

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5456.700	58.72	74.00	-15.28	43.73	14.99	Peak
2	5469.650	63.72	68.22	-4.50	48.65	15.07	Peak
3	5497.650	101.84	-----	-----	86.60	15.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Caster

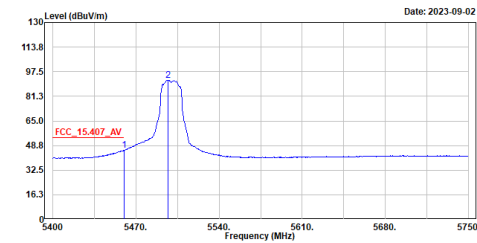

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	45.64	54.00	-8.36	30.62	15.02	Average
2	5497.300	91.84	-----	-----	76.60	15.24	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Caster

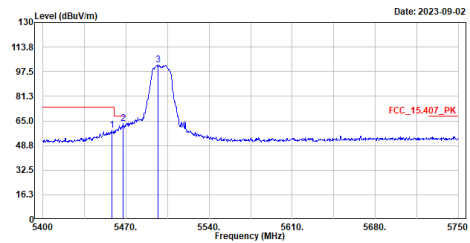

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5458.100	58.66	74.00	-15.34	43.67	14.99	Peak
2	5467.550	63.26	68.22	-4.96	48.20	15.06	Peak
3	5496.950	101.80	-----	-----	86.56	15.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5700MHz
TEST BY :Caster

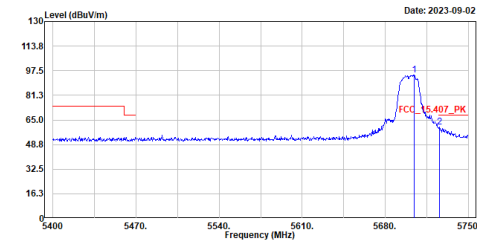

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5704.150	94.50	-----	-----	77.95	16.55	Peak
2	5725.850	60.17	68.22	-8.05	43.59	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5700MHz
TEST BY :Caster

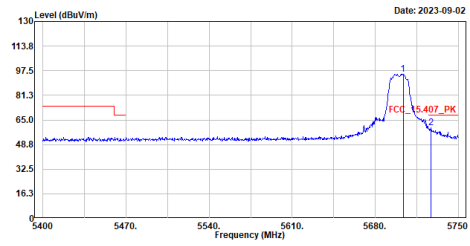

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5703.450	95.23	-----	-----	78.68	16.55	Peak
2	5726.900	59.72	68.22	-8.50	43.14	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Caster

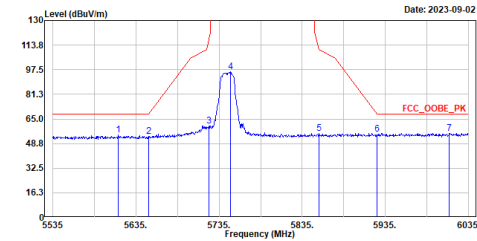

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5614.000	54.52	68.22	-13.70	38.73	15.79	Peak
2	5650.000	53.55	68.23	-14.68	37.48	16.07	Peak
3	5722.500	60.53	116.50	-55.97	43.95	16.58	Peak
4	5749.000	95.98	-----	-----	79.36	16.62	Peak
5	5855.500	55.57	110.66	-55.09	38.87	16.70	Peak
6	5925.000	54.82	68.23	-13.41	38.12	16.70	Peak
7	6012.000	55.57	68.22	-12.65	38.93	16.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Caster

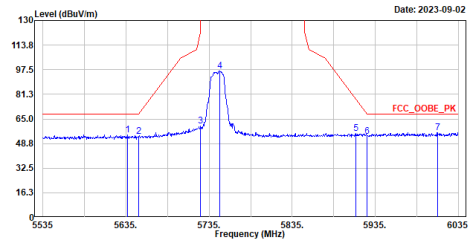

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5637.000	54.63	68.22	-13.59	38.67	15.96	Peak
2	5650.000	53.42	68.23	-14.81	37.35	16.07	Peak
3	5725.000	60.39	122.20	-61.81	43.81	16.58	Peak
4	5748.000	96.53	-----	-----	79.91	16.62	Peak
5	5912.000	55.56	77.84	-22.28	38.86	16.70	Peak
6	5925.000	53.60	68.23	-14.63	36.90	16.70	Peak
7	6010.500	56.13	68.22	-12.09	39.51	16.62	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
TEST BY :Caster

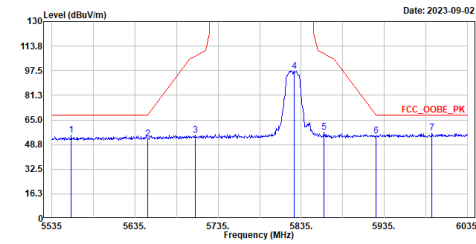


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB	
1	5558.500	54.76	68.22	-13.46	39.28	15.48	Peak
2	5650.000	52.56	68.23	-15.67	36.49	16.07	Peak
3	5707.500	54.88	107.30	-52.42	38.31	16.57	Peak
4	5826.500	97.35	-----	-----	80.67	16.68	Peak
5	5862.500	56.73	108.70	-51.97	40.03	16.70	Peak
6	5925.000	54.25	68.23	-13.98	37.55	16.70	Peak
7	5992.500	56.54	68.22	-11.68	39.95	16.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
TEST BY :Caster

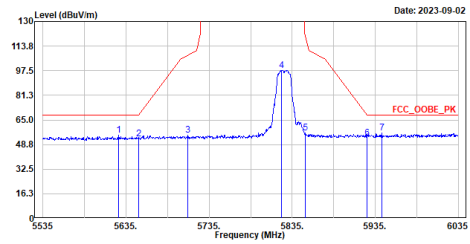


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB	
1	5626.000	55.03	68.22	-13.19	39.15	15.88	Peak
2	5650.000	52.55	68.23	-15.68	36.48	16.07	Peak
3	5709.000	54.84	107.72	-52.88	38.27	16.57	Peak
4	5822.500	97.86	-----	-----	81.18	16.68	Peak
5	5850.500	56.30	121.06	-64.76	39.60	16.70	Peak
6	5925.000	53.22	68.23	-15.01	36.52	16.70	Peak
7	5943.000	56.19	68.22	-12.03	39.50	16.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Caster

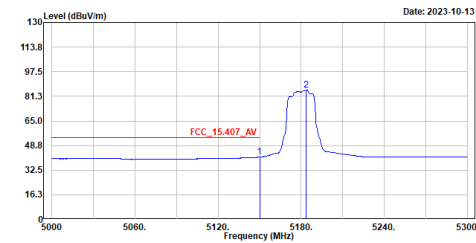


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB	
1	5150.000	41.15	54.00	-12.85	26.37	14.78	Average
2	5183.600	85.32	-----	-----	70.51	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Caster

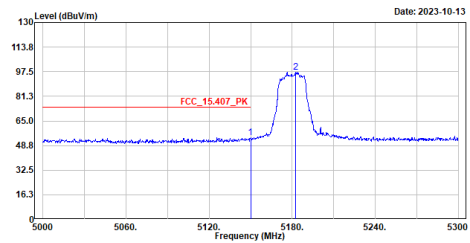


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB	
1	5150.000	53.92	74.00	-20.08	39.14	14.78	Peak
2	5182.700	97.34	-----	-----	82.53	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

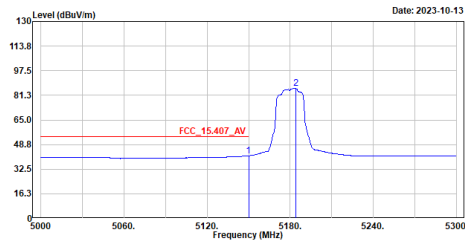


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	41.31	54.00	-12.69	26.53	14.78	Average
2	5183.900	85.99	-----	-----	71.18	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

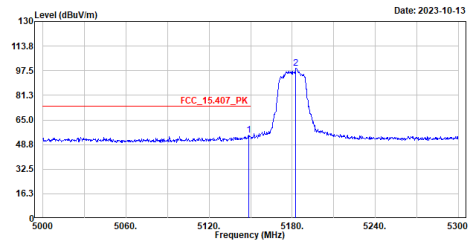


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5148.500	54.72	74.00	-19.28	39.94	14.78	Peak
2	5182.700	98.95	-----	-----	84.14	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Caster

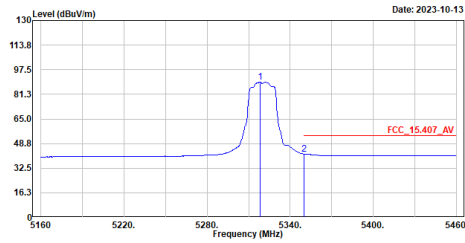


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.100	89.11	-----	-----	74.24	14.87	Average
2	5350.200	41.87	54.00	-12.13	27.00	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Caster

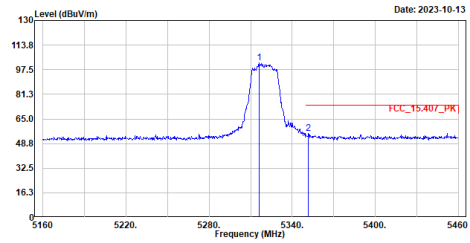


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.000	101.86	-----	-----	86.99	14.87	Peak
2	5351.700	55.59	74.00	-18.41	40.72	14.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

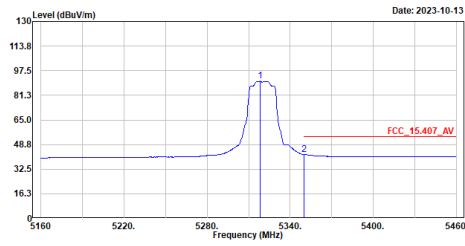


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.400	90.53	-----	-----	75.66	14.87	Average
2	5350.200	42.22	54.00	-11.78	27.35	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

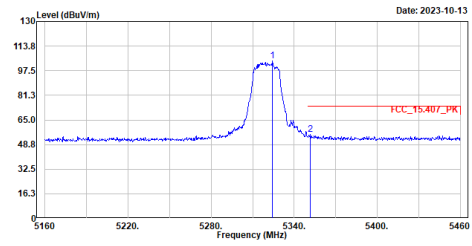


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5324.400	103.97	-----	-----	89.08	14.89	Peak
2	5351.700	55.23	74.00	-18.77	40.36	14.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

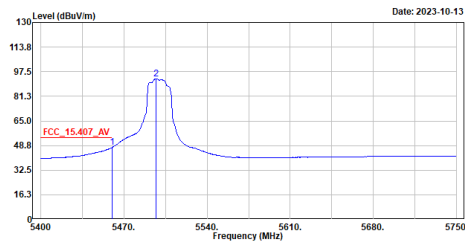


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	47.41	54.00	-6.59	32.39	15.02	Average
2	5496.950	92.57	-----	-----	77.33	15.24	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

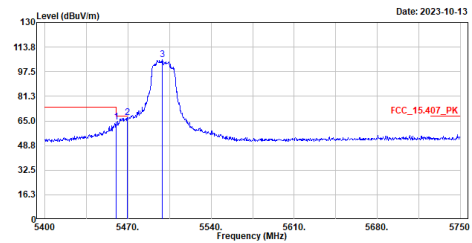


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	64.41	74.00	-9.59	49.39	15.02	Peak
2	5469.650	67.40	68.22	-0.82	52.33	15.07	Peak
3	5499.050	105.30	-----	-----	90.05	15.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

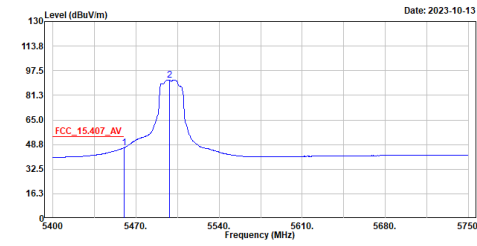

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	46.61	54.00	-7.39	31.59	15.02	Average
2	5498.000	91.27	-----	-----	76.03	15.24	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

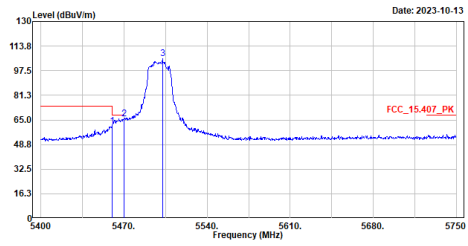

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	61.05	74.00	-12.95	46.03	15.02	Peak
2	5470.000	65.92	68.22	-2.30	50.85	15.07	Peak
3	5502.550	105.39	-----	-----	90.12	15.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Caster

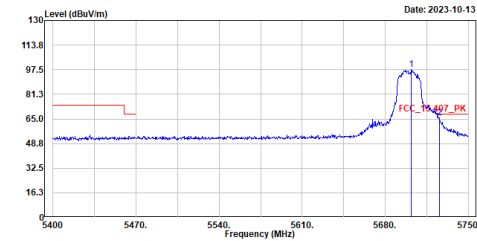

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5702.050	97.55	-----	-----	81.01	16.54	Peak
2	5725.500	65.59	68.22	-2.63	49.01	16.58	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Caster

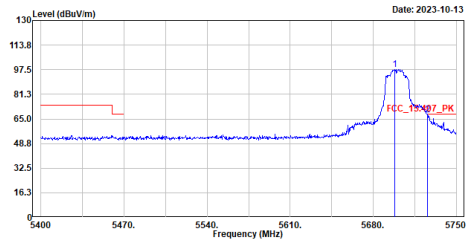


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5698.200	97.63	-----	-----	81.09	16.54	Peak
2	5725.500	67.48	68.22	-0.74	50.90	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

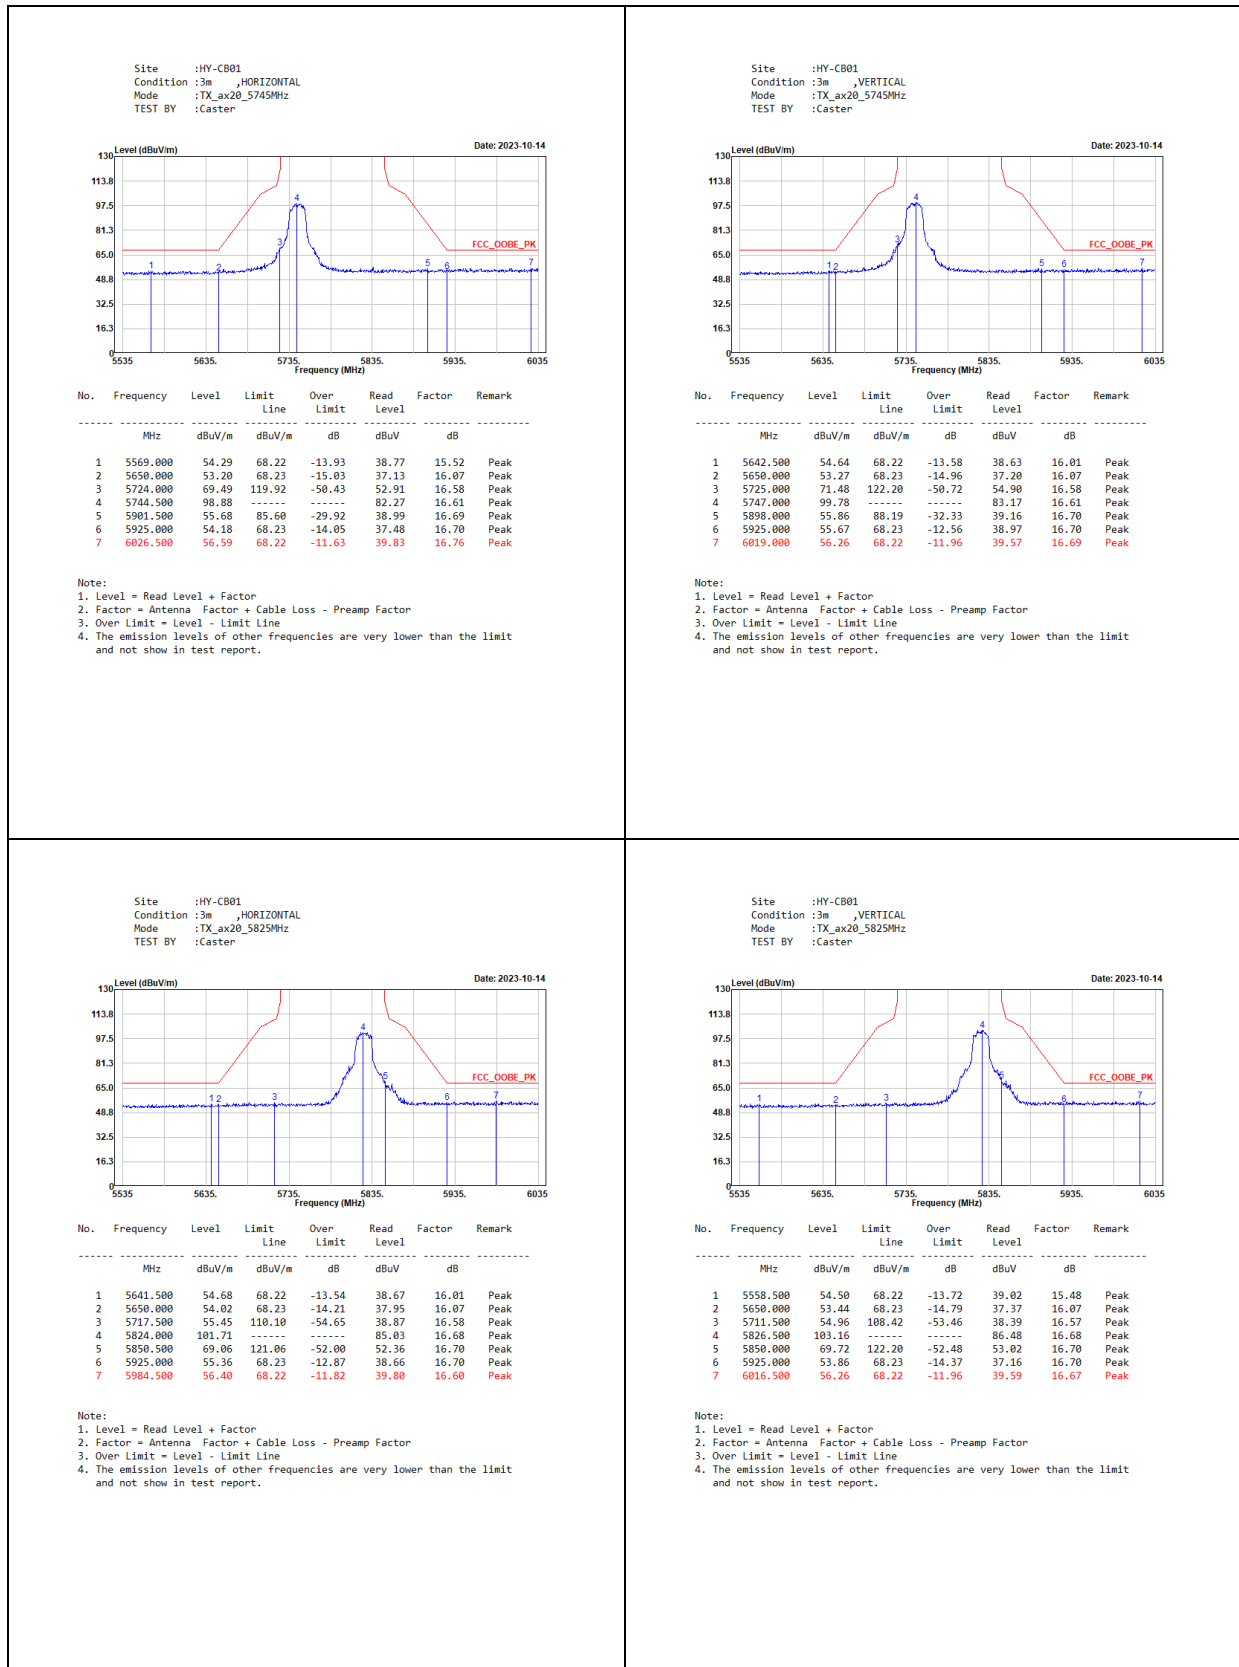


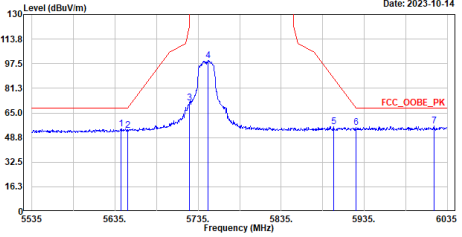Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_ax20_5745MHz TEST BY :Caster Date: 2023-10-14							
							
No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5642.500	54.64	68.22	-13.58	38.63	16.01	Peak
2	5650.000	53.27	68.23	-14.96	37.20	16.07	Peak
3	5725.000	71.48	122.20	-50.72	54.90	16.58	Peak
4	5747.000	99.78	-----	-----	83.17	16.61	Peak
5	5898.000	55.86	88.19	-32.33	39.16	16.70	Peak
6	5925.000	55.67	68.23	-12.56	38.97	16.70	Peak
7	6019.000	56.26	68.22	-11.96	39.57	16.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

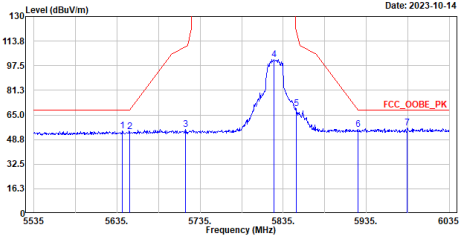
Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_ax20_5825MHz TEST BY :Caster Date: 2023-10-14							
							
No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5641.500	54.68	68.22	-13.54	38.67	16.01	Peak
2	5650.000	54.02	68.23	-14.21	37.95	16.07	Peak
3	5717.500	55.45	110.10	-54.65	38.87	16.58	Peak
4	5824.000	101.71	-----	-----	85.03	16.68	Peak
5	5850.500	69.06	121.06	-52.00	52.36	16.70	Peak
6	5925.000	55.36	68.23	-12.87	38.66	16.70	Peak
7	5984.500	56.40	68.22	-11.82	39.80	16.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

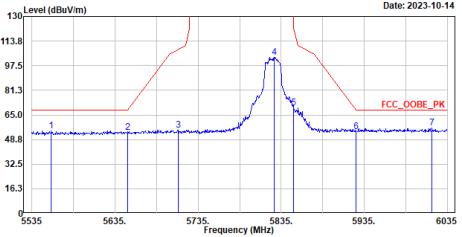Site :HY-CB01 Condition :3m ,VERTICAL Mode :TX_ax20_5825MHz TEST BY :Caster Date: 2023-10-14							
							
No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5558.500	54.50	68.22	-13.72	39.02	15.48	Peak
2	5650.000	53.44	68.23	-14.79	37.37	16.07	Peak
3	5711.500	54.96	108.42	-53.46	38.39	16.57	Peak
4	5826.500	103.16	-----	-----	86.48	16.68	Peak
5	5850.000	69.72	122.20	-52.48	53.02	16.70	Peak
6	5925.000	53.86	68.23	-14.37	37.16	16.70	Peak
7	6016.500	56.26	68.22	-11.96	39.59	16.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

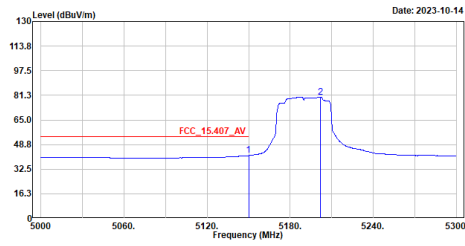

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

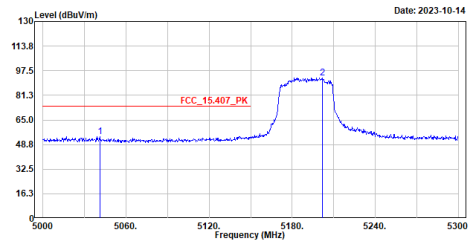

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

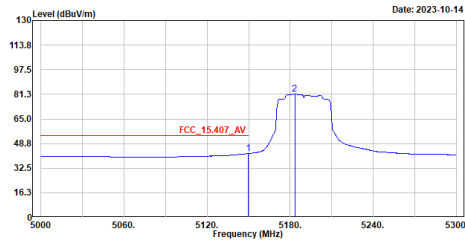

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

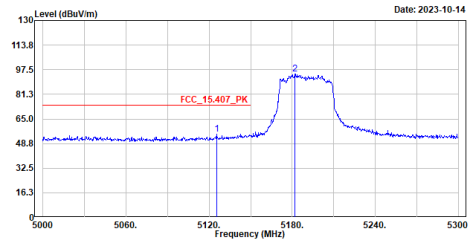


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

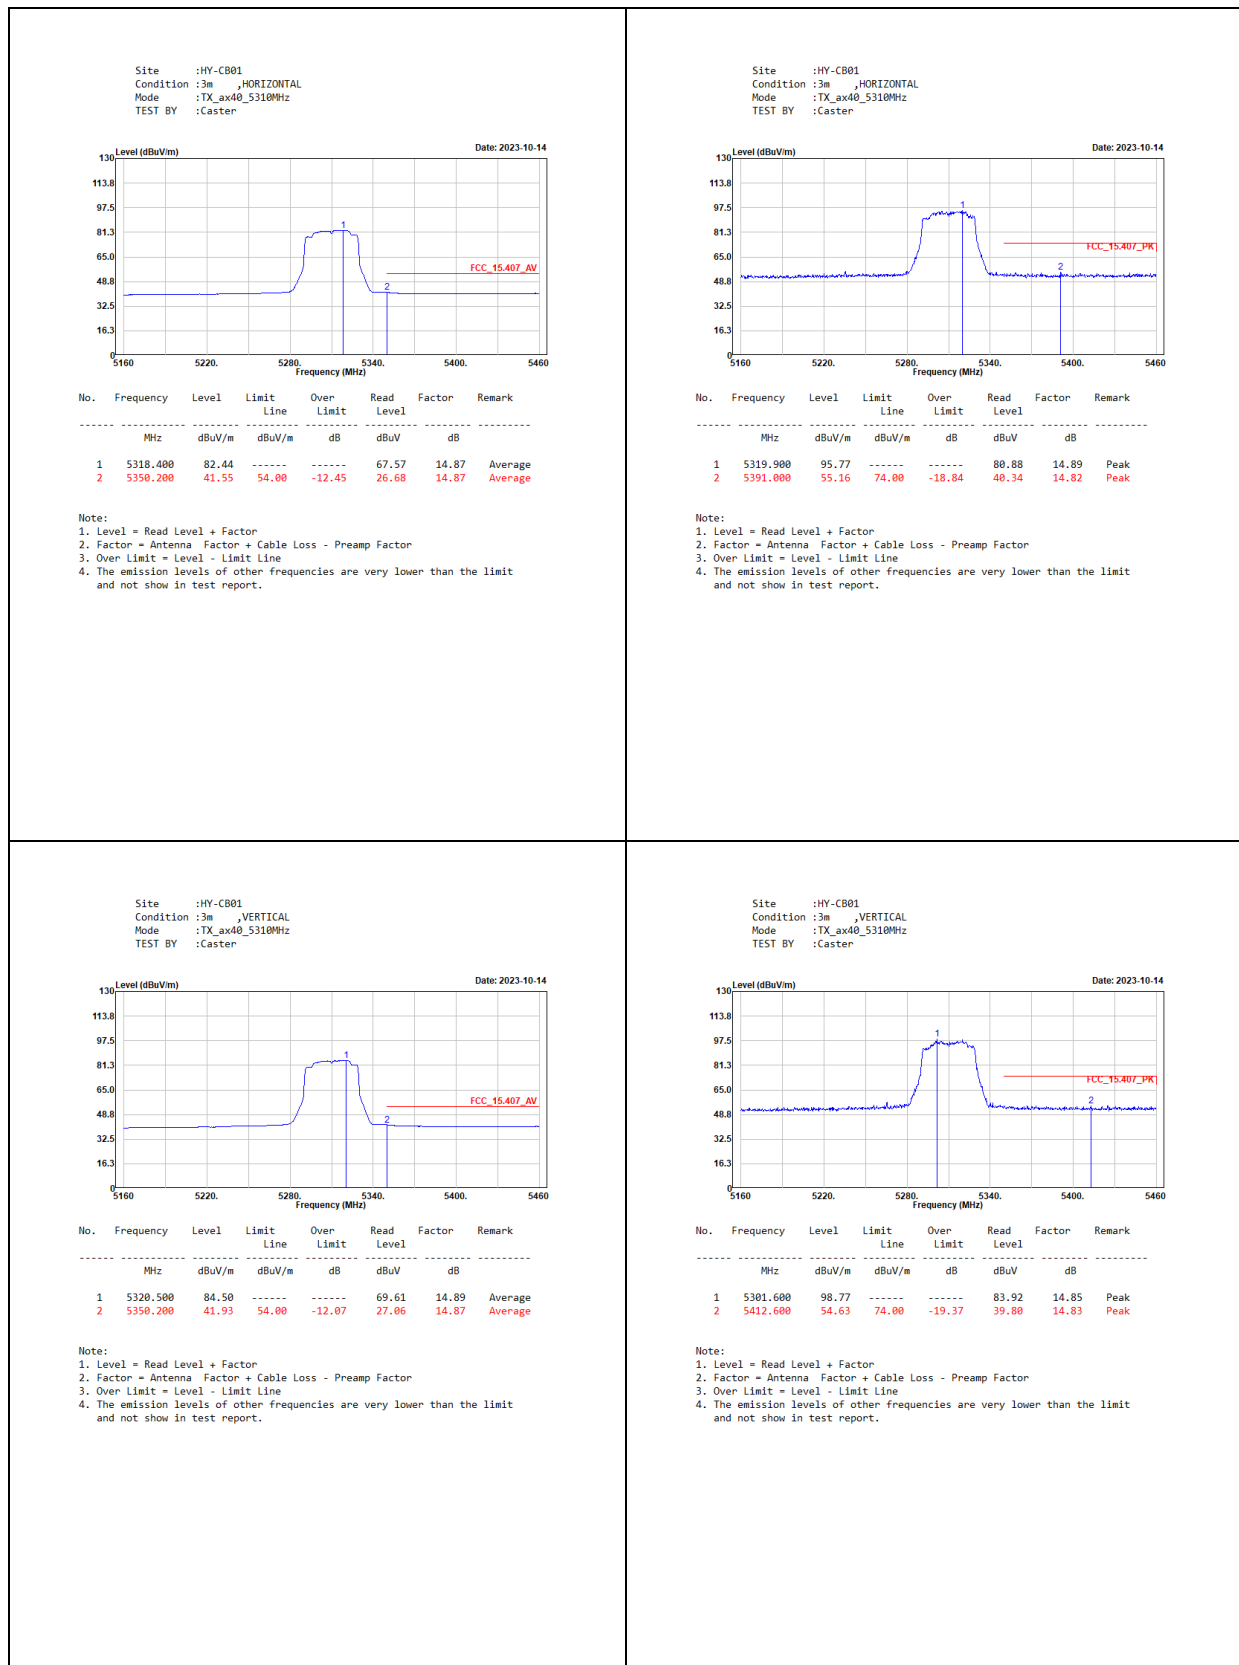


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

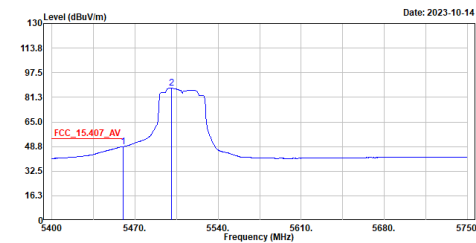

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	48.63	54.00	-5.37	33.61	15.02	Average
2	5500.000	87.27	-----	-----	72.02	15.25	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

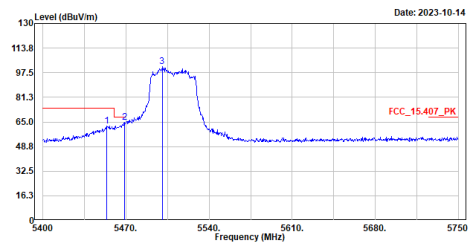

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5453.900	62.38	74.00	-11.62	47.48	14.98	Peak
2	5468.600	64.98	68.22	-3.24	49.92	15.06	Peak
3	5500.450	101.43	-----	-----	86.18	15.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

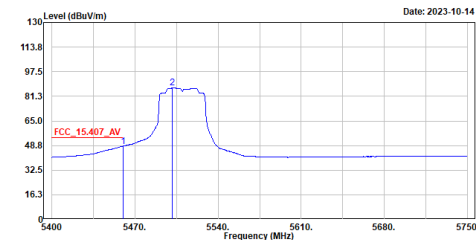

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.850	48.28	54.00	-5.72	33.26	15.02	Average
2	5501.500	86.66	-----	-----	71.40	15.26	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

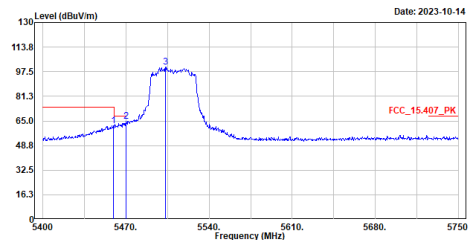

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.500	61.97	74.00	-12.03	46.95	15.02	Peak
2	5470.000	64.96	68.22	-3.26	49.89	15.07	Peak
3	5503.250	100.62	-----	-----	85.35	15.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

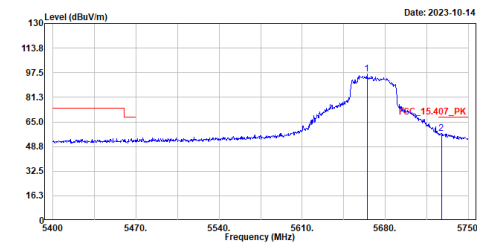

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5664.600	96.63	68.22	-10.65	88.38	16.25	Peak
2	5727.250	57.57	68.22	-10.65	48.99	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

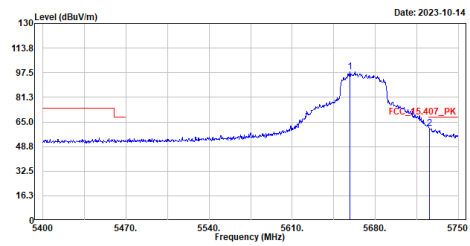

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5658.650	97.92	68.22	-7.60	81.75	16.17	Peak
2	5725.500	60.62	68.22	-7.60	44.04	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz
TEST BY :Caster

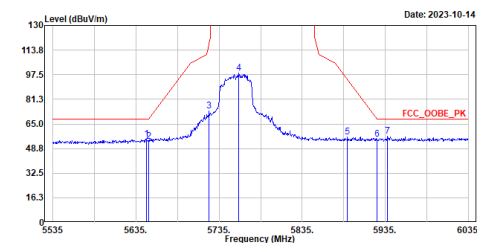

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5647.500	54.93	68.22	-13.29	38.88	16.05	Peak
2	5650.000	53.66	68.23	-14.57	37.59	16.07	Peak
3	5723.000	73.57	117.64	-44.07	56.99	16.58	Peak
4	5759.000	98.42	-----	-----	81.00	16.62	Peak
5	5889.500	56.00	94.48	-37.88	39.90	16.70	Peak
6	5925.000	54.97	68.23	-13.26	38.27	16.70	Peak
7	5938.000	56.00	68.22	-11.42	40.11	16.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz
TEST BY :Caster

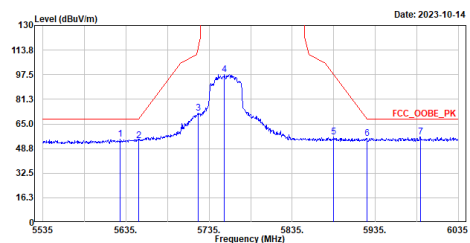


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5628.000	54.94	68.22	-13.28	39.04	15.90	Peak
2	5650.000	53.98	68.23	-14.25	37.91	16.07	Peak
3	5721.500	72.28	114.22	-41.94	55.70	16.58	Peak
4	5753.500	97.69	-----	-----	81.06	16.63	Peak
5	5885.000	56.59	97.81	-41.22	39.89	16.70	Peak
6	5925.000	55.32	68.23	-12.91	38.62	16.70	Peak
7	5989.500	56.22	68.22	-12.00	39.63	16.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01 Condition :3m ,HORIZONTAL Mode :TX_ax40_5795MHz TEST BY :Caster Level (dBuV/m) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 113.8 97.5 81.3 65.0 48.8 32.5 16.3 0 5535 5635 5735 5835 5935 6035 Frequency (MHz) 130 1
--

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz_Band1
TEST BY :Caster

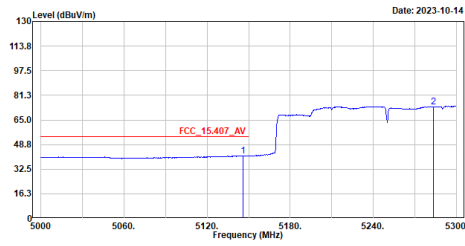


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5145.800	41.39	54.00	-12.61	26.62	14.77	Average
2	5283.500	73.78	-----	-----	58.97	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz_Band1
TEST BY :Caster

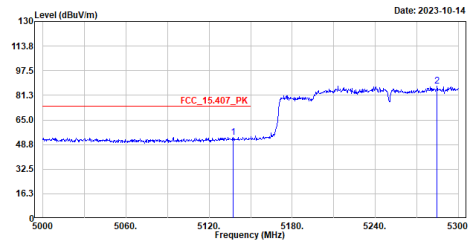


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5137.400	53.62	74.00	-20.38	38.85	14.77	Peak
2	5284.700	87.30	-----	-----	72.49	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5250MHz_Band2
TEST BY :Caster

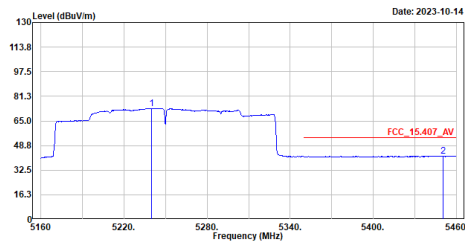


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5239.800	73.28	-----	-----	58.51	14.77	Average
2	5450.400	41.84	54.00	-12.16	26.89	14.95	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5250MHz_Band2
TEST BY :Caster

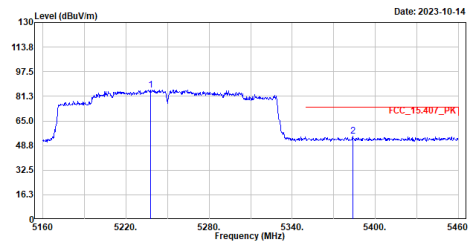


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5238.000	85.53	-----	-----	70.76	14.77	Peak
2	5383.800	54.82	74.00	-19.18	39.99	14.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz_Band2
TEST BY :Caster

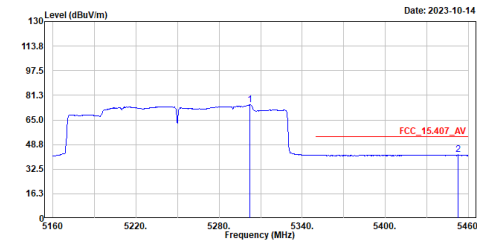


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5302.200	74.88	-----	-----	60.03	14.85	Average
2	5452.800	41.95	54.00	-12.05	26.99	14.96	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5250MHz_Band2
TEST BY :Caster

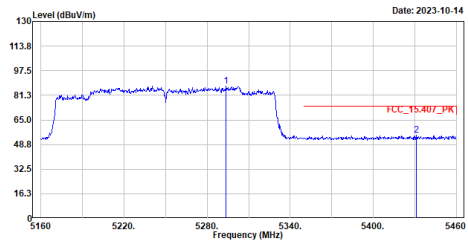


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5293.800	87.46	-----	-----	72.63	14.83	Peak
2	5431.200	54.97	74.00	-19.03	40.09	14.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5570MHz
TEST BY :Caster

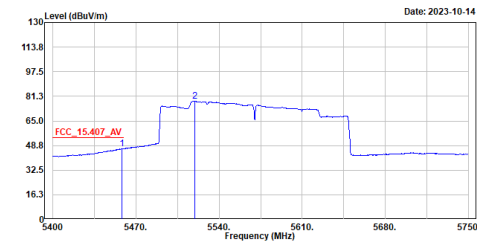


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5458.450	46.68	54.00	-7.32	31.68	15.00	Average
2	5519.700	78.01	-----	-----	62.67	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_axi60_5570MHz
TEST BY :Caster

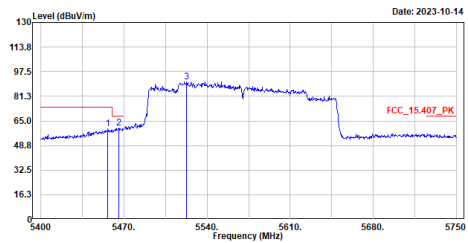


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5456.350	59.91	74.00	-14.09	44.92	14.99	Peak
2	5465.450	60.11	68.22	-8.11	45.07	15.04	Peak
3	5522.850	90.72	-----	-----	75.37	15.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5570MHz
TEST BY :Caster

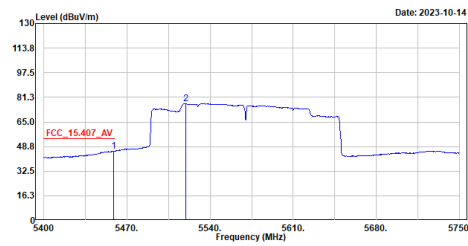


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5458.800	45.86	54.00	-8.14	30.85	15.01	Average
2	5519.700	77.14	-----	-----	61.80	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_axi60_5570MHz
TEST BY :Caster

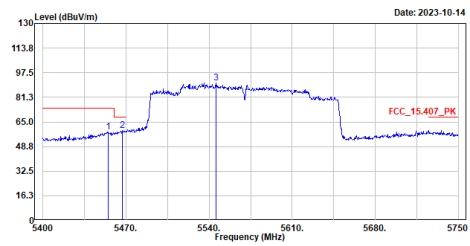


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5455.300	58.52	74.00	-15.48	43.54	14.98	Peak
2	5467.200	59.38	68.22	-8.84	44.32	15.06	Peak
3	5545.600	90.82	-----	-----	75.39	15.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

SISO B

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

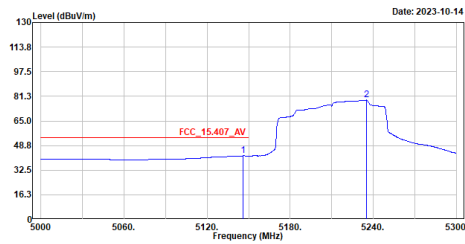


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5146.100	41.99	54.00	-12.01	27.22	14.77	Average
2	5234.900	78.74	-----	-----	63.97	14.77	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

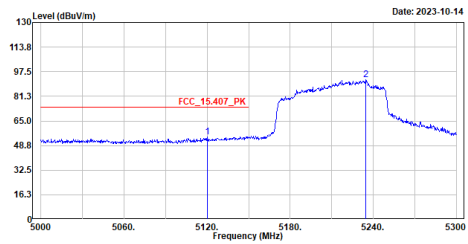


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5120.000	54.46	74.00	-19.54	39.72	14.74	Peak
2	5234.600	92.19	-----	-----	77.42	14.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

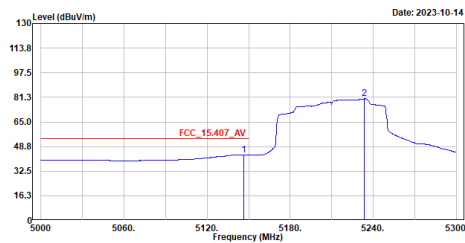


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5146.700	43.30	54.00	-10.70	28.53	14.77	Average
2	5233.400	80.23	-----	-----	65.46	14.77	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

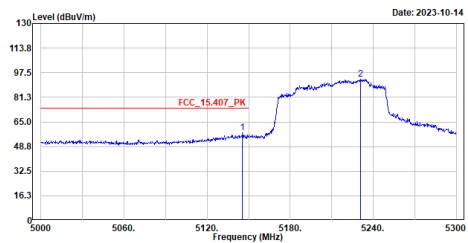


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5145.500	57.72	74.00	-16.28	42.95	14.77	Peak
2	5230.700	93.04	-----	-----	78.26	14.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

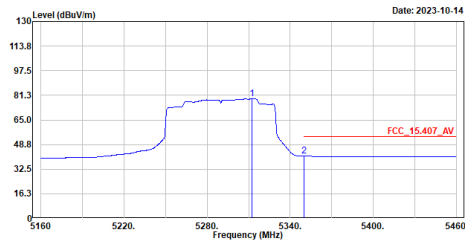


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5312.400	78.84	-----	-----	63.97	14.87	Average
2	5350.200	41.22	54.00	-12.78	26.35	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

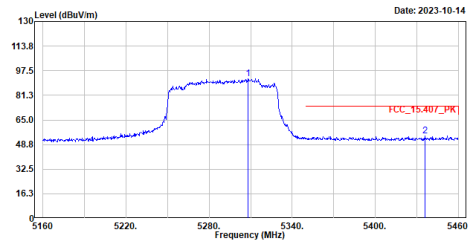


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5308.200	92.32	-----	-----	77.46	14.86	Peak
2	5435.700	54.23	74.00	-19.77	39.33	14.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

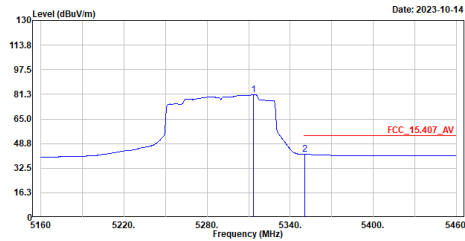


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5313.300	80.81	-----	-----	65.95	14.86	Average
2	5350.800	41.75	54.00	-12.25	26.88	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

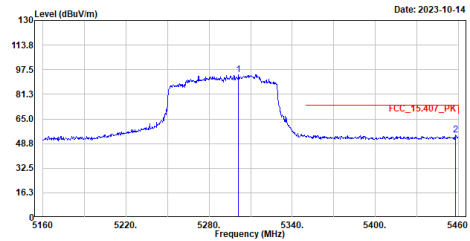


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	5301.300	94.06	-----	-----	79.21	14.85	Peak
2	5457.900	54.36	74.00	-19.64	39.37	14.99	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

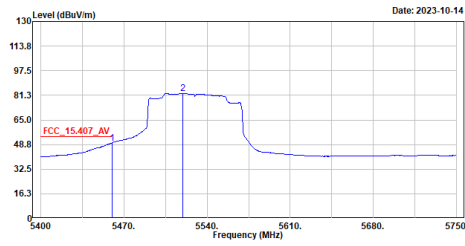


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

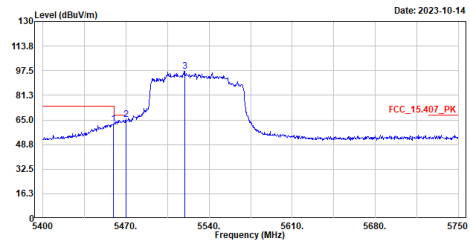


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

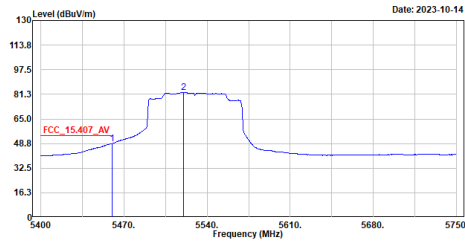


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

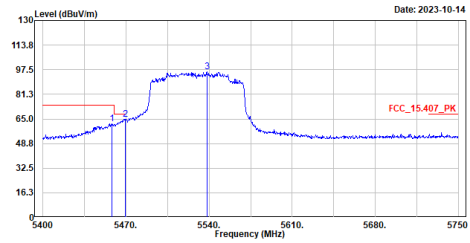


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

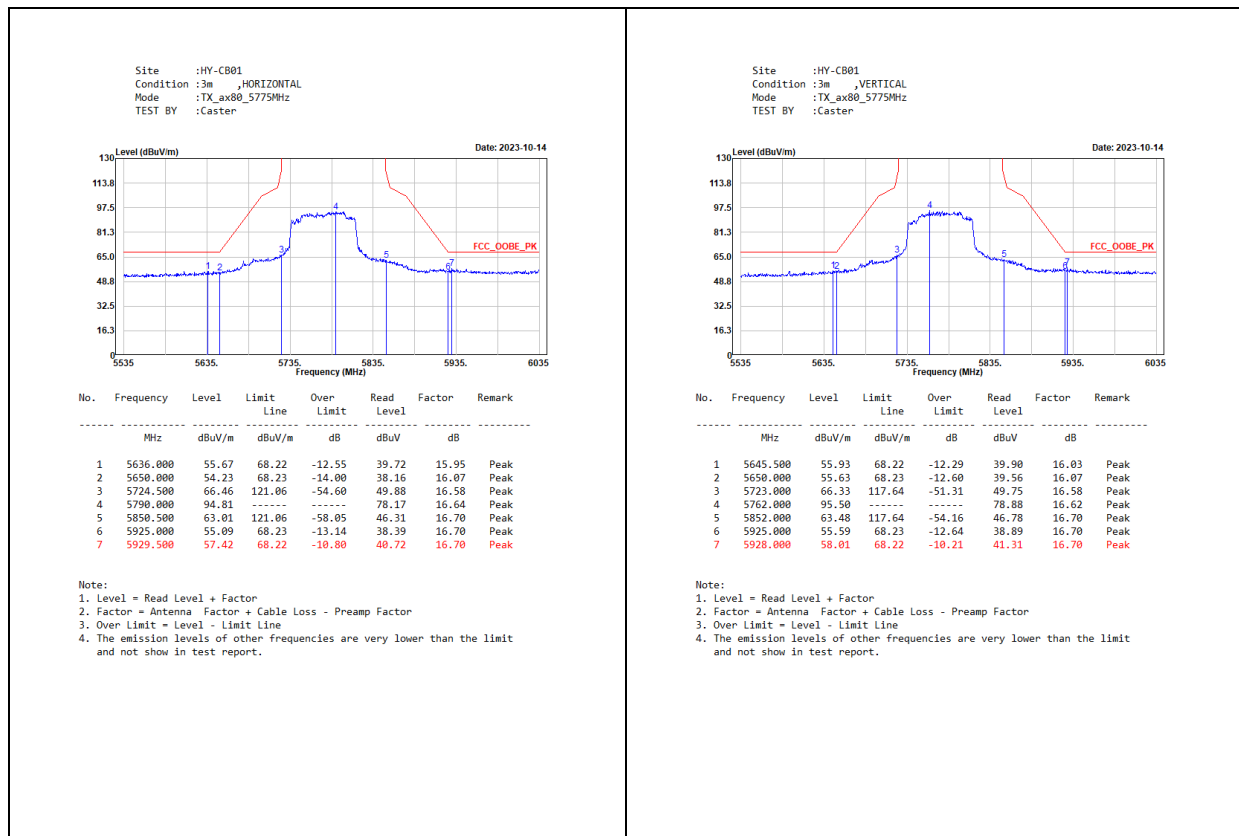

MIMO

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Caster

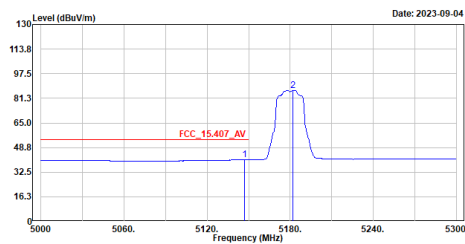


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5147.000	40.64	54.00	-13.36	25.86	14.78	Average
2	5182.100	86.28	-----	-----	71.47	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Caster

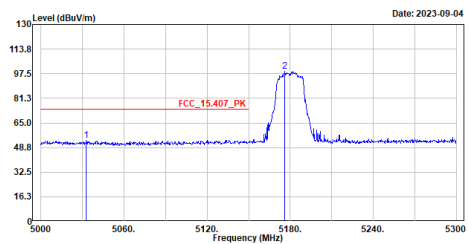


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5032.700	53.46	74.00	-20.54	38.67	14.79	Peak
2	5176.100	98.91	-----	-----	84.11	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

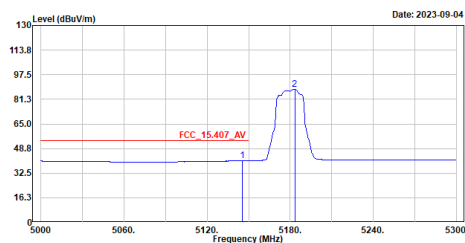


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5145.200	40.69	54.00	-13.31	25.92	14.77	Average
2	5183.300	87.77	-----	-----	72.96	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Caster

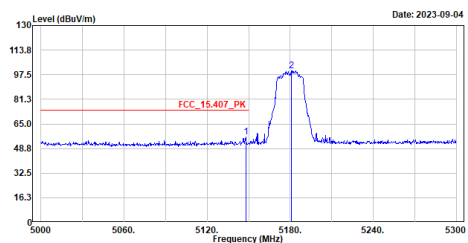


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5147.900	56.44	74.00	-17.56	41.66	14.78	Peak
2	5180.900	100.24	-----	-----	85.43	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

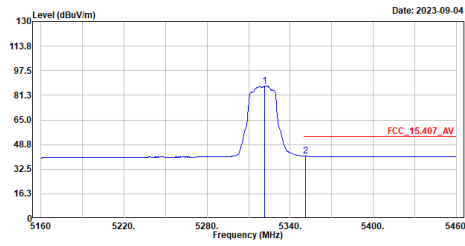


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5321.700	87.27	-----	-----	72.38	14.89	Average
2	5351.100	41.02	54.00	-12.98	26.15	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

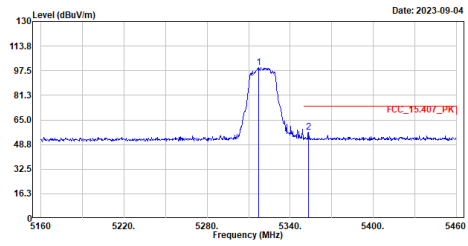


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5317.200	99.60	-----	-----	84.72	14.88	Peak
2	5353.200	56.67	74.00	-17.33	41.81	14.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

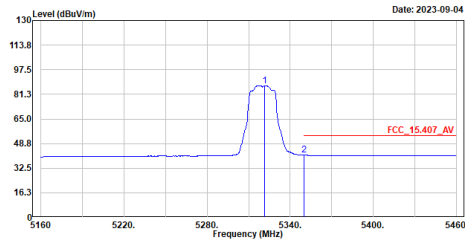


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5321.400	86.98	-----	-----	72.09	14.89	Average
2	5350.200	41.02	54.00	-12.98	26.15	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Caster

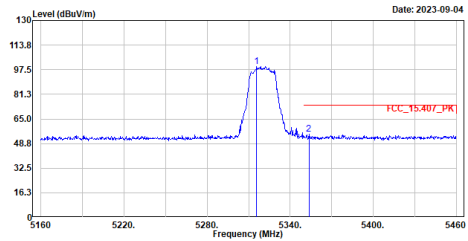


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5315.700	99.78	-----	-----	84.91	14.87	Peak
2	5353.500	55.06	74.00	-18.94	40.20	14.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

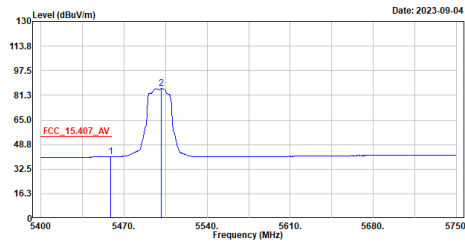

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5458.800	40.67	54.00	-13.33	25.66	15.01	Average
2	5501.500	85.76	-----	-----	70.50	15.26	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

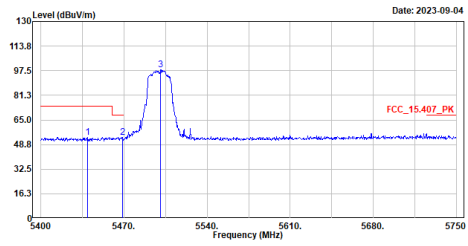

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5439.550	53.69	74.00	-20.31	38.78	14.91	Peak
2	5468.950	53.63	68.22	-14.59	38.56	15.07	Peak
3	5500.800	98.11	-----	-----	82.86	15.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

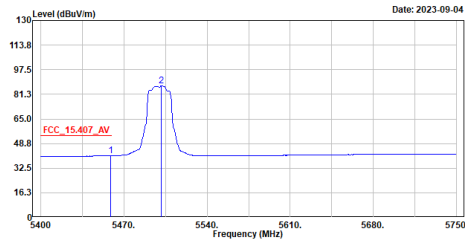

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5458.800	40.70	54.00	-13.30	25.69	15.01	Average
2	5501.500	86.77	-----	-----	71.51	15.26	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Caster

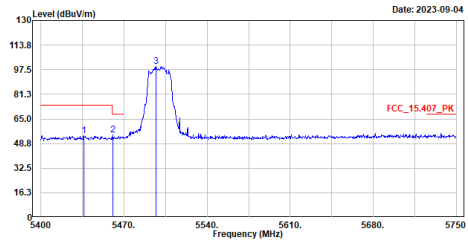

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5436.050	53.92	74.00	-20.08	39.02	14.90	Peak
2	5460.550	54.41	68.22	-13.81	39.39	15.02	Peak
3	5497.300	99.81	-----	-----	84.57	15.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Caster

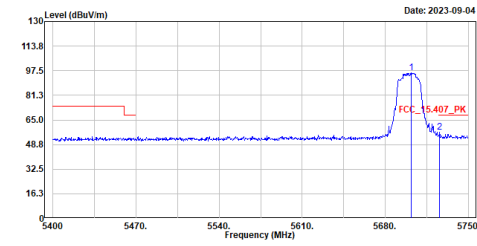

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5701.700	96.12	-----	-----	79.58	16.54	Peak
2	5725.850	56.96	68.22	-11.26	40.38	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Caster

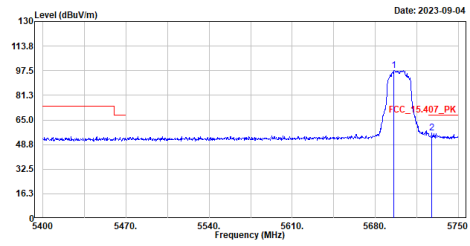

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5695.400	97.84	-----	-----	81.33	16.51	Peak
2	5727.600	56.19	68.22	-12.03	39.60	16.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Caster

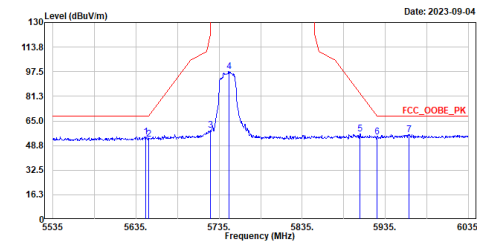

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5647.000	54.62	68.22	-13.60	38.57	16.05	Peak
2	5650.000	52.80	68.23	-15.43	36.73	16.07	Peak
3	5725.000	58.90	122.20	-63.30	42.32	16.58	Peak
4	5747.000	97.52	-----	-----	80.91	16.61	Peak
5	5904.500	56.59	83.39	-26.80	39.89	16.70	Peak
6	5925.000	54.37	68.23	-13.86	37.67	16.70	Peak
7	5963.500	56.12	68.22	-12.10	39.47	16.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz
TEST BY :Caster

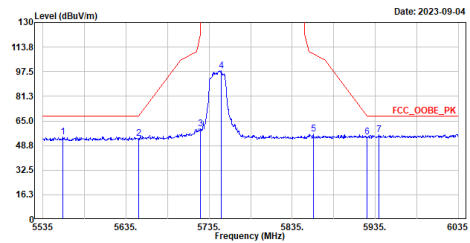

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5559.000	54.69	68.22	-13.53	39.20	15.49	Peak
2	5650.000	53.29	68.23	-14.94	37.22	16.07	Peak
3	5724.500	59.92	121.06	-61.14	43.34	16.58	Peak
4	5749.500	98.29	-----	-----	81.67	16.62	Peak
5	5860.500	56.47	109.26	-52.79	39.77	16.70	Peak
6	5925.000	54.35	68.23	-13.88	37.65	16.70	Peak
7	5939.000	55.88	68.22	-12.34	39.19	16.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Caster

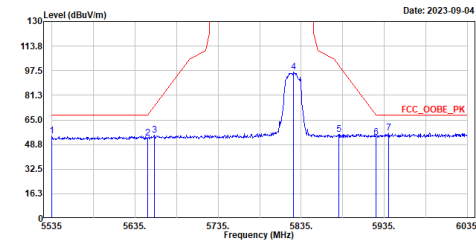


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5535.000	54.62	68.22	-13.60	39.22	15.40	Peak
2	5650.000	52.95	68.23	-15.28	36.88	16.07	Peak
3	5658.000	55.05	74.14	-19.09	38.90	16.15	Peak
4	5826.000	96.79	-----	-----	80.11	16.68	Peak
5	5880.000	55.61	101.50	-45.89	38.92	16.69	Peak
6	5925.000	53.54	68.23	-14.69	36.84	16.70	Peak
7	5940.000	56.30	68.22	-11.92	39.61	16.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Caster

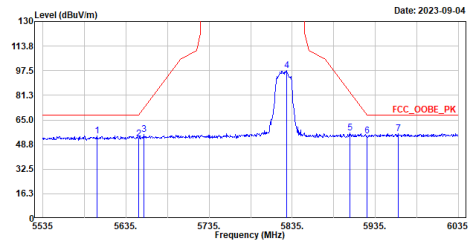


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5600.500	54.24	68.22	-13.98	38.56	15.68	Peak
2	5650.000	52.26	68.23	-15.97	36.19	16.07	Peak
3	5656.500	55.40	73.03	-17.63	39.26	16.14	Peak
4	5828.000	97.41	-----	-----	80.73	16.68	Peak
5	5904.500	56.53	83.39	-26.86	39.83	16.70	Peak
6	5925.000	54.65	68.23	-13.58	37.95	16.70	Peak
7	5962.500	55.92	68.22	-12.30	39.27	16.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

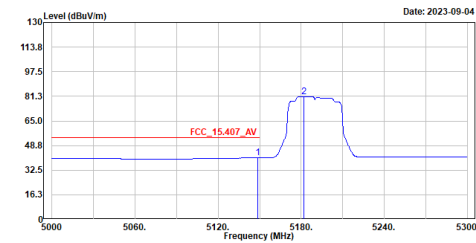


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5148.500	40.64	54.00	-13.36	25.86	14.78	Average
2	5182.100	81.18	-----	-----	66.37	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

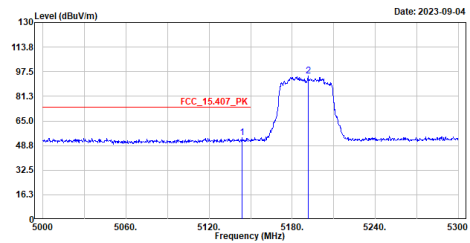


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5143.700	53.96	74.00	-20.04	39.19	14.77	Peak
2	5191.400	94.88	-----	-----	80.06	14.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

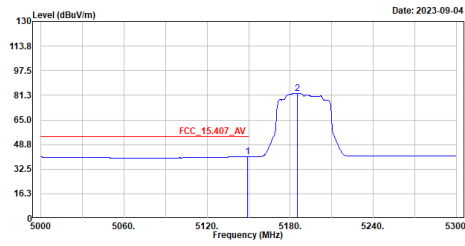


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5149.100	40.68	54.00	-13.32	25.90	14.78	Average
2	5185.100	82.57	-----	-----	67.76	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

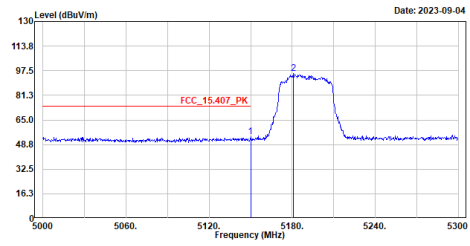


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5150.000	54.07	74.00	-19.93	39.29	14.78	Peak
2	5180.900	95.58	-----	-----	80.77	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

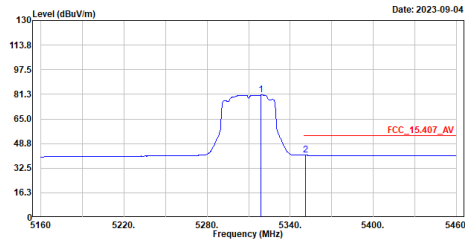


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5319.000	80.78	-----	-----	65.91	14.87	Average
2	5351.100	41.04	54.00	-12.96	26.17	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

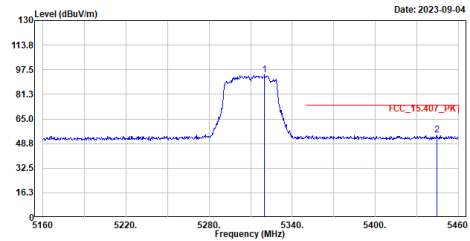


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5320.200	93.97	-----	-----	79.08	14.89	Peak
2	5444.400	54.38	74.00	-19.62	39.45	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

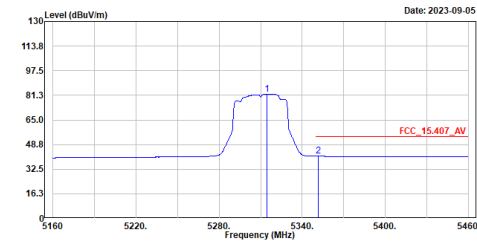


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5314.800	81.96	-----	-----	67.09	14.87	Average
2	5351.400	41.24	54.00	-12.76	26.37	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

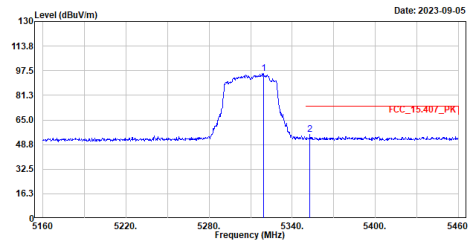


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5319.300	95.59	-----	-----	80.72	14.87	Peak
2	5352.900	55.39	74.00	-18.61	40.53	14.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

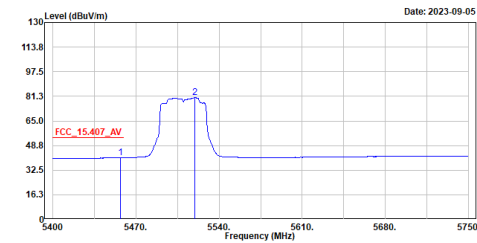


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5457.050	40.68	54.00	-13.32	25.69	14.99	Average
2	5519.350	80.34	-----	-----	65.00	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

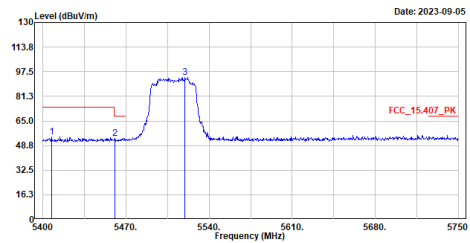


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5407.350	54.44	74.00	-19.56	39.62	14.82	Peak
2	5460.900	53.55	68.22	-14.67	38.53	15.02	Peak
3	5519.700	93.91	-----	-----	78.57	15.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

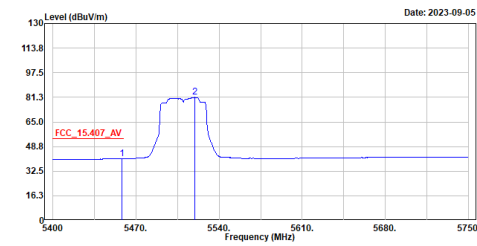

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5458.100	40.70	54.00	-13.30	25.71	14.99	Average
2	5519.350	81.20	-----	-----	65.86	15.34	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

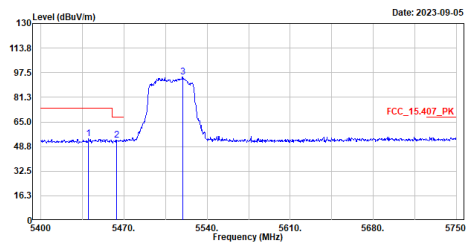

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5440.250	54.03	74.00	-19.97	39.12	14.91	Peak
2	5463.700	53.13	68.22	-15.09	38.10	15.03	Peak
3	5519.700	94.62	-----	-----	79.28	15.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

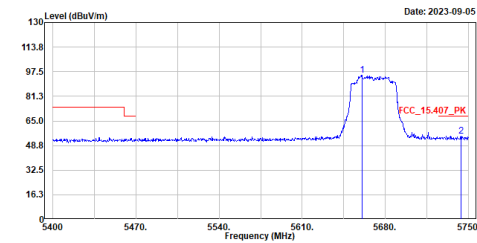

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5660.400	95.08	-----	-----	78.90	16.18	Peak
2	5743.700	55.08	68.22	-13.14	38.46	16.62	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

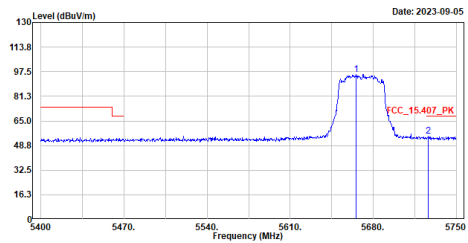


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5665.650	95.85	-----	-----	79.59	16.26	Peak
2	5726.550	55.03	68.22	-13.19	38.45	16.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

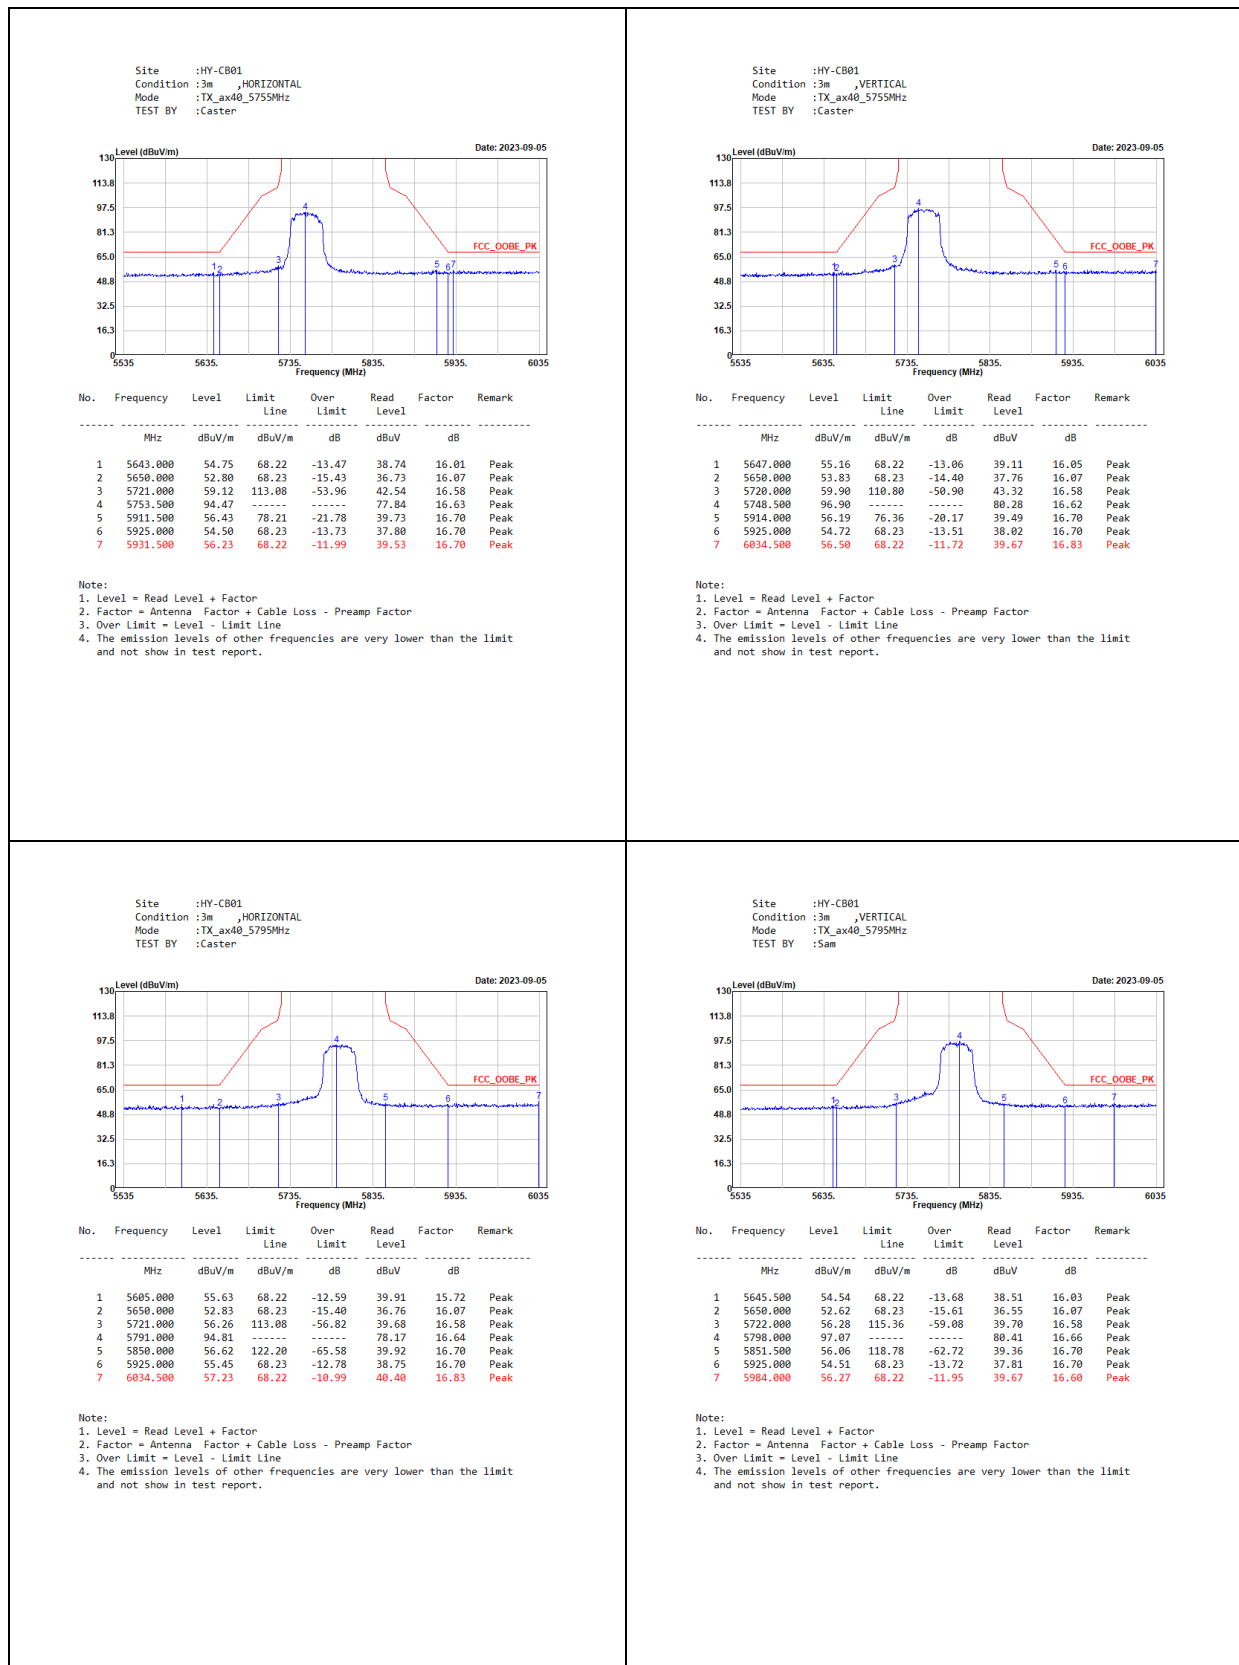

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
TEST BY :Sam

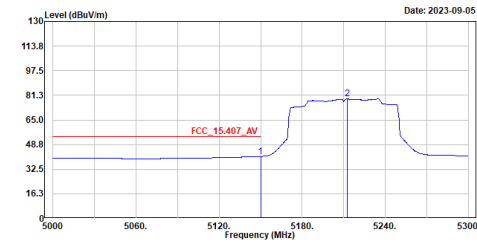


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	40.86	54.00	-13.14	26.08	14.78	Average
2	5212.400	78.81	-----	-----	64.00	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
TEST BY :Sam

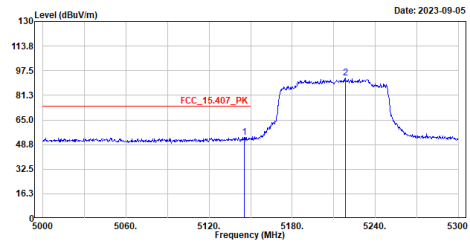


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5145.200	53.67	74.00	-20.33	38.90	14.77	Peak
2	5218.400	92.61	-----	-----	77.82	14.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Sam

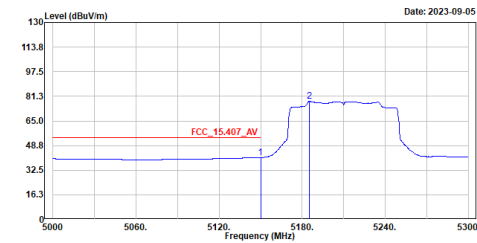


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	40.85	54.00	-13.15	26.07	14.78	Average
2	5185.100	77.82	-----	-----	63.01	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Sam

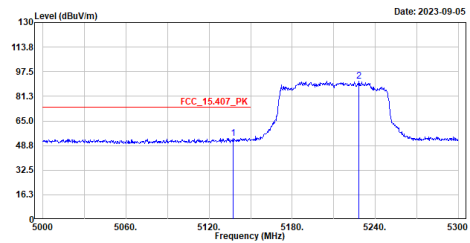


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5137.400	53.68	74.00	-20.32	38.91	14.77	Peak
2	5228.000	91.35	-----	-----	76.58	14.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
TEST BY :Sam

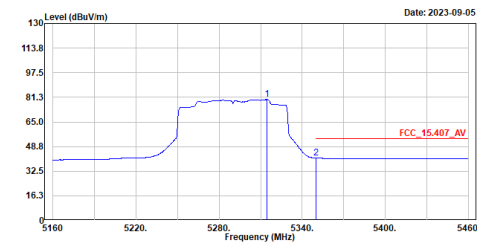


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5314.800	79.76	-----	-----	64.89	14.87	Average
2	5350.200	41.14	54.00	-12.86	26.27	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
TEST BY :Sam

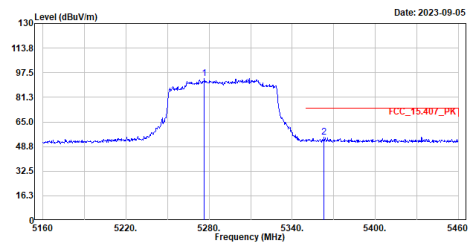


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5276.700	93.94	-----	-----	79.14	14.80	Peak
2	5363.100	55.07	74.00	-18.93	40.22	14.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
TEST BY :Sam

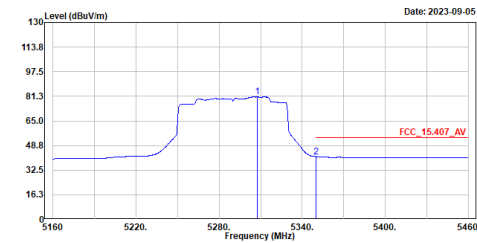


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5307.600	80.84	-----	-----	65.99	14.85	Average
2	5350.200	41.42	54.00	-12.58	26.55	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
TEST BY :Sam

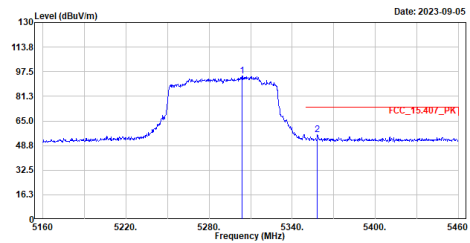


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5304.000	94.75	-----	-----	79.90	14.85	Peak
2	5358.300	55.71	74.00	-18.29	40.85	14.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

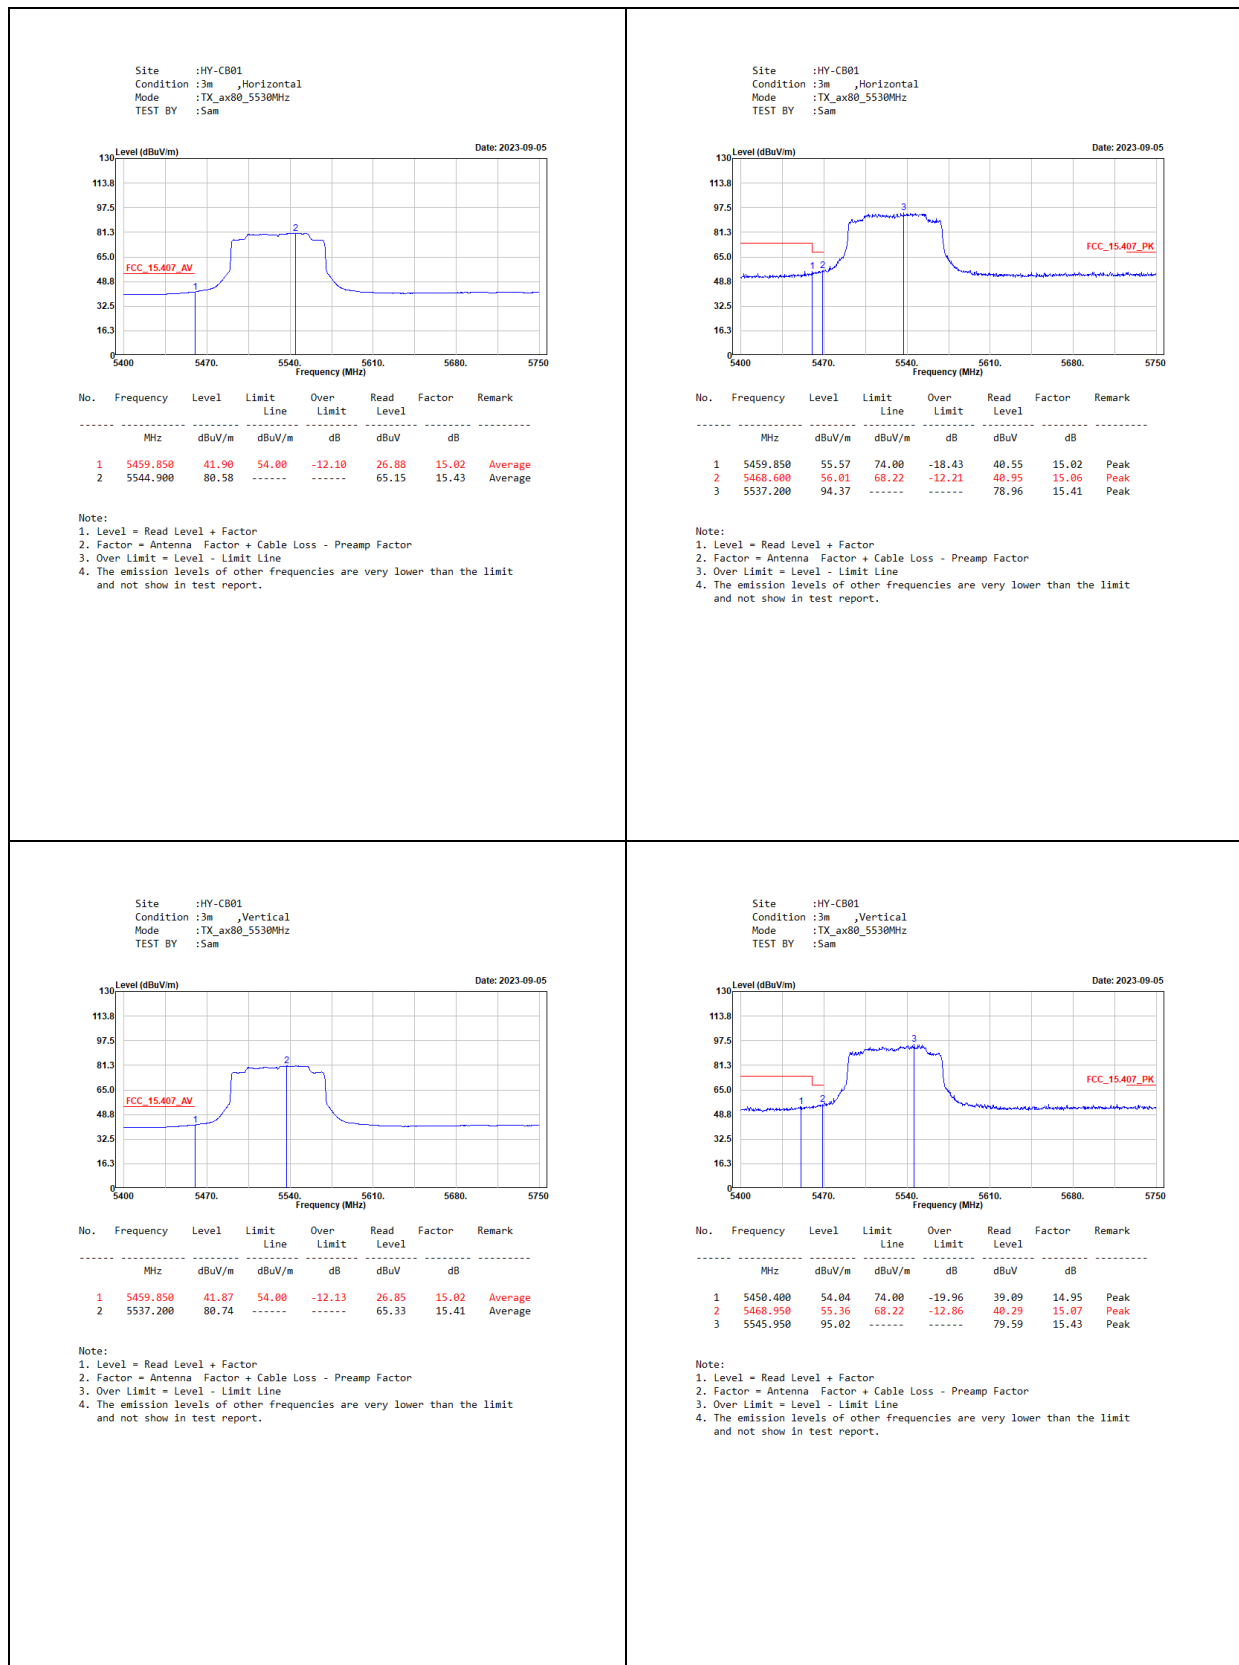

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax80_5775MHz
TEST BY :Sam

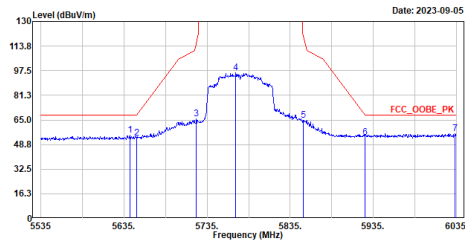


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5642.000	54.72	68.22	-13.50	38.71	16.01	Peak
2	5650.000	52.85	68.23	-15.38	36.78	16.07	Peak
3	5722.000	65.73	115.36	-49.63	49.15	16.58	Peak
4	5769.500	96.04	-----	-----	79.42	16.62	Peak
5	5851.000	64.96	119.92	-54.96	48.26	16.70	Peak
6	5925.000	53.69	68.23	-14.54	36.99	16.70	Peak
7	6033.500	56.13	68.22	-12.09	39.31	16.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5775MHz
TEST BY :Sam

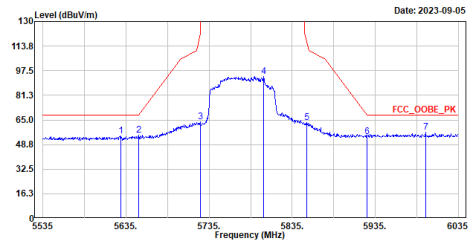


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5629.000	54.35	68.22	-13.87	38.44	15.91	Peak
2	5650.000	55.03	68.23	-13.20	38.96	16.07	Peak
3	5724.500	63.80	121.06	-57.26	47.22	16.58	Peak
4	5800.500	93.61	-----	-----	76.95	16.66	Peak
5	5852.500	63.22	116.50	-53.28	46.52	16.70	Peak
6	5925.000	53.87	68.23	-14.36	37.17	16.70	Peak
7	5995.500	56.74	68.22	-11.48	40.16	16.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_band1
TEST BY :Sam

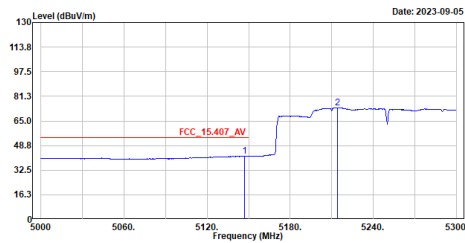


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5147.300	41.82	54.00	-12.18	27.04	14.78	Average
2	5214.200	73.73	-----	-----	58.93	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_band1
TEST BY :Sam

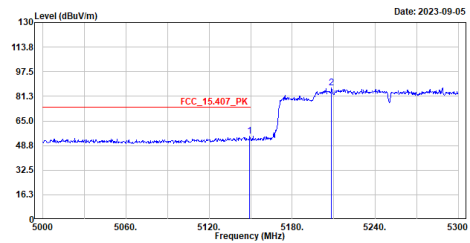


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5149.400	54.89	74.00	-19.11	40.11	14.78	Peak
2	5208.500	86.71	-----	-----	71.90	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_band1
TEST BY :Sam

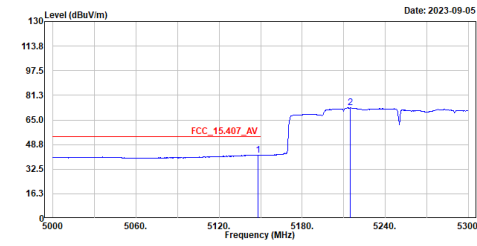


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5147.900	41.86	54.00	-12.14	27.08	14.78	Average
2	5214.800	72.96	-----	-----	58.16	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_band1
TEST BY :Sam

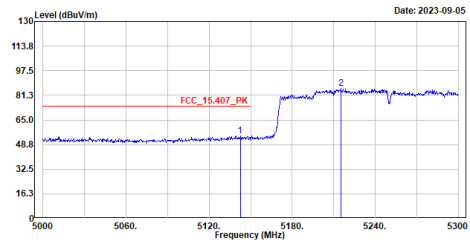


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5142.500	54.61	74.00	-19.39	39.84	14.77	Peak
2	5215.100	85.67	-----	-----	70.87	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_band2
TEST BY :Sam

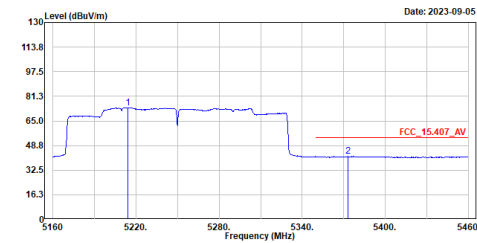


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5214.800	73.73	-----	-----	58.93	14.80	Average
2	5373.300	41.61	54.00	-12.39	26.77	14.84	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_band2
TEST BY :Sam

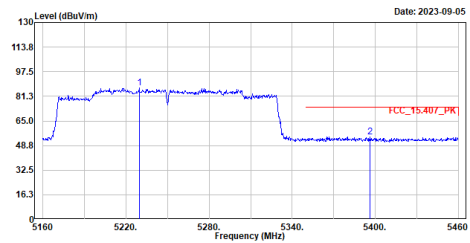


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5229.600	86.75	-----	-----	71.97	14.78	Peak
2	5396.400	54.36	74.00	-19.64	39.55	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_band2
TEST BY :Sam

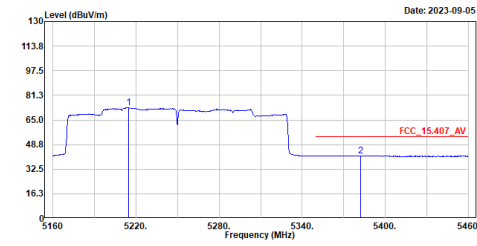


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5214.900	73.08	-----	-----	58.28	14.80	Average
2	5382.300	41.44	54.00	-12.56	26.61	14.83	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_band2
TEST BY :Sam

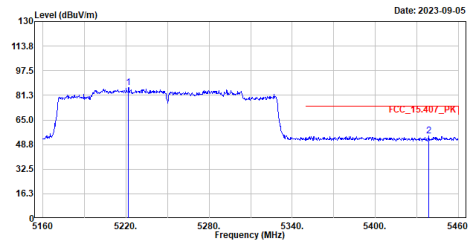


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5221.800	86.24	-----	-----	71.45	14.79	Peak
2	5438.400	54.36	74.00	-19.64	39.45	14.91	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
TEST BY :Sam

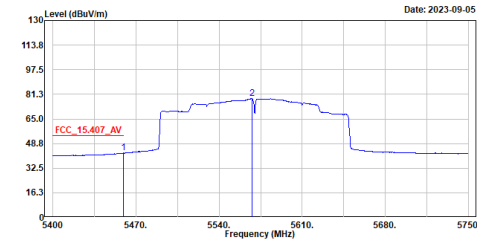


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5459.150	42.52	54.00	-11.48	27.51	15.01	Average
2	5567.650	78.41	-----	-----	62.89	15.52	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
TEST BY :Sam

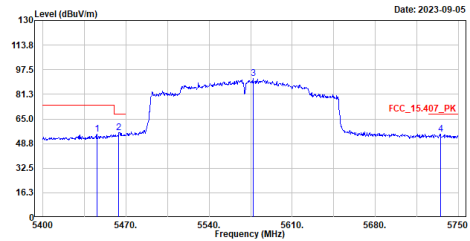


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5445.500	54.85	74.00	-19.15	39.92	14.93	Peak
2	5464.050	55.77	68.22	-12.45	40.73	15.04	Peak
3	5577.100	91.83	-----	-----	76.27	15.56	Peak
4	5734.950	54.89	68.22	-13.33	38.29	16.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
TEST BY :Sam

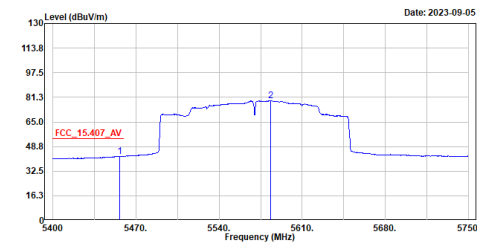


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5456.000	42.41	54.00	-11.59	27.43	14.98	Average
2	5583.400	78.96	-----	-----	63.39	15.57	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
TEST BY :Sam

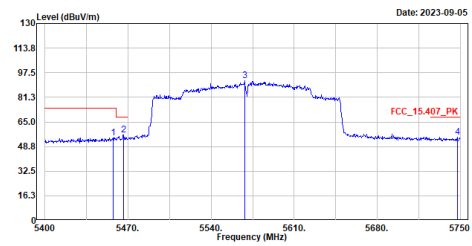


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5457.750	54.68	74.00	-19.32	39.69	14.99	Peak
2	5466.150	56.51	68.22	-11.71	41.46	15.05	Peak
3	5568.350	92.00	-----	-----	76.48	15.52	Peak
4	5747.550	54.88	68.22	-13.34	38.26	16.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Partial RU-SISO A


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 26 0
TEST BY :Sam

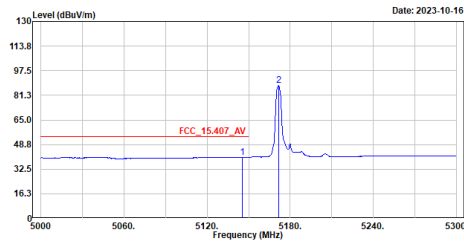

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5145.500	40.44	54.00	-13.56	25.67	14.77	Average
2	5171.600	87.57	-----	-----	72.77	14.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 26 0
TEST BY :Sam

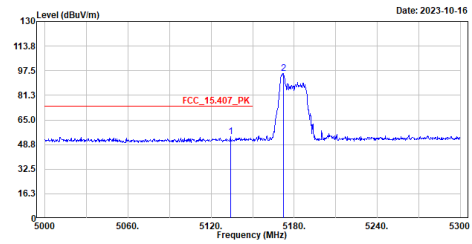

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5134.100	54.01	74.00	-19.99	39.25	14.76	Peak
2	5172.200	95.60	-----	-----	80.80	14.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 26 0
TEST BY :Sam

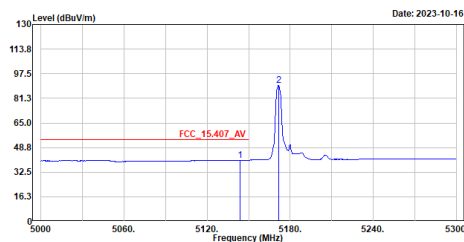

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5143.700	40.46	54.00	-13.54	25.69	14.77	Average
2	5171.600	89.65	-----	-----	74.85	14.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 26 0
TEST BY :Sam

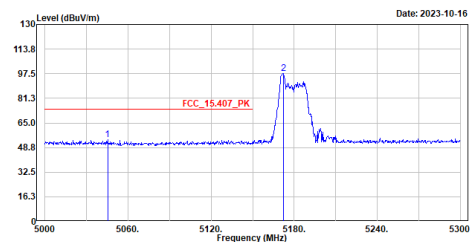

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5045.300	53.82	74.00	-20.18	39.03	14.79	Peak
2	5172.200	97.76	-----	-----	82.96	14.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 52 37
TEST BY :Sam

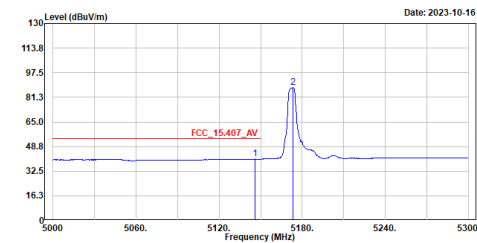


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5146.100	40.47	54.00	-13.53	25.70	14.77	Average
2	5173.400	87.57	-----	-----	72.77	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 52 37
TEST BY :Sam

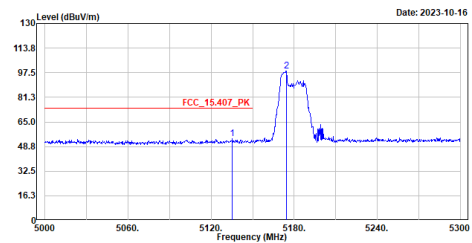


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5135.300	54.13	74.00	-19.87	39.36	14.77	Peak
2	5174.300	98.58	-----	-----	83.78	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 52 37
TEST BY :Sam

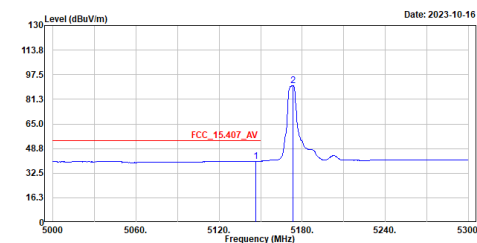


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5146.700	40.47	54.00	-13.53	25.70	14.77	Average
2	5173.400	90.12	-----	-----	75.32	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 52 37
TEST BY :Sam

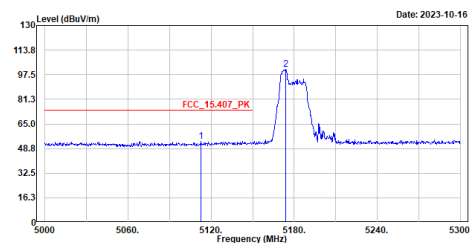


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5112.800	53.49	74.00	-20.51	38.75	14.74	Peak
2	5173.700	101.18	-----	-----	86.38	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 106 53
TEST BY :Sam

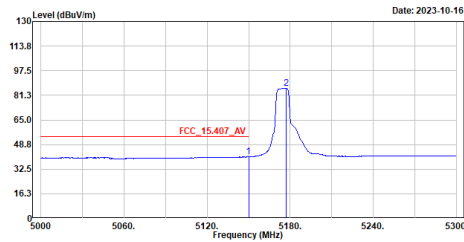


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	40.55	54.00	-13.45	25.77	14.78	Average
2	5177.300	85.74	-----	-----	70.94	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz 106 53
TEST BY :Sam

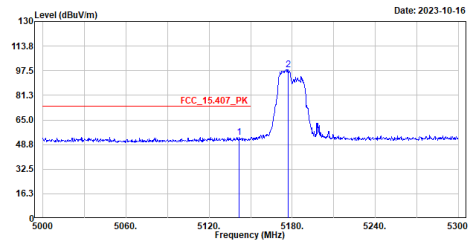


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5141.900	53.65	74.00	-20.35	38.88	14.77	Peak
2	5177.000	98.30	-----	-----	83.50	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 106 53
TEST BY :Sam

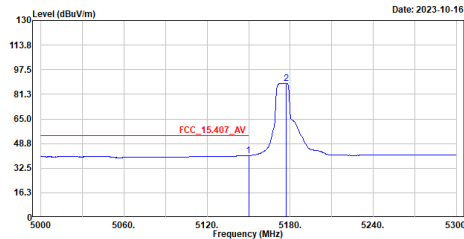


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	40.78	54.00	-13.22	26.00	14.78	Average
2	5177.000	88.51	-----	-----	73.71	14.80	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz 106 53
TEST BY :Sam

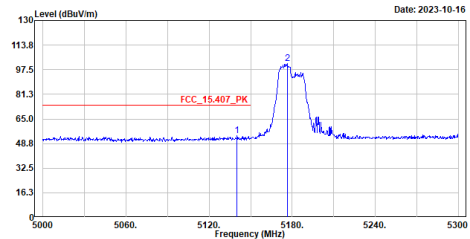

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5140.100	53.73	74.00	-20.27	38.96	14.77	Peak
2	5176.400	101.44	-----	-----	86.64	14.80	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.